



iBook G4 14" 1.42 GHz Rear Display Bezel Replacement

Replace the rear display bezel in your iBook G4 14" 1.42 GHz.

Written By: Andrew Bookholt



INTRODUCTION

Replace the rear display bezel in your iBook G4 14" 1.42 GHz.


TOOLS:

- 1.5mm Hex Screwdriver (1)
- Coin (1)
- Flathead 3/32" or 2.5 mm Screwdriver (1)
- Spudger (1)

PARTS:

- iBook G4 14" Rear Display Bezel (1)

Step 1 — Battery

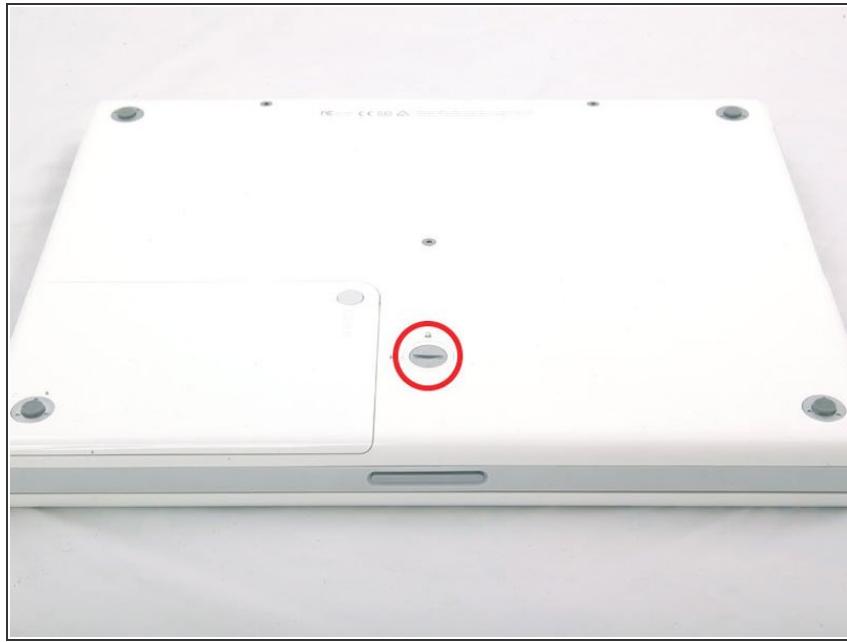

- Use a coin to rotate the battery locking screw 90 degrees clockwise.

Step 2




- Lift the battery out of the computer.

Step 3 — Rear Display Bezel



- Use a 1.5 mm hex screwdriver to remove the two hex screws on either side of the display (four screws total).
- If you don't have a 1.5 mm hex driver, you can probably get these screws out with a T6 Torx screwdriver. However, if you use a T6 Torx driver you'll be more likely to strip the screws.

Step 4

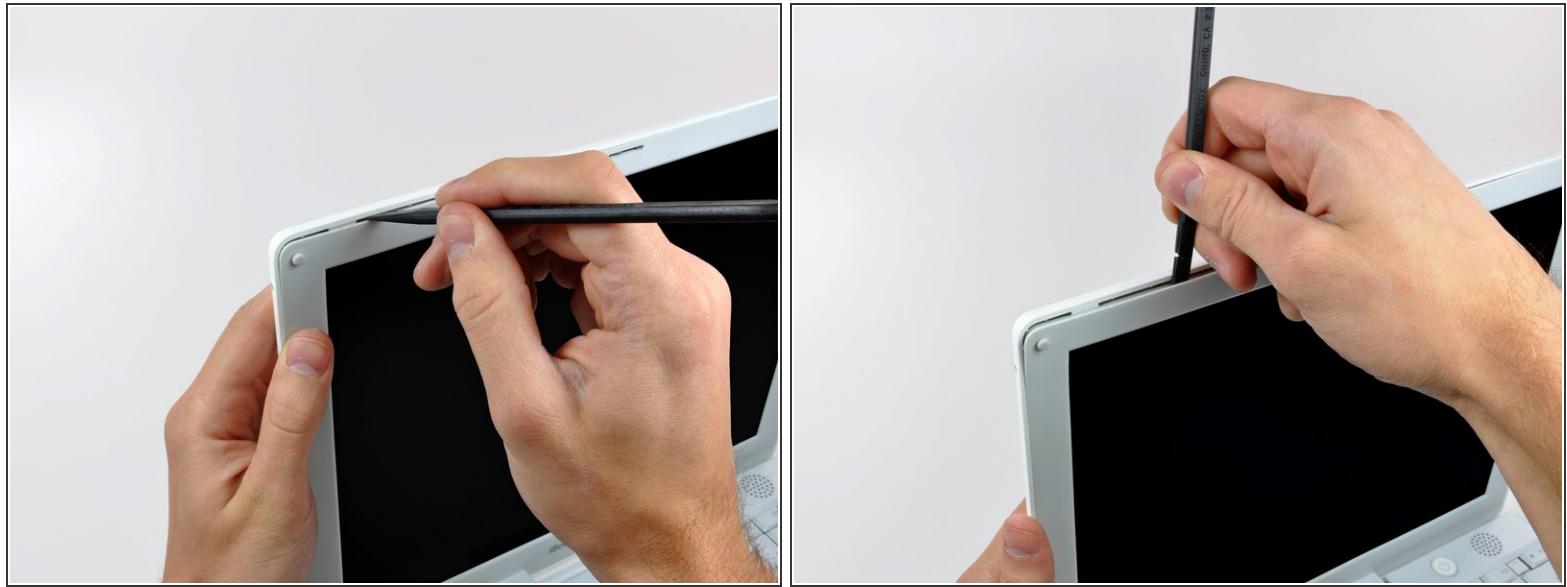


- Insert the flat end of a spudger perpendicular to the face of the display into the gap between the front and rear bezels near the upper left corner of the display.
- Rotate the spudger away from the display to pry the rear bezel off the front bezel.

Step 5



- Run your spudger along the top edge of the front display bezel to evenly separate the two bezels.

Step 6

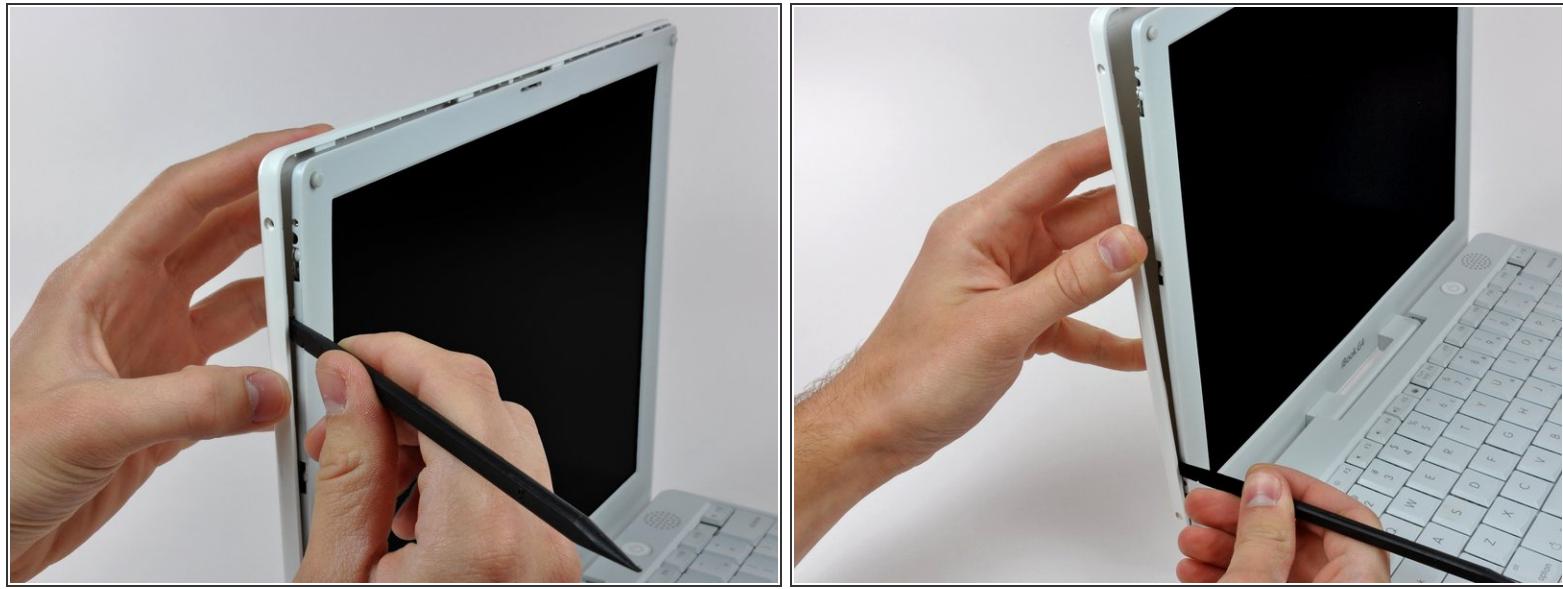

- Working down from the upper left corner, use the flat end of a spudger to pry the rear bezel away from the left edge of the display.

Step 7



- Use the flat end of a spudger to pry the rear bezel away from the right edge of the display.
- If necessary, pry along the bottom edge of the rear bezel to separate it from the display assembly.

Step 8



- Lift the rear bezel off the display assembly.

To reassemble your device, follow these instructions in reverse order.