




# iBook G4 14" 933 MHz-1.33 GHz LCD Cover Replacement

Written By: Andrew Bookholt

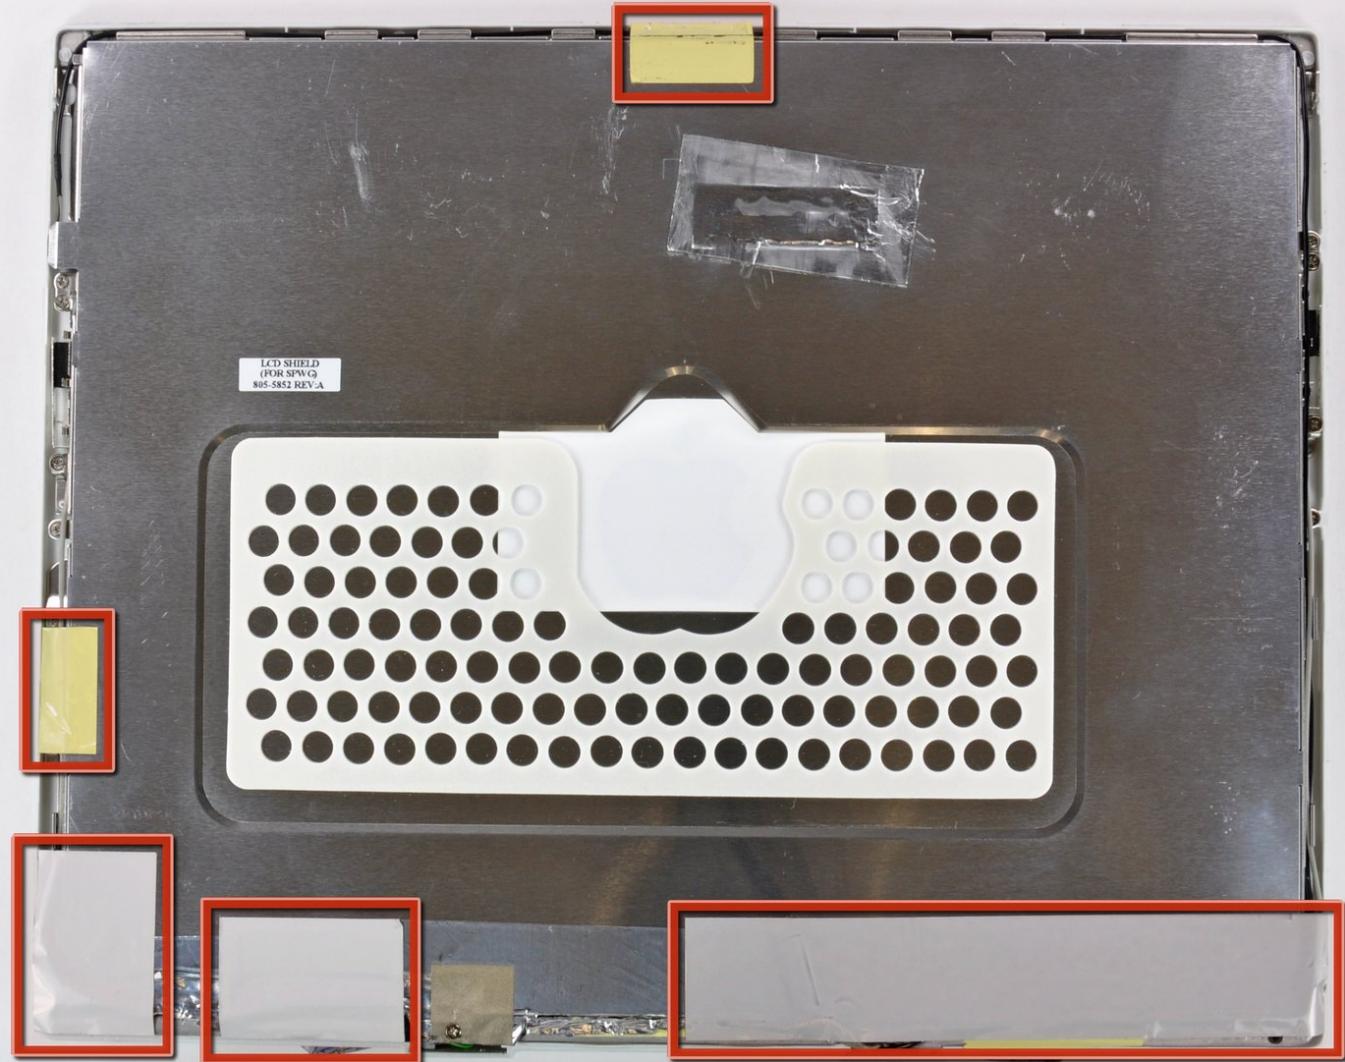


## INTRODUCTION

This is an internal prerequisite guide that should remain unpublished.

### TOOLS:


- [Phillips #00 Screwdriver](#) (1)
- [Spudger](#) (1)

## Step 1 — LCD Cover

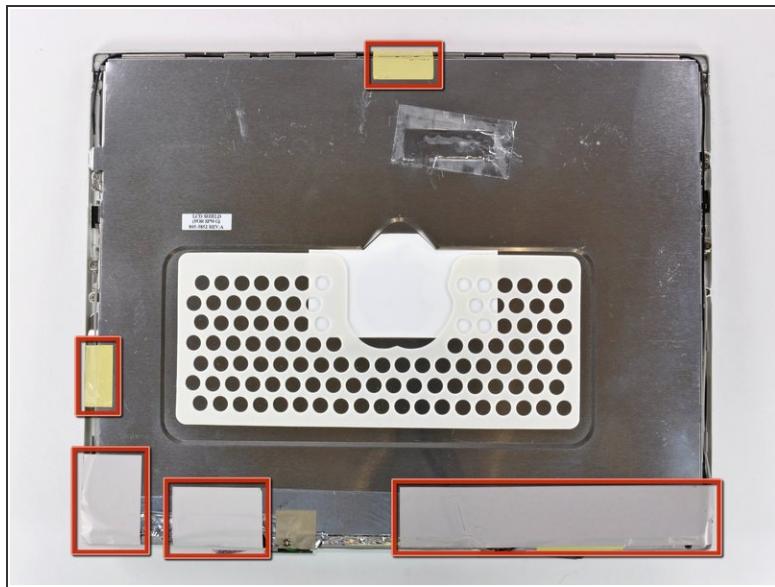


- Remove the pieces of readily removable tape from around the perimeter of the display.
- Carefully remove the aluminum tape covering the display data cable connection.

## Step 2

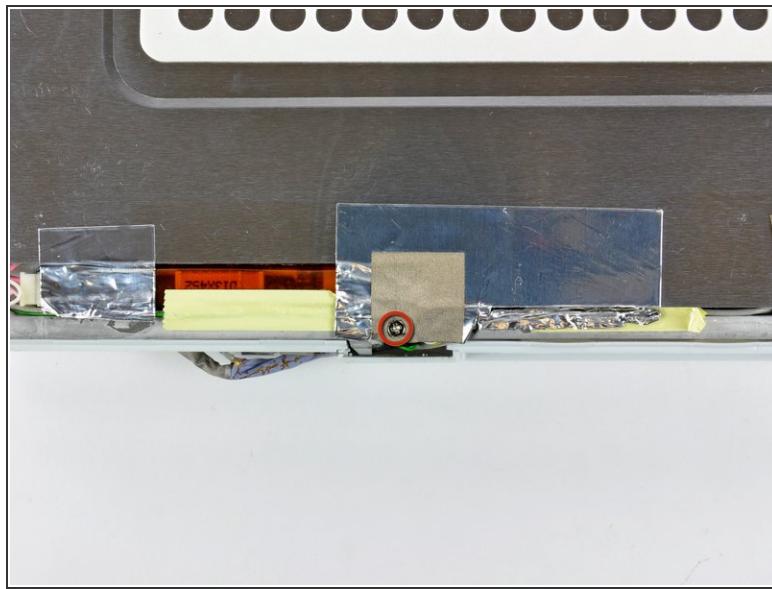


- Remove the single screw inserted through the piece of EMI tape near the bottom edge of the display.
- Use the tip of a spudger to remove the small washer under the screw you just removed.

## Step 3

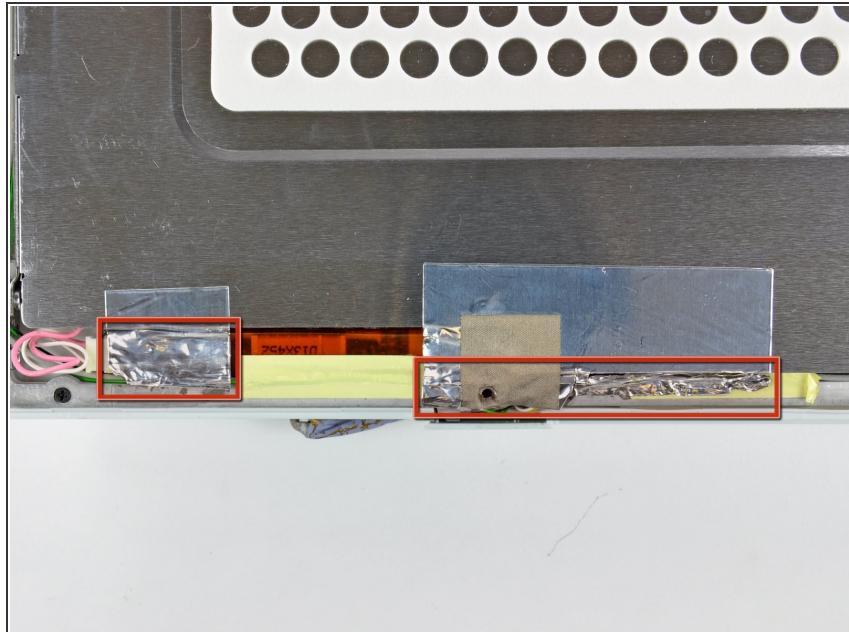

- Peel the aluminum/EMI tape off the cast aluminum frame of the clutch hinges.
- *i* It is not necessary to peel the tape off the thin steel LCD cover.

## Step 4

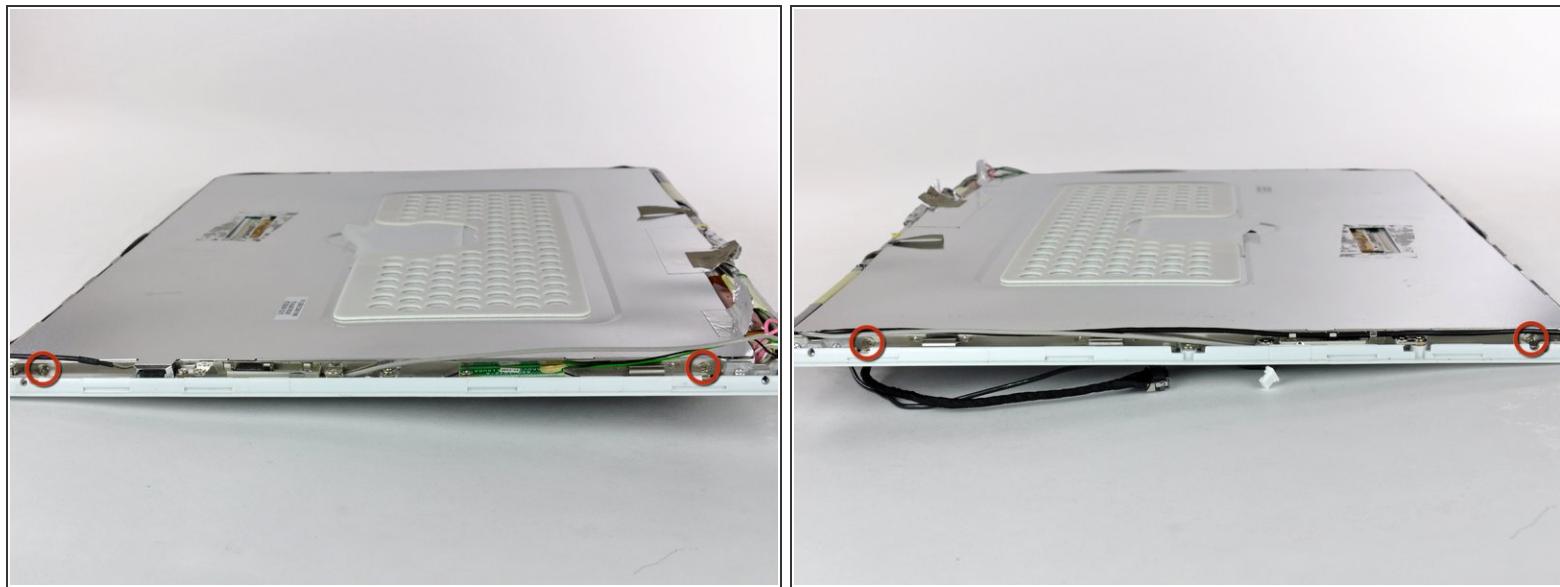

- Remove the two Phillips screws securing each side of the LCD to the clutch hinge frame (four screws total).

## Step 5



- Lift the thin steel LCD cover off the LCD.

To reassemble your device, follow these instructions in reverse order.

This document was generated on 2019-09-23 01:41:05 PM (MST).

