



# iDevices iGrill Speaker Replacement

This is a replacement guide for replacing the speaker of the iGrill in the event that it is not beeping.

Written By: Michelle Nguyen



## INTRODUCTION

There is a small diaphragm within the device that functions as the speaker for the audio alarm. This guide contains information on how to replace it.

### TOOLS:


- [Soldering Iron](#) (1)
- [Phillips #1 Screwdriver](#) (1)

## Step 1 — Speaker




- Remove the plastic cover from the back of the device.

## Step 2

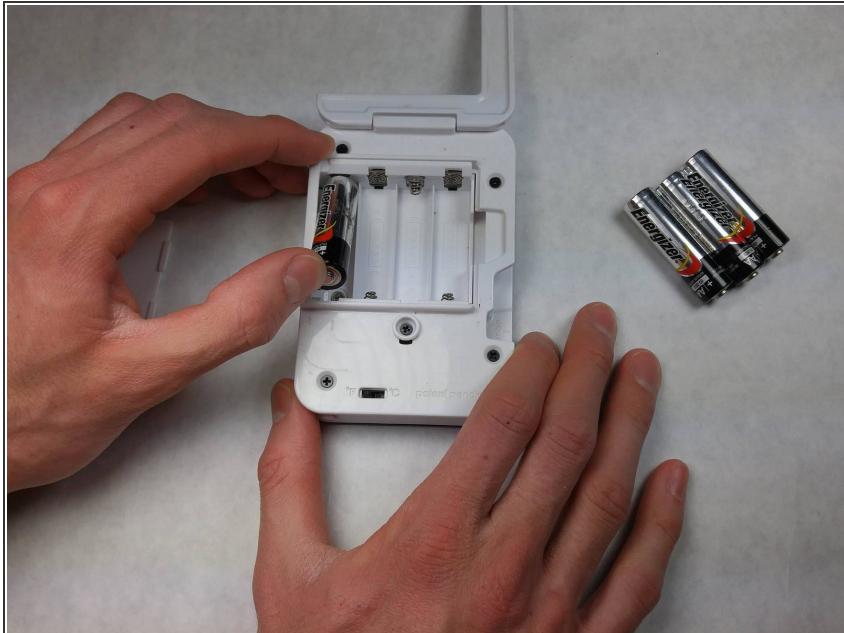


- Remove the batteries from their positions within the device.

## Step 3

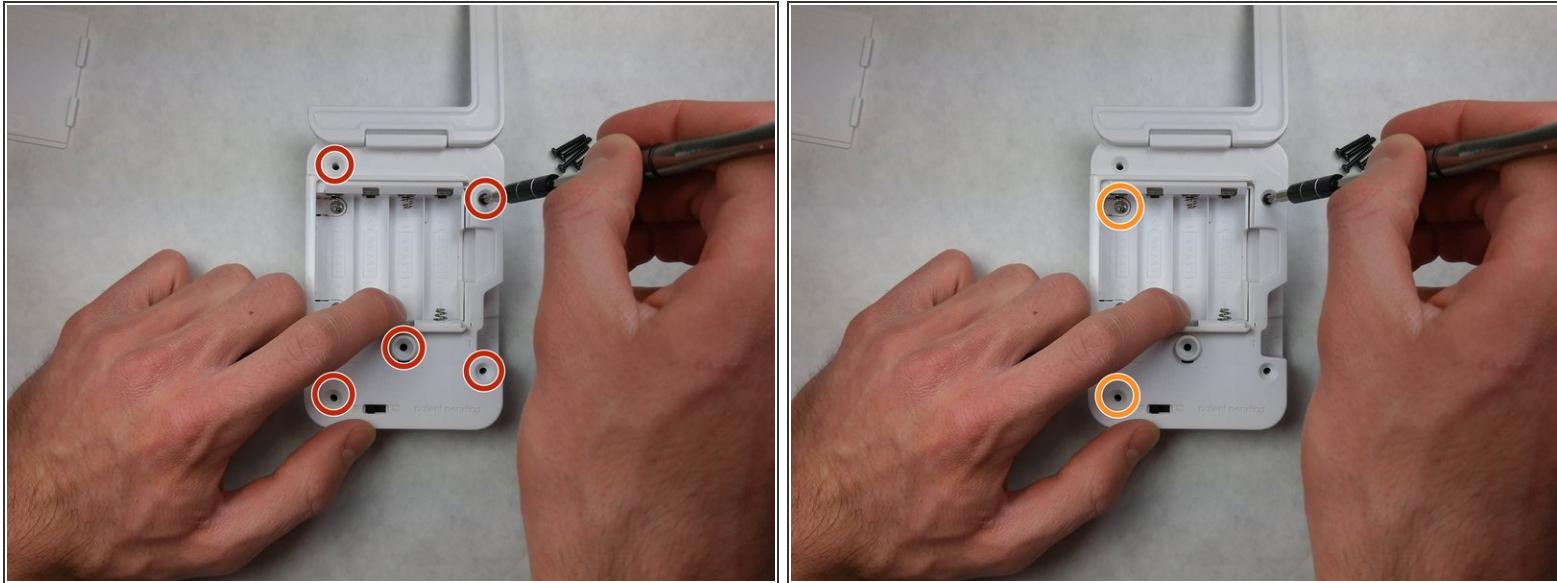


- Remove five black 10 mm Phillips #0 screws from the back side of the device.
- Remove two silver-colored 5 mm Phillips from the left side of the internal cover.

## Step 4

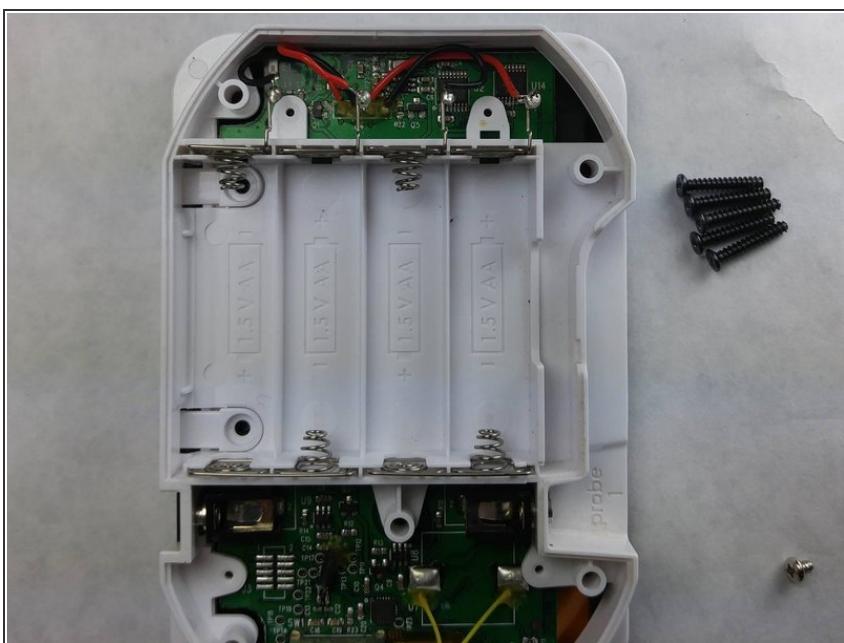

- Separate the back cover from the main portion of the device.

## Step 5

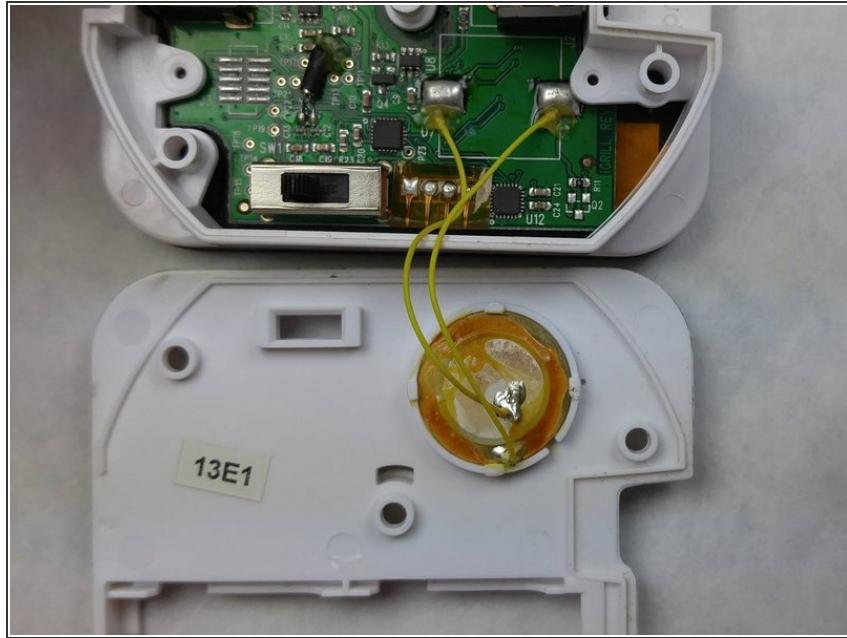

- Desolder the speaker wires from the motherboard.

To reassemble your device, follow these instructions in reverse order.