




iHome iH5 Dials Replacement

Use this repair guide to replace the dials on a iHome iH5.

Written By: Maggie Hill

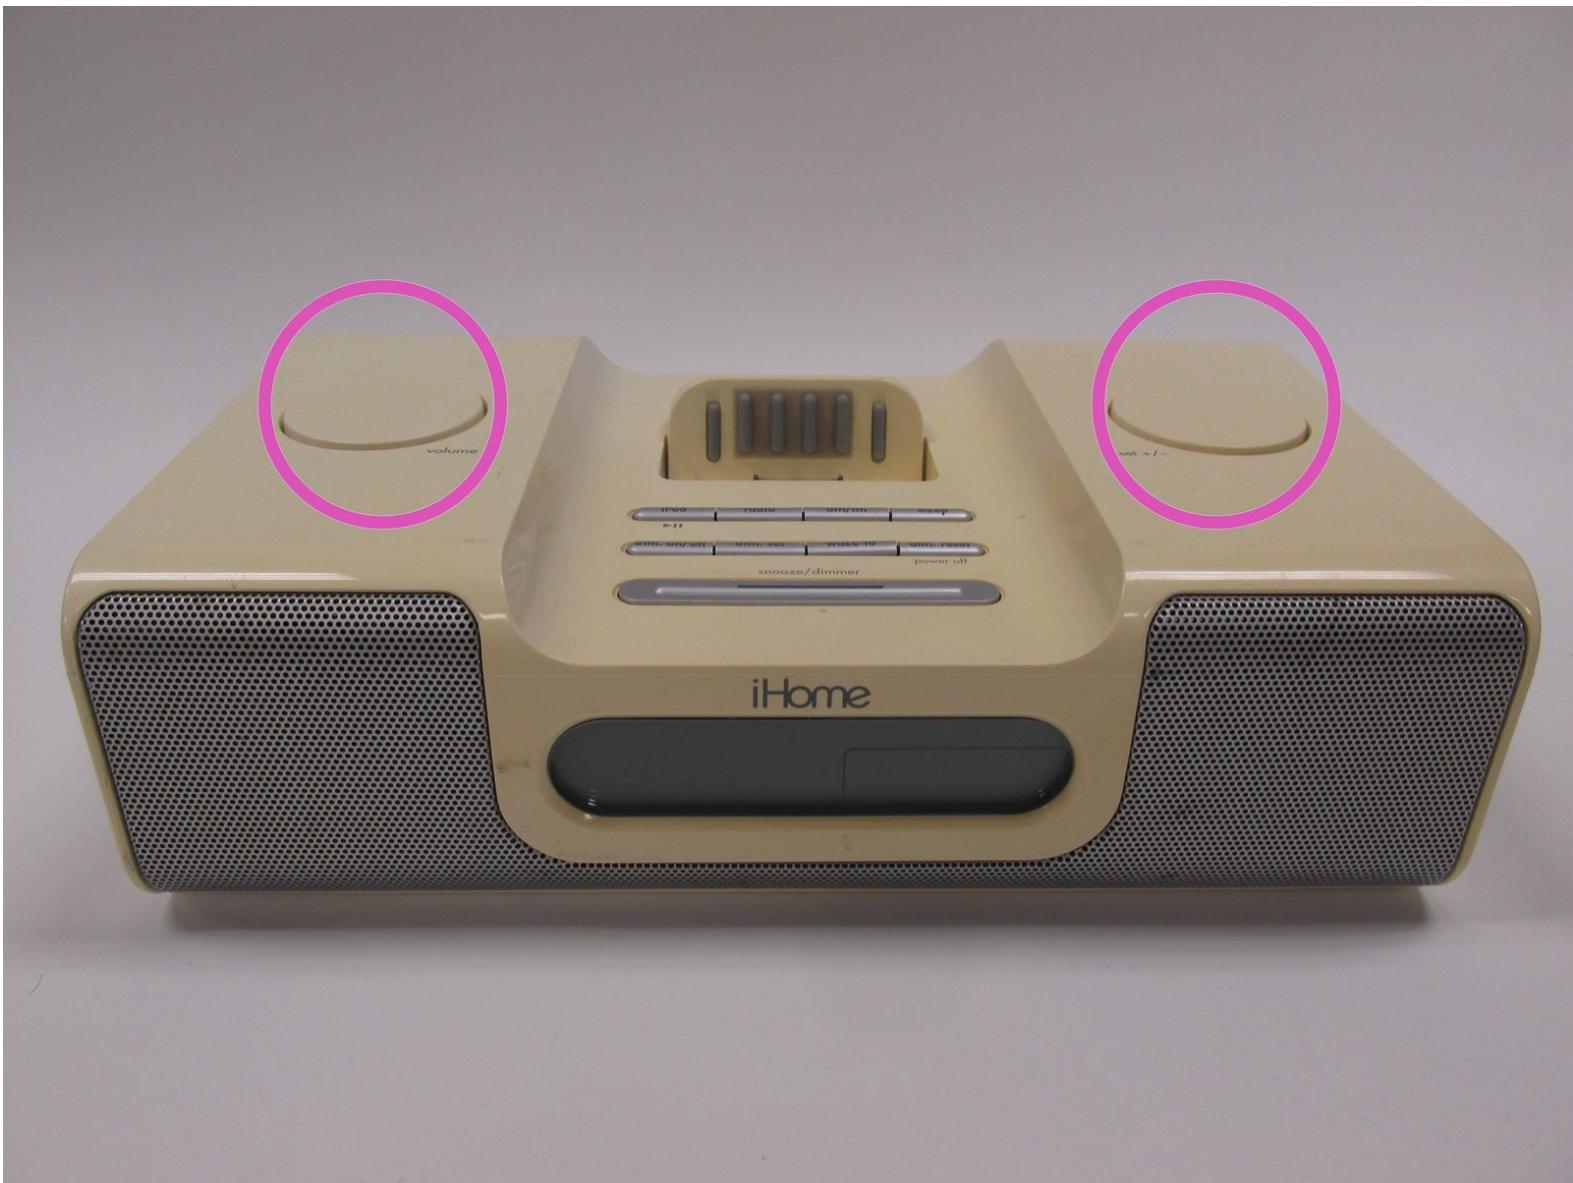

INTRODUCTION


This is a cleaning and replacement guide for the iHome iH5.

TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [Phillips #2 Screwdriver](#) (1)
- [Tweezers](#) (1)


8" Needle Nose Pliers can also be used.

Step 1 — Dials

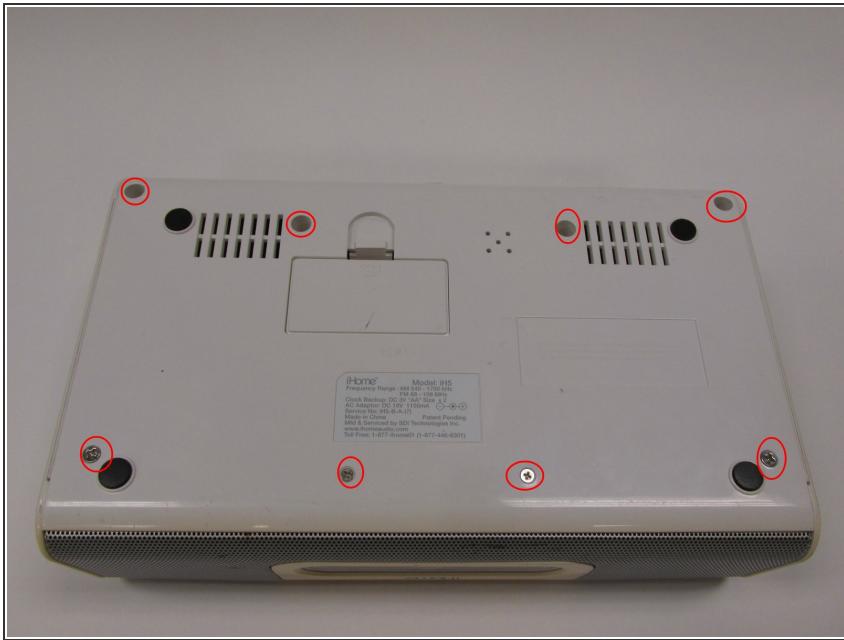


- Remove the eight screws from the bottom side of the iHome.

Step 2

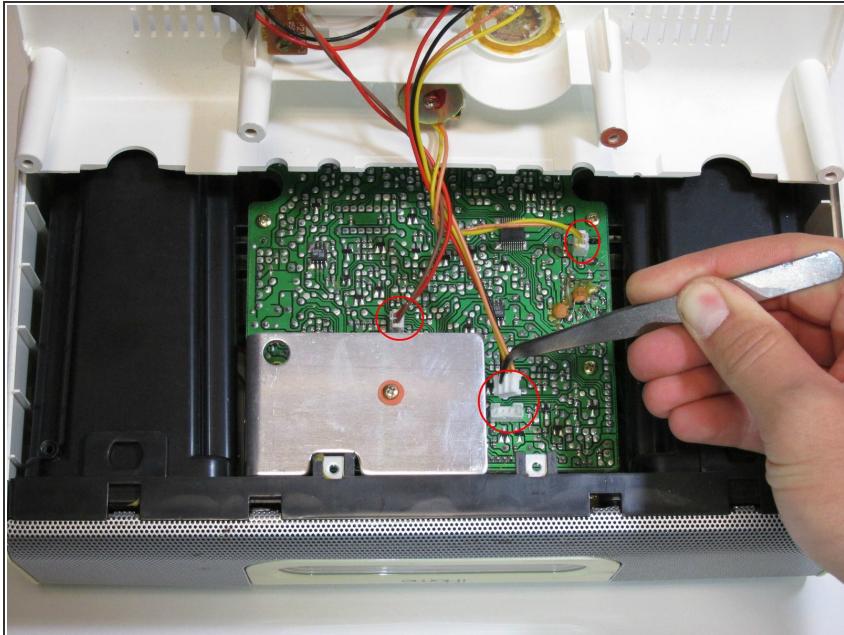

- Remove the cover to expose the inside.
- With pliers, or tweezers, if needed, remove the three wire harnesses by gently pulling straight up on them.

Step 3

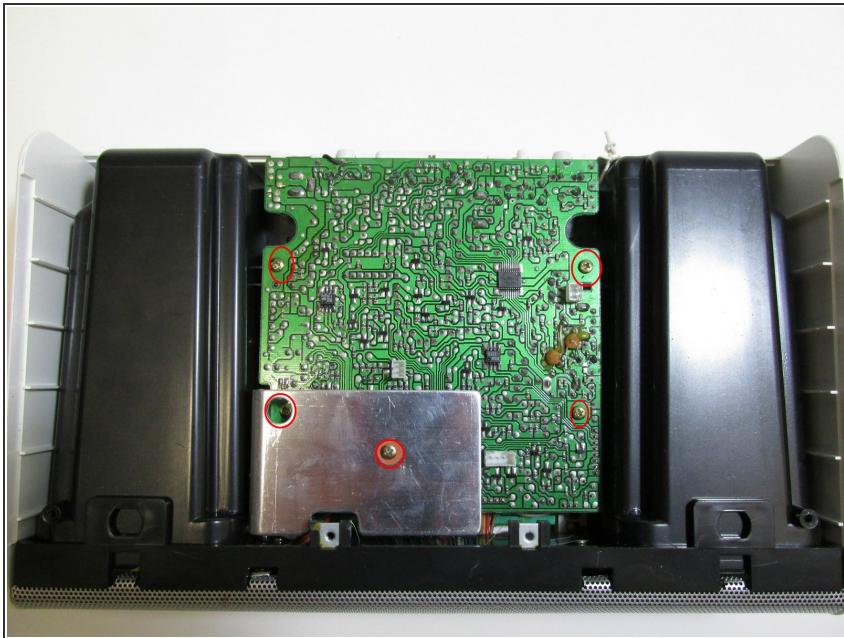

- Remove the 5 screws with a #2 Phillips screwdriver.


Step 4



- Remove all wire harnesses from the bottom of the board. There are eight wire harnesses.


There are capacitors all over the back side of the board. Be careful not to touch these capacitors (blue cylinders) as they can discharge—giving you a shock.

Step 5

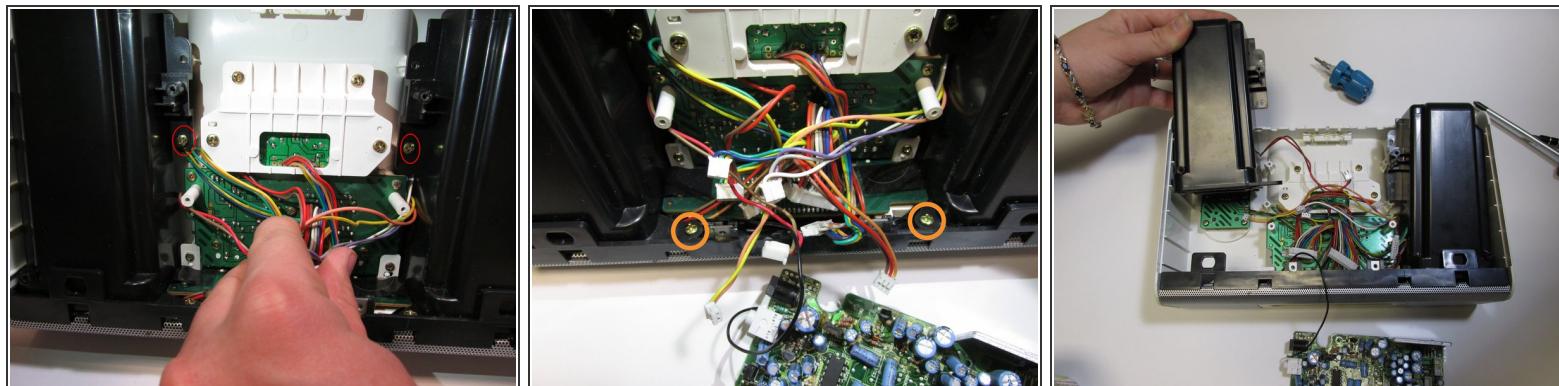


- Remove the two screws from the speakers with a #2 Phillips screwdriver.
- Turn the device on its front side and remove the two screws with a #2 Phillips screwdriver.
- Pull the speaker up from the back as shown with the speaker on the right. Then pull the speaker straight back as shown with the speaker on the left.

Step 6

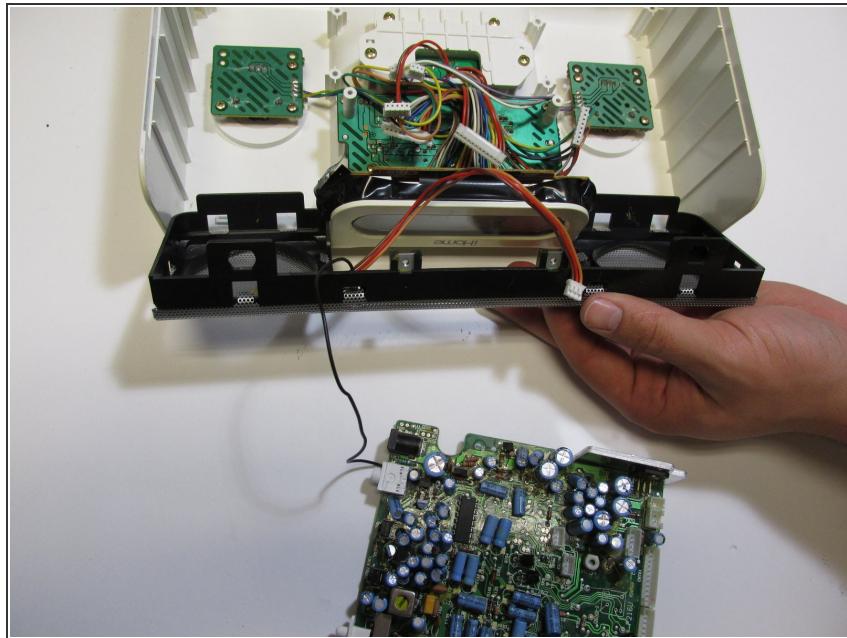


- Remove the front piece by pulling up until it hits the plastic pieces sticking out from the display screen. Then pull it out horizontally from the device.

Step 7

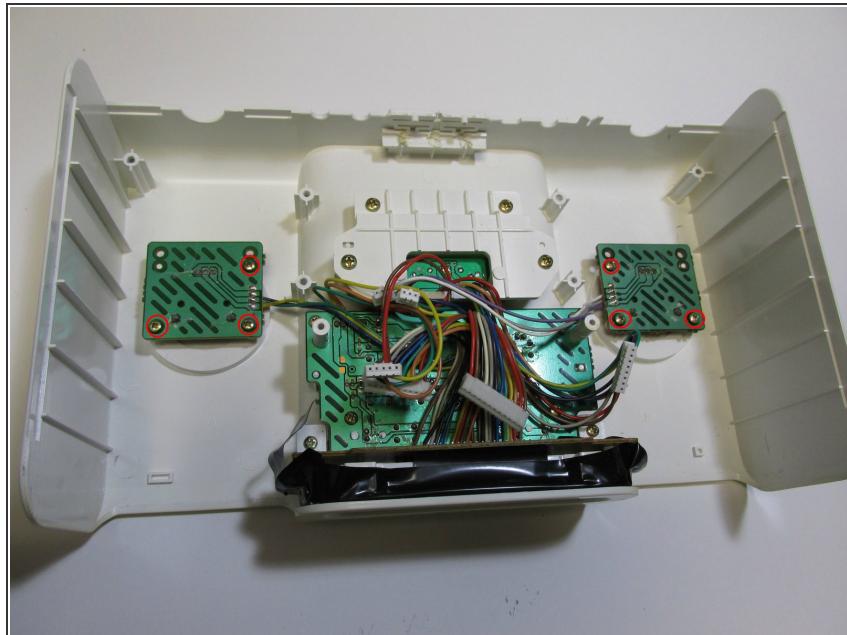

- Remove the three screw from the dial with a #2 Phillips screwdriver.

Step 8

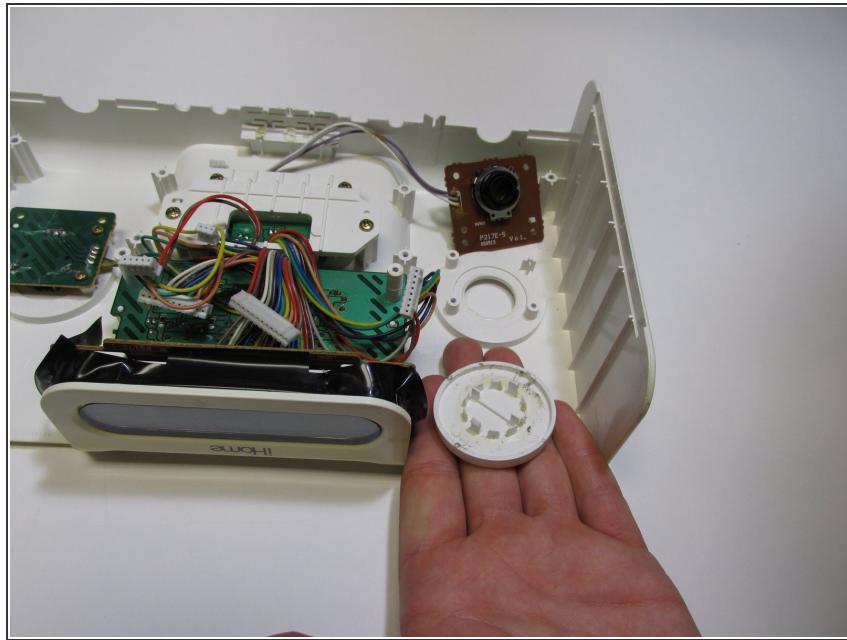

- Pull back the circuit board to access the plastic piece.
- Lift to separate the plastic piece from the dial.
- Replace the broken piece.

To reassemble your device, follow these instructions in reverse order.