



iHome iM71SC Disassembly

How to disassemble an iHome iM71SC.

Written By: Brandon Rheault




INTRODUCTION

In this disassembly guide, you will learn how to disassemble and look for damaged parts within the device.

TOOLS:

- [Phillips #000 Screwdriver \(1\)](#)

Step 1 — iHome iM71SC Disassembly

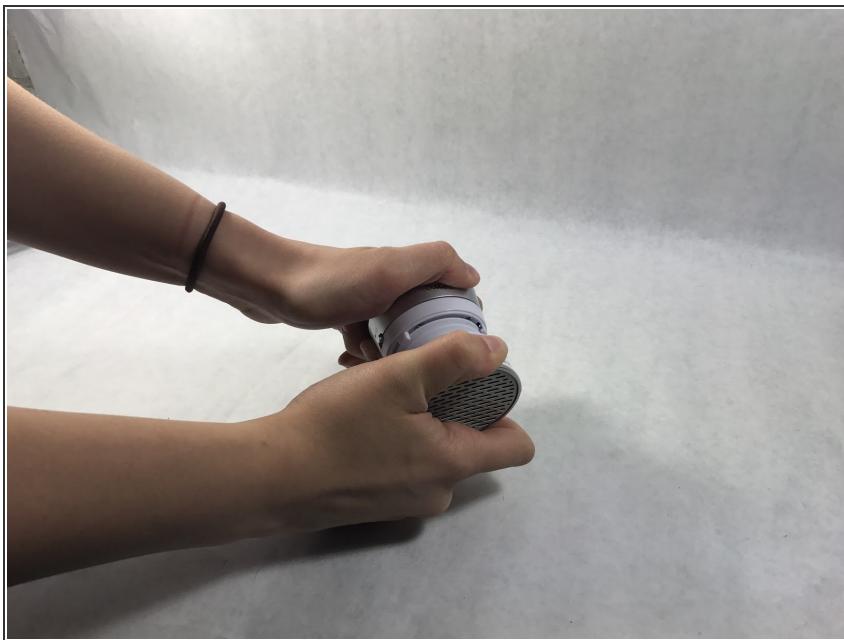

- Push down and turn the top of the speaker clockwise. This will release the clips and expand the speaker.

Step 2



- Use a #000 Phillips screwdriver to remove the four 1 mm screws from the bottom half of the speaker.

Step 3



- Flip the speaker over and use a #000 Phillips screwdriver to remove three 1mm screws . Unscrew these to unfasten the top.

Step 4



- Remove the now unfastened coverings to expose the internals of the speaker.

To reassemble your device, follow these instructions in reverse order.