



# iHome iM71SC Spring Replacement

This guide will instruct you in replacing the internal spring of iHome iM71SC portable speaker.

Written By: Sarah Brown




## INTRODUCTION

This guide will instruct you in replacing the internal spring of the speaker.

### TOOLS:

- [Phillips PH000 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)
- [Large Needle Nose Pliers](#) (1)

## Step 1 — iHome iM71SC Disassembly

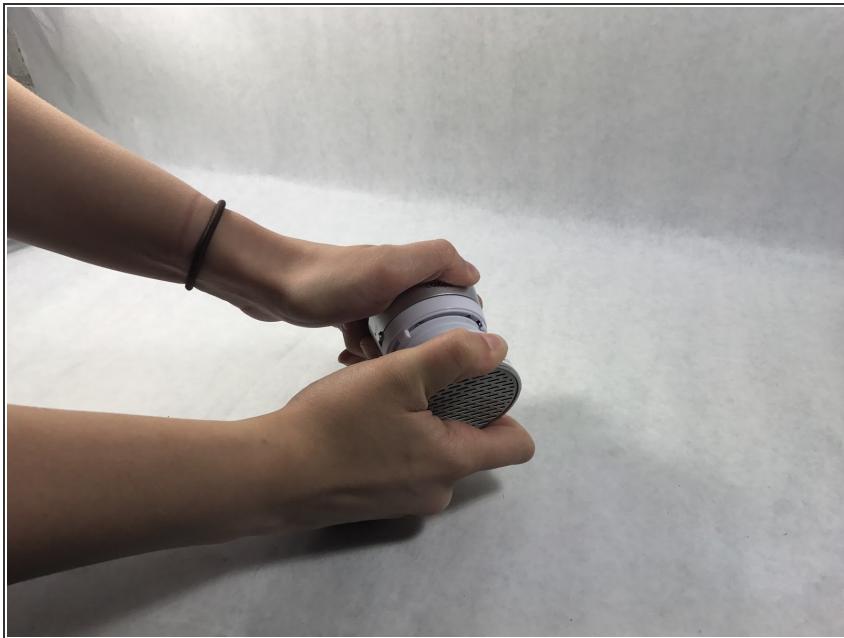

- Push down and turn the top of the speaker clockwise. This will release the clips and expand the speaker.

## Step 2



- Use a #000 Phillips screwdriver to remove the four 1 mm screws from the bottom half of the speaker.

## Step 3



- Flip the speaker over and use a #000 Phillips screwdriver to remove three 1mm screws . Unscrew these to unfasten the top.

## Step 4




- Remove the now unfastened coverings to expose the internals of the speaker.

## Step 5 — Spring



- Pry the spring from the speaker housing using the blue plastic pry tool.

## Step 6

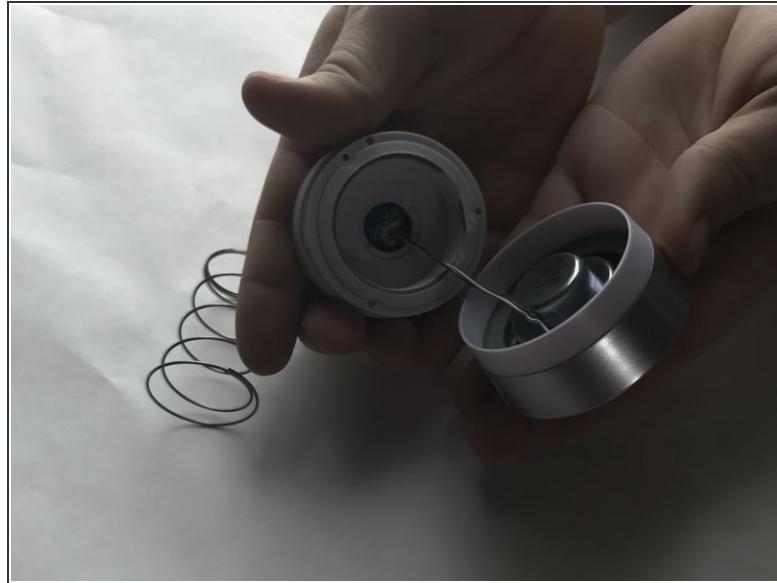

- Unwind the old spring from the wires.

To reassemble your device, follow these instructions in reverse order.