



# iHome iP1 Buttons Replacement

Replace the dock command buttons on your iHome iP1.

Written By: Wen Sullivan



## INTRODUCTION

Use this guide to replace your iHome iP1's damaged or faulty command buttons. These buttons are located on the front of the iPod/iPhone dock and are used pause/play music and change the volume of the speakers.

### TOOLS:

- Phillips #1 Screwdriver (1)

## Step 1 — Dock Cover



- Orient the iHome upside down with the speakers facing you.

## Step 2



- Remove the two 9.5 mm Phillips #1 screws from the dock cover.

## Step 3



- Remove the dock cover by grabbing its sides and pulling it up and away from the faceplate.

## Step 4 — Buttons



- Disconnect the silver ribbon cable on the left-hand side by pulling away from the command buttons.

## Step 5



- Remove the command buttons by pulling the small black panel containing them downward and away from the faceplate.

To reassemble your device, follow these instructions in reverse order.