




# iMac G4 15" 700 MHz EMC 1873 Optical Drive Replacement

Replace the optical drive in your iMac G4 15".

Written By: Ryan Kozak

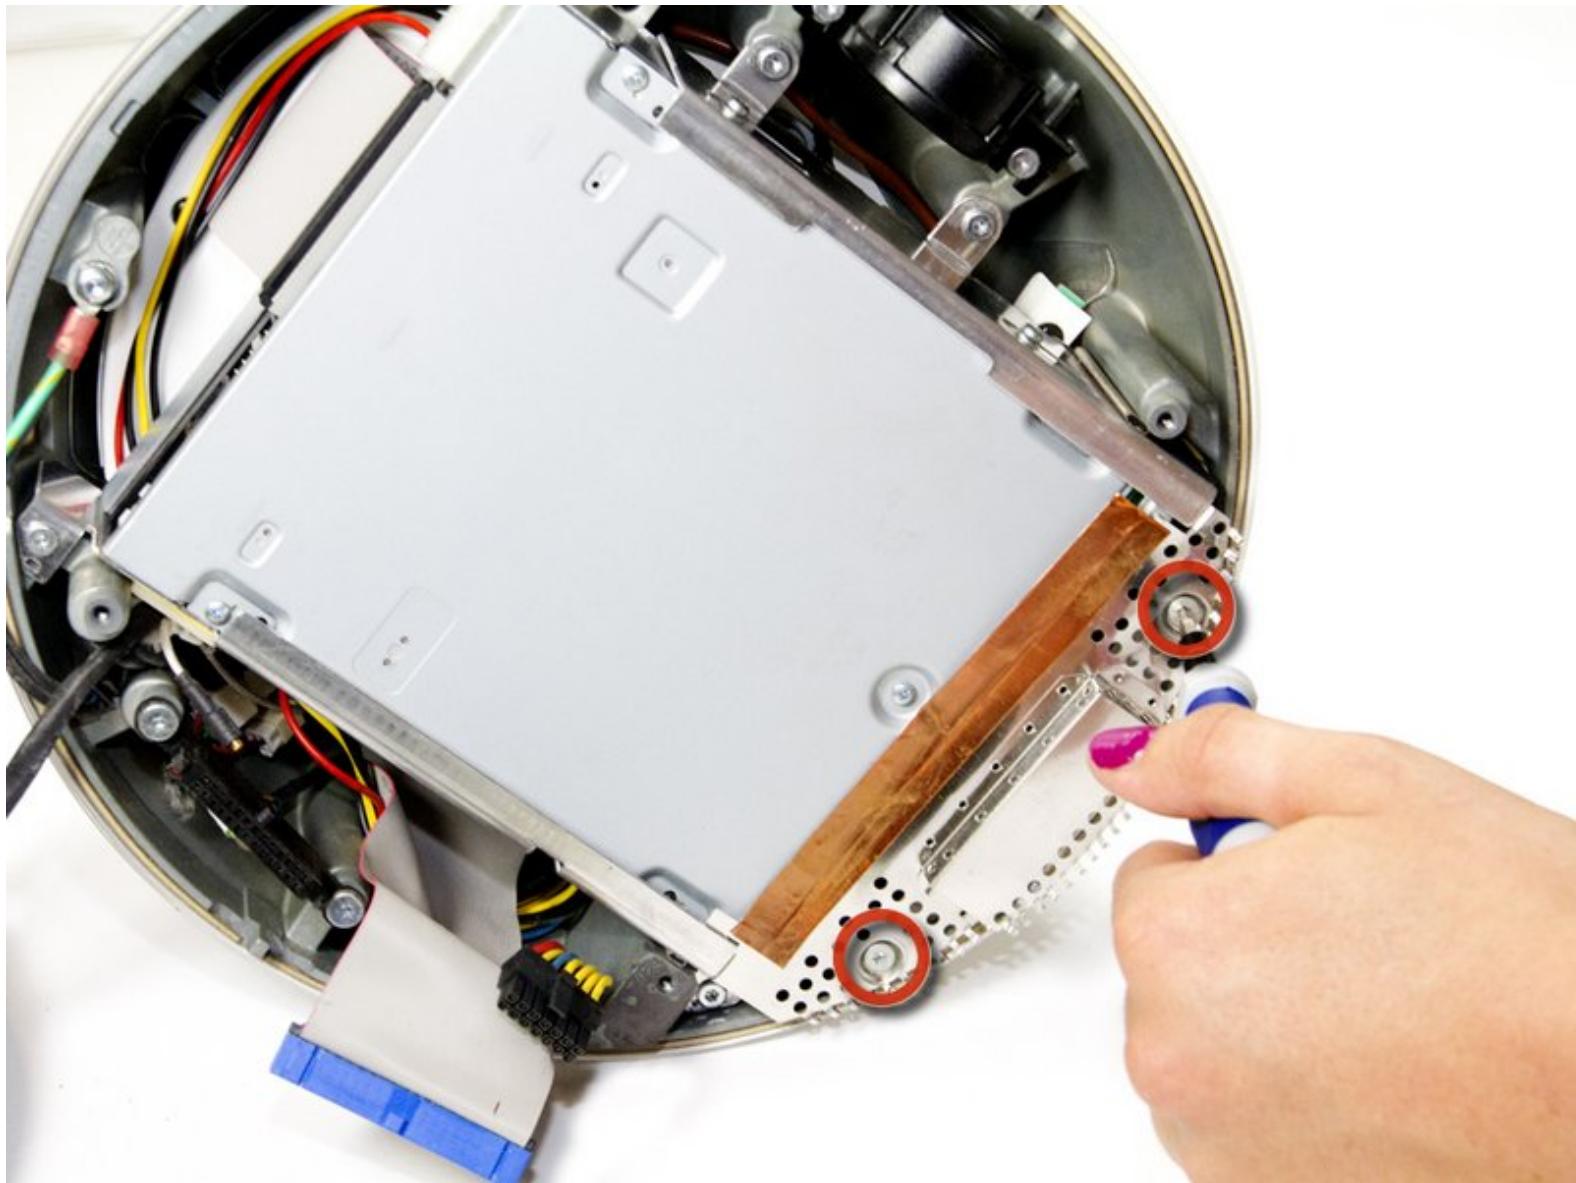

## INTRODUCTION

Replace the optical drive in your iMac G4 15".

### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [Spudger](#) (1)
- [T15 Torx Screwdriver](#) (1)

## Step 1 — Outer Base Plate



*(i)* Place the computer monitor face down on a safe, harmless surface.

- Using a Phillips #00 screw driver, remove the four 6.86 mm screws from the metal plate.


## Step 2



- Remove the metal plate from bottom of the iMac G4.


*(i)* The four screws do not completely separate from the metal plate.

## Step 3 — AirPort Card

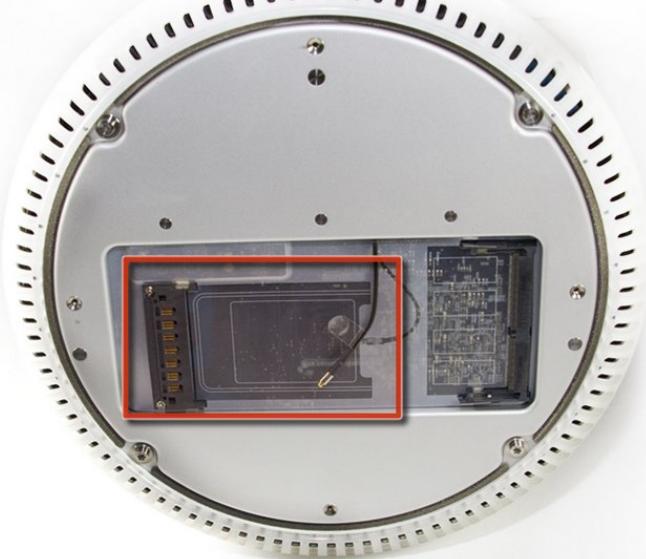

- Use a spudger to lift and remove the AirPort's antenna connector.
- *(i)* This step is only applicable to iMacs that came with an AirPort card installed.

## Step 4 — RAM DIMM

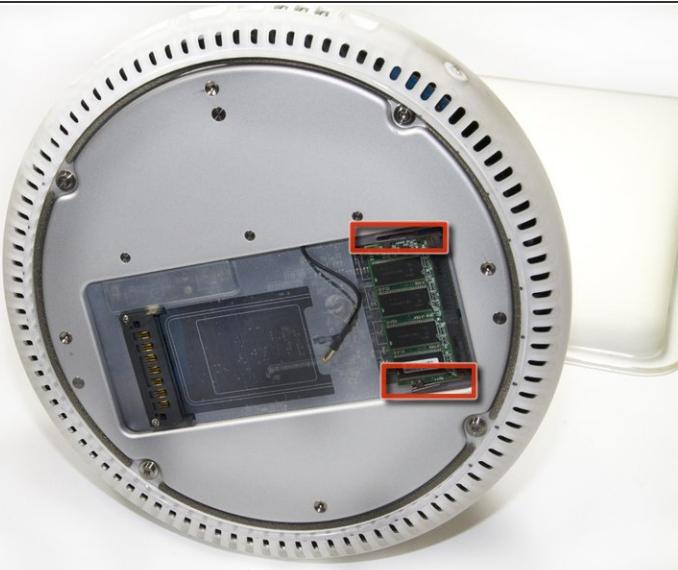

- Release the tabs on each side of the module by simultaneously pushing each tab away from the RAM.
- *(i)* These tabs lock the module in place and releasing them will cause the module to "pop" up.
- Remove the RAM module from the iMac.

This document was generated on 2019-10-09 05:26:02 AM (MST).

## Step 5 — Removing the Lower Case



- Remove the four 28.07mm Torx #15 screws from the lower case.


## Step 6



- Open the base by carefully pulling straight off, do not rotate the cover.

**⚠** Open slowly to ensure that no cables are damaged or disconnected.

## Step 7

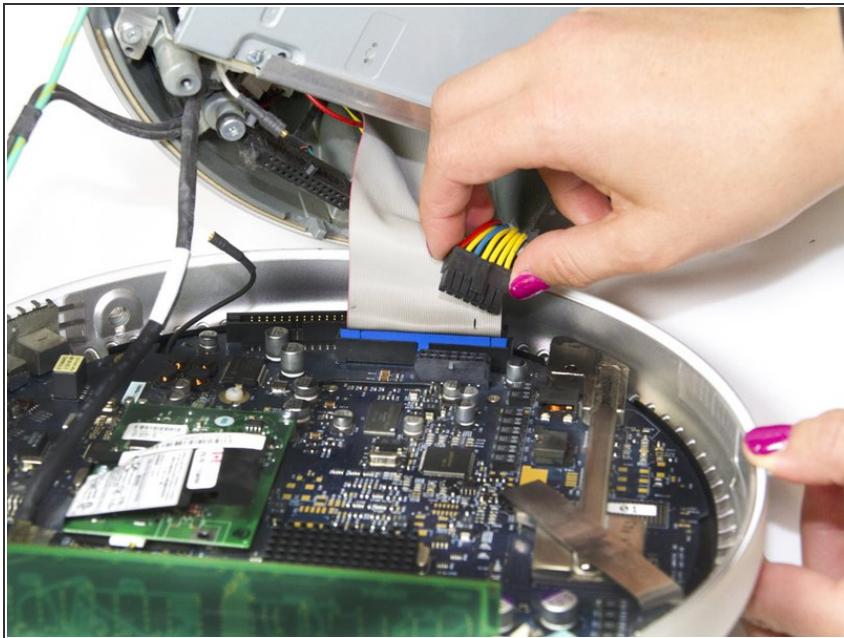


- Squeeze the small black tab and wiggle gently to remove the colored power cable.

 Do not pull directly on the colored wires.

 Do not remove black grounding wire.


## Step 8

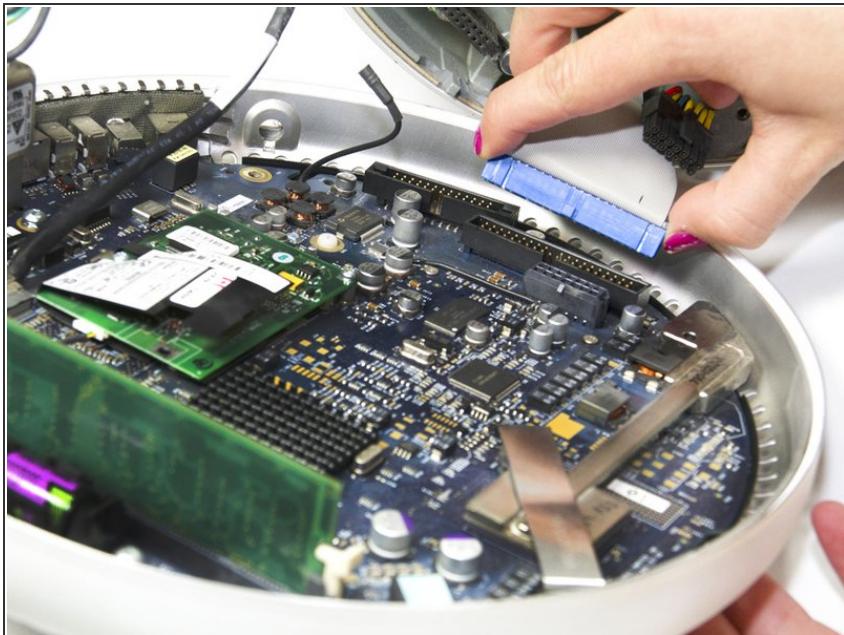

- Grab both sides of the blue connector and firmly pull to remove it from the mother board.

 Do not pull directly on the ribbon cable.

## Step 9 — Optical Drive

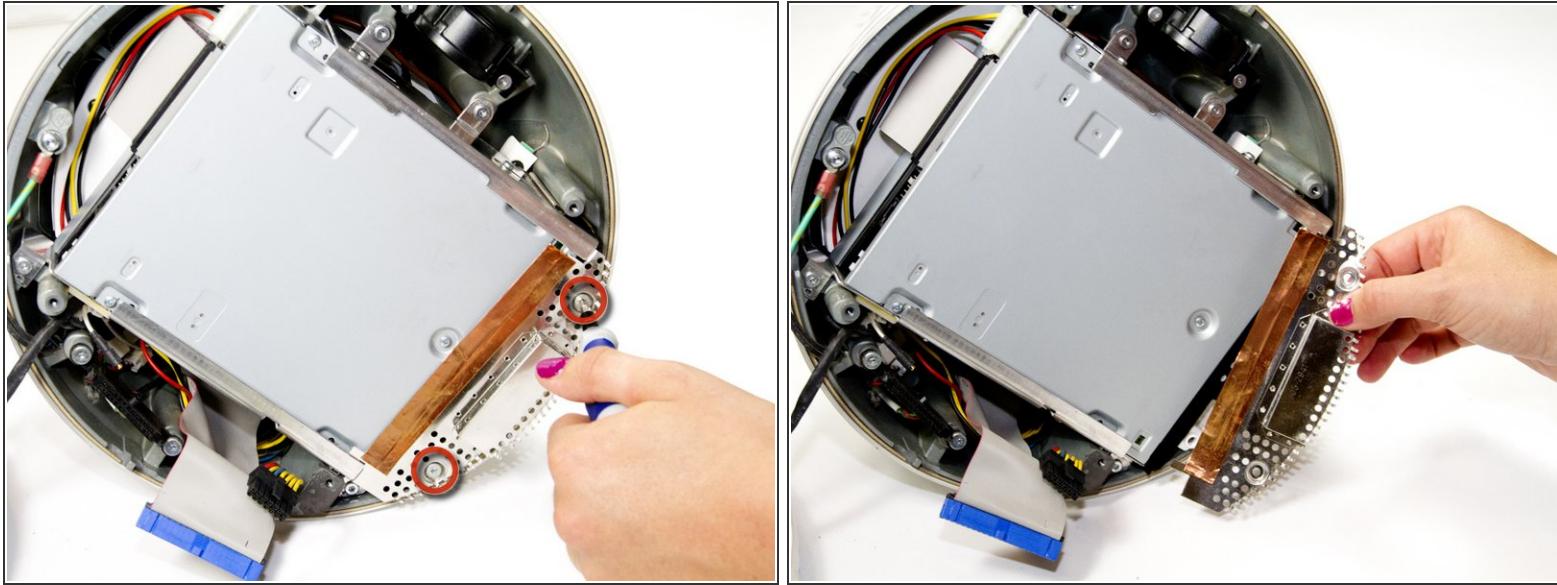


- Using a Torx #9 screw driver, remove the two 8.77mm screws holding the drive's shield onto your iMac G4.
- Remove the drive shield from your iMac.

## Step 10



- Using a Torx # 10 screw driver, remove the four 19.12mm screws that mount the optical drive.


## Step 11

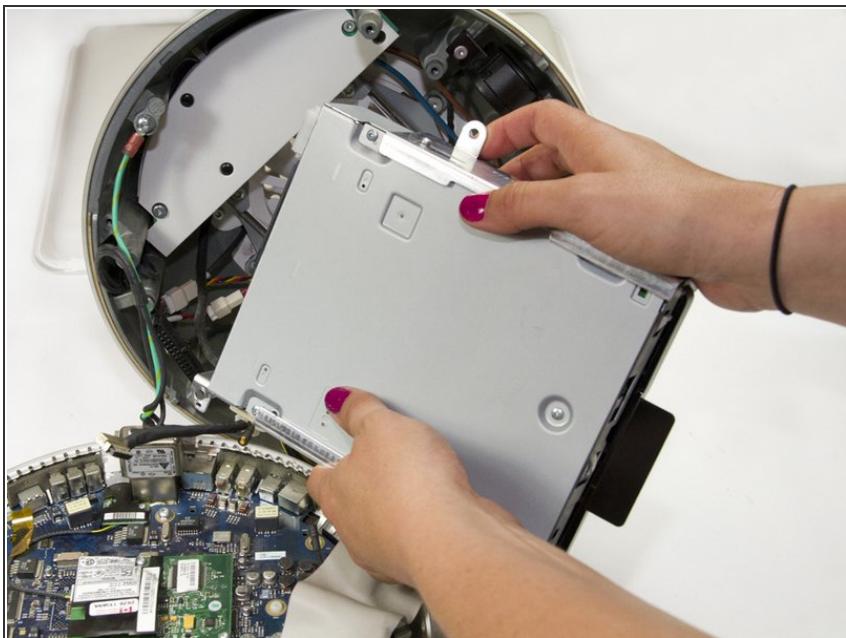

- Grasp the HD/Optical Drive bundle by the by the sides and gently wiggle it loose from the sides.

**⚠** Ensure there are no wires passing over the top of the drive bundle when removing it, as it may unintentionally disconnect something.

## Step 12

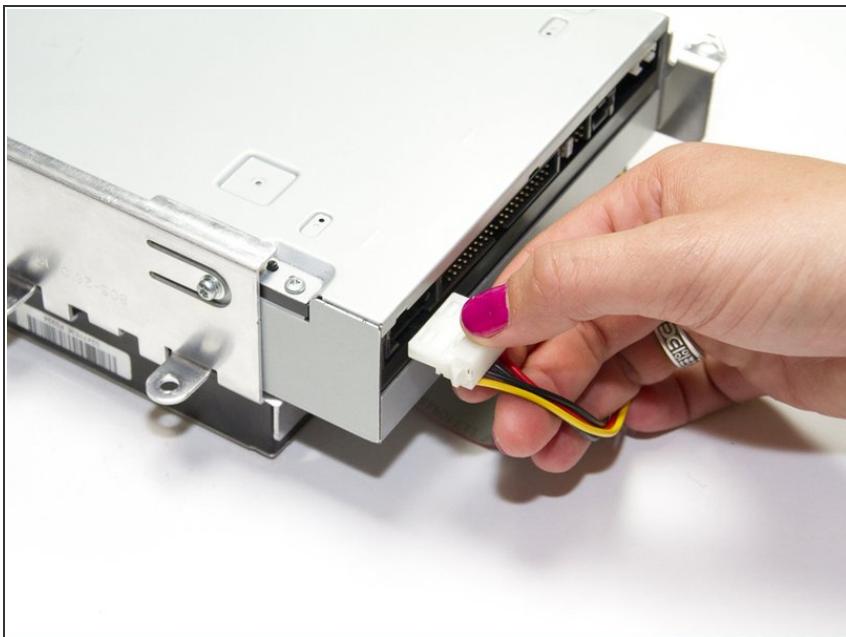

- Unplug the power source from the optical drive by pinching the plastic base of the connector and wiggling it gently.

**⚠** Do not use excessive force, or pull on the wires directly, in order to unplug the connector from the drive.

## Step 13



- Unplug the ribbon cable from the optical drive by grasping the plastic base of the connector and wiggling it gently.

 Do not pull on the ribbon cable directly.


## Step 14



- Remove the four 6.75mm Torx # 10 screws mounting the drive.

 There are two screws on both sides of drive mount.

## Step 15

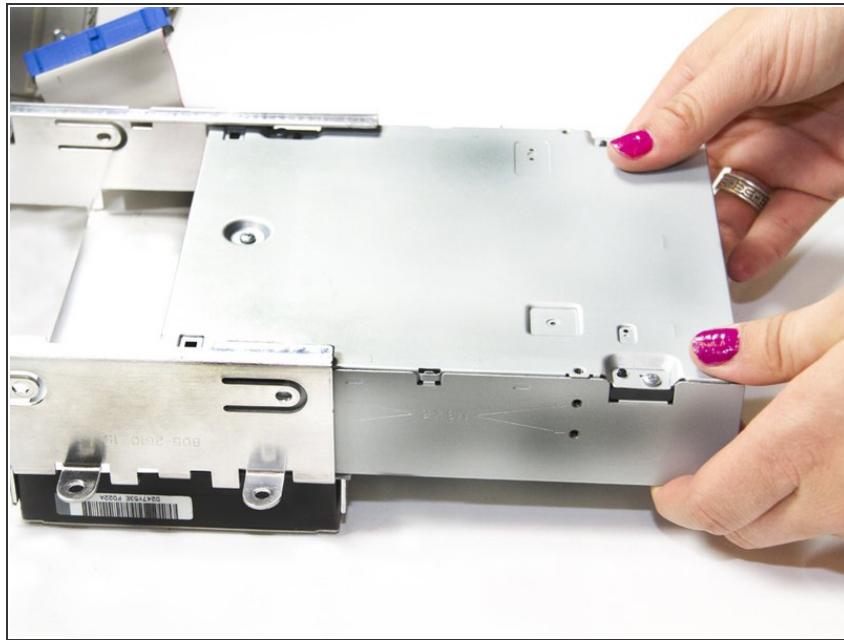

- Slide the optical drive out from the metal support mounted to hard drive.

To reassemble your device, follow these instructions in reverse order.