



Designed by Apple in California. Model Number: A1144 © 2005 Apple Computer, Inc. All rights reserved.
100-240V~, 50-60Hz, 3.0A Contains FCC ID: BCGA1126 IC: 579C-A1126 in North and South America and Taiwan.
Complies with the Canadian ICES-003 Class B specifications. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: 1) this device may not cause harmful interference, and 2) this device must accept any interference received, including interference that may cause undesired operation. Apparatet skall anslutas till jordat nätuttag.

FC CE LRA5149 VCCI X

Serial No.: W0542701740 Error No.: 003451230005
P/N: 10710 100-110-112 100-111
Mfg. OS: 10710 100-110-112 100-111
Manufactured in China. EMC No.: 2001

INTRODUCTION

Remove your front bezel to gain access to your iMac's internals.



TOOLS:

- [Phillips #1 Screwdriver](#) (1)
 - [Plastic Cards](#) (1)
 - [T8 Torx Screwdriver](#) (1)
-

Step 1 — Access Door



⚠ Before you work on the computer, unplug the computer and press the power button for 20-30 seconds to drain the stored energy in the power supply.

- Loosen the two Phillips screws securing the access door to your iMac.

i These screws are captive in the access door.

Step 2




- Remove the access door from your iMac.

Step 3 — Front Bezel



- Remove the three T8 Torx screws securing the front bezel to the rear panel.

Step 4

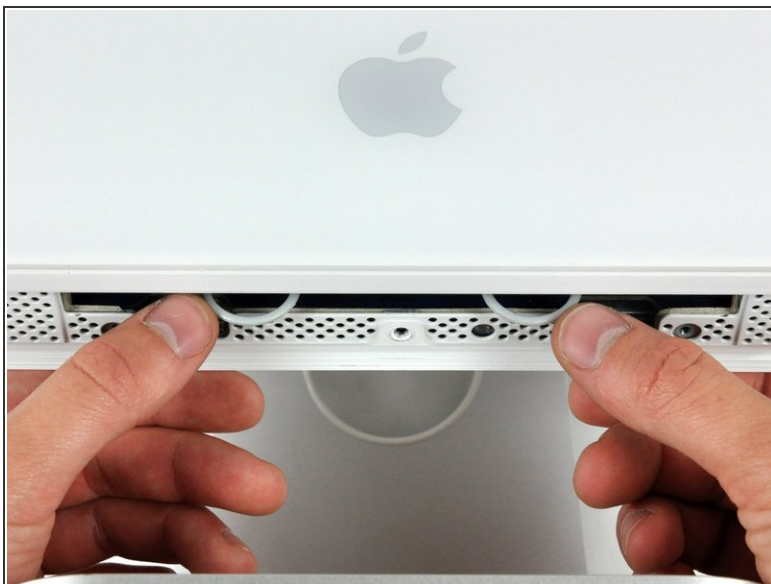

i Orient the iMac face-up, on its backside.

- Use your thumbs to press both RAM arms in past the front bezel for enough clearance to lift it off the rear case.

Step 5



- While holding the RAM arms in with your thumbs, lift the lower edge of the front bezel enough to clear the rear case.

Step 6




- ❗ Re-orient your iMac so it sits upright on the stand.
 - Insert a plastic card up into the corner of the air vent slot at the top of the rear case.
 - Push the card toward the top of the iMac to release the front bezel latch.
 - Pull the front bezel away from the rear case.
 - Repeat this process for the other side of the front bezel.
- ❗ It may be necessary to apply several layers of duct tape to the top of the access card to aid in releasing the latches.
- ❗ If the bezel refuses to release, try pressing the lower edge back onto the rear case and repeat this opening process.

Step 7




- Lay your iMac stand-side down on a table.
- Lift the front bezel from its lower edge and rotate it away from the rest of your iMac, minding the RAM arms that may get caught.
- Lay the front bezel above the rest of the iMac.

Step 8

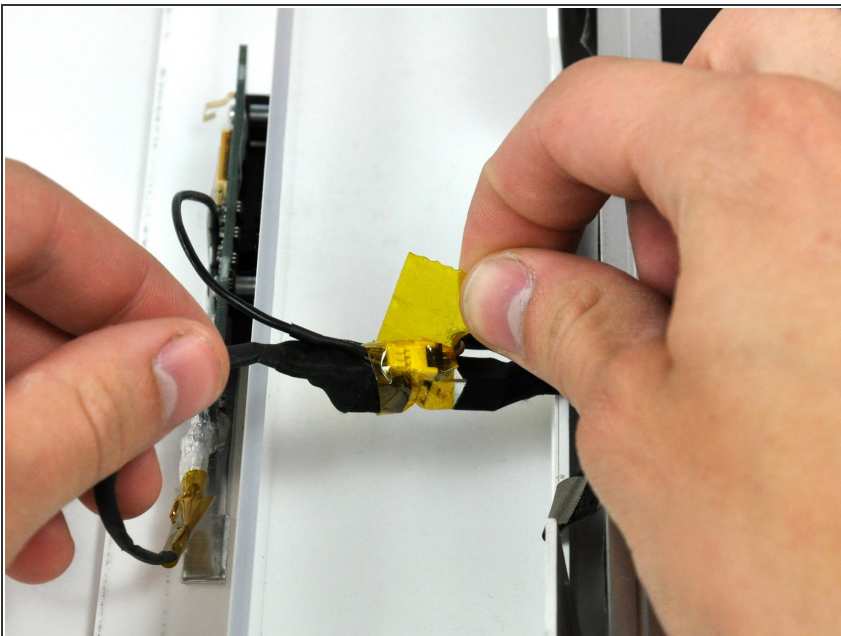

- If necessary, remove the piece of kapton tape wrapped around the microphone and camera cables.

Step 9

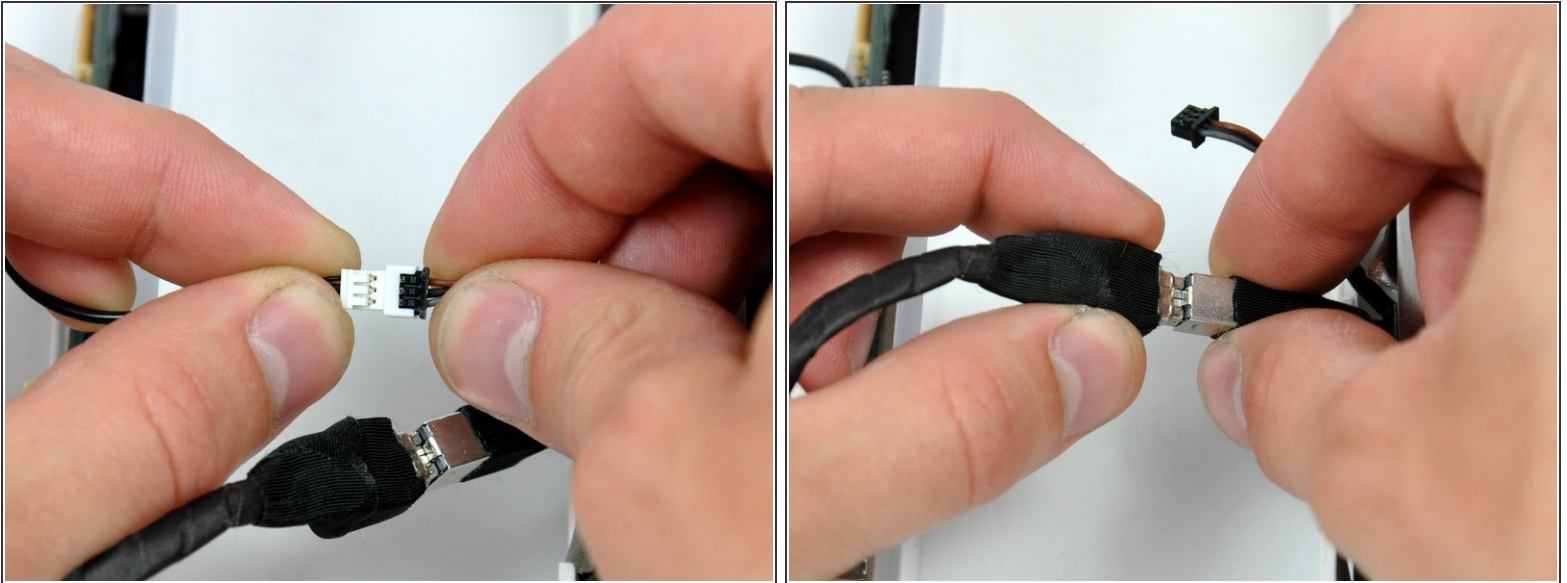

- Disconnect both the camera and microphone cables.

To reassemble your device, follow these instructions in reverse order.