



iMac Intel 17" Access Door Replacement

Written By: Andrew Bookholt




INTRODUCTION

Remove the access door to replace RAM chips and remove your front bezel.

TOOLS:

- Phillips #1 Screwdriver (1)

Step 1 — Access Door

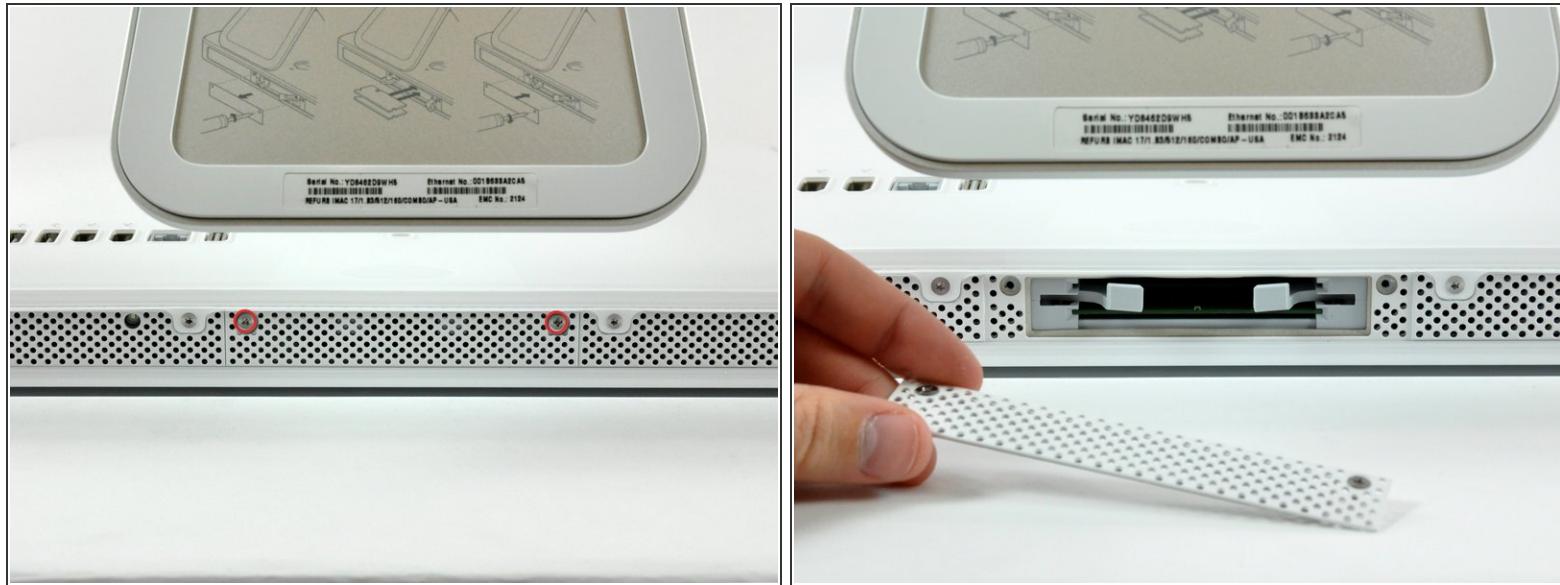

- Loosen the two captive Phillips screws securing the access door to the iMac.
- Remove the access door from the iMac.

⚠ Before beginning the repair, unplug the computer and press and hold the power switch for 20-30 seconds, to discharge internal capacitors.

To reassemble your device, follow these instructions in reverse order.