



iMac Intel 24" EMC 2134 and 2211 Access Door Replacement

Prerequisite-only guide to remove your access door to replace RAM chips or to open the case of your iMac.

Written By: Brittany McCrigler



This document was generated on 2019-11-11 05:32:05 AM (MST).

INTRODUCTION

Prerequisite-only guide to remove your access door to replace RAM chips or to open the case of your iMac.

TOOLS:

- [Phillips #1 Screwdriver \(1\)](#)

Step 1 — Access Door



- Loosen the single Phillips screw in the center of the access door.
- *(i)* This screw is captive in the access door.
- Remove the access door from your iMac.

To reassemble your device, follow these instructions in reverse order.