



# iMac Intel 24" EMC 2134 and 2211 Display Panel Replacement

Written By: Brittany McCrigler




## INTRODUCTION

Remove your display panel to gain access to the hard drive, optical drive, and power supply.

### TOOLS:


- T6 Torx Screwdriver (1)

## Step 1 — Display Panel

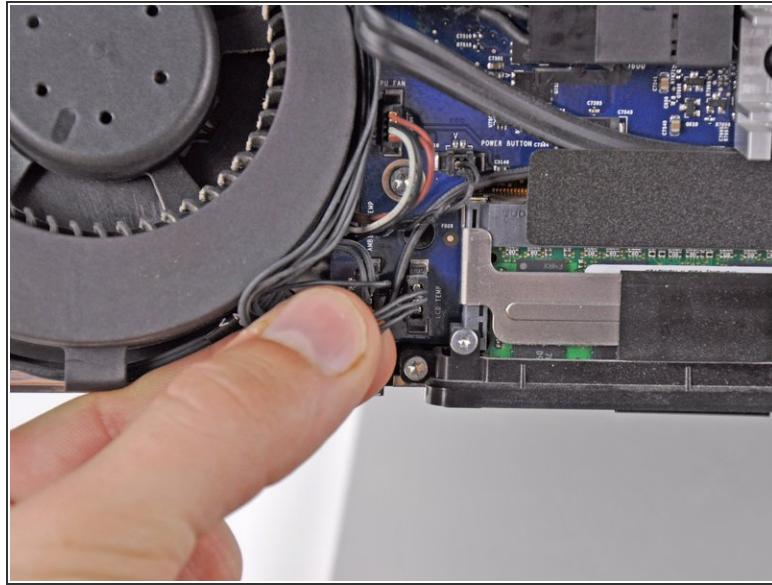


- Disconnect the LCD temperature sensor by pulling the connector straight out of its socket on the logic board.
- *(i)* If necessary, de-route the LCD temperature sensor cable from behind the logic board.

## Step 2

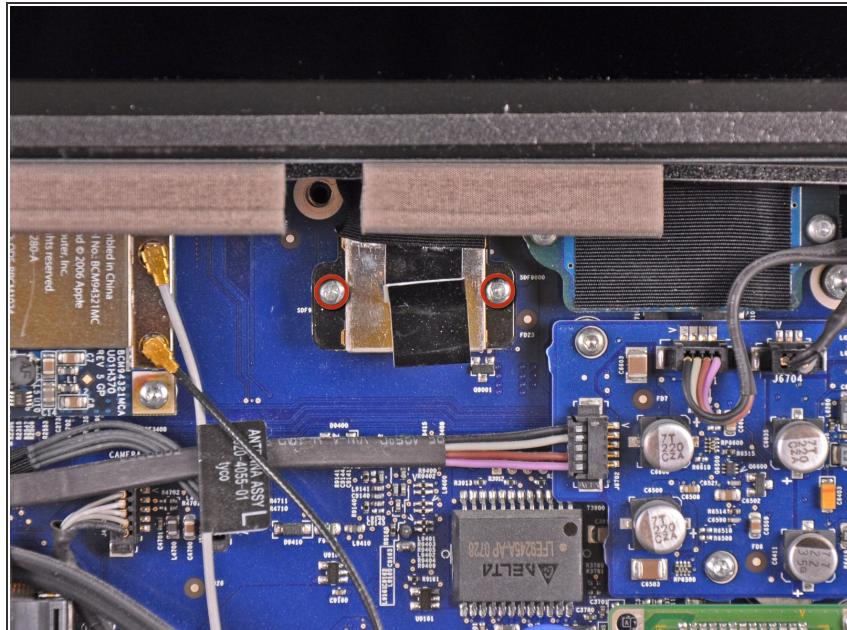

- Remove the two 5.3 mm T6 Torx screws securing the display data cable to the logic board.

## Step 3

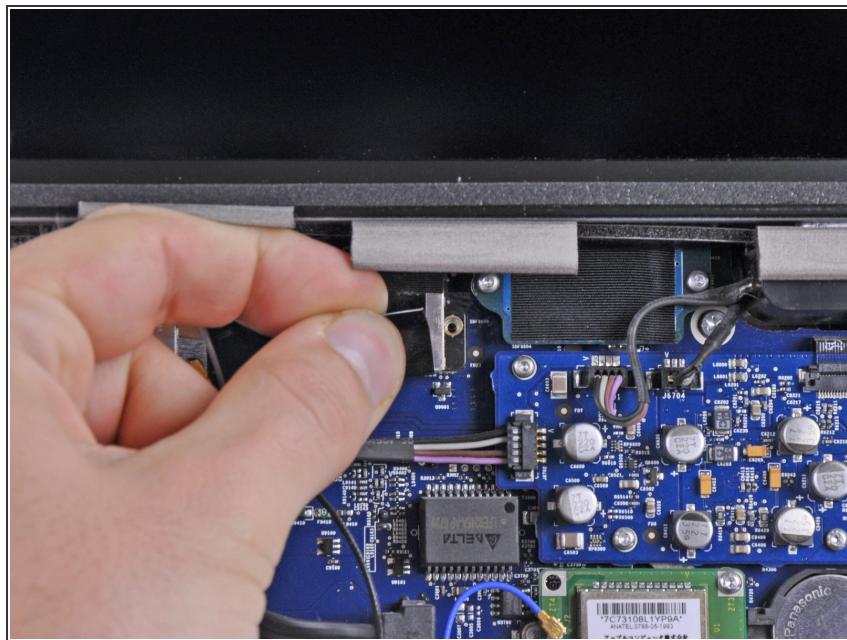

- Disconnect the display data cable connector from its socket on the logic board by pulling the attached plastic tab towards you and away from the iMac.

## Step 4





**⚠** Lay the iMac down on a table before you remove the LCD so that it doesn't fall.

- Remove the eight 12 mm T8 Torx screws securing the display panel to the rear case.
- Lift the right side of the display panel a few inches up from the iMac.

**⚠** Do not lift the LCD all the way up; there are still connectors attaching the LCD to the internals.

## Step 5

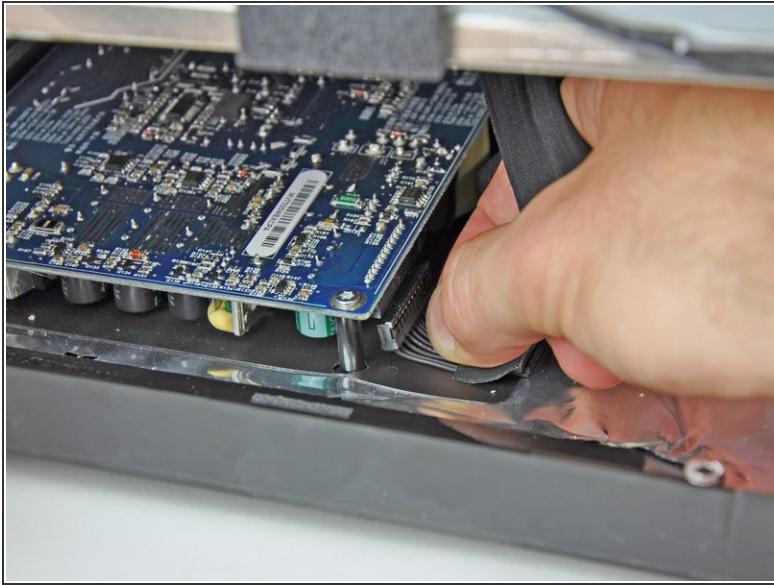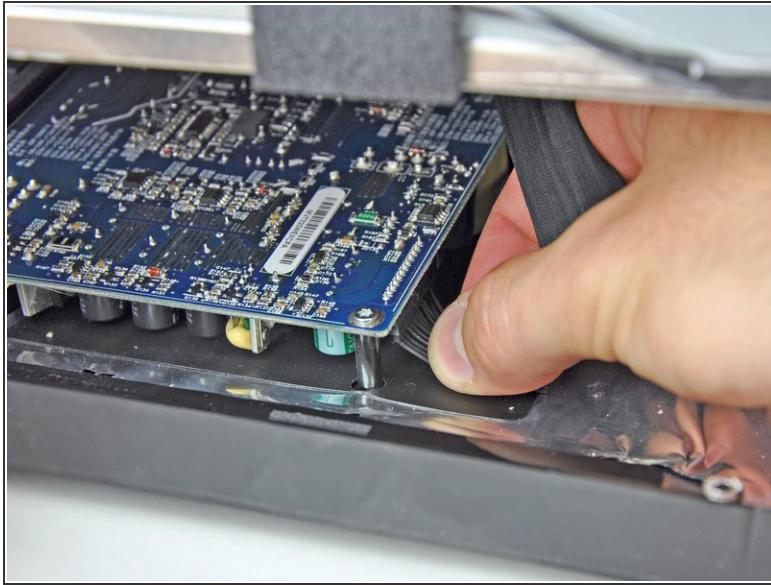

- With the LCD lifted, disconnect the LCD cable by pulling down.

**⚠** The LCD cable is attached to the underside of the power supply; be careful where you put your fingers so you don't get zapped by a capacitor.

- On reassembly, you may find it helpful to remove the power supply, reconnect the LCD power cable, and then reinstall the power supply.
- Alternatively, the LCD power cable can be disconnected from the LCD, rather than the power supply.

## Step 6



- Continue to lift the LCD from the right side.
- Remove the LCD.

To reassemble your device, follow these instructions in reverse order.