



iMac Intel 27" EMC 2429 RAM Replacement

Replace the RAM in an iMac Intel 27" EMC 2429.

Written By: Phillip Takahashi



INTRODUCTION

This guide will help you replace the RAM.

TOOLS:

- Phillips #1 Screwdriver (1)
- Spudger (1)

PARTS:

- [iMac Intel 27" EMC 2429 \(Mid 2011\) Memory Maxxer RAM Upgrade Kit \(1\)](#)
- [PC3-10600 2 GB RAM Chip \(1\)](#)
- [PC3-10600 4 GB RAM Chip \(1\)](#)
- [PC3-10600 8 GB RAM Chip \(1\)](#)

Step 1 — Access Door



- Loosen the three Phillips screws securing the access door to the bottom edge of your iMac.
- These screws will remain captive in the access door.
- Remove the access door from your iMac.

★ During reassembly, fasten the access door loosely and align it with the pocket cut into the outer case of the iMac before fully tightening the screws.

Step 2 — RAM



- Use your fingers or the tip of a spudger to slide the black plastic RAM tray pull tab out of the RAM slot.

Step 3



- Pull the black plastic tab away from the iMac to eject the RAM chip from its socket.
- The RAM modules are firmly seated and may require a fair amount of force to remove.
- Use your fingers to slide the RAM chip out of its socket.

(i) If necessary, repeat this process for the other RAM module(s).

To reassemble your device, follow these instructions in reverse order.