


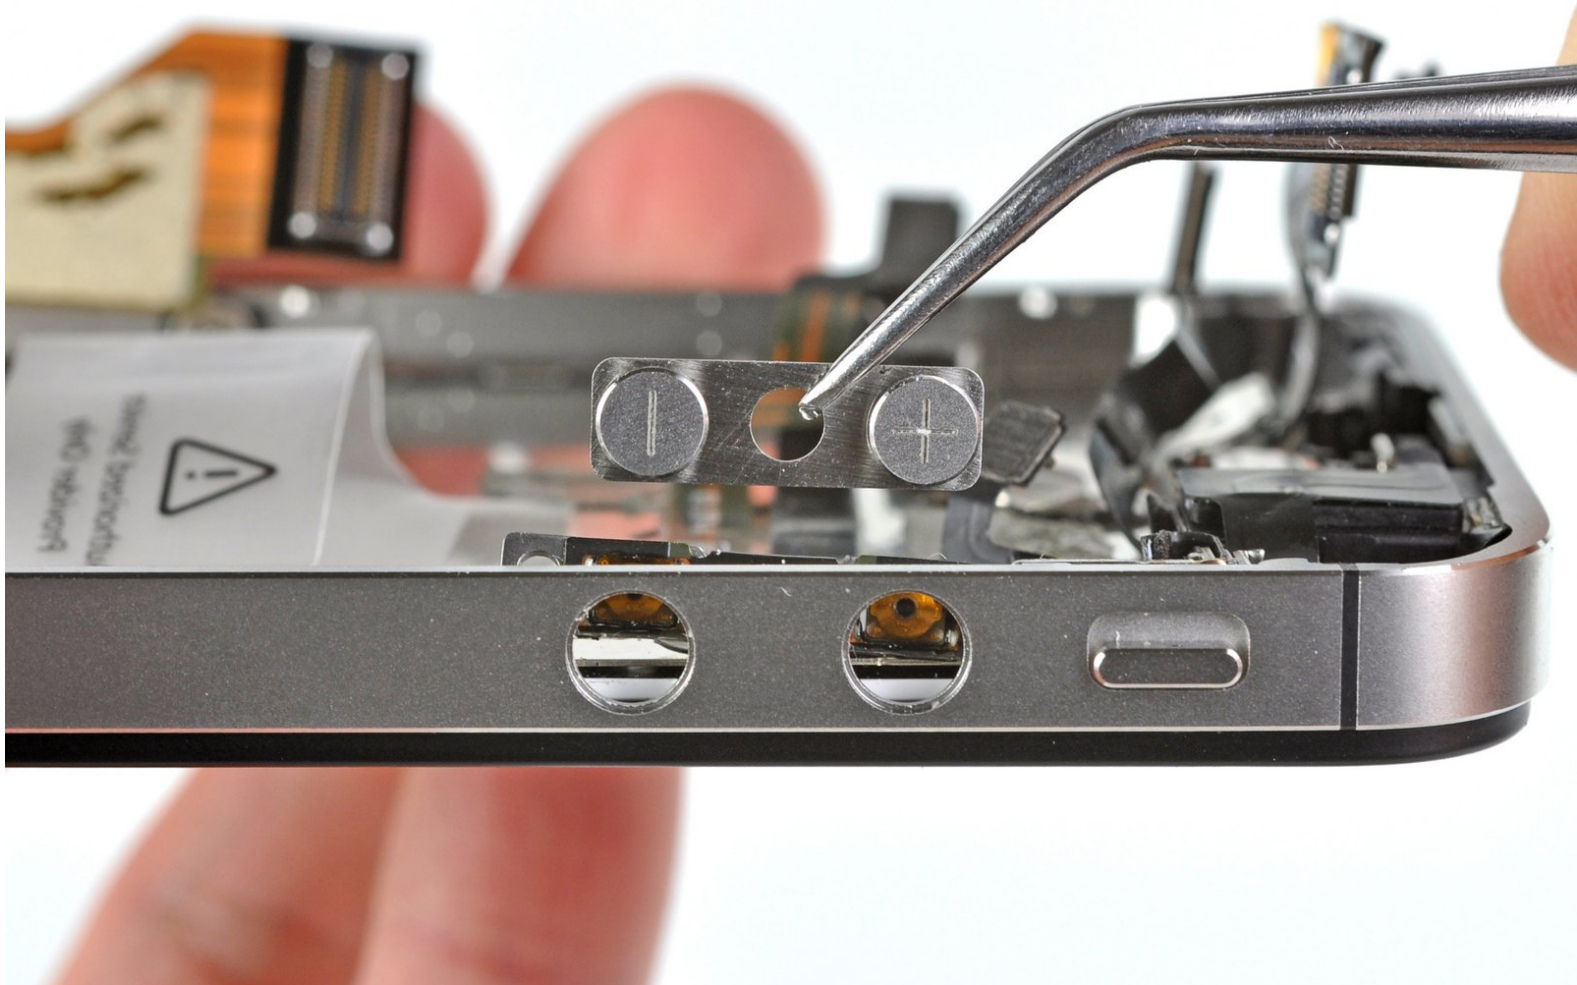

# iPhone 4 Verizon Volume Buttons Replacement

Replace the external metal volume buttons on your Verizon iPhone 4.

Written By: Andrew Bookholt



# INTRODUCTION

Use this guide to replace the metal volume buttons.



## TOOLS:

- [P2 Pentalobe Screwdriver iPhone](#) (1)
- [Phillips #000 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)
- [Tweezers](#) (1)




## PARTS:

- [iPhone 4 and 4S Volume Button](#) (1)

## Step 1 — Rear Panel




-  Before you begin, discharge your iPhone battery below 25%. A charged lithium-ion battery can catch fire and/or explode if accidentally punctured.
- Power off your iPhone before beginning disassembly.
  - Your phone's rear cover may have two #000 Phillips screws **or** Apple's 5-Point "Pentalobe" screws. Check which screws you have, and ensure you also have the correct screwdriver in order to remove them.
  - Remove the two 3.6 mm Pentalobe or Phillips #000 screws next to the dock connector.

## Step 2




- Push the rear panel toward the top edge of the iPhone.

 The panel will move about 2 mm.

## Step 3



- Pinch the rear panel with your fingers, and lift it away from the iPhone. Alternatively, use a [Small Suction Cup](#).

 Be careful not to damage the plastic clips attached to the rear panel.



## Step 4 — Battery



- Remove the single 1.5 mm Phillips screw securing the battery connector to the logic board (if present).

## Step 5




- Use the edge of a plastic opening tool to gently pry the battery connector up from its socket on the logic board.
- ⚠ Be very careful to only pry up on the battery connector and not the socket on the logic board. If you pry up on the logic board socket, you may break it entirely.
- Remove the metal clip covering the antenna connector.

## Step 6




- Pull up on the exposed clear plastic tab to peel the battery off the adhesive securing it to the iPhone.
- ⚠ If the tab breaks before the battery is freed, carefully slide a spudger under the battery tab to release the adhesive. Prying in other places may cause damage.
- Remove the battery.
- ⓘ If your replacement battery came in a plastic sleeve, remove it before installation by pulling it away from the the ribbon cable.
- Before reassembly, clean metal-to-metal contact points with a de-greaser such as windex. The oils from your fingers have the potential to cause wireless interference issues.
- Perform a [hard reset](#) after reassembly. This can prevent several issues and simplify troubleshooting.

## Step 7 — Volume Buttons

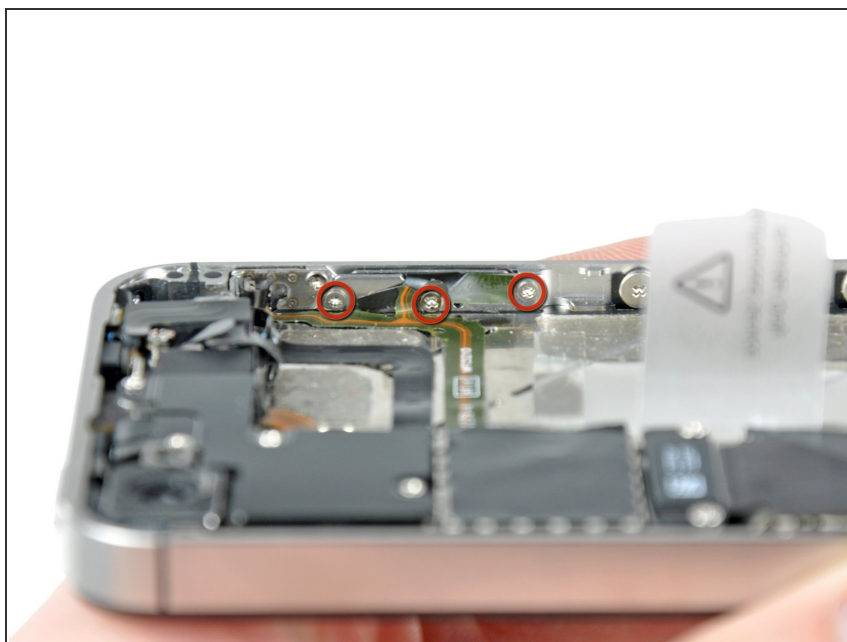

- Remove the three 1.6 mm Phillips screws securing the volume button bracket to the outer case.

## Step 8

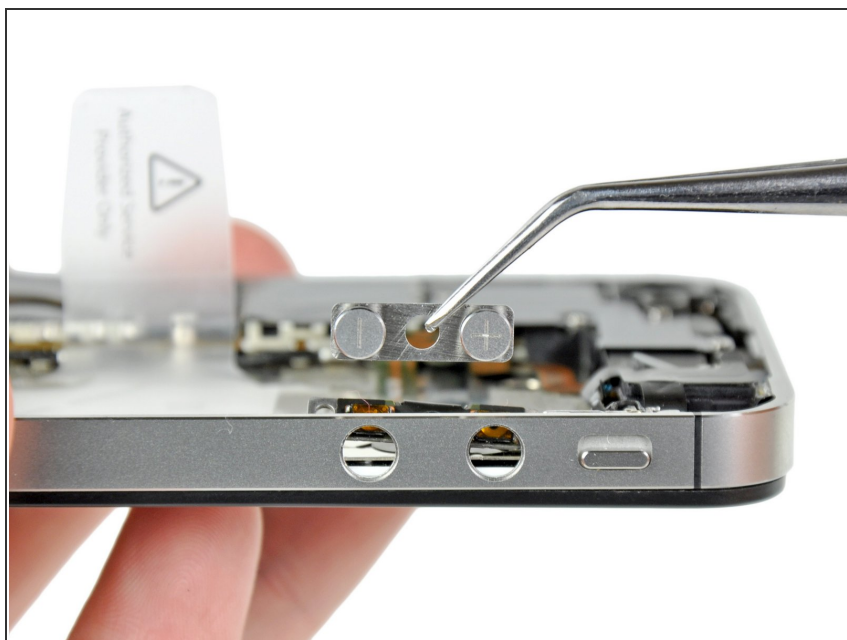

- Pull the volume bracket slightly away from the outer case.
- Use a pair of tweezers to remove the volume buttons from the iPhone.

To reassemble your device, follow these instructions in reverse order.