



iPhone 5c SIM Card Replacement

Replace the SIM card in your iPhone 5c.

Written By: Walter Galan



INTRODUCTION

Use this guide to remove or replace your GSM iPhone's SIM card and tray.

TOOLS:

- [SIM Card Eject Tool \(1\)](#)

PARTS:

- [iPhone 5c Sim Card Tray \(1\)](#)

Step 1 — SIM Card



(i) Shut your phone down completely before removing the SIM card and tray.

- Insert a SIM card eject tool or a paperclip into the small hole in the SIM card tray.
- Press the SIM card eject tool inwards to eject the tray.
- This may require a significant amount of force.

Step 2



- Remove the SIM Card tray assembly from the iPhone.
- ☒ During reassembly, ensure that the SIM card is in the proper orientation relative to the tray.

To reassemble your device, follow these instructions in reverse order.