



iPhone 6 Home Button Replacement

Replace the home button in your iPhone 6.

Written By: Sam Goldheart



INTRODUCTION

Use this guide to remove or replace the home button in your iPhone 6.

Please note that only the phone's original home button assembly will be capable of using the Touch ID functionality. **Installing a new home button will only restore ordinary home button functions, not the Touch ID features.**

You can also use this guide to replace the following parts:

- [Front Panel Assembly Cable Bracket](#)
- [Home Button Bracket](#)

[video: <https://www.youtube.com/watch?v=Fn5cYt4rioU>]


TOOLS:

- P2 Pentalobe Screwdriver iPhone (1)
- iSclack (1)
- Phillips #000 Screwdriver (1)
- iFixit Opening Tools (1)
- Suction Handle (1)
- Tweezers (1)
- Spudger (1)

PARTS:

- iPhone 6 and 6 Plus Home Button Assembly (1)
- iPhone 6 Front Panel Assembly Cable Bracket (1)
- iPhone 6 and 6 Plus Home Button Bracket (1)
- iPhone 6 and 6 Plus Home Button Gasket (1)

Step 1 — Pentalobe Screws

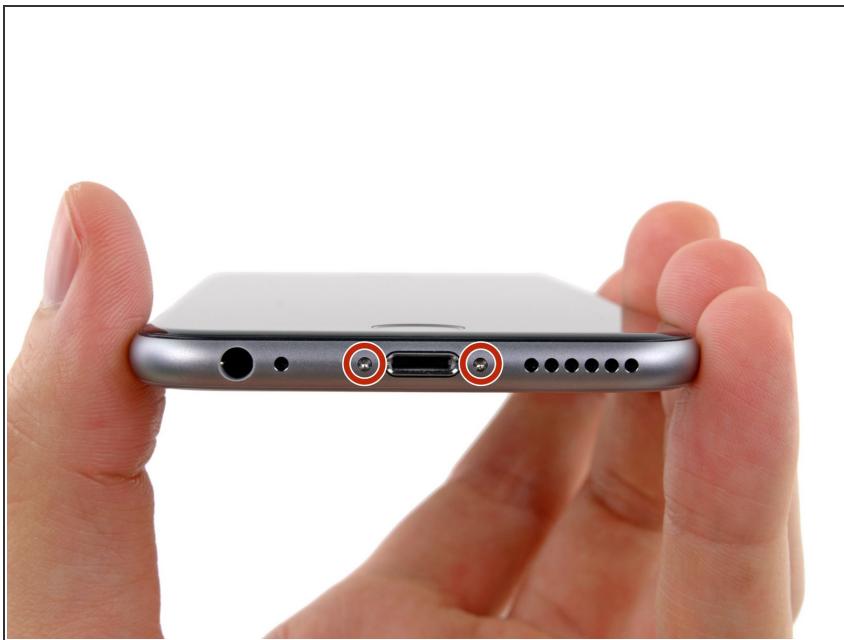

⚠ Before disassembling your iPhone, discharge the battery below 25%. A charged lithium-ion battery can catch fire and/or explode if accidentally punctured.

- Power off your iPhone before beginning disassembly.
- Remove the two 3.6 mm-long Pentalobe screws next to the Lightning connector.

Step 2 — iSclack Opening Procedure



i The next three steps demonstrate using the iSclack, a great tool for safely opening the iPhone 6 that we recommend for anyone doing more than one repair. **If you aren't using the iSclack, skip down three steps for an alternate method.**

- If the plastic depth gauge is attached at the center of the iSclack, remove it now—it's not needed for larger phones like the iPhone 6.
- Close the handle on the iSclack, opening the suction-cup jaws.

Step 3



- Place the bottom of your iPhone in between the suction cups.
- Position the iSclack's upper suction cup against the display, just above (but not covering) the home button.
- Open the handles to close the jaws of the iSclack. Center the suction cups and press them firmly onto the top and bottom of the iPhone.

(i) If your display or back glass is badly cracked, [covering it with a layer of clear packing tape](#) may help the suction cups adhere. The iSclack also includes two pieces of tape for this purpose.

Step 4



- Hold onto your iPhone securely and close the handle of the iSclack to separate the suction cups, pulling the front panel up from the rear case.
- The iSclack is designed to safely open your iPhone just enough to separate the pieces, but not enough to damage the display cables.
- Peel the two suction cups off your iPhone.
- **Skip the next three steps and continue on to Step 8.**

Step 5 — Manual Opening Procedure




- If you don't have an iSlack, use a single suction cup to lift the front panel:
 - Press a suction cup onto the screen, just above the home button.

i Be sure the cup is pressed securely onto the screen to get a tight seal.


i If your display is badly cracked, [covering it with a layer of clear packing tape](#) may allow the suction cup to adhere. Alternatively, very strong tape may be used instead of the suction cup. If all else fails, you can superglue the suction cup to the broken screen.

Step 6

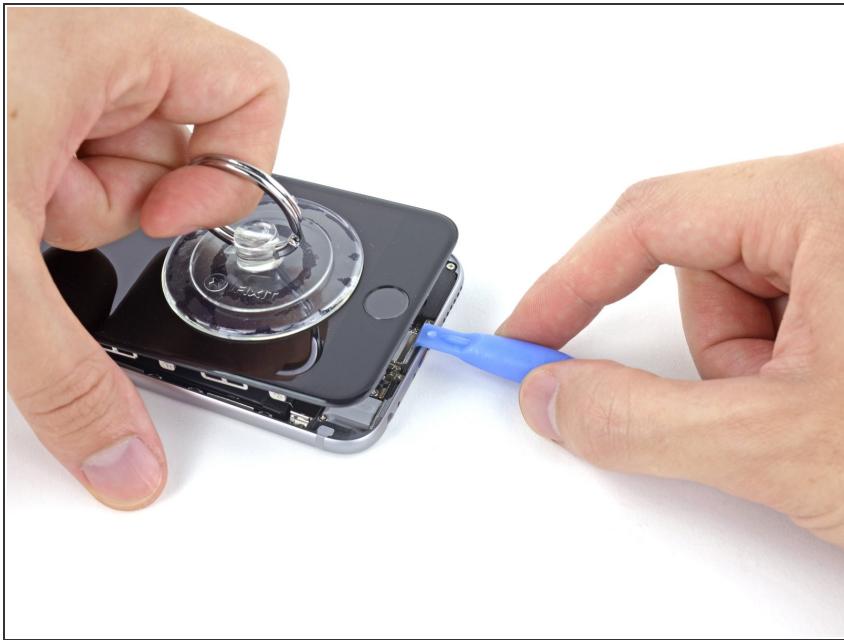

- While holding the iPhone down with one hand, pull up on the suction cup to slightly separate the front panel assembly from the rear case.
- **⚠** Take your time and apply firm, constant force. The display assembly is a much tighter fit than most devices.
- Using a plastic opening tool, begin to gently pry the rear case down, away from the display assembly, while continuing to pull up with the suction cup.
 - **ⓘ** There are several clips holding the front panel assembly to the rear case, so you may need to use a combination of the suction cup and plastic opening tool to free the front panel assembly.

Step 7

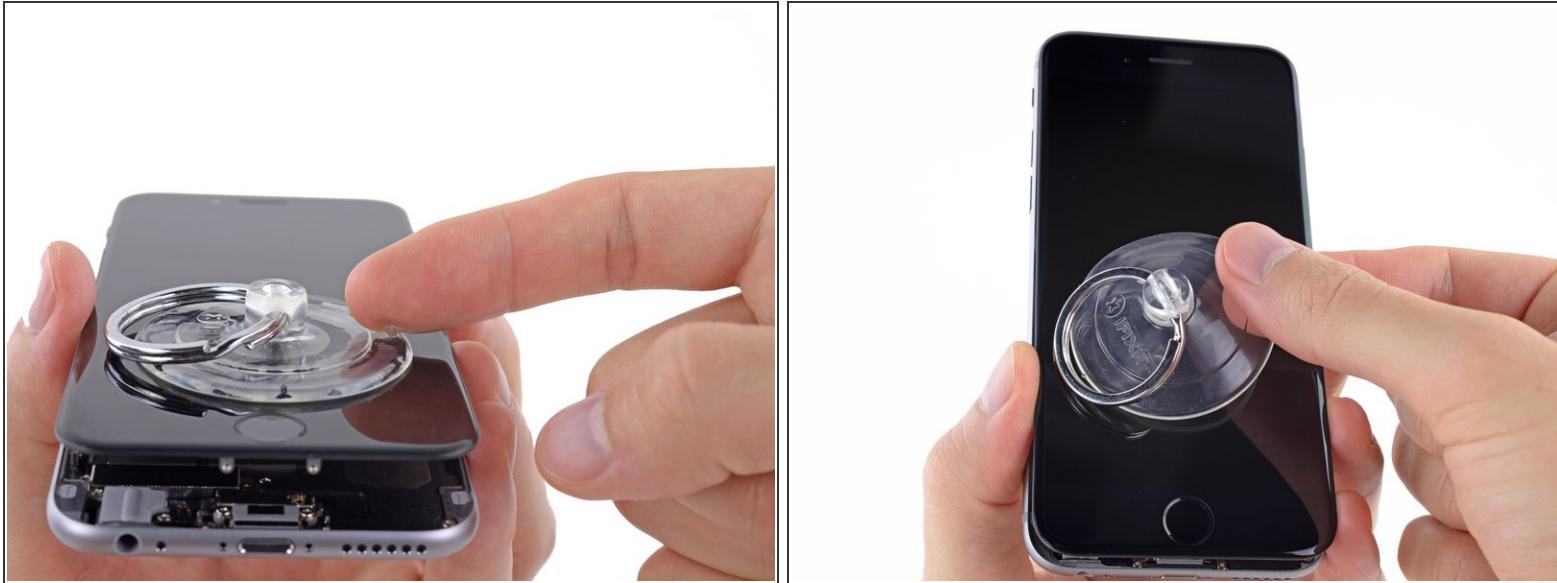

- Pull the plastic nub to release the vacuum seal on the suction cup.
- Remove the suction cup from the display assembly.

Step 8 — Opening up the phone



- Open the iPhone by swinging the home button end of the front panel assembly away from the rear case, using the top of the phone as a hinge.

(i) Several clips along the top edge of the front panel form a partial hinge.

(n) During reassembly, align the clips just below the top edge of the rear case. Then, slide the front panel upward until its top edge is flush with that of the rear case.

Step 9



- Open the display to about a 90° angle, and lean it against something to keep it propped up while you're working on the phone.
 - *i* In a pinch, an unopened canned beverage works well for this.
- Add a rubber band to keep the display securely in place while you work. This prevents undue strain on the display cables.


Step 10 — Removing the battery connector bracket screws



- Remove the following Phillips screws from the battery connector bracket:
 - One 2.2 mm screw
 - One 3.2 mm screw

i During your repair, keep track of each screw and make sure it goes back exactly where it came from to avoid damaging your phone.

Step 11

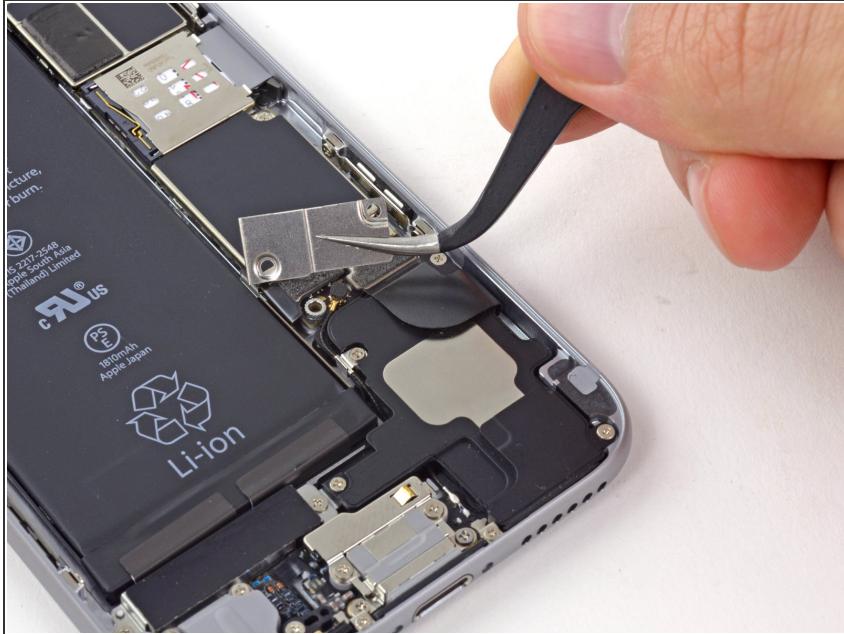

- Remove the metal battery connector bracket from the iPhone.

Step 12 — Disconnecting the battery connector



- Use a plastic opening tool to gently pry the battery connector up from its socket on the logic board.

 Take care to only pry up on the battery connector, and not the socket on the logic board. If you pry up on the logic board socket, you may break the connector entirely.


Step 13 — Removing the front panel assembly cable bracket screws



- Remove the following five Phillips screws securing the front panel assembly cable bracket:
 - Three 1.2 mm screws
 - One 1.7 mm screw
 - One 3.1 mm screw

 Incorrect placement of these screws during reassembly will cause permanent damage to your iPhone's logic board.

Step 14

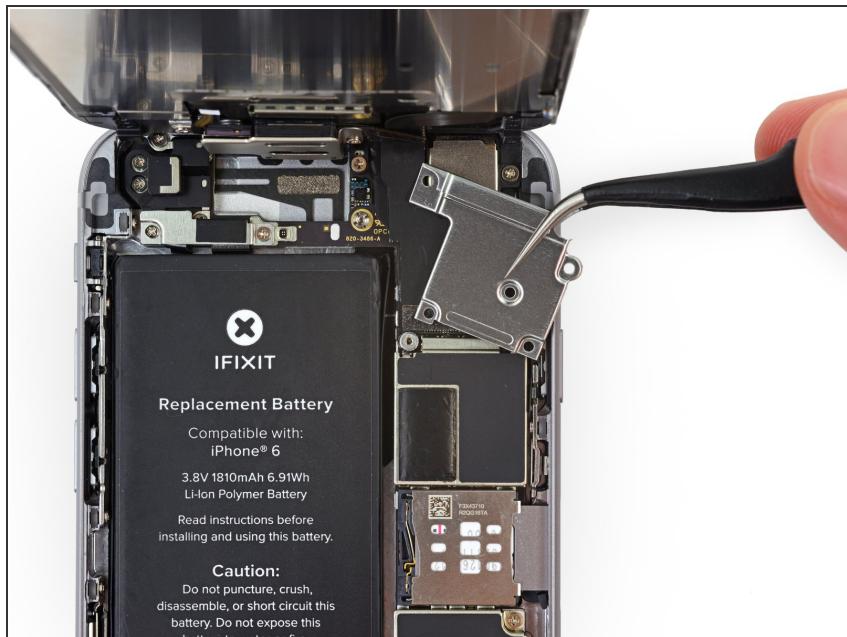

- Remove the front panel assembly cable bracket from the logic board.



Step 15



⚠ In the next four steps, take care to pry up **only** on the cable connectors, and not on their sockets on the logic board.

- Use a spudger or a fingernail to disconnect the front-facing camera and sensor cable connector.

Step 16

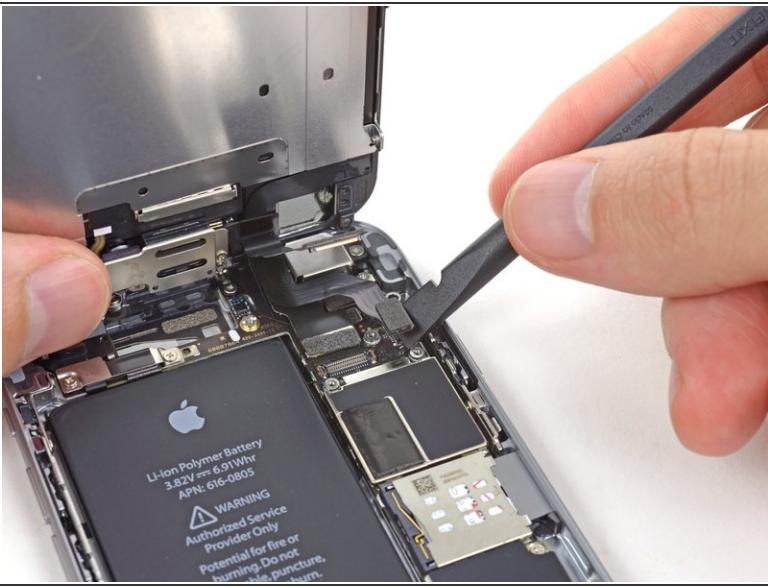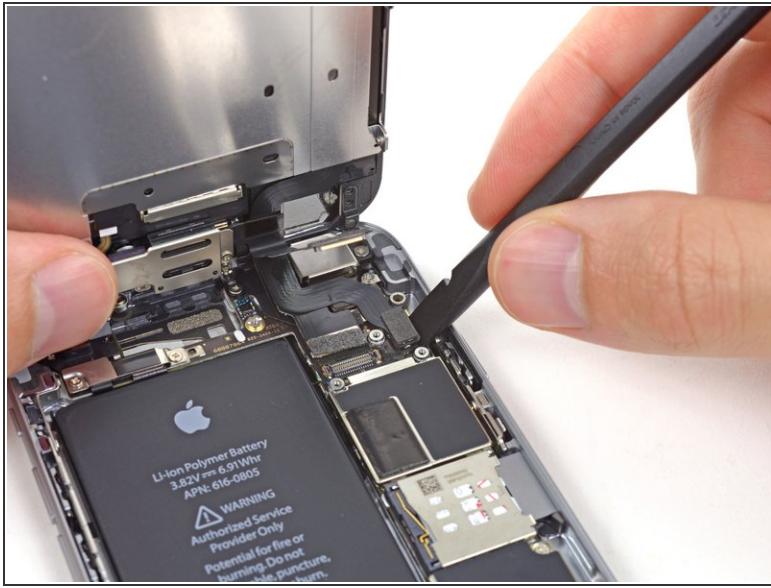

- Use a spudger or a fingernail to disconnect the home button cable connector.


Step 17



! Make sure the battery is disconnected before you disconnect or reconnect the cable in this step.


- Use a spudger or a fingernail to disconnect the display data cable connector.
- When reassembling your phone, the display data cable may pop off its connector. This can result in white lines or a blank screen when powering your phone back on. If that happens, simply reconnect the cable and power cycle your phone. The best way to power cycle your phone is to [disconnect and reconnect the battery connector](#).

Step 18

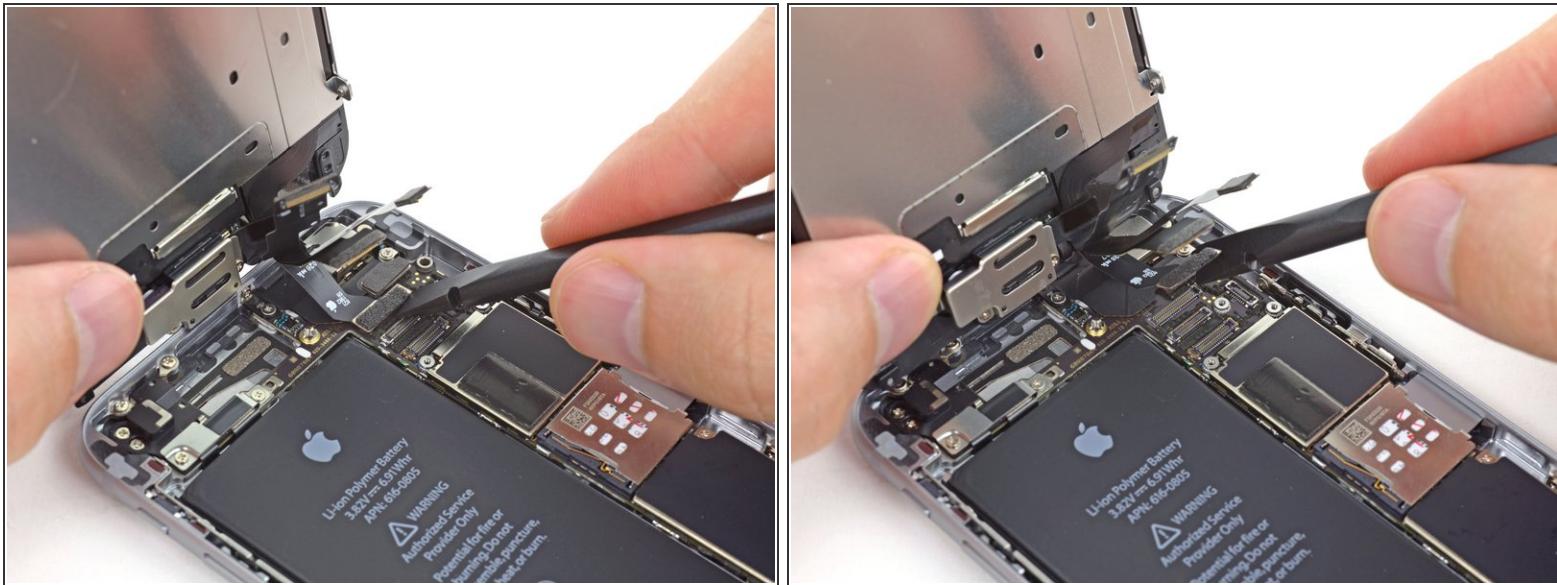


- Use the flat end of a spudger to disconnect the digitizer cable connector.
- ★ When reconnecting the digitizer cable, **do not press the center of the connector**. Press one end of the connector, then press the opposite end. Pressing in the center of the connector can bend the component and cause digitizer damage.

Step 19 — Separating front panel assembly and rear case

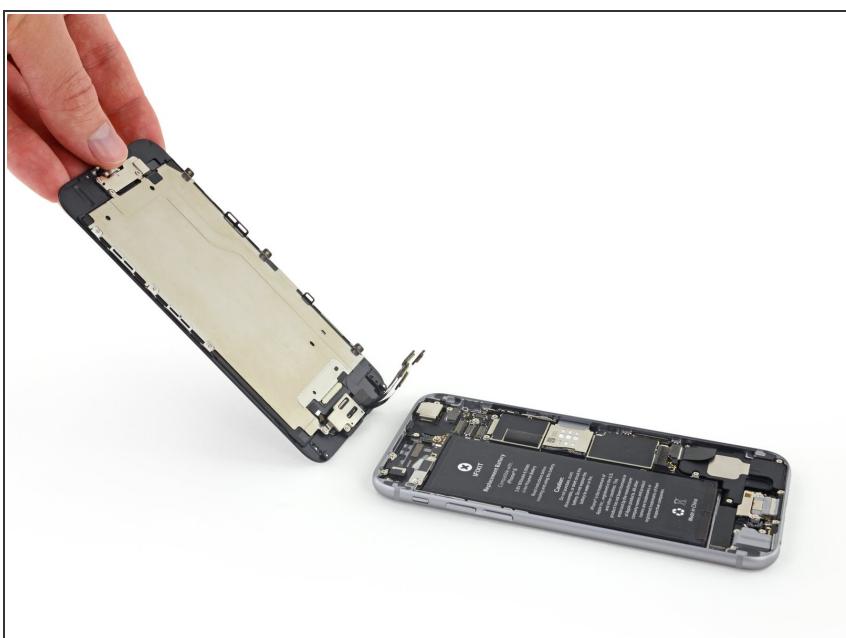


- Remove the front panel assembly from the rear case.

Step 20 — Home Button

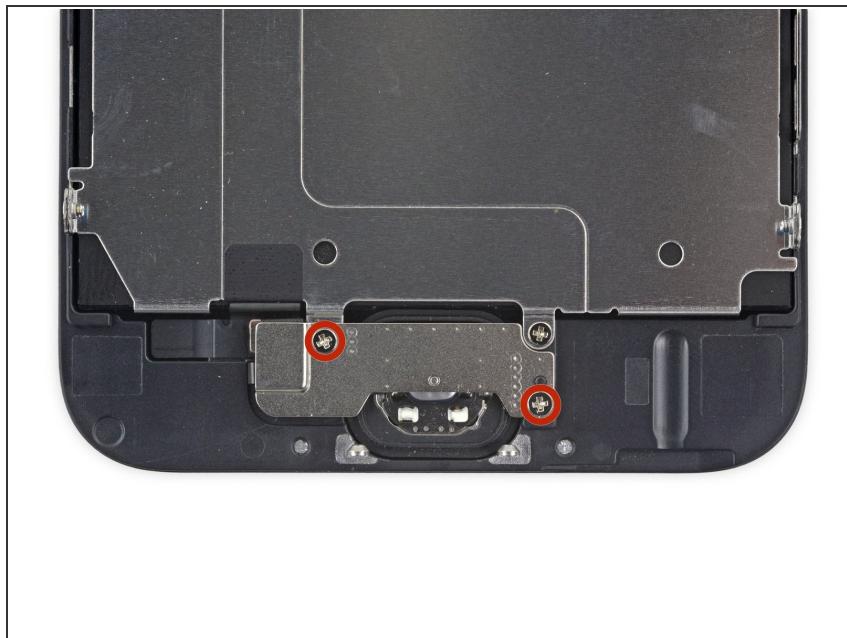



- Remove the two 1.9 mm Phillips screws securing the home button bracket.

Step 21

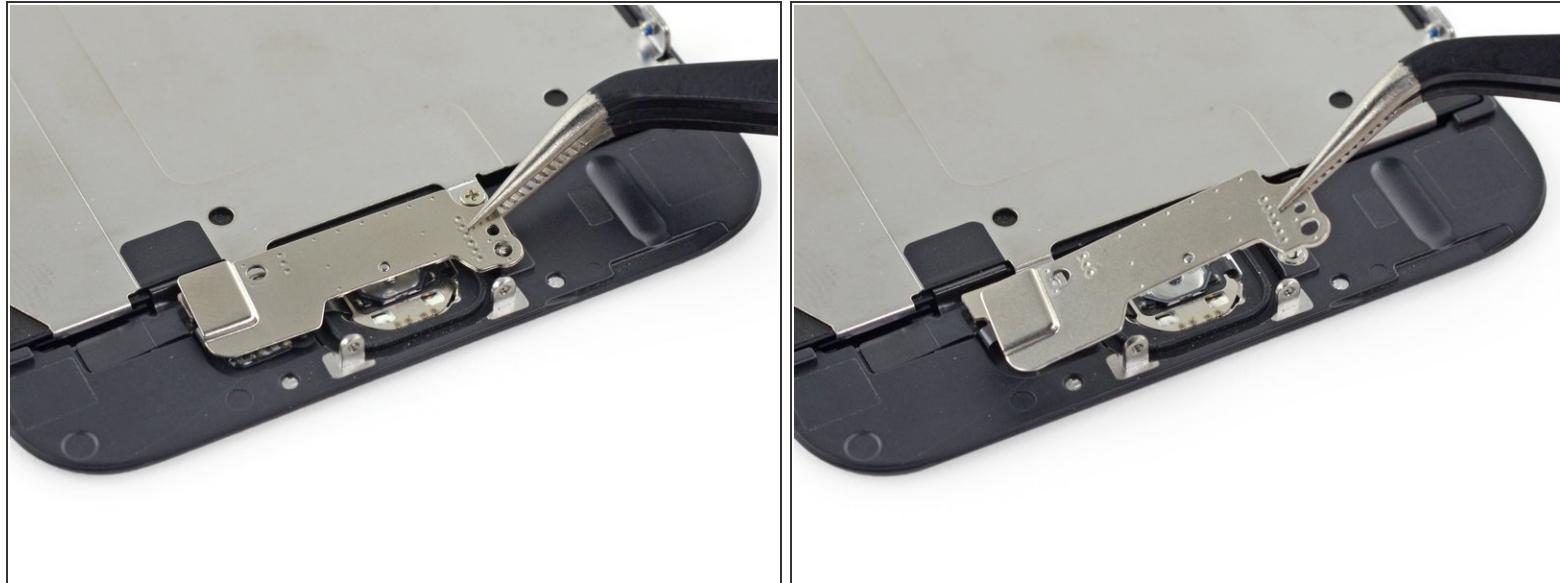


- Remove the home button bracket from the front panel.

Step 22

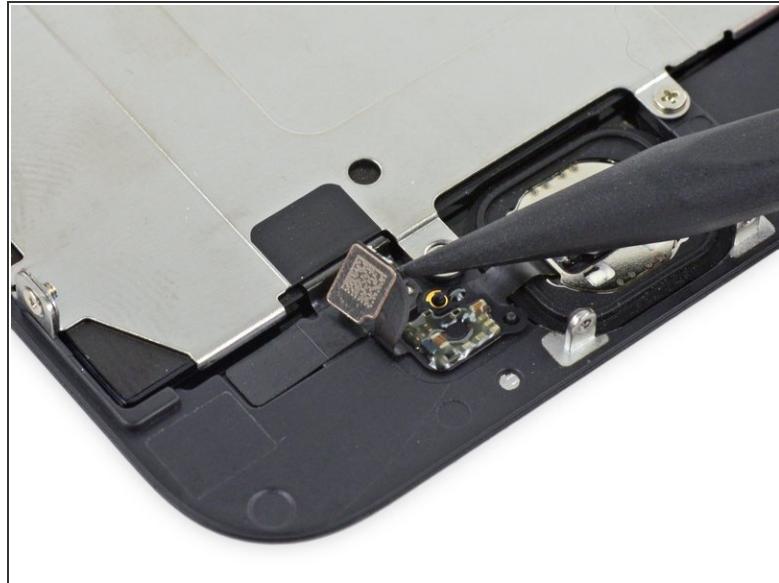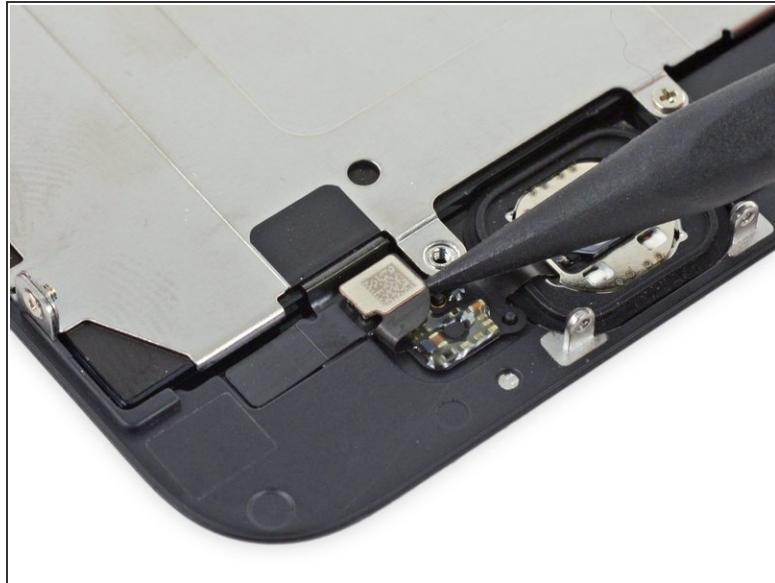

- Use the point of a spudger to disconnect the home button cable connector by pushing it up and away from the home button.

Step 23

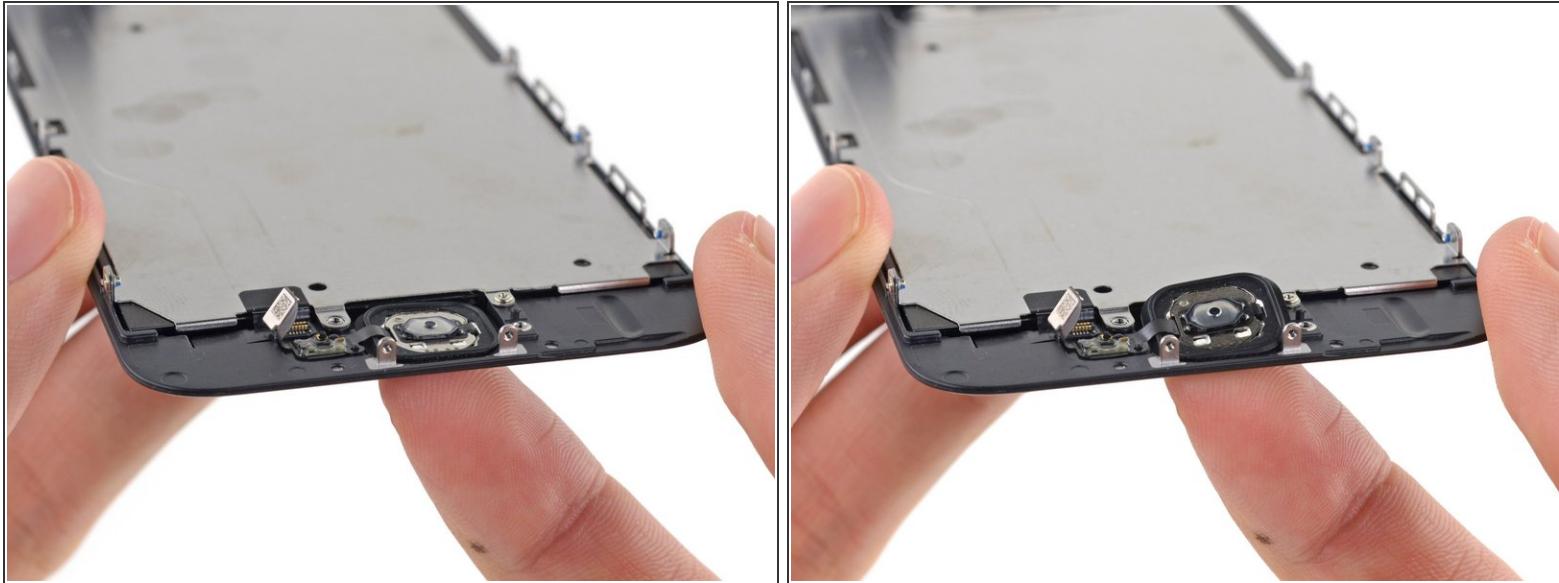


⚠ The rubber membrane surrounding the home button is very thin and tears easily.

- Apply mild heat (with an [iOpener](#), heat gun, or hair dryer) to soften the adhesive securing the home button membrane.
- Using your fingertip, apply firm, constant pressure on the home button from the front side of the display assembly, until the membrane starts to separate from the front panel.


⚠ Do not push the home button all the way through—you only need to get a corner free so that you can pry it free with a spudger.

Step 24

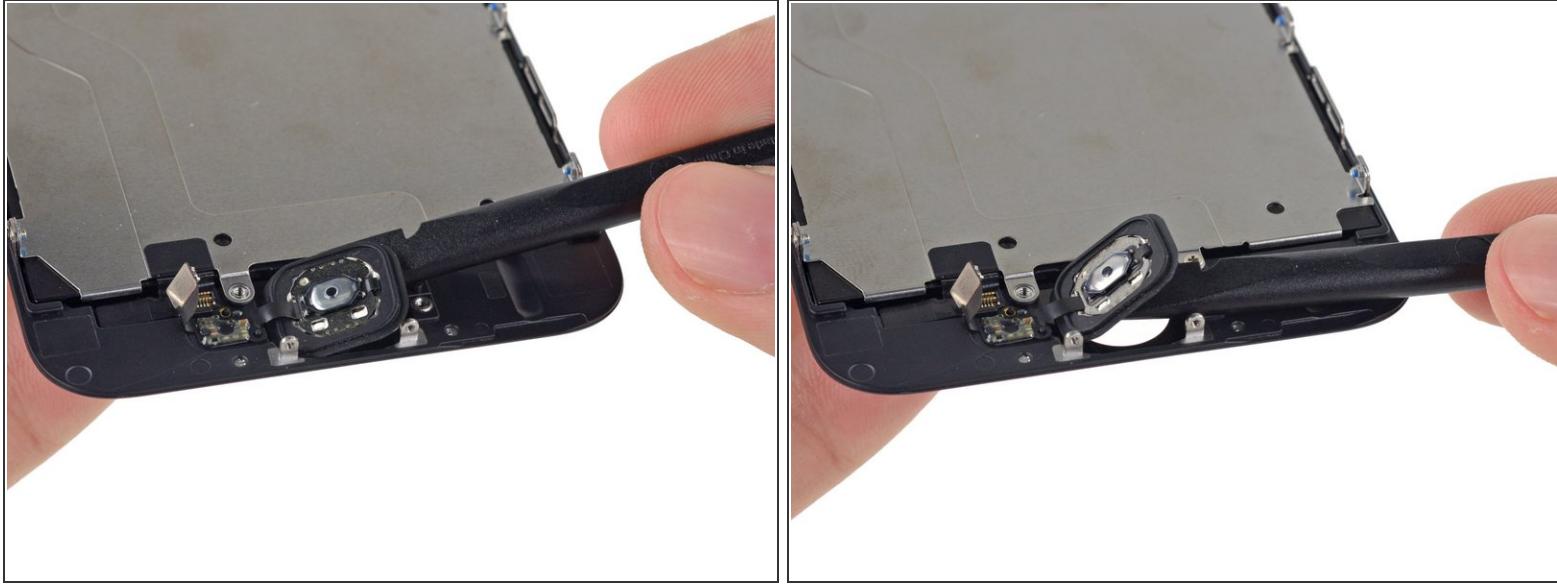

- Peel the home button the rest of the way off of the display by prying gently with a spudger.

Step 25

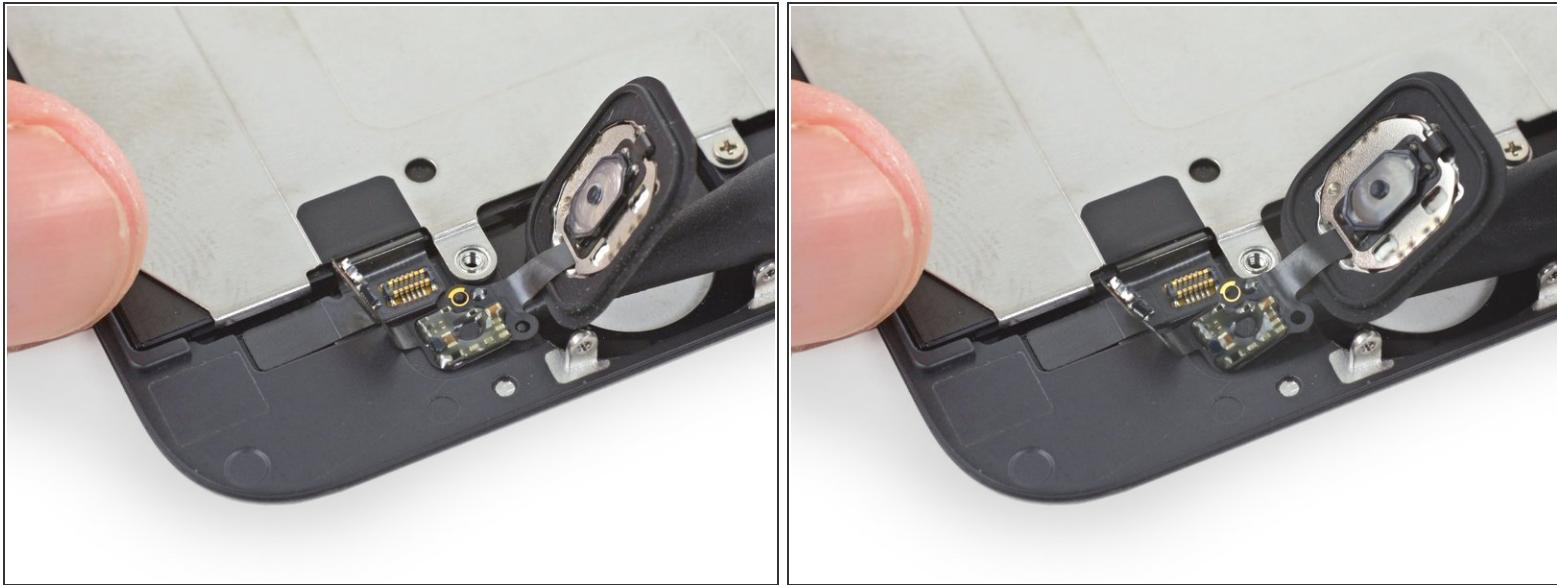

- Use the point of a spudger to carefully separate the home button cable from the adhesive securing it to the front panel.

⚠ If the cable doesn't separate easily, apply heat using an [iOpener](#) or hair dryer to soften the adhesive, and try again. Be careful not to damage the cable.

Step 26



- Once all the adhesive has been separated, remove the home button from the front panel.

i If you are replacing a broken front panel, there may be glass shards stuck to the home button. Carefully remove any remaining glass before transferring your home button to a new display.

? Your replacement part may come with an [extra Phillips screw](#) already installed left of the Home Button. Remove the unnecessary screw so that you can reinstall the home button bracket.

Step 27 — Home Button



- Depending on your replacement part, you may need to remove the rubber gasket around your home button.
- Use a set of tweezers to carefully pull the gasket up from the home button.
- Be careful not to snag the gasket on the home button cable.

To reassemble your device, follow these instructions in reverse order.