



# iPhone 6 Plus Pentalobe Screws Replacement

Replace the Pentalobe Screws in the iPhone 6 Plus.

Written By: Walter Galan



## INTRODUCTION

Use this guide to remove or replace the Pentalobe screws in your iPhone 6 Plus.

### TOOLS:

- P2 Pentalobe Screwdriver iPhone (1)

### PARTS:

- iPhone 6 6 Plus Bottom Screws (1)

## Step 1 — Pentalobe Screws



Before disassembling your iPhone, discharge the battery below 25%. A charged lithium-ion battery can catch fire and/or explode if accidentally punctured.

- Power off your iPhone before beginning disassembly.
- Remove the two 3.6 mm P2 Pentalobe screws next to the Lightning connector.

To reassemble your device, follow these instructions in reverse order.