




# iPhone 6 Plus Speaker Replacement

Prereq only, battery and logic board removed.

Written By: Walter Galan

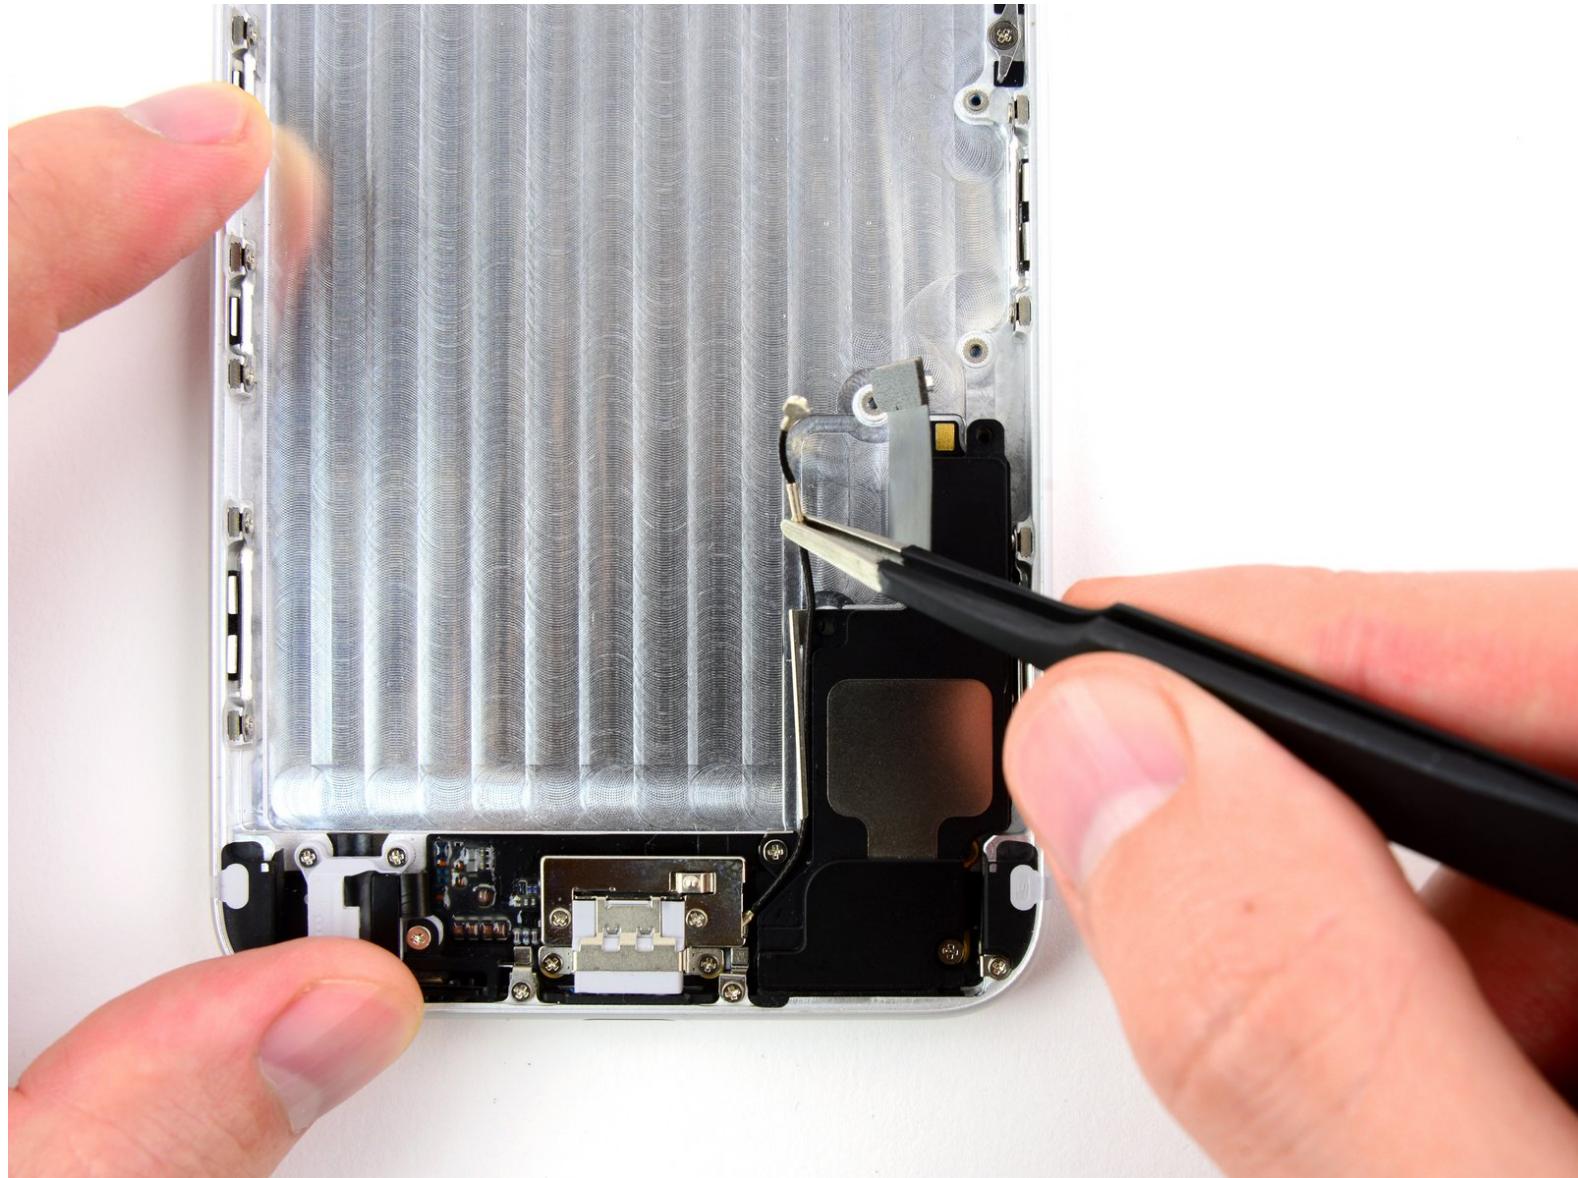


## INTRODUCTION

Prereq only, battery and logic board removed.

### TOOLS:


- [Phillips #000 Screwdriver](#) (1)
- [iFixit Opening Tools](#) (1)
- [Tweezers](#) (1)

## Step 1 — Speaker

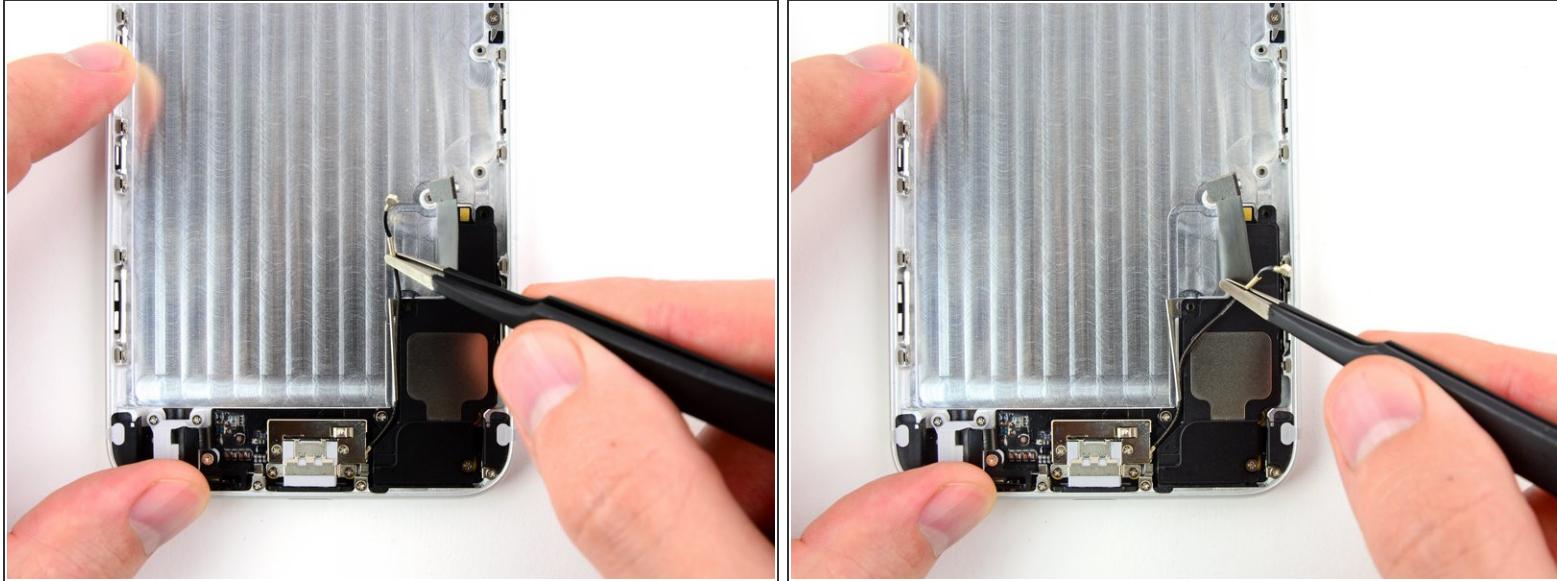


- Grasp the antenna connector with a pair of tweezers and carefully begin de-routing it from its channel on the speaker.

## Step 2

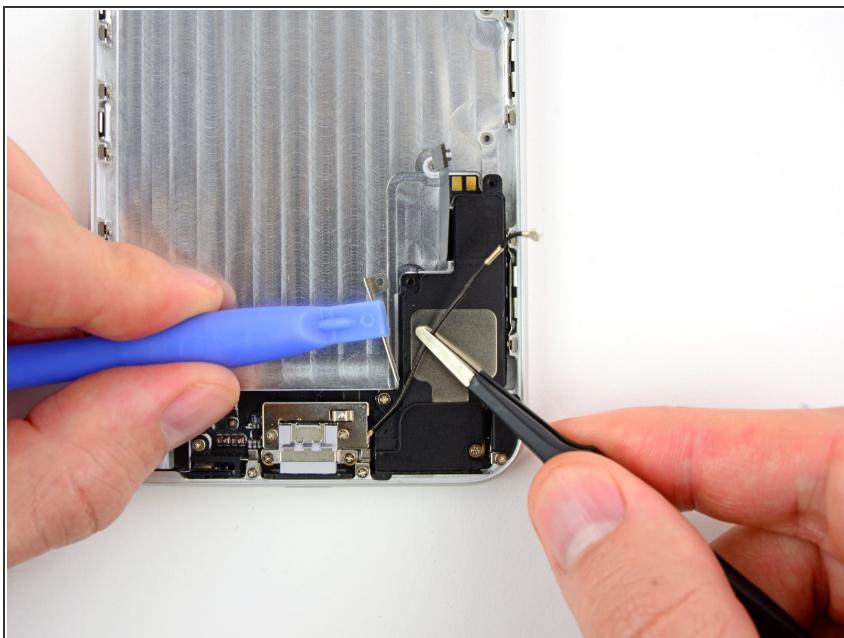


*i* To fully de-route the antenna connector, you may need to gently pull back the metal clip securing it to the speaker assembly.

## Step 3

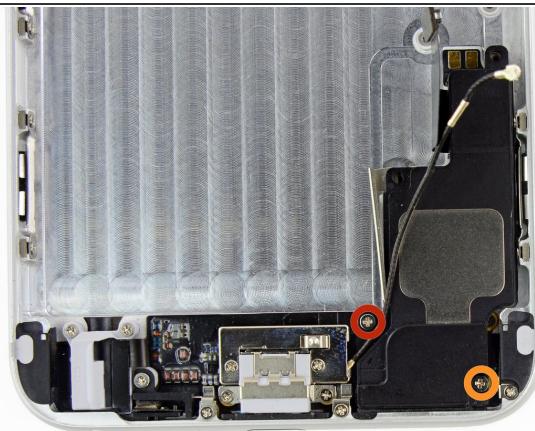

- Remove the following screws securing the speaker to the rear case:
  - One 2.3 mm Phillips #00 screw
  - One 2.8 mm Phillips #00 screw

## Step 4

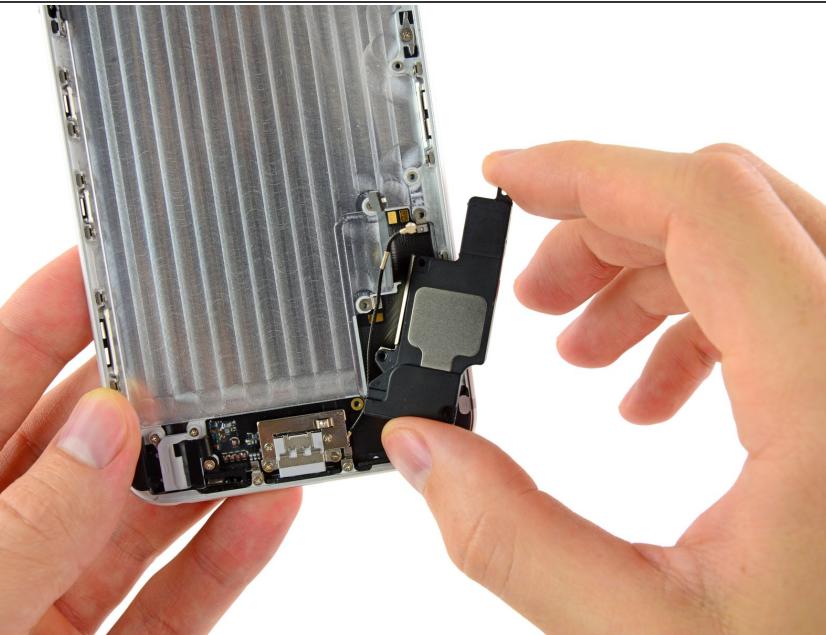

- Lift and remove the speaker out of the iPhone.

To reassemble your device, follow these instructions in reverse order.