



iPhone 6 SIM Card Replacement

Replace the SIM Card in the iPhone 6.

Written By: Walter Galan



INTRODUCTION

Use this guide to remove or replace the SIM card.

TOOLS:

- [SIM Card Eject Tool \(1\)](#)

Step 1 — SIM Card



- Insert a SIM card eject tool or a paperclip into the small hole in the SIM card tray.
- Press to eject the tray.

(i) This may require a significant amount of force.

Step 2



- Remove the SIM card tray assembly from the iPhone.

 When reinserting the SIM card, ensure that it is in the proper orientation relative to the tray.

To reassemble your device, follow these instructions in reverse order.