


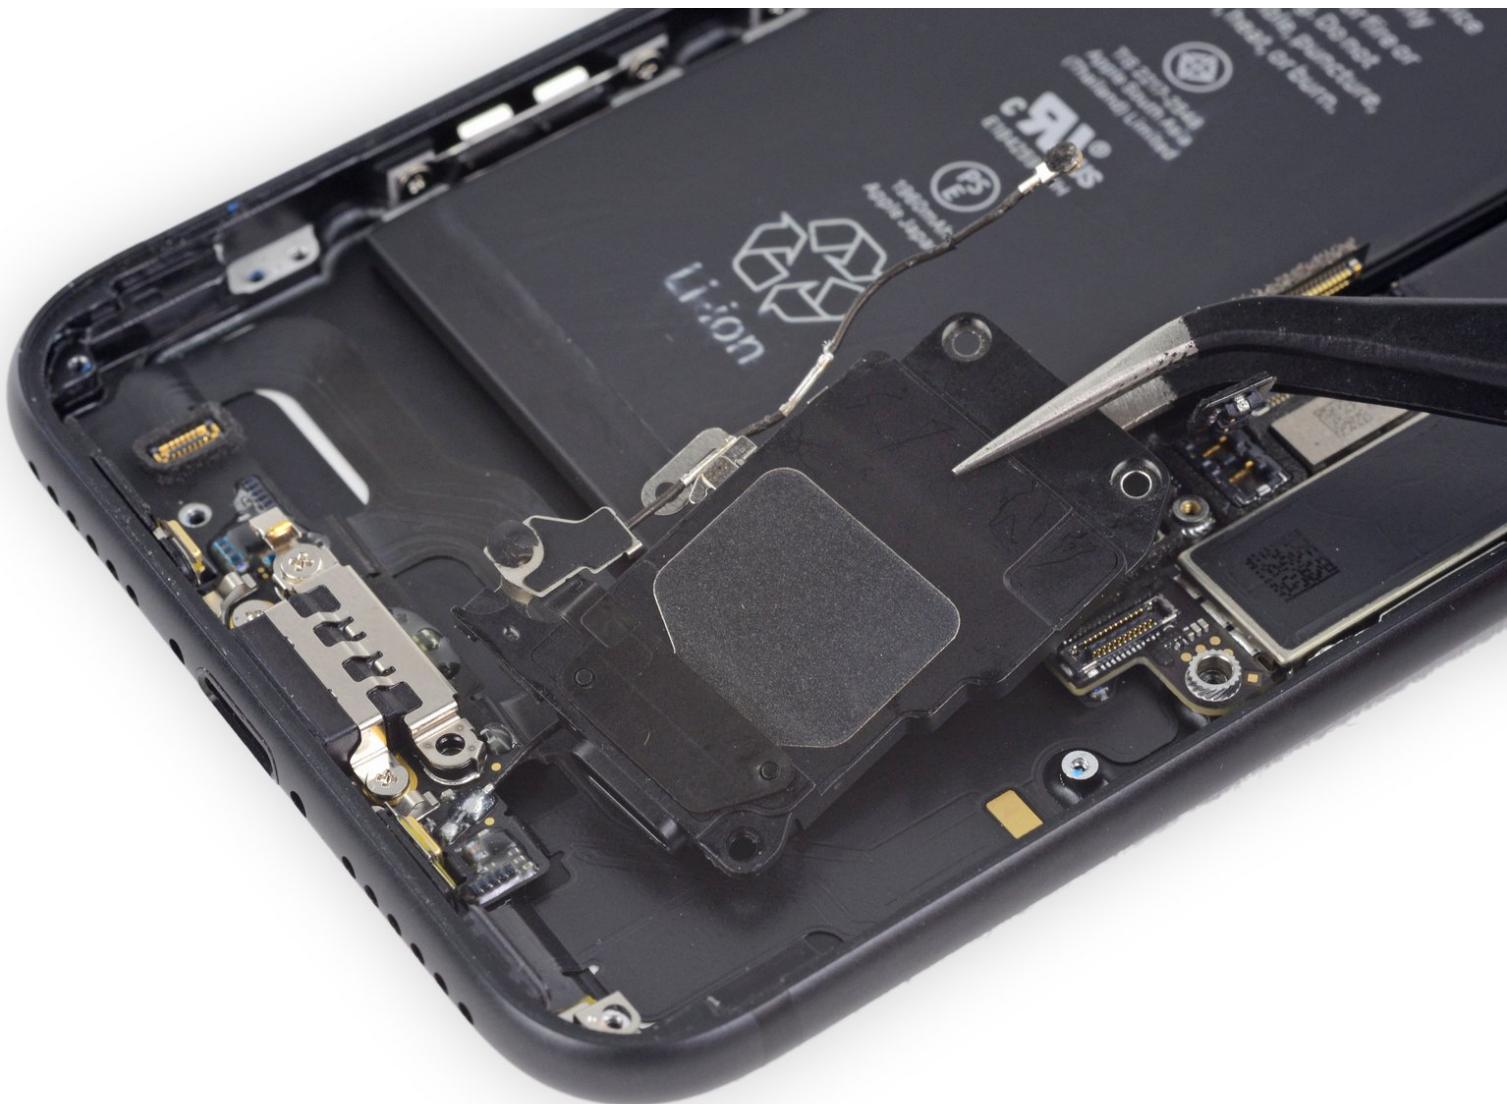

iPhone 7 Speaker Assembly Replacement

Prereq only

Written By: Scott Havard



INTRODUCTION

Prereq for removing the speaker or wi-fi diversity antenna.


TOOLS:

- P2 Pentalobe Screwdriver iPhone (1)
- iOpener (1)
- Suction Handle (1)
- Spudger (1)
- iFixit Opening Picks set of 6 (1)
- Tri-point Y000 Screwdriver Bit (1)
- Tweezers (1)
- Phillips #000 Screwdriver (1)

PARTS:


- iPhone 7 Loudspeaker (1)

Step 1 — Speaker Assembly

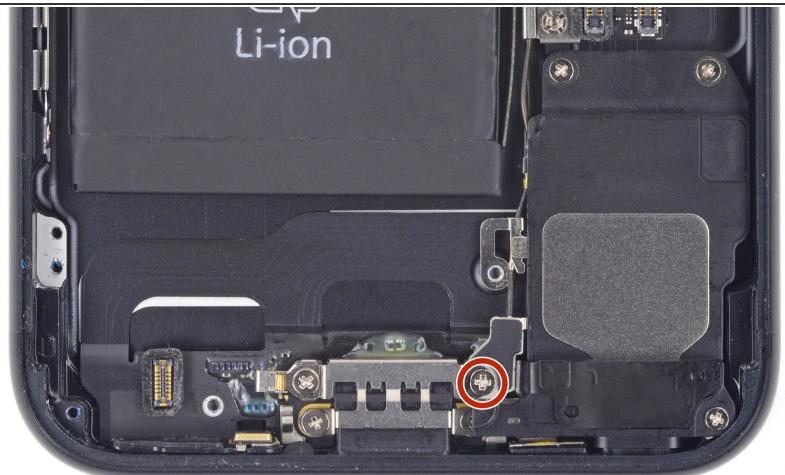

- Remove the Phillips screw securing the Wi-Fi diversity antenna to the rear case:
 - One 3.2 mm screw

Step 2

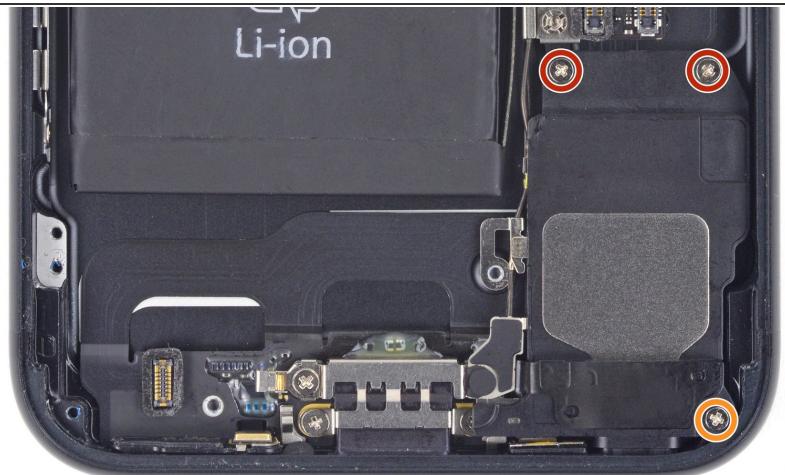

- Remove the following three Phillips screws securing the speaker to the rear case:
 - Two 1.3 mm screws
 - One 2.0 mm screw

Step 3



- Use the point of a spudger to lift the two antenna cable connectors up off of the sockets on the logic board.

Step 4




- Use tweezers to derout the antenna cables from their bracket on the logic board.

Step 5




- Use tweezers to remove the antenna cables from the clip on the speaker.
- ⚠ Make sure to grasp the cable near the clip in order to avoid damaging the cable.

Step 6

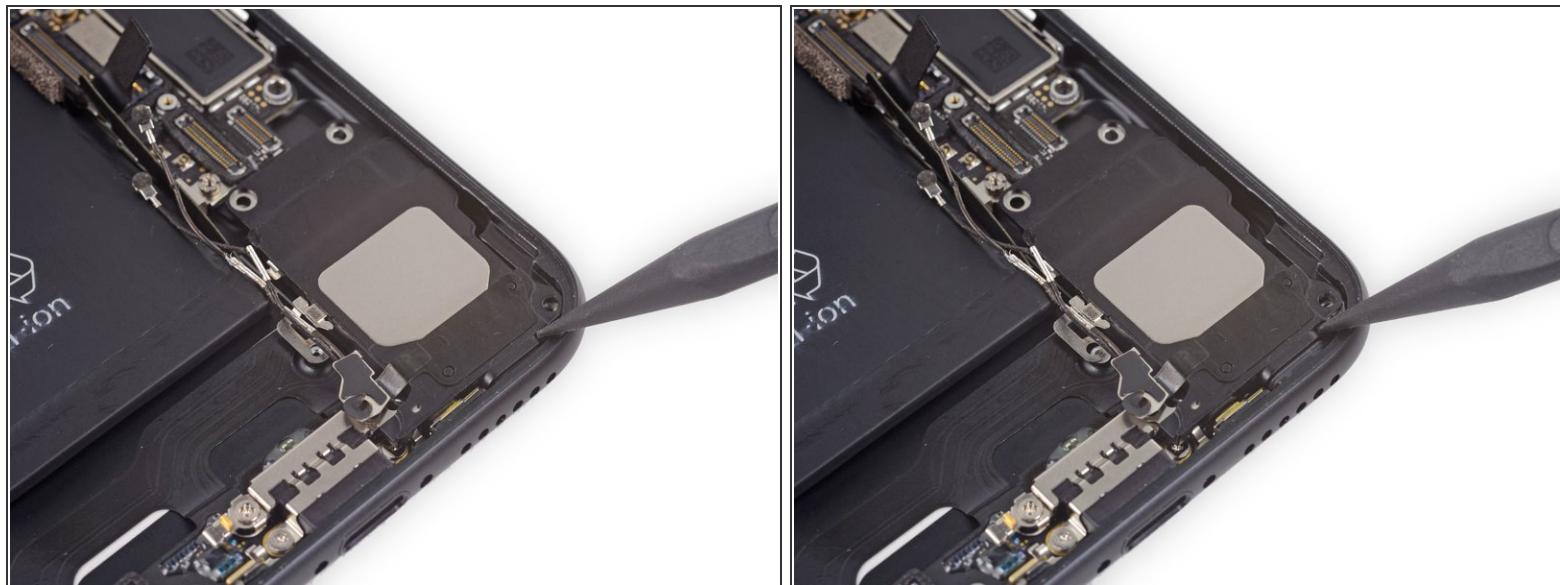

- Use the tip of a spudger to slide the speaker assembly towards the logic board and off of the rear case.

Step 7

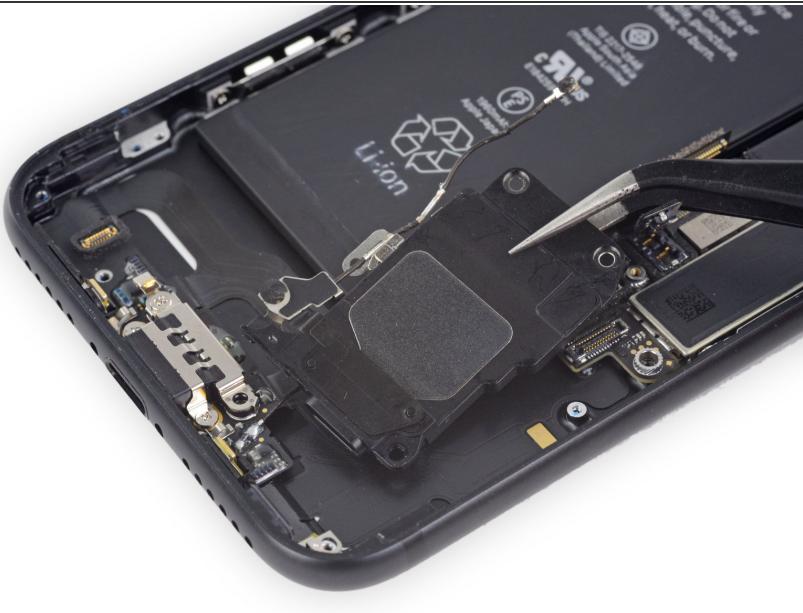

- Remove the speaker.

To reassemble your device, follow these instructions in reverse order.