



iPhone X Disassembly

This tutorial is about how to tear down iPhone X.

Written By: Mandy



INTRODUCTION

Basic disassembly tutorial for iPhone X.

TOOLS:



- [SIM Card Eject Tool \(1\)](#)
- [Heat Gun \(1\)](#)
- [Tri-point Y000 Screwdriver Bit \(1\)](#)
- [iFixit Opening Tools \(1\)](#)
- [Spudger \(1\)](#)
- [Phillips #000 Screwdriver \(1\)](#)
- [Tweezers \(1\)](#)
- [P2 Pentalobe Screwdriver iPhone \(1\)](#)

Step 1 — Turn off the phone and remove SIM Card




- Press the wake button and volume down button to turn off the phone.

Step 2 — Open the phone

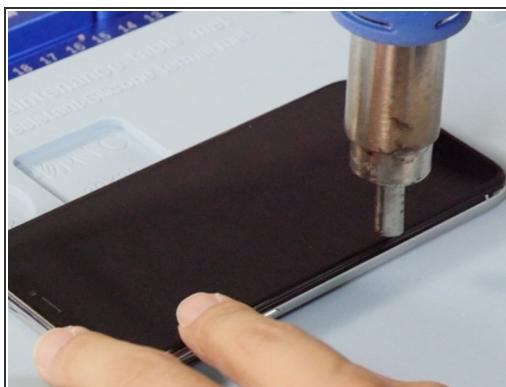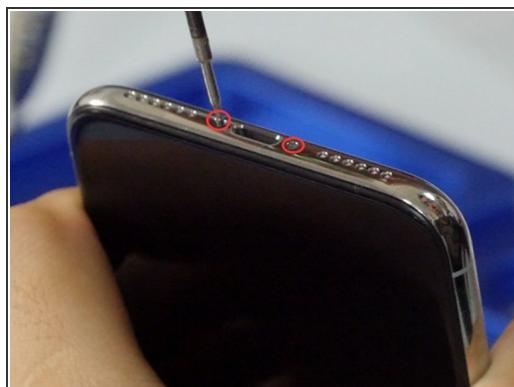


- Use the Pentalobe screwdriver to remove the charging port screws. Heating the phone with a heat gun will the phone easily to be opened.

Step 3 — Remove the iPhone X OLED screen

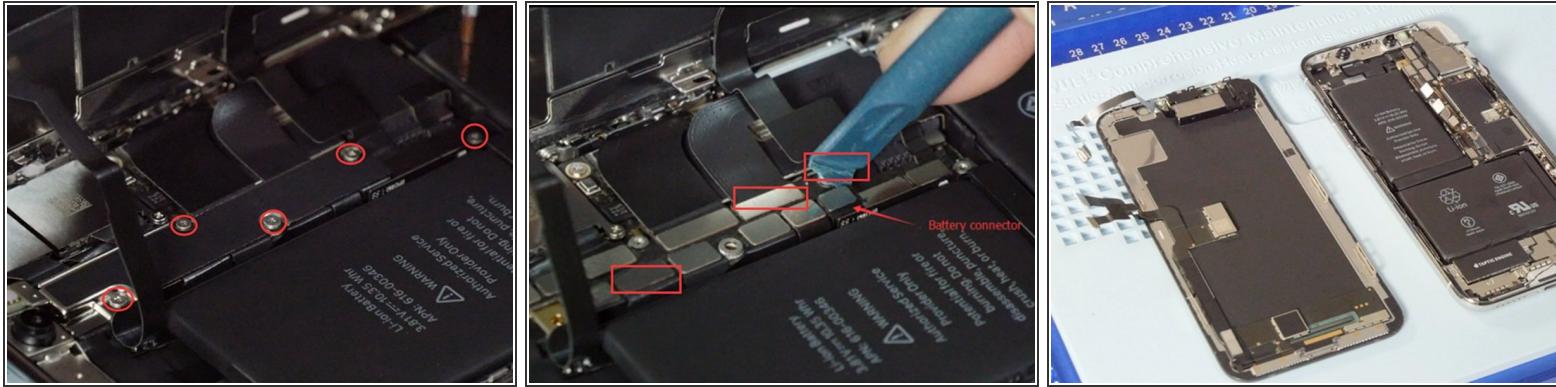


- Undo 5 screws shown in the picture below with a triangle screwdriver
- Release the battery/LCD screen/digitizer/ear speaker connectors with a spudger.

Step 4 — Remove the ear speaker

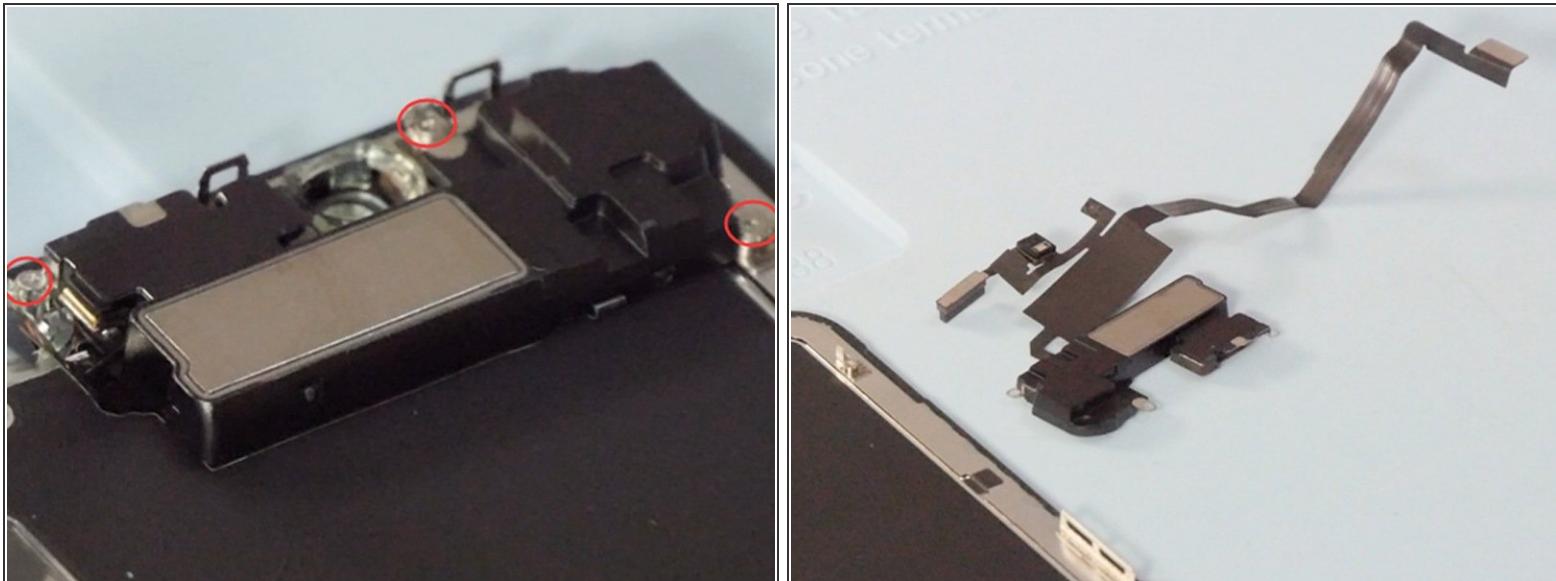



- Undo 3 screws and heating the flex cable with a heat gun, we can remove the ear speaker easily

Step 5 — Remove rear-facing cameras.

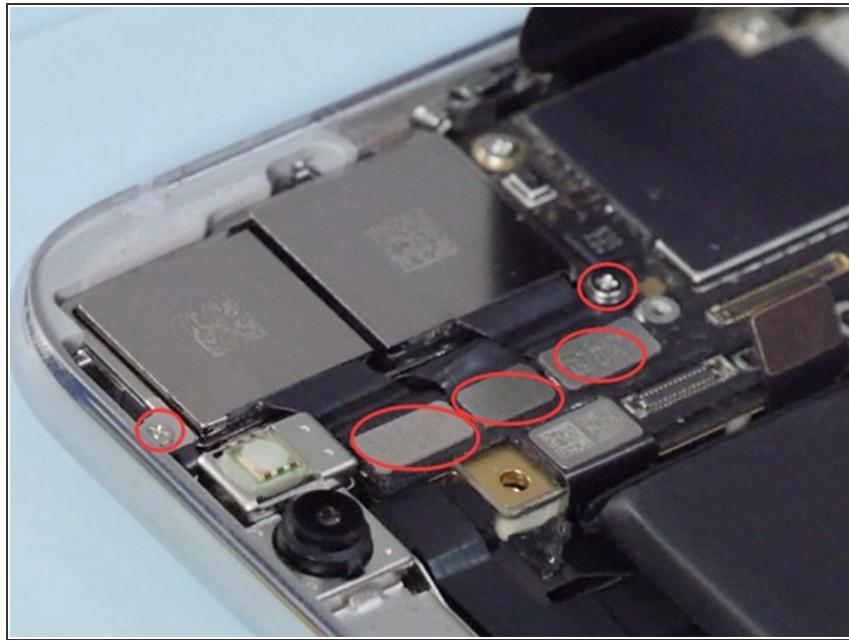


- Remove 2 screws and remove the metal plate, release the rear cameras connectors.

Step 6 — Remove motherboard.

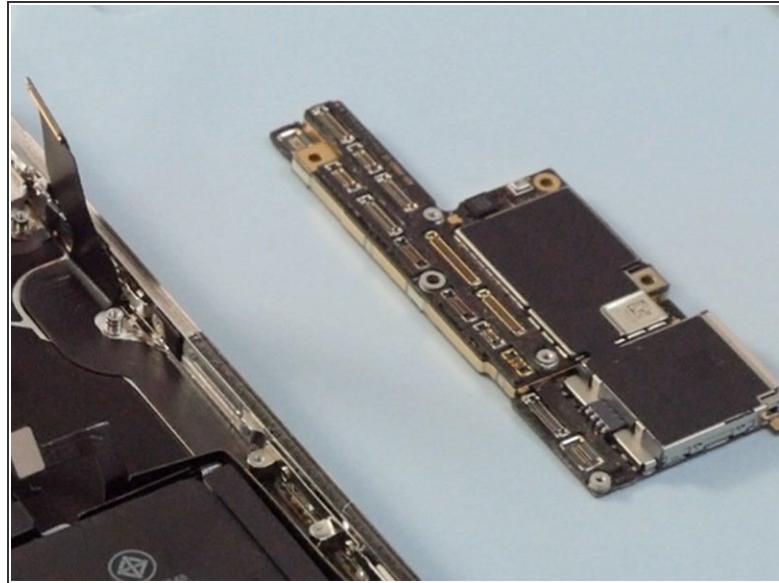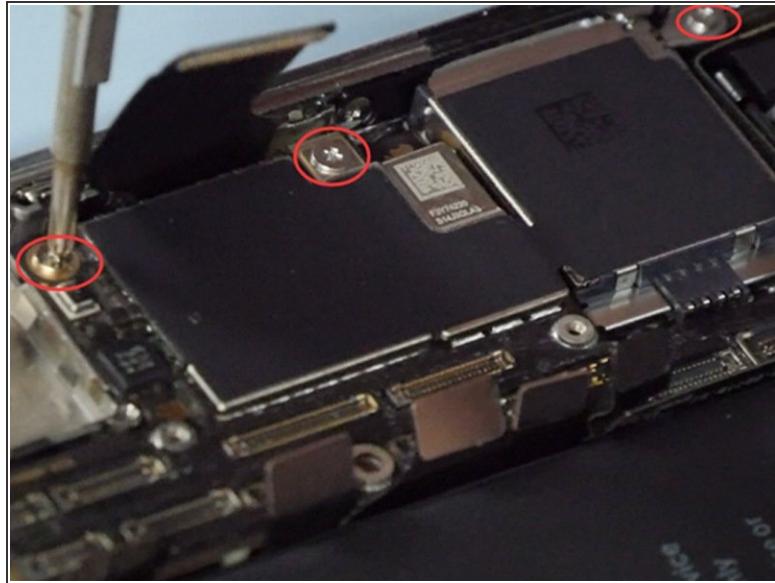


- Release all connectors on the motherboard with a spudger
- Undo 3 screws on the mother board then we can take out the mother board.

Step 7 — Remove Loudspeaker and Taptic engine

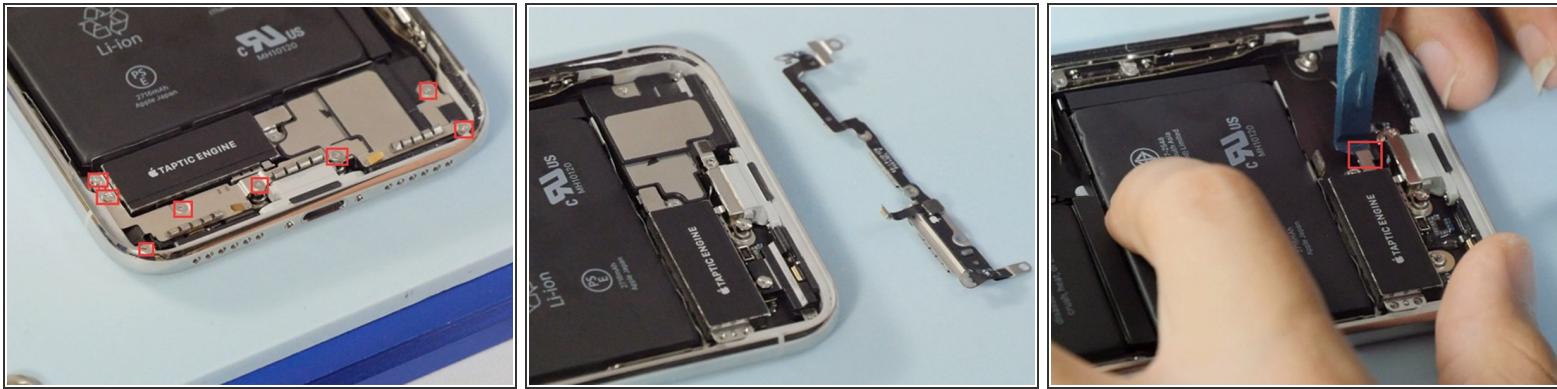


- Undo 8 screws on the retaining plate then remove the plate taking care to not break the small connector on the plate that connects just under the taptic engine
- Remove the loud speaker and the taptic engine.

Step 8 — Remove battery

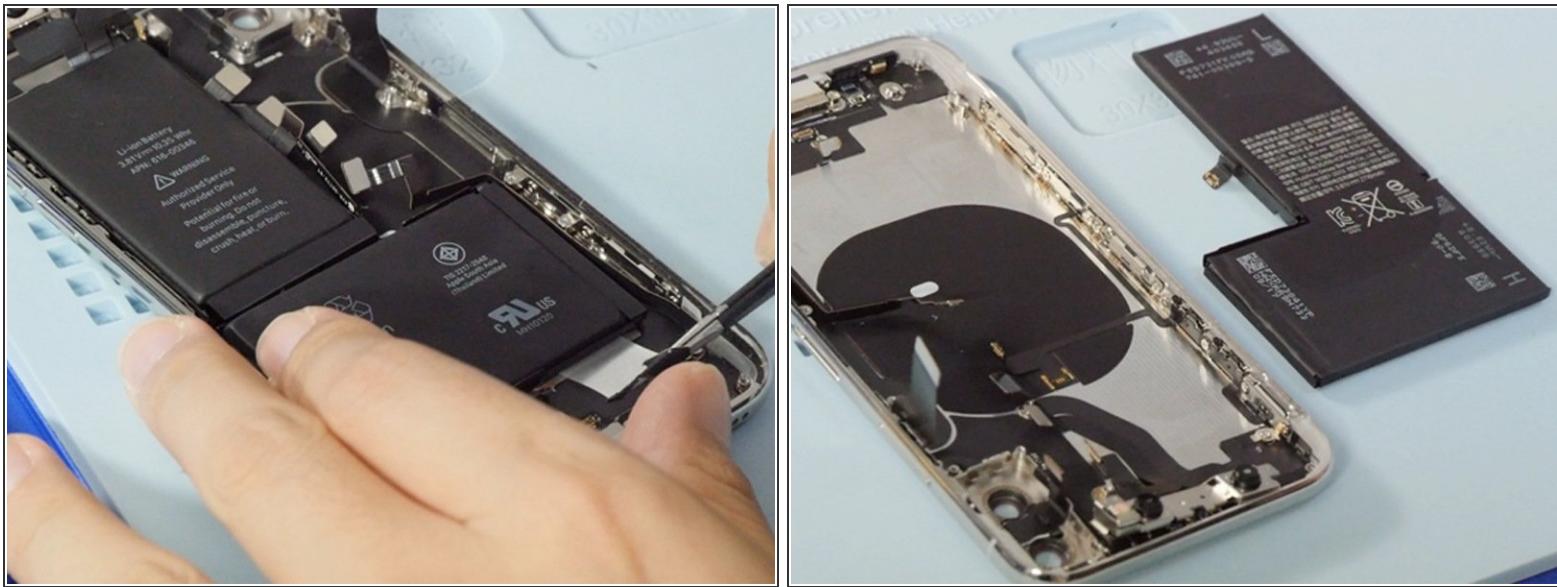

- Pulling out 4 battery adhesives with a tweezers then we can remove the battery.

Step 9 — Remove front-facing camera

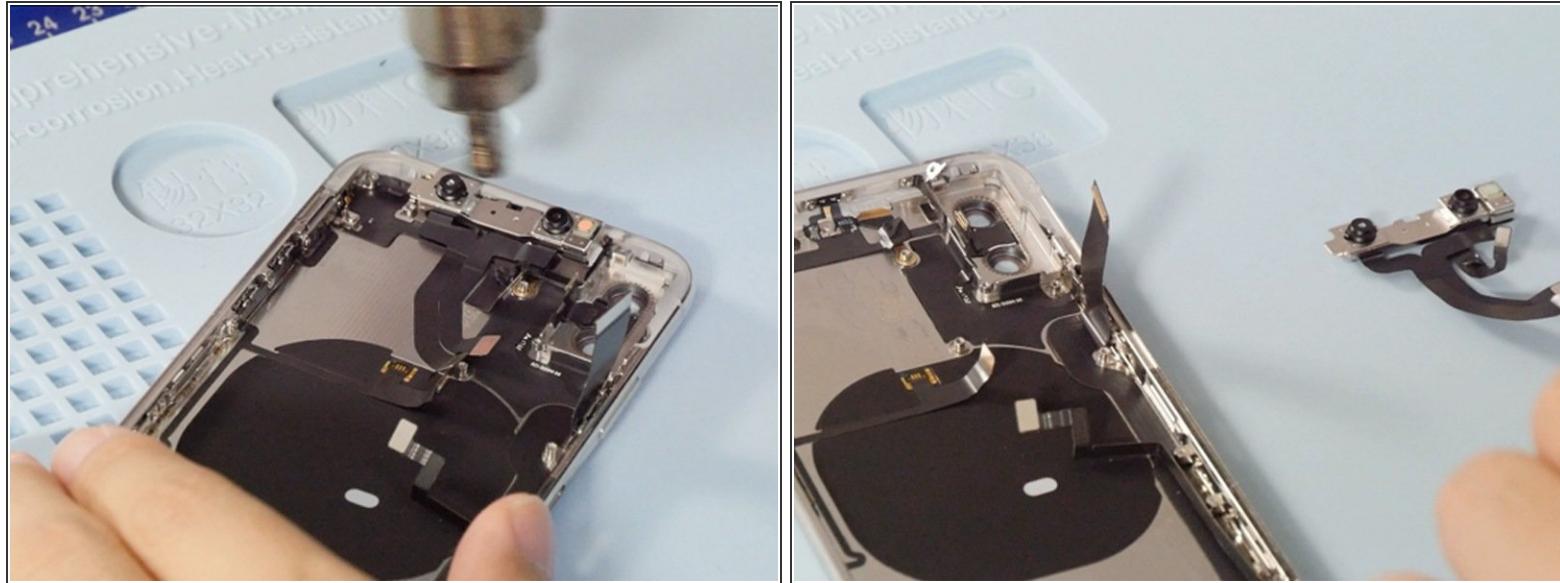


- Heating the front facing camera with a heat gun will make it easily to be removed

Step 10 — Remove the charging port and antenna




- Release 4 screws on the frame shown in the picture
- Heating the charging port flex cable then we can remove it easily

Step 11 — Remove Wi-Fi antenna

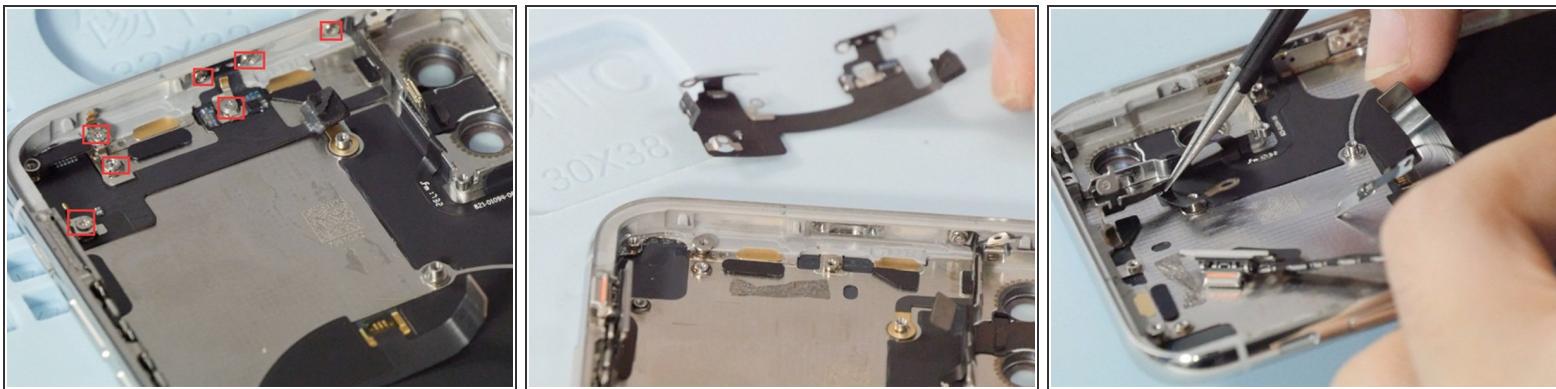

- Release 7 screws on the Wi-Fi flex cable
- Heating the flex cable with a heat gun make it easier to be removed

Step 12 — Remove power button flex cable

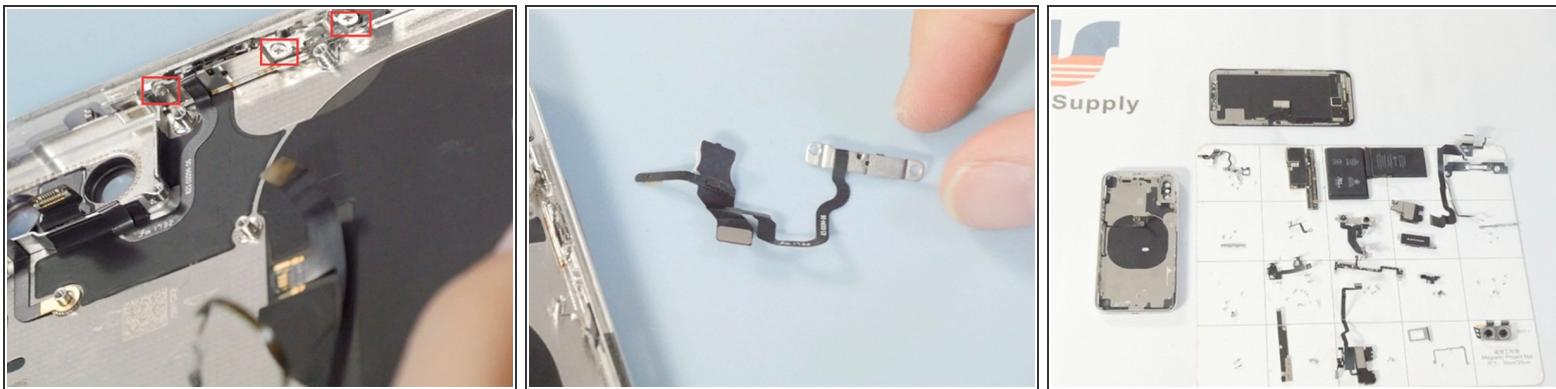

- Release 3 screws on the power button
- Heating the flex cable with a heat gun then it can be removed easily

To reassemble your device, follow these instructions in reverse order.