




# iPhone XR Taptic Engine Replacement

Prereq-only guide to remove the Taptic Engine in the iPhone XR.

Written By: Adam O'Camb

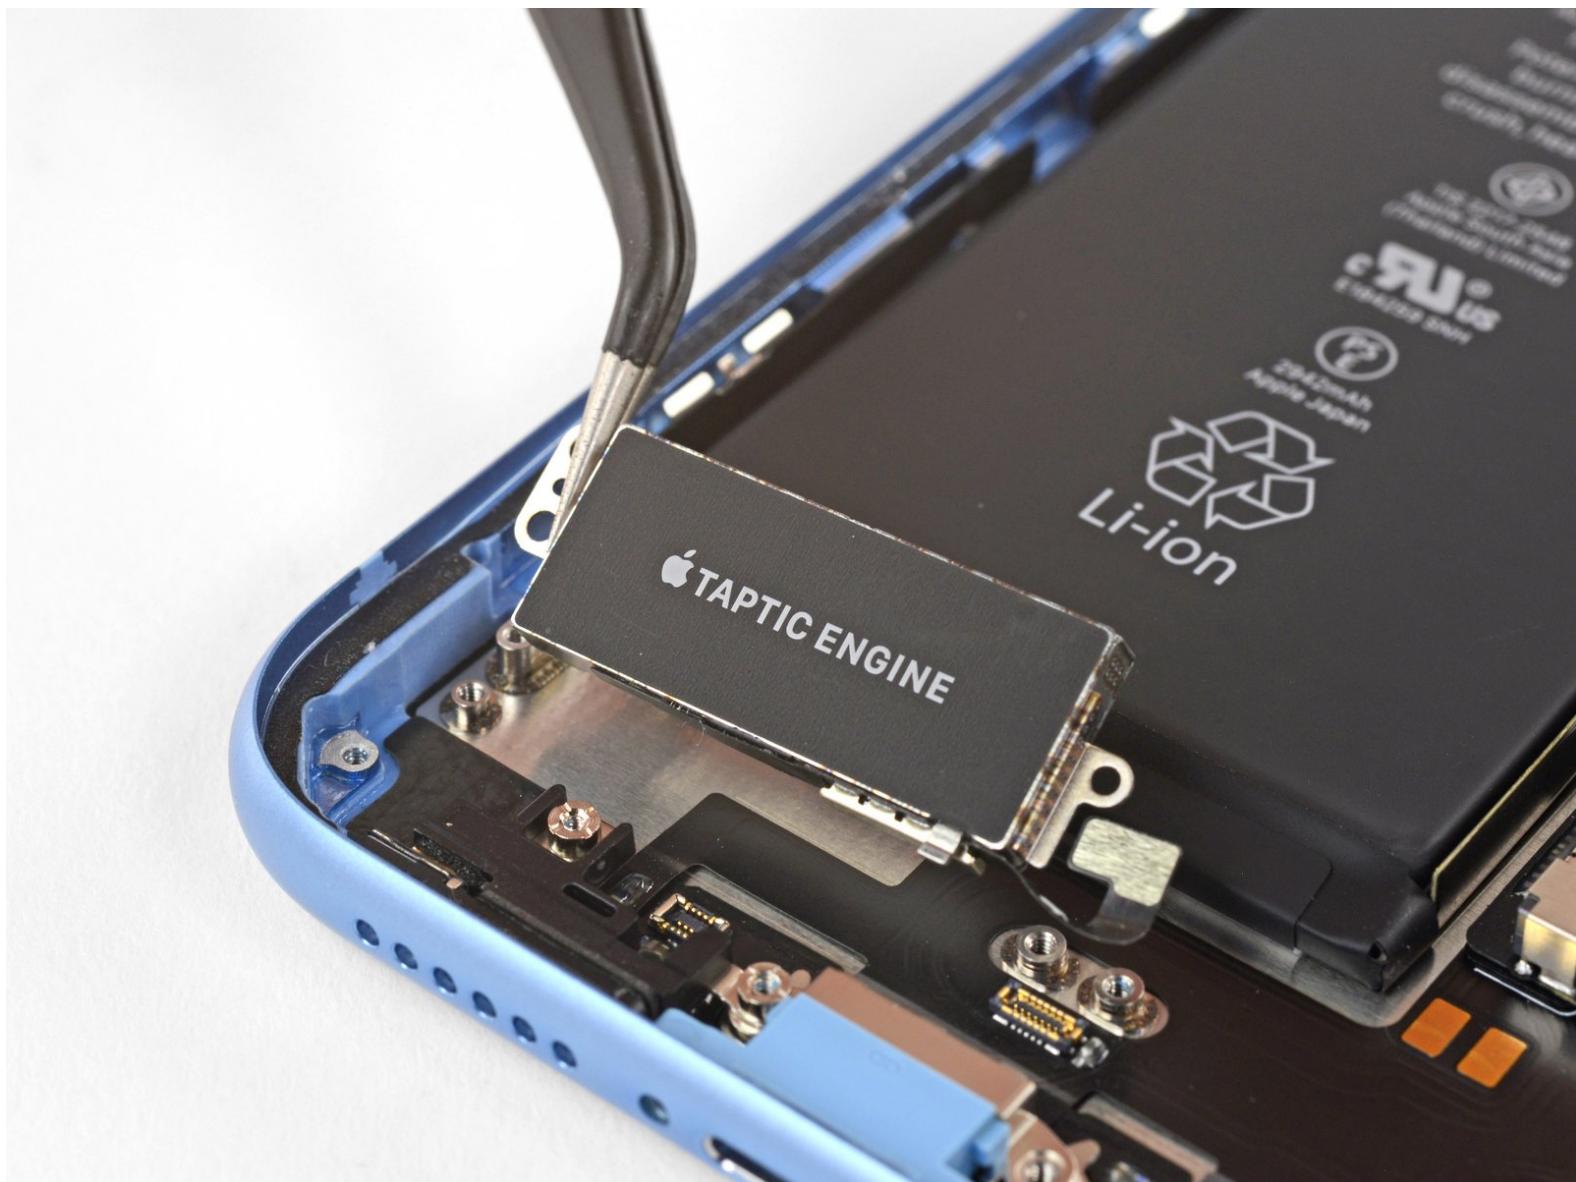


# INTRODUCTION

Prereq-only guide to remove the Taptic Engine en-route to replacing the battery in an iPhone XR.

## TOOLS:


- [P2 Pentalobe Screwdriver iPhone \(1\)](#)
- [iOpener \(1\)](#)
- [iFixit Opening Picks set of 6 \(1\)](#)
- [Suction Handle \(1\)](#)
- [iSclack \(1\)](#)
- [Tri-point Y000 Screwdriver Bit \(1\)](#)
- [Phillips PH000 Screwdriver \(1\)](#)
- [Spudger \(1\)](#)
- [Tweezers \(1\)](#)
- [iPhone Standoff Screwdriver \(1\)](#)

## Step 1 — Taptic Engine

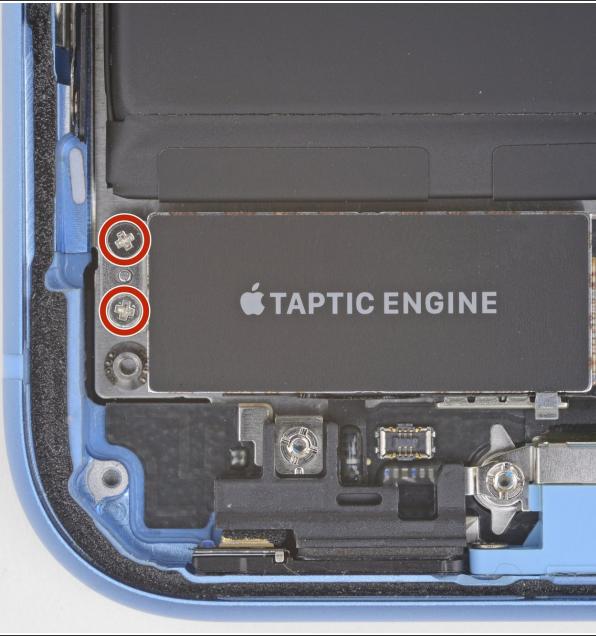

- Remove the two 1.8 mm Phillips screws securing the Taptic Engine.

## Step 2

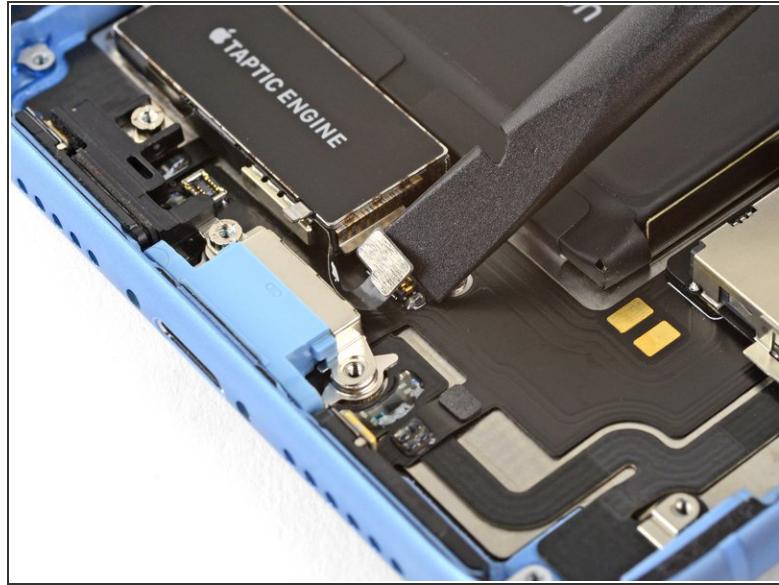

- Use a spudger to disconnect the Taptic Engine flex cable by prying it straight up from its socket.

## Step 3



- Remove the Taptic Engine.

To reassemble your device, follow these instructions in reverse order.