



iPod Touch 7th Generation Rear-Facing Camera Replacement

prerequisite only for button cable and rear case guides

Written By: Tarun Thiruma



INTRODUCTION


Prerequisite for entire button ribbon cable, volume buttons, power button, and rear case.



TOOLS:


- [Spudger](#) (1)
 - [Tweezers](#) (1)
-

Step 1 — Rear-Facing Camera

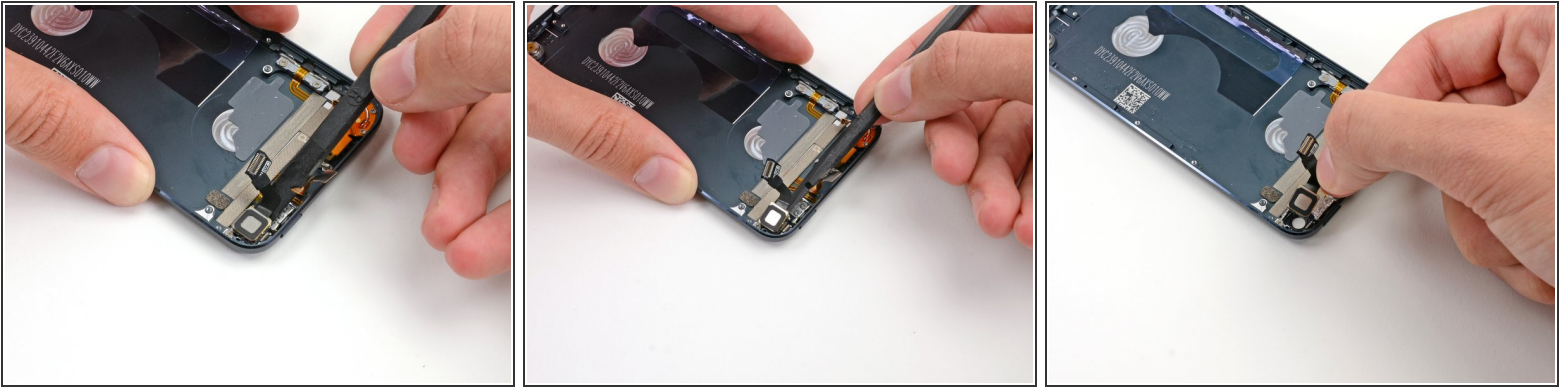

- Insert the flat end of a spudger between the rear-facing camera and its frame.
- Gently twist the spudger to free the camera.
- Lift the rear-facing camera up out of its socket, and remove it from the iPod Touch.

Step 2

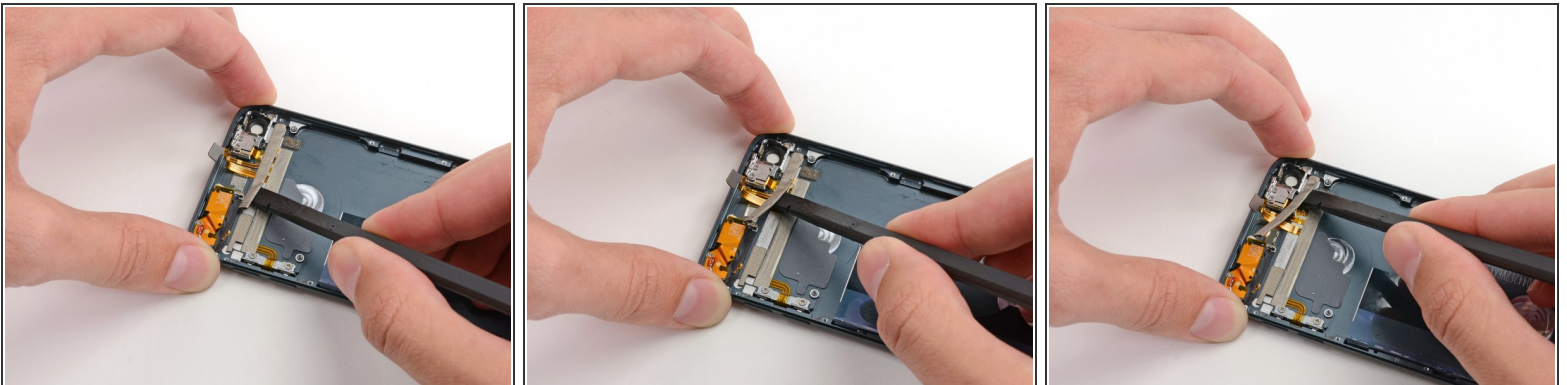


- Gently slide the flat end of a spudger underneath the piece of foam tape covering the button ribbon cable.
- Run the spudger along the full length of the tape to disconnect it from the rear case.

Step 3



- Peel and remove the foam tape from the rear case of the iPod.

Step 4

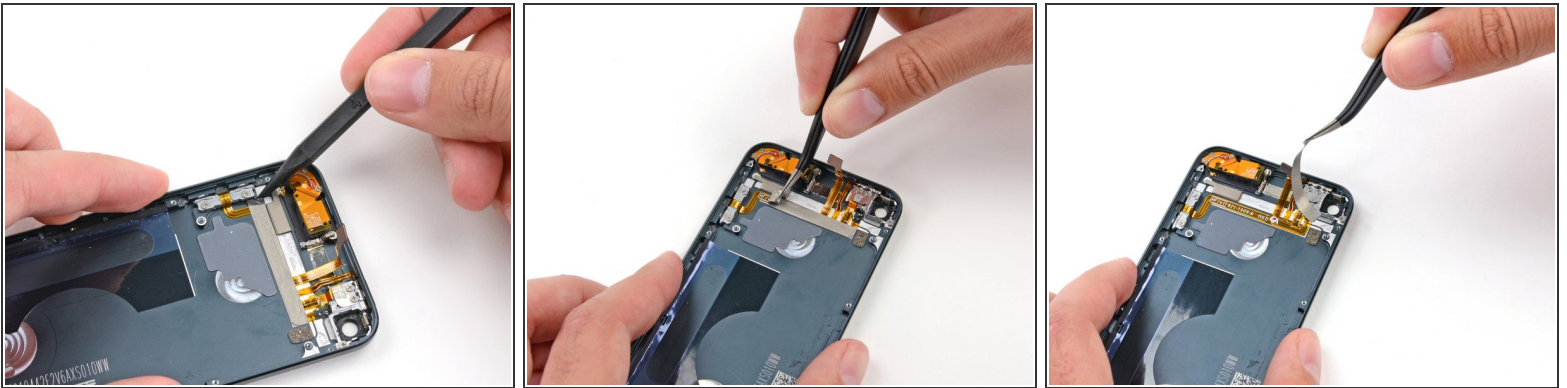

- Use the tip of a spudger to peel up the edge of the tape covering the button ribbon cable.
- Use tweezers or your fingers to peel the tape up from the rear case, and remove it from the iPod.

To reassemble your device, follow these instructions in reverse order.