



# iRobot Braava 320 Battery Replacement

Replacing a dying battery that will not charge or hold a charge on your iRobot Braava 320.

Written By: bradley boardwine



## INTRODUCTION

The battery is an essential component to the iRobot Braava 320. Without a functioning battery, your iRobot could have trouble turning on, staying on, or charging. Replacing the battery may solve these issues.

### TOOLS:

- Flathead Screwdriver (1)

## Step 1 — Battery



- Flip your device over and locate the battery cover.

*(i)* The battery cover is located in the center of the device in between both wheels.

## Step 2



- Using a Flathead #4 screwdriver, gently turn the 12mm screw that holds the battery cover in.

*(i)* The screw does not remove, it stays attached to the cover.

## Step 3



- Gently remove the battery from the tray and disconnect the battery cable.
- To remove the battery, pull it straight up. To disconnect the cable, gently pull it straight out of the connector.

 To reinstall the cable, hold it near the end and gently push it in the connector.

To reassemble your device, follow these instructions in reverse order.