



iRobot Roomba 4100 Flexible Rubber Brush Replacement

This is a guide for either maintenance or removal of the flexible rubber brush in the Red Roomba 4100.


Written By: Samantha Barrett



INTRODUCTION


This is an easy guide. It should only take a few minutes to complete. It doesn't require any tools.

Step 1 — Brush Guard

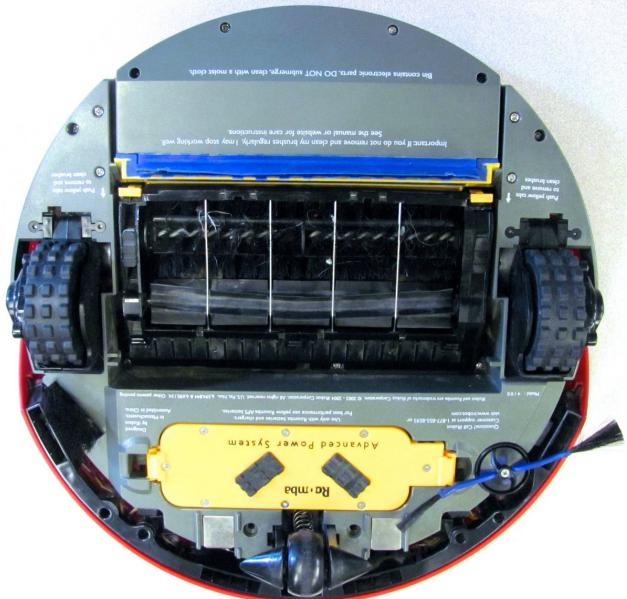

- Lay the Roomba upside down on a flat surface with the blue strip away from you.


Step 2

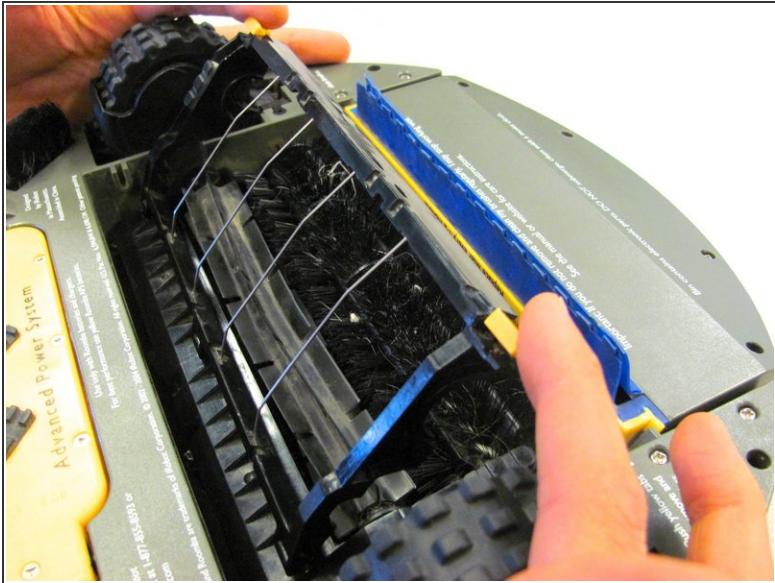

- Use your index fingers to pull the yellow tabs towards you.
- While still pulling the yellow tabs with your index fingers, tilt up the brush guard.

For reassembly, make sure to push in the brush guard until it clicks into place.

Step 3

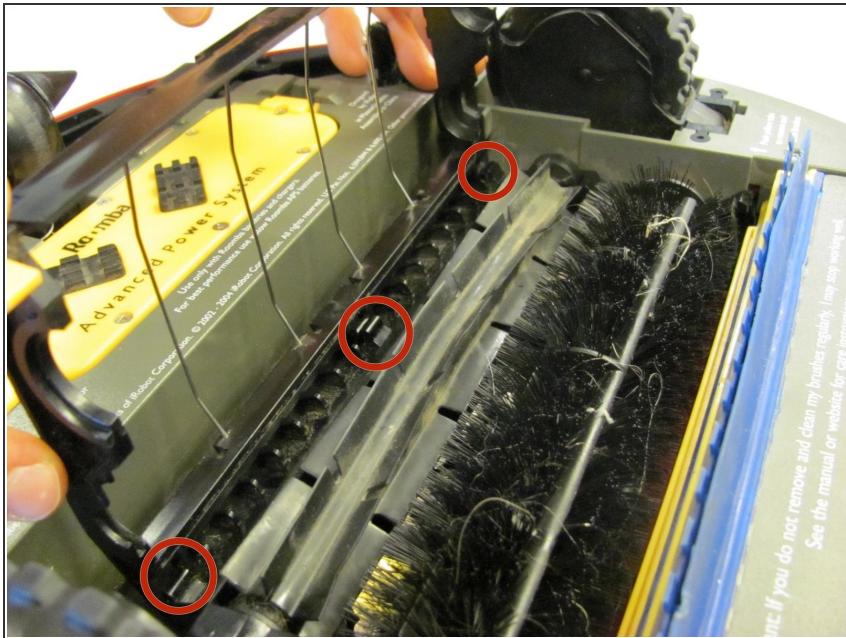

- Pull back the brush guard to unhook it from the latches.
- Remove the brush guard by lifting it up and out of the Roomba.

i This picture has a change in orientation to illustrate the latches. Continue disassembling the Roomba with the blue strip away from you.



Step 4 — Flexible Rubber Brush



- Set the brush guard aside.

i The flexible rubber brush is the smooth, all-rubber brush that is closest to the yellow battery.

Step 5

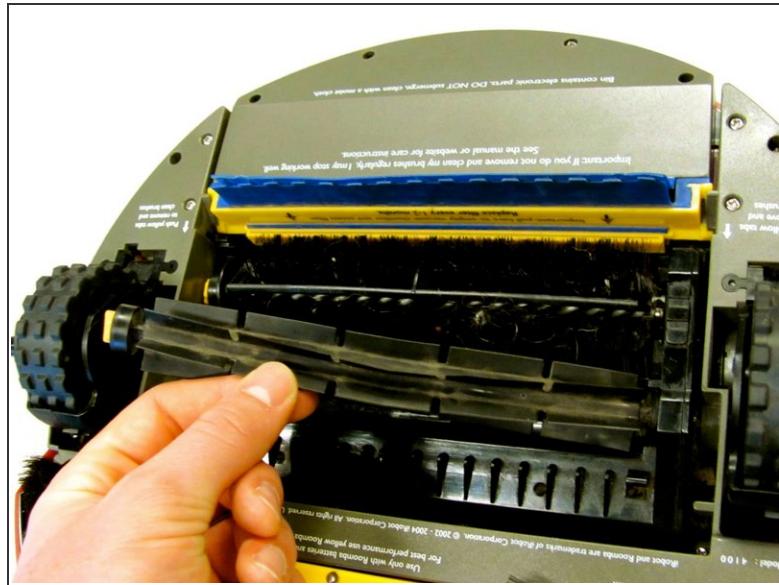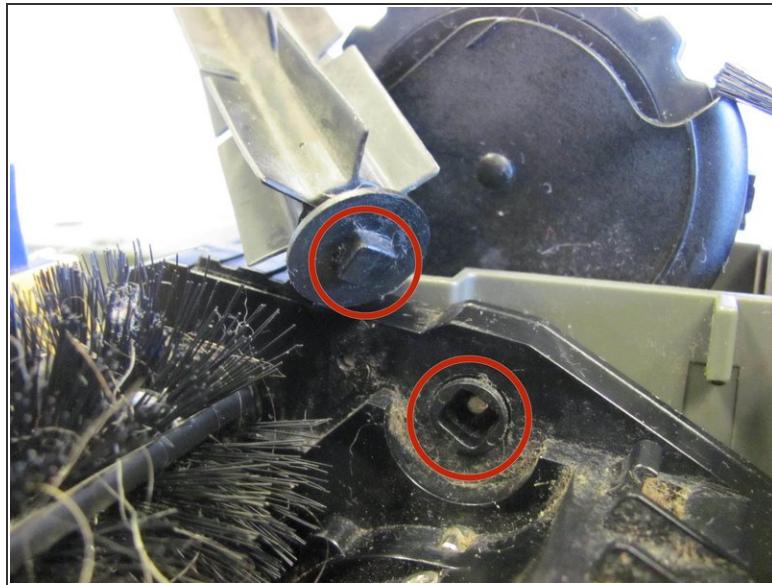

- Remove the flexible rubber brush by grabbing it and pulling it up and out of the Roomba.
- ☒ For reassembly, orient the Roomba with the battery closest to you:
 - First, insert the black end of the flexible rubber brush into the black square opening on the right side.
 - Second, lay the flexible rubber brush back into place.

To reassemble your device, follow these instructions in reverse order.