



# iRobot Roomba 4100 Main Brush Replacement

This is a guide for either maintenance or removal of the main brush in the Red Roomba 4100.


Written By: Samantha Barrett



## INTRODUCTION



This is an easy guide. It should only take a few minutes to complete and it doesn't require any tools.

## Step 1 — Brush Guard

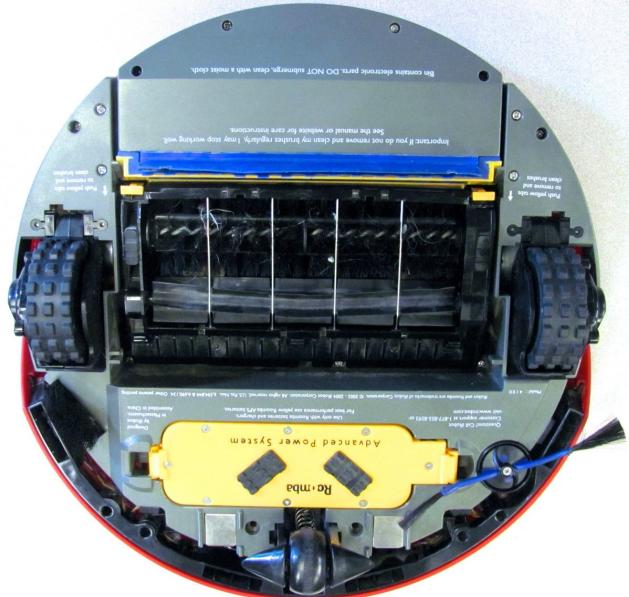

- Lay the Roomba upside down on a flat surface with the blue strip away from you.


## Step 2

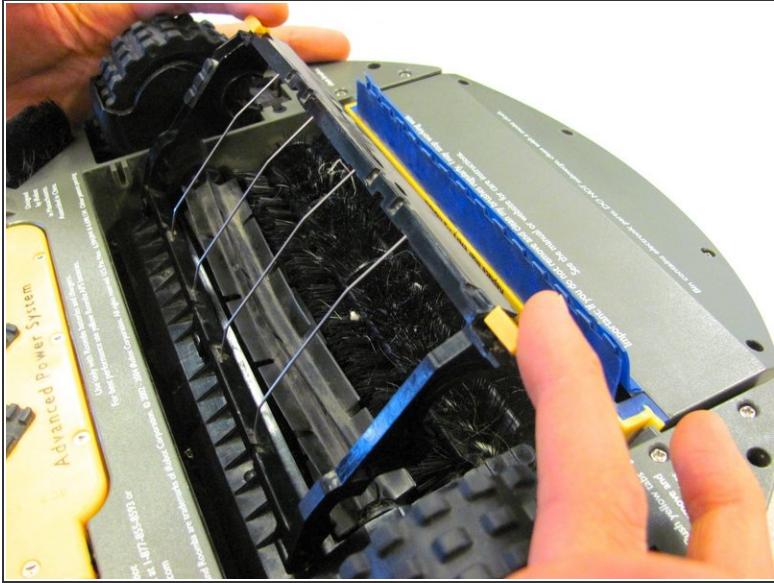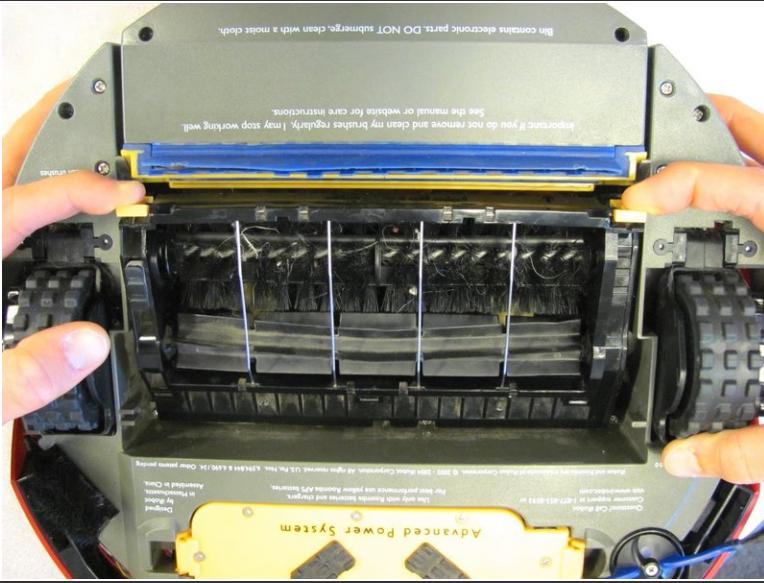

- Use your index fingers to pull the yellow tabs towards you.
- While still pulling the yellow tabs with your index fingers, tilt up the brush guard.

 For reassembly, make sure to push in the brush guard until it clicks into place.


## Step 3

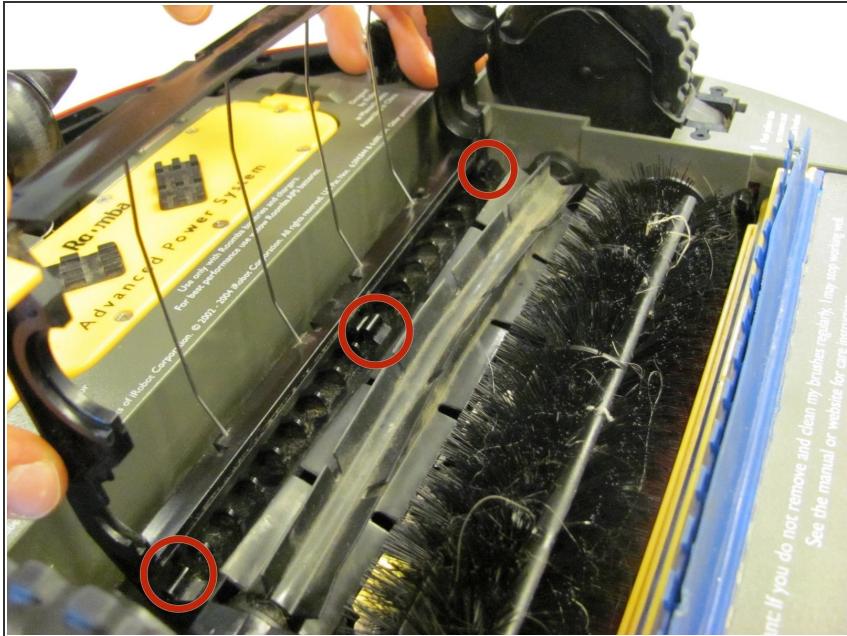

- Pull back the brush guard to unhook it from the latches.
- Remove the brush guard by lifting it up and out of the Roomba.



**i** This picture has a change in orientation to illustrate the latches. Continue disassembling the Roomba with the blue strip away from you.

## Step 4 — Main Brush

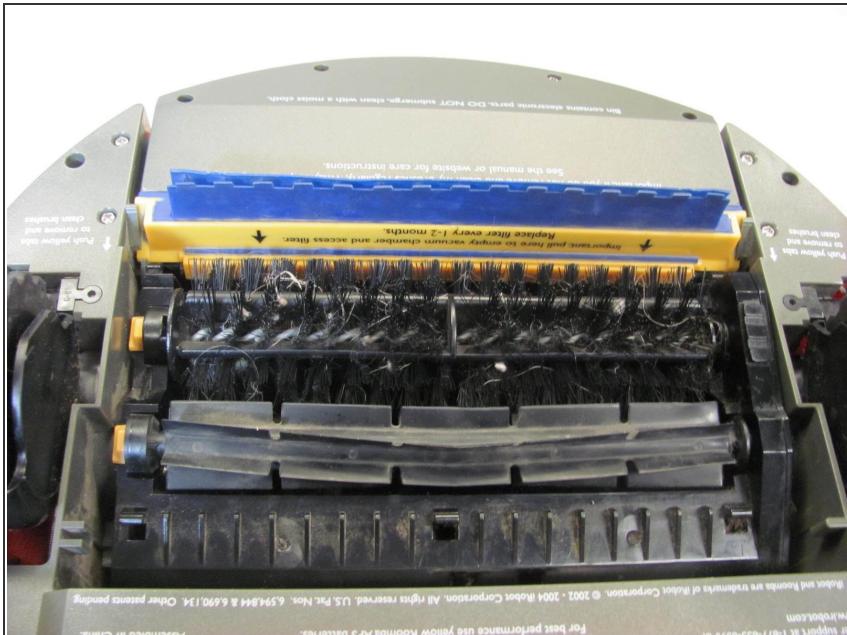

- Set the brush guard aside.
- **i** The main brush is the bristly one that is closest to the blue strip.

## Step 5

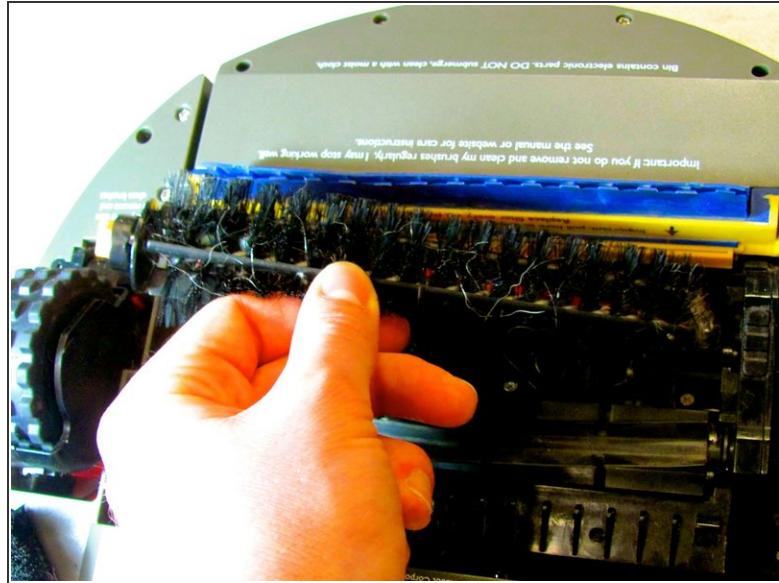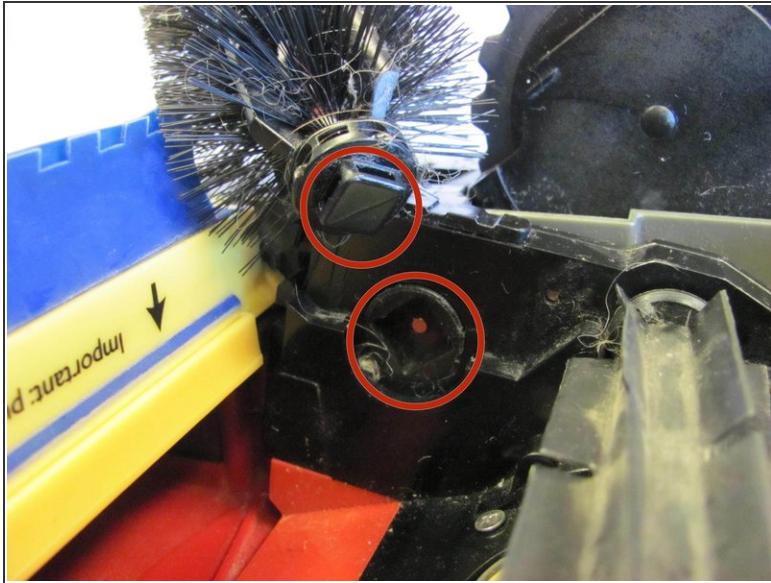

- Remove the main brush by grabbing it and pulling it up and out of the Roomba.
- ★ For reassembly, orient the Roomba with the battery closest to you:
  - First, insert the black end of the main brush into the black square opening on the right side.
  - Second, lay the main brush back into place.

To reassemble your device, follow these instructions in reverse order.