



# iRobot Roomba 551 Faceplate Replacement

Replace the faceplate on your Roomba.

Written By: Aaron Jacobs



## INTRODUCTION

This guide explains how to remove the faceplate from your Roomba.

### TOOLS:

- **Phillips #1 Screwdriver (1)**
- **Phillips #2 Screwdriver (1)**

## Step 1 — Side Brush




- Place your Roomba upside-down on a hard surface.

## Step 2




- While holding the side brush in place, use a Phillips #1 screwdriver to remove the 4.5mm screw from the center of the brush.

## Step 3

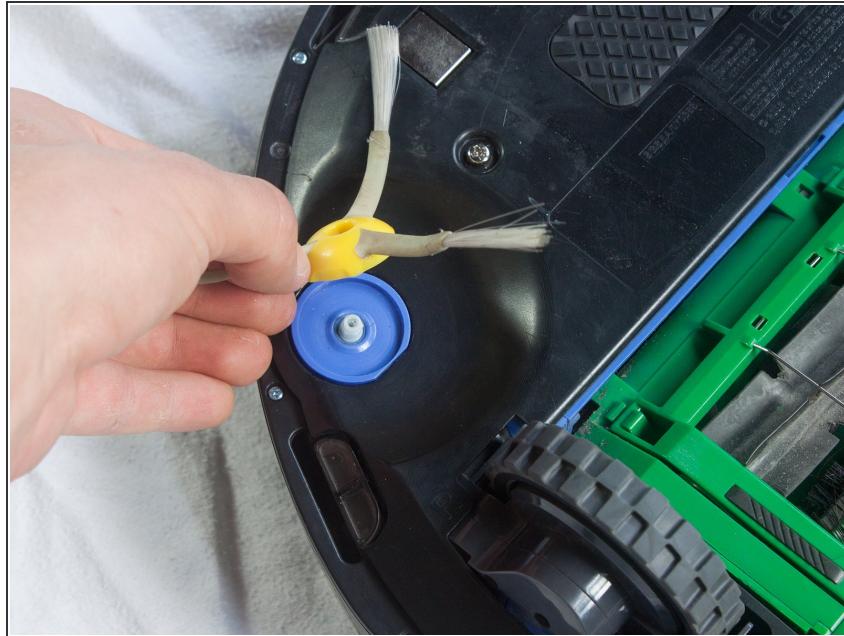


- Gently pull upwards on the brush to remove it.

## Step 4 — Bottom Plate

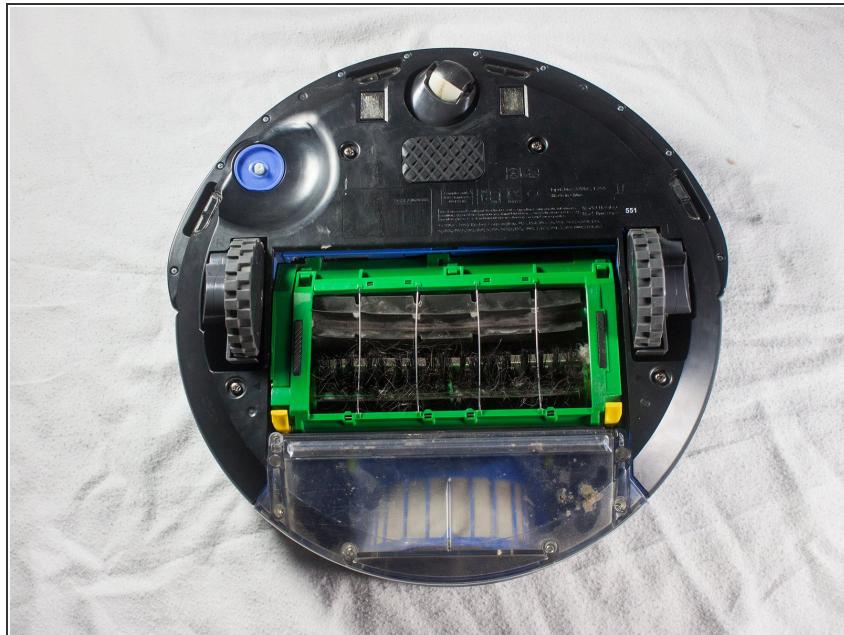


- Rotate the Roomba upside-down so the bottom is facing towards you.

## Step 5

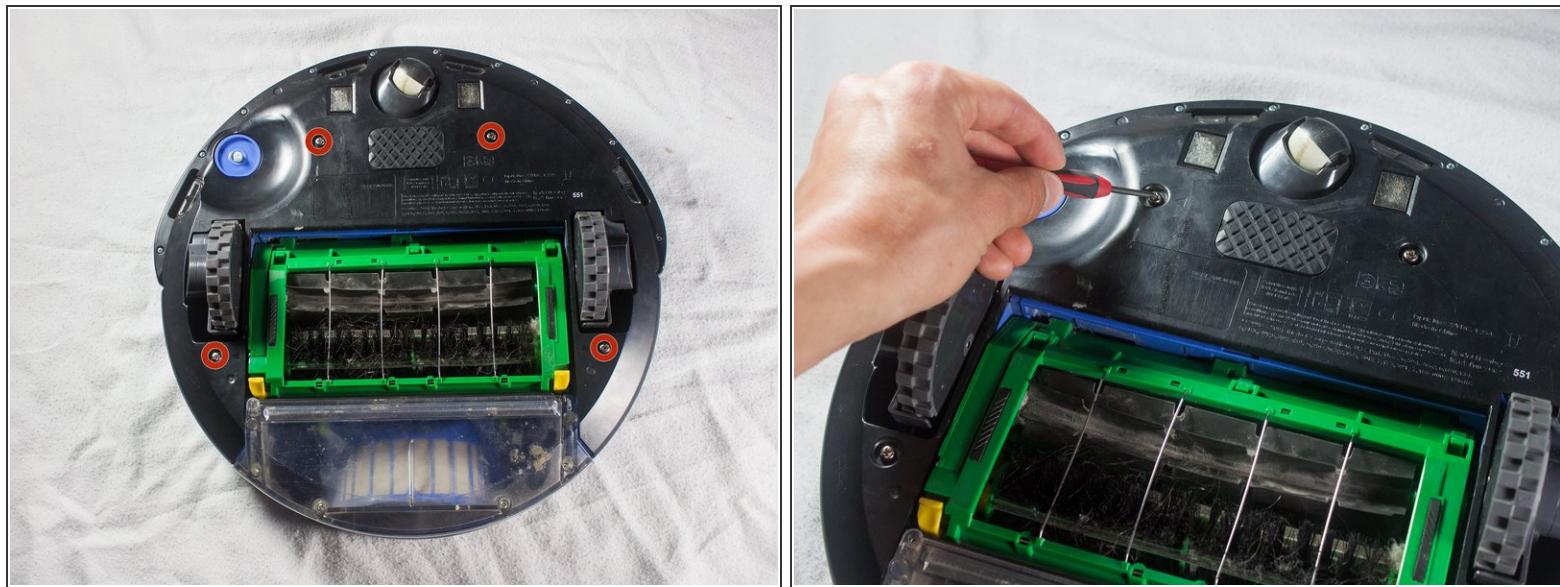

- Using a Phillips #2 screwdriver, remove the captive screws that hold the bottom plate in place.

## Step 6

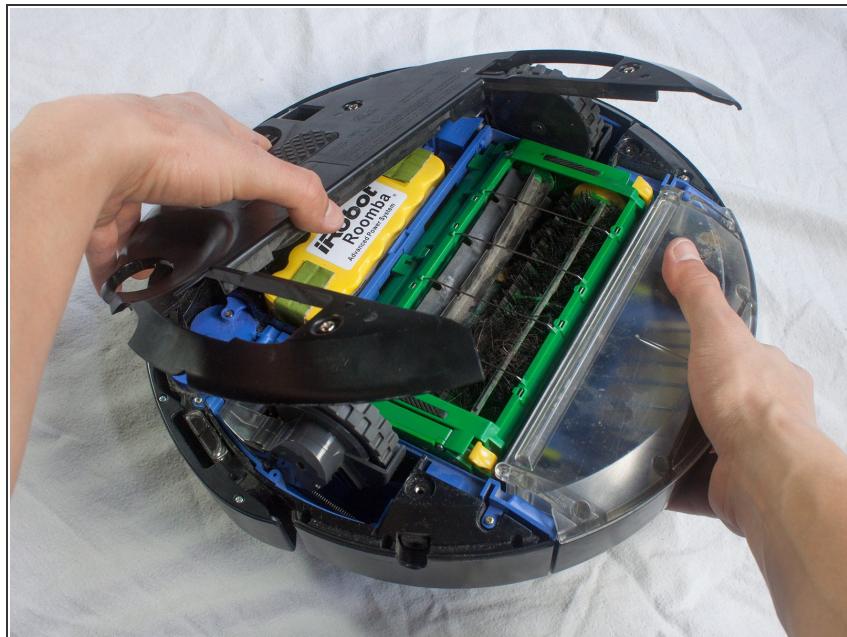

- Carefully lift the bottom plate.


**⚠** The battery is only secured in place by the bottom plate, and may fall out once the bottom plate is removed.

## Step 7 — iRobot Roomba 551 Dirt Bin Replacement




- Push on the dirt bin release button, and pull gently.

## Step 8 — Bumper

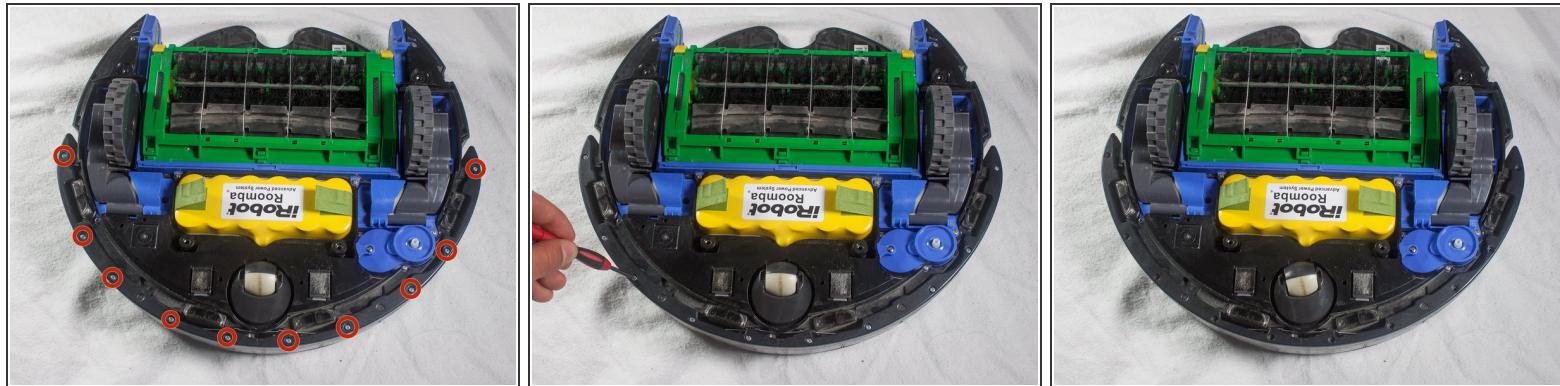

- With a Phillips #1 screwdriver, remove the ten 12mm screws located along the bottom of the bumper.

## Step 9

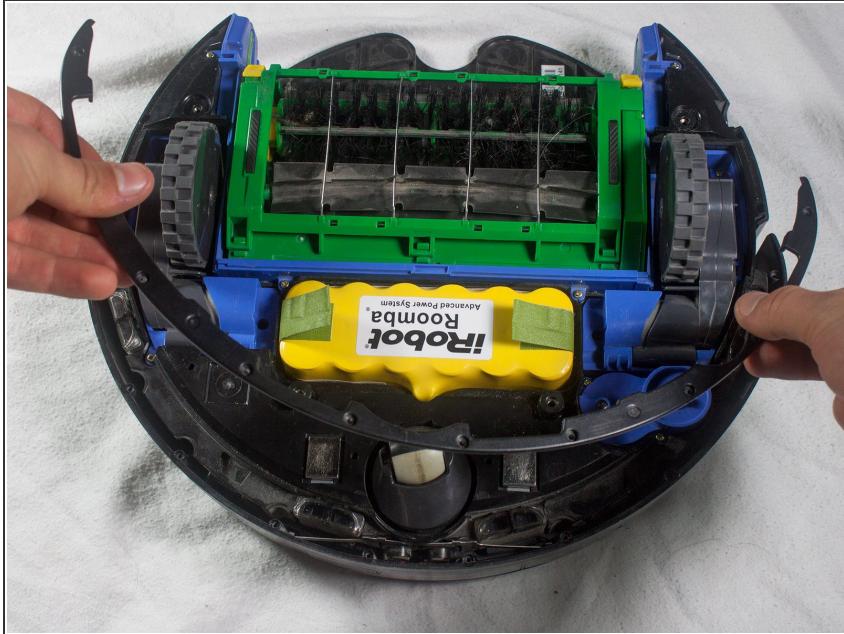

- Lift the bottom cover and set it to the side.

## Step 10



- Flip the Roomba over, grasp the bumper, and gently lift to remove.

**⚠** The battery is not secured in place once the bottom plate has been removed, and may fall out when the Roomba is turned right-side up.

## Step 11 — Faceplate



- Pull up on the front of the faceplate until the friction locks pop out of place.

## Step 12



- Continue around the outside of the Roomba, pulling up on the faceplate to free all of the outer friction locks.

## Step 13



- Grab the faceplate by the outer edge and pull upwards, freeing the center friction locks in the process.

To reassemble your device, follow these instructions in reverse order.