




iRobot Roomba 630 Bristle and Beater Brush Cleaning and Replacement

How to clean and replace the bristle and beater brushes

Written By: Jabari Baptiste

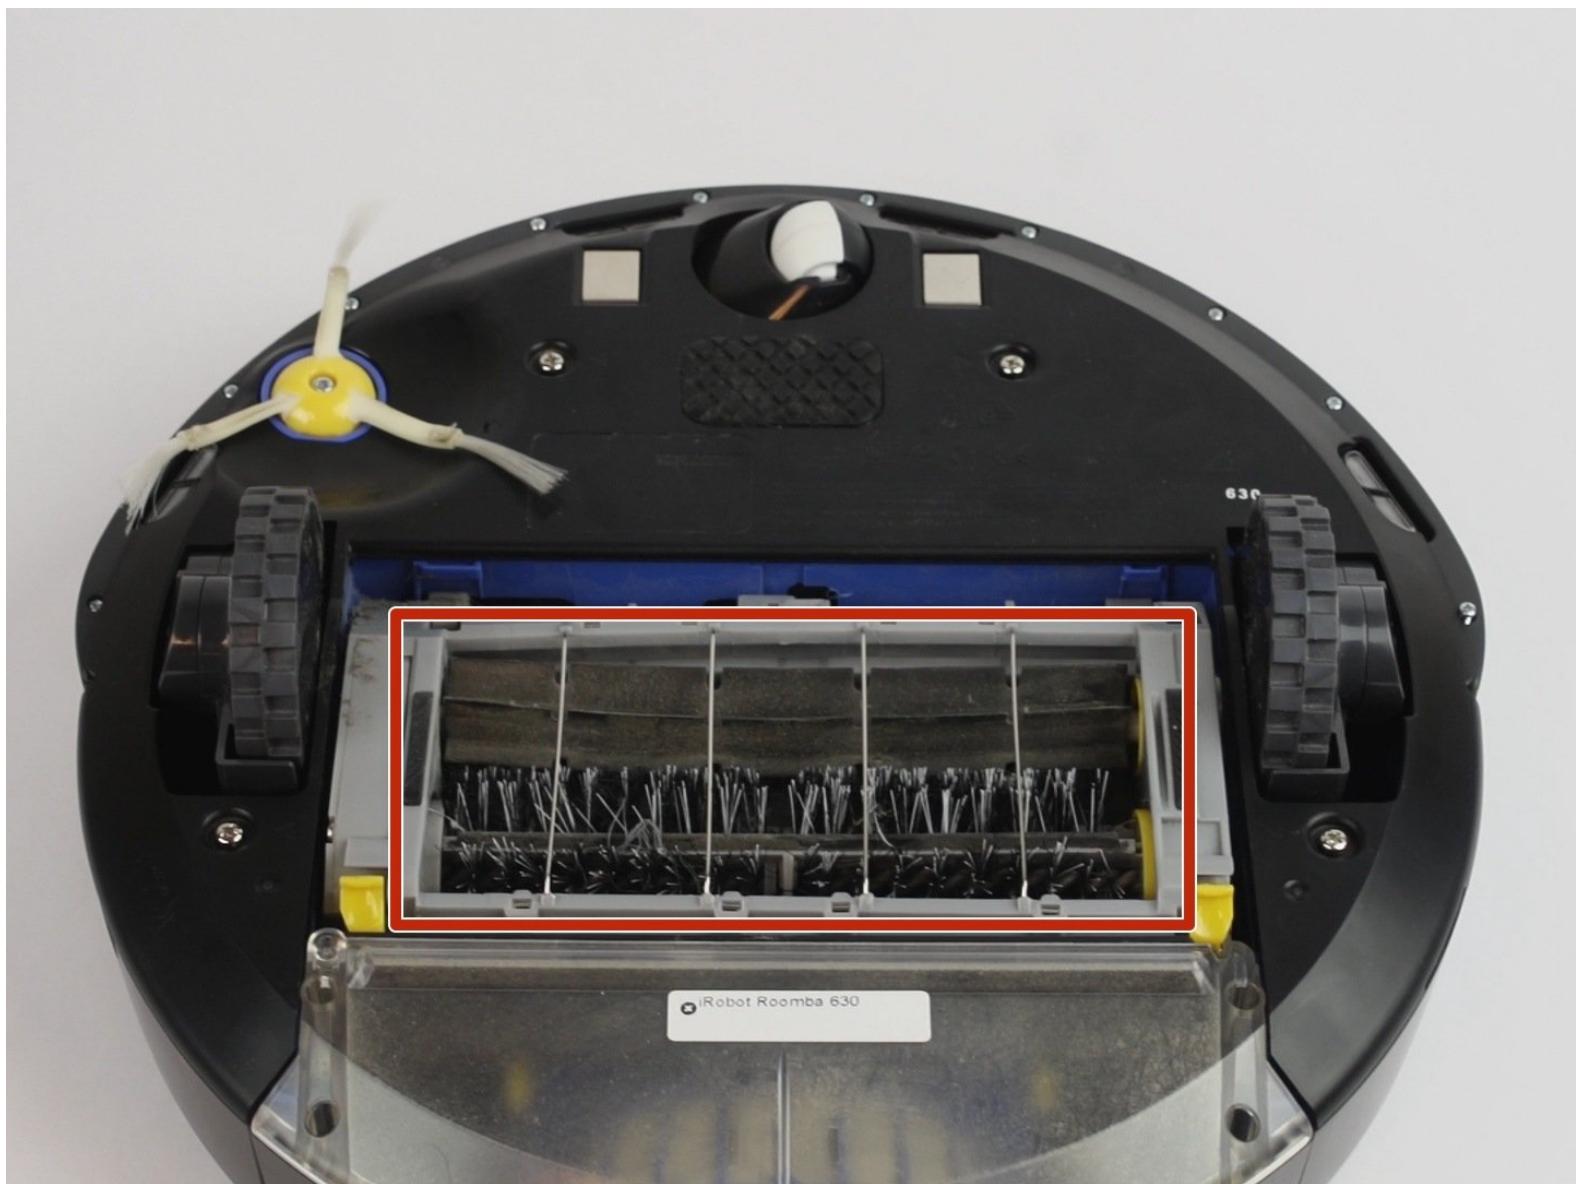

INTRODUCTION



Hair and other debris can get entangle your brushes and cause them to spin slowly or completely stop spinning. This guide shows you how to get to the brushes and take them out for cleaning or replacement.

Step 1 — Bristle and Beater Brush




- Push the bin button and pull out the bin.

Step 2

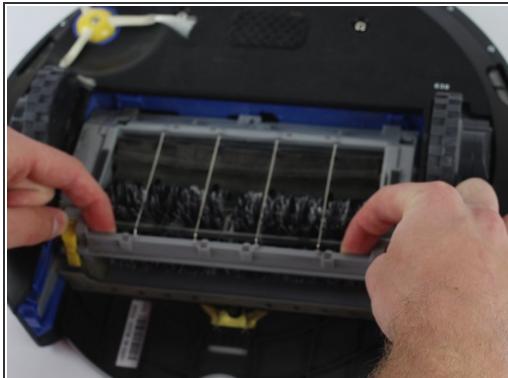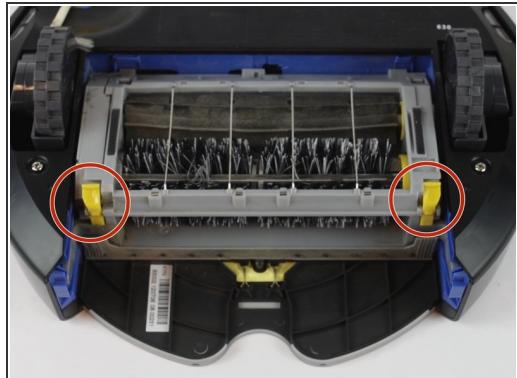

- Flip the Roomba upside down.
- Lift the yellow tabs to the brush cage to access the brushes.

Step 3

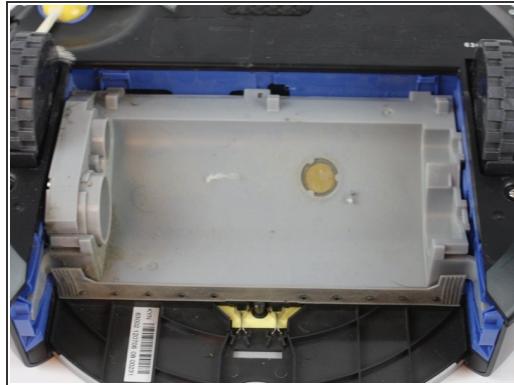

- Lift the brushes out.

To reassemble your device, follow these instructions in reverse order.