



# iRobot looj 120 Auger Replacement

If the auger on the iRobot looj 120 has broken or has been worn out then this guide will show you how to replace the auger.

Written By: Joshua



## INTRODUCTION

This guide will show you how to remove the auger, and how to replace the part that connects the auger to the motor.

### TOOLS:

- Phillips #0 Screwdriver (1)

## Step 1 — Auger



- To remove the auger simply pull it off
- Then unscrew the four screws holding the plastic part in place
- You can then pull that off revealing the piece that connects to the motor
- The metal piece can now be replaced by inserting a new one

To reassemble your device, follow these instructions in reverse order.