



iVIEW-754TPC Speaker Replacement

Use this repair guide to replace the speaker on the iVIEW-754TPC.

Written By: Robert Clark



INTRODUCTION

Is your speaker no longer playing audio? Use this guide to repair your speaker.

TOOLS:

- [Portable Soldering Iron](#) (1)
- [Tweezers](#) (1)
- [iFixit Opening Tools](#) (1)


Step 1 — Rear Panel



(i) Before disassembling your tablet, make sure it is powered off.

- Use plastic opening tool to release the clips holding the device together. The clips will take a small amount of pressure to release. Once you have the plastic opening tool inserted, use a twisting action to release the clips. Start from bottom of device and work all the way around.

Step 2 — Desolder speaker wires

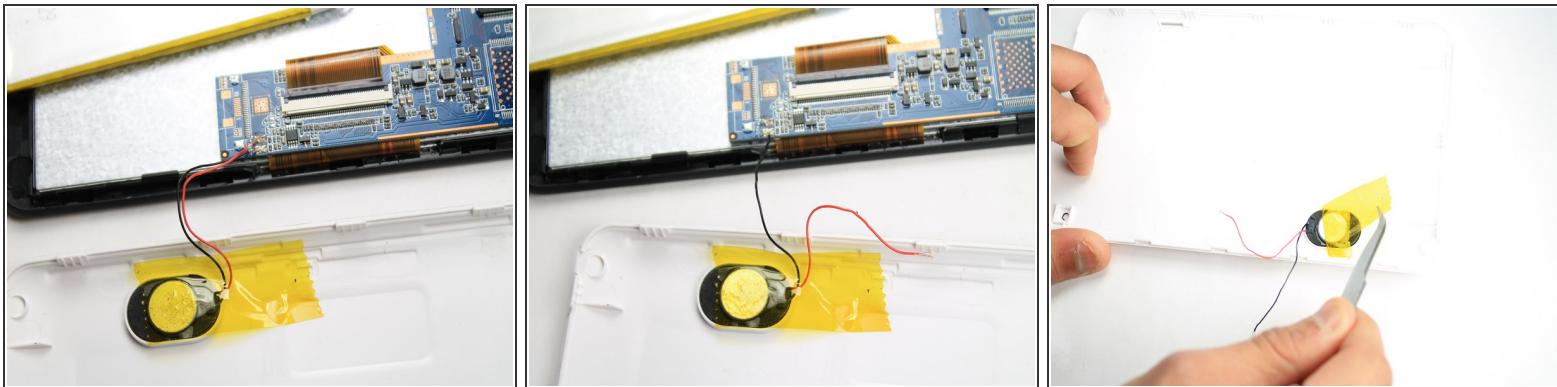

- Desolder wires from the mother board. Use solder iron to disconnect wires from mother board. Use tweezers to pull wires as the iron is heating.
- Remove yellow tape from the speakers and use tweezers to pull speaker out.

To reassemble your device, follow these instructions in reverse order.