



velocity micro tablet T301 Screen Display. Replacement

Steps to disassemble the screen of a velocity micro T301 tablet.

Written By: James Napoleon



INTRODUCTION

In this guide you will help you to reach the screen display. It also will show you the tools that should be used in this replacement.

TOOLS:

- [iFixit Opening Tools](#) (1)
- [Metal Spudger](#) (1)
- [Heavy-Duty Spudger](#) (1)
- [Phillips #0 Screwdriver](#) (1)

Step 1 — Screen Display.




- Insert the plastic opening tool in the SD port. The edge point should be pointed towards the rear panel.

Step 2



- Insert a small opening tool between the rear panel and the tablet.

Step 3

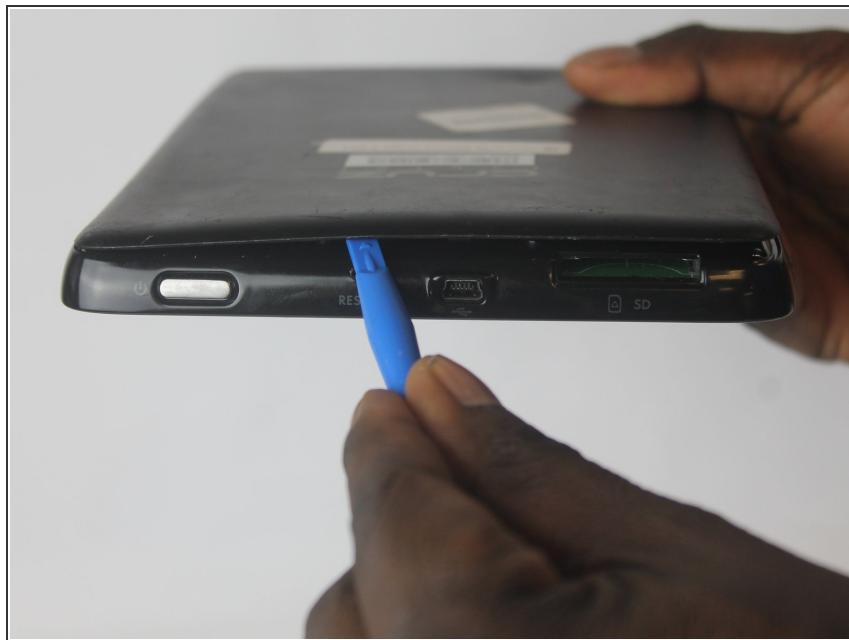


- The large opening tool is not needed any more.

Step 4




- Move the small tool opener around the rear panel to free the 12 edges.

Step 5

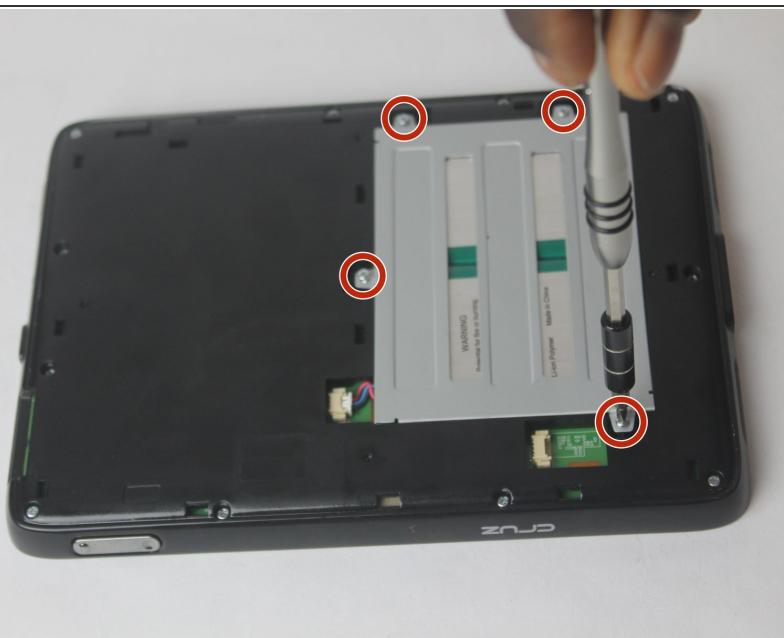

- Using PH0 Phillips Driver, remove the 4 Screws in the Metal part.

Step 6

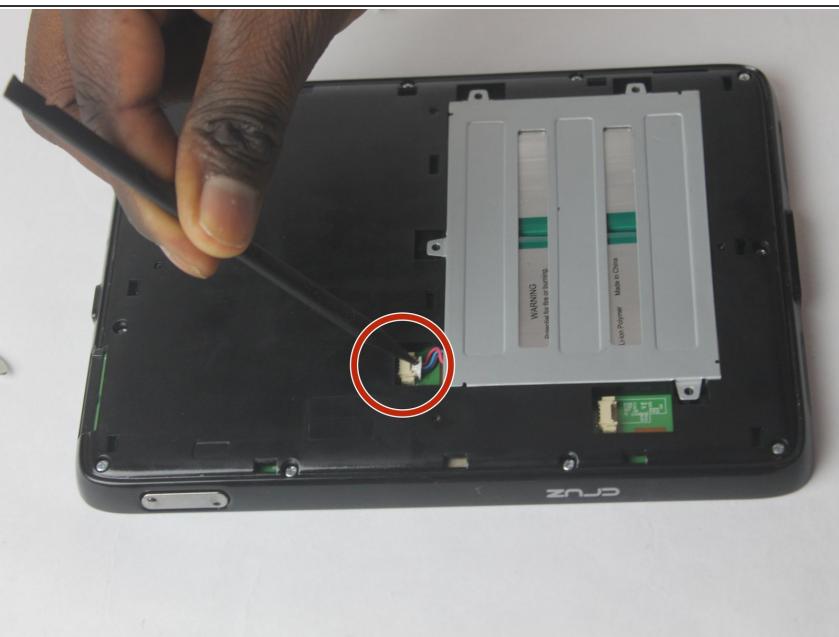

- Using a plastic Spudger remove the battery connector.

Step 7



- Using PH0 Phillips Driver, remove the 12 Screws in the cover.

Step 8




- Place a metal Spudger between the tablet and the back cover.

Step 9




- Move the spudger around the tablet to release the clips attached to the tablet.

Step 10

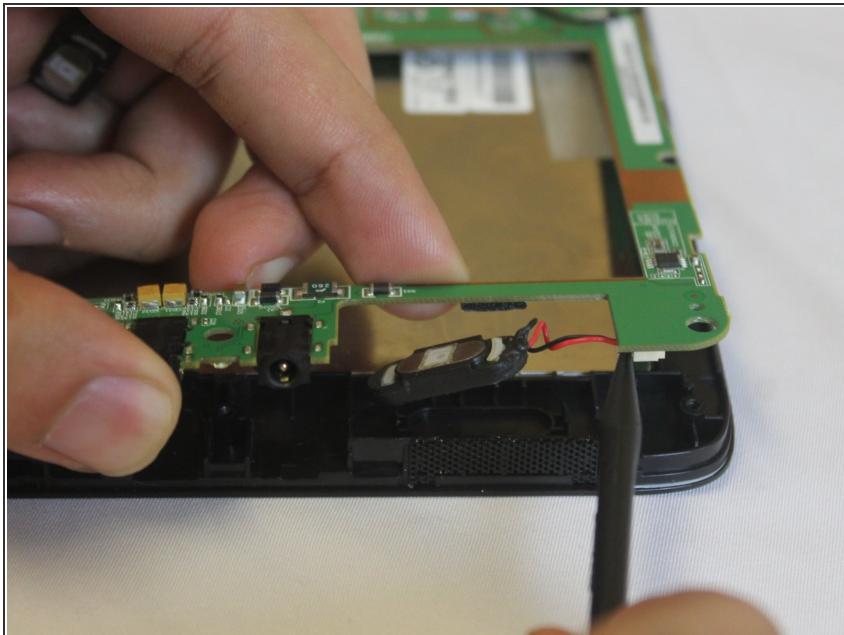


- Use a plastic spudger to release the connection between the speakers and the motherboard as shown in the picture.

Step 11

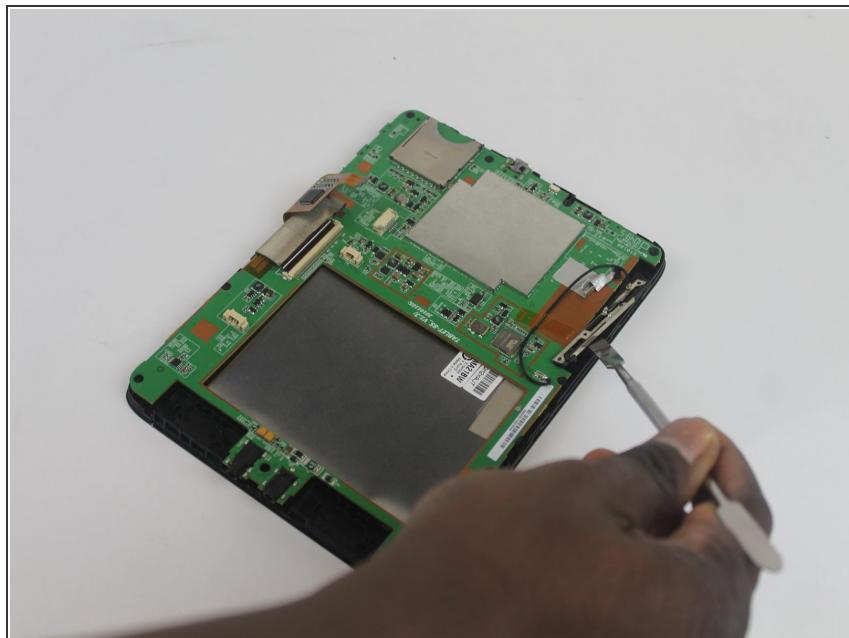


- Using a metal spudger to remove the top plug connector from the motherboard.

Step 12

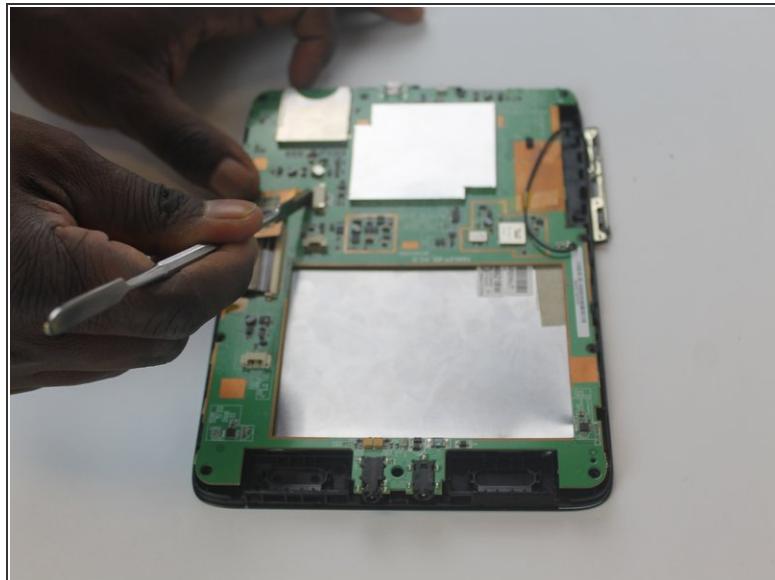

- Use a metal spudger to remove both screen cable connectors.

Step 13

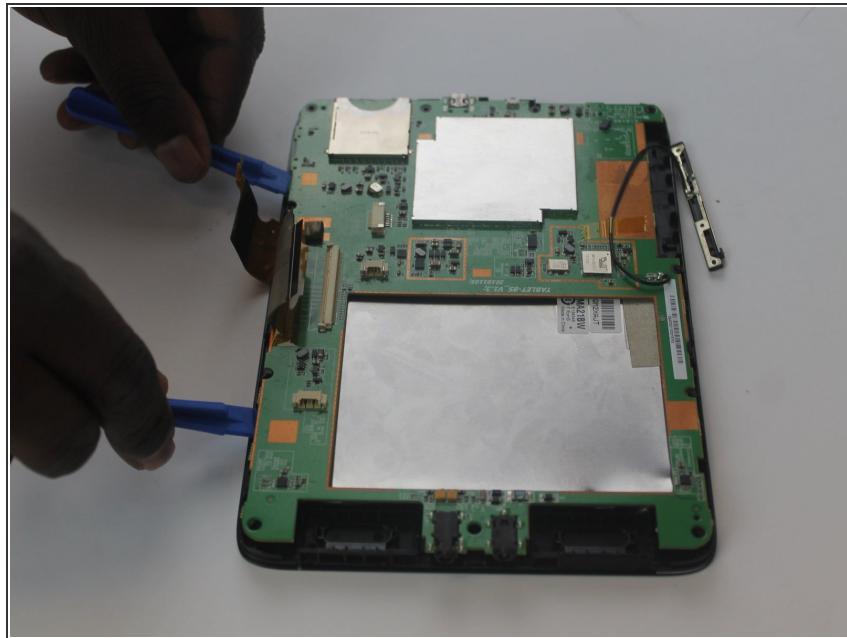

- use opening tools to remove the motherboard.

Step 14



- Remove the motherboard cover to reach in the screen display.

To reassemble your device, follow these instructions in reverse order.