




why! N650DU CD / DVD RW drive

Written By: Felice Suglia

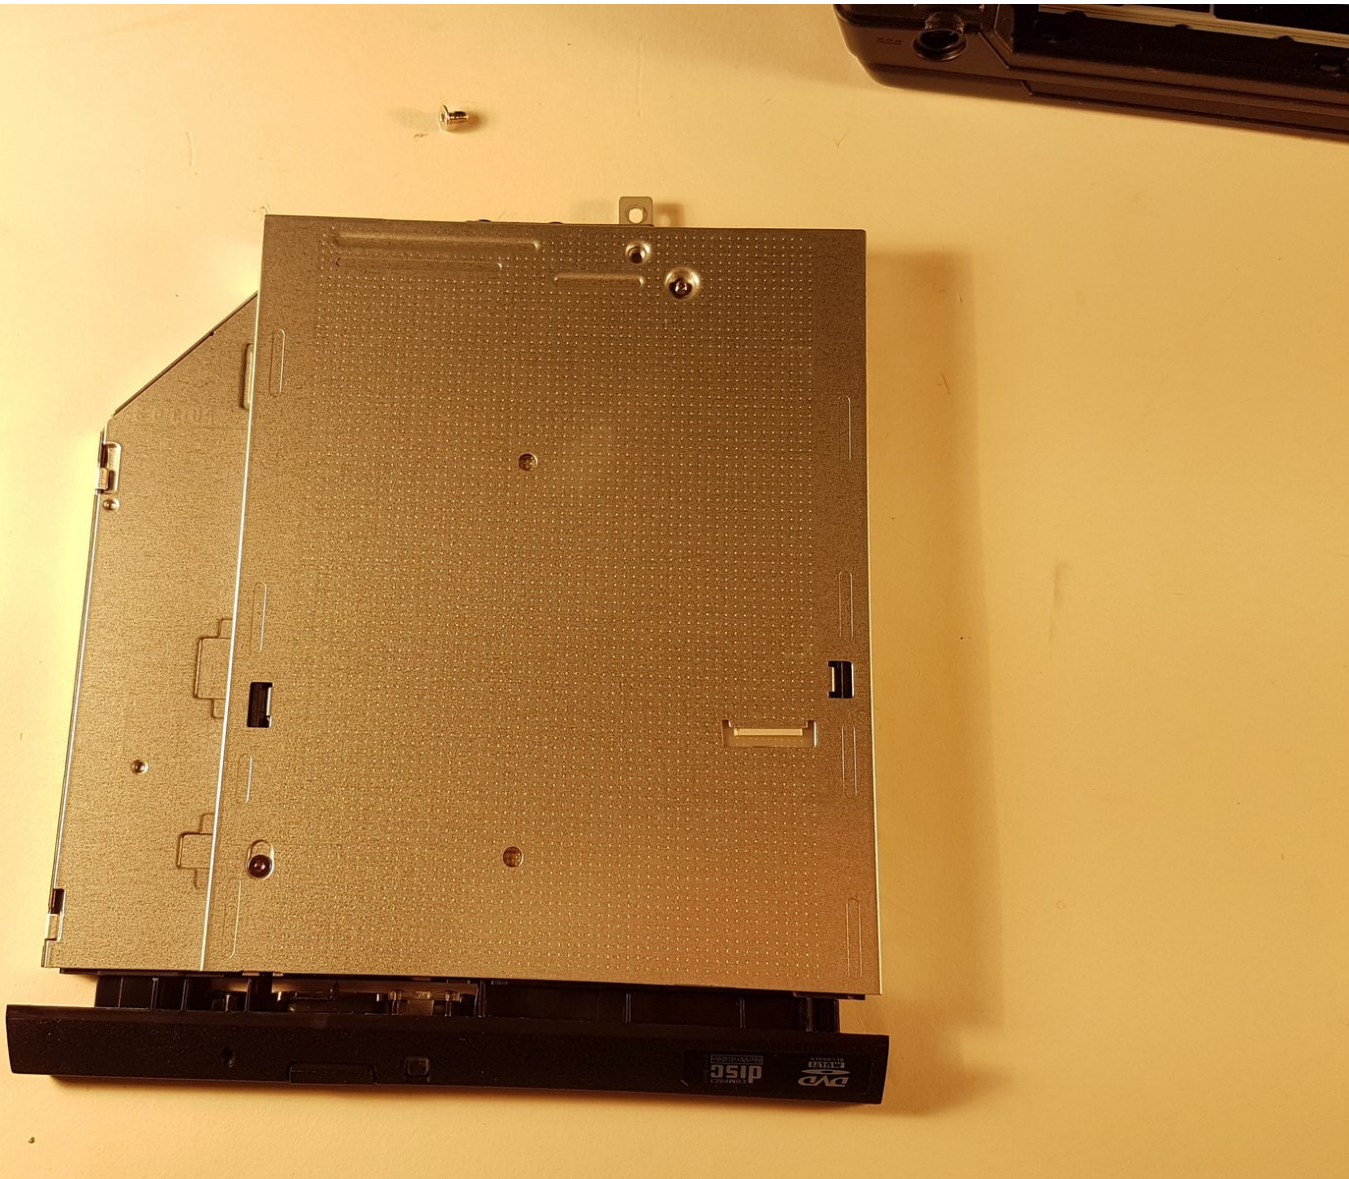


**TOOLS:**

- [Tornevis Cruciforme PH1](#) (1)

**PARTS:**


- [New Item](#) (1)
- [New Item](#) (1)

Step 1 — The Batteries

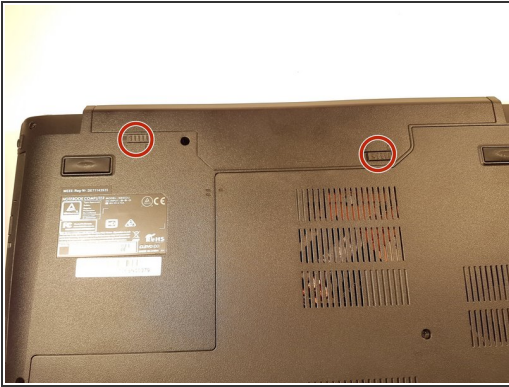


- Unlock the button without spring
- Slide the battery up while unlocking the button with spring

Step 2 — Access to major components

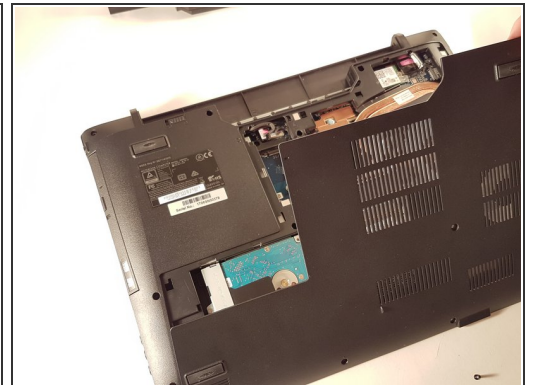

- Unscrew the two large screws circled in red
- Unscrew the two small screws circled in green
- Slide the plate down and lift the

Step 3 — CD / DVD RW drive

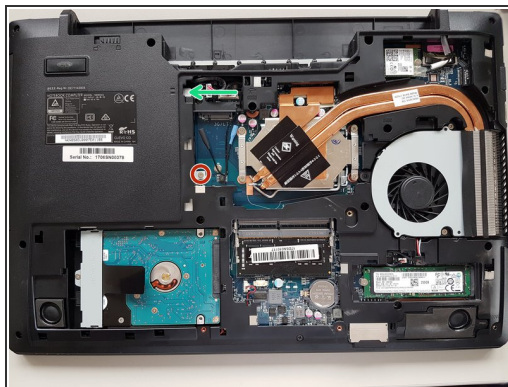

- Unscrew the screw circled in red
- Push the drive to the location indicated by the green arrow
- Remove the drive from its location

To reassemble your device, Follow these instructions in reverse order.