

DF800

Disk Array System

Maintenance Manual

REV.53

Read this manual carefully and keep it.

- Before starting operation, read the safety instructions carefully and fully understand them.
- After reading this manual, keep it at hand for your reference.

HITACHI

Preface

This manual explains the operation introduction, installation, maintenance, and WEB of the DF800 disk array system for service personnel to make them understand the DF800.

This manual contains information on maintenance works of the DF800 series disk array system such as subsystem outline, structure, installation, and actions against failures.

When performing a maintenance work, read this manual carefully, and fully understand the Introduction of operation, operation procedure, and instructions before starting the work.

This manual was carefully prepared and reviewed for completeness and correctness. However, please feel free to contact us concerning any question, mistake, omission, or any other issues about this manual.

Contact address : Hitachi, Ltd. Information & Telecommunication Systems Company
IT Platform R & D Management Division
Storage Systems Development Operation
Storage Hardware Development/Storage Software Development III


Cautionary Notes

On This Manual

- Hitachi, Ltd. owns the copyrights of the DF800 Maintenance Manual. No part of this manual may be reused or reproduced without permission of Hitachi, Ltd.
 - Hitachi, Ltd. is not liable for any troubles or accidents which are caused by operation not written in this manual.
 - The DF800 Maintenance Manual may be revised without prior notice.
 - Although this subsystem has the built-in laser diode, it meets the laser system standard of class 1. It does not emit the laser beam, which is harmful to a human body, outside the subsystem in the usual operation.
- Operate the subsystem according to this manual. Otherwise, it may cause unexpected accidents or failures.

General Cautionary Notes

- It is feared that user data is lost unless the power is turned off correctly following the specified procedure.
- The Disk Drives are precise components. Never apply them any shock no vibration.
- After replacing the Cache Backup Battery, connect the power cables to the Power Units, and deliver it to the customer after charging the battery. (It is about 24 hours at the maximum.)
- In order to protect parts from the electrostatic discharge, every worker must put a wrist strap on his/her wrist before starting installation or maintenance work and start the work after connecting the grounding clip to a metallic portion of the frame. (The wrist strap must be put on when connecting the LAN cable.)
- Do the work with the wrist strap put on. Do not put off the wrist strap till the work is finished.
- When handling a part, hold it in the way that fingertips of the hand putting the wrist strap on touch a metallic portion of the part. (The above is necessary in order to discharge the charged static electricity and prevent a charge caused by handling.)
- Be sure to touch the subsystem with the wrist strap put on. If you touch the subsystem without putting on the wrist strap, the static electricity charged on your body flows to the subsystem in an instant because no resistance exists between your body and the subsystem causing a subsystem trouble.

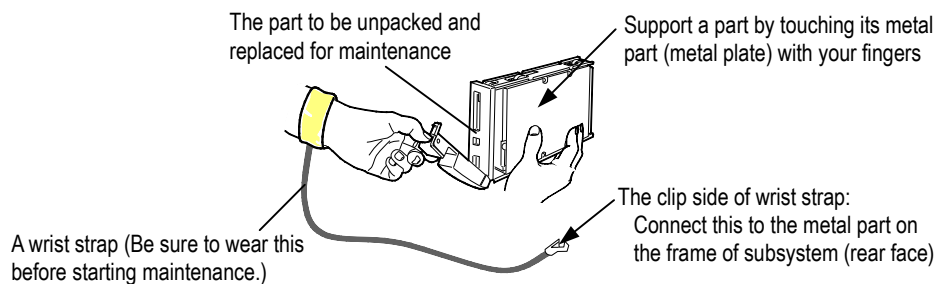

Trademarks

AIX is a trademark of International Business Machines Corporation in the United States, other countries, or both.

Firefox is a registered trademark of the Mozilla Foundation.

HP-UX is a product name of Hewlett-Packard Development Company, L.P. in the U.S. and other countries.

IRIX is a registered trademark of Silicon Graphics, Inc.

Linux® is the registered trademark of Linus Torvalds in the U.S. and other countries.

Microsoft, Windows, Windows NT, Windows Sever, Windows Vista and Internet Explorer are either registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

Mozilla is a trademark of the Mozilla Foundation in the U.S and other countries.

Novell, and NetWare are either registered trademarks or trademarks of Novell, Inc. in the United States and other countries.

OpenView is a trademark of Hewlett-Packard Development Company, L.P. in the U.S. and other countries.

Red Hat is a trademark or a registered trademark of Red Hat Inc. in the United States and other countries.

UNIX is a registered trademark of The Open Group in the United States and other countries.

VMware is a registered trademark or a trademark of VMware, Inc. in the United States and/or other jurisdictions.

Other company names and trade names described in this manual are trademarks or registered trademarks of each respective company.

Note

EMI Regulation

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference in which case the user will be required to correct the interference at his own expense. Testing was done with shielded cables. Therefore, in order to comply with the FCC regulations, you must use shielded cables with you installation.

EMI Regulation Labels Affixed on the Subsystem.

この装置はクラスA情報技術装置です。
この装置を家庭環境で使用すると電波妨害を引き起こすことが
あります。この場合には使用者が適切な対策を講ずるよう
要求されることがあります。 VCCI-A

この装置は、クラスA情報技術装置です。この装置を家庭環境で使用する
と電波妨害を引き起こすことがあります。この場合には使用者が適切な対策
を講ずるよう要求されることがあります。 VCCI-A

"This equipment complies with the
requirements in part 15 of FCC Rules
for a Class A computing device and
Part II .Vol.122.No.20 of Canada Gazette
for a Class A digital apparatus.
Operation of this equipment in a
residential area may cause
unacceptable interference to radio
and TV reception requiring the
operator to take whatever steps are
necessary to correct the interference."

This Class A digital apparatus complies
with Canadian ICES-003.
Cet appareil numérique de la classe A
est conform à la norme NMB-003 du Canada.

The EMI test was done in the following configuration.

If a trouble occurs in another configuration, a user may be requested to take appropriate preventive measures.

- DF800-RKS/RKM+RKAK(×4)+RK40
- DF800-RKH+RKAK(×4)+RK40
- DF800-RKS/RKM+RKAK(×2)+RKAKX(×2)+RK40
- DF800-RKHE/RKHED+RKAK/RKAKD+N1RK/N1RKD+RK40
- DF800-RKHE+RKAK(×2)+RKAKX(×2)+RK40
- DF800-RKHED+RKAKD(×5)+RK40
- DF800-RKEM+RKAK(×2)+RK40
- DF800-RKES+RKAK(×2)+RK40
- DF800-RKEXS/RKEXSA/RKEXS8F+RKAK(×2)+RK40
- DF800-RKEH+RKAKX+RKAK(×2)+RK40
- DF800-RKEHD+RKAKD(×2)+RK40
- DF800-RKEXS/RKEXSA+RKAKSx1+RK40
- DF800-RKS/RKES+RKAKX+RKAKx2+RKAKSx2+RK40
- DF800-RKM/RKEM+RKAKX+RKAKx2+RKAKSx2+RK40
- DF800-RKH/RKHE/RKEH+RKAKX+RKAKx2+RKAKSx2+RK40

The DF800-RKHED with the DF-F800-UBKD attached and the DF800-RKAKD and the DF800-N1RKD with the DF-F800-UBKAD are the equipment with the NEBS (Network Equipment-Building System) specifications.

The equipment with the NEBS specifications is suitable for use in Telecommunications Facilities.

The equipment with the NEBS specifications is suitable for use in the CBN (Common Bonding Network).

This page is for editorial purpose only.

Model Name Conversion

Throughout this document, product model name is written as “DF800”. When you want to use this document for the HT-4065 series, please conversion the model name “DF800” with “HT-4065”.

Table 1 Conversion Table for Model Name and Other Model Name

The model name which is used in this document	The model name replace to DF800	Type
DF800-xxx	HT-4065-xxx	Rackmount model (DF800-RKM) Rackmount model (DF800-RKS) Rackmount model (DF800-RKH) Rackmount model (DF800-RKEXS) Rackmount model (DF800-RKEXSA) Rackmount model (DF800-RKEXS8F)
DF-F800-xxxx	HT-F4065-xxxx	Optional component Accessory component

The following ten types of Basic Chassis exist in the AMS2500.

- DF800-RKH (abbr.: RKH)
- DF800-RKEH (abbr.: RKEH)
- DF800-RKH2 (abbr.: RKH2)
- DF800-RKEH2 (abbr.: RKEH2)
- DF800-RKHE (abbr.: RKHE)
- DF800-RKHE2 (abbr.: RKHE2)
- DF800-RKHED (abbr.: RKHED)
- DF800-RKEHD (abbr.: RKEHD)
- DF800-RKHE2D (abbr.: RKHE2D)
- DF800-RKEH2D (abbr.: RKEH2D)
- DF800-RKEXC (abbr.: RKEXC)

This manual does not describe the RKH2/RKEH/RKHE/RKHE2/RKEH2//RKEXC/RKHED/RKEHD/RKHE2D/RKEH2D except for the following differences.

When the RKH2/RKHE/RKEH/RKHE2/RKEH2/RKEXC/RKHED/RKEHD/RKHE2D/RKEH2D is used, it becomes the same procedure as the RKH.

Therefore, read the RKH as the

RKH2/RKHE/RKEH/RKHE2/RKEH2/RKEXC/RKHED/RKEHD/RKHE2D/ RKEH2D excluding the part described in parallel and use it.

The drive DF-F800-ACE3KX installed in the RKAKX connected with the RKEXC is the same one as the drive DF-F800-AVE3KX. Therefore, read the ACE3KX as the AVE3KX.

Table 2 Difference among RKH, RKH2, RKHE, RKEH, RKHE2, RKEH2, RKEXC, RKHED, RKEHD, RKHE2D, and RKEH2D

Chassis Name	Number of the Cache Backup Battery installed by standard	Connection with the Additional Battery Box	Power specification
RKH	2	X	AC power supply
RKH2	4	X	AC power supply
RKHE	2	○	AC power supply
RKEH	2	○	AC power supply
RKHE2	4	○	AC power supply
RKEH2/RKEXC	4	○	AC power supply
RKHED	2	○	DC power supply
RKEHD	2	○	DC power supply
RKHE2D	4	○	DC power supply
RKEH2D	4	○	DC power supply

The following four types of Additional Chassis exist in the AMS2500.

- DF800-RKAK (abbr.: RKAK)
- DF800-RKAKD (abbr.: RKAKD)

This manual does not describe the RKAKD except for the following differences.

When the RKAKD is used, it becomes the same procedure as the RKAK.

Therefore, read the RKAK as the RKAKD excluding the part described in parallel and use it.

Table 3 Difference between RKAK and RKAKD

Chassis Name	Number of the Cache Backup Battery installed by standard	Connection with the Additional Battery Box	Power specification
RKAK	2	○	AC power supply
RKAKD	4	○	DC power supply

The following two types of Control Units exist in the AMS2300 and AMS2100.

- Control Units for AMS2100: (abbr.: RKS, RKES)
- Control Units for AMS2300: (abbr.: RKM, RKEM)

When the RKES/RKEM is used, it becomes the same procedure as the RKS/RKM.

Therefore, read the RKS/RKM as the RKES/RKEM excluding the part described in parallel and use it.

The following three types of Basic Chassis exist in the AMS2010.

- DF800-RKEXS (abbr.: RKEXS)
- DF800-RKEXSA (abbr.: RKEXSA)
- DF800-RKEXS8F (abbr.: RKEXS8F)

For the RKEXSA, the same Chassis as the RKS is used.

In this manual, the RKEXS/RKEXSA becomes the same procedure as the AMS2100 H/W Rev.0100 (abbr.: RKS) excluding the specification of the Control Unit (Fibre Channel interface for the RKEXS, iSCSI interface for the RKEXSA). Therefore, read the RKS as the RKEXS/RKEXSA excluding the part described in parallel and use it.

For the RKEXS8F, the same Chassis as the RKES is used.

In this manual, the RKEXS8F becomes the same procedure as the AMS2100 H/W Rev.0200 (abbr.: RKES) excluding the specification of the Control Unit (Fibre Channel interface for the RKEXS, iSCSI interface for the RKEXSA, Fibre Channel + iSCSI interface for the RKEXS8F). Therefore, read the RKES as the RKEXS8F excluding the part described in parallel and use it.

Manual Composition

This Maintenance Manual is composed of 11 volumes, that is, Maintenance Manuals- for Introduction, for Maintenance, for Installation, Firmware, System Parameter, Addition/Removal/Relocation, Troubleshooting, Messages, Replacement, Parts Catalog, and for WEB. Each volume and chapter has table of contents to help readers to find just the page they want. Besides, glossary is contained in each appendix.

For the composition of the each volume, refer to the following.

Safety Summary :

This “Safety Summary” volume describes the cautionary notes to handle the maintenance work safely.

Introduction :

This “Introduction” volume describes the cautionary/prohibited notes in the maintenance work, the outline of the subsystem, and the configuration, etc.

Installation :

This “Installation” volume describes the setting of the subsystem and the installation of the parts, etc.

Firmware :

This “Firmware” volume describes the update installation of the firmware.

System Parameter :

This “System Parameter” volume describes the setting of the system parameter of the subsystem, etc.

Addition/Removal/Relocation :

This “Addition/Removal/Relocation” volume describes the addition, removal and relocation related to the setting of the subsystem.

Troubleshooting :

This “Troubleshooting” volume describes the trouble analysis of the subsystem, etc.

Messages:

This “Message” volume describes the content of the message which occurs at the time of the subsystem failure.

Replacement :

This “Parts Replacement” volume describes the replacement work of each part and the periodic maintenance, etc.

Parts Catalog :

This “Parts Catalog” volume describes each part installed in the subsystem.

WEB :

This “WEB” volume describes the operating procedure for WEB.

Contents

Preface	GENE 0010
Cautionary Notes	GENE 0020
Note	GENE 0040
Model Name Conversion	GENE 0050
Manual Composition	GENE 0060

[Safety Summary]

 SAFETY SUMMARY	SAFE 0020
--	-----------

[Introduction]

Chapter 1. Outline of Subsystem	INTR 01-0000
1.1 What is RAID	INTR 01-0000
1.1.1 Application of RAID Technology	INTR 01-0010
1.1.2 RAID Levels	INTR 01-0020
1.2 Overview of the DF800	INTR 01-0040
1.2.1 Overview of Functions	INTR 01-0040
1.2.2 Differences between the DF800 and DF700	INTR 01-0070
1.3 Subsystem Structure	INTR 01-0080
1.3.1 External Appearances	INTR 01-0120
1.3.2 System Configuration of the Rackmount Model	INTR 01-0140
1.3.3 Configuration of Rackmount Model with RK40 Rack Frame	INTR 01-0180
1.4 Configuration of Internal Power Supply System	INTR 01-0190
1.5 Configuration of Internal Data System	INTR 01-0230
1.6 Configuration of Built-in Software	INTR 01-0310
1.6.1 Block Diagram of Built-in Software Configuration	INTR 01-0310
1.6.2 Storages for Parameters	INTR 01-0340
Chapter 2. Major Specifications of the Subsystem	INTR 02-0000
2.1 Basic Specifications of the Subsystem	INTR 02-0020
2.2 Basic Specifications of the Drive	INTR 02-0760

Chapter 3. Introduction of Operation.....	INTR 03-0000
3.1 Power On/Off Sequence	INTR 03-0000
3.1.1 IMPL Sequence	INTR 03-0000
3.1.2 Disk Drive Powering On Sequence	INTR 03-0020
3.1.3 Sequential Shutdown	INTR 03-0060
3.2 Data Format	INTR 03-0070
3.3 Read/Write Operation	INTR 03-0080
3.3.1 Command Execution	INTR 03-0080
3.3.2 Dual System Configuration.....	INTR 03-0100
3.4 Cache Memory Control	INTR 03-0110
3.4.1 Purpose of Cache Memory	INTR 03-0110
3.4.2 Cache Memory Configuration.....	INTR 03-0120
3.4.3 Cache Memory Structure.....	INTR 03-0130
3.4.4 Basic Operation of Cache Control	INTR 03-0150
3.4.5 Destaging Operation	INTR 03-0160
3.4.6 Staging Operation (Writing to the Cache Memory)	INTR 03-0170
3.5 Optional Functions.....	INTR 03-0180
3.6 Operation Against Disk Failure Occurs.....	INTR 03-0220
3.7 Setting RAID Group	INTR 03-0340
3.8 Online Verify.....	INTR 03-0430
3.9 Setting of LAN Interface	INTR 03-0460
Chapter 4. Outline of P.P.....	INTR 04-0000
4.1 P.P.s Required for Maintenance	INTR 04-0000

[Installation]

Chapter 1. Before Starting Installation Work.....	INST 01-0000
1.1 Before Starting Installation Work.....	INST 01-0000
1.2 Model Name.....	INST 01-0030
1.2.1 Components and Indispensable Parts	INST 01-0030
1.2.2 Optional Parts	INST 01-0060
1.2.3 Accessory Parts	INST 01-0070
1.3 Installation Configuration of the Subsystem.....	INST 01-0080
1.4 How to Open/Close Door or Attach/Remove Front Bezel/ Rear Door of the Subsystem	INST 01-0100
1.4.1 How to Attach/Remove Front Bezel of the Rackmount Model.....	INST 01-0100
1.4.2 How to Open/Close the Rear Door of RK40 Rack Frame	INST 01-0120

1.5	Power On/Off Procedure	INST 01-0130
1.5.1	Subsystem Power On.....	INST 01-0140
1.5.2	Subsystem Power Off (Sequential Shutdown).....	INST 01-0160
1.6	Setting the Power Control Mode (Local/Remote Mode)	INST 01-0170
Chapter 2. Installing Rackmount Model.....		INST 02-0000
2.1	Procedures for Installing Rackmount Model	INST 02-0000
2.2	Unpacking and Installing Rack Frame.....	INST 02-0030
2.2.1	RK40 Rack Frame (Unpacking/Installing and Installation Areas/ Maintenance Areas)	INST 02-0030
2.2.2	HP Rack Frame	INST 02-0150
2.2.3	Sun StorEdge Rack Frame	INST 02-0210
2.2.4	RS6000 Rack Frame	INST 02-0260
2.3	Unpacking the Subsystems.....	INST 02-0310
2.4	Installing the Rackmount Model	INST 02-0330
2.4.1	Work Procedure before Installing the Rack Mounting	INST 02-0330
2.4.2	Removing Components	INST 02-0330
2.4.3	Mounting on Rack Frame	INST 02-0400
2.4.4	Mounting Lifter on Rack Frame	INST 02-0410
2.4.5	Mounting Subsystem on Rack Frame	INST 02-0430
2.4.6	Fastening the Subsystem.....	INST 02-0450
2.4.7	Installing Components	INST 02-0490
2.4.8	Connecting the Cables	INST 02-0610
2.4.9	Connecting the Interface Cables	INST 02-0650
2.4.10	Connecting the ENC Cables	INST 02-0700
2.4.11	Connecting the Power Cables.....	INST 02-0800
2.4.12	Connecting the Power Cables (Rack Frame PDB)	INST 02-0820
2.4.13	Attaching Decoration Panels.....	INST 02-0830
2.4.14	Closing Door or Attaching Front Bezel	INST 02-0840
2.5	Installing RKAKX	INST 02-0850
2.5.1	Removing Components	INST 02-0850
2.5.2	Mounting the RKAKX on Rack Frame	INST 02-0880
2.5.3	Installing Components	INST 02-0970
2.5.4	Installing the Cables Routing Bars	INST 02-1020
2.5.5	Connecting the Cables	INST 02-1040
2.5.6	Connecting the ENC Cables.....	INST 02-1100
2.5.7	Connecting the Power Cables	INST 02-1220
2.5.8	Routing the Cables.....	INST 02-1240

[Firmware]

Chapter 1. Installation of Firmware	FIRM 01-0000
1.1 Materials Necessary for Installation.....	FIRM 01-0000
1.2 Outline of Procedure for Installation (Update Installation)	FIRM 01-0010
1.3 Preparation for Installation of Firmware.....	FIRM 01-0020
1.3.1 Hierarchy of Firmware Storage Directories	FIRM 01-0020
1.4 Procedure for Installation	FIRM 01-0030
1.4.1 The Point to be Checked before Installation	FIRM 01-0030
1.4.2 Update Installation of Firmware.....	FIRM 01-0050
1.4.3 Procedure for the Version Downgrade	FIRM 01-0810
1.5 Checking the Start and the Termination of the ENC Firmware Automatic Download	FIRM 01-0830
1.6 Checking the Start and End of the Drive Firmware Automatic Download	FIRM 01-0860
1.7 Restrictions of the Version Downgrade of the Firmware	FIRM 01-0910
1.8 Adaptable Firmware Revision	FIRM 01-0920
Chapter 2. Procedure for Recovery from a Failure	FIRM 02-0000
2.1 Procedure for Recovery from a Failure during Installation	FIRM 02-0000
Chapter 3. Procedure for Isolating Cause of Disk Drive Failure when “Install partially complete” Message is Output	FIRM 03-0000
3.1 Procedure for Checking whether System Copy Operation Occurred	FIRM 03-0020
3.2 Procedure for Checking the Status of System Copy Complete	FIRM 03-0030

[System Parameter]

Chapter 1. Setting (Hitachi Storage Navigator Modular 2)	SYS-PR 01-0000
1.1 Procedure for Connecting Hitachi Storage Navigator Modular 2 with the Subsystem	SYS-PR 01-0020
1.2 LAN Port Number Change by Hitachi Storage Navigator Modular 2	SYS-PR 01-0120
Chapter 2. Setting Host Group/Targets	SYS-PR 02-0000
2.1 Before Setting Host Group/Targets	SYS-PR 02-0000
2.2 Setting of Option	SYS-PR 02-0010
2.3 Setting LU Mapping	SYS-PR 02-0080
2.3.1 LUN Assignment and Release of the Fibre Model	SYS-PR 02-0080
2.3.2 LUN Assignment and Release of the iSCSI Model	SYS-PR 02-0100
2.3.3 Setting Mapping Guard	SYS-PR 02-0114
2.4 Setting Target Information	SYS-PR 02-0120

2.5	Setting CHAP Authentication.....	SYS-PR 02-0170
2.6	Setting of Fibre Channel	SYS-PR 02-0210
2.7	Setting of iSCSI	SYS-PR 02-0250
Chapter 3.	Setting the RAID/LU/Spare Disk	SYS-PR 03-0000
3.1	Preparation of RAID/LU Setting.....	SYS-PR 03-0020
3.2	RAID Group Setting	SYS-PR 03-0030
3.3	Setting of LU.....	SYS-PR 03-0130
3.4	Setting of Spare Disk	SYS-PR 03-0390
3.5	Checking the Status of Disk Drive	SYS-PR 03-0430
3.6	Checking the Disk Drive which Configures the RAID Group.....	SYS-PR 03-0460
3.7	LU Unification	SYS-PR 03-0480
Chapter 4.	Setting Configuration Information.....	SYS-PR 04-0000
4.1	Before Setting Configuration Information.....	SYS-PR 04-0000
4.2	Configuration Settings.....	SYS-PR 04-0020
Chapter 5.	Setting Host Connection Parameters	SYS-PR 05-0000
5.1	Simple Setting for Connecting to the Host Computer.....	SYS-PR 05-0000
5.2	When Using the Subsystem in Drive Detach Mode	SYS-PR 05-0080
Chapter 6.	Setting an Extra-cost Optional Feature	SYS-PR 06-0000
Chapter 7.	System Parameter Setting List	SYS-PR 07-0000
Chapter 8.	E-mail Alert Function	SYS-PR 08-0000
8.1	Outline.....	SYS-PR 08-0000
8.1.1	Overview and Restriction	SYS-PR 08-0000
8.2	Details of Sent Mails	SYS-PR 08-0010
8.2.1	Examples of Sent Mails	SYS-PR 08-0010
8.2.2	Details of the Sent Mail Format.....	SYS-PR 08-0020
8.2.3	List of Failure Report Messages.....	SYS-PR 08-0030
8.3	Setting Procedure.....	SYS-PR 08-0040
8.3.1	Displaying Setting Window.....	SYS-PR 08-0050
8.3.2	Checking E-mail Alert Disabled	SYS-PR 08-0070
8.3.3	Entering Setting Items.....	SYS-PR 08-0080
8.3.4	Sending a Test Mail	SYS-PR 08-0100
8.3.5	Maintenance when the Mail Does Not Reach the Destination.....	SYS-PR 08-0110
8.3.6	Enabling E-mail Alert	SYS-PR 08-0140
8.4	Procedure for Canceling E-mail Error Report.....	SYS-PR 08-0150
8.4.1	Canceling E-mail Error Report	SYS-PR 08-0150
8.5	Correspondence by Report Messages	SYS-PR 08-0160

Chapter 9. Setting Tuning Parameter	SYSPR 09-0000
9.1 Before Setting Tuning Parameter	SYSPR 09-0000
9.2 Setting of Tuning Parameter	SYSPR 09-0010
Chapter 10. Setting Air Filter Information	SYSPR 10-0000
10.1 Before Setting Air Filter Information	SYSPR 10-0000
10.2 Setting Air Filter Information	SYSPR 10-0010
Chapter 11. Setting SATA Write & Compare	SYSPR 11-0000
11.1 Before Setting SATA Write & Compare	SYSPR 11-0000
11.2 Setting SATA Write & Compare	SYSPR 11-0010
Chapter 12. Data At Rest Encryption Master Authentication Key	SYSPR 12-0000
12.1 Backing Up the Master Authentication Key	SYSPR 12-0000
12.2 Restoring the Master Authentication Key	SYSPR 12-0020

[Addition/Removal/Relocation]

Chapter 1. Adding Optional Components	ADD 01-0000
1.1 Before Starting Addition of Optional Components	ADD 01-0000
1.2 Procedures for Adding Optional Components	ADD 01-0020
1.2.1 Unpacking	ADD 01-0100
1.3 Mounting on Rack Frame	ADD 01-0110
1.4 Adding Optional Components	ADD 01-0120
1.4.1 Subsystems Optional Components for Addition	ADD 01-0120
1.4.2 Adding a Control Unit	ADD 01-0130
1.4.3 Adding a Disk Drive	ADD 01-0190
1.4.4 Adding a Cache Unit	ADD 01-0390
1.4.5 Adding a FC Interface Board	ADD 01-0450
1.4.6 Adding an iSCSI Interface Board	ADD 01-0510
1.4.7 Adding a Cache Backup Battery	ADD 01-0570
1.4.8 Adding an Additional Battery Box	ADD 01-0580
1.5 Adding Other Optional Devices	ADD 01-0620
1.5.1 Other Optional Additional Devices	ADD 01-0620
1.5.2 Mounting a PDB (A-F6516-PDU6)	ADD 01-0630
1.6 Adding the Additional Subsystem to the Rack Frame	ADD 01-0660
1.6.1 Procedure for Adding the Additional Subsystem to the Subsystem of Rackmount Model with RK40 Rack Frame	ADD 01-0660
1.6.2 Connection and Recognition of the Additional Chassis	ADD 01-0740

Chapter 2. Removing Optional Components.....	ADD 02-0000
2.1 Before Starting Removal of Optional Components	ADD 02-0000
2.1.1 Preparatory Works for Removal.....	ADD 02-0020
2.2 Procedures for Removing Optional Components.....	ADD 02-0100
2.3 Removing Additional Subsystem on Rack Frame	ADD 02-0130
2.4 Removing Optional Components.....	ADD 02-0170
2.4.1 Subsystems Optional Components for Removal	ADD 02-0170
2.4.2 Removing a Control Unit	ADD 02-0180
2.4.3 Removing a Disk Drive	ADD 02-0220
2.4.4 Removing a Cache Unit.....	ADD 02-0310
2.4.5 Removing a FC Interface Board	ADD 02-0380
2.4.6 Removing an iSCSI Interface Board.....	ADD 02-0430
2.4.7 Removing a Cache Backup Battery	ADD 02-0481
2.4.8 Removing a Additional Battery Box	ADD 02-0484
2.5 Removing Other Optional Devices.....	ADD 02-0490
2.5.1 Other Optional Removal Devices	ADD 02-0490
2.5.2 Removing a PDB (A-F6516-PDU6)	ADD 02-0500
Chapter 3. Relocation/Removal Work.....	ADD 03-0000
3.1 Before Starting Relocation/Removal Work	ADD 03-0000
3.2 Procedures for Relocating or Removing Rackmount Model.....	ADD 03-0020
3.2.1 Disconnecting the Power Cables.....	ADD 03-0050
3.2.2 Disconnecting the Power Cables (for Supplying Power to Rack Frame)	ADD 03-0060
3.2.3 Disconnecting Interface Cables	ADD 03-0070
Chapter 4. Drive Replacement for Changing the Drive Type.....	ADD 04-0000
4.1 Before Starting Replacement	ADD 04-0000
4.2 Procedure for Replacing Drives for Changing the Drive Type.....	ADD 04-0020
4.3 Removing the Disk Drives	ADD 04-0040
4.4 Installing Disk Drives.....	ADD 04-0060

[Troubleshooting]

Chapter 1. Flowchart for Troubleshooting.....	TRBL 01-0000
Chapter 2. Before Maintenance Work	TRBL 02-0000
2.1 Precautions	TRBL 02-0000
2.2 Confirming and Setting RTC (Real Time Clock)	TRBL 02-0010
2.3 Indications and their Functions.....	TRBL 02-0030
Chapter 3. Before Starting WEB Connection	TRBL 03-0000
3.1 Procedure to WEB Connection	TRBL 03-0000

3.2	When the WEB has Already been Connected	TRBL 03-0070
3.3	Note on WEB Connecting	TRBL 03-0080
3.4	Procedure for Specifying Maintenance Port IP Address	TRBL 03-0130
3.5	Procedure to Search IP Address of Maintenance Port	TRBL 03-0140
Chapter 4.	Trouble Analysis by WEB Connection	TRBL 04-0000
4.1	Confirm State of Unit	TRBL 04-0010
4.2	Confirm State of Each Part	TRBL 04-0040
4.3	Confirm Log Messages	TRBL 04-0100
4.4	TrueCopy remote replication/ TrueCopy Extended Distance Path Confirm State	TRBL 04-0170
4.5	The Priority Error Messages when “CTL alarm” is Displayed	TRBL 04-0180
Chapter 5.	Procedure for Investigating Disk Array System Regarding Fibre Channel Failure	TRBL 05-0000
Chapter 6.	Details of Recovery Methods	TRBL 06-0000
6.1	Error Recovery Methods	TRBL 06-0000
6.1.1	System Down	TRBL 06-0020
6.1.2	The Subsystem does not Become Ready : Case 1 (Loading Failure)	TRBL 06-0050
6.1.3	The Failure Occurred Immediately after Being Ready (Forced Parity Correction)	TRBL 06-0110
6.1.4	The Power cannot be Turned Off : Case 1 (The Number of PIN Data is Too Large)	TRBL 06-0550
6.1.5	The Power cannot be Turned Off : Case 2 (Hardware Failure)	TRBL 06-0580
6.1.6	The Power cannot be Turned Off : Case 3 (Control Unit Failure)	TRBL 06-0600
6.1.7	The Power cannot be Turned Off : Case 4 (Cache Memory Failure)	TRBL 06-0620
6.1.8	Data Recovery does not Terminate Normally : Case 1 (Read Error)	TRBL 06-0640
6.1.9	Data Recovery does not Terminate Normally : Case 2 (Disk Drive Failure)	TRBL 06-0650
6.1.10	Data Recovery does not Terminate Normally : Case 3 (Spare Disk Drive Failure)	TRBL 06-0670
6.1.11	A Failure Occurred during Operation : Case 1 (PIN Over)	TRBL 06-0690
6.1.12	A Failure Occurred during Operation : Case 2 (LA/LRC Error)	TRBL 06-0720
6.1.13	A Failure Occurred during Operation : Case 3 (LU Blockade)	TRBL 06-0740
6.1.14	A Failure Occurred during Operation : Case 4 (Incomplete Writing)	TRBL 06-0760
6.1.15	The Incomplete Write Area was Registered in the Restored VOL..	TRBL 06-0770

6.1.16	Recovery Method of the Modular Volume Migration which Terminated Abnormally	TRBL 06-0790
6.1.17	Path Blockade Occurs in the TrueCopy remote replication/ TrueCopy Extended Distance Function	TRBL 06-0820
6.1.18	Recovery Method for Disk Drives which Skipped Drive Firmware Replacement	TRBL 06-0920
6.1.19	Recovery Method when the Subsystem Down of the Array Occurred due to the Incorrect ENC Cable Connection ..	TRBL 06-0930
6.1.20	Recovery Method when a Power Unit Failure of the Additional Chassis Occurred	TRBL 06-0950
6.1.21	Recovery Method when the Creation of the SSL User Certificate File Failed	TRBL 06-0960
6.1.22	Recovery Method when Detecting the Mismatch of the Control Unit Model Names between the Control Units..	TRBL 06-0980
6.1.23	Recovery Method when an Error of the Additional Battery Box Connection was Detected	TRBL 06-1010
6.1.24	Recovery Method when the Spin-up of the System Drive Failed ...	TRBL 06-1030
6.1.25	Recovery Method when the Subsystem went Down because the Load of the DP Management Information.....	TRBL 06-1060
6.1.26	Recovery Method when the Firmware Detected an Error of the DP Management Information and the Control Unit was Blocked ...	TRBL 06-1120
6.1.27	Recovery Method when the Disk Drive Serial Number Acquired at the time of Starting the Subsystem and the Serial Number of the Configuration Information do not Match	TRBL 06-1140
6.1.28	Procedure for Starting the Subsystem by Removing the Failed Disk Drive when the Subsystem is not Ready	TRBL 06-1160
6.1.29	Failure Determination and Recovery Methods of Fibre Channel Port Path	TRBL 06-1200
6.1.30	Recovery Method when the Multiple Suspected Failed Parts were Detected in the Backend.....	TRBL 06-1340
6.1.31	Recovery Method when Write to the Cache Data (Pseudo Planned Shutdown) Failed in the LT Short Version SELF HEATRUN System .	TRBL 06-1380
6.1.32	Recovery Method when the Version Downgrade to the Firmware which does not Support the SATA Drives Failed	TRBL 06-1430
6.1.33	The Recovery Method when the Copy-Back Operates Regardless of the Copy-Back-Less Setting if Power Saving is Enabled and Performs the Drive Restoration	TRBL 06-1470
Chapter 7.	Collecting Error Information.....	TRBL 07-0000
7.1	Time to Collect Failure Information	TRBL 07-0010
7.2	Judge Collection of Failure Information	TRBL 07-0020
7.3	Collecting Simple Trace.....	TRBL 07-0040
7.4	Collecting CTL Alarm Trace	TRBL 07-0090

7.5 Collecting Full Dump	TRBL 07-0140
Chapter 8. Trouble Analysis by LED Indication	TRBL 08-0000
8.1 Trouble Analysis by LED Indication of Front Bezel.....	TRBL 08-0000
8.2 Trouble Analysis by LED Indication of Each Part.....	TRBL 08-0150
Chapter 9. Data Collection when a Failure Occurs in Program Product (P.P.) ...	TRBL 09-0000
9.1 Locating Failed Part	TRBL 09-0000
9.1.1 When a Failure Occurs in the DF800 Main Body	TRBL 09-0020
9.1.2 When a Failure Occurs in a Host System Server.....	TRBL 09-0020
9.1.3 When a Failure Occurs in a Server for Monitoring and Setting.....	TRBL 09-0020
9.2 List of Data to be Collected when a P.P. Failure Occurs	TRBL 09-0030
Chapter 10. Trouble Analysis by Failure Monitoring Function.....	TRBL 10-0000
10.1 Trouble Analysis by SNMP Agent Support Function.....	TRBL 10-0000
10.1.1 Maintenance with TRAP Codes	TRBL 10-0000
10.1.2 Maintenance with MIB (df Regression) Values.....	TRBL 10-0050
10.2 Trouble Analysis by Hitachi Storage Navigator Modular 2.....	TRBL 10-0080
10.2.1 Maintenance with the Hitachi Storage Navigator Modular 2 (GUI Version).....	TRBL 10-0080
10.2.2 Hitachi Storage Navigator Modular 2 Maintenance Function	TRBL 10-0090
10.2.3 Displaying Logical Unit Failure Data Information.....	TRBL 10-0100
10.2.4 Setting Pre-fetch Information	TRBL 10-0120
10.2.5 Setting a Threshold for Preventive Maintenance	TRBL 10-0150
10.2.6 Drive Maintenance.....	TRBL 10-0180
10.2.7 Setting a Mode for Reporting to the Host Using an SSB.....	TRBL 10-0200
10.2.8 Setting SATA Drive Options	TRBL 10-0230
10.2.9 Setting SATA Drive Restore Options	TRBL 10-0260
10.2.10 Replacing the Online ENC Firmware	TRBL 10-0280
10.2.11 Drive Performance Delay Diagnostic Function.....	TRBL 10-0310
10.2.12 Setting the Drive Firmware Download	TRBL 10-0350
10.2.13 Displaying Temperature in the Basic Unit.....	TRBL 10-0380
10.2.14 Setting the Host Reservation Forced Release Function	TRBL 10-0410
Chapter 11. Procedure for the iSCSI System Failure Determination on the Disk Array System Side	TRBL 11-0000
Chapter 12. Procedure for Online ENC Firmware Download.....	TRBL 12-0000
12.1 Outline of Online ENC Firmware Download	TRBL 12-0000
12.2 Preconditions for Online ENC Firmware Download.....	TRBL 12-0010
12.3 Restriction and Notes of Online ENC Firmware Download	TRBL 12-0020
12.3.1 Restriction	TRBL 12-0020
12.3.2 Precautions	TRBL 12-0030
12.4 Time Required for Online ENC Firmware Download	TRBL 12-0040

12.5	Before Starting Online ENC Firmware Download	TRBL 12-0050
12.5.1	Hierarchy of ENC Firmware Storage Directories	TRBL 12-0060
12.6	Procedure for Online ENC Firmware Download	TRBL 12-0070
12.6.1	Flowchart	TRBL 12-0080
12.6.2	Connecting the PC Used for Maintenance	TRBL 12-0090
12.6.3	Online ENC Firmware Download	TRBL 12-0120
12.7	Procedure for Displaying ENC Firmware Revision Using Web	TRBL 12-0240
Chapter 13.	Procedure for Offline ENC Firmware Download	TRBL 13-0000
13.1	Offline ENC Firmware Download Overview	TRBL 13-0000
13.2	Offline ENC Firmware Download Prerequisites	TRBL 13-0010
13.3	Restriction and Notes of Offline ENC Firmware Download	TRBL 13-0040
13.4	Offline ENC Firmware Download Time	TRBL 13-0050
13.5	Before Beginning an Offline ENC Firmware Download	TRBL 13-0070
13.5.1	Hierarchy of ENC Firmware Storage Directories	TRBL 13-0100
13.6	Offline ENC Firmware Download Procedure (Dual Controller)	TRBL 13-0110
13.6.1	Flowchart (General)	TRBL 13-0120
13.6.2	Flowchart (Detailed)	TRBL 13-0140
13.6.3	Connecting the PC Used for Maintenance	TRBL 13-0150
13.6.4	Deleting Browser History Information	TRBL 13-0180
13.6.5	Downloading Offline ENC Firmware	TRBL 13-0210
13.7	Offline ENC Firmware Download Procedure (Single Controller)	TRBL 13-0320
13.7.1	Flowchart (General)	TRBL 13-0330
13.7.2	Flowchart (Detailed)	TRBL 13-0350
13.7.3	Offline ENC Firmware Download Procedure Screen (Single Controller)	TRBL 13-0360
13.8	Offline ENC Firmware Download Web Display Screen	TRBL 13-0370
13.8.1	URLs	TRBL 13-0370
13.8.2	Web Screen Image	TRBL 13-0380
13.8.3	Side Frame and Top Frame Image Screen Details	TRBL 13-0390
13.8.4	Select Frame Image Screen Details	TRBL 13-0400
13.9	Procedure for Invalidating the Automatic ENC Firmware Downloading Function	TRBL 13-0410
Chapter 14.	Procedure for Replacing the Online Drive Firmware	TRBL 14-0000
14.1	Overview of the Online Drive Firmware Replacement Function	TRBL 14-0000
14.2	Prerequisites	TRBL 14-0010
14.3	Restrictions	TRBL 14-0020
14.4	Online Drive Firmware Replacement Time	TRBL 14-0020
14.5	Before Replacing the Online Drive Firmware	TRBL 14-0030

14.6	Procedure for Replacing the Online Drive Firmware.....	TRBL 14-0040
14.6.1	Replacing Procedure	TRBL 14-0040
14.6.2	Procedure Screen	TRBL 14-0070
14.7	Web Screen of the Drive Firmware	TRBL 14-0100
14.7.1	URL.....	TRBL 14-0100
14.7.2	Web Screen Image	TRBL 14-0100
14.8	Method of Checking the Drive Firmware Revision	TRBL 14-0130
14.8.1	The Check Method by WEB Connection	TRBL 14-0130
14.8.2	The Check Method by Trace Analysis	TRBL 14-0150
14.8.3	The Procedure to Check the Drive Firmware Revision Using the Hitachi Storage Navigator Modular 2.....	TRBL 14-0160
Chapter 15.	Procedure for Replacing the Offline Drive Firmware.....	TRBL 15-0000
15.1	Overview of the Offline Drive Firmware Replacement Function	TRBL 15-0000
15.2	Prerequisites	TRBL 15-0020
15.3	Restrictions.....	TRBL 15-0040
15.4	Offline Drive Firmware Replacement Time	TRBL 15-0041
15.5	Before Replacing the Offline Drive Firmware.....	TRBL 15-0050
15.6	Procedure for Replacing the Offline Drive Firmware	TRBL 15-0070
15.6.1	Replacing Procedure	TRBL 15-0070
15.6.2	Procedure Screen	TRBL 15-0170
15.7	Web Screen of the Drive Firmware	TRBL 15-0240
15.7.1	URL.....	TRBL 15-0240
15.7.2	Web Screen Image	TRBL 15-0240
15.8	Method of Checking the Drive Firmware Revision.....	TRBL 15-0270
15.8.1	The Check Method by WEB Connection	TRBL 15-0270
15.8.2	The Check Method by Trace Analysis.....	TRBL 15-0290
15.8.3	The Procedure to Check the Drive Firmware Revision Using the Hitachi Storage Navigator Modular 2.....	TRBL 15-0300

[Message]

Chapter 1.	Before Starting Trouble Analysis	MSG 01-0000
Chapter 2.	CUDG Detected Messages.....	MSG 02-0000
Chapter 3.	Failure Messages	MSG 03-0000
Chapter 4.	Progress Messages	MSG 04-0000
Chapter 5.	Flash Detected Messages	MSG 05-0000
Chapter 6.	Warning Messages.....	MSG 06-0000

Chapter 7. Web Error Messages	MSG 07-0000
7.1 Web Error Messages (Uploading Function)	MSG 07-0000
7.2 Web Error Messages (Simple Trace)	MSG 07-0100
7.3 Web Error Messages (Web Control Management)	MSG 07-0110
Chapter 8. Hitachi Storage Navigator Modular 2 Error Messages	MSG 08-0000
Chapter 9. Failure Analysis by Sense Data	MSG 09-0000
9.1 Details of Sense Code	MSG 09-0000
9.2 List of Detail Codes of Sense Code (5/9FFE)	MSG 09-0220
9.3 List of Detail Codes of Sense Code (5/9FFF)	MSG 09-0890
Chapter 10. Failure Factor Codes of the Modular Volume Migration	MSG 10-0000

[Replacement]

Chapter 1. Before Starting Maintenance Work	REP 01-0000
1.1 Before Starting Maintenance Work	REP 01-0000
1.1.1 Cautionary Notes	REP 01-0000
1.1.2 Checking Cache Memory in the Back-up State	REP 01-0040
1.1.3 Procedure for Making Sure of Model Name and Drive Firmware of Disk Drive	REP 01-0110
Chapter 2. Parts Replacement	REP 02-0000
2.1 Locations of Replacement Components	REP 02-0000
2.1.1 Part Locations of Rackmount Model	REP 02-0020
2.2 Replacement of Components	REP 02-0030
2.2.1 Replacing Disk Drive	REP 02-0030
2.2.2 Replacing Cache Backup Battery	REP 02-0280
2.2.3 Replacing FAN Unit	REP 02-0350
2.2.4 Replacing Power Unit	REP 02-0390
2.2.5 Replacing Control Unit	REP 02-0450
2.2.6 Replacing Cache Unit	REP 02-0640
2.2.7 Replacing Interface Board	REP 02-0800
2.2.8 Replacing Host Connector	REP 02-0950
2.2.9 Replacing ENC Unit	REP 02-1020
2.2.10 Replacing ENC Cable	REP 02-1110
2.2.11 Replacing Basic Chassis of Rack Mount Style	REP 02-1160
2.2.12 Replacing Additional Chassis of Rack Mount Style	REP 02-1220
2.2.13 Replacing Remote Adapter	REP 02-1260
2.2.14 Replacing an Additional Battery Box	REP 02-1280
2.2.15 Replacing Front Bezel	REP 02-1360

Chapter 3. Periodic Maintenance	REP 03-0000
3.1 Periodic Maintenance Items	REP 03-0000
3.2 Inspecting and Cleaning Rackmount Model with RK40 Rack Frame	REP 03-0010
3.2.1 Inspecting Fans	REP 03-0010
3.2.2 Cleaning the Subsystem	REP 03-0020
3.3 Replacing Periodical Replacement Parts	REP 03-0040
3.3.1 Replacing Battery	REP 03-0040
3.3.2 Replacing the Air Filter of the Front Bezel	REP 03-0050
Chapter 4. Maintenance Tools.....	REP 04-0000
4.1 Maintenance Tools for Hardware	REP 04-0000
4.2 Maintenance Tools for Software	REP 04-0010
Chapter 5. Recycling	REP 05-0000

[Parts Catalog]

Chapter 1. Parts Catalog.....	PARTS 01-0000
1.1 How to Use This Parts Catalog	PARTS 01-0000
1.2 System of Parts Catalog.....	PARTS 01-0010
1.3 Parts Catalog	PARTS 01-0020

[WEB]

Chapter 1. Before Using Web	WEB 01-0000
1.1 The Operating Environment	WEB 01-0000
1.2 Notices on (Restriction of) the Support Browser.....	WEB 01-0010
1.3 The Characteristic of the Network Function	WEB 01-0030
1.4 Support Browser List	WEB 01-0060
1.5 Displaying the Special Window.....	WEB 01-0070
Chapter 2. The Normal Mode Operation Procedure	WEB 02-0000
2.1 Transferring to the Normal Mode.....	WEB 02-0000
2.2 Screen Outline.....	WEB 02-0010
2.3 Main Screen of the Normal Mode	WEB 02-0030
2.4 Display of Exchangeable Parts Status (Parts Information).....	WEB 02-0060
2.5 Information Message.....	WEB 02-0110
2.6 Network Information	WEB 02-0120
2.7 Collecting Simple Trace.....	WEB 02-0130
2.8 Collecting CTL Alarm Trace	WEB 02-0160
2.9 Host Command Trace Download	WEB 02-0190

Chapter 3. The Maintenance Mode Operation Procedure	WEB 03-0000
3.1 Transferring to the Maintenance Mode	WEB 03-0000
3.1.1 WEB Operation in the Maintenance Mode During the Cache Memory Access Failure	WEB 03-0050
3.2 Reference/Setting of the System Parameter and Initialize	WEB 03-0060
3.2.1 Subsystem	WEB 03-0070
3.2.2 Host Interface	WEB 03-0120
3.2.3 Network.....	WEB 03-0160
3.2.4 Name	WEB 03-0210
3.2.5 ALL	WEB 03-0250
3.3 Setup	WEB 03-0270
3.3.1 Microprogram	WEB 03-0270
3.3.2 Master Authentication Key for SED	WEB 03-0381
3.4 Reference	WEB 03-0390
3.4.1 Information Message.....	WEB 03-0390
3.5 Trace/Dump	WEB 03-0400
3.5.1 Collecting Simple Trace.....	WEB 03-0400
3.5.2 Collecting CTL Alarm Trace	WEB 03-0430
3.5.3 Collecting Full Dump	WEB 03-0460
3.5.4 Collecting Full Dump (Full Dump (SnapShot/TCE))	WEB 03-0500
3.6 Other.....	WEB 03-0530
3.7 Return Method to the Normal Mode.....	WEB 03-0540

[REV]

