



System i and System p
Physical Site Planning and Preparation





System i and System p

Physical Site Planning and Preparation

Note

Before using this information and the product it supports, read the information in “Notices” on page 75 and the *IBM Systems Safety Information* manual, G229-9054.

Twelfth Edition (September 2007)

© Copyright International Business Machines Corporation 2004, 2007. All rights reserved.

US Government Users Restricted Rights – Use, duplication or disclosure restricted by GSA ADP Schedule Contract with IBM Corp.

Contents

Safety and environmental notices	v
---	----------

About this topic	ix
-------------------------	-----------

Physical site planning and preparation	1
---	----------

Site selection	2
Access	2
Static electricity and floor resistance	3
Space requirements	4
Floor construction and floor loading	5
Raised floors	5
Conductive contamination	7
Computer room layout	8
Vibration and shock	11
Lighting	13
Acoustics	14
Electromagnetic compatibility	15
Computer room location	16
Material and data storage protection	18
Emergency planning for continuous operations	19
General power information	19
Power quality	20
Voltage and frequency limits	25
Power load	25
Power source	26
Dual-power installation configurations	28
Dual-power installation - Redundant distribution panel and switch	28
Dual-power installation - Redundant distribution panel	28
Single distribution panel - Dual circuit breakers	29
Air conditioning determination	29
General guidelines for data centers	30
Temperature and humidity design criteria	37
Temperature and humidity recording instruments	39
Relocation and temporary storage	40
Acclimation	40
System air distribution	40
Planning for the installation of IBM Rear Door Heat Exchanger for 7014-T42	44
Heat exchanger specifications	44
Water specifications for the secondary cooling loop	48
Water delivery specifications for secondary loops	50
Layout and mechanical installation	57
Heat exchanger installation overview	57
Heat exchanger filling and draining overview	57
Raised floor and non-raised floor environments	58
Planning for heat exchangers in a raised floor environment	58
Planning for heat exchangers in a non-raised floor environment	65
Suggested sources for secondary loop components	67
Cooling distribution unit suppliers	68
Flexible hose suppliers	68
Water treatment supplier	69
Installation and support from IBM Integrated Technology Services Offerings	69
Planning for communications	70

Appendix. Accessibility features	73
---	-----------

Notices	75
Trademarks	76
Electronic emission notices	76
Class A Notices	76
Class B Notices	80
Terms and conditions	82

Safety and environmental notices

Safety notices may be printed throughout this guide:

- **DANGER** notices call attention to a situation that is potentially lethal or extremely hazardous to people.
- **CAUTION** notices call attention to a situation that is potentially hazardous to people because of some existing condition.
- **Attention** notices call attention to the possibility of damage to a program, device, system, or data.

World Trade safety information

Several countries require the safety information contained in product publications to be presented in their national languages. If this requirement applies to your country, a safety information booklet is included in the publications package shipped with the product. The booklet contains the safety information in your national language with references to the U.S. English source. Before using a U.S. English publication to install, operate, or service this product, you must first become familiar with the related safety information in the booklet. You should also refer to the booklet any time you do not clearly understand any safety information in the U.S. English publications.

Laser safety information

IBM® System i™ models and System p™ servers can use I/O cards or features that are fiber-optic based and that utilize lasers or LEDs.

Laser compliance

All lasers are certified in the U.S. to conform to the requirements of DHHS 21 CFR Subchapter J for class 1 laser products. Outside the U.S., they are certified to be in compliance with IEC 60825 as a class 1 laser product. Consult the label on each part for laser certification numbers and approval information.

CAUTION:

This product might contain one or more of the following devices: CD-ROM drive, DVD-ROM drive, DVD-RAM drive, or laser module, which are Class 1 laser products. Note the following information:

- Do not remove the covers. Removing the covers of the laser product could result in exposure to hazardous laser radiation. There are no serviceable parts inside the device.
- Use of the controls or adjustments or performance of procedures other than those specified herein might result in hazardous radiation exposure.

(C026)

CAUTION:

Data processing environments can contain equipment transmitting on system links with laser modules that operate at greater than Class 1 power levels. For this reason, never look into the end of an optical fiber cable or open receptacle. (C027)

CAUTION:

This product contains a Class 1M laser. Do not view directly with optical instruments. (C028)

CAUTION:

Some laser products contain an embedded Class 3A or Class 3B laser diode. Note the following information: laser radiation when open. Do not stare into the beam, do not view directly with optical instruments, and avoid direct exposure to the beam. (C030)

Power and cabling information for NEBS (Network Equipment-Building System) GR-1089-CORE

The following comments apply to the IBM System i models and IBM System p servers that have been designated as conforming to NEBS (Network Equipment-Building System) GR-1089-CORE:

The equipment is suitable for installation in the following:

- Network telecommunications facilities
- Locations where the NEC (National Electrical Code) applies

The intrabuilding ports of this equipment are suitable for connection to intrabuilding or unexposed wiring or cabling only. The intrabuilding ports of this equipment *must not* be metalically connected to the interfaces that connect to the OSP (outside plant) or its wiring. These interfaces are designed for use as intrabuilding interfaces only (Type 2 or Type 4 ports as described in GR-1089-CORE) and require isolation from the exposed OSP cabling. The addition of primary protectors is not sufficient protection to connect these interfaces metalically to OSP wiring.

Note: All Ethernet cables must be shielded and grounded at both ends.

The ac-powered system does not require the use of an external surge protection device (SPD).

The dc-powered system employs an isolated DC return (DC-I) design. The DC battery return terminal *shall not* be connected to the chassis or frame ground.

Product recycling and disposal

This unit must be recycled or discarded according to applicable local and national regulations. IBM encourages owners of information technology (IT) equipment to responsibly recycle their equipment when it is no longer needed. IBM offers a variety of product return programs and services in several countries to assist equipment owners in recycling their IT products. Information on IBM product recycling offerings can be found on IBM's Internet site at <http://www.ibm.com/ibm/environment/products/prp.shtml>.

Esta unidad debe reciclarse o desecharse de acuerdo con lo establecido en la normativa nacional o local aplicable. IBM recomienda a los propietarios de equipos de tecnología de la información (TI) que reciclen responsablemente sus equipos cuando éstos ya no les sean útiles. IBM dispone de una serie de programas y servicios de devolución de productos en varios países, a fin de ayudar a los propietarios de equipos a reciclar sus productos de TI. Se puede encontrar información sobre las ofertas de reciclado de productos de IBM en el sitio web de IBM <http://www.ibm.com/ibm/environment/products/prp.shtml>.



EU Only

Note: This mark applies only to countries within the European Union (EU) and Norway.

Appliances are labeled in accordance with European Directive 2002/96/EC concerning waste electrical and electronic equipment (WEEE). The Directive determines the framework for the return and recycling of used appliances as applicable throughout the European Union. This label is applied to various products to indicate that the product is not to be thrown away, but rather reclaimed upon end of life per this Directive.

In accordance with the European WEEE Directive, electrical and electronic equipment (EEE) is to be collected separately and to be reused, recycled, or recovered at end of life. Users of EEE with the WEEE marking per Annex IV of the WEEE Directive, as shown above, must not dispose of end of life EEE as unsorted municipal waste, but use the collection framework available to customers for the return, recycling, and recovery of WEEE. Customer participation is important to minimize any potential effects of EEE on the environment and human health due to the potential presence of hazardous substances in EEE. For proper collection and treatment, contact your local IBM representative.

Battery return program

This product may contain sealed lead acid, nickel cadmium, nickel metal hydride, lithium, or lithium ion battery. Consult your user manual or service manual for specific battery information. The battery must be recycled or disposed of properly. Recycling facilities may not be available in your area. For information on disposal of batteries outside the United States, go to <http://www.ibm.com/ibm/environment/products/batteryrecycle.shtml> or contact your local waste disposal facility.

In the United States, IBM has established a return process for reuse, recycling, or proper disposal of used IBM sealed lead acid, nickel cadmium, nickel metal hydride, and other battery packs from IBM Equipment. For information on proper disposal of these batteries, contact IBM at 1-800-426-4333. Please have the IBM part number listed on the battery available prior to your call.

For Taiwan: Please recycle batteries.



For the European Union:



Note: This mark applies only to countries within the European Union (EU).

Batteries or packaging for batteries are labeled in accordance with European Directive 2006/66/EC concerning batteries and accumulators and waste batteries and accumulators. The Directive determines the framework for the return and recycling of used batteries and accumulators as applicable throughout the European Union. This label is applied to various batteries to indicate that the battery is not to be thrown away, but rather reclaimed upon end of life per this Directive.

In accordance with the European Directive 2006/66/EC, batteries and accumulators are labeled to indicate that they are to be collected separately and recycled at end of life. The label on the battery may also include a chemical symbol for the metal concerned in the battery (Pb for lead, Hg for mercury and Cd for cadmium). Users of batteries and accumulators must not dispose of batteries and accumulators as unsorted municipal waste, but use the collection framework available to customers for the return, recycling, and treatment of batteries and accumulators. Customer participation is important to minimize any potential effects of batteries and accumulators on the environment and human health due to the potential presence of hazardous substances. For proper collection and treatment, contact your local IBM representative.

For California: Perchlorate Material - special handling may apply. See www.dtsc.ca.gov/hazardouswaste/perchlorate.

The foregoing notice is provided in accordance with California Code of Regulations Title 22, Division 4.5 Chapter 33. Best Management Practices for Perchlorate Materials. This product/part may include a lithium manganese dioxide battery which contains a perchlorate substance.

IBM Cryptographic Coprocessor Card Return Program

The following information applies only for systems originally sold prior to July 1, 2006:

This machine may contain an optional feature, the cryptographic coprocessor card, which includes a polyurethane material that contains mercury. Please follow local ordinances or regulations for disposal of this card. IBM has established a return program for certain IBM Cryptographic Coprocessor Cards. More information can be found at <http://www.ibm.com/ibm/environment/products/prp.shtml>.

About this topic

This topic provides customers with site design guidelines for data centers.

For information about the accessibility features of this product, for users who have a physical disability, see “Accessibility features,” on page 73.

Physical site planning and preparation

These guidelines help you prepare your site for the delivery and installation of your server.

Site selection, building and space considerations

- Site selection
- Access
- Static electricity and floor resistance
- Space requirements
- Floor construction and floor loading
- Raised floors
- Conductive contamination
- Computer room layout

Site environment, safety, and security

- Vibration and shock
- Lighting
- Acoustics
- Electromagnetic compatibility
- Computer room location
- Material and data storage protection
- Emergency planning for continuous operations

Electrical power and grounding

- General power information
- Power quality
- Voltage and frequency limits
- Power load
- Power source
- Dual power installations

Air conditioning

- Air conditioning determination
- General guidelines for data centers
- Temperature and humidity design criteria
- Temperature and humidity recording instruments
- Relocation and temporary storage
- Acclimation
- System air distribution

Planning for the installation of rear door heat exchangers

- Planning for the installation of rear door heat exchangers
- Heat exchanger specifications
- Water specifications for the secondary cooling loop
- Water delivery specifications for secondary loops

- Layout and mechanical installation
- Suggested sources for secondary loop components

Communications

- Planning for communications

Site selection

The selection of a site for information technology equipment is the first consideration in planning and preparing for the installation. Determine whether a new site is to be constructed or alterations are to be performed on an existing site.

This section provides specific information on building location, structure, and space requirements for present and future needs.

Utilities

Power and communication facilities must be available in the quantities required for operation. If these are inadequate, contact the utility company to determine if additional services can be made available.

Exposure to hazards

Pollution, flooding, radio or radar interference, and hazards caused by nearby industries can cause problems to information technology equipment and recorded media. Any indication of exposure in these areas should be recognized and included in the planning of the installation.

Access

Define an access route from your loading dock to your data processing area before delivery of your server.

A preliminary check of the building will show if adequate access for the normal delivery of supplies and servers exists. A small alley, a narrow door opening, or limited access to the delivery area can become inhibitive to installation. The loading dock, passageways, and elevators should be able to accommodate heavy, oversized data processing support equipment such as air conditioning equipment.

Access route

Define an access route from the loading dock to the data processing area. A small alley (cannot accommodate delivery truck), a narrow door opening <914 mm (<36 in.), low height 2032 mm(<80 in.), or limited access to the delivery area can become inconvenient during the delivery process. If the heights of the truck bed and the dock surface do not match, the ramp angle should be such that the machine frame does not bottom out while taking it from the truck bed to the dock surface.

Within your site, ramps from hallways to computer-room floors should conform to the American Disabilities Acts (ADA). The ADA requirement states that the ramp should have a 1:12 relationship. For each inch of vertical height of the raised floor, one foot of ramp length should be provided. As an example, if the raised floor height is 12 inches, then the ramp length should be 12 feet. The ramps should also be strong enough to support the weight of the server while it is being moved over the surface. The hallways and doors should be wide enough and high enough to allow passage of the server, and ensure adequate turning radius in the hallway. The overhead clearance to pipes and ducts must be sufficient to allow movement of computer equipment, air conditioners, and electrical equipment. Most standard passenger elevators are rated for 1134 kg (2500 lb.). Selected information technology equipment, and some site infrastructure equipment such as air conditioning units might exceed 1134 kg (2500 lb.). Access to a freight elevator with a minimum rating of 1587 kg (3500 lb.) is recommended.

Review the access route from the loading dock to the computer room to prevent problems when moving the frames. Consider making a cardboard template to check the access route for height, width, and length interference. Employ qualified experts if special rigging is required to get the server from the loading dock to the computer room.

Because the dynamic loads of rolling frames are higher than the static loads of stationary frames, floor protection is required at delivery time. It is also important to consider the caster point loads. Some floors cannot withstand the force exerted by the casters of heavier systems. For example, caster point loads on some servers can be as high as 455 kg (1,000 lb.). This can penetrate, or otherwise damage, the surface of some floors.

It is also important to protect the raised floor from damage when moving servers or relocating processors in the computer room. Ten mm (3/8 in.) plywood sheeting provides adequate protection. For some of the heavier high-end servers, it is recommended that you use tempered masonite or plyon. Plywood might be too soft for the heavier servers.

Delivery and subsequent transportation of the equipment

DANGER

Heavy equipment—personal injury or equipment damage might result if mishandled. (D006)

You must prepare your environment to accept the new product based on the installation planning information provided, with assistance from an IBM Installation Planning Representative (IPR) or IBM authorized service provider. In anticipation of the equipment delivery, prepare the final installation site in advance so that professional movers or riggers can transport the equipment to the final installation site within the computer room. If for some reason, this is not possible at the time of delivery, you must make arrangements to have professional movers or riggers return to finish the transportation at a later date. Only professional movers or riggers should transport the equipment. The IBM authorized service provider can only perform minimal frame repositioning within the computer room, as needed, to perform required service actions. You are also responsible for using professional movers or riggers when you relocate or dispose of equipment.

Static electricity and floor resistance

Use these guidelines to minimize static electricity buildup in your data center.

Floor covering material can contribute to buildup of high static electrical charges as a result of the motion of people, carts, and furniture in contact with the floor material. Abrupt discharge of the static charges causes discomfort to personnel and might cause malfunction of electronic equipment.

Static buildup and discharge can be minimized by:

- Maintaining the relative humidity of the room within the server operating limits. Choose a control point that normally keeps the humidity between 35 percent and 60 percent. See the “Air conditioning determination” on page 29 for further guidance.
- Providing a conductive path to ground from a metallic raised floor structure including the metal panels.
- Grounding the raised floor metallic support structure (stringer, pedestals) to building steel at several places within the room. The number of ground points is based on the size of the room. The larger the room, the more ground points are required.
- Ensuring the maximum resistance for the flooring system is 2×10^{10} ohms, measured between the floor surface and the building (or an applicable ground reference). Flooring material with a lower resistance

will further decrease static buildup and discharge. For safety, the floor covering and flooring system should provide a resistance of no less than 150 kilohms when measured between any two points on the floor space 1 m (3 ft.) apart.

- Maintenance of antistatic floor coverings (carpet and tile) should be in agreement with the individual supplier's recommendations. Carpeted floor coverings must meet electrical conductivity requirements. Use only antistatic materials with low-propensity ratings.
- Using ESD-resistant furniture with conductive casters to prevent static buildup.

Measuring floor resistance

The following equipment is required for measuring floor resistance:

- A test instrument similar to an AEMC-1000 megohmmeter is required for measuring floor conductivity.

The following figure shows the typical test connection to measure floor conductivity.

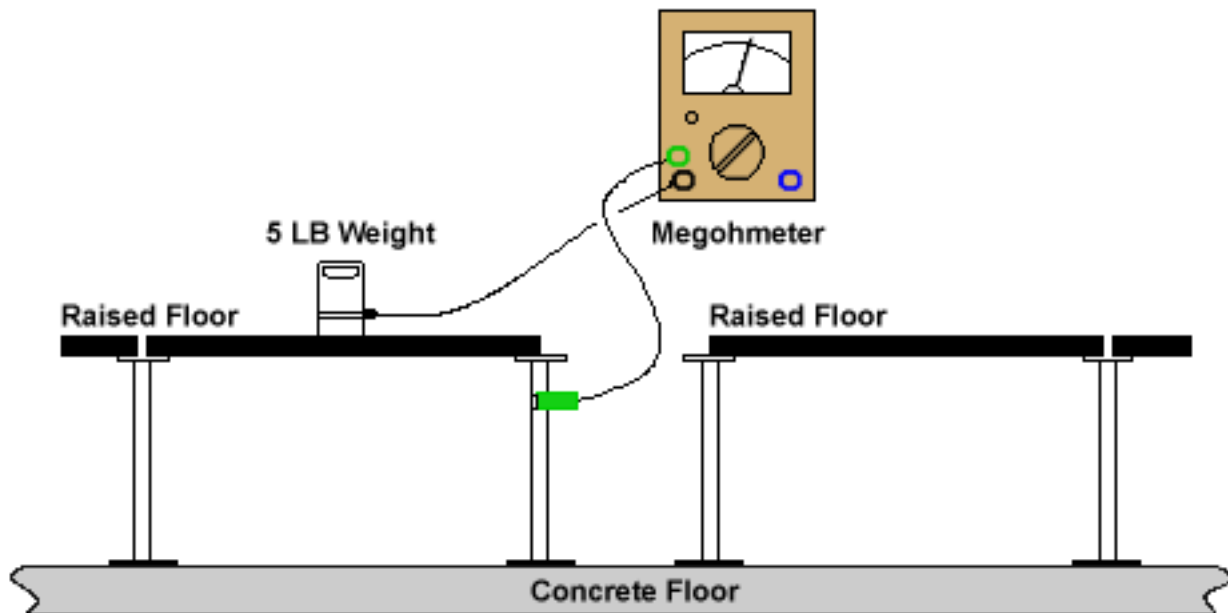


Figure 1. Typical test connection to measure floor conductivity

Space requirements

The floor area required for the equipment is determined by the specific servers to be installed, the location of columns, floor loading capacity, and provisions for future expansion.

See “Floor construction and floor loading” on page 5 to review floor loading and weight distribution for your system. When the amount of space is determined, allow for the addition of furniture, carts, and storage cabinets. Additional space, not necessarily in the computer area, is required for air conditioning, electrical, security systems, and fire protection equipment as well as for the storage of tapes, forms, and other supplies. Additional space might be needed to access the server (for example, rack-door-opening clearance). Plan to store all combustible materials in properly designed and protected storage areas.

A computer room or area should be separated from adjacent areas to allow for air conditioning, fire protection, and security. The floor-to-ceiling height must be sufficient to allow server top covers to open for service and should be adequate to allow air circulation from the data processing machine. Recommended heights are 2.6 m to 2.9 m (8 ft. 6 in. to 9 ft. 6 in.) from the building floor or (if used) from

the raised floor to ceiling, but higher ceilings are acceptable. In new construction or remodeling, the computer room area should have a minimum door width of 914 mm (36 in.). Because many machine frames are close to 914 mm (36 in.) in width, the use of a 1067 mm (42 in.) door width would be preferable. The door height should be a minimum of 2032 mm (80 in.) of unobstructed height (no threshold plate).

Floor construction and floor loading

Calculate the floor loads for your server with these formulas.

A floor loading assessment is the evaluation of the concrete subfloor, not the raised floor. The weight of the raised floor is considered in the floor loading formula.

The building floor must support the weight of the equipment to be installed. Although older devices might impose 345 kg/m² (75 lb./ft.²) on the building floor, a typical server design imposes a load of no more than 340 kg/m² (70 lb./ft.²). The following pounds-per-square-foot (lb./ft.²) formula is used to calculate floor loading. For assistance with floor load evaluation, contact a structural engineer.

Floor Loading (as calculated by IBM) is: (machine weight + (15 lb/ft² x 0.5 svc clear) + (10 lb/ft² x total area))/ total area

- The floor loading should not exceed 240 kg/m² (50 lb./ft.²) with a partition allowance of 100 kg/m² (20 lb./ft.²) for a total floor load rating of 340 kg/m² (70 lb./ft.²).
- The raised-floor weight plus the cable weight adds 50 kg/m² (10 lb./ft.²) uniformly across the total area used in calculations and is included in the 340 kg/m² (70 lb./ft.²) floor loading. (The total area is defined as: machine area + 0.5 service clearance.)
- When the service clearance area is also used to distribute machine weight (weight distribution/service clearance), 75 kg/m² (15 lb./ft.²) is considered for personnel and equipment traffic. The distribution weight is applied over 0.5 of the clearance up to a maximum of 760 mm (30 in.) as measured from the machine frame.

Raised floors

Learn how a raised floor environment improves data center operational efficiency.

A raised floor accomplishes the following major objectives:

- Improves operational efficiency and allows greater flexibility in the arrangement of equipment
- Permits the space between the two floors to be used to supply cooling air to the equipment or area
- Allows for future layout change with minimum reconstruction cost
- Protects the interconnecting cables and power receptacles
- Prevents tripping hazards

A raised floor should be constructed of fire-resistant or noncombustible material. The two general floor types are shown in the following figure. The first figure is of a stringerless floor, and the second figure is a floor with stringers.

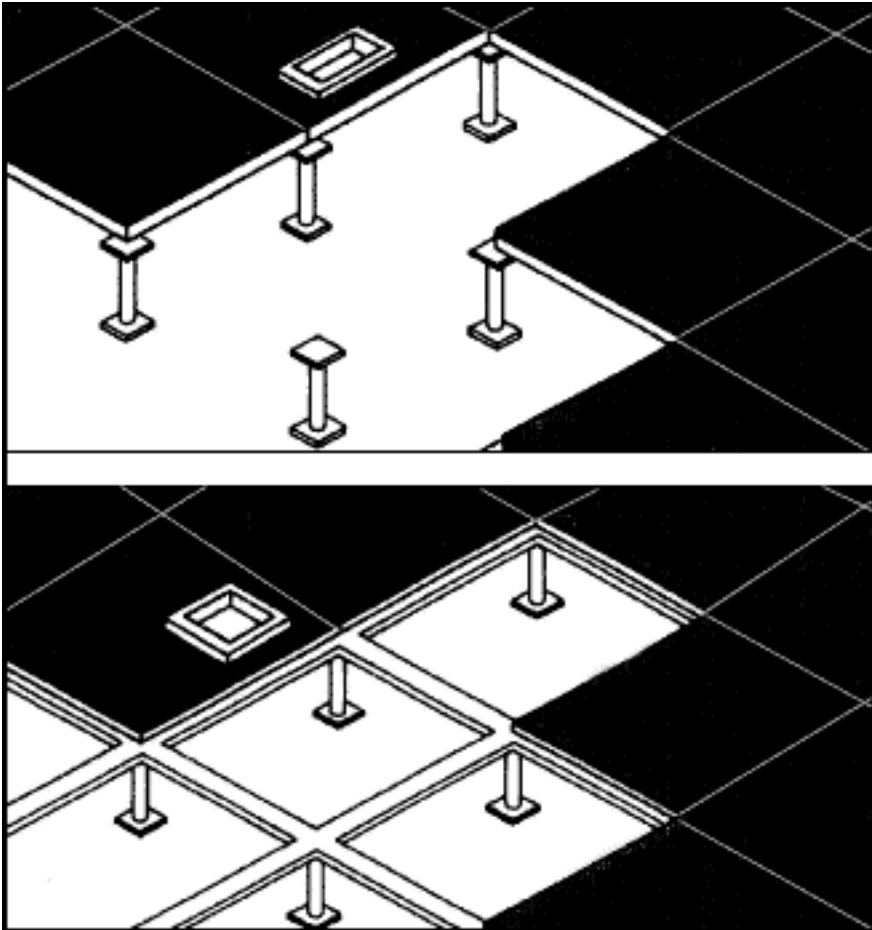


Figure 2. Raised floors types

Raised floor factors:

- No metal or highly-conductive material that might be at ground potential should be exposed to the walking surface when a metallic raised-floor structure is used. Such exposure is considered an electrical safety hazard.
- The raised-floor height should be between 155 mm (6 in.) and 750 mm (30 in.). For processors with multiple channels, a minimum raised-floor height of 305 mm (12 in.) is recommended. Clearance must be adequate to accommodate interconnecting cables, fiber cable raceways, power distribution, and any piping that is present under the floor. Experience has shown that higher raised-floor heights allow better air-conditioning balance in the room.
- Caster point loads on some servers can be as high as 455 kg (1,000 lb.) concentrated load anywhere on the panel with a 2 mm (0.080 in.) maximum deflection .
- When a raised-floor panel is cut for cable entry or air supply, an additional panel support (pedestal) might be required to restore the structural integrity of the panel to the above requirement.
- Use protective covering (such as plywood, tempered masonite, or plyon panels) to prevent damage to floor tiles, carpeting, and panels while equipment is being moved into or is relocated within the installation. When the equipment is moved, the dynamic load on the casters is significantly greater than when the equipment is stationary.
- Concrete subfloors require treatment to prevent the release of dust.
- Use noncombustible protective molding to eliminate sharp edges on all floor cutouts to prevent damage to cables and hoses and to prevent casters from rolling into the floor cutout.
- Pedestals must be firmly attached to the structural (concrete) floor using an adhesive.

- Cable cutout size information is determined by the volume of cables passing through the cutout. See the server's documentation for recommendations on the cable cutout size.

Signal reference ground

To minimize the effects of high-frequency (HF) interference and other undesired electrical signals (commonly referred to as electrical noise), a Signal Reference System (SRS) may be recommended. An SRS may be made up of a Signal Reference Ground or Grid (SRG), or a Signal Reference Plane (SRP). A Signal Reference Ground or Grid may also be known as a Zero Signal Reference Ground (ZSRG). Regardless of the name used, the intent is to provide an equal potential point of reference for equipment installed in a contiguous area for a wide range of frequencies. This is accomplished by installing a network of low impedance conductors throughout the information technology room.

Access (raised) flooring systems that utilize bolted stringer construction can be used to provide a simple SRG. Floor systems that have either no stringer or snap-in stringers do not provide for an effective SRG, and other methods for installing a SRG should be used.

For safety requirements, the SRG must be connected to earth ground. SRG practices recommend that all metallic objects that cross the SRG area are to be bonded (mechanically connected) to the SRG.

For more information on Signal Reference Grounds, contact your IBM Installation Planning Representative.

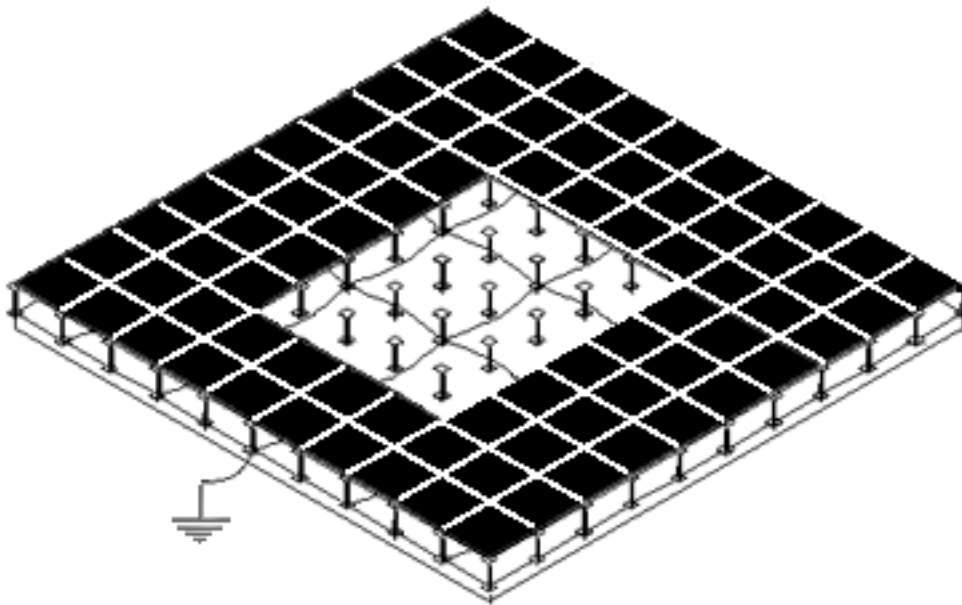


Figure 3. Signal reference ground

Conductive contamination

Contaminants that conduct electricity need to be reduced in data center environments.

Semiconductors and sensitive electronics used in current information technology equipment have allowed for the manufacture of very high density electronic circuitry. Although new technology allows for significant increases or capacity in a smaller physical space, it is susceptible to contamination, especially contamination particles that will conduct electricity. Since the early 1990s, it has been determined that data center environments may contain sources of conductive contamination. Contaminants include: carbon fibers, metallic debris such as aluminum, copper and steel filings from construction, and zinc whiskers from zinc-electroplated materials used in raised floor structures.

Although very small, and at times not easily seen without the visual aid of magnifying lenses, this type of contamination can have disastrous impact on equipment availability and reliability. Errors, component damage and equipment outages caused by conductive contamination can be difficult to diagnose. Failures may be at first attributed to other more common factors such as lightning events or electrical power quality or even just presumed to be defective parts.

Zinc whiskers

The most common conductive contamination in raised-floor data centers is what is known as zinc whiskers. It is the most common because it is frequently found on the underside of certain types of access floor tiles. Typically, the wood core style floor tile has a flat steel bottom. The steel may be coated with zinc either by a hot-dip-galvanize process or by zinc electroplate. The zinc electroplate steel exhibits a phenomena that appears as whisker-like growths on the surface. These small particles of approximately 1-2 mm (.04-.08 in.) in length can break away from the surface and get pulled into the cooling air stream. Eventually they might be ingested by the equipment air, settle on a circuit board and create a problem. If you suspect that you may have this type of problem, contact your IBM Service representative.

The following figure shows light reflection from zinc whiskers.

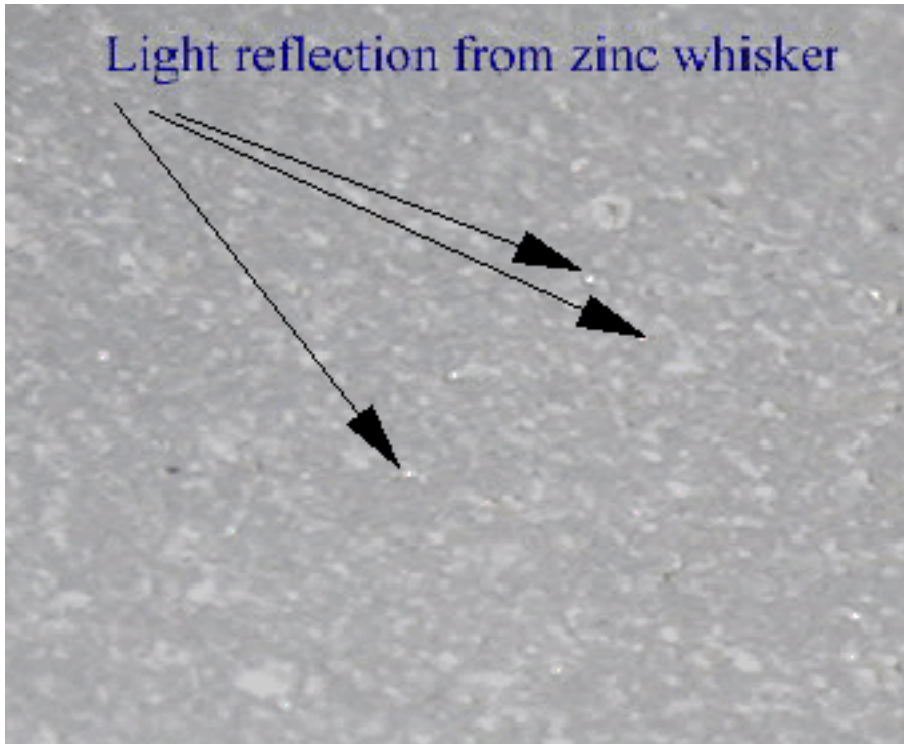


Figure 4. Light reflection from zinc whiskers

Computer room layout

Effective computer room layout is dependent on several important factors.

The factors for effective computer room layout are as follows.

Service clearance and floor loading

Each piece of equipment that you plan to install has some minimum amount of space around it that is required to be kept clear so that service might be performed on that equipment, if it become necessary.

Beyond keeping a clear area around the equipment, it is advisable that traffic patterns for work flow do not fall in service clearance boundaries. Do not allow the service clearance areas to be used for temporary or permanent storage. Exact clearance dimensions are supplied with the individual product specifications.

Generally, floor loading areas fall inside the service clearance boundaries. Consult individual product planning documentation and your seller for specific information about the equipment that you are planning to install. If you have not yet done so, review floor loading, weight distribution, service clearance, and machine area.

Physical and logical priority

Some types of peripheral equipment might require physical or logical positioning in relation to the processor or other equipment that might dictate where that equipment must be placed on your floor. Consult individual product planning documentation and your seller to determine if equipment that you are planning to install must be specifically placed. Such equipment should be situated in your floor layout diagrams first, before other equipment that does not require precise positioning.

Restrictive cable lengths

As computing power increases, cable lengths might decrease to support improvements in processing speed. Consult product-specific planning documentation and your seller to determine where cable lengths will allow you to place each piece of equipment on your floor. Review cabling and connectivity, especially if you are using Integrated Cluster Bus (ICB) cables.

Practical work space and safety

Allow enough room around equipment for normal movement of work flow. Consider the placement of equipment in relation to entrances and exits, windows, columns, wall-mounted equipment, such as circuit breaker boxes and electrical outlets, safety equipment, fire extinguishers, storage areas, and furniture. Be especially careful to allow easy access to things like the emergency power-off controls, smoke detectors, sprinkler systems, and under-floor or in-ceiling fire extinguishing systems.

If possible, make plans now to allow for future additional equipment. Plan cable routing and server locations to make it easy for additional units to be added.

Other equipment

In addition to the information technology equipment that you will be installing, allow room for office furniture and equipment, power and air conditioning, storage for operating supplies, and miscellaneous considerations, such as a meeting area, vending machine location, or water fountains.

It is highly recommended that scale drawings of your proposed layout be prepared and reviewed by both your seller and all service providers to ensure that your floor layout is physically capable and practically useful. Following is a chart of standard symbols used to create floor layouts.

In Plan Views:



Cable Entry and Exit Area in the base of the machine. Locating dimensions are measured from the edge of the frame, not the cover. This does not indicate the floor cutout.





Cable Exit Area, recommended



Power Cord exit, 50/60



Power Cord exit, 400 Hz

Power cords are supplied in 4.2 m (14 ft) lengths unless otherwise noted on the specification page. The length is measured from the symbol  or .




Swinging Gate



Standard equipment outline (shows the machine with covers closed)




Optional equipment outline




Customer Engineer Indicator Panel


In Cabling Schematics:



Indicates a cable group coming from a machine



Indicates a cable group going to a machine



Service Area Boundary (Service clearances are measured from the machine with covers closed)



Castors
Locating dimensions are measured from the edge of the frame, not the cover.



Leveling pads or glides (90 mm {3 1/2 in} typical diameter) Locating dimensions are measured from the edge of the frame, not the cover.



Legs



Non-raised floor cable exit



Meter location



Unit Emergency Switch

Hinged Covers



Single



Bifold



Offset Bifold

Figure 5. Standard symbols to create floor layouts

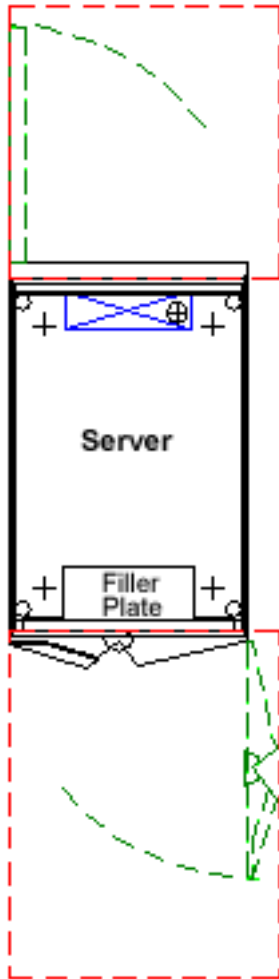


Figure 6. Sample plan view

Vibration and shock

Use this information to plan for possible vibration and shock in your data center.

It might be necessary to install the information technology equipment in an area subject to minor vibrations. The following information supplies vibration and shock limits for your equipment and some basic definitions concerning vibration. The vibration levels normally present in computer-room and industrial installations are well within the indicated levels.

However, mounting the equipment in racks, stackers, or similar equipment might increase the risks of vibration-related problems. It is important to consult the manufacturer of such equipment to ensure that vibration factors will not exceed the specifications provided in the following tables.

Some useful definitions of vibration include:

Acceleration:

Normally measured in g multiples of the acceleration because of the force of gravity. If the frequency is also known for a sine wave, acceleration can be calculated from displacement. (g: The unit of acceleration caused by the force of gravity.)

Continuous:

Vibrations present over an extended period and cause a sustained resonant response in the equipment.

Displacement:

Magnitude of the wave shape; normally given in peak-to-peak displacement in English or metric units:

- Normally used to measure floor vibrations at low frequencies
- If the frequency is also known, it can be converted to displacement g for a sine wave.

Note: Many measuring instruments can convert displacement to g for either sinusoidal or complex wave shapes.

Peak: The maximum value of a sinusoidal or random vibration. This can be expressed as peak-to-peak in cases of sinusoidal vibration displacement.

Random:

A complex vibration wave form varying in amplitude and frequency content.

rms (root mean square):

The long-term average of the acceleration or amplitude values. Normally used as a measure of overall vibration for random vibration.

Shock:

Intermittent inputs that occur and then decay to zero prior to a recurrence of the event. Typical examples are foot traffic, fork lifts in aisles, and external events such as railroad, highway traffic, or construction activities (including blasting).

Sinusoidal:

Vibrations with the characteristic shape of the classical sine wave (for example, 60-Hz ac power).

Transient:

Vibrations that are intermittent and do not cause a sustained resonant response in the equipment.

If you need to make any calculations or require information regarding the above definitions, consult a mechanical engineer, a vibration consulting engineer, or your seller.

The three classes of a vibration environment are shown in the following table.

Table 1. Vibration environment

Class	Vibration environment
V1	Floor-mounted machines in an office environment
V2	Table-top and wall-mounted machines
V3	Heavy industrial and mobile equipment

A summary of the vibration limits for each of the three classes is shown in the following table. A legend follows the table.

Note: Vibration levels at any discrete frequency should not exceed a level of 1/2 the g rms values for the class listed in the Vibration environment table.

Table 2. Operational vibration and shock limits

Class	g rms	g peak	Mils	Shock
V1 L	0.10	0.30	3.4	3 g at 3 ms
V1 H	0.05	0.15	1.7	3 g at 3 ms
V2	0.10	0.30	3.4	3 g at 3 ms

Table 2. Operational vibration and shock limits (continued)

V3	0.27	0.80	9.4	application dependent
----	------	------	-----	-----------------------

L: Light, weight less than 600 kg.

H: Heavy, weight equal to or greater than 600 kg.

g rms: Overall average g level over the 5 to 500 Hz frequency range.

g peak:

Maximum real-time instantaneous peak value of the vibration time history wave form (excluding events defined as shocks).

Mils: Peak-to-peak displacement of a discrete frequency in the 5 to 17 Hz range. One mil equal .001 inch.

Shock:

Amplitude and pulse width of a classical 1/2 sine shock pulse.

The values given in the Operational vibration and shock limit table are based on worst-case field data measured at customer installations for current and previously released products. The vibration and shock environment will not exceed these values except for abnormal cases involving earthquakes or direct impacts. Your seller can contact the IBM Standards Authority for Vibration and Shock in case of specific technical questions.

Earthquakes

Special frame-strengthening features or RPQs might be required in earthquake prone areas. Local codes might require the information technology equipment to be tied down to the concrete floor. If sufficient information on equipment tie down is not provided in the product's physical planning documentation, consult with your seller.

Lighting

Proper lighting is required to normally operate the server and when service is required.

Light sources in the equipment room and work station areas should have a general lighting level of 300 to 500 lumens/m² (lux) or 30 to 50 foot-candles. When preparing the equipment room and work areas, consider painting the room a light color with a white ceiling to reflect (rather than absorb) light. To lessen any glare, windows should not be in an operator's field of vision or directly facing the display screen. Direct sunlight can cause light-sensing devices to malfunction and make observations of various signal lamps difficult.

To avoid eye fatigue, light sources should be compatible. Universal white fluorescent lamps are compatible with both incandescent lamps and daylight.

The following figure shows a suggested lighting layout for a workstation.

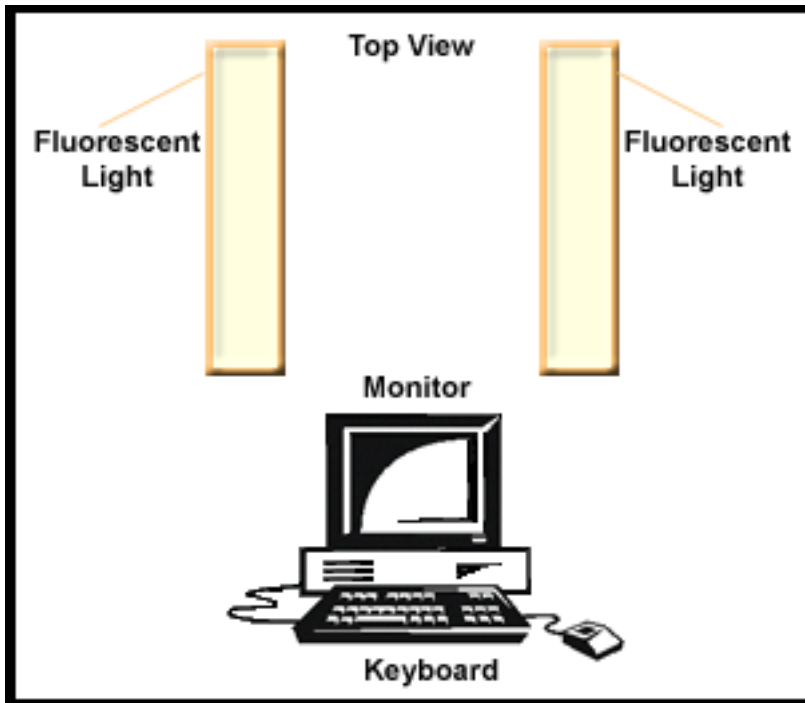


Figure 7. Typical lighting for a workstation

Provide and maintain emergency lighting, of sufficient intensity, to ensure a safe exit.

Acoustics

Acoustic noise emission data allows you to assess noise levels for your data processing equipment.

Acoustic noise emission data on IBM products is provided for the benefit of installation planners and consultants to help predict acoustical noise levels in data centers and other installations of information technology and telecommunications equipment. Such noise declarations also allow you to compare noise levels of one product to another and to compare the levels to any applicable specifications. The format of the data provided conforms to ISO 9296: Acoustics - Declared Noise Emission Values of Computer and Business Equipment. The measurement procedures used to acquire the data conform to International Standard ISO 7779 and its American National Standard equivalent ANSI S12.10. The following terms are used to present acoustical data.

- L_{WA_d} is the declared (upper limit) A-weighted sound power level for a random sample of machines.
- L_{pA_m} is the mean value of the A-weighted sound pressure levels either at the operator position or at the bystander (1-meter) positions for a random sample of machines.
- $\langle L_{pA} \rangle_m$ is the mean value of the space-averaged sound-pressure-emission levels at the one-meter positions for a random sample of machines.

Acoustical treatment of data centers or other rooms, in which the equipment is installed, is recommended to achieve lower noise levels. Lower noise levels tend to enhance employee productivity and avoid mental fatigue, improve communications, reduce employee complaints, and generally improve employee comfort. Proper room design, including the use of acoustical treatment, might require the services of a specialist in acoustics.

The total noise level of an installation with information technology and telecommunications equipment is an accumulation of all the noise sources in the room. This level is affected by the physical arrangement of the products on the floor, the sound reflective (or absorptive) characteristics of the room surfaces, and the noise from other data center support equipment such as air conditioning units and backup power

equipment. Noise levels might be reduced with proper spacing and orientation of the various noise-emitting equipment. Provide sufficient space around such machines: the farther apart they can be placed, the lower the overall room noise will be.

In smaller installations, such as small offices and general business areas, pay additional attention to the location of equipment relative to the work areas of the employees. At work areas, consider locating personal computers and computer workstations next to the desk rather than on top of it. Small servers should be located as far away from personnel as possible. Locate nearby work areas away from the exhaust of computer equipment.

The use of absorptive materials can reduce the overall noise level in most installations. Effective and economical sound reduction can be achieved by using a sound-absorptive ceiling. The use of acoustically absorbing free-standing barriers can reduce the direct noise, increase room absorption and provide privacy. The use of absorptive material, such as carpeting on the floor, results in further reduction of the sound level in the room. Any carpeting used in a computer room must meet the electrical continuity requirements stated in "Static electricity and floor resistance" on page 3. To prevent computer room noise from reaching adjacent office areas, walls should be constructed from the structural floor to the structural ceiling. Also, ensure that doors and walls are properly sealed. Acoustical treatment of overhead ducts might further reduce noise transmitted to or from other rooms.

Many IBM large systems products are offered with optional acoustical front and rear doors to help attenuate the noise of the product itself. Smaller IBM products might also offer special acoustical packages. If noise exposure is a concern for the installation planners or employees, inquiries should be made to IBM on the availability of such product options.

Electromagnetic compatibility

Information technology equipment installation might occasionally be planned in an area that has a high electromagnetic-radiated field environment. This condition results when the information technology equipment is near a radio frequency source such as a radio-transmitting antenna (AM, FM, TV, or two-way radio), civilian and military radar, and certain industrial machines (rf induction heaters, rf arc welders, and insulation testers). If any of these sources are near the proposed site, a planning review might be appropriate to assess the environment and determine whether any special installation or product considerations are advisable to reduce interference. Consult your seller. Workstations located near devices like transformers or buried electrical conduits can experience jitter on the workstation display in the presence of strong magnetic fields.

Most products can tolerate low-frequency to very-high-frequency rf levels of 3 volts per meter. Field strengths greater than 3 volts per meter might cause operational or serviceability problems. Products have different tolerance levels to electromagnetic-radiated fields in different frequency ranges. Radar (frequency of 1300 MHz, and 2800 MHz) signals with field strengths of a maximum of 5 volts per meter are acceptable. If problems occur, reorientation of the server or selective shielding might be required.

Two-way radio or cellular telephone usage should be properly controlled in the computer room. To reduce the likelihood of a problem, the following recommendations should be considered when operating such equipment:

- Keep hand-held transmitters (for example, walkie-talkies, radio paging, and cellular telephones) a minimum of 1.5 m (5 ft.) from information technology equipment.
- Use only an operator-controlled transmitting device (no automatic transmissions). Develop specific rules, such as - Do not transmit within 1.5 m (5 ft.) of a fully covered operating server. If covers are open, do not transmit.
- Choose the minimum output power that will accomplish your communication needs.

Extremely low frequency (ELF) fields

With the exception of some video display cathode ray tubes (CRT), most information technology equipment is tolerant of extremely low frequency (ELF) electromagnetic fields. The video displays that use cathode ray tubes are more sensitive because they use electromagnetic fields to position the electron beam in normal operation. The extremely low frequency range covers frequencies between 0 and 300 Hz. It is also referred to as electrical power frequency because most world electrical power is generated at either 50 or 60 Hz.

IBM products tolerate ELF electromagnetic fields in the following ranges:

- Cathode ray tube video display: 15-20 milligauss
- Liquid crystal display (LCD) : 10 Gauss
- Magnetic tape equipment: 20 Gauss
- Disk drive equipment : 20 Gauss
- Processors or servers : 20 Gauss

Typical information technology centers exhibit an ambient electromagnetic field between 3-8 milligauss. Some equipment within a center may, under normal operation, produce fields in excess of 100 milligauss. Examples of equipment that produces large magnetic fields include: power distribution units, electric motors, electrical transformers, laser printers and uninterruptible power systems. However, magnetic field density decreases rapidly with distance. If a CRT display is located near equipment that produces large electromagnetic fields, the display may exhibit distortion such as poor focus, change in image shape or slight motion in static display images. Moving the CRT away from the equipment may remedy the problem.

Computer room location

Computer room location is affected by several factors.

Before selecting a location for the computer, give attention to these guidelines:

- The computer room should be in a noncombustible or fire-resistant building or room.
- The computer room should not be above, below, or adjacent to areas where hazardous materials or gases are stored, manufactured, or processed. If the computer must be located near such an area, take extra precautions to safeguard the area.
- If the computer room is below ground level, provide adequate drainage.

Safety consideration and fire prevention

Safety is a vital factor when planning computer installation. This consideration is reflected in the choice of the computer location, building materials used, fire prevention equipment, air conditioning and electrical systems, and personnel training.

If an inconsistency occurs between your server's recommendations and any local or national regulation, the more stringent of the recommendations or regulations should take precedence. The National Fire Protection Association standard, NFPA 75, provides guidelines for protection of information technology equipment. The customer is responsible for adherence to governmental regulations.

- Computer room walls should have a minimum of a 1-hour-fire-resistance rating and extend from the structural floor to the structural ceiling (slab-to-slab).
- In rooms used for critical operations, it is preferable to install processors in 1-hour-fire-rated rooms separate from the main computer room.
- If the computer room has one or more outside walls adjacent to a building that is susceptible to fire, consider taking the following precautionary actions:
 - Installing shatterproof windows in the computer room to improve the safety of personnel and equipment from flying debris and water damage. Usually, windows in the computer room are

undesirable because of security concerns, and the negative effect they have on temperature control. They can cause excessive heating in the summer, and excessive cooling in the winter.

- Installing sprinklers outside the windows to protect them with a blanket of water if a fire occurs in the adjacent area.
- Sealing the windows with masonry.
- Where a false (or hung) ceiling or insulating material is to be added, ensure that it is noncombustible or fire-resistant material. All duct work should be noncombustible. If combustible material is used in the space between the structural ceiling and the false ceiling, appropriate protection should be provided.
- A raised floor that is installed over the structural floor should be constructed of noncombustible or fire-retardant materials. If the structural floor is of combustible material, it should be protected by water sprinklers on the ceiling of the room below.

Note: Before the information technology equipment is installed, the space between the raised and the structural floors should be cleared of debris. This space should also be checked periodically after installation to keep it free of accumulated dust, possible debris, and unused cables.

- The roof, ceiling, and floor above the computer room and the storage area for recorded media should be watertight. Liquid piping, roof drains, and other potential sources of liquid damage should be rerouted around the area.
- The space under the raised floor in the computer room should be provided with drainage to protect against flooding or trapped water.
- Waste material containers should be constructed of metal with a frame-suppressant lid.

Fire prevention equipment in a computer room

Fire prevention equipment in the computer room should be installed as an added safety measure. A fire suppression system is the responsibility of the customer. Your insurance underwriter, local fire marshal, and local building inspector are all parties that should be consulted in selecting a fire suppression system that provides the correct level of coverage and protection. IBM designs and manufactures equipment to internal and external standards that require certain environments for reliable operation. Because IBM does not test any equipment for compatibility with fire suppression systems, IBM does not make compatibility claims of any kind nor does IBM provide recommendations on fire suppression systems.

- An early-warning fire detection system should be installed to protect the computer room and storage areas for recorded media. This system should activate both an audible and a visual alarm in the rooms and at a monitored central station.
- Portable carbon dioxide fire extinguishers, of suitable size and number, should be provided in the computer room for use on electrical equipment.
- Portable, pressurized-water extinguishers should be provided for combustible material such as paper.
- Extinguishers should be readily accessible to individuals in the area, and extinguisher locations should be marked so they are visible.
- Automatic sprinkler systems and gaseous total flooding systems are acceptable forms of fixed protection. For information on environmentally friendly gases for total flooding systems, consult NFPA 2001 titled Standard on Clean Agent Fire Extinguishing Systems.
- Special consideration should be used if you prefer a gaseous total flooding system. If a gaseous total flooding system is installed, include a time delay feature that allows investigation and evacuation from the covered area of the gaseous total flooding system. A cross-zoned detection system is suggested.
- The protected area must be evacuated whenever the gaseous total flooding system or its controls are being serviced. Additionally, a master Disarm switch, available for use by the system service personnel, is required. With the switch set in the off position, the detonators used to release the gaseous total flooding system must be made inoperative, even if the circuit fails elsewhere in the system. This switch must be placed in the off (manual) position before servicing begins to prevent possible accidental discharge of the gaseous total flooding system.

- Alternatives to ordinary wet pipe sprinkler systems might include dry pipe systems or preaction systems. Water flows into preaction systems only if triggered by smoke or heat detectors. The detection systems should be independent of gaseous total flooding system detection systems. The On-Off type of sprinkler head is not recommended because it is more prone to leakage.

To determine the proper fire protection required for the computer room, consult with your insurance underwriter and your local code authority.

Material and data storage protection

Special safety considerations are required when storing data or other material.

Consider the following factors:

- Any data or material stored in the computer room, whether in the form of magnetic tapes, paper tapes, cards, or paper forms, should be limited to the minimum needed for safe, efficient operation and should be enclosed in metal cabinets or fire-resistant containers when not in use.
- For security purposes, and protection against fire, a separate room for material storage is strongly recommended. This room should be constructed of fire-resistant material (minimum 2-hour-fire-resistance rating). An approved fixed extinguishing system is recommended. Fixed extinguishing systems include automatic sprinklers and approved total flooding gaseous systems.

If continuity of operation is critical, plan a remote storage location for vital records if a disaster occurs. Key considerations in the choice of an off-site location for data storage are that the area is:

- Not subject to the same risk that might occur in the computer room.
- Suitable for long-term storage of hardcopy records and magnetic media files.

Air conditioning systems

In most installations, the computer area is controlled by a separate air conditioning system. Therefore, emergency power-off switches for the equipment and air conditioning should be placed in convenient locations, preferably near the console operator and next to the main exit doors. See National Fire Protection Association standard, NFPA 70 article 645, for information.

- When the regular building air conditioning system is used, with supplemental units in the computer area, the supplemental units would then be handled as stated above. The regular building air conditioning system should have an audible alarm to alert maintenance personnel of an emergency.
- Fire dampers should be located in all air ducts at fire walls.
- The air filters in the air conditioning system should contain noncombustible or self-extinguishing material.

Electrical systems

Provide a mainline disconnect control for the computer equipment at a remote location. The remote controls should be in a convenient location, preferably near the console operator and next to the main exit doors. They should be next to the power-off switch for the air conditioning system and should be properly marked. A light should be installed to indicate when power is on. The National Electric Code (NFPA 70) article 645 states that a single disconnecting means to control both the electronic equipment and the HVAC system is permitted.

- If continuity of operation is essential, a standby power source should be installed.
- It is advisable to install an automatic battery-operated lighting unit to illuminate an area if a power or lighting circuit failure occurs. This unit is wired to and controlled by the lighting circuit.
- Watertight connectors are recommended under raised floors because of the moisture exposures (water pipe leaks, high humidity levels) under raised floors.

Emergency planning for continuous operations

Planning for emergencies ensures that your data center continues to operate in the event of a power outage.

If a power outage occurs, continued operation depends on information stored on cards, tapes, or disks, and the equipment used to process the information being available immediately. Arrangements should be made for emergency use of other equipment and transportation of personnel, data, and supplies to a temporary location. Arrangements should also be made to ensure the continuous operation of environment equipment, such as air conditioning. Duplicate or master records and programming data should be maintained in a remote area, from which the necessary information can be taken to resume operation.

Precautions and personnel training

Further plans should include training of personnel to act in an emergency situation.

- Sound alarm signals for fire detection and for other abnormal conditions to familiarize personnel with the alarm.
- Monitor the computer room, air conditioning equipment room, and electrical and data storage room at all times.
- Inspect steam pipes and water pipes above the false ceiling to guard against possible damage due to accidental breakage, leakage, or condensation.
- Locate emergency exit doors in the computer area. The number of doors depends on the size and location of the area. Train personnel in emergency measures such as:
 - Shutting off all electrical power
 - Shutting off the air conditioning system
 - Shutting off the chilled water to the information technology equipment
 - Calling the fire company
 - Handling fire extinguishers in the approved manner
 - Operating a small-diameter fire hose
 - Evacuating records
 - Evacuating personnel
 - Administering first aid

Lightning protection for communication wiring

Be sure to install lightning protection devices to protect communication wiring and equipment from surges and transients induced into the communication wiring. In any area subject to lightning, surge suppressors should be installed at each end of every outdoor cable installation, whether installed above the ground (aerial) or buried below the ground.

Information about lightning surge suppressors for communication wiring and recommended methods for outdoor communication cables can be found in the information technology product's physical planning documentation.

General power information

Reliable electrical power is required for the proper functioning of your data processing equipment.

IBM information technology equipment requires a reliable electrical power source that is free from interference or disturbance. Electrical power companies generally supply power of sufficient quality. The "Power quality" on page 20, "Voltage and frequency limits" on page 25, "Power load" on page 25, and "Power source" on page 26 topics provide the guidance and specifications needed to meet the

requirements of the equipment. Qualified personnel must ensure that electrical power distribution system is safe and meets local and national codes. They must also ensure that the voltage measured at the power receptacle is within the specified tolerance for the equipment. In addition, a separate power feeder is required for items such as lighting and air conditioning. A properly installed electrical power system will help to provide for reliable operation of your IBM equipment.

Other factors to consider when planning and installing the electrical system include a means of providing a low impedance conducting path to ground (path to earth) and lightning protection. Depending on the geographical location, special considerations may be required for lightning protection. Your electrical contractor should meet all local and national electrical code requirements. Building electrical power is normally derived from a three-phase power distribution system. General office areas are normally provided with single-phase power outlets, and data processing rooms are provided with three-phase power.

Some IBM IT equipment and devices may require standard three-phase power; others may require single-phase power. The power requirements for each device are specified in the individual server specifications for that server. Nominal voltage, plugs, receptacles, and in some cases, conduit and back boxes are listed in the specific server specifications. Refer to the respective server specifications to determine the power requirements. Ensure that existing branch circuit outlets are the correct type and are properly grounded (see Grounding).

Power quality

The quality of electrical power significantly impacts the performance of sensitive electronic equipment. These guidelines ensure that quality electrical power is provided to your data center.

IBM equipment can tolerate some power disturbances or transients. However, large disturbances can cause equipment power failures or errors. Transients can come into the site on the power utility company lines but are often caused by electrical equipment installed in the building. For example, transients can be produced by welders, cranes, motors, induction heaters, elevators, copy machines, and other office equipment. The best way to prevent problems caused by power disturbances is to have transient-producing equipment on a separate power service than the one that supplies power to your information technology equipment.

Ground or earth

When used in reference to electrical power systems, Ground is a conducting connection between an electrical circuit and the earth or some conducting body that serves in place of the earth. The term ground is the most common name used, however it is also referred to as earth or terra in several international geographies. In this topic, these terms and other local language equivalents are interchangeable.

Ground is a critical component of an electrical power distribution system. A properly installed ground system allows for safe operation of equipment that is connected to the electrical power source under normal and electrical or equipment fault conditions. The life safety function of ground and grounding methods is addressed by the appropriate local and national electrical wiring codes. In the United States, this code is known as the National Electric Code or publication 70 of the National Fire Protection Association. Many countries have adopted the National Electric Code or have developed an equivalent code.

The National Electric Code and its equivalents have a primary objective to provide safe operation of electrical power distribution systems and electrical equipment installations. Compliance with these codes does not guarantee efficient operation of equipment connected to the power distribution systems. When sensitive electronic equipment is connected, there are often times when additional ground connections may be required. Typically, additional ground connections are recommended when there is a concern for high frequency or radio frequency (RF) interference, which may impact electronic circuits. These

additional ground requirements will be found with the installation documentation for specific equipment. Additional ground requirements may also be recommendations from engineering or data center evaluations, reviews or surveys. Local or national codes allow for these additional grounds to be installed.

Grounding

IBM equipment, unless double insulated, has power cords containing an insulated grounding conductor (color-coded green or green with yellow stripe) that connects the frame of the equipment to the ground terminal at the power receptacle. The power receptacles for IBM equipment are identified in the equipment documentation and should match the equipment power plug. In some cases, there may be options for different manufacturer equivalent receptacles. IBM equipment plugs should not be changed or altered to match existing connectors or receptacles. To do so may create a safety hazard and void product warranty. The connectors or receptacles for IBM equipment should be installed to a branch circuit with an equipment grounding conductor, connected to the grounding bus bar in the branch-circuit distribution panel. The grounding bus bar in the panel should then be connected back to the service entrance or suitable building ground by an equipment grounding conductor.

Information technology equipment must be properly grounded. It is recommended that an insulated green wire ground, the same size as the phase wire, be installed between the branch circuit panel and the receptacle.

For personnel safety, the ground must have sufficiently low impedance to limit the voltage to ground and to facilitate the operation of protective devices in the circuit. For example, the ground path shall not exceed 1 ohm for 120-volt, 20-ampere branch circuit devices.

The ground path impedance limit is 0.5 ohms for 120 volt branch circuits protected by 30 ampere circuit breakers. The limit is 0.1 ohms for 120 volt 60 to 100 ampere circuits.

All grounds entering the room should be interconnected somewhere within the building to provide a common ground potential. This includes any separate power sources, lighting and convenience outlets, and other grounded objects, such as building steel, plumbing, and duct work.

The equipment grounding conductor must be electrically attached to both the enclosure of the computer power center and the connector grounding terminal. Conduit must not be used as the only grounding means, and it must be connected in parallel with any grounding conductors it contains.

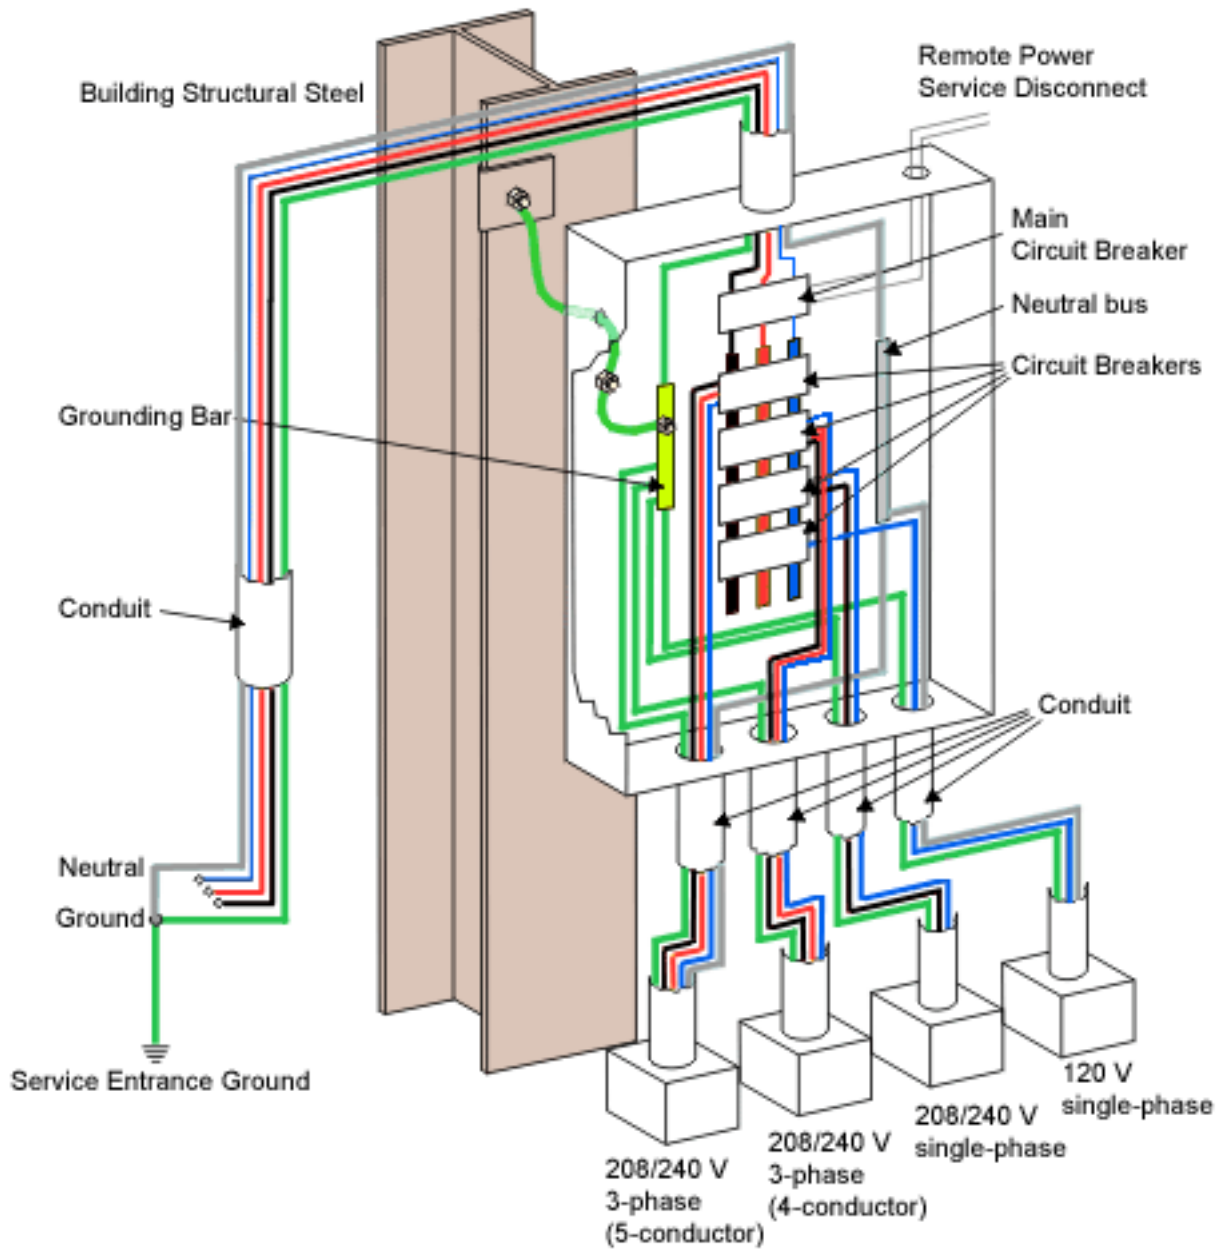


Figure 8. Transient grounding plate

Transient grounding

To minimize the effects of high-frequency electrical noise, the branch circuit power panel servicing the equipment should be mounted in contact with bare building steel or connected to it by a short length of cable. If this is not possible, a metal area of at least 1 m² (10 ft.²) in contact with masonry can be used. The plate should be connected to the green-conductor common.

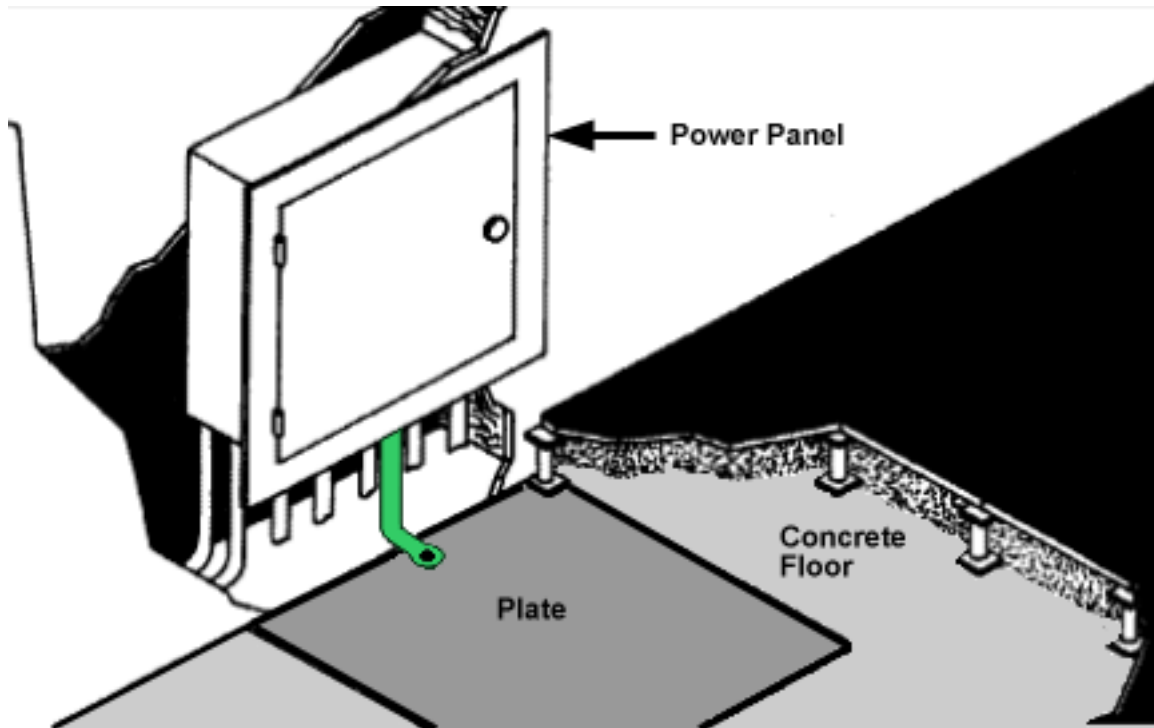


Figure 9. Transient grounding plate

The preferred connection is with a braided strap. If a braided strap is not available, the connection should consist of no. 12 AWG (3.3 mm or 0.0051 in.) or larger conductor and should not be more than 1.5 m (5 ft.) long. To minimize this length, the preferred connection of this braided strap or conductor is to the nearest portion of the enclosure on the panel, if the enclosure is electrically continuous from the green-conductor common point to this point of connection.

The raised-floor-supporting substructure can be used as a substitute for the transient plate if the structure has a consistently low-impedance path. If the raised floor has stringers or other subframing that makes electrical connection between the pedestals, the floor itself can be used for the signal reference plane. Some raised floors are stringerless and the floor tiles lock into isolated pedestals by gravity alone. If there is no reliable electrical connection between the pedestals, a signal reference grid can be constructed by connecting the pedestals together with conductors. A minimal grid would interconnect every other pedestal in the immediate area of the power panel and extend at least 3 m (10 ft.) in all directions.

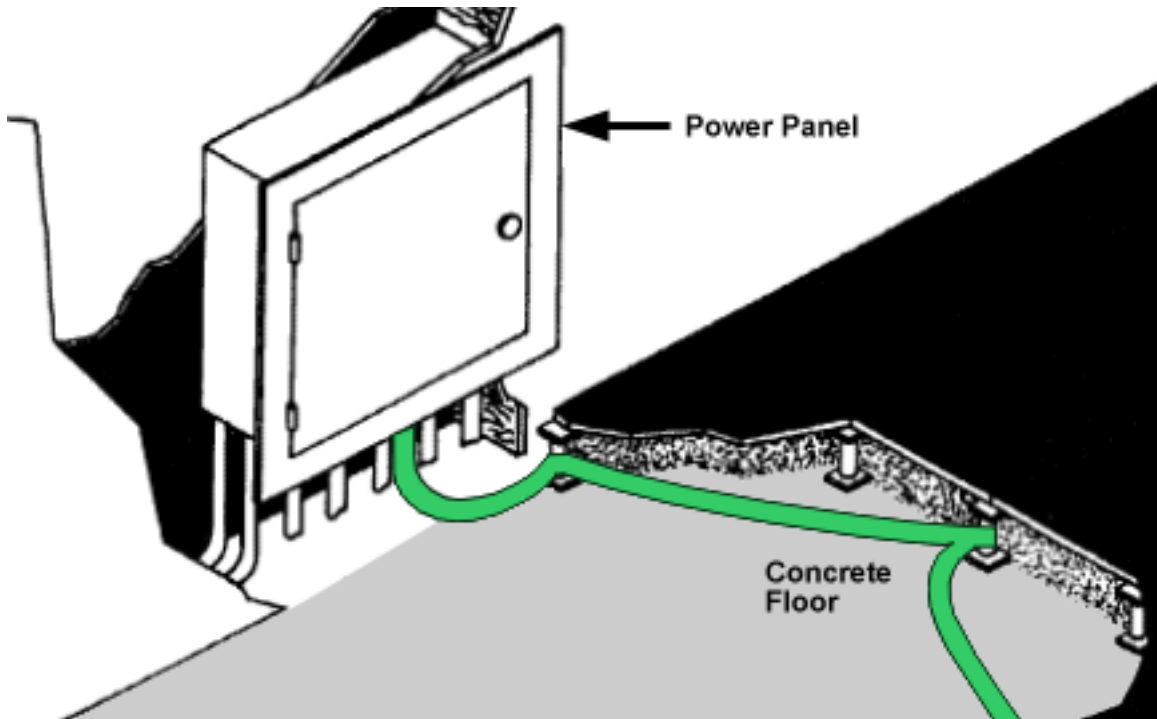


Figure 10. Transient grounding using the raised floor support structure

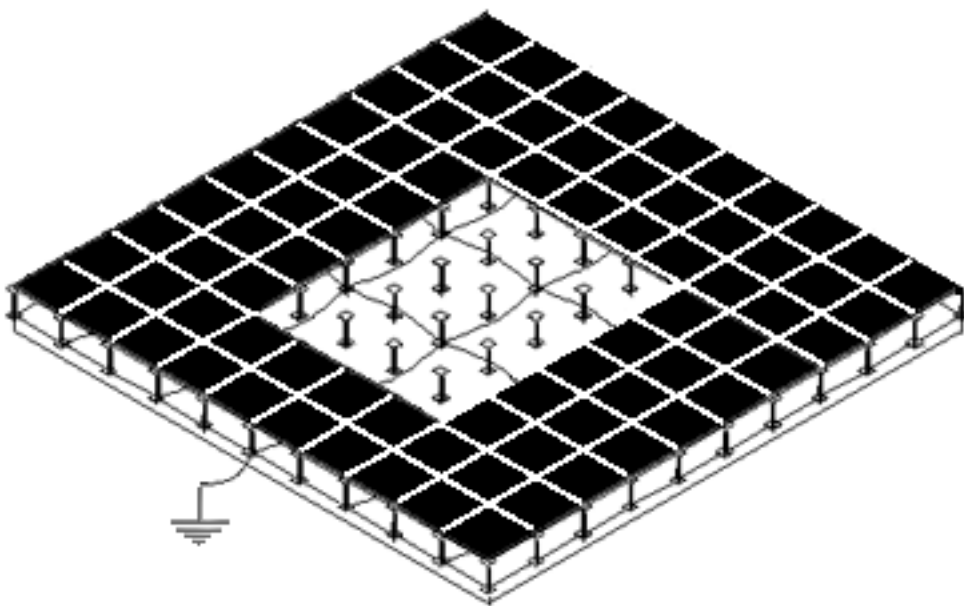


Figure 11. Signal reference grid

Stranded bare or insulated conductor of at least no. 8 AWG (8 mm or 0.0124 in.) copper is required. This conductor provides a low-impedance path and is strong enough to make physical damage unlikely. Any connection method is acceptable as long as it provides a reliable electrical and mechanical connection.

A customer's self-contained, separately derived power system (computer power centers, transformers, motor generators), installed on a raised floor, has the same requirements.

Power specifications

Your server is normally furnished with power-supply provision to meet the 50-Hz or 60-Hz voltage standards shown in the following tables, respectively.

Table 3. 50-Hz standard voltages¹

	50-Hz nominal voltages					
Single phase	100	110	200	220	230	240
Three phase	200	220	380	400	415	
Note: 1. This table lists the nominal voltages available at the specified frequency. The columns for single phase and three phase do not imply a phasor relationship.						

Table 4. 60-Hz standard voltages¹

	60-Hz nominal voltages								
Single phase	100	110	120	127	200	208	220	240	277
Three phase	200	208	220	240	480				
Note: 1. This table lists the nominal voltages available at the specified frequency. The columns for single phase and three phase do not imply a phasor relationship.									

Voltage and frequency limits

Voltage and frequency limits must be maintained to ensure proper functioning of your server.

The phase-to-phase steady-state voltage must be maintained within plus six percent to minus 10 percent of the normal rated voltage, measured at the receptacle when the system is operating. A voltage surge or sag condition must not exceed plus 15 percent or minus 18 percent of the nominal voltage and must return to within a steady-state tolerance of plus 6 percent or minus 10 percent of normal rated voltage within 0.5 second.

Some servers might require special considerations and might have more or less restrictive specifications. See the individual server specifications for actual requirements. Because of the possibility of brownouts (planned voltage reduction by the utility company) or other marginal voltage conditions, installing a voltage monitor might be advisable.

The phase frequency must be maintained at 50 or 60 Hz + 0.5 Hz.

The value of any of the three phase-to-phase equipment voltages in the three-phase system must not differ by more than 2.5 percent from the arithmetic average of the three voltages. All three line-to-line voltages must be within the limits specified above.

The maximum total harmonic content of the power system voltage waveforms on the equipment feeder must not exceed 5 percent with the equipment operating.

Power load

A preliminary sizing for total power load can be obtained by adding the total power requirements for all devices to be connected.

For a more precise analysis of power distribution system requirements, you can request an IBM System Power Profile Program printout from your seller. The System Power Profile Program, controlled and operated by the service office installation planning representative, provides a vector analysis rather than an arithmetic summation of total power. The vector analysis takes into consideration power factor and phase relationships. In addition, it considers waveform distortions caused by the load and inrush requirements. Additional capacity should be planned for future expansion. Contact your service office installation planning representative for information on how to obtain a System Power Profile.

Primary power problem areas

Your server is designed to operate on the normal power supplied by most electrical utility companies. However, possible computer malfunctions can be caused by outside (radiated or conducted) transient electrical noise signals being superimposed on the power line to the computer. To guard against this interference, power distribution design should comply with the specifications discussed in this topic.

Failures caused by the power source are basically of three types:

- Power line disturbances, such as, short duration dips in voltage as well as prolonged outages. If the frequency of such power failures is not acceptable for your operation, installing standby or buffered power might be necessary.
- Transient electrical noise superimposed on power lines might be caused by a variety of industrial, medical, communication, or other equipment:
 - Within the computing facilities
 - Adjacent to the computing facilities
 - In the vicinity of the power company's distribution lines

Switching large electrical loads can cause problems, even though the source is on a different branch circuit. If you suspect such a condition, it might be advisable to provide a separate, dedicated feeder or transformer for your server directly from your power source.

If the transient-producing devices have been eliminated from the feeder and the computer room power panel and power line disturbances are still present, it might be necessary for you to install isolation equipment (for example, transformers, motor generators, or other power conditioning equipment).

Lightning protection

Installing lightning protection devices is recommended on the computer power source when:

- The primary power is supplied by an overhead power service.
- The utility company installs lightning protectors on the primary power source.
- The area is subject to electrical storms or an equivalent type of power surge.

Lightning protection for communication wiring

Be sure to install lightning protection devices to protect communication wiring and equipment from surges and transients induced into the communication wiring. In any area subject to lightning, surge suppressors should be installed at each end of every outdoor cable installation, whether installed above the ground (aerial) or buried below the ground.

Information about lightning surge suppressors for communication wiring systems and recommended installation methods for outdoor communication cables can be found in the manuals for the specific type of data processing system that is being considered.

Power source

These guidelines help to ensure that your data center has a quality power source.

The primary power source is normally a wye-type or delta-type, three-phase service coming from a service entrance or a separately derived source with appropriate overcurrent protection and suitable ground (service entrance or building ground). A three-phase, five-wire power distribution system should be provided for flexibility in your data processing installation. However, depending on the type of equipment installed, a single-phase distribution system might be sufficient. The five wire system enables you to provide power for three-phase line-to-line, single phase line-to-line, and single phase line-to-Neutral. The five wires consist of three phase conductors, one neutral conductor, and one insulated equipment grounding conductor (green, or green with yellow trace).

Conduit must not be used as the only grounding means.

Power plugs and receptacles are illustrated in the plugs and receptacles topic.

Power panel feeders

Ensure that the feeder wires to the branch-circuit distribution panel (shown in Grounding) are large enough to handle the total server power load. It is recommended that these feeders service no other loads.

Branch circuits

The computer branch circuit panel should be in an unobstructed, well-lighted area in the computer room.

The individual branch circuits on the panel should be protected by suitable circuit breakers properly rated according to manufacturer specifications and applicable codes. Each circuit breaker should be labeled to identify the branch circuit it is controlling. The receptacle should also be labeled.

Where a branch circuit and receptacle are installed to service your server, it is recommended that the grounding conductor of the branch circuit be insulated and equal in size to the phase conductors. The grounding conductor is an insulated, dedicated-equipment-grounding conductor, not the neutral.

Branch circuit receptacles installed under a raised floor should be within 0.9 m (3 ft.) of the server that they supply power to. If the branch circuits are contained in a metallic conduit, either rigid or nonrigid, the conduit system should be grounded. This is accomplished by bonding the conduit to the power distribution panel, which in turn, is tied to the building or transformer ground.

Power cords are supplied in 4.3 m (14 ft.) lengths unless otherwise noted in the server specifications. The length is measured from the exit symbol on the plan views. Some power plugs furnished by your seller are watertight, and should be located under the computer room raised floor.

Phase rotation

The three-phase power receptacles for some equipment, such as printers, must be wired for correct phase rotation. When looking at the face of the receptacle and counting clockwise from the ground pin, the sequence is phase 1, phase 2, and phase 3.

Emergency power control

A disconnecting means should be provided to disconnect the power from all electronic equipment in the computer room. This disconnecting means should be controlled from locations readily accessible to the operator at the principal exit doors. A similar disconnecting means to disconnect the air conditioning system serving this area should be available. Consult the local and national codes to determine the requirements for your installation. National Electric Code (NFPA 70) article 645 provides the requirements for this room EPO.

See also Precautions and Personnel Training.

Convenience outlets

A suitable number of convenience outlets should be installed in the computer room and the Service Representative area for use by building maintenance personnel and service representatives. Convenience outlets should be on the lighting or other building circuits, not on the computer power panel or feeder. Under no circumstances are the service convenience outlets on your servers to be used for any purpose other than normal servicing.

Dual-power installation configurations

These dual-power installation configurations allow you to leverage the fully-redundant power features of your server.

Some IBM Systems models are designed with a fully redundant power system. The possible power installation configurations are:

- Dual power installation - Redundant distribution panel and switch
- Dual power installation - Redundant distribution panel
- Single distribution panel - Dual circuit breakers

Dual-power installation - Redundant distribution panel and switch

This configuration requires that the system receives power from two separate power distribution panels.

Each distribution panel receives power from a separate piece of building switch gear. This level of redundancy is not available in most facilities.

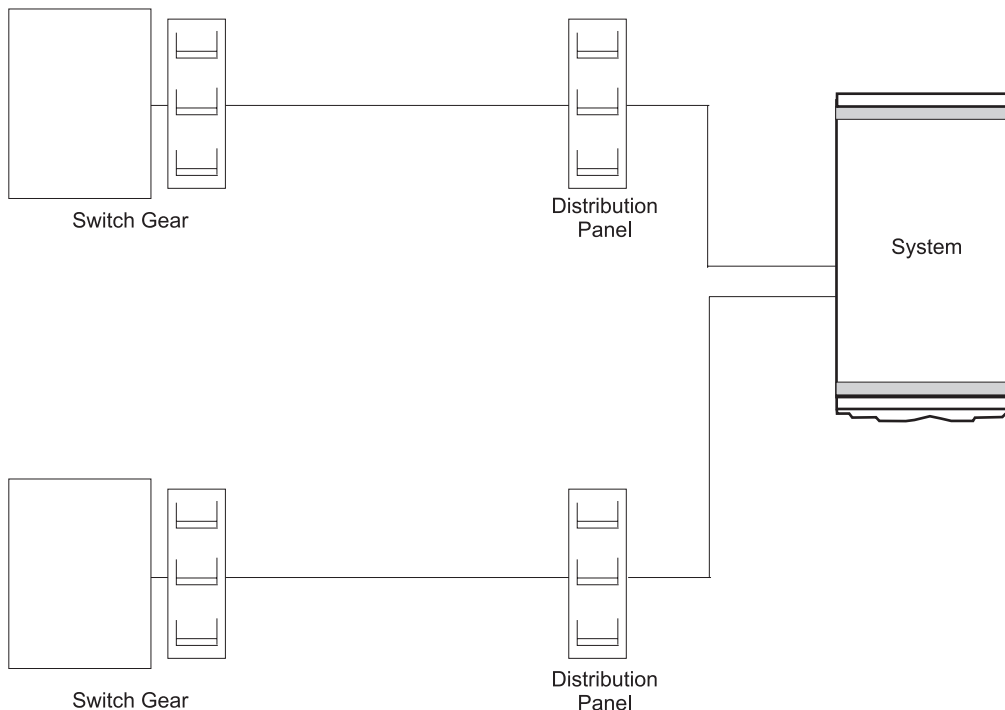


Figure 12. Dual power installation - Redundant distribution panel and switch

Dual-power installation - Redundant distribution panel

This configuration requires that the system receives power from two separate power distribution panels.

The two distribution panels receive power from the same piece of building switch gear. Most facilities should be able to achieve this level of redundancy.

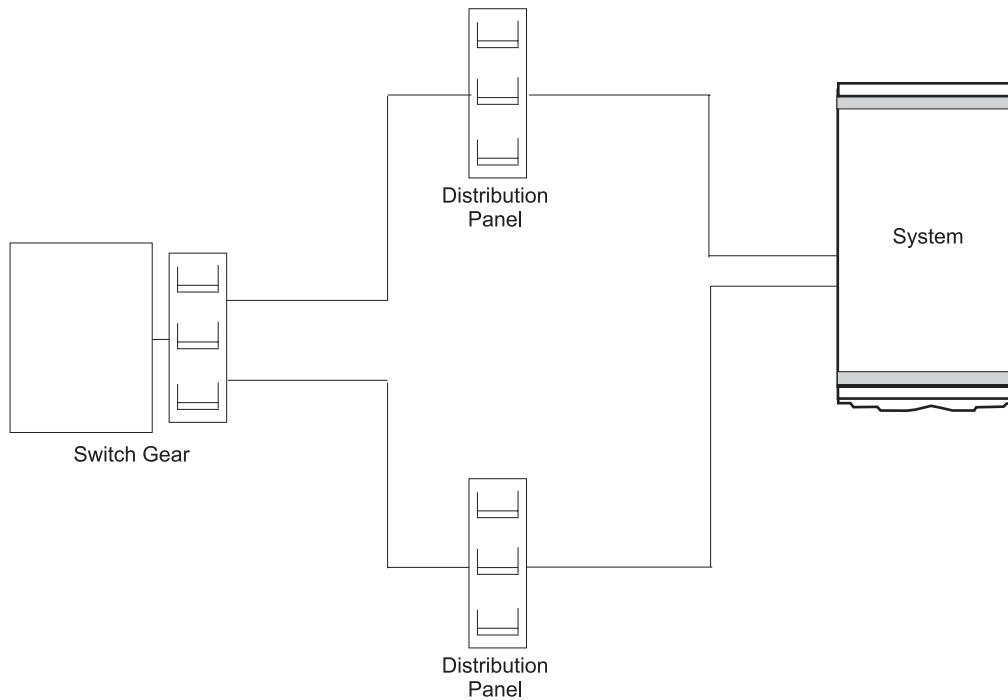


Figure 13. Dual power installation - Redundant distribution panel

Single distribution panel - Dual circuit breakers

This configuration requires that the system receives power from two separate circuit breakers in a single power panel.

This configuration does not make full use of the redundancy provided by the processor. It is, however, acceptable if a second power distribution panel is not available.

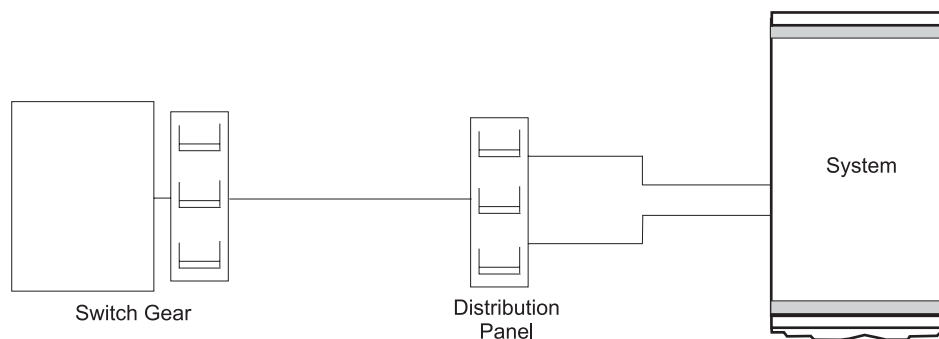


Figure 14. Single distribution panel - Dual circuit breakers

Air conditioning determination

The air conditioning system must provide year-round temperature and humidity control as a result of the heat dissipated during equipment operation.

Heat dissipation ratings are given in the server specifications for each server. Air conditioning units should not be powered from the computer power panel because of the high starting current drawn by their compressor units. The feeder line for the air conditioning system and the computer room power should not be in the same conduit.

Consider the following factors when determining the air conditioning capacity necessary for installation:

- Information technology equipment heat dissipation
- Number of personnel
- Lighting requirements
- Amount of fresh air introduced
- Possible reheating of circulated air
- Heat conduction through outer walls and windows
- Ceiling height
- Area of floors
- Number and placement of door openings
- Number and height of partitions

Most servers are air-cooled by internal blowers. A separate air conditioning system is recommended for data processing installation. A separate system might be required for small systems or individual servers intended for operation when the building air conditioning system is not adequate or is not operational. Server heat dissipation loads are given on the server specifications for each server. See the environmental requirements in the server specifications for your server.

General guidelines for data centers

Use these general guidelines to set up your data center.

Refer to the latest ASHRAE publication, "Thermal Guidelines for Data Processing Environments", dated January, 2004. This document can be purchased online at ashrae.org. A dedicated section outlines a detailed procedure for assessing the overall cooling health of the data center and optimizing for maximum cooling.

Server and storage considerations

Most IBM servers and storage products are designed to pull chilled air through the front of the server and exhaust hot air out of the back. The most important requirement is to ensure that the inlet air temperature to the front of the equipment does not exceed IBM environmental specifications. See the environmental requirements in the server specifications or hardware specification sheets. Make sure that the air inlet and exit areas are not blocked by paper, cables, or other obstructions. When upgrading or repairing your server, be sure not to exceed, if specified, the maximum allowed time for having the cover removed with the unit running. After your work is completed, be sure to reinstall all fans, heat sinks, air baffles, and other devices per IBM documentation.

Manufacturers, including IBM, are reporting heat loads in a format suggested by the ASHRAE publication, "Thermal Guidelines for Data Processing Environments", dated January, 2004. Although this data is meant to be used to for heat load balancing, care is required when using the data to balance cooling supply and demand as many applications are transient and do not dissipate constant rates of heat. A thorough understanding of how the equipment and application behave with regard to heat load, including considerations for future growth, is required.

Rack or cabinet considerations

Note: Racks are used throughout this section to also mean cabinets, frames, and any other commonly used term to identify the unit that houses rack-mounted equipment.

IBM Enterprise 19-inch racks are designed to allow maximum airflow through the equipment installed in the rack. Chilled air is pulled through the front and exhausted through the rear by the fans in the rack-mounted equipment. Most IBM racks come with a perforated rear door and an optional front door that is perforated. Some racks have optional acoustical treatment to reduce the noise emissions from the rack. If non-IBM racks are used, solid doors or doors with significant amounts of decorative glass are not recommended as these will not allow sufficient air to flow into and out of the rack.

Recirculation of hot air exiting the back of the rack into the front of the rack must be eliminated. There are two actions that can be taken to prevent air recirculation. First, filler or blanking panels must fill all unoccupied rack space that is not occupied by equipment shipped in rack. 1U and 3U filler panels are used to block air recirculation within the rack. If you do not have filler panels installed in your rack, these are available from IBM.

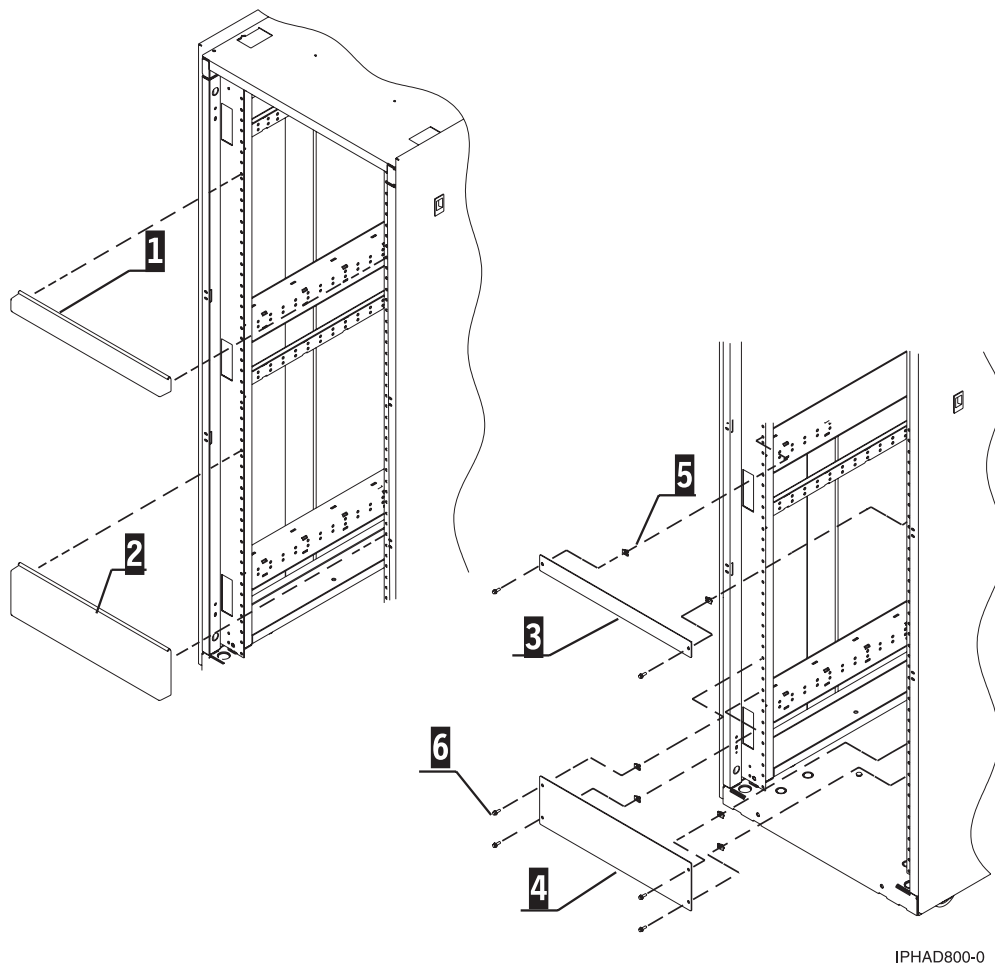


Figure 15. 1U and 3U filler panel figure and part numbers

Index number	FRU part number	Units per assembly	Description
1	97H9754	As needed	1U Filler snap (black)
	62X3443	As needed	1U Filler snap (white)
2	97H9755	As needed	3U Filler snap (black)
	62X3444	As needed	3U Filler snap (white)
3	12J4072	As needed	1U Filler snap (black)

4	12J4073	As needed	3U Filler snap (black)
5	74F1823	2 per Item 3	M5 Nut clip
	74F1823	4 per Item 4	M5 Nut clip
6	1624779	2 per Item 3	M5 X 14 Hex flange
	1624779	4 per Item 4	M5 X 14 Hex flange

Second, allow proper operating clearance around all racks. See the clearance requirements in the server specifications or hardware specification sheets. The floor layout should not allow the hot air exhaust from the back of one rack to enter the front air inlet of another rack.

Finally, proper cable management is another important element of maximizing the airflow through the rack. Cables must be routed and tied down in such a way that they do not impede the movement of air into or out of the rack. Such impedance could significantly reduce the volumetric flow of air through the equipment.

Use a fan-assisted rack or cabinet with caution. Depending upon how much equipment is installed in the cabinet, the air movers in the cabinet may limit the amount of flow to less than what is required by the equipment.

Room considerations


Data centers designed and built in the last 10 years are typically capable of cooling up to 3KW of heat load per cabinet. These designs often involve raised floor air distribution plenums 18 to 24 inches in height, room ceiling heights of 8 to 9 feet, and Computer Room Air Conditioning (CRAC) units distributed around the perimeter of the room. IT equipment occupies roughly 30-35% of the total data center space. The remaining space is white space (for example, access aisles, service clearances), power distribution units (PDUs), and CRAC units. Until recently, little attention has been given to heat load assessments, equipment layout and air delivery paths, heat load distribution, and floor tile placement and openings.

Assessing the total heat load of your installation

A total heat load assessment should be conducted to determine your overall environment balance point. The purpose of the assessment is to see if you have enough sensible cooling, including redundancy, to handle the heat load that you plan to install or have installed. There are several ways to perform this assessment, but the most common is to review the heat load and cooling in logical sections defined by I-beams, airflow blockages, or CRAC unit locations.

Equipment layout and air delivery paths


The hot-aisle, cold-aisle arrangement that is explained in the ASHRAE publication, "Thermal Guidelines for Data Processing Environments", dated January, 2004, should be used. In the following figure, racks within the data center are arranged such that there are cold aisles and hot aisles. The cold aisle consists of perforated floor tiles separating two rows of racks. The chilled air from the perforated floor tiles is exhausted from the tiles and is drawn into the fronts of the racks. The inlets of each rack (front of each rack) face the cold aisle. This arrangement allows the hot air exhausting the rear of the racks to return to the CRAC units; thus, minimizing hot exhaust air from the rack circulating back into the inlets of the racks. CRAC units are placed at the end of the hot aisles to facilitate the return of the hot air to the CRAC unit and maximize static pressure to the cold aisle.

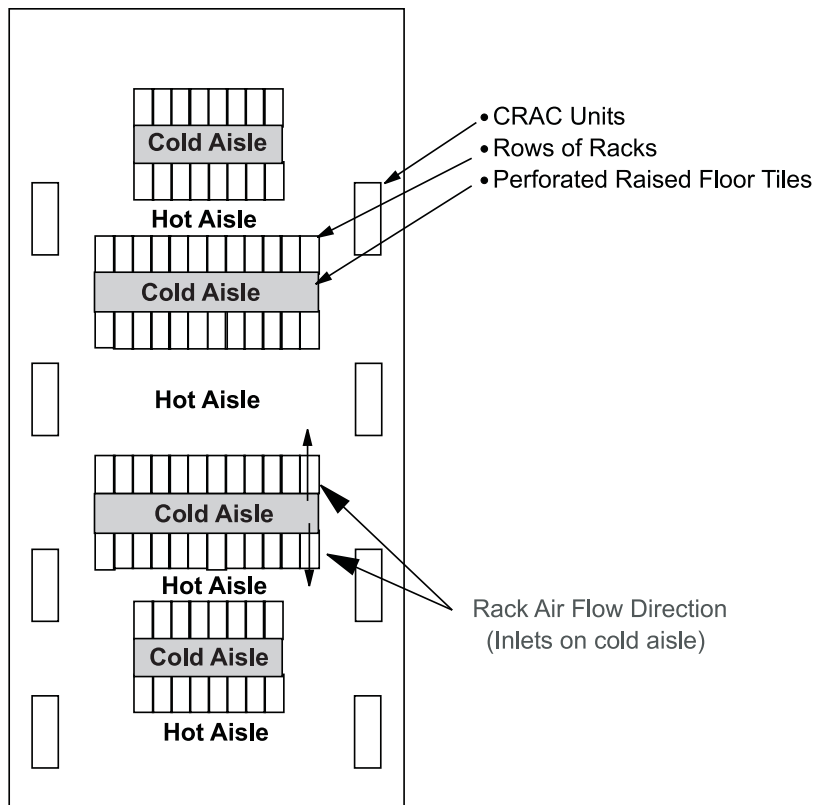

IPHAD807-0

Figure 16. Hot aisle and cold aisle arrangement

The key to heat load management of the data center is to provide inlet air temperatures to the rack that meet the manufacturer's specifications. Because the chilled air exhausting from the perforated tiles in the cold aisle may not satisfy the total chilled airflow required by the rack, additional flow will be drawn from other areas of the raised floor and may not be chilled. See the following figure. In many cases, the airflow drawn into the top of the rack, after the bottom of the rack has been satisfied, will be a mixture of hot air from the rear of the system and air from other areas. For those racks that are at the ends of a row, the hot airflow that exhausts from the rear of the rack and migrate to the front around the sides of the rack. These flow patterns have been observed in actual data centers and in flow modeling.

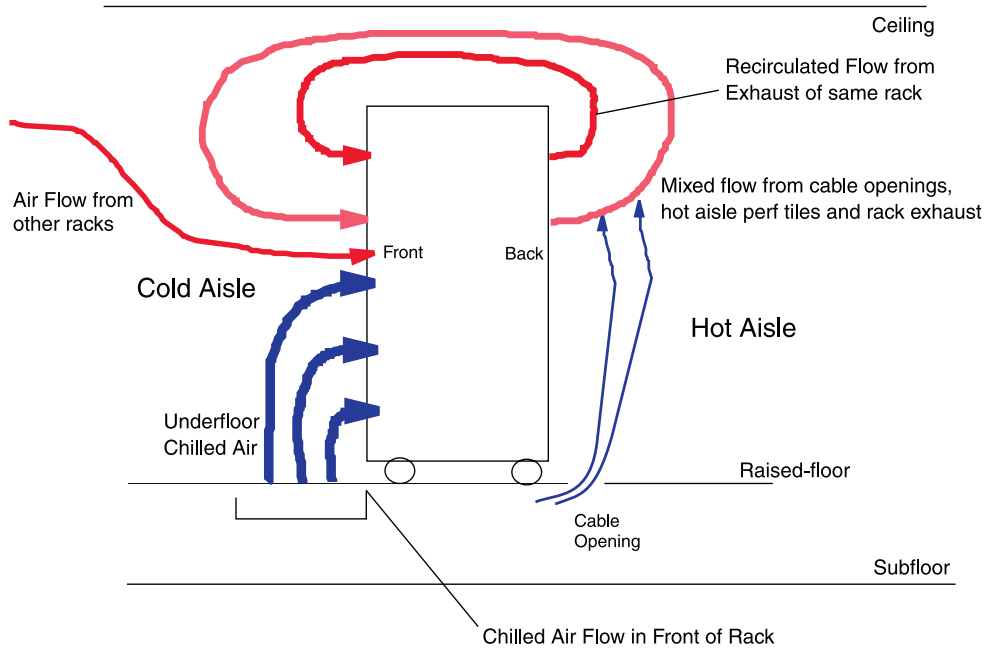

IPHAD808-0

Figure 17. Possible rack airflow patterns

For a data center that may not have the best chilled-air-flow distribution, the following figure gives guidance in providing adequate chilled airflow given a specific heat load. The chart takes into account worst-case locations in a data center and are the requirements to meet the maximum temperature specifications required by most IBM high-end equipment. Altitude corrections are noted on the bottom portion of the chart.

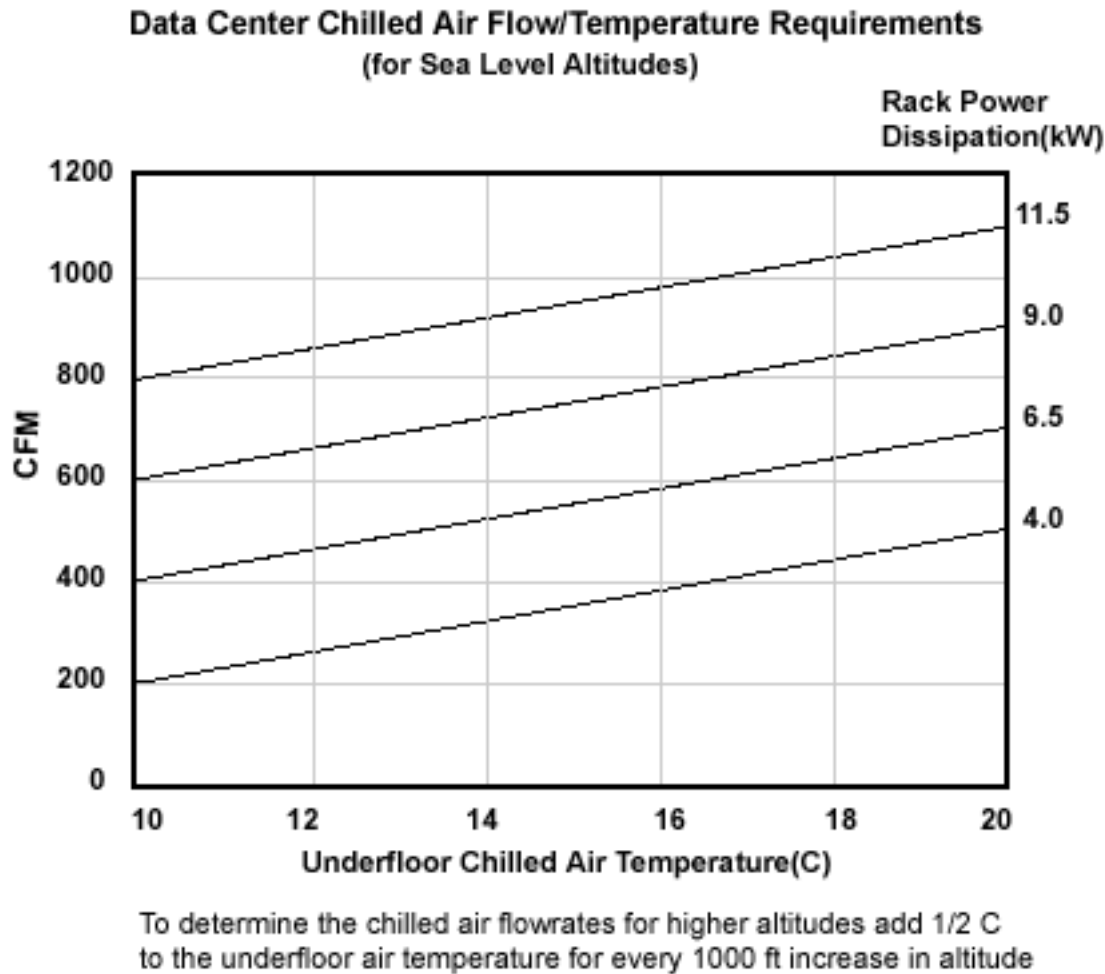


Figure 18. High-end equipment chilled airflow and temperature requirements

The most common methods for delivering supply air to the racks can be found in “System air distribution” on page 40.

Heat load distribution

Increased performance capabilities and the accompanying heat load demands have caused data centers to have hot spots in the vicinity of heat loads that exceed 3KW. Facility owners are discovering that it is becoming increasingly difficult to plan cooling schemes for large-scale deployments of high-heat-load equipment. Essentially, two different approaches can be undertaken for a large-scale, high-end server or storage deployment:

- Provide ample cooling for maximum heat load requirements across the entire data center.
- Provide an average amount of cooling across the data center with the capability to increase cooling in limited, local areas.

Option 1 is very expensive and more conducive to new construction. For option 2, a number of things can be done to optimize cooling in existing data centers and possibly raise the cooling capability in limited sections.

One recommendation is to place floor tiles with high percent-open and flow ratings in front of the high-end racks. Another recommendation is to provide special means for removing hot exhaust air from the backs of the high-end racks immediately, before it has a chance to migrate back to the air intakes on

racks in other parts of the room. This could be accomplished by installing special baffling or direct ducting back to the air returns on the CRAC units. Careful engineering is required to ensure that any recommendation does not have an adverse effect on the dynamics of the underfloor static pressure and airflow distribution.

In centers where floor space is not an issue, it would be most practical to design the entire raised floor to a constant level of cooling and depopulate racks or observe a greater distance between racks in order to meet the per-cabinet capability of the floor.

Floor tile placement and openings

Perforated tiles should be placed exclusively in the cold aisles, aligned with the intakes of the equipment. No perforated tiles should be placed in the hot aisles, no matter how uncomfortably hot. Hot aisles are, by design, supposed to be hot. Placement of open tiles in the hot aisle artificially decreases the return air temperature to the CRAC units, thereby reducing their efficiency and available capacity. This phenomenon contributes to hot spot problems in the data center. Perforated tiles should not be placed in too close proximity to the CRAC units. In areas under the raised floor where air velocities exceed about 530 feet-per-minute, usually within about six tiles of the unit discharges, a Venturi effect may be created where room air will be sucked downward into the raised floor, opposite of the desired result of upward chilled air delivery.

The volumetric flow capabilities of floor tiles with various percent-open ratings are shown in the following figure.

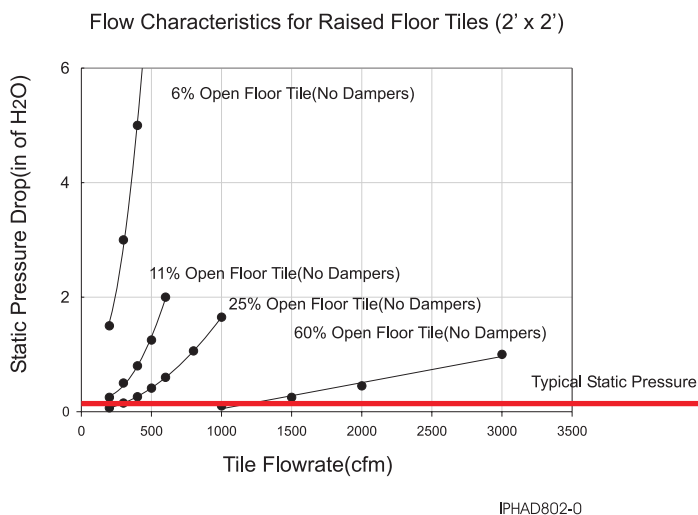


Figure 19. Volumetric flow capabilities of various raised floor tiles

Floor tiles in typical data centers deliver between 100 and 300 cfm. By optimizing the flow utilizing some of the guidelines set forth in this document, it may be possible to realize flows as high as 500 cfm. Flow rates as high as 700-800 cfm per tile are possible with tiles with the highest percent-open rating. Floor tiles must be aligned in the cold aisles with the intake locations on the equipment.

Openings in the raised-floor that are not there for the purpose of delivering chilled air directly to the equipment in the data center space should be completely sealed with brush assemblies or other cable opening material (for example, foam sheeting, fire pillows). Other openings that must be sealed are holes in data center perimeter walls, underfloor, and ceiling. Sealing all openings will help maximize under-floor static pressure, ensure optimal airflow to the cold aisles where it is needed, and eliminate short-circuiting of unused air to the CRAC unit returns.

Temperature and humidity design criteria

Use these temperature and humidity design criteria to ensure that your data center environment provides optimal conditions for your server operation.

The information technology equipment can tolerate a considerable range of temperature and humidity, as described in the server specifications for each server. Generally, the air conditioning system should be designed for 22 degrees C (71.6 degrees F) and 45 percent relative humidity at altitudes up to 2150 m (7000 ft.). This design point provides for the largest buffer in terms of available system time. If the air conditioning system fails or malfunctions, the computer will be able to operate until it reaches its specified limits. This buffer provides additional time for air conditioning repairs before the computer must be shut down. The design point has also been proven to be a generally acceptable personal comfort level.

The design points for temperature and relative humidity might differ in certain geographical areas.

Air conditioning control instruments that respond to + or - 1 degree C (+ or - 2 degrees F) temperature and + or - 5 percent relative humidity should be installed.

Computer room cooling is basically a sensible (as opposed to a latent) cooling operation. (Sensible heat is defined as the transfer of thermal energy to or from a substance resulting in a change in temperature: Latent heat is the thermal energy absorbed or evolved in a process other than change of temperature.)

Substantial deviations from the recommended design point in either direction, if maintained for long periods (that is, for hours), will expose the system to malfunction from external conditions. For example, high relative humidity levels might cause improper feeding of paper, operator discomfort, and condensation on windows and walls when outside temperatures fall below room dew point.

Low relative humidity levels alone will not cause static discharge. However, in combination with many types of floor construction, floor coverings, and furniture, static charges that are generated by movement of people, carts, furniture, and paper will be more readily stored on one or more of the objects. These charges might be high enough to be objectionable to operating personnel, if discharged by contact with another person or object. If discharged to or near information technology equipment or other electronic equipment, these charges can cause intermittent interference. In most areas, it will be necessary to add moisture to the room air to meet the design criteria.

Because temperature or relative humidity deviations for only a few hours will cause the floors, desks, furniture, cards, tapes, and paper to reach a condition that will readily permit the retention of a charge, it is recommended that the air conditioning system be automatically controlled and provided with a high or low alarm or a continuous recording device with the appropriate limits marked.

Server operating limits

Some individual servers might require special consideration and have more or less restrictive requirements. See your server specifications for specific environmental limits.

The typical server operating environment is shown in the following table. The server nonoperating limits are shown in the following *Nonoperating Server Limits* table.

Table 5. Typical server operating environment

Environmental criteria	Computer room limits	Office space air conditioned	Office space not air conditioned
Temperature	16 to 32 degrees C (60.8 to 89.6 degrees F)	16 to 32 degrees C (60.8 to 89.6degrees F)	10.0 to 40.6 degrees C (50 to 105.08 degrees F)
Relative humidity	20 to 80 percent	8 to 80 percent	8 to 80 percent

Table 5. Typical server operating environment (continued)

Maximum wet bulb	23 degrees C (73.4 degrees F)	23 degrees C (73.4 degrees F)	27.0 degrees C (80.6 degrees F)
------------------	-------------------------------	-------------------------------	---------------------------------

The design criteria is shown in the following table.

Table 6. Design criteria

Environmental criteria	Design criteria
Temperature	22 degrees C (71.6 degrees F)
Relative humidity	45 percent
Maximum wet bulb	23 degrees C (73.4 degrees F)

The recommended design is shown in the following figure.

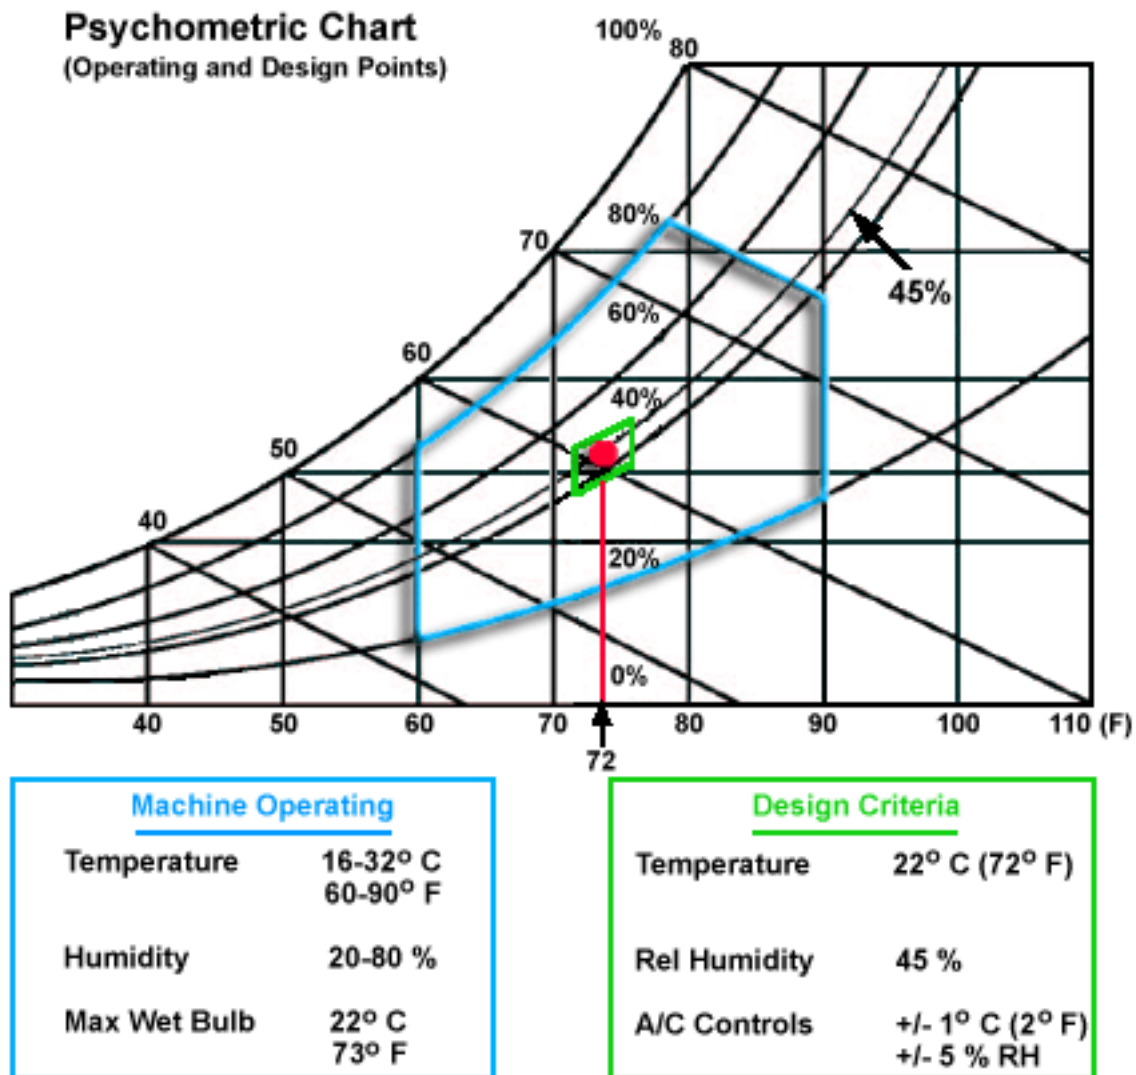


Figure 20. Recommended design

Note: The air entering the server must be at the conditions for operation before power is turned on. Under no circumstances may the server's input air, room air, or humidity exceed the upper limit of the operating conditions. This is the maximum operating temperature limit and should not be considered a design condition. Also, the relative humidity of the air entering the server should not be greater than 80 percent. This specification is an absolute maximum. The optimum condition is where the room is at the design criteria of 22 degrees C (71.6 degrees F) and 45 percent humidity.

Air temperature in a duct or an underflow air supply should be kept above the room dew point temperature to prevent condensation within or on the servers. When it is necessary to add moisture to the system for control of low relative humidity, one of the following methods should be used:

- Steam grid or jets
- Evaporation pan or pane
- Steam cup
- Water atomizers

Water treatment might be necessary in areas with high mineral content to avoid contamination of the air.

Note: In localities where the outside temperature drops below freezing, condensation will form on single, glazed window panes. Also, if outside temperatures are considerably below freezing, the outside walls of the building should be waterproofed or vapor sealed on the inside or, in time, structural damage will occur in the outside walls.

Server nonoperating limits

When the facilities are shut down, the nonoperating environmental specifications must be followed to prevent damage to the server and to ensure reliable operation when power is restored.

Table 7. Nonoperating server limits

	Server nonoperating limits
Temperature	10 to 43 degrees C (50 to 109.4 degrees F)
Relative humidity	8 to 80 percent
Maximum wet bulb	27 degrees C (80.6 degrees F)

Temperature and humidity recording instruments

Temperature and humidity recording instruments should be installed to provide a continuous record of the environmental conditions.

Direct-reading instruments with seven-day charts are suggested to monitor the ambient room conditions. Any under-floor air conditioning supply should also be monitored.

Monitoring provides the ability to:

- Assure the air conditioning system is continuously performing as designed.
- Determine whether a mandatory drying-out period is necessary when the humidity limitations are exceeded. The duration of the drying-out period is determined by the extent and duration of excess humidity.
- Determine whether a mandatory warm-up period is necessary when the building temperature has dropped below server operating specifications during off-shift hours.

A visual or audible signal should be incorporated with the recording instrument to alert personnel that ambient conditions are approaching the maximum limitations.

Relocation and temporary storage

Shipment or storage conditions that exceed the specified limits can cause permanent damage to your server. These guidelines should be followed when relocating or temporarily storing your server.

Care should be taken to ensure that a server is not stored with chemicals that can cause corrosion damage.

When a server is removed in preparation for shipment or storage, use the packaging bill of material. This might include a protective package, including blocks, braces, and preparation instructions, designed uniquely for each server. This is available from any IBM branch office. IBM large processors are designed for operation in a controlled temperature and relative humidity range, and require the environment be kept within this range even when they are in a storage area or in transit. See the individual server specifications for operating environment limits. Shipment of large processors should be in an environmentally controlled van with appropriate strapping and padding to avoid any transit damage.

Table 8. Typical shipping environment

	Shipping environment
Temperature	-40 to 60 degrees C (-40 to 140 degrees F)
Relative humidity	5 to 100 percent (no condensation)
Maximum wet bulb	1 to 27 degrees C (33.8 to 80.6 degrees F)

If shipping a large processor in a nonenvironmentally controlled van, contact your seller for packing and unpacking instructions.

Table 9. Typical storage environment

	Storage environment
Temperature	1 to 60 degrees C (33.8 to 140 degrees F)
Relative humidity	5 to 80 percent
Maximum wet bulb	1 to 29 degrees C (33.8 to 84.2 degrees F)

Acclimation

Server and storage equipment must be acclimated to the surrounding environment to prevent condensation.

When server and storage equipment is shipped in a climate where the outside temperature is below the dew point of an indoor location, there is a possibility that water condensation will form on the cooler surfaces inside the equipment when brought into a warmer indoor environment. If condensation occurs, sufficient time must be allowed for the equipment to reach equilibrium with the warmer indoor temperature before removing the shipping bag, if used. Leave the system in the shipping bag, if used, for up to 48 hours, or until there is no visible signs of condensation, to let it acclimate to the indoor environment.

System air distribution

Careful attention should be given to the method of air distribution to eliminate areas of excessive air motion and hot spots.

Regardless of the type of system, it should use predominantly recirculated air with a set minimum of fresh air for personnel. This helps eliminate the introduction of dust, reduces the latent load, and allows

the system to carry on a sensible cooling operation. The various methods of air distribution and computer room air conditioning (CRAC) are shown in the following figures.

In general you should ensure that the design supply and return air temperatures are within the manufacturer's specifications for CRAC units.

Underfloor air distribution

In underfloor air distribution, the space between the regular building floor and the raised floor is used as a means to supply air for equipment cooling (see the following figure). Concrete subfloors might require treatment to prevent the release of dust. Air is discharged into the room through perforated panel floor registers. The air is returned directly to the air conditioning system or by means of a ceiling return system. Remove obsolete cabling (as required in the United States National Electrical Code) and seal all raised-floor openings that are not specifically intended to supply cool air to equipment intakes.

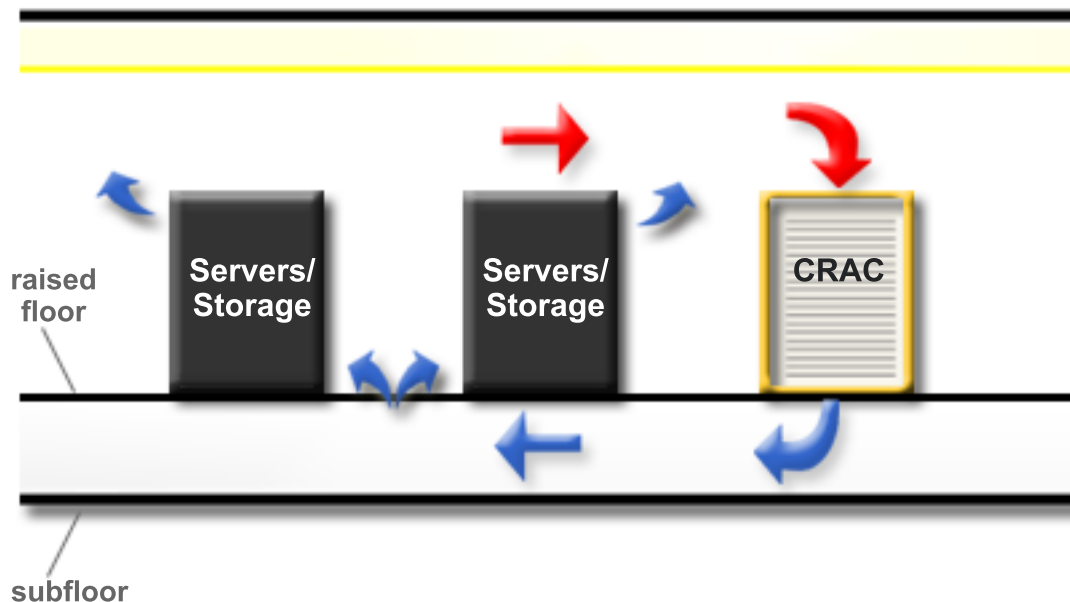


Figure 21. Underfloor air distribution

A higher return air temperature can be tolerated in underfloor air distribution without affecting the design conditions of the overall room. The underfloor design takes into consideration a heat transfer factor through the raised metal floor and also provides some reheated air to control the relative humidity before it enters the room.

A temperature control system would consist of the same controls as described for the single duct system. In addition, the system must have controls for air temperature in the under floor supply system to prevent under floor temperatures from getting below the room dew point. Air entering the server through the cable holes must be within operating limits. (See Server operating limits).

Combination overhead and under floor system

For a combination overhead and under floor air circulation design, the primary air conditioning unit is inside the room and the secondary air conditioning unit is outside the room. See following figure.

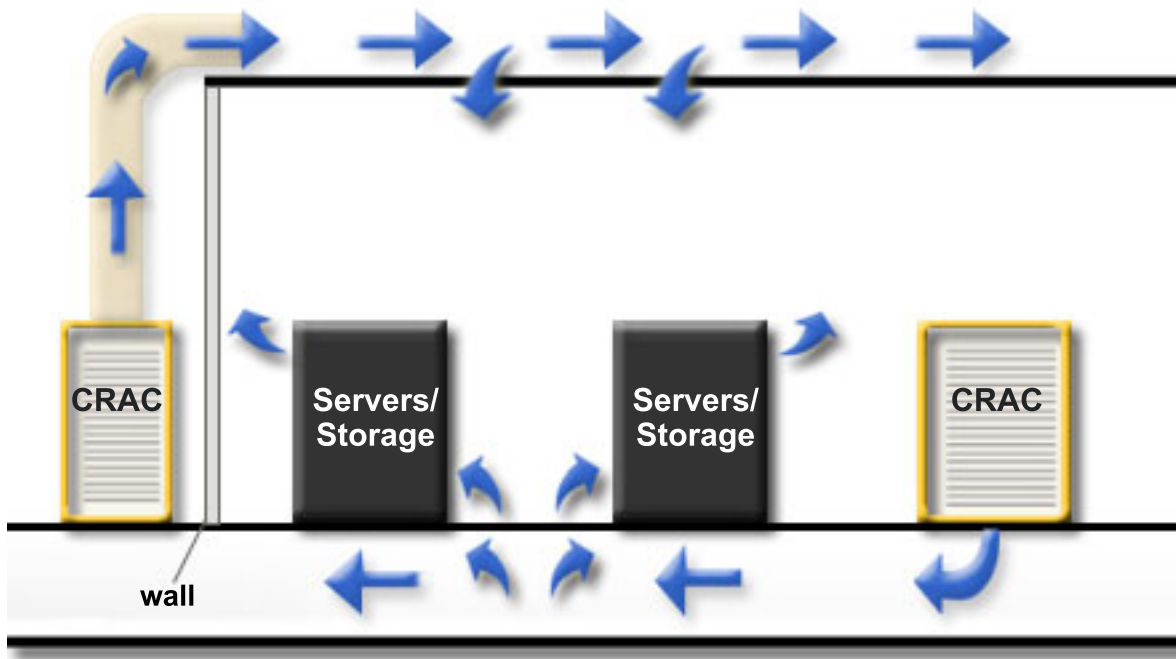


Figure 22. Combination overhead and underfloor air conditioning system

An air handler, with separate controls, supplies conditioned and filtered air to the area under the raised floor. The air is discharged into the room through floor panels or registers. This air absorbs the heat generated by the server and is discharged from the top or rear of the servers into the room. The relative humidity of the air supplied to the information technology equipment should be below 80 percent and the temperature should be controlled to prevent condensation on or within the servers. It might be necessary to provide for a reheating system to operate with the cooling unit to control relative humidity.

The second air handling system supplies air directly to the room through a separate supply system and should be large enough to absorb the remaining heat load in the computer room. It should maintain room temperature and relative humidity as specified and give continuous air conditioning and ventilation.

Overhead air circulation

In overhead air circulation, the entire heat load of the room or area, including the heat generated by the information technology equipment, is absorbed by the air supplied to the computer room and the area diffuser system or by a pressurized ceiling supply.

The air returned to the air conditioning system is from either ceiling return registers above the heat-producing servers, or from a fixed pattern of return registers both in the ceiling and on the walls of the room. The following figure shows an overhead air circulation system.

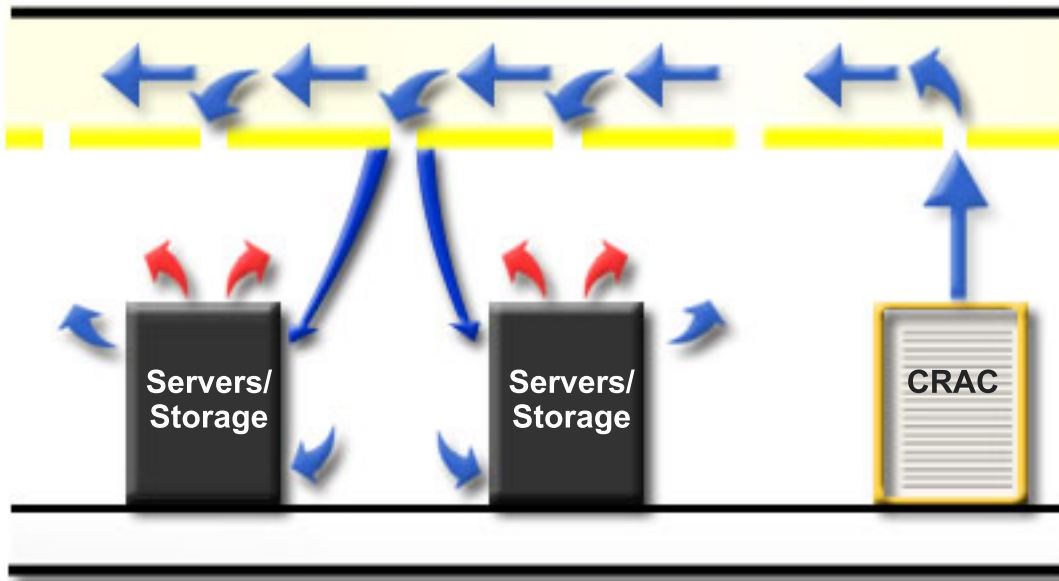


Figure 23. Overhead air distribution system

To maximize the cooling capability of such an arrangement, it is imperative to align the supply discharges with the cold aisles and the return grilles with the hot aisles. The supply discharges should force air directly down into the cold aisles and not use diffusers that distribute air laterally. Such diffusion can cause cool air to migrate undesirably into the return air path prior to having the opportunity to transfer heat from the equipment.

A temperature control system should consist of temperature and humidity controls. These controls should be placed in a representative location within the machine room. The temperature and humidity recorder (described in the “Temperature and humidity design criteria” on page 37 topic) should be mounted next to the controls to monitor conditions.

Air filtration

A high efficiency filter should be installed to filter all air supplied to the computer room. Because mechanical and electrostatic air cleaners operate on different principles, a different rating is specified for each type. Ratings are determined by using the test methods outlined in the American Society of Heating, Refrigeration and Air Conditioning Engineers (ASHRAE) Standard No. 52-76 (or national equivalent). Special air filtration is necessary where installations are exposed to corrosive gases, salt air, or unusual dirt or dust conditions.

Mechanical air filters must be rated at a minimum initial atmospheric dust-spot efficiency of 40 percent.

Electrostatic air filters are designed to operate at 85 to 90 percent efficiency at a given face velocity. The filter must be operated in accordance with the manufacturer’s recommendation to prevent bypass and ozone buildup, which can be detrimental to certain servers.

Air quality

If you are installing your system in a typical business office or clean industrial location, you probably do not have to worry about the quality of the surrounding air. However, if your site is unusually dirty or has a chemical odor, you should be concerned. Dirt and corrosive gases can cause corrosion and possible equipment damage.

High concentrations of gases such as sulfur dioxide, nitrogen dioxide, ozone, and acidic gaseous chlorine associated with industrial processes are known to cause corrosion and failure of electronic components. If you have any reason to suspect the presence of a corrosive gas (for example, the presence of an odor), determine what contaminant is in the air and whether it is in high enough concentrations to be harmful to your system. In addition to gases, some industrial processes produce particulate contamination. These particles can settle (in the form of dust) in surrounding areas even though the process producing the particles might be some distance away.

Testing for gases and particulate in the air involves special equipment and procedures. Your seller can provide guidance.

Planning for the installation of IBM Rear Door Heat Exchanger for 7014-T42

Use this information to prepare your location to facilitate the use of the IBM Rear Door Heat Exchanger for 7014-T42.

The heat exchanger is a water-cooled device that mounts on the rear of IBM 19-inch EIA-rail and 24-inch EIA-rail Enterprise racks to cool the air that is heated and exhausted by devices inside the rack. A supply hose delivers chilled, conditioned water to the heat exchanger. A return hose delivers warmed water back to the water pump or chiller. This is referred to as a secondary cooling loop. The primary cooling loop supplies the building chilled water to secondary cooling loops, air conditioning units, and so on. The hoses for the secondary cooling loop are not included with the heat exchanger kit. The rack on which you install this cooling feature can be on a raised floor or a non-raised floor. Each rear door heat exchanger can remove up to 50 000 Btu/hr (or approximately 15 000 watts) of heat from your data center.

Suggestions for sources of hoses, water treatment and cooling distribution units for supplying conditioned water are provided under “Suggested sources for secondary loop components” on page 67.

If you would like to procure IBM installation planning services regarding what is needed to plan for supplying conditioned water and installing the heat exchangers, see “Installation and support from IBM Integrated Technology Services Offerings” on page 69.

The following topics provide the detailed planning specifications for the heat exchanger environment.

- Rear door heat exchanger specifications
- Water specifications for the secondary cooling loop
- Water delivery specifications for secondary loops
- Layout and mechanical installation

Planning considerations overview

High-level planning considerations for the heat exchanger are as follows.

1. Provide chilled, conditioned water to the heat exchangers that meets the specifications outlined in “Water specifications for the secondary cooling loop” on page 48.
2. Procure and install the water supply system that is suitable for your data center. Details are provided in “Water delivery specifications for secondary loops” on page 50
3. Provide floor tile cutouts on raised floors, or protective coverings to avoid trip hazards on non-raised floors as part of hose management.

Heat exchanger specifications

Heat exchanger specifications provide detailed information for your heat exchanger, including dimensions, weight, air source, water source, water pressure and water volume.

The following are the specifications for the heat exchanger.

Table 10. Operating specifications for 19-inch EIA-rail heat exchanger

<p>Door size</p> <ul style="list-style-type: none"> • Depth: 142.6 mm (5.6 in.) • Height: 1945.4 mm (76.6 in.) • Width: 639 mm (25.2 in.) <p>Exchanger size</p> <ul style="list-style-type: none"> • Depth: 67 mm (2.6 in.) • Height: 1791.3 mm (70.5 in.) • Width: 438.6 mm (17.3 in.) <p>Door assembly weight</p> <ul style="list-style-type: none"> • Empty: 29.9 kg (66 lb.) • Filled: 35.6 kg (78.5 lb.) <p>Door heat removal capacity</p> <ul style="list-style-type: none"> • Lab tests indicate 50 to 60 percent of total rack heat output can be removed by the door • Up to 15 kW (50 000 Btu/hr) heat removal possible 	<p>Air movement</p> <ul style="list-style-type: none"> • Provided by servers and other devices in the rack <p>Air source for servers</p> <ul style="list-style-type: none"> • Room air for front of rack. Air exhausts servers, moves through rear door heat exchanger and exits into the room (open loop) <p>Air temperature drop</p> <ul style="list-style-type: none"> • The temperature drop can be up to 25 degrees C (45 degrees F) between the air exiting the rack devices and the air exiting the heat exchanger on high heat load products. <p>Air impedance</p> <ul style="list-style-type: none"> • Air pressure drop across the heat exchanger is equivalent to the IBM acoustic 19-inch rear door 	<p>Water source</p> <ul style="list-style-type: none"> • User-supplied, compliant with specifications in this topic. <p>Water pressure</p> <ul style="list-style-type: none"> • Normal operation: 137.93 kPa (20 psi) • Maximum: 689.66 kPa (100 psi) • Pressure drop across heat exchanger: approximately 48 kPa (7 psi) <p>Water volume</p> <ul style="list-style-type: none"> • Exchanger: 2.8 liters (0.75 gallons) • Exchanger plus supply and return hoses to the pump unit: Maximum of approximately 15.1 liters (4.0 gallons) excluding pump unit piping and reservoir <p>Water temperature</p> <ul style="list-style-type: none"> • If no dew point control is available from the secondary loop cooling distribution unit, 18 degrees C +/- 1 degree C (64.4 degrees F +/- 1.8 degrees F) must be maintained. • Lower temperature water is allowed as long as the water supply is monitored and adjusted to remain above room dew point (where heat exchanger is located). <p>Required water flow rate (as measured at the supply entrance to the heat exchanger)</p> <ul style="list-style-type: none"> • Minimum: 22.7 liters per minute (6 gallons per minute) • Maximum: 37.9 liters per minute (10 gallons per minute)
---	---	--

Table 11. Operating specifications for 24-inch EIA-rail heat exchanger

<p>Door size</p> <ul style="list-style-type: none"> • Depth: 142.6 mm (5.6 in.) • Height: 1945.4 mm (76.6 in.) • Width: 771.8 mm (30.5 in.) <p>Exchanger size</p> <ul style="list-style-type: none"> • Depth: 67 mm (2.6 in.) • Height: 1791.3 mm (70.5 in.) • Width: 574.6 mm (22.6 in.) <p>Door assembly weight</p> <ul style="list-style-type: none"> • Empty: 31.7 kg (70 lb.) • Filled: 39.9 kg (88.2 lb.) <p>Door heat removal capacity</p> <ul style="list-style-type: none"> • Lab tests indicate 10 percent improvement over the 19-inch version of the door. • Up to 17 kW (58 000 Btu/hr) heat removal possible 	<p>Air movement</p> <ul style="list-style-type: none"> • Provided by servers and other devices in the rack <p>Air source for servers</p> <ul style="list-style-type: none"> • Room air for front of rack. Air exhausts servers, moves through rear door heat exchanger and exits into the room (open loop) <p>Air temperature drop</p> <ul style="list-style-type: none"> • The temperature drop can be up to 25 degrees C (45 degrees F) between the air exiting the rack devices and the air exiting the heat exchanger on high heat load products. <p>Air impedance</p> <ul style="list-style-type: none"> • Air pressure drop across the heat exchanger is equivalent to the IBM acoustic 24-inch rear door 	<p>Water source</p> <ul style="list-style-type: none"> • User-supplied, compliant with specifications in this topic. • 3/4-inch couplings on floor • Minimum 3/4-inch inside diameter hose required <p>Water pressure</p> <ul style="list-style-type: none"> • Normal operation: 137.93 kPa (20 psi) • Maximum: 689.66 kPa (100 psi) • Pressure drop across heat exchanger: approximately 48 kPa (7 psi) <p>Water volume</p> <ul style="list-style-type: none"> • Exchanger: 5.3 liters (1.4 gallons) • Exchanger plus supply and return hoses to the pump unit: Maximum of approximately 15.1 liters (4.0 gallons) excluding pump unit piping and reservoir <p>Water temperature</p> <ul style="list-style-type: none"> • If no dew point control is available from the secondary loop cooling distribution unit, 18 degrees C +/- 1 degree C (64.4 degrees F +/- 1.8 degrees F) must be maintained. • Lower temperature water is allowed as long as the water supply is monitored and adjusted to remain above room dew point (where heat exchanger is located). <p>Required water flow rate (as measured at the supply entrance to the heat exchanger)</p> <ul style="list-style-type: none"> • Minimum: 22.7 liters per minute (6 gallons per minute) • Maximum: 37.9 liters per minute (10 gallons per minute)
--	---	--

Heat exchanger option kit

The heat exchanger feature kit consists of the components listed below and shown in the following figures.

- Door assembly
- Hinge kit
- Air-purge tool


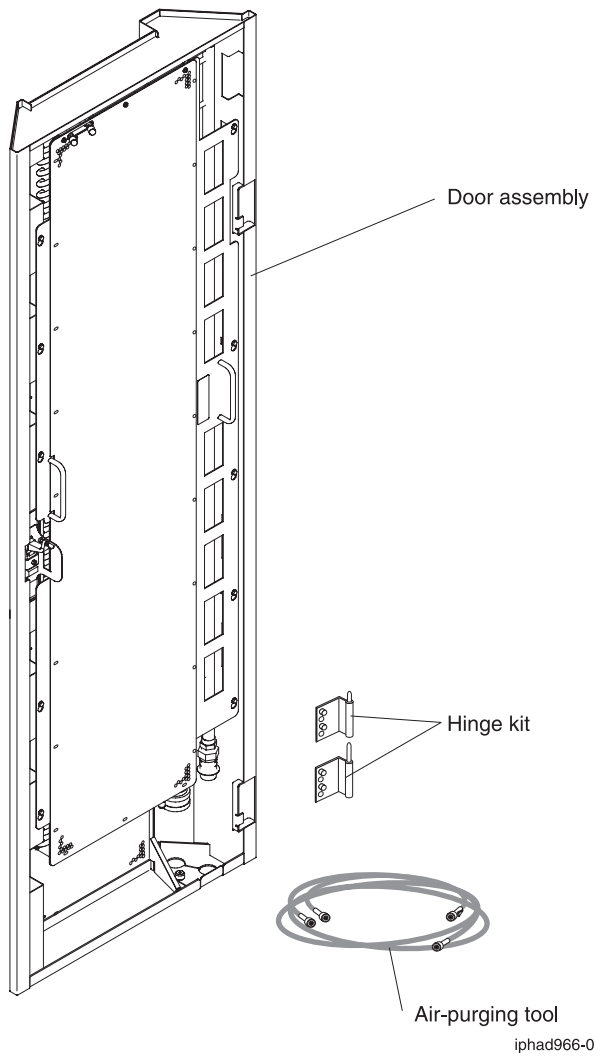


Figure 24. Components of the heat exchanger kit for 19-inch EIA-rail racks

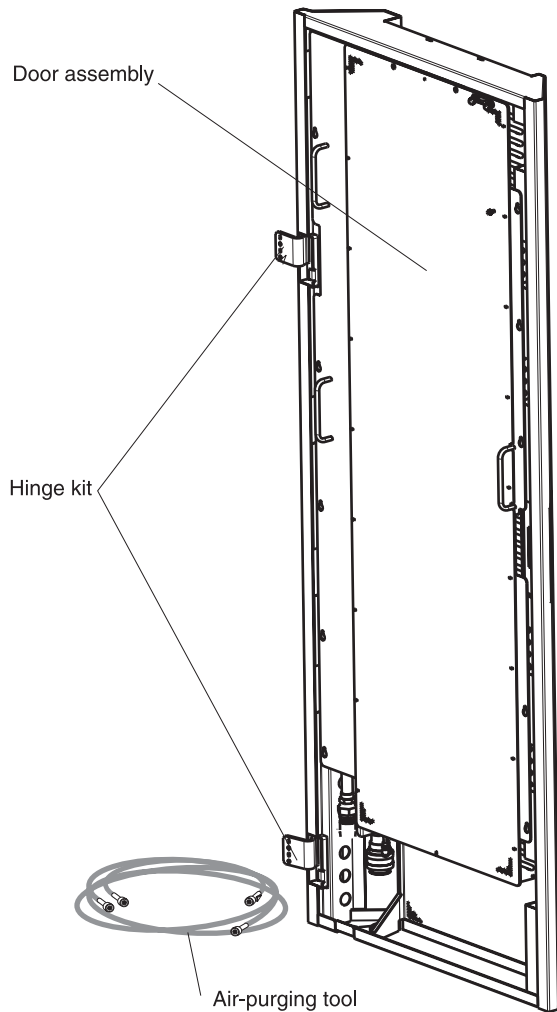

iphad984-0

Figure 25. Components of the heat exchanger kit for 24-inch EIA-rail racks

Water specifications for the secondary cooling loop

Learn about the water specifications required for the secondary cooling loop of your heat exchanger.

It is important that the water being supplied to the heat exchanger meet the requirements described in this topic; otherwise, system failures might occur over time, as a result of:

- Leaks due to corrosion and pitting of the metal components of the heat exchanger or the water supply system
- Buildup of scale deposits inside the heat exchanger, which can cause the following problems:
 - A reduction of the heat exchanger's ability to cool the air that is exhausted from the rack.
 - Failure of mechanical hardware, such as a hose quick-connect adapter.
- Organic contamination, such as bacteria, fungi, or algae. This contamination can cause the same problems as described for scale deposits.

Water control and conditioning for the secondary cooling loop

The water used to fill, refill, and supply the heat exchanger must be particle-free deionized water or particle-free distilled water with appropriate controls for avoiding the following issues.

- Metal corrosion
- Bacterial fouling
- Scaling

Because of typical water temperatures (described in “Water delivery specifications for secondary loops” on page 50), the water may not be able to originate from the primary building chilled-water system. Conditioned water for the heat exchanger should be supplied as part of a secondary, closed-loop system.

Important: Use of glycol solutions is not recommended because they can adversely affect the cooling performance of the heat exchanger.

Materials for secondary loops

This topic describes the materials for use in supply lines, connectors, manifolds, pumps, hoses, and any other hardware that makes up the closed-loop water-supply system at your location.

- Copper
- Brass with less than 30 percent zinc content
- Stainless steel – 303, 304, or 316
- Ethylene Propylene Diene Monomer (EPDM) rubber – peroxide cured, non-metal oxide

Materials to avoid in secondary loops

Do not use any of the following materials in any part of your water supply system.

- Oxidizing biocides, such as, chlorine, bromine, and chlorine dioxide
- Aluminum
- Brass with greater than 30 percent zinc
- Irons (non-stainless steel)

Water supply requirements for secondary loops

This topic describes specific characteristics of the system that supplies the chilled conditioned water to the heat exchanger.

Temperature

The heat exchanger, its supply hose and return hoses are not insulated and do not have features designed to address the creation and collection water from condensate. Avoid any condition that could cause condensation. The temperature of the water inside the supply hose, return hose, and the heat exchanger must be kept above the dew point of the location where the heat exchanger is being used.

Attention: Typical primary chilled water is too cold for use in this application because building chilled water can be as cold as 4 - 6 degrees C (39 to 43 degrees F).

Important: If the system supplying the cooling water does not have the ability to measure the room dew point and automatically adjust the water temperature accordingly, the minimum water temperature that must be maintained is 18 degrees C plus or minus 1 degree C (64.4 degrees F plus or minus 1.8 degrees F). This is consistent with the ASHRAE Class 1 Environmental Specification that requires a maximum

dew point of 17 degrees C (62.6 degrees F). Refer to the ASHRAE document entitled *Thermal Guidelines for Data Processing Environments*. Information on obtaining this document is found at www.ashrae.org. Search on document id ASHRAE TC 9.9.

Pressure

The water pressure in the secondary loop must be less than the maximum 689.66 kPa (100 pounds per square inch). Somewhere in the water circuit, a pressure relief valve, set to this maximum value, is required for safety reasons. Normal operating pressure at the rear door heat exchanger should be 137.93 kPa (20 psi) or less.

Flow rate

The flow rate of the water in the system must be in the range of 23 - 38 liters per minute (6 - 10 gallons per minute).

Pressure drop versus flow rate for heat exchangers (including quick-connect couplings) is defined as approximately 48 kPa (7 psi) at 30 liters per minute (8 gallons per minute). Adjustable flow valves are recommended for installation on all supply lines of the water circuit, to enable compliance, to this flow specification.

Water volume limits

The heat exchangers hold between 2.8 liters (0.75 gallons) and 5.3 liters (1.4 gallons). Fifteen meters (50 ft.) of 19 mm (0.75 in.) supply and return hoses hold approximately 9.4 liters (2.5 gallons). To minimize exposure to flooding in the event of leaks, the entire product cooling system (heat exchanger, supply hose and return hose) excluding any reservoir tank should have a maximum 15.1 liters (4 gallons) of water. This is a cautionary statement not a functional requirement. Also consider using leak detection methods on the secondary loop that supplies water to the heat exchanger.

Air exposure

The secondary cooling loop is a closed loop, with no continuous exposure to room air. After you fill the loop, remove all air from the loop. Air bleed valves are provided at the top of each heat exchanger manifold for purging all air from the system.

Water delivery specifications for secondary loops

The delivery system secondary loop provides chilled water to the heat exchanger. The secondary loop consists of the components listed.

This topic describes the various hardware components that make up the delivery system secondary loop that provides the chilled, conditioned water to the heat exchanger. The delivery system includes pipes, hoses and the required connection hardware to attach to the heat exchanger. Hose management on raised or non-raised floor environments is also described.

The heat exchanger can remove 50-60 percent of the heat load from an individual rack when water is supplied to at 18 degrees C (64 degrees F) and the door is running under optimum conditions. For sizing purposes, consider a rack that produces a heat load of X watts. The heat exchanger can remove 0.5X watts before the heated air enters the room.

The primary cooling loop is considered to be the low temperature building chilled-water supply or a modular chiller unit. The primary loop must not be used as a direct source of coolant for the heat exchanger for two main reasons. First, below-dew-point water will cause air moisture to form on the door heat exchanger as it operates (condensation will drip and gather under the rack). Second, if proper leak detection is not established (for example, monitored leak tape, hose-in-trough with leak sensors and


automatic shut-off valves) and a leak in the door, hoses or manifolds occurs, the constant, large supply of primary loop water could result in large amounts of water leaking into the data center. Water provided in a controlled and monitored secondary, closed loop, would limit the amount of water available in a leak situation, and prevent condensation from forming.

Procurement and the installation of the components needed to create the secondary cooling loop system are required for this design and are your responsibility. For suggestions on where to procure hoses and cooling distribution units, see “Flexible hose suppliers” on page 68 and “Cooling distribution unit suppliers” on page 68. The main purpose of this topic is to provide examples of typical methods for secondary loop set-up and operating characteristics that are needed to provide an adequate, safe supply of water to the heat exchanger. Key components recommended for the water supply and return lines are:

- Couplings to match those provided on the heat exchanger
- Flexible hoses
- Thermal feedback to a flow valve that will adjust and control supply water temperature
- Pressure relief valve
- Shutoff valves for each line running to a door
- Adjustable flow valves for each supply line to a door

The actual number of heat exchangers connected to a secondary loop depends on the capacity of the secondary loop to transfer heat to the primary loop. For example, if the secondary loop can remove 100 kW of heat load and you have multiple 25 kW racks, you could have 12.5 kW per rack (assuming 50 percent door heat removal) going into the water loop, and attach eight doors per secondary loop.

The following figure shows an example of a facilities fabricated solution. The actual number of heat exchangers connected to a secondary loop depends on the capacity of the cooling distribution unit that is running the secondary loop.

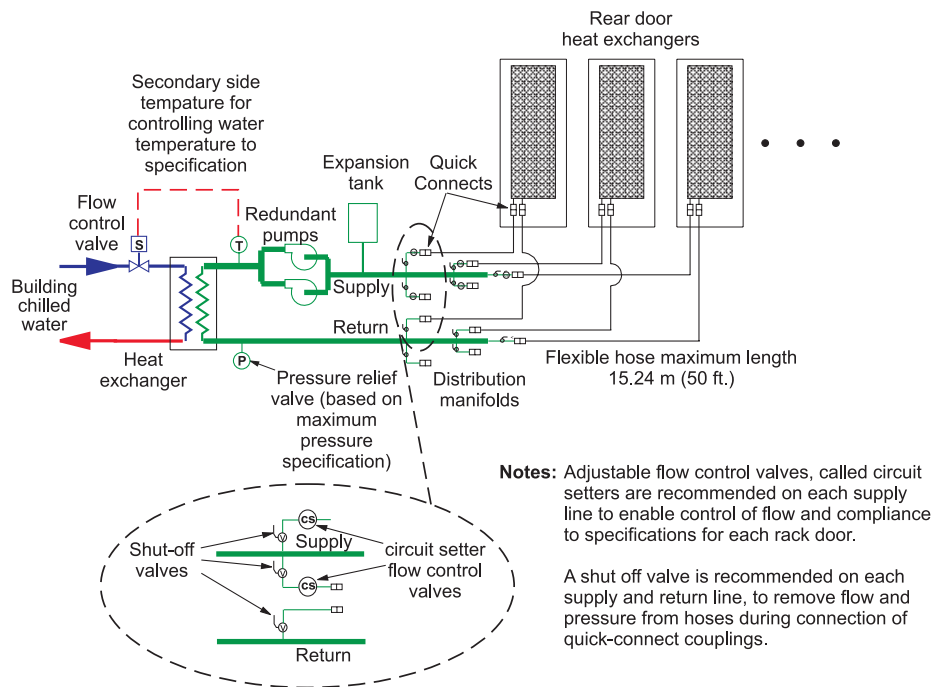

iphad968-2

Figure 26. Coolant distribution using a fabricated facilities solution

The following figure shows an example of an off-the-shelf modular cooling distribution unit. The actual number of heat exchangers connected to a secondary loop depends on the capacity of the cooling

distribution unit that is running the secondary loop.

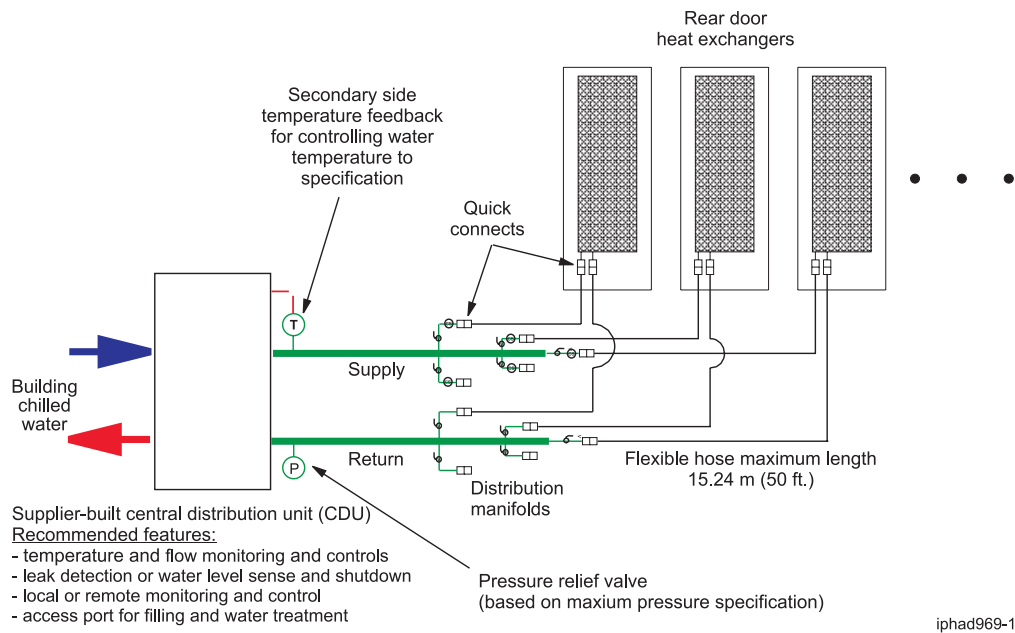


Figure 27. Coolant distribution using off-the-shelf supplier solutions

The following figure shows a typical cooling solution and defines the components of the primary cooling loop and the components of the secondary cooling loop.

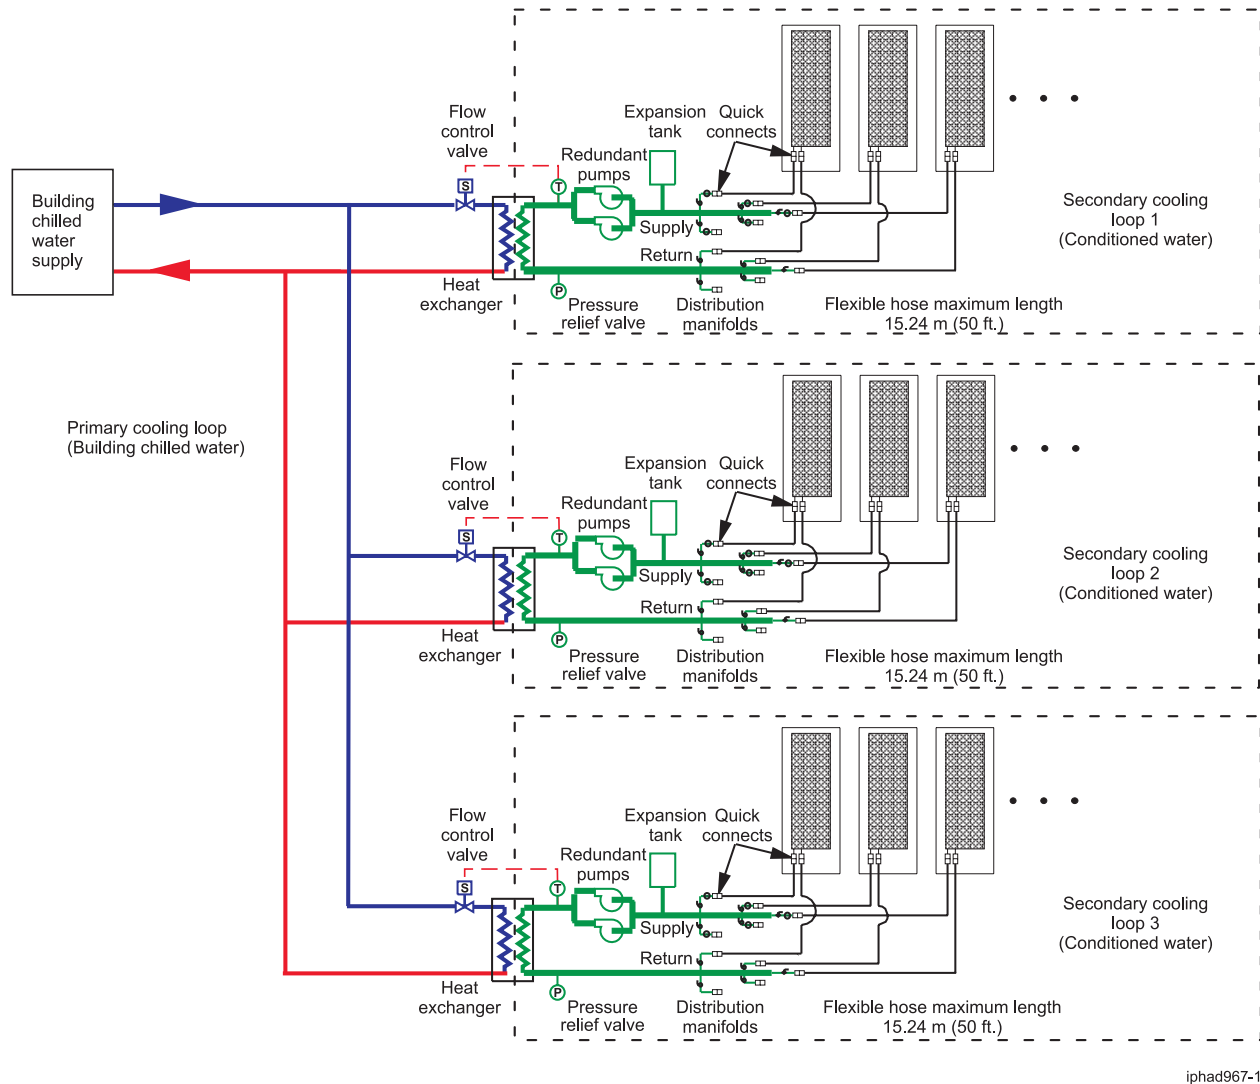


Figure 28. Primary and secondary cooling loops

Manifolds and piping

Manifolds that accept large-diameter feed pipes from a pump unit are the preferred method for splitting the flow of water to smaller diameter pipes or hoses that are routed to individual heat exchangers. Manifolds must be constructed of materials compatible with the pump unit and related piping. See Materials for secondary loops. The manifolds must provide enough connection points to allow a matching number of supply and return lines to be attached and the manifolds must match the capacity rating of the pumps and heat exchanger (between the secondary cooling loop and building chilled-water source). Anchor or restrain all manifolds to provide the required support to avoid movement when quick-connect couplings are plugged to the manifolds and when valves are opened or closed.

Example manifold supply pipe sizes

- Use a 50.8 mm (2 in.) supply pipe to provide the correct flow to six (100 kW CDU) 19 mm (0.75 in.) supply hoses.
- Use a 63.5 mm (2.50 in.) supply pipe to provide the correct flow to eight (120 kW CDU) 19 mm (0.75 in.) supply hoses.
- Use an 88.9 mm (3.50 in.) supply pipe to provide the correct flow to twenty (300 kW CDU) 19 mm (0.75 in.) supply hoses.

Shutoff valves are suggested for each supply and return line that exits the manifold to allow stopping the flow of water in individual lines of multiple circuit loops. This provides a way of servicing or replacing an individual heat exchanger without affecting the operation of other heat exchangers in the loop.

Adjustable flow valves (called circuit setters) are also suggested for each supply line that exits a supply manifold so changes can be made to the flow to each individual rack, in the event that door heat exchangers are added or removed from the secondary loop (this method keeps water flow within specification to each door heat exchanger).

Temperature and flow metering (monitoring) are suggested in secondary loops, to provide assurance that water specifications are being met and that the optimum heat removal is taking place.

Anchor or restrain all manifolds and pipes to provide the required support, and to avoid movement when quick-connect couplings are being attached to the manifolds.

The following figure shows an example of a typical central manifold layout that supplies water to multiple heat exchangers.


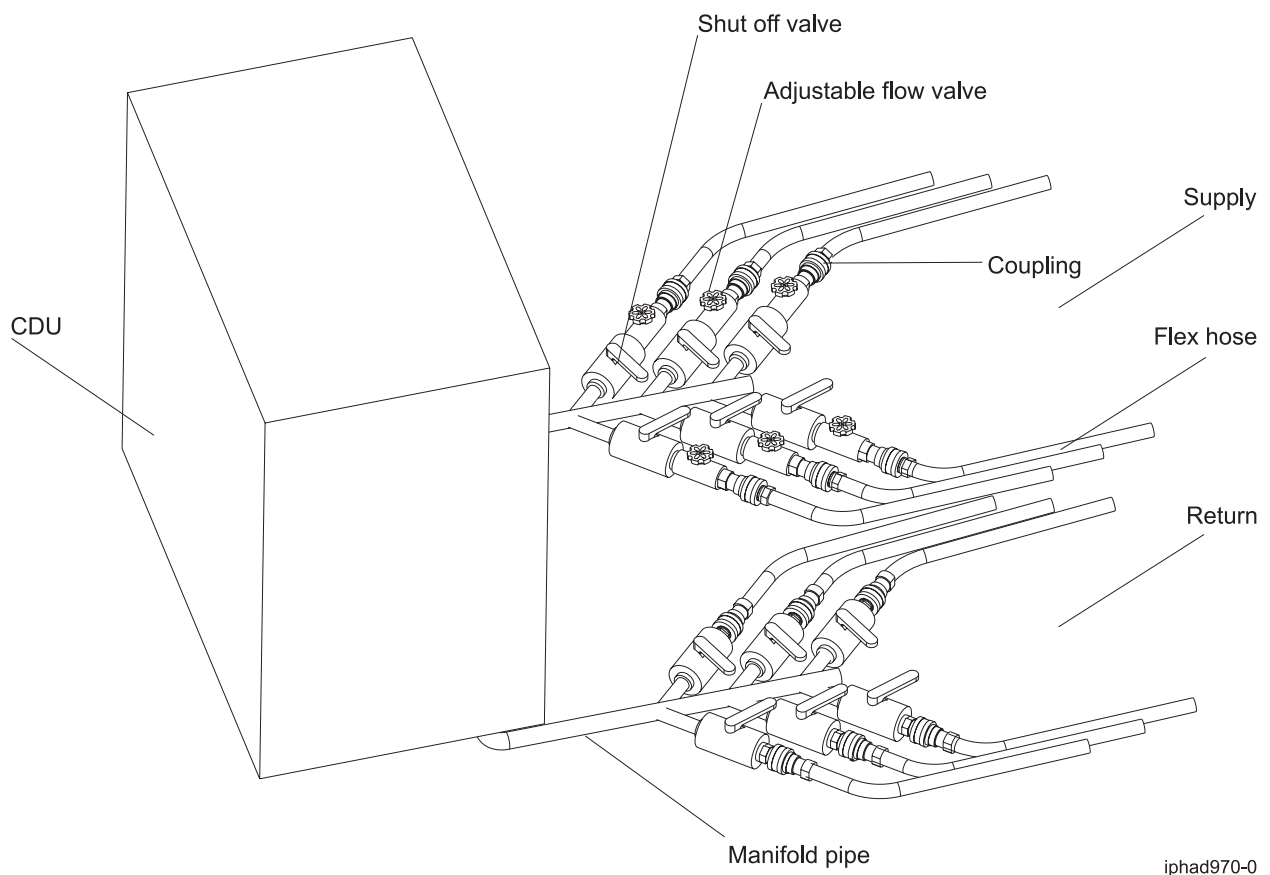


Figure 29. Typical central distribution manifold layout in a central location


The following figure shows another layout for multiple water circuits.

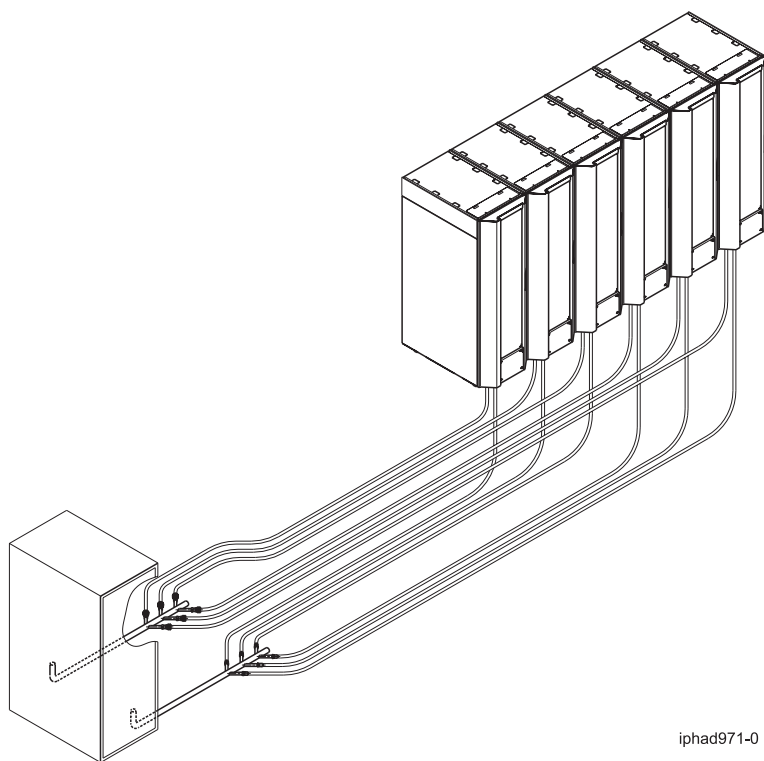

iphad971-0

Figure 30. Typical central manifold (located at a central location for multiple water circuits)

The following figure shows an extended manifold layout.

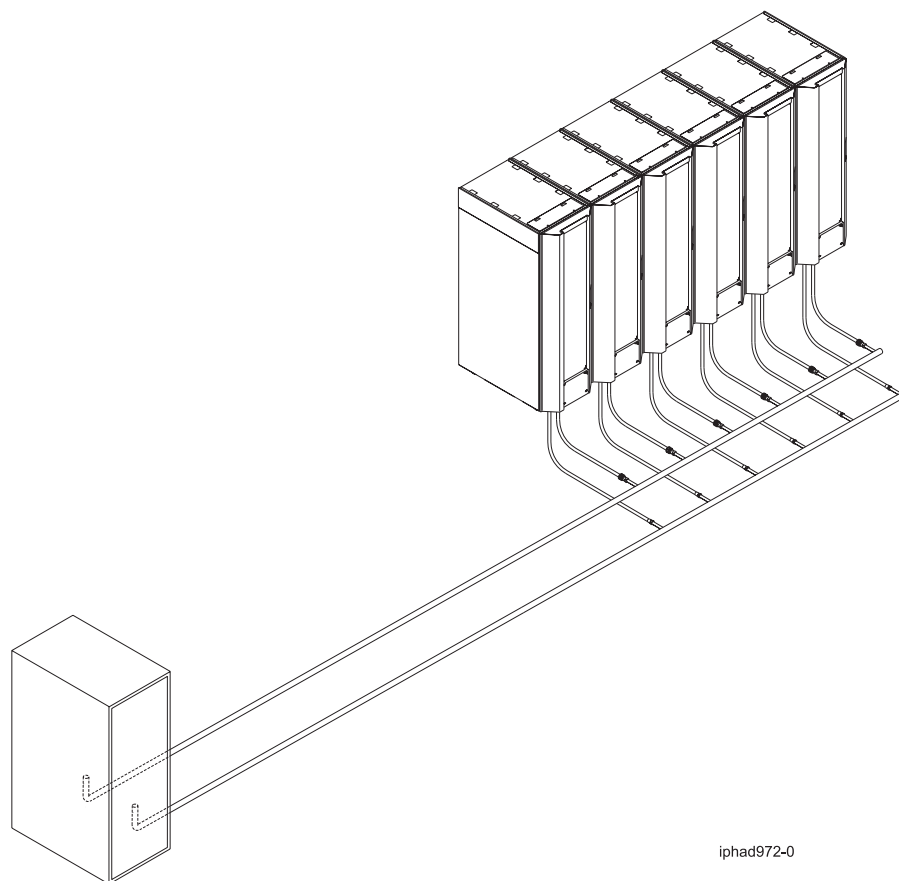

iphad972-0

Figure 31. Typical extended manifold (located along aisles between racks)

Flexible hoses and connections to manifolds and heat exchangers

Pipes and hose configurations can vary and are determined by analyzing the needs of your facilities, or a site preparation representative can provide this analysis.

Flexible hoses are needed to supply and return water between your hard plumbing (manifolds and cooling distribution units) and the heat exchanger, (allowing needed movement when opening and closing the rack rear door).

Hoses are available that provide water with acceptable pressure-drop characteristics and that help prevent depletion of some corrosion inhibitors. These hoses must be made of Ethylene Propylene Diene Monomer (EPDM) rubber - peroxide cured, non-metal oxide material and will have Parker Fluid quick-connect couplings at each end. These couplings are defined below and are compatible with the heat exchanger couplings. Hose lengths from 3 to 15 m (10 ft. to 50 ft.), in increments of 3 m (10 ft.) are available. Hoses longer than 15 m (50 ft.) may create unacceptable pressure loss in the secondary circuit and reduce the water flow, and thus reduce the heat removal capabilities of the heat exchanger.

For a suggested supplier of these hoses, see “Flexible hose suppliers” on page 68. Use solid piping or tubing that has a minimum inner diameter of 19 mm (0.75 in.) and the least number of joints possible between a manifold and a heat exchanger in each secondary loop.

Quick-connect couplings are used to attach the hoses or fixed pipes to the distribution manifolds and the rear door heat exchangers. Hose couplings that attach to the heat exchanger must have the following characteristics.

- The couplings should be constructed of passivated 300-L series stainless steel or brass couplings with less than 30 percent zinc content. The coupling size is 19 mm (0.75 in.).
- The supply hose must have a Parker (male) quick-coupling nipple part number SH6-63-W, or equivalent. The return hose must have a Parker (female) quick-connect couplings part number SH6-62-W, or equivalent.
- At the opposite (manifold) end of the hoses, it is suggested that similar quick-connect couplings be used. However, if other types are desired, it is also suggested that positive locking mechanisms be used to prevent loss of water when the hoses are disconnected. The connections must minimize water spill and air inclusion into the system when they are disconnected.

Note: When creating supply and return loops, it is recommended to avoid placement of electrical connections directly below water connections. These would be areas prone to water drips or splash when working with the water loop. Water dripping or splashing onto electrical connections can cause electrical problems or an unsafe environment.

Layout and mechanical installation

The layout and mechanical installation of your heat exchanger is dependent upon several factors. Use this information to plan for your specific configuration.

The following provide an overview of the installation steps.

- Rear door heat exchanger installation overview
- Planning for heat exchangers in a raised-floor environment
- Planning for heat exchangers in a non-raised floor environment

It also provides examples of typical layouts for water circuits. For detailed information about installing a heat exchanger, see *Installing the IBM heat exchanger*.

Heat exchanger installation overview

These are the major tasks for installing the heat exchanger.

1. Preparing your facility to provide water to the rack per the required specifications.
2. Removing the existing rack rear door, and installing new hinge assemblies, and installing new latch plate.
3. Attaching the heat exchanger door assembly to the rack.
4. Routing flexible hoses, leaving enough length at the rack end to easily make connections to the heat exchanger.
5. Connecting the water-supply and water-return hose that runs from the cooling distribution unit or distribution manifold to the heat exchanger.
6. Filling the heat exchanger with water.
7. Adjusting and inspecting the hoses to ensure there are no kinks in the hoses and that the hoses are not lying against any sharp edges.
8. Adjusting the door latch assembly to ensure the door fits flatly to the rack and that all gaskets seal to the rack.

Note: For safety reasons, trained service personnel (or qualified professionals) must perform the installation of the heat exchanger.

Heat exchanger filling and draining overview

Follow these steps to ensure that your heat exchanger is drained and filled properly.

1. Filling a heat exchanger with water includes using the air purge tool supplied with the heat exchanger to purge any air from the heat exchanger manifolds.

Note: Attachment and detachment of air purge tool should be done with the tool valve open to reduce water pressure at the air bleed valves and reduce water that might escape at the valves during

attaching or detaching.

Containers must be available for capturing water. The container must hold a minimum of 2 L (0.5 gal) capacity for purging air and a minimum 6 L (1.6 gal) capacity for draining a heat exchanger.

2. Draining a heat exchanger is required before the door containing the heat exchanger can be removed from the rack, or before a rack with a heat exchanger installed can be moved. The air purge tool can be connected to the drain port on the bottom of the heat exchanger to drain the water.
3. Use absorbent materials, such as cloth, under the work area to capture any water that might spill when filling or draining a heat exchanger.

Raised floor and non-raised floor environments

Planning for installation of your heat exchangers is dependent on whether your data center has a raised floor or a non-raised floor.

The following topics describe the requirements for raised floor and non-raised floor environments.

- Raised floor environment
- Non-raised floor environment

Planning for heat exchangers in a raised floor environment:

Plan for your heat exchangers in a raised floor environment.

On a raised floor, hoses are routed under the floor tiles and are brought up from beneath the rack through special tile cut outs. The hoses attach to the quick-connect couplings on the bottom of the heat exchanger.

Note: In the following examples, figures show optimal placement and size of openings for hose exit. In some products, IBM installation planning documents recommend other hole locations (for example, heavy racks may not have openings allowed in tiles that casters are resting on). Specific product requirements should be followed over those provided in this topic. Recommendations for openings in reinforced pedestal or stringer type tiles versus non-reinforced pedestal tiles should also be followed. Existing tile cutouts for electrical or other cables can be used (or expanded) for the hoses, if enough opening space is available to allow easy movement of both hoses when the door is opened and closed. In general, hoses should exit the tiles at locations that will not put high forces on the hoses, or cause rubbing that will abrade the hose surface and lead to premature hose failure (leaks).

Raised floor hose requirements and management

In a typical example, each heat exchanger requires a special cut 0.6 m by 0.6 m (2 ft. by 2 ft.) floor tile below it and in front of the rack. A portion of the tile is cut away and correctly covered to protect against sharp edges. The corner opening is placed directly under the hinge side of the rack rear door. The opening size of the cut is 152.4 mm wide and 190.5 mm long +/- 12.7 mm (6.0 in. wide and 7.5 in. long +/- 0.5 in.) in the direction parallel to the door. The following figures provide examples of hose management methods.

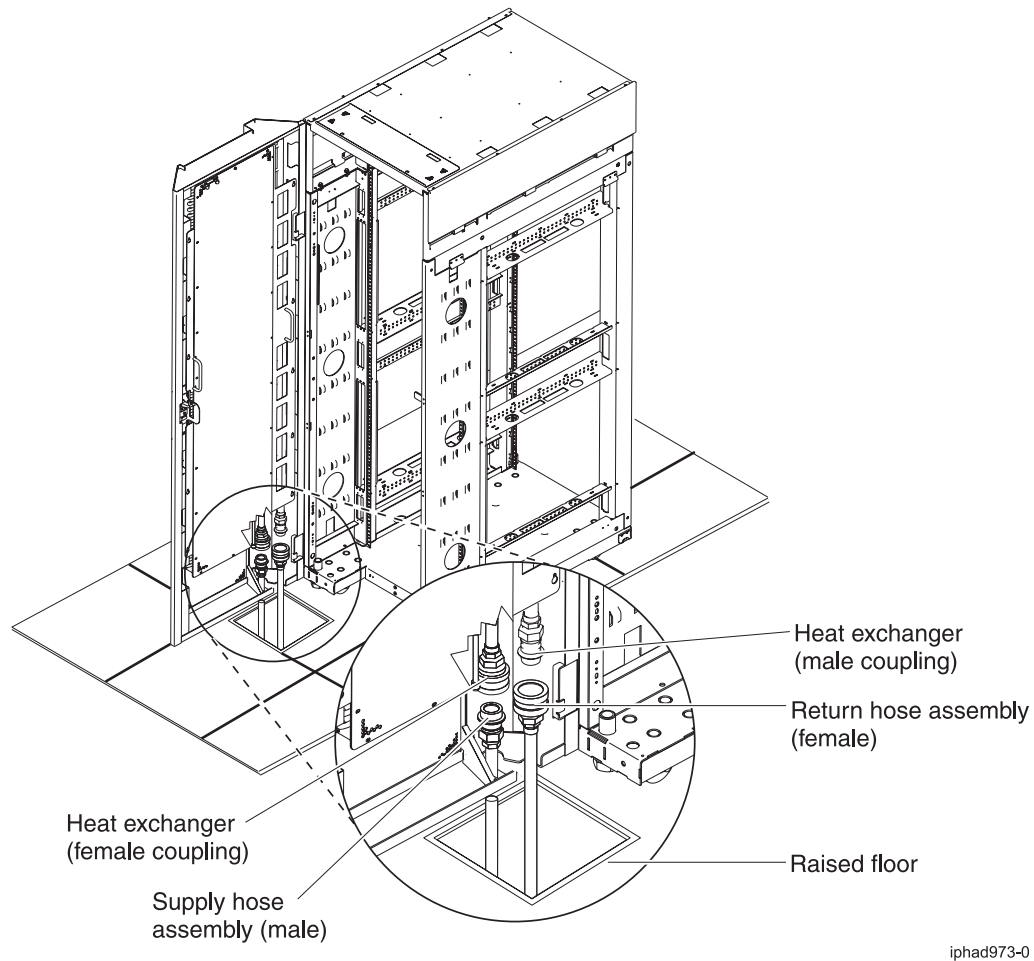


Figure 32. Raised floor hose management example 1; tile cut out size and position for 19-inch EIA-rail racks.

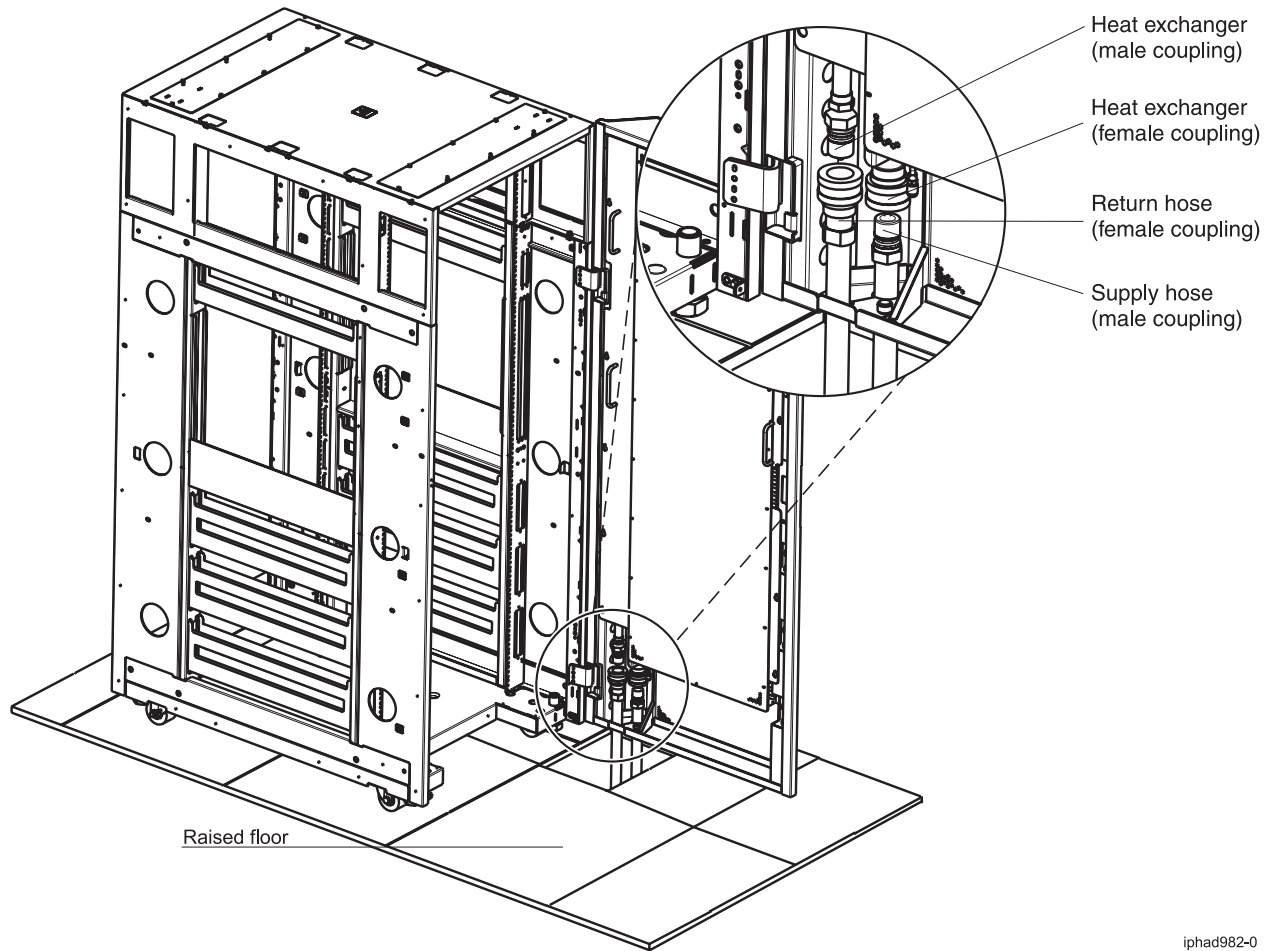


Figure 33. Raised floor hose management example 1; tile cut out size and position for 24-inch EIA-rail racks.

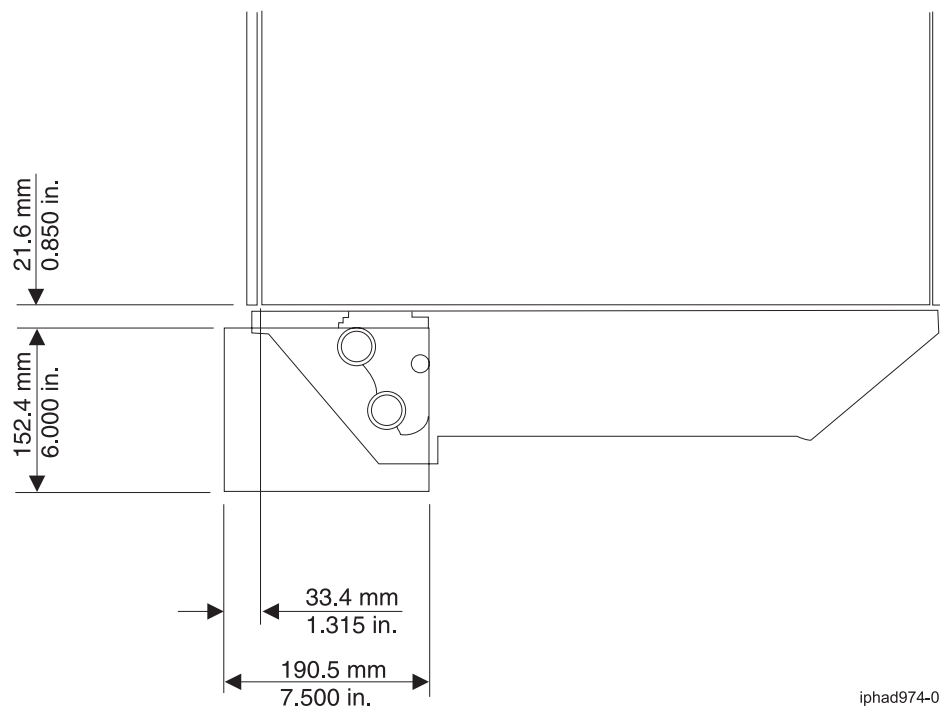


Figure 34. Raised floor hose management example 1; Tile cut out definition and location for 19-inch EIA-rail racks


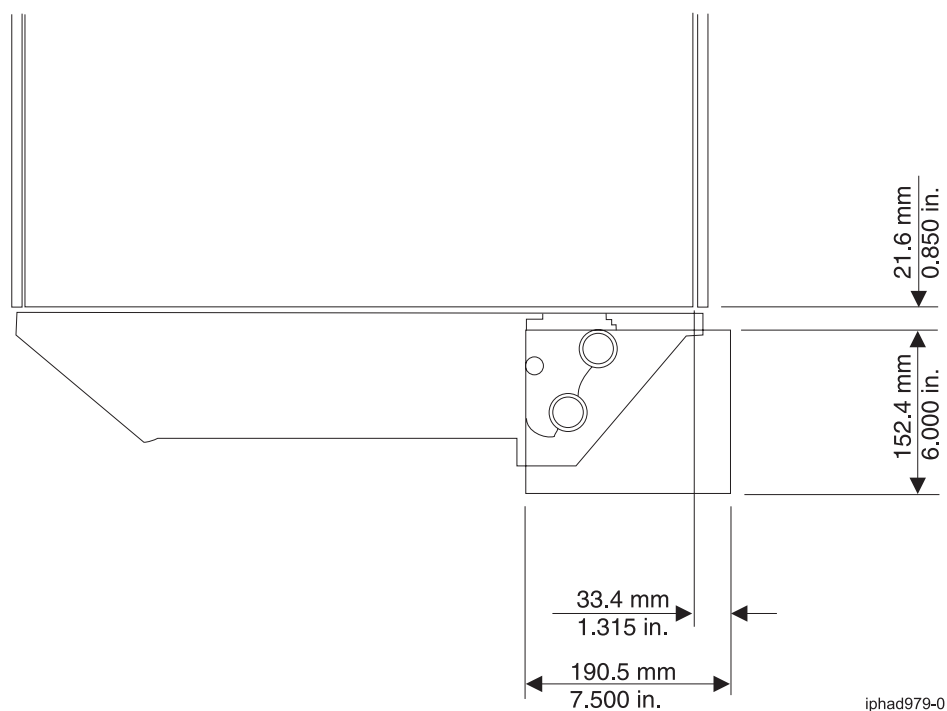


Figure 35. Raised floor hose management example 1; Tile cut out definition and location for 24-inch EIA-rail racks


In another example, for racks being installed at the same time a heat exchanger is being installed, and in cases where installation planning allows floor tile cutouts under the rack, each heat exchanger still requires a special cut 0.6 m by 0.6 m (2 ft. by 2 ft.) floor tile. However, the floor tile will be positioned

completely within the footprint of the rack. A modified cable opening or independent hose cut out is used. Flexible hoses that contain a right-angle elbow are used to route the hoses under the rack in a large loop to allow hose movement when the door is opened and closed. The following figures show how to route hoses under the rack with enough hose length to allow the hose to move freely as the door is opened and closed.

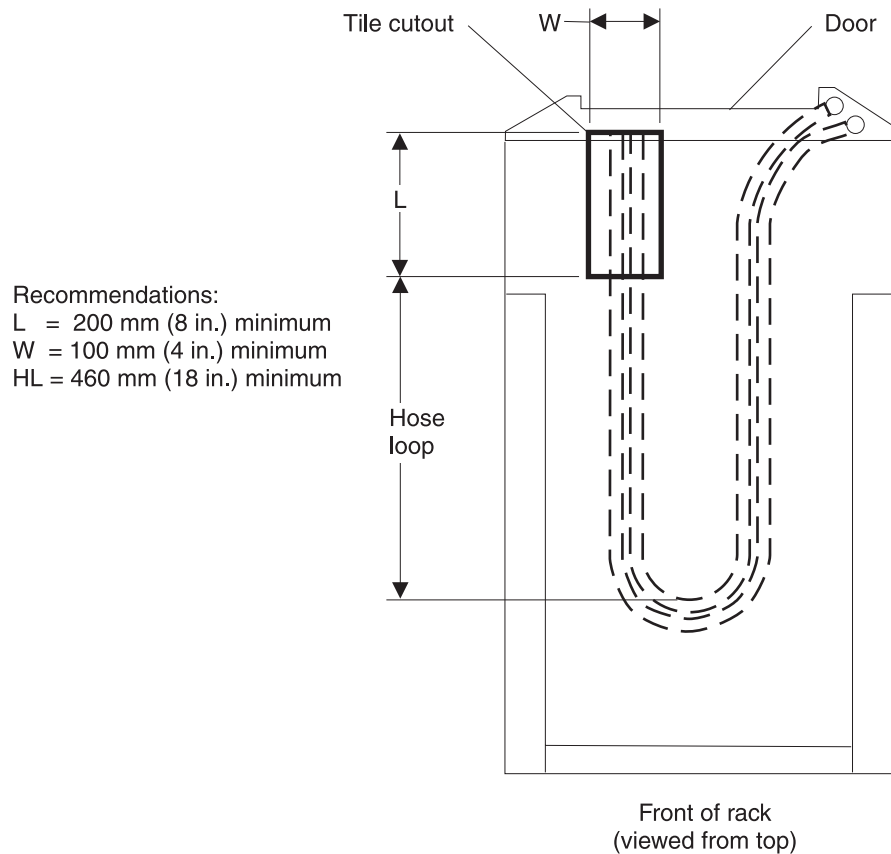

iphad975-0


Figure 36. Raised floor and non-raised floor hose management example 2; loop under the 19-inch EIA-rail rack with door closed

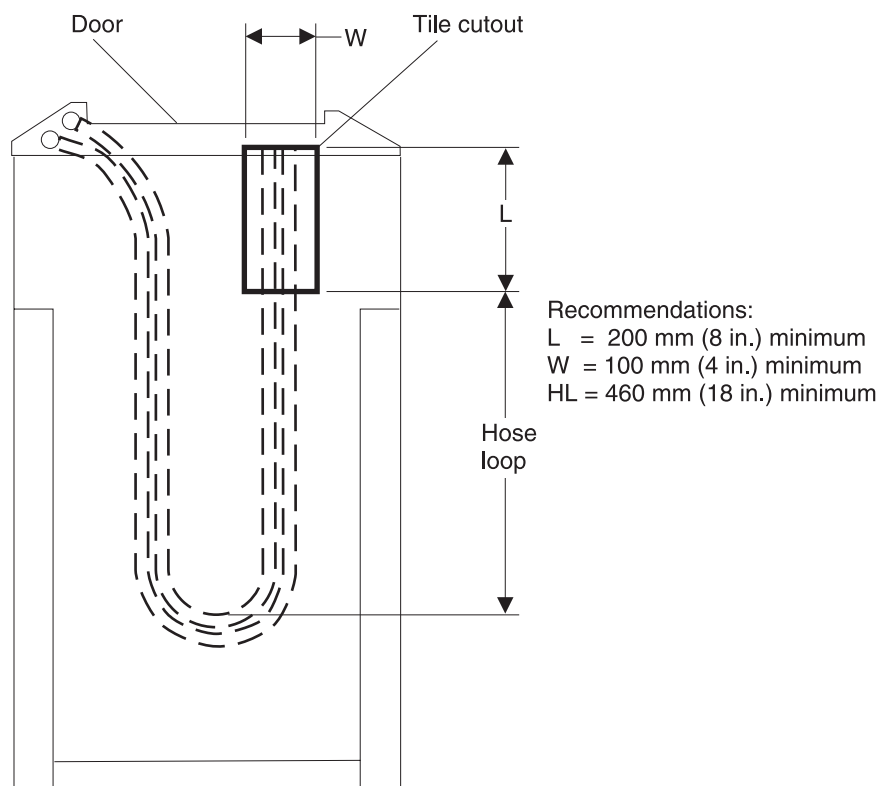

Front of 24 inch EIA-rail rack
(viewed from top)

iphad980-0

Figure 37. Raised floor and non-raised floor hose management example 2; loop under the 24-inch EIA-rail rack with door closed

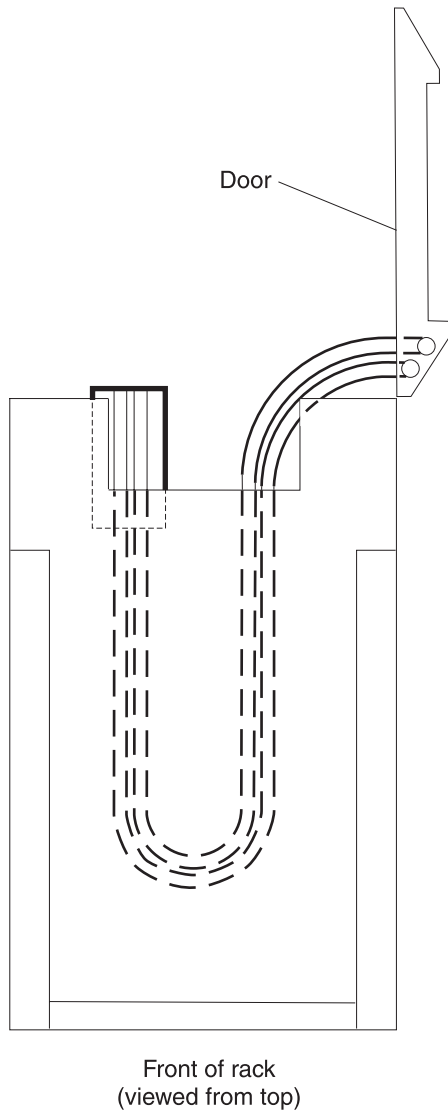

iphad976-0

Figure 38. Raised floor and non-raised floor hose management example 2; loop under the 19-inch EIA-rail rack with door open

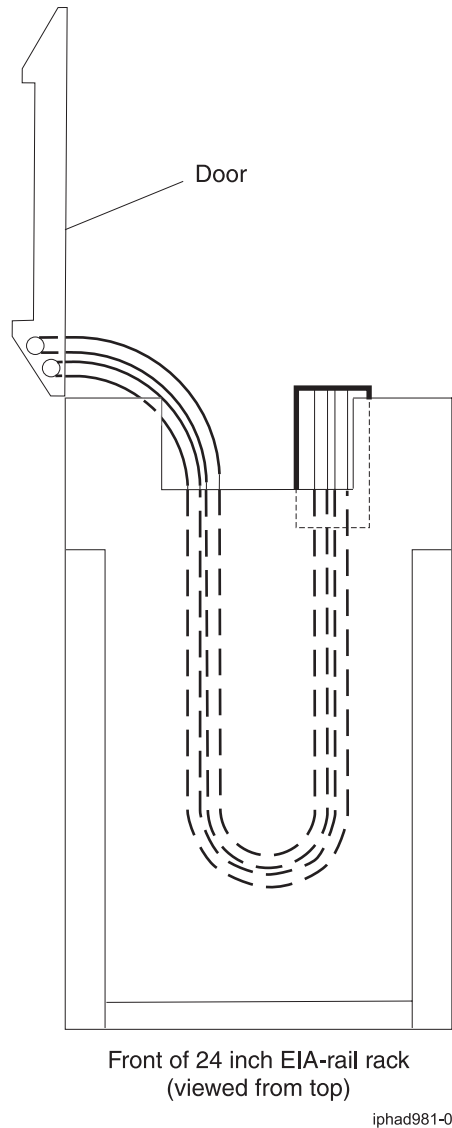


Figure 39. Raised floor and non-raised floor hose management example 2; loop under the 24-inch EIA-rail rack with door open

Lay hoses side-by-side as they run between the heat exchanger and the supply and return manifolds, and allow the hoses to freely move. Leave enough slack in the hoses below the rear door so that minimum forces are exerted on the door when the hoses are attached and operating. When routing hoses, avoid sharp bends that cause hose kinks, and avoid hose contact with sharp edges.

Planning for heat exchangers in a non-raised floor environment:


Plan for your heat exchangers in a non-raised floor environment.

Non-raised floor hose requirements and management

In data centers without a raised floor, straight hose assemblies cannot make the sharp bend to exit between the floor and the rack door without kinking the hose.

Hose assemblies with right-angle metal elbows are needed. This allows the hoses to be routed along the floor, make the 90 degree turn upwards within the gap between the bottom of the heat exchanger door

and the floor surface, and then connect to the heat exchanger couplings. This is shown in the following figures.

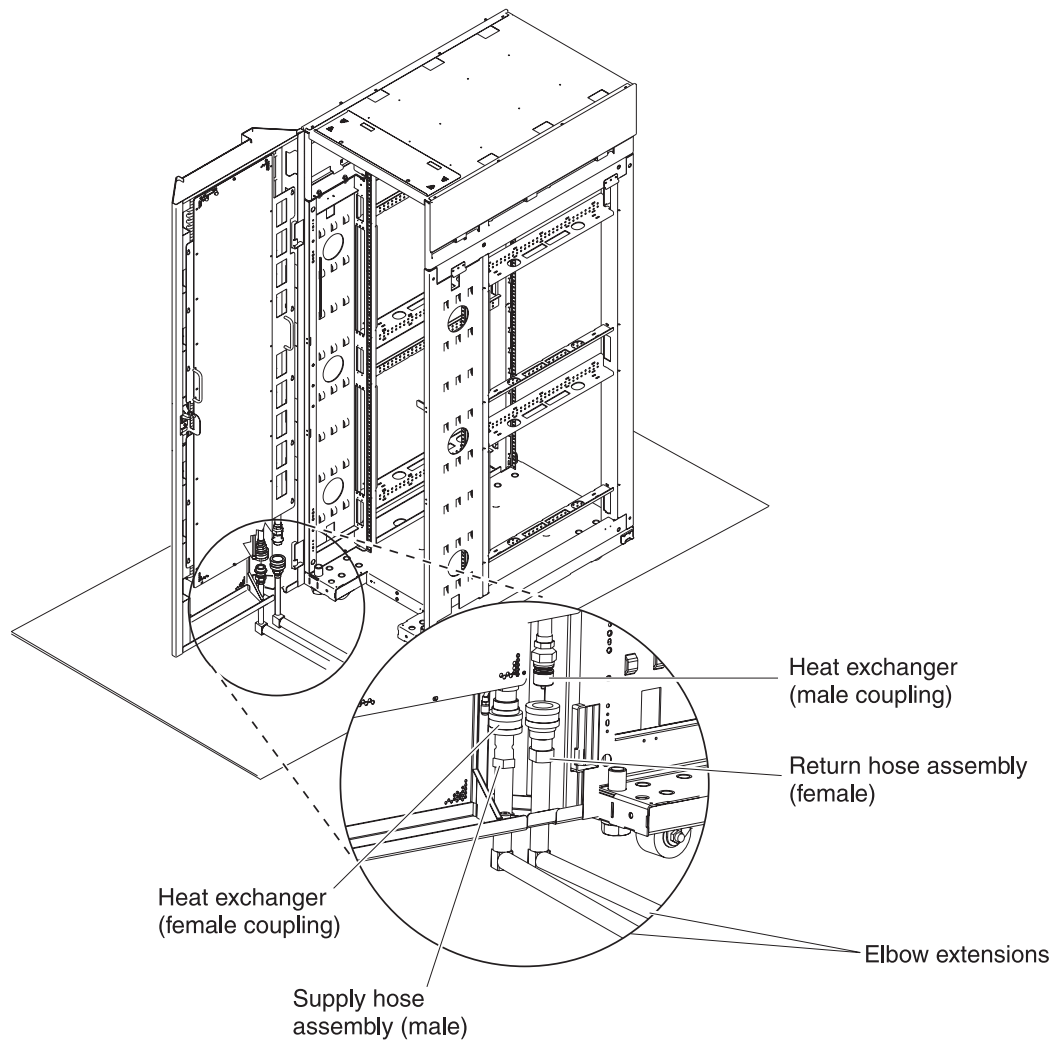

iphad977-0

Figure 40. Non-raised floor hose requirements for 19-inch EIA-rail rack

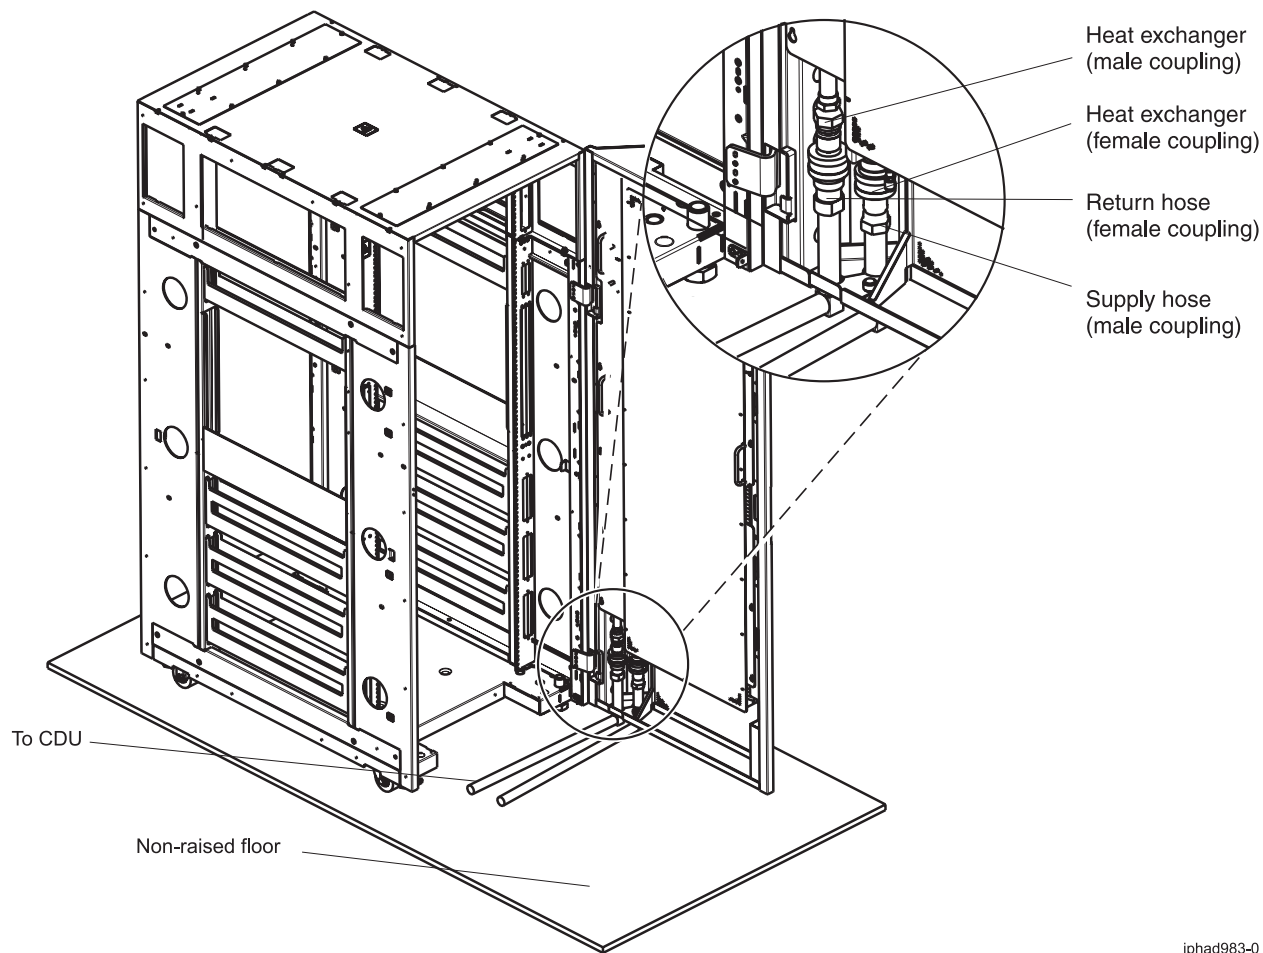


Figure 41. Non-raised floor hose requirements 24-inch EIA-rail rack

Hoses exiting the heat exchanger can be routed in a manner similar to that of power cables in a non-raised floor data center. For example, place the hoses side-by-side and allow them to move freely as they approach the rack (within approximately 3 m (10 ft.) of the rack). When the door is opened, it is acceptable for the hoses to move slightly and rotate in parallel at the coupling interface inside the door. As the door is closed, the hoses rotate back to their original positions.

Note: When opening or closing the door, some manipulation of the hose along the floor might be necessary to prevent unwanted forces on the door and to make it easier to open and close the door.

Another method for non-raised floor hose routing is described using Figures 10 and 11 (without the hoses exiting a tile cutout). Hose exiting the heat exchanger turns and loops under the rack. In that method, the hose can then exit from under the rack at any place and in any direction that is convenient in your data center.

In either of these examples, hose coverings or protective devices are not provided by IBM. Routing and protection of the hose assemblies exterior to the rack is your responsibility.

Suggested sources for secondary loop components

Identify suggested sources for your secondary loop components.

These lists of suggested suppliers that can provide cooling distribution solutions, and sources for either flexible hose assemblies, or for providing water treatment that meets the suggested water quality requirements.

- Cooling distribution unit suppliers
- Flexible hose suppliers
- Water treatment suppliers

Cooling distribution unit suppliers

This table provides a list of possible suppliers for cooling distribution units.

Table 12. Suggested sources of cooling distribution units

North America		
Vendor	Unit capacity	Contact information
Lytron Corporation	Coolant distribution unit - 100 kW nominal capacity	www.lytron.com Lytron Corporation Sales (U.S.) 781-933-7300
North America, Europe, Middle East, Africa, Asia Pacific		
Liebert Corporation	Coolant distribution unit - 100 kW nominal capacity	www.liebert.com Select Contacts and search for a local office and telephone number.
Affinity, Lydall Industrial Thermal Solutions Inc	Coolant distribution units 60 kW nominal capacity 100 kW nominal capacity 120 kW nominal capacity 300 kW nominal capacity	www.affinitychillers.com email: affinity_sales@lydall.com 603-539-1420
Knurr Inc	Coolant distribution unit - 75 Kw nominal capacity	www.knurr.com (U.S.) 514-865-9454
Europe, Middle East, Africa, Asia Pacific		
Knurr Inc	Coolant distribution unit - 75 kW nominal capacity	www.knurr.com +49 619-291-0455
Eaton-Williams Group, Ltd.	Coolant distribution unit - 100 kW nominal capacity	www.eaton-williams.com +44 (0)1732 866055

Flexible hose suppliers

The suggested source for flexible hose supplier table provides a possible source of flexible hose assemblies that are fabricated from IBM approved materials. These assemblies have the required quick-connect couplings and are offered in various lengths, providing choices in the type of hook-up and routing of hoses in your secondary loops.

Table 13. Suggested source for flexible hose supplier

North America, Europe, Middle East, Africa, Asia Pacific

Table 13. Suggested source for flexible hose supplier (continued)

Dff Corporation	<p>Flexible hose assemblies with required quick-connect couplings. Available in these lengths.</p> <p>3 m (10 ft.) 6 m (20 ft.) 9 m (30 ft.) 12 m (40 ft.) 15 m (50 ft.)</p> <p>Hoses can be straight for raised floor applications, or hoses can use a 90 degree elbow at one end for either non-raised floor applications or raised floor applications.</p>	<p>59 Abrams Drive Agawam, MA U.S., 01001 413-786-8880 www.dffcorp.com</p>
-----------------	---	--

Water treatment supplier

The suggested source of water treatment supplier table provides a possible source of water treatment suppliers.

The following table provides a list of possible water treatment suppliers.

Table 14. Suggested source of water treatment supplier

North America, Europe, Middle East, Africa, Asia Pacific	
<p>Nalco Company</p> <p>Chemical kits are available for treating the water in secondary cooling loops.</p> <p>Treatment can typically consist of anti-corrosion coatings and biocides. Obtain details for the contents of these chemical kits from the supplier.</p>	<p>www.nalco.com</p> <p>North America: U.S. 1601 W. Diehl Road Naperville, Illinois 60563-1198</p> <p>North America: Latin America Av. Das Nocoas Unidas 17.891 6 Andar 04795-100 Sao Paulo, SP Brazil</p> <p>Europe: Ir.G.Tjalmaweg 1 2342 BV Oegstgeest The Netherlands</p> <p>Asia Pacific: 2 International Business Park #02-20 The Strategy Tower 2 Singapore 609930</p> <p>Wordwide contact: (U.S.) 480-213-8915</p>

Installation and support from IBM Integrated Technology Services Offerings

Integrated Technology Services can assist in the planning and installation of your heat exchanger.

Services offered by IBM Integrated Technology Services include business consulting, outsourcing, hosting services, applications, and other technology management. These services help you learn about, plan, install, manage, or optimize your information technology infrastructure to be an On Demand business.

If you would like assistance with coordinating and managing the installation and support of rear door heat exchangers is desired, IBM can supply a focal point.

Before calling the 800 number shown in the table, have the following information available:

- Serial numbers of the racks
- Telephone number where the racks are located
- Contact name and phone number
- Building location and location of the racks within the building

To access the correct contact area in OSC Dispatch, dial the 800 number, request option 1, 1, 1 and when prompted, enter your 4-digit rack machine type.

Table 15. IBM Integrated Technology Services contact information

North America	1-800-426-7378 (OSC Dispatch) Request contact with an IBM Installation Planning Representative in the service branch office closest to your location.
Europe, Middle East, Africa, Asia Pacific	Go to http://www.ibm.com/support/electronic , and choose Open or manage service request.

Planning for communications

Your installation requires a variety of communication equipment to support the computer installation. Telephone lines, fax lines, and the remote support facility (RSF) are just some of the types of communications that you will need to have installed.

You will have to refer to specific product planning documentation for each type of communication equipment that you are going to install. The main tasks to prepare for communication equipment are:

1. Get an exact list of the communication features that your company ordered:
 - a. Make copies of the communication-feature planning list.
 - b. Determine the specific communication features on order from your company's copy of the purchase agreement.
 - c. Check the types of communication features and enter the quantities of feature cards and cables on the communication-feature planning list. This list is your record of communication features to help in your planning and coordinating tasks.
2. Prepare a communication-feature planning list:
 - Use a separate planning list for each communication feature. On the list, connect the device and modem blocks with lines to indicate the feature's arrangement in the network. Indicate whether the network is switched or nonswitched. The network-diagram part of the list is for typical networks. If enough space is not available on the planning list, use additional lists or separate sheets of paper to draw the network.
 - Finally, check or fill in the remaining part of the communication-feature planning list. You might not be able to answer some items, such as the modem model, until you meet with the local communication company representative.
3. Meet with the local communication company representative to order needed equipment and to discuss service:
 - Define the equipment and wiring to be provided by the communication company.
 - Determine the power outlets needed for communication company equipment.
 - Place an order for the needed services.
 - Schedule the installation work the communication company will do before the arrival of your server.
 - Install a telephone for the service representative, if recommended.
 - Define the options when you order a handset with a switched line.

4. Meet with the modem vendor to discuss the following items:
 - Options such as switched or leased line, line speed, auto answer, and clocking must be known.
 - Who will install and who will service the original equipment manufacturer's (OEM) modem.
 - What modems will require couplers, jacks, and plugs.
 - Match the coupler and the modem.
 - The telephone company must be notified of the Federal Communications Commission (FCC) registration number and ringer equivalence number.
 - Modems that require power outlets.
5. Coordinate the installation of your equipment with remote locations to be sure the proper equipment is installed on time at both locations. Be sure the equipment at your location is compatible with the equipment at the remote location. Pay particular attention to these items:
 - The communicating devices must use the same type of communication features.
 - The devices must operate at the same speed (bits per second).
 - The modems must be compatible.
 - The couplers must match the modem.
 - The modem strapping (jumpers) must be the same at both ends of the line.
 - Properly coordinating remote locations can prevent problems such as mismatched communication equipment. A copy of the completed communication feature planning list should be sent to the remote locations before the equipment is installed.
6. Determine and establish wiring practices for privately owned lines:
 - Do not route your communication lines parallel with power lines. Power transients can cause electrical noise in your communication lines. Noise can also be caused by electric motors, radios, and radar equipment.
 - Use shielded outdoor-type cable where communication lines exit a building.
 - Install shunt-type lightning protection on all exterior communication lines, whether they are buried or overhead.
 - Ground the shields of overhead communication lines where cables enter or exit junction boxes or at other points where the shield is broken. For buried lines, ground the shield at each building exit or entry.
 - Shield continuity must not be broken where the ground conductor connects to the shield. Cable that includes a drain conductor is easier to install when multiple grounding is needed.

See the applicable national and local safety standards for communication regulations and requirements.

Appendix. Accessibility features

Accessibility features help users who have a physical disability, such as restricted mobility or limited vision, to use information technology products successfully.

The following list includes the major accessibility features:

- Keyboard-only operation
- Interfaces that are commonly used by screen readers
- Keys that are tactilely discernible and do not activate just by touching them
- Industry-standard devices for ports and connectors
- The attachment of alternative input and output devices

IBM and accessibility

See the IBM Accessibility Center at <http://www.ibm.com/able/> for more information about the commitment that IBM has to accessibility.

Notices

This information was developed for products and services offered in the U.S.A.

The manufacturer may not offer the products, services, or features discussed in this document in other countries. Consult the manufacturer's representative for information on the products and services currently available in your area. Any reference to the manufacturer's product, program, or service is not intended to state or imply that only that product, program, or service may be used. Any functionally equivalent product, program, or service that does not infringe any intellectual property right of the manufacturer may be used instead. However, it is the user's responsibility to evaluate and verify the operation of any product, program, or service.

The manufacturer may have patents or pending patent applications covering subject matter described in this document. The furnishing of this document does not give you any license to these patents. You can send license inquiries, in writing, to the manufacturer.

The following paragraph does not apply to the United Kingdom or any other country where such provisions are inconsistent with local law: THIS INFORMATION IS PROVIDED "AS IS" WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO, THE IMPLIED WARRANTIES OF NON-INFRINGEMENT, MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. Some states do not allow disclaimer of express or implied warranties in certain transactions, therefore, this statement may not apply to you.

This information could include technical inaccuracies or typographical errors. Changes are periodically made to the information herein; these changes will be incorporated in new editions of the publication. The manufacturer may make improvements and/or changes in the product(s) and/or the program(s) described in this publication at any time without notice.

Any references in this information to Web sites not owned by the manufacturer are provided for convenience only and do not in any manner serve as an endorsement of those Web sites. The materials at those Web sites are not part of the materials for this product and use of those Web sites is at your own risk.

The manufacturer may use or distribute any of the information you supply in any way it believes appropriate without incurring any obligation to you.

Any performance data contained herein was determined in a controlled environment. Therefore, the results obtained in other operating environments may vary significantly. Some measurements may have been made on development-level systems and there is no guarantee that these measurements will be the same on generally available systems. Furthermore, some measurements may have been estimated through extrapolation. Actual results may vary. Users of this document should verify the applicable data for their specific environment.

Information concerning products not produced by this manufacturer was obtained from the suppliers of those products, their published announcements or other publicly available sources. This manufacturer has not tested those products and cannot confirm the accuracy of performance, compatibility or any other claims related to products not produced by this manufacturer. Questions on the capabilities of products not produced by this manufacturer should be addressed to the suppliers of those products.

All statements regarding the manufacturer's future direction or intent are subject to change or withdrawal without notice, and represent goals and objectives only.

The manufacturer's prices shown are the manufacturer's suggested retail prices, are current and are subject to change without notice. Dealer prices may vary.

This information is for planning purposes only. The information herein is subject to change before the products described become available.

This information contains examples of data and reports used in daily business operations. To illustrate them as completely as possible, the examples include the names of individuals, companies, brands, and products. All of these names are fictitious and any similarity to the names and addresses used by an actual business enterprise is entirely coincidental.

If you are viewing this information in softcopy, the photographs and color illustrations may not appear.

The drawings and specifications contained herein shall not be reproduced in whole or in part without the written permission of the manufacturer.

The manufacturer has prepared this information for use with the specific machines indicated. The manufacturer makes no representations that it is suitable for any other purpose.

The manufacturer's computer systems contain mechanisms designed to reduce the possibility of undetected data corruption or loss. This risk, however, cannot be eliminated. Users who experience unplanned outages, system failures, power fluctuations or outages, or component failures must verify the accuracy of operations performed and data saved or transmitted by the system at or near the time of the outage or failure. In addition, users must establish procedures to ensure that there is independent data verification before relying on such data in sensitive or critical operations. Users should periodically check the manufacturer's support websites for updated information and fixes applicable to the system and related software.

Related concepts

"Trademarks"

"Electronic emission notices"

"Terms and conditions" on page 82

Trademarks

The following terms are trademarks of International Business Machines Corporation in the United States, other countries, or both:

e(logo)server

eServer

IBM

System i

System p

Other company, product or service names may be trademarks or service marks of others.

Electronic emission notices

Related concepts

"Class A Notices"

"Class B Notices" on page 80

Class A Notices

The following Class A statements apply to the IBM System i models and IBM System p servers with the exception of those that are specifically identified as Class B.

Federal Communications Commission (FCC) statement

Note: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case the user will be required to correct the interference at his own expense.

Properly shielded and grounded cables and connectors must be used in order to meet FCC emission limits. IBM is not responsible for any radio or television interference caused by using other than recommended cables and connectors or by unauthorized changes or modifications to this equipment. Unauthorized changes or modifications could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Industry Canada Compliance Statement

This Class A digital apparatus complies with Canadian ICES-003.

Avis de conformité à la réglementation d'Industrie Canada

Cet appareil numérique de la classe A respecte est conforme à la norme NMB-003 du Canada.

European Community Compliance Statement

This product is in conformity with the protection requirements of EU Council Directive 2004/108/EC on the approximation of the laws of the Member States relating to electromagnetic compatibility. IBM cannot accept responsibility for any failure to satisfy the protection requirements resulting from a non-recommended modification of the product, including the fitting of non-IBM option cards.

This product has been tested and found to comply with the limits for Class A Information Technology Equipment according to European Standard EN 55022. The limits for Class A equipment were derived for commercial and industrial environments to provide reasonable protection against interference with licensed communication equipment.

European Community contact:
IBM Technical Regulations
Pascalstr. 100, Stuttgart, Germany 70569
Tele: 0049 (0)711 785 1176
Fax: 0049 (0)711 785 1283
E-mail: tjahn@de.ibm.com

Warning: This is a Class A product. In a domestic environment, this product may cause radio interference in which case the user may be required to take adequate measures.

VCCI Statement - Japan

この装置は、情報処理装置等電波障害自主規制協議会（VCCI）の基準に基づくクラスA情報技術装置です。この装置を家庭環境で使用すると電波妨害を引き起こすことがあります。この場合には使用者が適切な対策を講ずるよう要求されることがあります。

The following is a summary of the VCCI Japanese statement in the box above.

This product is a Class A Information Technology Equipment and conforms to the standards set by the Voluntary Control Council for Interference by Information Technology Equipment (VCCI). In a domestic environment, this product may cause radio interference, in which case the user may be required to take adequate measures.

Electromagnetic Interference (EMI) Statement - People's Republic of China

声 明

此为 A 级产品，在生活环境中，该产品可能会造成无线电干扰。在这种情况下，可能需要用户对其干扰采取切实可行的措施。

Declaration: This is a Class A product. In a domestic environment this product may cause radio interference in which case the user may need to perform practical action.

Electromagnetic Interference (EMI) Statement - Taiwan

警告使用者：

這是甲類的資訊產品，在居住的環境中使用時，可能會造成射頻干擾，在這種情況下，使用者會被要求採取某些適當的對策。

The following is a summary of the EMI Taiwan statement above.

Warning: This is a Class A product. In a domestic environment this product may cause radio interference in which case the user will be required to take adequate measures.

IBM Taiwan Contact Information:

台灣IBM 產品服務聯絡方式：
台灣國際商業機器股份有限公司
台北市松仁路7號3樓
電話：0800-016-888

Electromagnetic Interference (EMI) Statement - Korea

이 기기는 업무용으로 전자파적합등록을 한 기기이오니 판매자 또는 사용자는 이점을 주의하시기 바라며, 만약 잘못 판매 또는 구입하였을 때에는 가정용으로 교환하시기 바랍니다.

Please note that this equipment has obtained EMC registration for commercial use. In the event that it has been mistakenly sold or purchased, please exchange it for equipment certified for home use.

Germany Compliance Statement

Deutschsprachiger EU Hinweis: Hinweis für Geräte der Klasse A EU-Richtlinie zur Elektromagnetischen Verträglichkeit

Dieses Produkt entspricht den Schutzanforderungen der EU-Richtlinie 2004/108/EG zur Angleichung der Rechtsvorschriften über die elektromagnetische Verträglichkeit in den EU-Mitgliedsstaaten und hält die Grenzwerte der EN 55022 Klasse A ein.

Um dieses sicherzustellen, sind die Geräte wie in den Handbüchern beschrieben zu installieren und zu betreiben. Des Weiteren dürfen auch nur von der IBM empfohlene Kabel angeschlossen werden. IBM übernimmt keine Verantwortung für die Einhaltung der Schutzanforderungen, wenn das Produkt ohne Zustimmung der IBM verändert bzw. wenn Erweiterungskomponenten von Fremdherstellern ohne Empfehlung der IBM gesteckt/eingebaut werden.

EN 55022 Klasse A Geräte müssen mit folgendem Warnhinweis versehen werden:

"Warnung: Dieses ist eine Einrichtung der Klasse A. Diese Einrichtung kann im Wohnbereich Funk-Störungen verursachen; in diesem Fall kann vom Betreiber verlangt werden, angemessene Maßnahmen zu ergreifen und dafür aufzukommen."

Deutschland: Einhaltung des Gesetzes über die elektromagnetische Verträglichkeit von Geräten

Dieses Produkt entspricht dem "Gesetz über die elektromagnetische Verträglichkeit von Geräten (EMVG)". Dies ist die Umsetzung der EU-Richtlinie 2004/108/EG in der Bundesrepublik Deutschland.

Zulassungsbescheinigung laut dem Deutschen Gesetz über die elektromagnetische Verträglichkeit von Geräten (EMVG) (bzw. der EMC EG Richtlinie 2004/108/EG) für Geräte der Klasse A.

Dieses Gerät ist berechtigt, in Übereinstimmung mit dem Deutschen EMVG das EG-Konformitätszeichen - CE - zu führen.

Verantwortlich für die Konformitätserklärung nach des EMVG ist die IBM Deutschland GmbH, 70548 Stuttgart.

Generelle Informationen:

Das Gerät erfüllt die Schutzanforderungen nach EN 55024 und EN 55022 Klasse A.

Electromagnetic Interference (EMI) Statement - Russia

ВНИМАНИЕ! Настоящее изделие относится к классу А.
В жилых помещениях оно может создавать
радиопомехи, для снижения которых необходимы
дополнительные меры

Class B Notices

The following Class B statements apply to model 9111-520 (stand-alone version), 9131-52A (stand-alone version), 7047-185 and the 9111-285.

Federal Communications Commission (FCC) statement

Note: This equipment has been tested and found to comply with the limits for a class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult an IBM authorized dealer or service representative for help.

Properly shielded and grounded cables and connectors must be used in order to meet FCC emission limits. Proper cables and connectors are available from IBM authorized dealers. IBM is not responsible for any radio or television interference caused by using other than recommended cables or connectors or by unauthorized changes or modifications to this equipment. Unauthorized changes or modifications could void the user's authority to operate the equipment.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interferences, and (2) this device must accept any interferences received, including interference that may cause undesired operation.

Industry Canada Compliance Statement

This Class B digital apparatus complies with Canadian ICES-003.

Avis de conformité à la réglementation d'Industrie Canada

Cet appareil numérique de la classe B respecte est conforme à la norme NMB-003 du Canada.

European Community Compliance Statement

This product is in conformity with the protection requirements of EC Council Directive 2004/108/EC on the approximation of the laws of the Member States relating to electromagnetic compatibility. IBM cannot accept responsibility for any failure to satisfy the protection requirements resulting from a non-recommended modification of the product, including the fitting of non-IBM option cards.

This product has been tested and found to comply with the limits for Class B Information Technology Equipment according to CISPR 22 / European Standard EN 55022. The limits for Class B equipment were derived for typical residential environments to provide reasonable protection against interference with licensed communication devices.

Properly shielded and grounded cables and connectors must be used in order to reduce the potential for causing interference to radio and TV communications and to other electrical or electronic equipment. Such cables and connectors are available from IBM authorized dealers. IBM cannot accept responsibility for an interference caused by using other than recommended cables and connectors.

European Community contact:
IBM Technical Regulations
Pascalstr. 100, Stuttgart, Germany 70569
Tele: 0049 (0)711 785 1176
Fax: 0049 (0)711 785 1283
E-mail: tjahn@de.ibm.com

VCCI Statement - Japan

この装置は、情報処理装置等電波障害自主規制協議会（VCCI）の基準に基づくクラスB 情報技術装置です。この装置は、家庭環境で使用することを目的としていますが、この装置がラジオやテレビジョン受信機に近接して使用されると、受信障害を引き起こすことがあります。
取扱説明書に従って正しい取り扱いをして下さい。

The following is a summary of the VCCI Japanese statement in the box above.

This is a Class B product based on the standard of the Voluntary Control Council for Interference by Information Technology Equipment (VCCI). If this equipment is used in a domestic environment, radio disturbance may arise. When such trouble occurs, the user may be required to take corrective actions.

IBM Taiwan Product Service Contact Information

台灣IBM 產品服務聯絡方式：
台灣國際商業機器股份有限公司
台北市松仁路7號3樓
電話：0800-016-888

Electromagnetic Interference (EMI) Statement - Korea

이 기기는 가정용으로 전자파적합등록을 한 기기로서 주거 지역에서는 물론 모든 지역에서 사용할 수 있습니다.

Radio Protection for Germany

Deutschsprachiger EU Hinweis: Hinweis für Geräte der Klasse B EU-Richtlinie zur Elektromagnetischen Verträglichkeit

Dieses Produkt entspricht den Schutzanforderungen der EU-Richtlinie 2004/108/EG zur Angleichung der Rechtsvorschriften über die elektromagnetische Verträglichkeit in den EU-Mitgliedsstaaten und hält die Grenzwerte der EN 55022 Klasse B ein.

Um dieses sicherzustellen, sind die Geräte wie in den Handbüchern beschrieben zu installieren und zu betreiben. Des Weiteren dürfen auch nur von der IBM empfohlene Kabel angeschlossen werden. IBM übernimmt keine Verantwortung für die Einhaltung der Schutzanforderungen, wenn das Produkt ohne Zustimmung der IBM verändert bzw. wenn Erweiterungskomponenten von Fremdherstellern ohne Empfehlung der IBM gesteckt/eingebaut werden.

Deutschland: Einhaltung des Gesetzes über die elektromagnetische Verträglichkeit von Geräten

Dieses Produkt entspricht dem "Gesetz über die elektromagnetische Verträglichkeit von Geräten (EMVG)". Dies ist die Umsetzung der EU-Richtlinie 2004/108/EG in der Bundesrepublik Deutschland.

Zulassungsbescheinigung laut dem Deutschen Gesetz über die elektromagnetische Verträglichkeit von Geräten (EMVG) (bzw. der EMC EG Richtlinie 2004/108/EG) für Geräte der Klasse B.

Dieses Gerät ist berechtigt, in Übereinstimmung mit dem Deutschen EMVG das EG-Konformitätszeichen - CE - zu führen.

Verantwortlich für die Konformitätserklärung nach des EMVG ist die IBM Deutschland GmbH, 70548 Stuttgart.

Generelle Informationen:

Das Gerät erfüllt die Schutzanforderungen nach EN 55024 und EN 55022 Klasse B.

Terms and conditions

Permissions for the use of these publications is granted subject to the following terms and conditions.

Personal Use: You may reproduce these publications for your personal, noncommercial use provided that all proprietary notices are preserved. You may not distribute, display or make derivative works of these publications, or any portion thereof, without the express consent of the manufacturer.

Commercial Use: You may reproduce, distribute and display these publications solely within your enterprise provided that all proprietary notices are preserved. You may not make derivative works of these publications, or reproduce, distribute or display these publications or any portion thereof outside your enterprise, without the express consent of the manufacturer.

Except as expressly granted in this permission, no other permissions, licenses or rights are granted, either express or implied, to the publications or any data, software or other intellectual property contained therein.

The manufacturer reserves the right to withdraw the permissions granted herein whenever, in its discretion, the use of the publications is detrimental to its interest or, as determined by the manufacturer, the above instructions are not being properly followed.

You may not download, export or re-export this information except in full compliance with all applicable laws and regulations, including all United States export laws and regulations.

THE MANUFACTURER MAKES NO GUARANTEE ABOUT THE CONTENT OF THESE PUBLICATIONS. THESE PUBLICATIONS ARE PROVIDED "AS-IS" AND WITHOUT WARRANTY OF ANY KIND, EITHER EXPRESSED OR IMPLIED, INCLUDING BUT NOT LIMITED TO IMPLIED WARRANTIES OF MERCHANTABILITY, NON-INFRINGEMENT, AND FITNESS FOR A PARTICULAR PURPOSE.



Printed in USA