

## LINE ACCESS TRUNK CIRCUIT WITH OR WITHOUT REVERSE BATTERY SUPERVISION

### (SD-2H186) TESTS

#### NO. 2 AND NO. 2B ELECTRONIC SWITCHING SYSTEMS

##### 1. GENERAL

**1.01** This section describes the method of testing the line access trunk circuit (SD-2H186) with or without reverse battery supervision used in the No. 2 and No. 2B Electronic Switching Systems (ESS).

**1.02** This section is reissued to cover the No. 2B ESS.

**1.03** The following tests will be performed.

**A. Circuit State and Scan Point Operation:**

This test verifies the operation of the circuit relays and the saturation of the ferrod sensors associated with the line access trunk circuit.

**B. Transmission Loss Measurements:** This test verifies the transmission loss of the line access trunk circuit.

**1.04** The line access trunk circuit tests are performed on a periodic basis as prescribed by equipment test list procedures or when a malfunction of the circuit is suspected.

**1.05** The tests will be performed from the trunk test panel (TTP) in conjunction with the maintenance display buffer and teletypewriter (TTY). For detailed information about the TTP and its operation, refer to Section 232-130-301, Trunk Test Panel—Method of Operation.

**1.06** The keys on the TTP may be either a locking or a nonlocking type. In order to differentiate between the two types of keys, the use of a locking type key shall be identified by the words "operate" and "release" and the use of

a nonlocking type key shall be identified by the word "depress" in the ACTION column.

**Note:** Nonlocking keys require a depression of at least one-half second to ensure system recognition.

**1.07 Lettered Steps:** A letter a, b, c, etc, added to a step number in Part 3 or 4 of this section indicates an action which may or may not be required depending on local conditions. The condition under which a lettered step or series of lettered steps should be made is given in the ACTION column and all steps governed by the same condition are designated by the same letter within a test. Where a condition does not apply, all steps designated by the letter should be omitted.

**1.08** Whenever the term TOUCH-TONE® telephone service is used, it refers to the equipment required to provide this service to the customer.

##### 2. APPARATUS

**Note:** Equivalent apparatus may be substituted.

**2.01** KS-14510 L1 volt-ohm-milliammeter (VOM).

**2.02** KS-14510 L3 test leads (one red and one black).

**2.03** One 262C-type (900 ohm) plug.

**2.04** Two 2P4A cord assemblies consisting of a P2B cord, at least 3 feet long, and two 310 plugs.

**2.05** Two 2W6A cord assembly consisting of a W2C cord, at least 10 feet long, with a 310

##### NOTICE

Not for use or disclosure outside the  
Bell System except under written agreement

## SECTION 232-141-505

plug on one end and two 59-type cord tips on the other.

**2.06** One 1025A headset consisting of a LB2 receiver, a W2FT cord, and a 310 plug.

**2.07** Transmission measuring set (TMS), 23D. Equivalent apparatus must be capable of measuring power in 900-ohm circuits at 1 kHz. The accuracy must be  $\pm 0.1$  dB from  $-15$  dBm to  $+10.0$  dBm at 1 kHz.

**Note:** This item will not be required if the TTP is equipped with a TMS.

### 3. PREPARATION

**3.01** Refer to the office records to obtain the following information about the circuit to be tested:

- (a) trunk group number (TGN),
- (b) member number (MEMN),
- (c) supervisory scan point number (SPN),
- (d) the protector block assignment for the line access trunk circuit

**Note:** When the trunk enters the office through carrier equipment, it will not appear at the protector frame.

**3.02** Verify the scan point numbers obtained from the office records as follows:

At maintenance TTY, type in:

A VY:TRK:aaa bbb!

aaa = TGN

bbb = MEMN

The system response is as follows:

AR VY TRK aaa bbb

SPN ss rrb

ss = scanner number

rr = scanner row

bb = bit in row

The bb bit represents the first ferrod sensor (0) in the scanner row that is associated with the specific circuit. All other ferrod sensors assigned to the same circuit follow in consecutive order (0, 1, 2, etc). Refer to the output message manual (OM-2H200) for explanation of other data fields, if required.

**3.03** Use the protector block assignment from 3.01 to locate and remove the protector block assigned to the outgoing trunk circuit.

**Note:** In order to perform these tests, the tip and ring leads coming into the circuit must be open. If the trunk circuit does not appear at the protector frame, open the tip and ring leads into the trunk circuit in accordance with local procedures.

**3.04** Using a 2W6A cord connect the trunk side appearance of the tip and ring of the line access trunk circuit to the SP jack nearest the protector block.

**Note:** Make sure no other connection is made to the SP jack in the office. If transmission measurements cannot be made via the SP jack, connect the test equipment to the trunk side appearance of the tip and ring instead of using the SP jack.

**3.05** The following is a step-by-step procedure to make the incoming trunk circuit traffic busy and connect it to the TTP (Fig. 1).

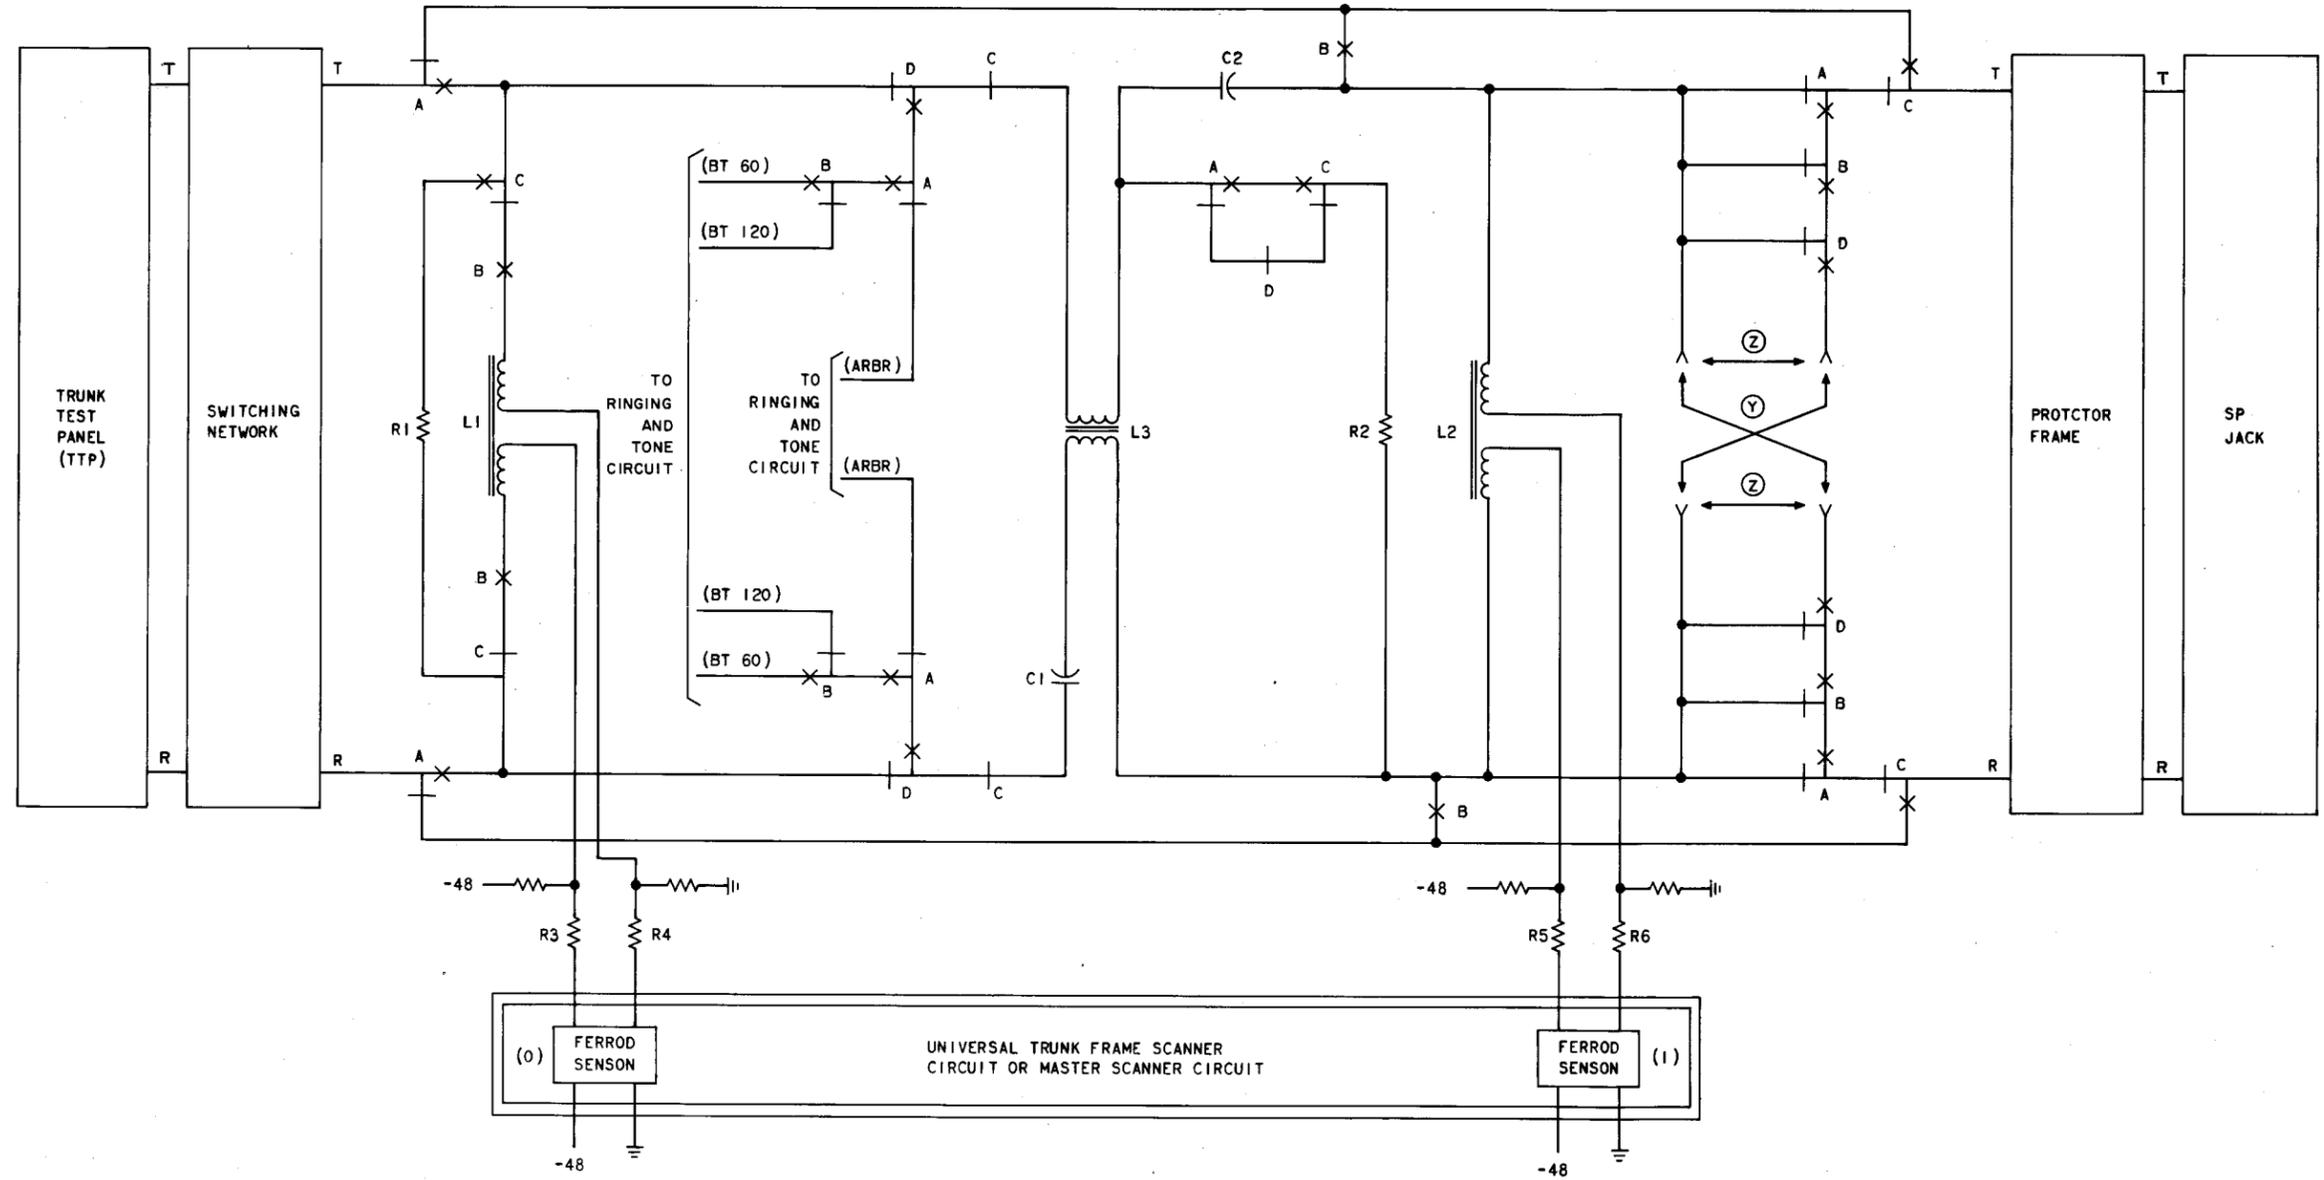


Fig. 1—Line Access Trunk Circuit (SD-2H186)

STEP	ACTION	VERIFICATION
<b>All Tests</b>		
1	At telephone set on TTP— Operate access trunk 1 key.	
2	Lift handset off-hook, or operate TRFR key at TEL CKT on TTP if using headset.	At telephone set— Access trunk 1 lamp lighted. At ACCESS TRUNK 1 CONTROL— SUPV lamp lighted. At TEL CKT— TRFR lamp lighted if TRFR key is operated.
3	At TOUCH-TONE dial— Dial 1 + TGN + MEMN + ST.	At ACCESS TRUNK 1 CONTROL— EQPT ST lamp lighted steadily or flashing at a rate of 120 interruptions per minute. At MISC TEST CONTROL— P & E lamp lighted if connection was successful.
		<i>Note:</i> If the EQPT ST lamp is flashing and the P & E lamp is not lighted steadily, the TTP is not connected to the circuit to be tested.
4a	If the P & E is not lighted steadily— At ACCESS TRUNK 1 CONTROL— Depress RLS key.	
5a	Repeat Steps 3 and 4a until connection is successful.	
6	Place handset on-hook, or release TRFR key.	At telephone set— Access trunk 1 lamp extinguished. At TEL CKT— TRFR lamp extinguished.
<b>4. METHOD</b>		(2) Troubleshoot the circuit which failed.
<b>4.01</b> If the verification procedure fails or if a malfunctioning circuit is indicated during any part of these tests, proceed as follows.		(3) Replace faulty circuit components using standard repair procedures.
(1) Discontinue the test.		(4) Repeat the test that failed. If verification is successful, continue the test.

STEP	ACTION	VERIFICATION
------	--------	--------------

**A. Circuit State and Scan Point Operation**

- |   |   |  |
|---|---|--|
| 7 | Use the TTP printout from 3.02 to determine the trunk scanner and number of the scanner |  |
|---|---|--|

**SECTION 232-141-505**

STEP	ACTION	VERIFICATION
	row associated with the scan points assigned to the line access trunk circuit.	
8	<p>At maintenance TTY—                      ◆For No. 2 ESS offices type in:◆                      UBRL TS:RSN:ssrr!                      ss = Number of trunk scanner in decimal (0-11) from Step 7.                      rr = Number of scanner row in decimal (0-63) from Step 7.</p> <p>◆For No. 2B ESS offices type in:                      MON:TSSN ssrr;RDT LAMPS!                      ss = Number of trunk scanner in decimal (0-11) from Step 7.                      rr = Number of scanner row in decimal (0-63) from Step 7.                      RDT LAMPS = Direct the result to the DISPLAY BUFFER.◆</p>	<p>At DISPLAY BUFFER—                      Scanner row containing specific scan points displayed on DISPLAY BUFFER lamps.                      Lamps associated with ferrod sensors connected to circuit under test are lighted.</p>
9	<p>At ACCESS TRUNK 1 CONTROL—                      Depress VM key.</p>	<p>At ACCESS TRUNK 1 CONTROL—                      VM lamp lighted.                      At VOLTMETER CONTROL—                      100K lamp lighted.                      At VOLTMETER—                      Meter indicates 0.</p>
10	<p>At VOLTMETER CONTROL—                      Operate TR REV key.</p>	<p>At VOLTMETER CONTROL—                      TR REV lamp lighted.                      At VOLTMETER—                      Meter indicates 0.</p>
11	<p>Depress FEMF key.</p>	<p>At VOLTMETER CONTROL—                      FEMF lamp lighted.                      At VOLTMETER—                      Meter indicates 0.</p>
12	<p>Release TR REV key.</p>	<p>At VOLTMETER CONTROL—                      TR REV lamp extinguished.                      At VOLTMETER—                      Meter indicates 0.</p>
13	<p>Depress MET VM key.</p>	<p>At VOLTMETER CONTROL—                      FEMF lamp extinguished.                      MET VM lamp lighted.                      At VOLTMETER—                      Meter indicates 0.</p>
14	<p>Set PD GROUP switch to 0-5 position.</p>	
15	<p>At PERIPHERAL DECODER POINTS—                      Operate 0, 1, 2, and 3 keys.</p>	<p>At PERIPHERAL DECODER POINTS—                      0, 1, 2, and 3 lamps lighted.</p>

STEP	ACTION	VERIFICATION
16	Depress AT 1 key.	At circuit under test— Relays A, B, C, and D operated.
17	At VOLTMETER CONTROL— Depress 1K key. Operate GRD key.	At VOLTMETER— Meter indicates between 9.6 and 10.4 volts on 24-volt scale. At VOLTMETER CONTROL— MET VM lamp extinguished. 1K lamp lighted. GRD lamp lighted.
18	Release GRD key. Depress MET VM key.	GRD lamp extinguished. 1K lamp extinguished. MET VM lamp lighted.
19	At front of writing shelf— Connect VOM to SP jack using a 2W6A cord assembly. Use appropriate test leads to connect positive side of VOM to tip and negative side to ring. (White wire on 2W6A cord assembly is tip and blue wire is ring).	At VOM— Meter indicates between 42.75 and 52.5 volts on 60-volt scale.
20	Remove cord from SP jack.	
21	Insert 262C-type (900 ohm) plug into SP jack.	At DISPLAY BUFFER— Lamp associated with ferrod sensor 1 extinguished.
22	Remove 262C-type (900 ohm) plug from SP jack.	Lamp associated with ferrod sensor 1 lighted.
23	Connect headset to SP jack.	
24	At PERIPHERAL DECODER POINTS— Release 2 key.	At PERIPHERAL DECODER POINTS— 2 lamp extinguished.
25	Depress AT 1 key.	At headset— Busy tone present (60 ipm) At circuit under test— Relay C released. Relays A, B, and D remain operated.
26	At PERIPHERAL DECODER POINTS— Release 1 key.	At PERIPHERAL DECODER POINTS— 1 lamp extinguished.
27	Depress AT 1 key.	At headset— Overflow tone present (120 ipm). At circuit under test— Relay B released. Relays A and D remain operated.

**SECTION 232-141-505**

<b>STEP</b>	<b>ACTION</b>	<b>VERIFICATION</b>
28	At PERIPHERAL DECODER POINTS— Release 0 key.	At PERIPHERAL DECODER POINTS— 0 lamp extinguished.
29	Depress AT 1 key.	At headset— Audible ring tone present. At circuit under test— Relay A released. Relay D remains operated.
30	At front of writing shelf— Remove headset from SP jack.	
31	At PERIPHERAL DECODER POINTS— Release 3 key. Operate 0 and 1 keys.	At PERIPHERAL DECODER POINTS— 3 lamp extinguished. 0 and 1 lamps lighted.
32	Depress AT 1 key.	At VOLTMETER— Meter indicates between 42.75 and 52.5 volts on 120-volt scale. At circuit under test— Relay D released. Relays A and B operated.
33	At front of writing shelf— Insert 900-ohm type (900 ohm) plug into ACCESS TRK-1 jack.	At DISPLAY BUFFER— Lamp associated with ferrod sensor 0 extinguished.
34	Remove 900-ohm type (900 ohm) plug from ACCESS TRK-1 jack.	Lamp associated with ferrod sensor 0 lighted.
35	At PERIPHERAL DECODER POINTS— Release 0 and 1 keys.	At PERIPHERAL DECODER POINTS— 0 and 1 lamps extinguished.
36	Depress AT 1 key.	At circuit under test— Relays A and B released.
37	At maintenance TTY— ◆For No. 2 ESS offices type in:◆ UB SY:CLB!  ◆For No. 2B ESS offices type in: STOP:UTIL!◆	At DISPLAY BUFFER— Scanner row display removed.
	<b>Note:</b> If transmission loss measurements are to be performed proceed to Test B.	
38	At protector frame— Disconnect 2W6A cord from SP jack and the trunk side appearance of the tip and ring of the line access trunk circuit.	

STEP	ACTION	VERIFICATION
39	Replace the protector block or connections opened in preparation.	
40	At ACCESS TRUNK 1 CONTROL— Depress RLS key.	At ACCESS TRUNK 1 CONTROL— SUPV lamp extinguished. EQPT ST lamp extinguished. VM lamp extinguished. At MISC TEST CONTROL— P & E lamp extinguished.
41	At telephone set— Operate green release key.	
<b>B. Transmission Loss Measurements</b>		
7	At front of writing shelf— Use 2P4A cord to connect TRANS MEAS— DBM-0 jack to SP jack.	
8	At ACCESS TRUNK 1 CONTROL— Depress XMSN key.	At ACCESS TRUNK 1 CONTROL— XMSN lamp lighted.
9	At TRANSMISSION MEASURING CONTROL— Set TEST SET switch to TMS position. Set MEASURE switch to MEAS 1 position. Set SEND switch to OFF position.	
10b	If TTP is not equipped with TMS— At front of writing shelf— Use 2P4A cord to connect external TMS to TRANS MEAS—TM-1 jack.	
11	At TMS— Set ADD DBM switch to 0 position.	
12	At PERIPHERAL DECODER POINTS— Operate 2 key.	At PERIPHERAL DECODER POINTS— 2 lamp lighted.
13	Depress AT 1 key.	At TMS— Meter indicates 0 to -0.5 dB. Record level for reference use. At circuit under test— Relay C operated.
14	At PERIPHERAL DECODER POINTS— Operate 1 key.	At PERIPHERAL DECODER POINTS— 1 lamp lighted.
15	Depress AT 1 key.	At TMS— Meter indicates between 0 and 0.1 dB less than reference level in Step 13. At circuit under test—

**SECTION 232-141-505**

STEP	ACTION	VERIFICATION
		Relay B operated. Relay C remains operated.
16	At PERIPHERAL DECODER POINTS— Release 1 and 2 keys. Operate 0 key.	At PERIPHERAL DECODER POINTS— 1 and 2 lamps extinguished. 0 lamp lighted.
17	Depress AT 1 key.	At TMS— Meter indicates between 0 and 0.3 dB less than reference level in Step 13. At circuit under test— Relays B and C released. Relay A operated.
18	At PERIPHERAL DECODER POINTS— Operate 1 key.	At PERIPHERAL DECODER POINTS— 1 lamp lighted.
19	Depress AT 1 key.	At TMS— Meter indicates between 0 and 0.4 dB less than reference level in Step 13. At circuit under test— Relay B operated. Relay A remains operated.
20	At PERIPHERAL DECODER POINTS— Release 0 and 1 keys.	At PERIPHERAL DECODER POINTS— 0 and 1 lamps extinguished.
21	Depress AT 1 key.	At circuit under test— Relays A and B released.
22	At front of writing shelf— Disconnect 2P4A cord from SP jack and TRANS MEAS—DBM-0 jack.	
23	If TTP is not equipped with TMS— Disconnect 2P4A cord from TRANS MEAS—TM-1 jack and external TMS.	
24	At protector frame— Disconnect 2W6A cord from SP jack and the trunk side appearance of the tip and ring of the line access trunk circuit.	
25	Replace the protector block or connections opened in preparation.	
26	At ACCESS TRUNK 1 CONTROL— Depress RLS key.	At ACCESS TRUNK 1 CONTROL— SUPV lamp extinguished. EQPT ST lamp extinguished. XMSN lamp extinguished.

<b>STEP</b>	<b>ACTION</b>	<b>VERIFICATION</b>
27	At telephone set— Operate green release key.	At MISC TEST CONTROL— P & E lamp extinguished.