

Part No. 302283-L Rev 00
June 2004

600 Technology Park Drive
Billerica, MA 01821-4130

Installing Hardware Options for the Contivity Secure IP Services Gateway



NORTEL
NETWORKS™

Copyright © 2004 Nortel Networks

All rights reserved. June 2004.

The information in this document is subject to change without notice. The statements, configurations, technical data, and recommendations in this document are believed to be accurate and reliable, but are presented without express or implied warranty. Users must take full responsibility for their applications of any products specified in this document. The information in this document is proprietary to Nortel Networks Inc.

Trademarks

Nortel Networks, the Nortel Networks logo, the Globemark, Unified Networks, and Contivity are trademarks of Nortel Networks.

Adobe and Acrobat Reader are trademarks of Adobe Systems Incorporated.

Hi/fn, Hifn, and LZS are trademarks of Hi/fn, Inc.

Ethernet is a trademark of Xerox Corporation.

The asterisk after a name denotes a trademarked item.

Statement of conditions

In the interest of improving internal design, operational function, and/or reliability, Nortel Networks Inc. reserves the right to make changes to the products described in this document without notice.

Nortel Networks Inc. does not assume any liability that may occur due to the use or application of the product(s) or circuit layout(s) described herein.

USA requirements only

Federal Communications Commission (FCC) Compliance Notice: Radio Frequency Notice (Class A)

Note: This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy. If it is not installed and used in accordance with the instruction manual, it may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case users will be required to take whatever measures may be necessary to correct the interference at their own expense.

Federal Communications Commission (FCC) Compliance Notice: Radio Frequency Notice (Class B)

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference.
- This device must accept any interference received, including interference that may cause undesired operation.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

European requirements only

EN 55 022 statement (Class A)

This is to certify that the Nortel Networks Contivity 600, 1700, 1740, 2600, 2700, 4500, 4600, and 5000 are shielded against the generation of radio interference in accordance with the application of Council Directive 89/336/EEC, Article 4a. Conformity is declared by the application of EN 55 022 Class A (CISPR 22).

Warning: This is a Class A product. In a domestic environment, this product may cause radio interference, in which case, the user may be required to take appropriate measures.

Achtung: Dieses ist ein Gerät der Funkstörgrenzwertklasse A. In Wohnbereichen können bei Betrieb dieses Gerätes Rundfunkstörungen auftreten, in welchen Fällen der Benutzer für entsprechende Gegenmaßnahmen verantwortlich ist.

Attention: Ceci est un produit de Classe A. Dans un environnement domestique, ce produit risque de créer des interférences radioélectriques, il appartiendra alors à l'utilisateur de prendre les mesures spécifiques appropriées.

EN 55 022 statement (Class B)

This is to certify that the Nortel Networks Contivity 1010/1050/1100 and Contivity 1600 are shielded against the generation of radio interference in accordance with the application of Council Directive 89/336/EEC, Article 4a. Conformity is declared by the application of EN 55 022 Class B (CISPR 22).

EC Declaration of Conformity

These products conform to the provisions of the R&TTE Directive 1999/5/EC.

Japan/Nippon requirements only

Voluntary Control Council for Interference (VCCI) statement (Class A)

この装置は、情報処理装置等電波障害自主規制協議会（VCCI）の基準に基づくクラス A 情報技術装置です。この装置を家庭環境で使用すると電波妨害を引き起こすことがあります。この場合には使用者が適切な対策を講ずるよう要求されることがあります。

Voluntary Control Council for Interference (VCCI) statement (Class B)

この装置は、情報処理装置等電波障害自主規制協議会（VCCI）の基準に基づくクラス B 情報技術装置です。この装置は、家庭環境で使用することを目的としていますが、この装置がラジオやテレビジョン受信機に近接して使用されると、受信障害を引き起こすことがあります。

取扱説明書に従って正しい取り扱いをして下さい。

Canada requirements only

Canadian Department of Communications Radio Interference Regulations (Class A)

This digital apparatus (Contivity 600, 1700, 1740, 2600, 2700, 4500, 4600, or 5000) does not exceed the Class A limits for radio-noise emissions from digital apparatus as set out in the Radio Interference Regulations of the Canadian Department of Communications.

Règlement sur le brouillage radioélectrique du ministère des Communications (Classe A)

Cet appareil numérique (Contivity 600, 1700, 1740, 2600, 2700, 4500, 4600, ou 5000) respecte les limites de bruits radioélectriques visant les appareils numériques de classe A prescrites dans le Règlement sur le brouillage radioélectrique du ministère des Communications du Canada.

Canadian Department of Communications Radio Interference Regulations (Class B)

This digital apparatus (Contivity 1010/1050/1100 and Contivity 1600) does not exceed the Class B limits for radio-noise emissions from digital apparatus as set out in the Radio Interference Regulations of the Canadian Department of Communications.

Règlement sur le brouillage radioélectrique du ministère des Communications (Classe B)

Cet appareil numérique (Contivity 1010/1050/1100 and Contivity 1600) respecte les limites de bruits radioélectriques visant les appareils numériques de classe B prescrites dans le Règlement sur le brouillage radioélectrique du ministère des Communications du Canada.

Nortel Networks Inc. software license agreement

This Software License Agreement (“License Agreement”) is between you, the end-user (“Customer”) and Nortel Networks Corporation and its subsidiaries and affiliates (“Nortel Networks”). PLEASE READ THE FOLLOWING CAREFULLY. YOU MUST ACCEPT THESE LICENSE TERMS IN ORDER TO DOWNLOAD AND/OR USE THE SOFTWARE. USE OF THE SOFTWARE CONSTITUTES YOUR ACCEPTANCE OF THIS LICENSE AGREEMENT. If you do not accept these terms and conditions, return the Software, unused and in the original shipping container, within 30 days of purchase to obtain a credit for the full purchase price.

“Software” is owned or licensed by Nortel Networks, its parent or one of its subsidiaries or affiliates, and is copyrighted and licensed, not sold. Software consists of machine-readable instructions, its components, data, audio-visual content (such as images, text, recordings or pictures) and related licensed materials including all whole or partial copies. Nortel Networks grants you a license to use the Software only in the country where you acquired the Software. You obtain no rights other than those granted to you under this License Agreement. You are responsible for the selection of the Software and for the installation of, use of, and results obtained from the Software.

1. Licensed Use of Software. Nortel Networks grants Customer a nonexclusive license to use a copy of the Software on only one machine at any one time or to the extent of the activation or authorized usage level, whichever is applicable. To the extent Software is furnished for use with designated hardware or Customer furnished equipment (“CFE”), Customer is granted a nonexclusive license to use Software only on such hardware or CFE, as applicable. Software contains trade secrets and Customer agrees to treat Software as confidential information using the same care and discretion Customer uses with its own similar information that it does not wish to disclose, publish or disseminate. Customer will ensure that anyone who uses the Software does so only in compliance with the terms of this Agreement. Customer shall not a) use, copy, modify, transfer or distribute the Software except as expressly authorized; b) reverse assemble, reverse compile, reverse engineer or otherwise translate the Software; c) create derivative works or modifications unless expressly authorized; or d) sublicense, rent or lease the Software. Licensors of intellectual property to Nortel Networks are beneficiaries of this provision. Upon termination or breach of the license by Customer or in the

event designated hardware or CFE is no longer in use, Customer will promptly return the Software to Nortel Networks or certify its destruction. Nortel Networks may audit by remote polling or other reasonable means to determine Customer's Software activation or usage levels. If suppliers of third party software included in Software require Nortel Networks to include additional or different terms, Customer agrees to abide by such terms provided by Nortel Networks with respect to such third party software.

2. Warranty. Except as may be otherwise expressly agreed to in writing between Nortel Networks and Customer, Software is provided "AS IS" without any warranties (conditions) of any kind. NORTEL NETWORKS DISCLAIMS ALL WARRANTIES (CONDITIONS) FOR THE SOFTWARE, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE AND ANY WARRANTY OF NON-INFRINGEMENT. Nortel Networks is not obligated to provide support of any kind for the Software. Some jurisdictions do not allow exclusion of implied warranties, and, in such event, the above exclusions may not apply.

3. Limitation of Remedies. IN NO EVENT SHALL NORTEL NETWORKS OR ITS AGENTS OR SUPPLIERS BE LIABLE FOR ANY OF THE FOLLOWING: a) DAMAGES BASED ON ANY THIRD PARTY CLAIM; b) LOSS OF, OR DAMAGE TO, CUSTOMER'S RECORDS, FILES OR DATA; OR c) DIRECT, INDIRECT, SPECIAL, INCIDENTAL, PUNITIVE, OR CONSEQUENTIAL DAMAGES (INCLUDING LOST PROFITS OR SAVINGS), WHETHER IN CONTRACT, TORT OR OTHERWISE (INCLUDING NEGLIGENCE) ARISING OUT OF YOUR USE OF THE SOFTWARE, EVEN IF NORTEL NETWORKS, ITS AGENTS OR SUPPLIERS HAVE BEEN ADVISED OF THEIR POSSIBILITY. The forgoing limitations of remedies also apply to any developer and/or supplier of the Software. Such developer and/or supplier is an intended beneficiary of this Section. Some jurisdictions do not allow these limitations or exclusions and, in such event, they may not apply.

4. General

- a. If Customer is the United States Government, the following paragraph shall apply: All Nortel Networks Software available under this License Agreement is commercial computer software and commercial computer software documentation and, in the event Software is licensed for or on behalf of the United States Government, the respective rights to the software and software documentation are governed by Nortel Networks standard commercial license in accordance with U.S. Federal Regulations at 48 C.F.R. Sections 12.212 (for non-DoD entities) and 48 C.F.R. 227.7202 (for DoD entities).
- b. Customer may terminate the license at any time. Nortel Networks may terminate the license if Customer fails to comply with the terms and conditions of this license. In either event, upon termination, Customer must either return the Software to Nortel Networks or certify its destruction.
- c. Customer is responsible for payment of any taxes, including personal property taxes, resulting from Customer's use of the Software. Customer agrees to comply with all applicable laws including all applicable export and import laws and regulations.
- d. Neither party may bring an action, regardless of form, more than two years after the cause of the action arose.
- e. The terms and conditions of this License Agreement form the complete and exclusive agreement between Customer and Nortel Networks.
- f. This License Agreement is governed by the laws of the country in which Customer acquires the Software. If the Software is acquired in the United States, then this License Agreement is governed by the laws of the state of New York.

Contents

Preface	17
Before you begin	17
Text conventions	18
Acronyms	18
Related publications	19
How to get help	20
Chapter 1	
Contivity 600 option installation	21
Shutting down the system to add or replace hardware	22
Opening the Contivity 600	22
Installing and replacing an option card	26
Replacing a DIMM	30
Chapter 2	
Contivity 1100 option installation	33
Chapter 3	
Contivity 1700 and 1600 option installation	37
Shutting down the system to add or replace hardware	38
Removing the front bezel and top cover	39
Attaching the antistatic wrist strap	42
Installing and replacing option cards	43
Installing and replacing DIMMs	47
Chapter 4	
Contivity 1740 option installation	51
Shutting down the system to add or replace hardware	52
Removing the front bezel and top cover	53

Attaching the antistatic wrist strap	56
Installing and replacing option cards	57
Installing the SSL VPN Module 1000 with other option cards	58
Installing and replacing an option card	58
Installing and replacing DIMMs	61
Chapter 5	
Contivity 2700 and 2600 option installation	65
Shutting down the system to add or replace hardware	66
Removing the front bezel and top cover	67
Attaching the antistatic wrist strap	70
Installing and replacing option cards	71
Installing and replacing DIMMs	76
Chapter 6	
Contivity 4500 option installation.....	81
Opening the Contivity 4500	81
Contivity 4500 system board layout	84
Installing and replacing option cards	86
Installing and replacing DIMMs	88
Replacing a power supply	90
Replacing a hard disk drive	91
Chapter 7	
Contivity 4600 option installation.....	93
Opening the Contivity 4600	93
Contivity 4600 system board layout	96
Installing and replacing option cards	97
Installing and replacing DIMMs	99
Replacing a power supply	100
Replacing a hard disk drive	102
Chapter 8	
Contivity 5000 option installation.....	105
Preparing to install hardware options	106

Option cards, DIMMs, and fan trays	106
Power supplies	106
Hard disk drives	106
Shutting down the system to add or replace hardware	107
Removing the front bezel and top cover	108
Attaching the antistatic wrist strap	112
Installing and replacing option cards	113
Considerations for installing option cards	113
Support for 16 I/O ports	117
Installing and replacing an option card	117
Installing and replacing DIMMs	120
Considerations for installing DIMMs	120
Installing DIMMs	122
Replacing a power supply	124
Replacing a hard disk drive	127
Replacing a fan tray	131
Appendix A	
Technical specifications	137
Contivity Security Accelerator (CSA) and Hardware Accelerator cards	138
SSL VPN Module 1000	139
10/100BASE Ethernet interface card	140
1000BASE-T Ethernet interface card	142
1000BASE-SX Ethernet interface card	143
56/64K CSU/DSU WAN interface card	144
ADSL WAN interface card	146
ISDN BRI interface card	147
T1/E1 CSU/DSU WAN interface card	149
Quad T1/E1 CSU/DSU WAN interface card	151
V.90 modem interface card	152
Single V.35/X.21 WAN interface card	152
Dual V.35 WAN interface card	156
HSSI WAN interface card	158
External modem adapter for the Contivity 1010/1050/1100	160
Index	163

Figures

Figure 1	Removing the screws from the bottom of the Contivity 600	23
Figure 2	Removing the chassis from the steel enclosure	24
Figure 3	Contivity 600 system board	25
Figure 4	Removing the blank bracket from the option card slot	27
Figure 5	Inserting the option card	28
Figure 6	Securing the option card in the slot	29
Figure 7	Replacing the chassis in the steel enclosure	29
Figure 8	Installing a DIMM	31
Figure 9	Contivity 1100 system board	35
Figure 10	Removing the front bezel	39
Figure 11	Removing the top cover	40
Figure 12	Location of option card slots and DIMMs on the system board	41
Figure 13	Location of the grounding jack for the antistatic wrist strap	42
Figure 14	Removing an option card or a filler panel	45
Figure 15	Installing an option card	46
Figure 16	Replacing the front bezel	47
Figure 17	Installing and removing a DIMM in a Contivity 1700 or 1600	49
Figure 18	Removing the front bezel	53
Figure 19	Removing the top cover	54
Figure 20	Location of option card and DIMM slots on the system board	55
Figure 21	Location of the grounding jack for the antistatic wrist strap	56
Figure 22	Installing and removing an option card	59
Figure 23	Replacing the front bezel	60
Figure 24	Installing and removing a DIMM	62
Figure 25	Removing the front bezel	67
Figure 26	Removing the top cover	68
Figure 27	Location of option card slots and DIMMs on the system board	69
Figure 28	Location of the grounding jack for the antistatic wrist strap	70
Figure 29	Installing and removing an option card	74

Figure 30	Replacing the front bezel	75
Figure 31	Installing and removing a DIMM	78
Figure 32	Removing the Contivity 4500 front bezel	82
Figure 33	Contivity 4500 front components	83
Figure 34	Sample Contivity 4500 system board	85
Figure 35	Installing Contivity 4500 option cards	87
Figure 36	Installing Contivity 4500 DIMMs	88
Figure 37	Removing a Contivity 4500 power supply	90
Figure 38	Removing a Contivity 4500 hard disk drive	92
Figure 39	Removing the Contivity 4600 front bezel	94
Figure 40	Contivity 4600 front components	95
Figure 41	Sample Contivity 4600 system board	96
Figure 42	Installing Contivity 4600 option cards	98
Figure 43	Installing Contivity 4600 DIMMs	100
Figure 44	Removing a Contivity 4600 power supply	101
Figure 45	Removing a Contivity 4600 hard disk drive	103
Figure 46	Removing the front bezel	108
Figure 47	Removing the top cover	110
Figure 48	Location of option cards, DIMMs, and fan trays on the system board	111
Figure 49	Location of the grounding jack for the antistatic wrist strap	112
Figure 50	Contivity 5000 option card slots and buses	113
Figure 51	Flowchart for option card installation in the Contivity 5000	116
Figure 52	Installing and removing an option card	118
Figure 53	Replacing the front bezel	119
Figure 54	DIMM memory banks on the Contivity 5000 motherboard	120
Figure 55	DIMM label: Example 1	121
Figure 56	DIMM label: Example 2	121
Figure 57	Installing and removing a DIMM	123
Figure 58	Location of the Contivity 5000 power supplies	124
Figure 59	Removing a power supply	126
Figure 60	Inserting a power supply	126
Figure 61	Location of the Contivity 5000 hard disk drives	127
Figure 62	Removing a hard disk drive	129
Figure 63	Inserting a hard disk drive	130
Figure 64	Location of the Contivity 5000 fan trays	131

Figure 65	Removing a fan tray	132
Figure 66	Installing a fan tray	134
Figure 67	SSL VPN Module 1000	139
Figure 68	10/100BASE Ethernet interface card	140
Figure 69	1000BASE-T Ethernet interface card	142
Figure 70	1000BASE-SX Ethernet interface card	143
Figure 71	56/64K CSU/DSU WAN interface card	144
Figure 72	ADSL WAN interface card	146
Figure 73	ISDN BRI S/T interface card	147
Figure 74	ISDN BRI U interface card	147
Figure 75	T1/E1 CSU/DSU WAN interface card	149
Figure 76	Quad T1/E1 CSU/DSU WAN interface card	151
Figure 77	V.90 modem interface card	152
Figure 78	Single V.35/X.21 WAN interface card	152
Figure 79	Dual V.35 WAN interface card	156
Figure 80	HSSI WAN interface card	158
Figure 81	Serial cable adapter for connection to modem (DB9-to-DB25)	160

Tables

Table 1	Supported option cards for the Contivity 1100	33
Table 2	Supported option cards for the Contivity 1700	43
Table 3	Supported option cards for the Contivity 1600	44
Table 4	Supported option cards for the Contivity 1740	57
Table 5	Supported option cards for the Contivity 2700	71
Table 6	Installing other option cards with the SSL VPN Module 1000	72
Table 7	Supported option cards for the Contivity 2600	72
Table 8	Base and maximum memory for the Contivity 2600 and 2700	76
Table 9	Supported option cards for the Contivity 4500	86
Table 10	Supported option cards for the Contivity 4600	97
Table 11	Supported option cards for the Contivity 5000	114
Table 12	Optimal placement of option cards in the Contivity 5000	115
Table 13	10/100BASE Ethernet port pinouts (all models except Contivity 1100) .	141
Table 14	10/100BASE Ethernet port pinouts (Contivity 1100 only)	141
Table 15	1000BASE-T Ethernet port pinouts	143
Table 16	56/64K CSU/DSU cable pinouts for crossover connection	145
Table 17	56/64K CSU/DSU cable pinouts for straight-through connection	146
Table 18	ADSL cable pinouts	147
Table 19	ISDN BRI S/T cable pinouts	148
Table 20	ISDN BRI U cable pinouts	148
Table 21	T1/E1 CSU/DSU cable pinouts for crossover connection	150
Table 22	T1/E1 CSU/DSU cable pinouts for straight-through connection	150
Table 23	V.90 modem cable pinouts	152
Table 24	V.35 cable pinouts	153
Table 25	X.21 cable pinouts	154
Table 26	DB26-to-V.35 cable pinouts	157
Table 27	T3 cable pinouts	158
Table 28	Null modem adapter cable pinouts	161

Preface

The Contivity* Secure IP Services Gateway product family supports secure, reliable IP VPNs in a single, integrated hardware device. In this guide, all Contivity Secure IP Services Gateway models are referred to generically as *the gateway*. This guide provides instructions on how to install or replace the following field-replaceable units in the Contivity gateway:

- LAN, WAN, and serial interface cards
- Hardware accelerator cards
- SSL VPN Module 1000
- Dual inline memory modules (DIMMs)
- Power supplies (Contivity 5000, 4600, and 4500)
- Hard disk drives (Contivity 5000, 4600, and 4500)
- Fan trays (Contivity 5000)



Warning: Some Contivity models must be returned to Nortel Networks* Manufacturing via your Customer Service Representative for repair. **Do not attempt to make any changes** to these models; untrained individuals could be harmed, you could invalidate your warranty, or you could possibly cause irreparable damage to the equipment.

Before you begin

This guide is intended for qualified service personnel who need to install or replace a field-replaceable unit (FRU) in the gateway chassis. A qualified service person should have appropriate technical training and experience and be aware of the hazards involved in installing and replacing field replaceable units.



Warning: Improper handling of internal components or assemblies, with the power connected, could cause severe injury.

Text conventions

This guide uses the following text conventions:

<code>Courier text</code>	Indicates command names and options and text that you need to enter. Example: Use the show health command. Example: Enter terminal paging {off on} .
<i>italic text</i>	Indicates new terms and book titles.
<code>plain Courier text</code>	Indicates system output, for example, prompts and system messages. Example: File not found.
separator (>)	Shows menu paths. Example: Choose Status > Health Check.

Acronyms

This guide uses the following acronyms:

ADSL	asymmetric digital subscriber line
CSU	channel service unit
DIMM	dual inline memory module
DSU	digital service unit
DTE	data terminal equipment
ISDN	Integrated Services Digital Network
LAN	local area network
LED	light emitting diode
PCI	peripheral component interconnect
SSL	Secure Sockets Layer
VPN	virtual private network
WAN	wide area network

Related publications

For more information about using the Contivity Secure IP Services Gateway, refer to the following publications:

- Release notes provide the latest information, including brief descriptions of the new features, problems fixed in this release, and known problems and workarounds.
- *Configuring Basic Features for the Contivity Secure IP Services Gateway* introduces the product and provides information about initial setup and configuration.
- *Configuring Servers, Authentication, and Certificates for the Contivity Secure IP Services Gateway* provides instructions for configuring authentication servers and services, as well as digital certificates.
- *Configuring Firewalls, Filters, NAT, and QoS for the Contivity Secure IP Services Gateway* provides instructions for configuring the Contivity Stateful Firewall, NAT, and Contivity interface and tunnel filters.
- *Configuring Tunneling Protocols for the Contivity Secure IP Services Gateway* provides instructions for configuring the tunneling protocols IPsec, L2TP, PPTP, and L2F.
- *Configuring Advanced Features for the Contivity Secure IP Services Gateway* provides instructions for configuring 802.1Q VLANs, circuitless IP, advanced WAN settings, PPP, PPPoE, frame relay, ADSL and ATM, T1/E1 CSU/DSU interfaces, dial services and BIS, DLSw, IPX, and the hardware accelerator and SSL VPN Module 1000 cards.
- *Configuring Routing for the Contivity Secure IP Services Gateway* provides instructions for configuring RIP, OSPF, and VRRP, as well as instructions for configuring ECMP, routing policy services, and client address redistribution.
- *Configuring SSL VPN Services for the Contivity Secure IP Services Gateway* provides instructions for configuring services on the SSL VPN Module 1000, including authentication, networks, user groups, and portal links.
- *Reference for the Contivity Secure IP Services Gateway Command Line Interface* provides syntax, descriptions, and examples for the commands that you can use to configure, manage, and monitor the gateway.
- *Managing and Troubleshooting the Contivity Secure IP Services Gateway* provides information about backup and recovery, file management, upgrading software, and troubleshooting. This guide also provides instructions for monitoring gateway status and performance.

You can print selected technical manuals and release notes free, directly from the Internet. Go to the www.nortelnetworks.com/documentation URL. Find the product for which you need documentation. Then locate the specific category and model or version for your hardware or software product. Use Adobe* Acrobat Reader* to open the manuals and release notes, search for the sections you need, and print them on most standard printers. Go to Adobe Systems at the www.adobe.com URL to download a free copy of the Adobe Acrobat Reader.



Note: If you need instructions for an older Contivity model that is not in this guide, go to the Nortel Networks documentation URL. From the Product Family menu, choose “Contivity.” From the list of products, choose the older product, for example, Contivity 2500, then find an older version of this book (for example, part number 302283-F Rev 00).

How to get help

If you purchased a service contract for your Nortel Networks product from a distributor or authorized reseller, contact the technical support staff for that distributor or reseller for assistance.

If you purchased a Nortel Networks service program, contact Nortel Networks Technical Support. To obtain contact information online, go to the www.nortelnetworks.com/cgi-bin/comments/comments.cgi URL, then click on Technical Support.

From the Technical Support page, you can open a Customer Service Request online or find the telephone number for the nearest Technical Solutions Center. If you are not connected to the Internet, you can call 1-800-4NORTEL (1-800-466-7835) to learn the telephone number for the nearest Technical Solutions Center.

An Express Routing Code (ERC) is available for many Nortel Networks products and services. When you use an ERC, your call is routed to a technical support person who specializes in supporting that product or service. To locate an ERC for your product or service, go to the <http://www.nortelnetworks.com/help/contact/erc/index.html> URL.

Chapter 1

Contivity 600 option installation

This chapter provides instructions on how to install and replace the following field replaceable units (FRUs) in the Contivity 600:

- LAN, WAN, and serial interface cards
- Dual inline memory module (DIMM)

To install an interface card or DIMM, you must remove the Contivity 600 chassis from its steel enclosure.

This chapter contains the following topics:

Topic	Page
Shutting down the system to add or replace hardware	22
Opening the Contivity 600	22
Installing and replacing an option card	26
Replacing a DIMM	30

Shutting down the system to add or replace hardware

Shut down the Contivity 600 and unplug it to install or replace an option card or to replace the DIMM.

To shut down the Contivity 600:

- 1 Use the Web GUI or the command line interface to shut down the gateway.
 - Web GUI: Choose Admin > Shutdown. Select the option to power off the gateway after shutdown.
 - Command line interface: Use the **reload** command to shut down the system. For example, enter **reload power-off disable-logins "Upgrade hardware"** (for the complete syntax of the **reload** command, see the *Reference for the Contivity Secure IP Services Gateway Command Line Interface*).
- 2 Wait for the system to shut down. You may need to wait several minutes.
- 3 Remove all interface cables from the rear of the chassis.
- 4 Disconnect the power cord from the power outlet and then disconnect the power supply cable from the Contivity 600 DC input port.



Danger: Make sure to turn off the Contivity 600 and unplug it before you attempt to remove or install an option card or DIMM.

Opening the Contivity 600

To install an interface card or to replace the DIMM, you must remove the Contivity 600 chassis from its steel enclosure.

To access the chassis:


- 1 Shut down the Contivity 600 and then unplug it as described in [“Shutting down the system to add or replace hardware”](#) on page 22.



Danger: Make sure to turn off the Contivity 600 and unplug it before you attempt to remove or install an option card or DIMM.

- 2 Turn the Contivity 600 over to see the bottom of the gateway.
- 3 Using a Phillips screwdriver, remove the 4 screws that secure the bottom to the chassis (Figure 1).

Figure 1 Removing the screws from the bottom of the Contivity 600

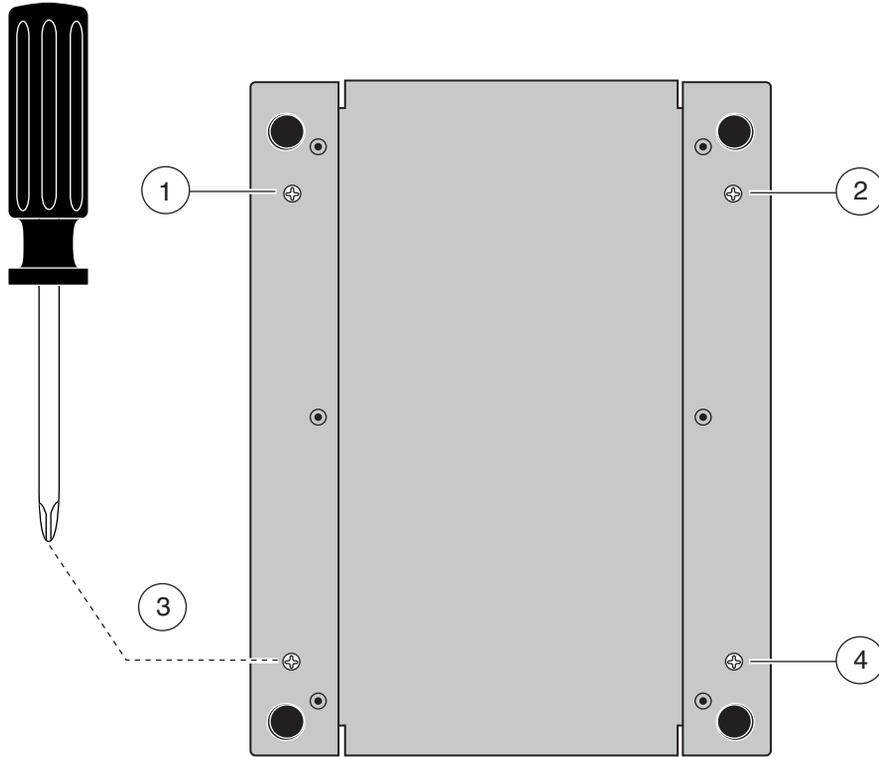


CS60003A

- 4 Grasp the rear of the chassis and firmly pull the chassis toward you to loosen it from the steel enclosure ([Figure 2](#)).


You can gently shake the chassis so that it slips outward and into your hand, or you can pull gently on the I/O expansion bay.

Figure 2 Removing the chassis from the steel enclosure

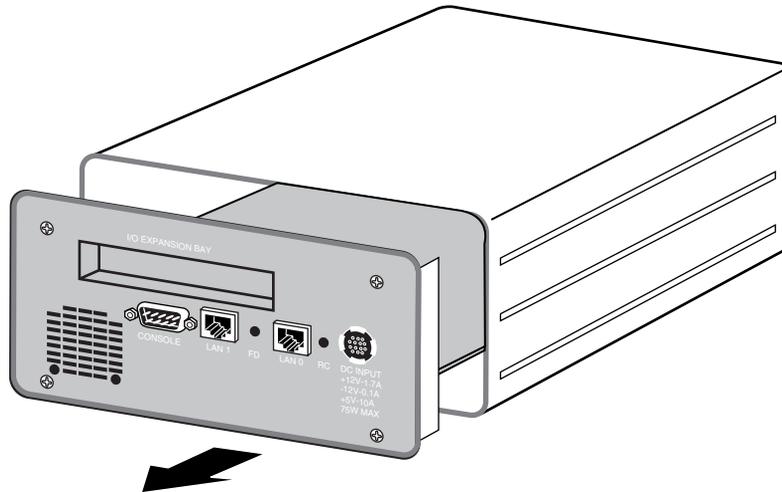

CS60004A

The system board is now exposed. [Figure 3](#) shows the location of the option card slot and the DIMM slot on the Contivity 600 system board.

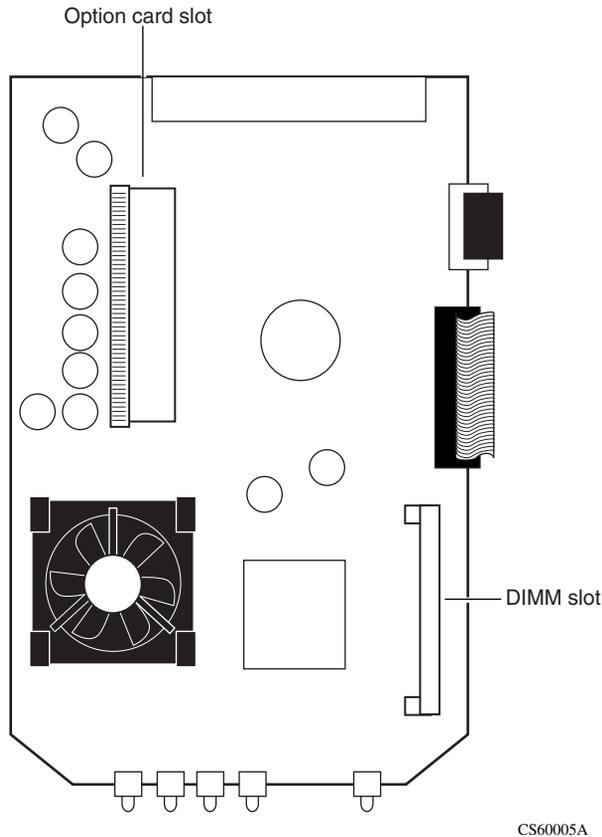Figure 3 Contivity 600 system board

Warning: Beware of danger if the battery is incorrectly replaced.

Replace with the *same* or an *equivalent battery* only, as recommended by the manufacturer's instructions.



Danger: In spite of the above warning, which is mandated for

regulatory approval, *you should not change the battery*. If you suspect a dead battery, contact Nortel Networks Customer Support.

Installing and replacing an option card

The Contivity 600 has one expansion slot for option cards (see [Figure 3 on page 25](#)). This section provides instructions on installing a LAN, WAN, or serial option card in the Contivity 600 or, if necessary, replacing the installed card.

You can install the following option cards in the Contivity 600:

- 10/100 Ethernet* LAN interface card
- 56/64K CSU/DSU WAN interface card (requires software Version 5.0 or later)
- ADSL WAN interface card (requires software Version 4.90 or later)
- ISDN BRI S/T or U interface card (requires software Version 4.80 or later)
- T1 CSU/DSU WAN interface card (full-height card)
- T1/E1 CSU/DSU WAN interface card (half-height card; for E1 support, you must install the half-height interface card)
- Single V.35/X.21 WAN interface card
- V.90 modem interface card (requires software Version 4.80 or later)

To install or replace a LAN, WAN, or serial interface card:

- 1 Shut down the Contivity 600 using the Web GUI or the command line interface and then unplug it as described in [“Shutting down the system to add or replace hardware” on page 22](#).



Danger: Turn off the Contivity 600 and unplug it before you attempt to install an option card.


- 2 Remove the chassis from the steel enclosure (see [“Opening the Contivity 600” on page 22](#)).
- 3 Attach an antistatic wrist strap.



Caution: Electrostatic discharge can damage Contivity 600 components.

- 4 Remove the blank PCI bracket by inserting a Phillips screwdriver into the slot at the right of the blank PCI bracket and rotating the screw counterclockwise (Figure 4).

Figure 4 Removing the blank bracket from the option card slot

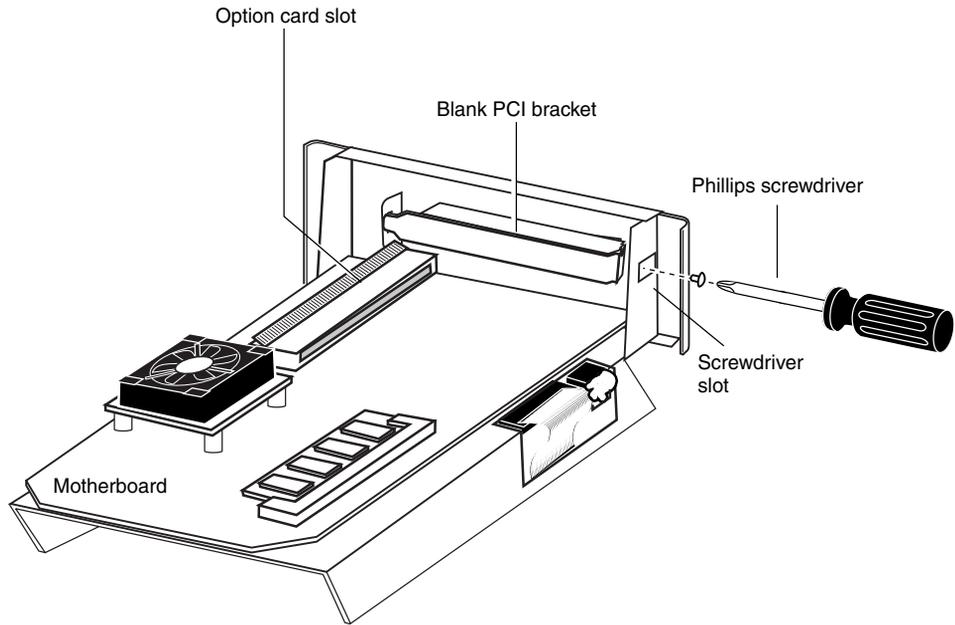


CS60010A

- 5 Slide the option card into the option card slot (Figure 5).



Note: Be careful not to bend the copper fingers in the slot.

Figure 5 Inserting the option card

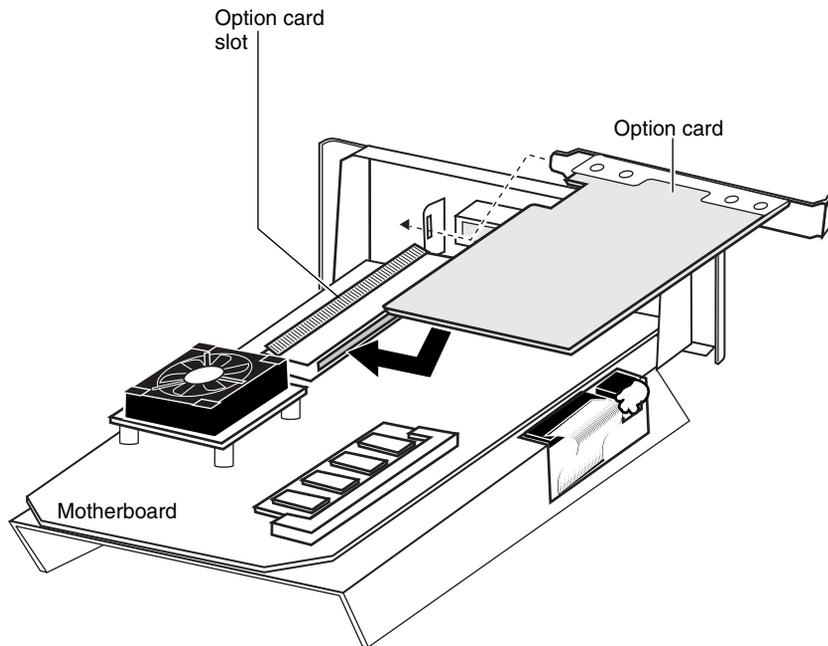


CS60006A

Make sure that the option card is seated firmly and evenly in the card slot and that the left tabbed end of the card is seated in its slot. If the card is not seated properly, it will not work.

- 6 Replace the screw at the right end of the PCI bracket ([Figure 6](#)).


Figure 6 Securing the option card in the slot

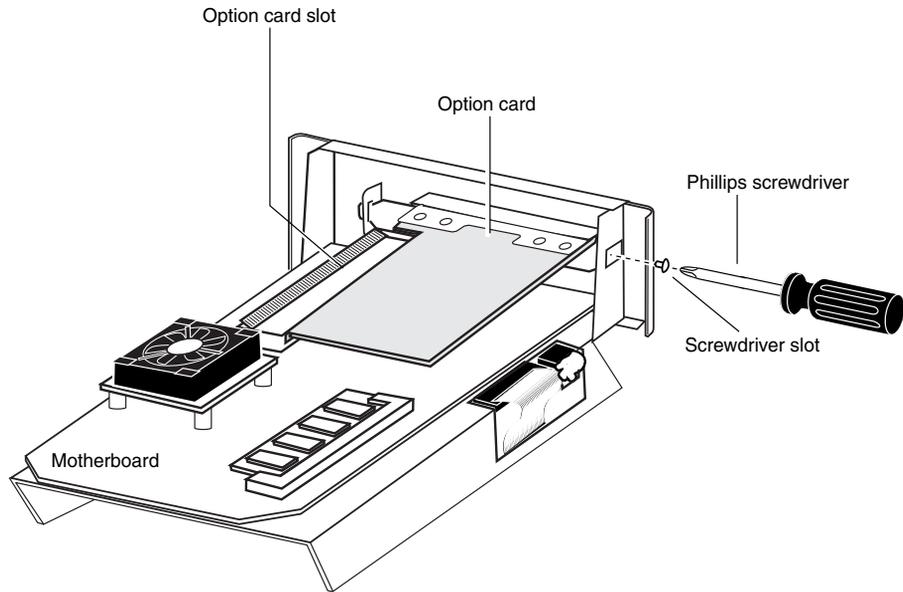

CS60007A

7 Slide the chassis into the steel enclosure (Figure 7).

Figure 7 Replacing the chassis in the steel enclosure

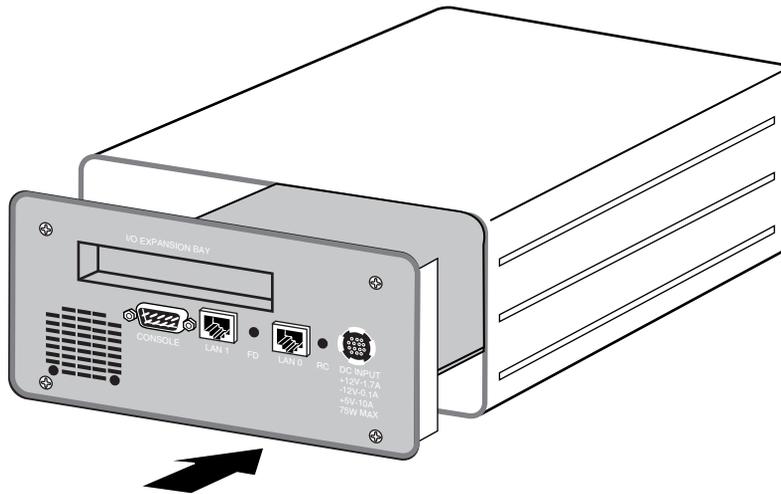

CS60009A

- 8 Replace the 4 Phillips screws that secure the bottom panel to the chassis (see [Figure 1 on page 23](#)).
- 9 Connect the cables to the system ports and to the option card port.
- 10 Plug the cable attached to the external power supply into the receptacle labeled “DC Input” on the rear of the Contivity 600.
- 11 If necessary, plug the female end of the power cord into the external power supply pack.
- 12 Plug the other end of the power cord into a surge protector, then plug the surge protector (or the power cord) into the power outlet.

The Contivity 600 should begin to boot.



Note: The Contivity 600 has no power switch. Connecting the Contivity 600 to a power supply turns the gateway on.

Replacing a DIMM

The Contivity 600 has one slot for a dual inline memory module (DIMM). If you have a Contivity 600 with a 64 MB DIMM, you can upgrade system memory by replacing the installed DIMM with a 128 MB DIMM.



Note: Newer Contivity 600 gateways ship with 128 MB of memory installed. If you purchased your Contivity 600 after January 2002, your gateway most likely has 128 MB of memory.

To replace the DIMM in the Contivity 600:

- 1 Shut down the Contivity 600 using the Web GUI or the command line interface and then unplug it as described in [“Shutting down the system to add or replace hardware” on page 22](#).



Danger: Turn off the Contivity 600 and unplug it before you attempt to replace the DIMM.

- 2 Remove the chassis from the steel enclosure (see [“Opening the Contivity 600” on page 22](#)).
- 3 Attach an antistatic wrist strap.




Caution: Electrostatic discharge can damage Contivity 600 components.

- 4 Locate the DIMM slot on the system board (see [Figure 3 on page 25](#)).
- 5 Pull the locking levers back to release the DIMM. It will snap up from the circuit board.
- 6 Pull the DIMM out of the slot.
- 7 Insert the new DIMM into the slot at a 45 degree angle ([Figure 8](#)).

Use the alignment keys on the DIMM to properly position the DIMM in the connector.

Figure 8 Installing a DIMM

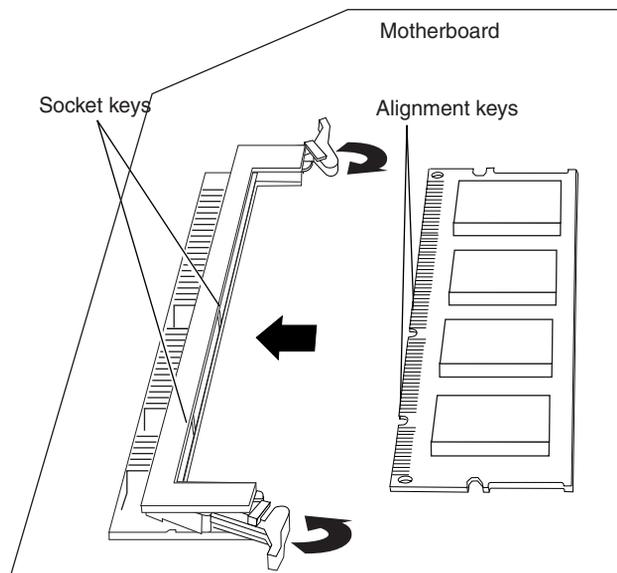

CS60008A

- 8 Gently press down on the DIMM until it is locked into position by the locking levers.
- 9 Slide the chassis into the steel enclosure (see [Figure 7 on page 29](#)).

- 10 Replace the 4 Phillips screws that secure the bottom panel to the chassis (see [Figure 1 on page 23](#)).
- 11 Connect the cables to the system ports and to the option card port.
- 12 Plug the cable attached to the external power supply into the receptacle labeled “DC Input” on the rear of the Contivity 600.
- 13 If necessary, plug the female end of the power cord into the external power supply pack.
- 14 Plug the other end of the power cord into a surge protector, then plug the surge protector (or the power cord) into the power outlet.

The Contivity 600 should begin to boot.



Note: The Contivity 600 has no power switch. Connecting the Contivity 600 to a power supply turns the gateway on.

Chapter 2

Contivity 1100 option installation

The Contivity 1100 has two expansion slots for option cards. This chapter provides instructions on how to install and replace LAN, WAN, and serial option cards in the Contivity 1100.

[Table 1](#) lists the option cards that you can install in the Contivity 1100.

Table 1 Supported option cards for the Contivity 1100

Option card	Maximum number ¹
10/100 Ethernet LAN interface	2
56/64K CSU/DSU WAN interface ²	2
ADSL WAN interface ³	2
ISDN BRI S/T or U interface ⁴	1
T1/E1 CSU/DSU WAN interface (half-height)	2
T1 CSU/DSU WAN interface (full-height)	1
Single V.35/X.21 WAN interface	1
V.90 modem interface ⁴	1

1 When only one card of a type is supported, you must install that card in the larger slot, that is, slot 2.

2 The Contivity 1100 must be running Version 5.0 or later.

3 The Contivity 1100 must be running Version 4.90 or later.

4 The Contivity 1100 must be running Version 4.80 or later.

To install a new LAN, WAN, or serial option card:

- 1 Use the Web GUI or the command line interface to shut down the gateway.
 - Web GUI: Choose Admin > Shutdown. Select the option to power off the gateway after shutdown.
 - Command line interface: Use the **reload** command to shut down the system. For example, enter **reload power-off disable-logins "Upgrade hardware"** (for the complete syntax of the **reload** command, see the *Reference for the Contivity Secure IP Services Gateway Command Line Interface*).
- 2 Wait for the system to shut down.
- 3 Turn off the Contivity 1100 power.

The power switch and power outlet are located on the rear of the Contivity 1100.

- 4 Disconnect the power cord from the power outlet and then disconnect the cord from the Contivity 1100.



Danger: Make sure to turn off the Contivity 1100 and unplug it before you attempt to remove or install an option card.


- 5 Remove the cables attached to the ports of the Contivity 1100.
- 6 If there are option cards currently installed, unscrew the 2 screws on each bracket.



Caution: Unscrew the option card brackets before you remove the cover from the Contivity 1100 or you will damage the option cards.

- 7 Remove the 4 screws located on the sides of the Contivity 1100.
- 8 Slide the chassis cover away from the base.

The Contivity 1100 system board is now exposed. [Figure 9](#) shows the location of the option card slots on the system board.
- 9 Locate the slot where you plan to install the new or replacement option card (see [Table 1 on page 33](#)).

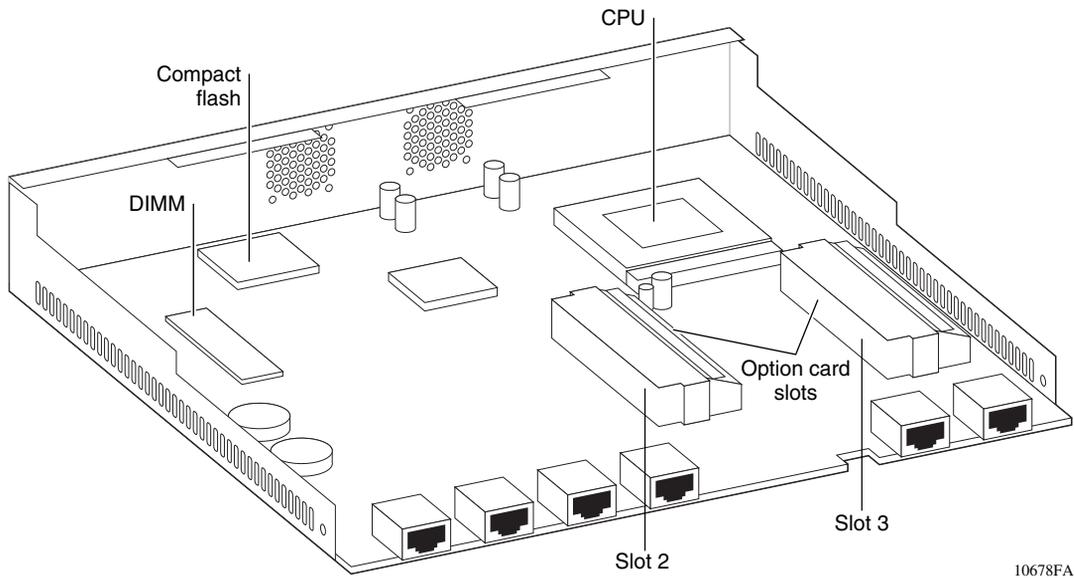Figure 9 Contivity 1100 system board

Warning: Beware of danger if the battery is incorrectly replaced. Replace with the *same* or an *equivalent battery* only, as recommended by the manufacturer's instructions.



Danger: In spite of the previous warning, which is mandated for regulatory approval, *you should not change the battery*. If you suspect a dead battery, contact Nortel Networks Customer Support.

- 10 Attach an antistatic wrist strap (not included with the Contivity 1100 shipment).



Caution: Electrostatic discharge can damage Contivity 1100 components.

- 11 Remove the blank card bracket (or the option card that you are replacing) from the slot.



Caution: If you need to remove an ADSL option card from slot 3 (see [Figure 9 on page 35](#)), lift the free end of the card so that the card is at a slight angle, then carefully pull it up and out of the slot so that the card clears the connector of the adjacent slot 2. If you damage components on the underside of the ADSL interface card, the card will not work.

- 12 Install the new option card.



Caution: To prevent stress damage to components on the underside of the ADSL option card when you install that card in slot 3 (see [Figure 9 on page 35](#)), hold the card at a slight angle and insert it into the connector so that the card clears the connector of the adjacent slot 2. If you damage components on the underside of the ADSL interface card, the card will not work.

Make sure to press the card all the way into the PCI connector on the motherboard.

- 13 Carefully slide the chassis cover onto the base and secure it with the 4 screws.
- 14 Attach the bracket of the new option card to the front panel with 2 screws.
- 15 Connect the cables to the system ports and to the option card ports.
- 16 Plug the power cord into the AC power outlet.
- 17 Plug the external power supply into the port labeled “DC Input” on the back of the Contivity 1100.
- 18 Press the power switch to the “on” position and wait for the gateway to boot.



Caution: The boot process can take as long as 3 minutes. Do not turn the power off and on again; recycling the power quickly can cause problems. Always wait at least 5 seconds after you turn off the power before you turn it on again.

Chapter 3

Contivity 1700 and 1600 option installation

This chapter provides instructions on how to install and replace the following field replaceable units (FRUs) in the Contivity 1700 and the Contivity 1600:

- LAN, WAN, and serial interface cards
- Hardware Accelerator card (Contivity 1700 only)
- Dual inline memory modules (DIMMs)

This chapter contains the following topics:

Topic	Page
Shutting down the system to add or replace hardware	38
Removing the front bezel and top cover	39
Attaching the antistatic wrist strap	42
Installing and replacing option cards	43
Installing and replacing DIMMs	47



Note: The Contivity 1700 and the Contivity 1600 look very similar. The differences in these gateways are small enough so that a figure of one gateway—for example, the Contivity 1700—can represent the Contivity 1600 for the purposes of this chapter.

Shutting down the system to add or replace hardware

To install or replace an option card or a DIMM, you must first shut down the Contivity 1700 or Contivity 1600 and unplug it.



Caution: Shut down the gateway as described in this section before you attempt to add or replace an option card or DIMM.

To shut down the Contivity 1600 or 1700:

- 1 Use the Web GUI or the command line interface to shut down the gateway.
 - Web GUI: Choose Admin > Shutdown. Select the option to power off the gateway after shutdown.
 - Command line interface: Use the **reload** command to shut down the system. For example, enter **reload power-off disable-logins "Upgrade hardware"**

For the complete syntax of the **reload** command, see the *Reference for the Contivity Secure IP Services Gateway Command Line Interface*.

- 2 Wait for the system to shut down.
- 3 Disconnect the power cord from the power outlet and then disconnect the cord from the Contivity 1700 or 1600.

The power receptacle is located on the rear of the gateway.



Danger: Make sure to turn off the gateway and unplug the power cord before you attempt to remove or install an option card or DIMM.

Removing the front bezel and top cover

To install option cards or DIMMs, you must remove the front bezel and the top cover from the gateway.

To remove the front bezel:


- 1 Shut down the Contivity 1600 or 1700 using the Web GUI or the command line interface and then unplug it as described in [“Shutting down the system to add or replace hardware”](#) on page 38.



Danger: Make sure to turn off the gateway and unplug it before you attempt to install an option card or DIMM.

- 2 Using a Phillips screwdriver, turn each of the 2 screws on the front bezel a quarter turn counterclockwise ([Figure 10](#)).

Figure 10 Removing the front bezel

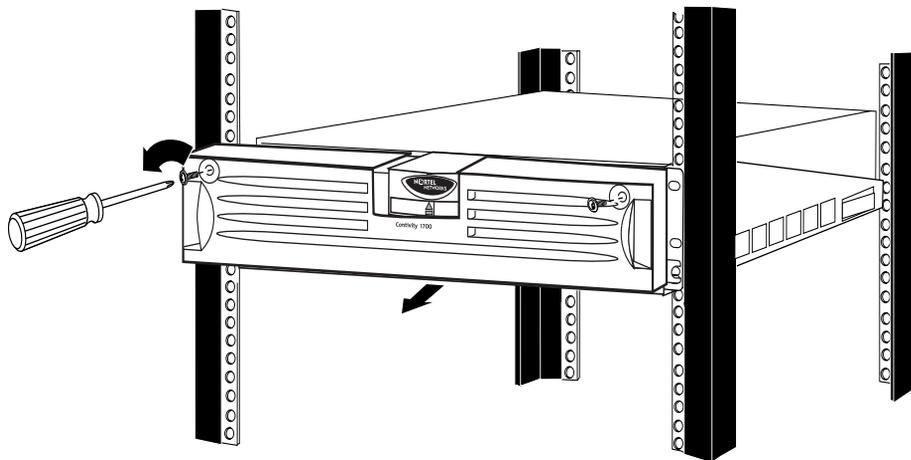

CS160014A

- 3 Grip the two handles and firmly pull the bezel toward you to unsnap it from the chassis.




Caution: Do not use the piece with the Nortel Networks logo and the LEDs as a handle.

The first few times that you remove the front bezel, it may be somewhat difficult to remove because the ball studs and socket clips are new.

To remove the top cover:

- 1 If the gateway is installed in an equipment rack, remove it from the rack.
 - a At the front of the chassis, remove the 2 panhead screws that secure the bottom of the chassis to the equipment rack.
 - b Remove the Contivity 1600 or 1700 from the rack-mount shelf and set it on a sturdy surface.
- 2 Using a Phillips screwdriver, remove the 4 screws that secure the cover to the chassis (Figure 11).

Figure 11 Removing the top cover

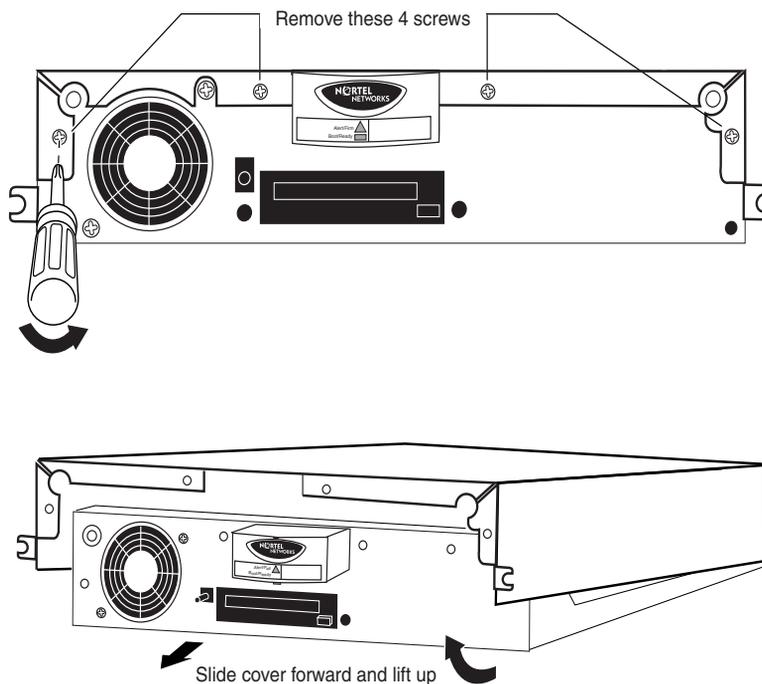


CS160003A

- 3 Slide the top cover forward approximately 1/4 inch.

- 4 Lift the lid 2 or 3 inches and pull it off the chassis.

The system board is now exposed. [Figure 12](#) shows the location of the option card slots and the DIMMs on the system board. ([Figure 12](#) shows the Contivity 1700, but the Contivity 1600 is very similar.)

Figure 12 Location of option card slots and DIMMs on the system board

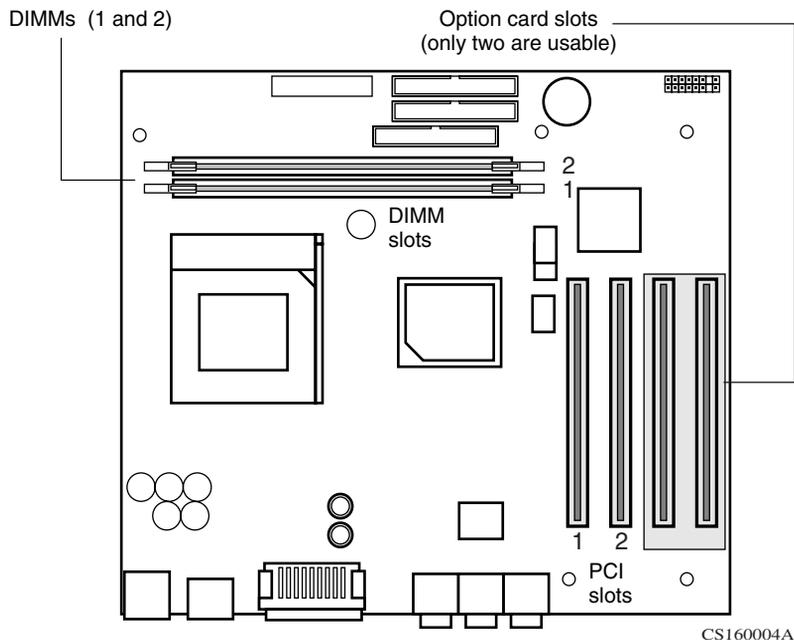

Warning: Beware of danger if battery is incorrectly replaced. Replace with the *same* or an *equivalent battery* only, as recommended by the manufacturer's instructions.



Danger: In spite of the above warning, which is mandated for regulatory approval, *you should not change the battery*. If you suspect a dead battery, contact Nortel Networks Customer Support.

Attaching the antistatic wrist strap

Nortel Networks ships the Contivity 1700 with an antistatic wrist strap. The antistatic wrist strap directs the discharge of static electricity from your body to the chassis of the gateway to avoid damage to sensitive electronic components.

You must wear an antistatic wrist strap on your arm whenever you remove, install, or handle option cards and DIMMs.




Caution: Electrostatic discharge can damage hardware. Follow the procedure in this section to protect your equipment from damage.

To attach the antistatic wrist strap:

- 1 Locate the antistatic wrist strap and verify that the cable is attached to the wrist strap.
- 2 Place the strap around your wrist and adjust it to ensure that the metal buckle inside the strap touches your skin.
- 3 Insert the banana plug into the grounding jack at the rear of the chassis (Figure 13).

Figure 13 Location of the grounding jack for the antistatic wrist strap

Grounding jack

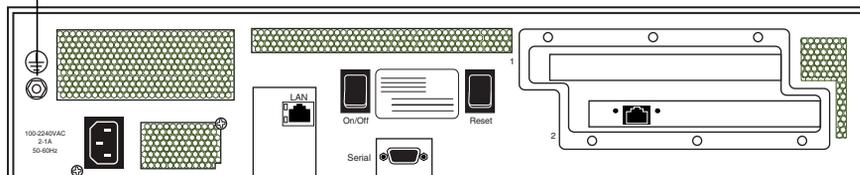

CS160002A

Installing and replacing option cards

The Contivity 1700 and the Contivity 1600 have two slots for option cards (see [Figure 12 on page 41](#)). This section provides instructions on adding new option cards to the gateway or, if necessary, replacing an existing card.

[Table 2](#) lists the option cards that you can install in the Contivity 1700.

Table 2 Supported option cards for the Contivity 1700

Option card	Maximum number	Restrictions
Hardware Accelerator	1	The CSA card is not supported.
10/100 Ethernet LAN interface	2	
56/64K CSU/DSU WAN interface ¹	2	
ADSL WAN interface ²	2	
ISDN BRI S/T or U interface ³	2	
T1 CSU/DSU WAN interface (full-height)	2	For E1 support, you must install the half-height interface card.
T1/E1 CSU/DSU WAN interface (half-height)	2	
Quad T1/E1 CSU/DSU WAN interface ¹	1	
V.90 modem interface ³	2	
Single V.35/X.21 WAN interface	2	
Dual V.35 WAN interface ⁴	1	Install in slot 1 only.
HSSI WAN interface ⁵	1	Install in slot 1 only.

- 1 The Contivity 1700 must be running Version 5.0 or later.
- 2 The Contivity 1700 must be running Version 4.90 or later.
- 3 The Contivity 1700 must be running Version 4.80 or later.
- 4 This option card is no longer available for purchase.
- 5 The gateway must be running Version 4.76 or later, or the hardware revision must be at least 03.

[Table 3](#) lists the option cards that you can install in the Contivity 1600.

Table 3 Supported option cards for the Contivity 1600

Option card	Maximum number	Restrictions
10/100 Ethernet LAN interface	2	
56/64K CSU/DSU WAN interface ¹	2	
T1 CSU/DSU WAN interface (full-height)	2	For E1 support, you must install the half-height interface card.
T1/E1 CSU/DSU WAN interface (half-height)	2	
Single V.35/X.21 WAN interface	2	
Dual V.35 WAN interface ²	1	Install in slot 1 only.

1 The Contivity 1600 must be running Version 5.0 or later.

2 This option card is no longer available for purchase.

To install or replace an interface card or a hardware encryption accelerator card:

- 1 Shut down the Contivity 1600 or 1700 using the Web GUI or the command line interface and then unplug it as described in [“Shutting down the system to add or replace hardware”](#) on page 38.



Danger: Turn off the gateway and unplug it before you attempt to install an option card.


- 2 Remove the front bezel from the chassis, then remove the chassis from the equipment rack (see [“Removing the front bezel and top cover”](#) on page 39).
- 3 Remove the top cover from the chassis (see [“Removing the front bezel and top cover”](#) on page 39).
- 4 Attach the antistatic wrist strap that was shipped with the gateway (see [“Attaching the antistatic wrist strap”](#) on page 42).
- 5 Locate the slot where you plan to install the new or replacement option card.



Note: If no option cards are installed in the Contivity 1700 or 1600, install the new card in the lower slot.

- 6 Remove the filler panel screw and pull out the filler panel (or the option card that you are replacing) from the slot (Figure 14).

Figure 14 Removing an option card or a filler panel

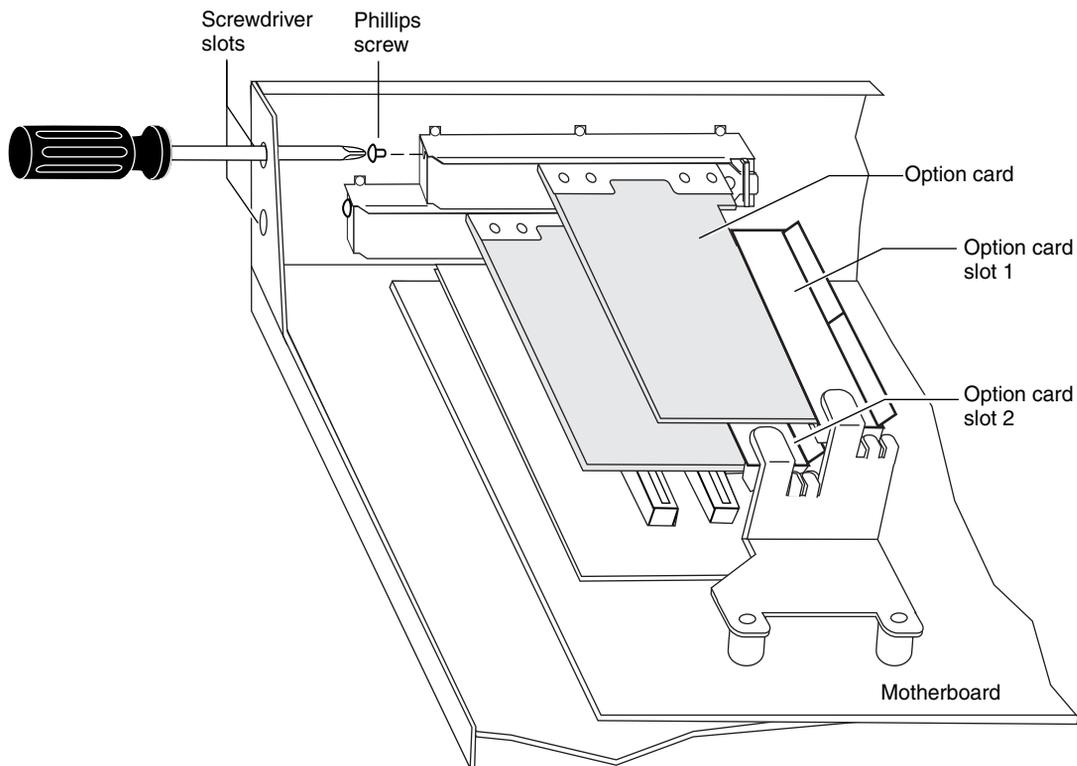


CS160020A

- 7 Slide the option card into the intended slot (Figure 15).

Make sure that the card is seated firmly in the slot. If the card is not seated properly, it will not work.

Figure 15 Installing an option card

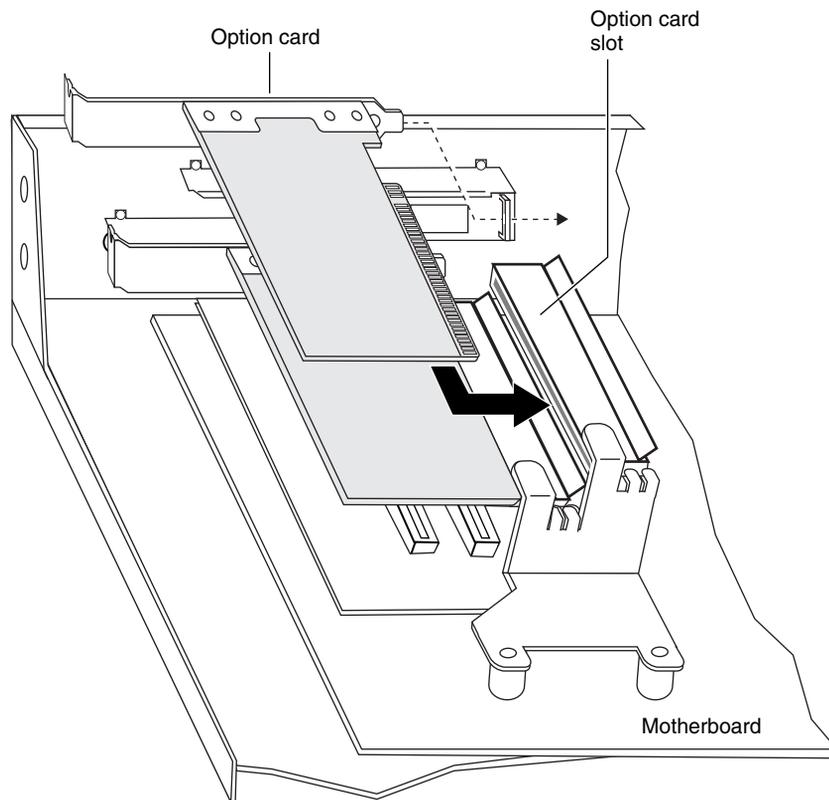


CS160019A

- 8** Replace the screw that secures the card to the slot (see [Figure 14 on page 45](#)).
- 9** Replace the top cover on the chassis (see [Figure 11 on page 40](#)).
 - a** Hold the cover at an angle and slide it onto the chassis.
 - b** Using a screwdriver, insert and tighten the 4 screws that secure the cover to the chassis.
- 10** If the gateway is installed in an equipment rack, mount it in the rack.
 - a** Set the Contivity 1700 or 1600 on the rack-mount shelf in the rack.
 - b** Insert one of the panhead screws through the bottom hole on each side of the shelf into the hole in the rack and tighten the screws.

- 11 Replace the front bezel (Figure 16).
 - a Hold the bezel by its two handles and push it onto the chassis.
 - b Using a screwdriver, tighten the 2 screws to secure the bezel to the chassis.

Figure 16 Replacing the front bezel

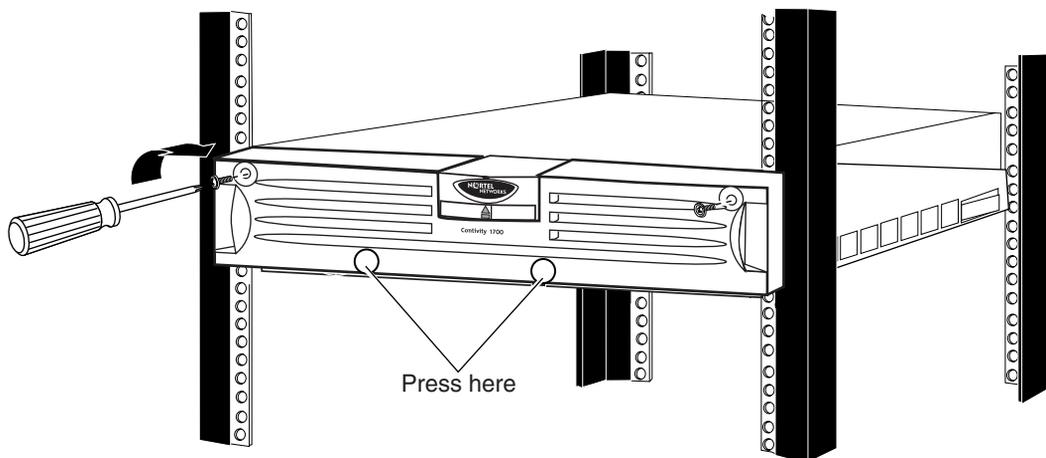

CS160015A

Installing and replacing DIMMs

The Contivity 1700 and 1600 have two slots for dual inline memory modules (DIMMs) (see [Figure 12 on page 41](#)). Unless you ordered additional memory, the gateway is shipped with one 128 MB DIMM installed. You can upgrade memory in the gateway by installing a second 128 MB DIMM.

This section provides instructions on adding a second DIMM to the gateway or, if necessary, replacing an existing DIMM.



Caution: Make sure to install the same type of DIMM that is already installed in your gateway. For example, do not install a 256 MB DIMM in the Contivity 1700 or 1600.

To install or replace a DIMM:


- 1 Shut down the Contivity 1700 or 1600 using the Web GUI or the command line interface and then unplug it as described in [“Shutting down the system to add or replace hardware” on page 38](#).



Danger: Turn off the gateway and unplug it before you attempt to install a DIMM.

- 2 Remove the front bezel from the chassis, then remove the chassis from the equipment rack (see [“Removing the front bezel and top cover” on page 39](#)).
- 3 Remove the top cover from the chassis (see [“Removing the front bezel and top cover” on page 39](#)).
- 4 Attach the antistatic wrist strap that was shipped with the Contivity 1700 (see [“Attaching the antistatic wrist strap” on page 42](#)).
- 5 If you are replacing a DIMM, remove the installed DIMM as follows:
 - a Press down the locking lever on either side of the DIMM ([Figure 17](#)).
 - b Pull the DIMM up to remove it from the slot.
- 6 Press down the locking lever on either side of the slot where you plan to install the DIMM ([Figure 17](#)).
- 7 Place the new or replacement DIMM in the slot ([Figure 17](#)).

Use the alignment keys to properly position the DIMM in the slot.
- 8 Press the DIMM firmly into the socket.
- 9 Pull up the locking lever on either side of the DIMM to snap it into position.

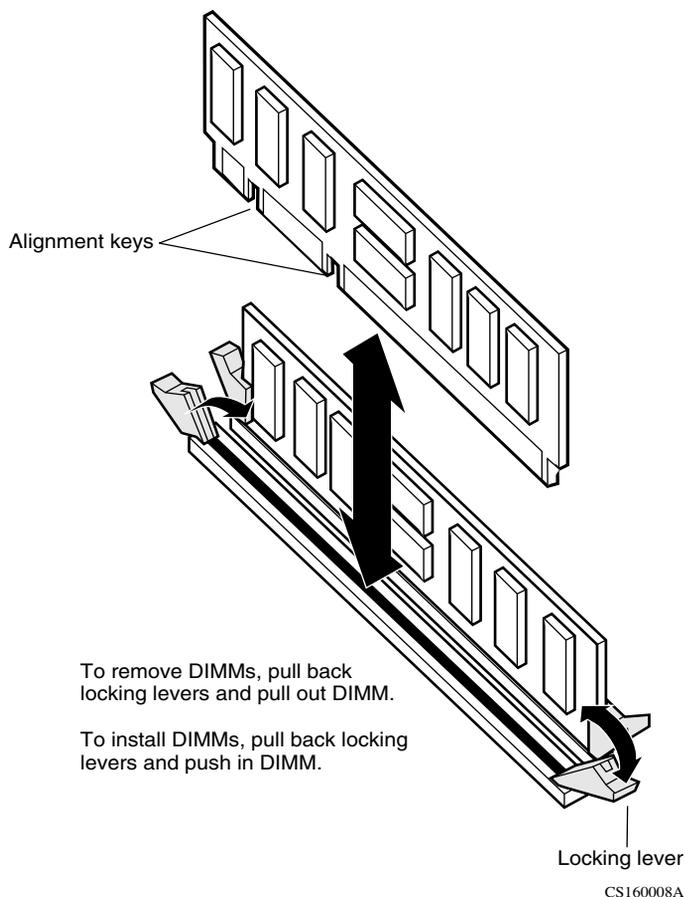Figure 17 Installing and removing a DIMM in a Contivity 1700 or 1600

- 10** Replace the top cover on the chassis (see [Figure 11 on page 40](#)).
 - a** Hold the cover at an angle and slide it onto the chassis.
 - b** Using a screwdriver, insert and tighten the 4 screws to secure the cover to the chassis.
- 11** If the gateway is installed in an equipment rack, mount it in the rack.
 - a** Set the Contivity 1700 or 1600 on the rack-mount shelf in the rack.
 - b** Insert one of the panhead screws through the bottom hole on each side of the shelf into the hole in the rack and tighten the screws.

- 12** Replace the front bezel (see [Figure 16 on page 47](#)).
 - a** Hold the bezel by its two handles and push it onto the chassis.
 - b** Using the screwdriver, tighten the 2 screws to secure the bezel to the chassis.

Chapter 4

Contivity 1740 option installation

This chapter provides instructions on how to install and replace the following field replaceable units (FRUs) in the Contivity 1740:

- LAN, WAN, and serial interface cards
- SSL VPN Module 1000
- Hardware accelerator card
- Dual inline memory modules (DIMMs)

This chapter contains the following topics:

Topic	Page
Shutting down the system to add or replace hardware	52
Removing the front bezel and top cover	53
Attaching the antistatic wrist strap	56
Installing and replacing option cards	57
Installing and replacing DIMMs	61

Shutting down the system to add or replace hardware

To install or replace an option card or a DIMM, you must first shut down the Contivity 1740 and unplug it.



Caution: Shut down the Contivity 1740 as described in this section before you attempt to add or replace an option card or DIMM.

To shut down the Contivity 1740:

- 1 Use the Web GUI or the command line interface to shut down the gateway.
 - Web GUI: Choose Admin > Shutdown. Select the option to power off the gateway after shutdown.
 - Command line interface: Use the **reload** command to shut down the system. For example, enter **reload power-off disable-logins "Upgrade hardware"**

For the complete syntax of the **reload** command, see the *Reference for the Contivity Secure IP Services Gateway Command Line Interface*.

- 2 Wait for the system to shut down.
- 3 Disconnect the power cord from the power outlet and then disconnect the cord from the Contivity 1740.

The power receptacle is located on the rear of the Contivity 1740.



Danger: Make sure to turn off the Contivity 1740 and unplug the power cord before you attempt to remove or install an option card or DIMM.

Removing the front bezel and top cover

To install option cards or DIMMs, you must remove the front bezel and the top cover from the gateway. To remove the front bezel:


- 1 Shut down the Contivity 1740 using the Web GUI or the command line interface and then unplug it as described in [“Shutting down the system to add or replace hardware” on page 52.](#)



Danger: Make sure to turn off the Contivity 1740 and unplug it before you attempt to install an option card or DIMM.

- 2 Using a Phillips screwdriver, turn each of the 2 screws on the front bezel a quarter turn counterclockwise ([Figure 18](#)).

Figure 18 Removing the front bezel

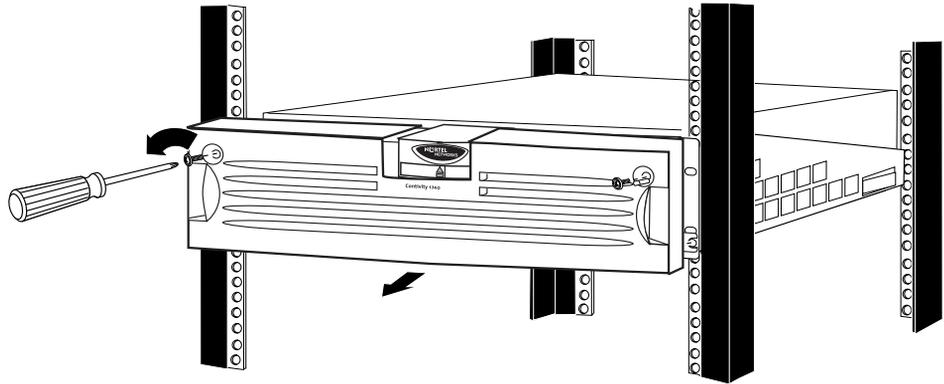

CS260015D

- 3 Grip the two handles and firmly pull the bezel toward you to unsnap it from the chassis.




Caution: Do not use the piece with the Nortel Networks logo and the LEDs as a handle.

The first few times that you remove the front bezel, it may be somewhat difficult to remove because the ball studs and socket clips are new.

To remove the top cover:

- 1 If the Contivity 1740 is installed in an equipment rack, remove it from the rack.
 - a At the front of the chassis, remove the 2 panhead screws that secure the bottom of the chassis to the equipment rack.
 - b Remove the Contivity 1740 from the rack-mount shelf and set it on a sturdy surface.
- 2 Using a Phillips screwdriver, remove the 4 screws that secure the cover to the chassis (Figure 19).

Figure 19 Removing the top cover

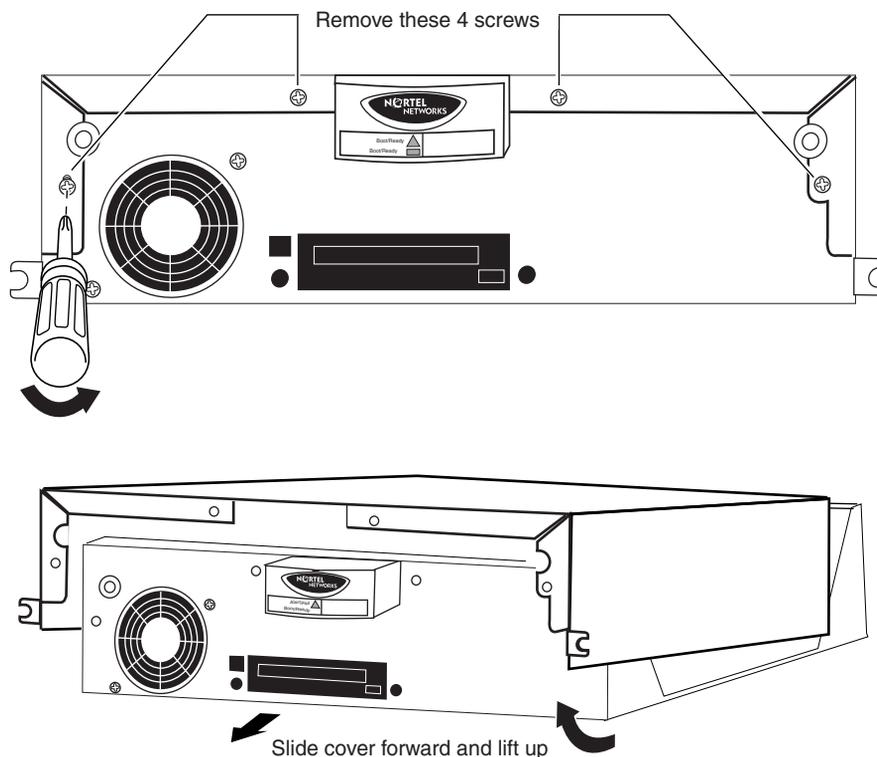


CS260006A

- 3 Slide the top cover forward approximately 1/4 inch.

- 4 Lift the lid 2 or 3 inches and pull it off the chassis.

The Contivity 1740 system board is now exposed. [Figure 20](#) shows the location of the option card and DIMM slots on the system board.

Figure 20 Location of option card and DIMM slots on the system board

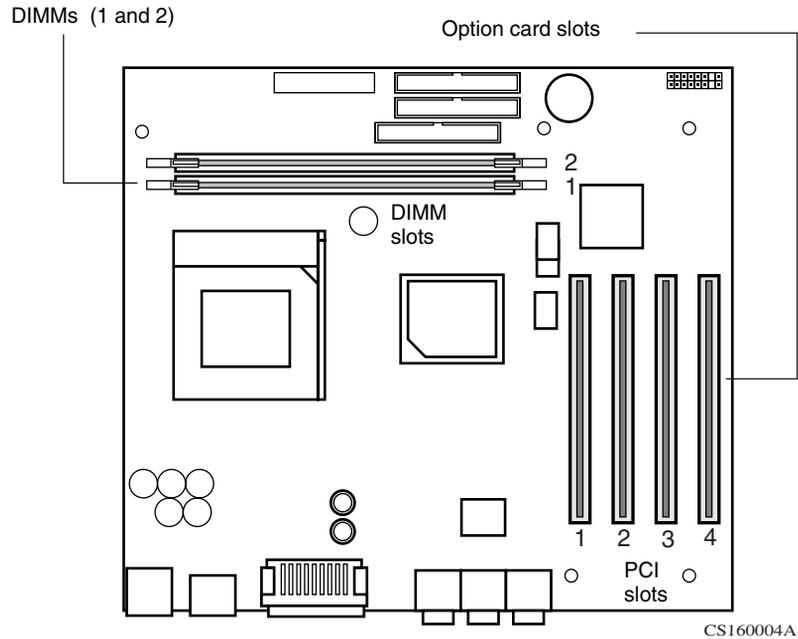

Warning: Beware of danger if battery is incorrectly replaced. Replace with the *same* or an *equivalent battery* only, as recommended by the manufacturer's instructions.



Danger: In spite of the above warning, which is mandated for regulatory approval, *you should not change the battery*. If you suspect a dead battery, contact Nortel Networks Customer Support.

Attaching the antistatic wrist strap

Nortel Networks ships the Contivity 1740 with an antistatic wrist strap. The antistatic wrist strap directs the discharge of static electricity from your body to the chassis of the gateway to avoid damage to sensitive electronic components.

You must wear an antistatic wrist strap on your arm whenever you remove, install, or handle option cards and DIMMs.




Caution: Electrostatic discharge can damage hardware. Follow the procedure in this section to protect your equipment from damage.

To attach the antistatic wrist strap:

- 1 Locate the antistatic wrist strap and verify that the cable is attached to the wrist strap.
- 2 Place the strap around your wrist and adjust it to ensure that the metal buckle inside the strap touches your skin.
- 3 Insert the banana plug into the grounding jack at the rear of the chassis (Figure 21).

Figure 21 Location of the grounding jack for the antistatic wrist strap

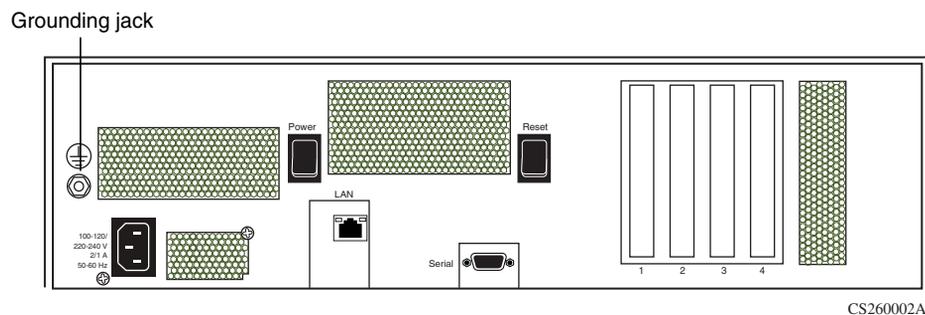

Installing and replacing option cards

The Contivity 1740 has four slots for option cards (see [Figure 20 on page 55](#)). This section provides instructions on adding new option cards to the Contivity 1740 or, if necessary, replacing an existing card.

[Table 4](#) lists the option cards that you can install in the Contivity 1740.

Table 4 Supported option cards for the Contivity 1740

Option card	Maximum number	Restrictions
SSL VPN Module 1000 ¹	1	Install this card in slot 1 only.
Contivity Security Accelerator (CSA) ²	1	Install one CSA or one Hardware Accelerator card. Do not install a Hardware Accelerator card in slot 4.
Hardware Accelerator		
10/100 Ethernet interface	4	
1000BASE-T interface (copper) ²	2	Install two 1000BASE-T cards, two 1000BASE-SX cards, or one card of each type. (But see “Installing the SSL VPN Module 1000 with other option cards” on page 58.)
1000BASE-SX interface (fiber) ²		
56/64K CSU/DSU WAN interface ¹	4	
ADSL WAN interface ²	4	
ISDN BRI S/T or U interface ³	4	
T1 CSU/DSU WAN interface (full-height)	4	For E1 support, you must install the half-height interface card.
T1/E1 CSU/DSU WAN interface (half-height)	4	
Quad T1/E1 CSU/DSU WAN interface ¹	3	
V.90 modem interface ³	4	If an SSL VPN Module 1000 is installed in slot 1, do not install the V.90 modem interface card in slot 2.
Single V.35/X.21 WAN interface	4	
HSSI WAN interface	2	Do not install in slot 4; install in slot 3 or 1 if possible. If an SSL VPN Module 1000 is installed, you can install only one HSSI WAN interface card.
Dual V.35 WAN interface ⁴	4	

1 The Contivity 1740 must be running Version 5.0 or later.

2 The Contivity 1740 must be running Version 4.90 or later.

3 The Contivity 1740 must be running Version 4.80 or later.

4 This option card is no longer available for purchase.

Installing the SSL VPN Module 1000 with other option cards

If an SSL VPN Module 1000 is installed in the Contivity 1740, the following restrictions on other option cards apply:

- You cannot install a V.90 modem interface card in slot 2.
- Only one HSSI WAN interface card can be installed. Do not install this card in slot 4; if possible, install it in slot 3.
- You can install two 1000BASE-T/1000BASE-SX interface cards only if none of these option cards is installed:
 - Contivity Security Accelerator
 - Hardware Accelerator
 - HSSI WAN interface

If a CSA, Hardware Accelerator, or HSSI WAN interface card is installed, you can install only one 1000BASE-T or 1000BASE-SX interface card.

Installing and replacing an option card

To install or replace an option card:

- 1 Shut down the Contivity 1740 using the Web GUI or the command line interface and then unplug it as described in [“Shutting down the system to add or replace hardware” on page 52](#).



Danger: Turn off the Contivity 1740 and unplug it before you attempt to install an option card.

- 2 Remove the front bezel from the chassis, then remove the chassis from the equipment rack (see [“Removing the front bezel and top cover” on page 53](#)).
- 3 Remove the top cover from the chassis (see [“Removing the front bezel and top cover” on page 53](#)).
- 4 Attach the antistatic wrist strap that was shipped with the Contivity 1740 (see [“Attaching the antistatic wrist strap” on page 56](#)).


- 5 Locate the slot where you plan to install the new or replacement option card.



Caution: Do not try to install a HSSI WAN interface card or a Hardware Accelerator card in slot 4.

- 6 Remove the filler panel screw and pull out the filler panel (or the option card that you are replacing) from the slot (Figure 22).


Figure 22 Installing and removing an option card

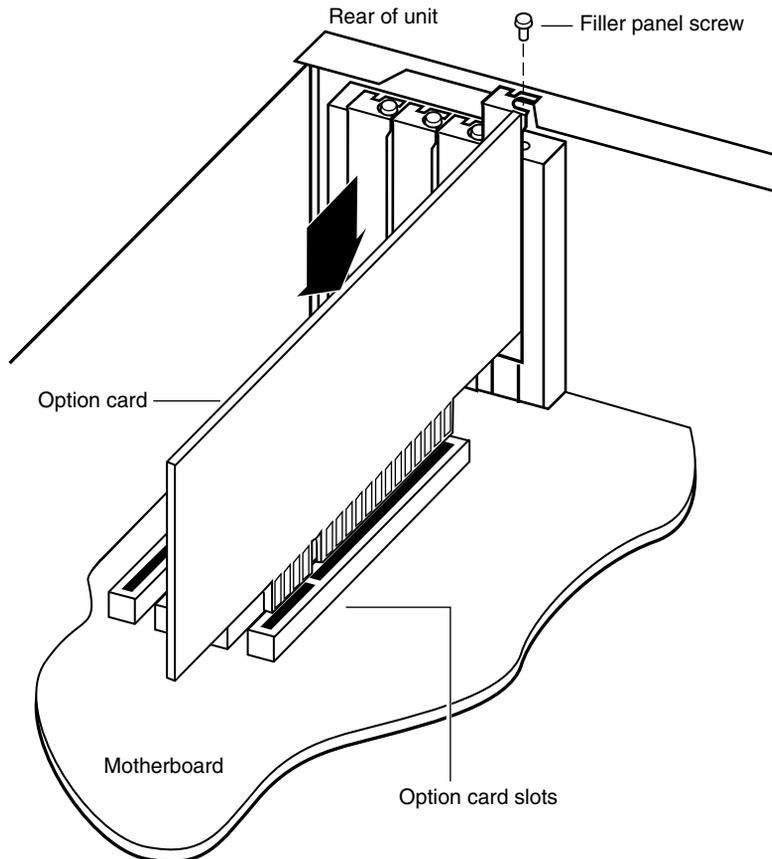

CS2600017A

- 7 Lower the new option card into the slot and gently press the connector into the slot.
Make sure that the card is seated firmly in the slot. If the card is not seated properly, it will not work.
- 8 Replace the screw that secures the card to the slot (Figure 22).
- 9 Replace the top cover on the chassis (see Figure 19 on page 54).
 - a Hold the cover at an angle and slide it onto the chassis.
 - b Using a screwdriver, insert and tighten the 4 screws that secure the cover to the chassis.
- 10 If the Contivity 1740 is installed in an equipment rack, mount it in the rack.
 - a Set the Contivity 1740 on the rack-mount shelf in the rack.
 - b Insert one of the panhead screws through the bottom hole on each side of the shelf into the hole in the rack and tighten the screws.
- 11 Replace the front bezel (Figure 23).
 - a Hold the bezel by its two handles and push it onto the chassis.
 - b Using a screwdriver, tighten the 2 screws to secure the bezel to the chassis.

Figure 23 Replacing the front bezel

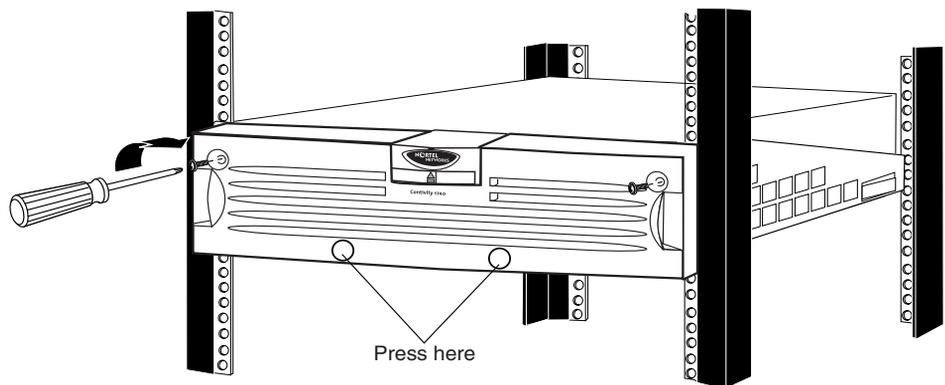

CS260005D

Installing and replacing DIMMs

The Contivity 1740 has two slots for dual inline memory modules (DIMMs) (see [Figure 20 on page 55](#)). Unless you ordered additional memory, the Contivity 1740 is shipped with one 128 MB DIMM installed. You can upgrade memory in the gateway by installing a second 128 MB DIMM.

This section provides instructions on adding a second DIMM to the Contivity 1740 or, if necessary, replacing an existing DIMM.



Caution: Make sure to install the same type of DIMM that is already installed in your gateway. For example, do not install a 256 MB DIMM in the Contivity 1740.

To install or replace a DIMM:

- 1 Shut down the Contivity 1740 using the Web GUI or the command line interface and then unplug it as described in [“Shutting down the system to add or replace hardware” on page 52](#).



Danger: Turn off the Contivity 1740 and unplug it before you attempt to install a DIMM.

- 2 Remove the front bezel from the chassis, then remove the chassis from the equipment rack (see [“Removing the front bezel and top cover” on page 53](#)).
- 3 Remove the top cover from the chassis (see [“Removing the front bezel and top cover” on page 53](#)).
- 4 Attach the antistatic wrist strap that was shipped with the Contivity 1740 (see [“Attaching the antistatic wrist strap” on page 56](#)).




Caution: Electrostatic discharge can damage Contivity 1740 components.

- 5 If you are replacing a DIMM, remove the installed DIMM as follows:
 - a Press down the locking lever on either side of the DIMM (Figure 24).
 - b Pull the DIMM up to remove it from the slot.
- 6 Press down the locking lever on either side of the slot where you plan to install the new DIMM (Figure 24).
- 7 Place the new or replacement DIMM in the slot (Figure 24).

Use the alignment keys to properly position the DIMM in the slot.
- 8 Press the DIMM firmly into the socket.
- 9 Pull up the locking lever on either side of the DIMM to snap it into position.

Figure 24 Installing and removing a DIMM

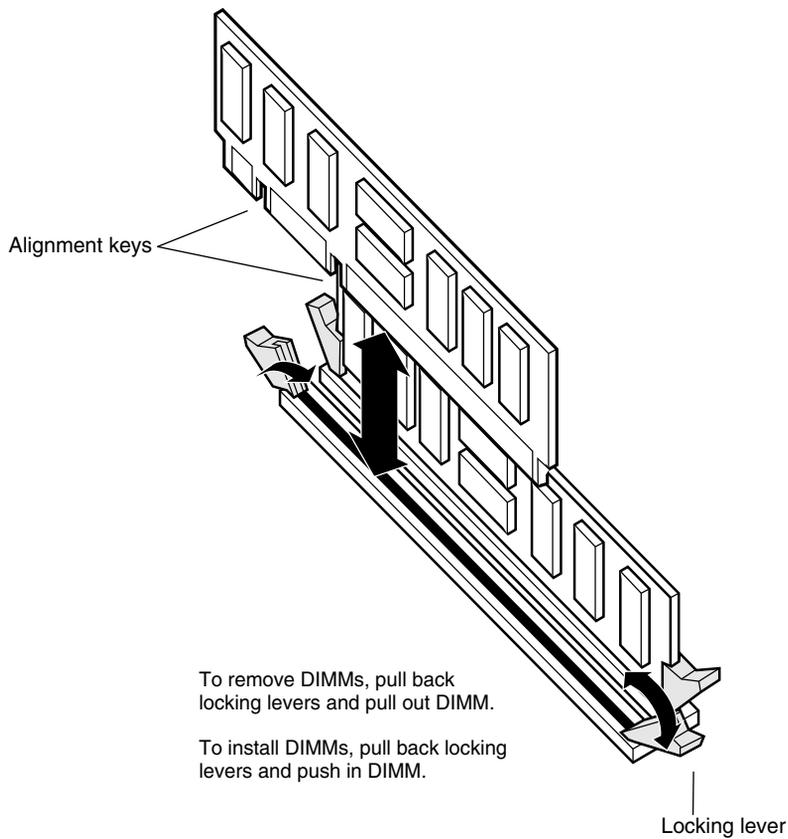

CS260019A

- 10** Replace the top cover on the chassis (see [Figure 19 on page 54](#)).
 - a** Hold the cover at an angle and slide it onto the chassis.
 - b** Using a screwdriver, insert and tighten the 4 screws to secure the cover to the chassis.
- 11** If the Contivity 1740 is installed in an equipment rack, mount it in the rack.
 - a** Set the Contivity 1740 on the rack-mount shelf in the rack.
 - b** Insert one of the panhead screws through the bottom hole on each side of the shelf into the hole in the rack and tighten the screws.
- 12** Replace the front bezel (see [Figure 23 on page 60](#)).
 - a** Hold the bezel by its two handles and push it onto the chassis.
 - b** Using the screwdriver, tighten the 2 screws to secure the bezel to the chassis.

Chapter 5

Contivity 2700 and 2600 option installation

This chapter provides instructions on how to install and replace the following field replaceable units (FRUs) in the Contivity 2700 and the Contivity 2600:

- LAN, WAN, and serial interface cards
- SSL VPN Module 1000 (Contivity 2700 only)
- Hardware accelerator cards
- Dual inline memory modules (DIMMs)

This chapter contains the following topics:

Topic	Page
Shutting down the system to add or replace hardware	66
Removing the front bezel and top cover	67
Attaching the antistatic wrist strap	70
Installing and replacing option cards	71
Installing and replacing DIMMs	76



Note: The Contivity 2700 and the Contivity 2600 look very similar. The differences in these gateways are small enough so that a figure of one gateway—for example, the Contivity 2700—can represent the Contivity 2600 for the purposes of this chapter.

Shutting down the system to add or replace hardware

To install or replace an option card or a DIMM, you must first shut down the Contivity 2700 or 2600 and unplug it.



Caution: Shut down the gateway as described in this section before you attempt to add or replace an option card or DIMM.

To shut down the Contivity 2600 or 2700:

- 1 Use the Web GUI or the command line interface to shut down the gateway.
 - Web GUI: Choose Admin > Shutdown. Select the option to power off the gateway after shutdown.
 - Command line interface: Use the **reload** command to shut down the system. For example, enter **reload power-off disable-logins "Upgrade hardware"**

For the complete syntax of the **reload** command, see the *Reference for the Contivity Secure IP Services Gateway Command Line Interface*.

- 2 Wait for the system to shut down.
- 3 Disconnect the power cord from the power outlet and then disconnect the cord from the gateway.

The power receptacle is located on the rear of the Contivity 2700 and 2600.



Danger: Make sure to turn off the gateway and unplug the power cord before you attempt to remove or install an option card or DIMM.

Removing the front bezel and top cover

To install option cards or DIMMs, you must remove the front bezel and the top cover from the gateway.

To remove the front bezel:


- 1 Shut down the Contivity 2700 or 2600 using the Web GUI or the command line interface and then unplug it as described in [“Shutting down the system to add or replace hardware”](#) on page 66.



Danger: Make sure to turn off the gateway and unplug it before you attempt to install an option card or DIMM.

- 2 Using a Phillips screwdriver, turn each of the 2 screws on the front bezel a quarter turn counterclockwise ([Figure 25](#)).

Figure 25 Removing the front bezel

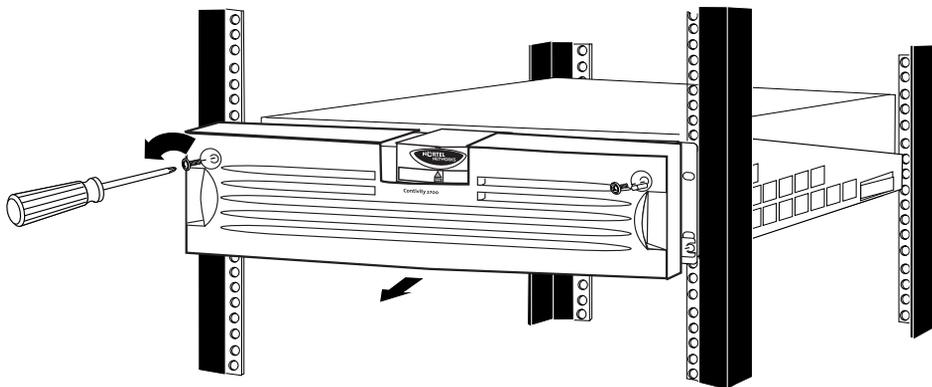

CS260015B

- 3 Grip the two handles and firmly pull the bezel toward you to unsnap it from the chassis.




Caution: Do not use the piece with the Nortel Networks logo and the LEDs as a handle.

The first few times that you remove the front bezel, it may be somewhat difficult to remove because the ball studs and socket clips are new.

To remove the top cover:

- 1 If the gateway is installed in an equipment rack, remove it from the rack.
 - a At the front of the chassis, remove the 2 panhead screws that secure the bottom of the chassis to the equipment rack.
 - b Remove the Contivity 2700 or 2600 from the rack-mount shelf and set it on a sturdy surface.
- 2 Using a Phillips screwdriver, remove the 4 screws that secure the cover to the chassis (Figure 26).

Figure 26 Removing the top cover

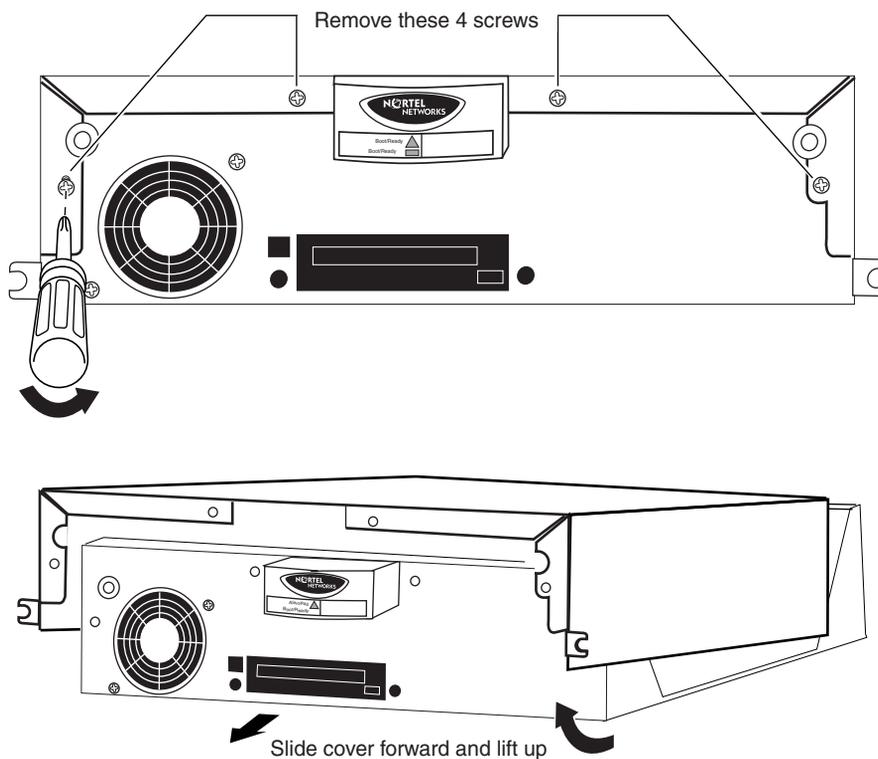


CS260006A

- 3 Slide the top cover forward approximately 1/4 inch.

- Lift the lid 2 or 3 inches and pull it off the chassis.

The system board is now exposed. [Figure 27](#) shows the location of the option card slots and the DIMMs on the system board. ([Figure 27](#) shows the Contivity 2600, but the Contivity 2700 is very similar.)

Figure 27 Location of option card slots and DIMMs on the system board

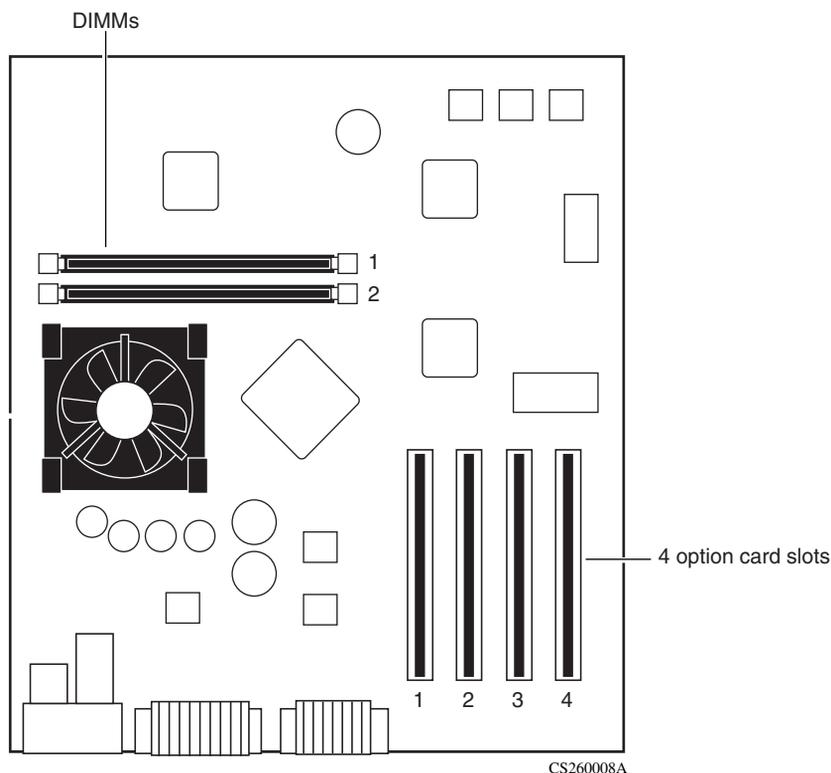

Warning: Beware of danger if battery is incorrectly replaced. Replace with the *same* or an *equivalent battery* only, as recommended by the manufacturer's instructions.



Danger: In spite of the above warning, which is mandated for regulatory approval, *you should not change the battery*. If you suspect a dead battery, contact Nortel Networks Customer Support.

Attaching the antistatic wrist strap

Nortel Networks ships the Contivity 2700 and 2600 with an antistatic wrist strap. The antistatic wrist strap directs the discharge of static electricity from your body to the chassis of the gateway to avoid damage to sensitive electronic components.

You must wear an antistatic wrist strap on your arm whenever you remove, install, or handle option cards and DIMMs.




Caution: Electrostatic discharge can damage hardware. Follow the procedure in this section to protect your equipment from damage.

To attach the antistatic wrist strap:

- 1 Locate the antistatic wrist strap and verify that the cable is attached to the wrist strap.
- 2 Place the strap around your wrist and adjust it to ensure that the metal buckle inside the strap touches your skin.
- 3 Insert the banana plug into the grounding jack at the rear of the chassis (Figure 28).

Figure 28 Location of the grounding jack for the antistatic wrist strap

Grounding jack

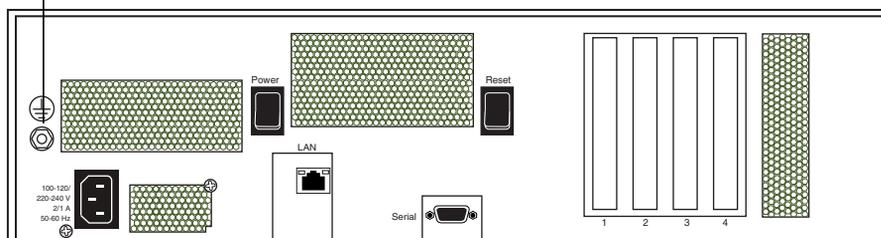

CS260002A

Installing and replacing option cards

The Contivity 2700 and 2600 have four slots for option cards (see [Figure 27 on page 69](#)). This section provides instructions on adding new option cards to the gateway or, if necessary, replacing an existing card.

[Table 5](#) lists the option cards that you can install in the Contivity 2700.

Table 5 Supported option cards for the Contivity 2700

Option card	Maximum number	Restrictions
SSL VPN Module 1000 ¹	1	Install this card in slot 1 only.
Contivity Security Accelerator (CSA) ²	2 ³	Install two cards of either type, or one card of each type. (But see Table 6 on page 72 .) Do not install a Hardware Accelerator card in slot 4.
Hardware Accelerator		
10/100 Ethernet interface	4	
1000BASE-T interface (copper) ²	2	Install two 1000BASE-T cards, two 1000BASE-SX cards, or one card of each type. (But see Table 6 on page 72 .)
1000BASE-SX interface (fiber) ²		
56/64K CSU/DSU WAN interface ¹	4	
ADSL WAN interface ²	4	
ISDN BRI S/T or U interface ⁴	4	
T1 CSU/DSU WAN interface (full-height)	4	For E1 support, you must install the half-height interface card.
T1/E1 CSU/DSU WAN interface (half-height)	4	
Quad T1/E1 CSU/DSU WAN interface ¹	3	
V.90 modem interface ⁴	4	If an SSL VPN Module 1000 is installed in slot 1, do not install the V.90 modem interface card in slot 2.
Single V.35/X.21 WAN interface	4	
HSSI WAN interface	2	Do not install in slot 4; install in slot 3 or 1 if possible. If an SSL VPN Module 1000 is installed, you can install only one HSSI WAN interface card.
Dual V.35 WAN interface ⁵	4	

1 The Contivity 2700 must be running Version 5.0 or later.

2 The Contivity 2700 must be running Version 4.90 or later.

3 To support two Hardware Accelerator cards, the gateway must be running Version 4.76 or later.

4 The Contivity 2700 must be running Version 4.80 or later.

5 This option card is no longer available for purchase.

Table 6 provides additional guidelines for option card installation when an SSL VPN Module 1000 is installed in slot 1.

Table 6 Installing other option cards with the SSL VPN Module 1000

Option card	Restrictions with SSL VPN Module 1000 installed
Contivity Security Accelerator (CSA)	Only one CSA card can be installed.
Hardware Accelerator	You can install two cards only if <i>none</i> of these cards is installed: <ul style="list-style-type: none"> • CSA • 1000BASE-T or 1000BASE-SX • HSSI If a 1000BASE-T, 1000BASE-SX, CSA, or HSSI card is installed, only one Hardware Accelerator card can be installed.
1000BASE-T or 1000BASE-SX interface	You can install two cards only if <i>none</i> of these cards is installed: <ul style="list-style-type: none"> • CSA • Hardware Accelerator • HSSI If a CSA, Hardware Accelerator, or HSSI card is installed, only one 1000BASE-T or 1000BASE-SX card can be installed.
V.90 modem interface	Do not install this card in slot 2.
HSSI WAN interface	Only one HSSI card can be installed. Install this card in slot 3 if possible. Do not install this card in slot 4.

Table 7 lists the option cards that you can install in the Contivity 2600.

Table 7 Supported option cards for the Contivity 2600

Option card	Maximum number	Restrictions
Hardware Accelerator	1	The CSA card is not supported.
10/100 Ethernet interface	4	
1000BASE-T interface (copper) ¹	2	Install two 1000BASE-T cards, two 1000BASE-SX cards, or one card of each type.
1000BASE-SX interface (fiber) ¹		
56/64K CSU/DSU WAN interface ²	4	
T1 CSU/DSU WAN interface (full-height)	4	For E1 support, you must install the half-height interface card.
T1/E1 CSU/DSU WAN interface (half-height)	4	
Quad T1/E1 CSU/DSU WAN interface ²	3	

Table 7 Supported option cards for the Contivity 2600 (continued)

Option card	Maximum number	Restrictions
Single V.35/X.21 WAN interface	4	
Dual V.35 WAN interface ³	4	
HSSI WAN interface	2	

- 1 The Contivity 2600 must be running Version 4.90 or later.
- 2 The Contivity 2600 must be running Version 5.0 or later.
- 3 This option card is no longer available for purchase.

To install or replace an interface card or a hardware encryption accelerator card:

- 1 Shut down the Contivity 2700 or 2600 using the Web GUI or the command line interface and then unplug it as described in [“Shutting down the system to add or replace hardware”](#) on page 66.



Danger: Turn off the gateway and unplug it before you attempt to install an option card.


- 2 Remove the front bezel from the chassis, then remove the chassis from the equipment rack (see [“Removing the front bezel and top cover”](#) on page 67).
- 3 Remove the top cover from the chassis (see [“Removing the front bezel and top cover”](#) on page 67).
- 4 Attach the antistatic wrist strap that was shipped with the gateway (see [“Attaching the antistatic wrist strap”](#) on page 70).
- 5 Locate the slot where you plan to install the new or replacement option card.



Caution: Do not try to install a HSSI WAN interface card or a Hardware Accelerator card in slot 4 of the Contivity 2700.

- 6 Remove the filler panel screw and pull out the filler panel (or the option card that you are replacing) from the slot (Figure 29).


Figure 29 Installing and removing an option card

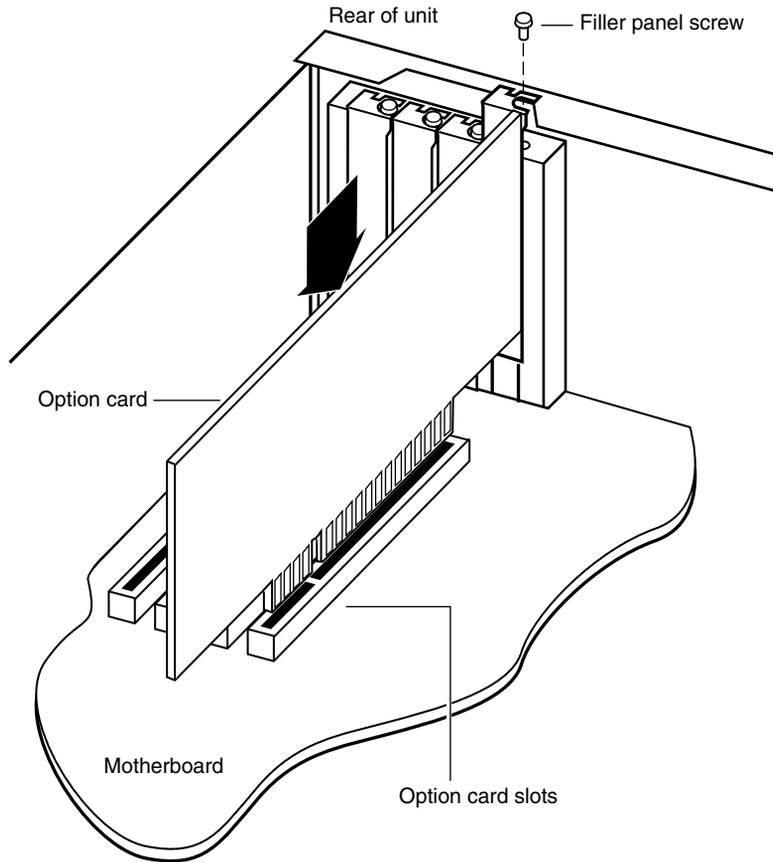

CS2600017A

- 7 Lower the new option card into the slot and gently press the connector into the slot.
Make sure that the card is seated firmly in the slot. If the card is not seated properly, it will not work.
- 8 Replace the screw that secures the card to the slot (Figure 29).
- 9 Replace the top cover on the chassis (see Figure 26 on page 68).
 - a Hold the cover at an angle and slide it onto the chassis.
 - b Using a screwdriver, insert and tighten the 4 screws that secure the cover to the chassis.
- 10 If the gateway is installed in an equipment rack, mount it in the rack.
 - a Set the Contivity 2700 or 2600 on the rack-mount shelf in the rack.
 - b Insert one of the panhead screws through the bottom hole on each side of the shelf into the hole in the rack and tighten the screws.
- 11 Replace the front bezel (Figure 30).
 - a Hold the bezel by its two handles and push it onto the chassis.
 - b Using a screwdriver, tighten the 2 screws to secure the bezel to the chassis.

Figure 30 Replacing the front bezel

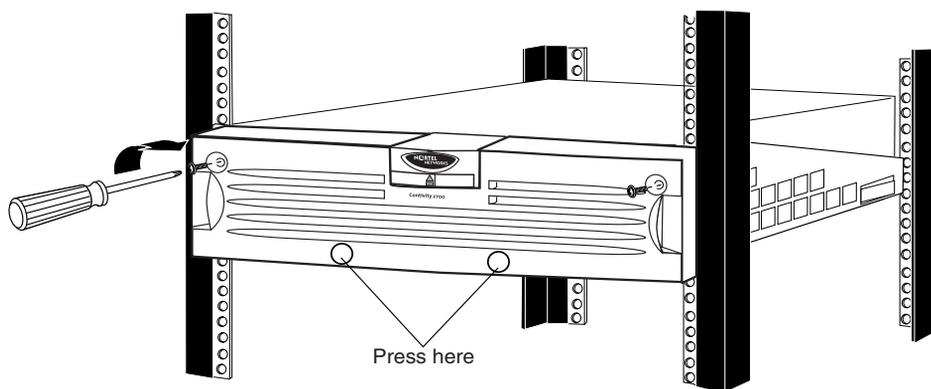

CS260005B

Installing and replacing DIMMs

The Contivity 2700 and 2600 have two slots for dual inline memory modules (DIMMs) (see [Figure 27 on page 69](#)). Unless you ordered additional memory, the gateway is shipped with one DIMM installed. You can upgrade memory in the gateway by installing a second DIMM.

[Table 8](#) lists the base memory and the maximum memory for the Contivity 2700 and the Contivity 2600.

Table 8 Base and maximum memory for the Contivity 2600 and 2700

Contivity model	Base memory (one installed DIMM)	Maximum memory (two installed DIMMs)
2600	128 MB	256 MB
2700	256 MB	512 MB

This section provides instructions on adding a second DIMM to the gateway or, if necessary, replacing an existing DIMM.



Caution: Make sure to install the same type of DIMM that is already installed in your gateway. For example, to upgrade memory in a Contivity 2600, which is shipped with one 128 MB DIMM, install a second 128 MB DIMM, not a 256 MB DIMM.

To install or replace a DIMM:

- 1 Shut down the Contivity 2600 or 2700 using the Web GUI or the command line interface and then unplug it as described in [“Shutting down the system to add or replace hardware” on page 66](#).



Danger: Turn off the gateway and unplug it before you attempt to install a DIMM.

- 2 Remove the front bezel from the chassis, then remove the chassis from the equipment rack (see [“Removing the front bezel and top cover” on page 67](#)).

- 3 Remove the top cover from the chassis (see [“Removing the front bezel and top cover”](#) on page 67).
- 4 Attach the antistatic wrist strap that was shipped with the Contivity 2700 or 2600 (see [“Attaching the antistatic wrist strap”](#) on page 70).




Caution: Electrostatic discharge can damage gateway components.

- 5 If you are replacing a DIMM, remove the installed DIMM as follows:
 - a Press down the locking lever on either side of the DIMM ([Figure 31](#)).
 - b Pull the DIMM up to remove it from the slot.
- 6 Press down the locking lever on either side of the slot where you plan to install the DIMM ([Figure 31](#)).
- 7 Place the new or replacement DIMM in the slot ([Figure 31](#)).

Use the alignment keys to properly position the DIMM in the slot.
- 8 Press the DIMM firmly into the socket.
- 9 Pull up the locking lever on either side of the DIMM to snap it into position.

Figure 31 Installing and removing a DIMM

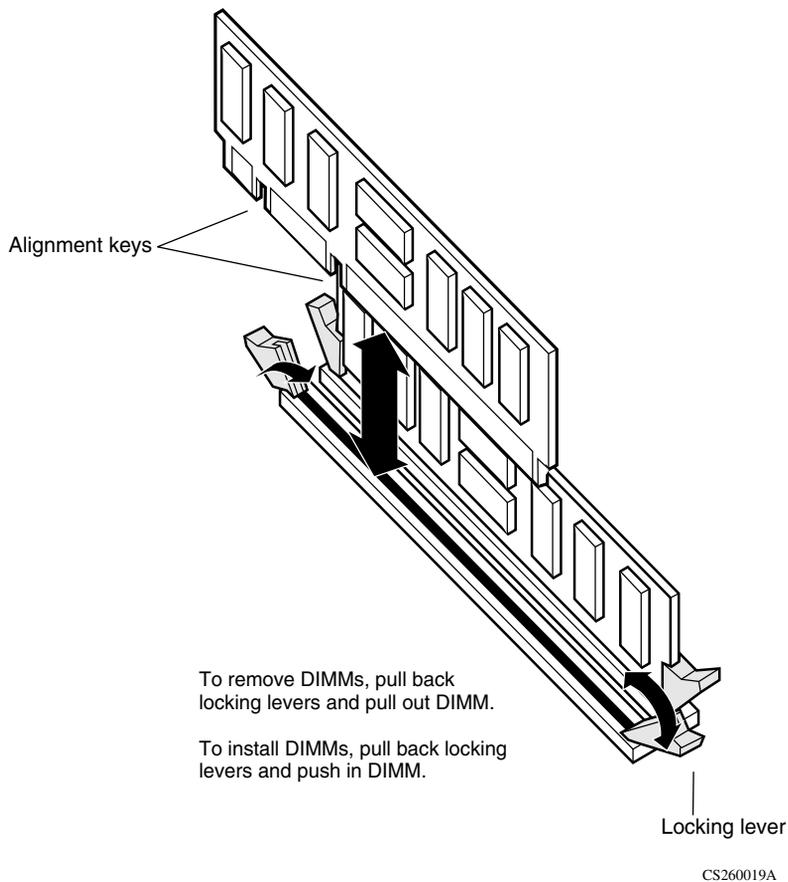

10 Replace the top cover on the chassis (see [Figure 26 on page 68](#)).

- a** Hold the cover at an angle and slide it onto the chassis.
- b** Using a screwdriver, insert and tighten the 4 screws to secure the cover to the chassis.

11 If the gateway is installed in an equipment rack, mount it in the rack.

- a** Set the Contivity 2700 or 2600 on the rack-mount shelf in the rack.
- b** Insert one of the panhead screws through the bottom hole on each side of the shelf into the hole in the rack and tighten the screws.

- 12** Replace the front bezel (see [Figure 30 on page 75](#)).
 - a** Hold the bezel by its two handles and push it onto the chassis.
 - b** Using the screwdriver, tighten the 2 screws to secure the bezel to the chassis.

Chapter 6

Contivity 4500 option installation

This section describes how to install or replace hardware components for the Contivity 4500.



Warning: Wear an antistatic band when handling electronic components for the Contivity 4500 to avoid damaging them.



Danger: Make sure to turn off the Contivity 4500 and unplug it before you attempt to install option cards or system memory.

Opening the Contivity 4500

To replace power supplies and hard disk drives, or to access the diskette drive for system recovery operations, you must remove the front bezel from the Contivity 4500. To install LAN or WAN cards, or to install additional memory, you must remove the front bezel and the top cover from the Contivity 4500.



Note: Removing the front bezel on the Contivity 4500 activates the chassis intrusion alarm only if the gateway is turned on. The intrusion alarm is reported to the system log file.

The first few times that you remove the front bezel it will be somewhat difficult to remove. This is because the ball stud and sockets are new. After a few times, removal is easier.


To remove the front bezel:

- 1 Insert a flat-head screwdriver into the slots on the lower left and right sides of the chassis, and pry the bezel forward.
- 2 Slide your fingers between the front bezel and the gateway.
- 3 Pull the bezel forward firmly, separating the ball studs on the bezel from the sockets on the chassis.

Figure 32 shows you how to remove the front bezel from the gateway. You do not need to turn off the gateway to remove the front bezel.

Figure 32 Removing the Contivity 4500 front bezel

Using a screwdriver
separate ball stud
on bezel from socket
on chassis (4 corners)

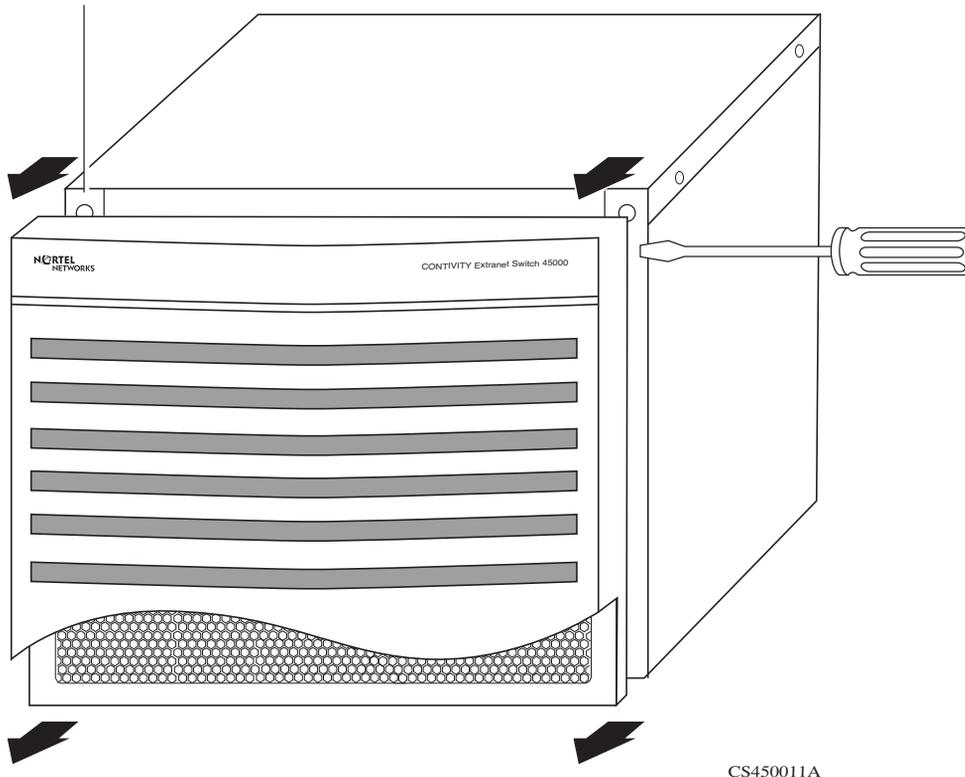


Remove the Contivity 4500 front bezel to:

- Replace a power supply.
- Replace a hard disk drive.
- Insert the recovery diskette.

Figure 33 shows the Contivity 4500 front components.

Figure 33 Contivity 4500 front components

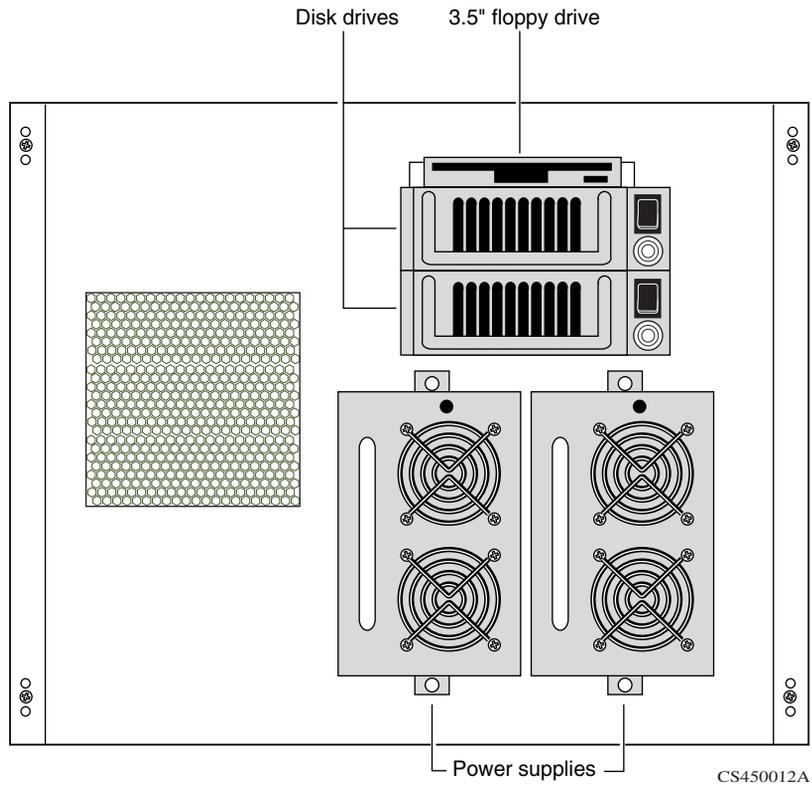

Contivity 4500 system board layout

This section shows the Contivity 4500 system board.



Warning: Only Nortel Networks trained service personnel should change existing hardware configurations. *Improper handling of internal components or assemblies, with the power connected, could cause severe injury.*




Note: Wear an antistatic wrist strap when handling electronic components for the Contivity 4500 to avoid damaging them.



Danger: Turn off the Contivity 4500 and unplug both power cords before you attempt to install option cards or system memory.

[Figure 34](#) shows the Contivity 4500 system board, in particular the DIMMs and option card slots.

Figure 34 Sample Contivity 4500 system board

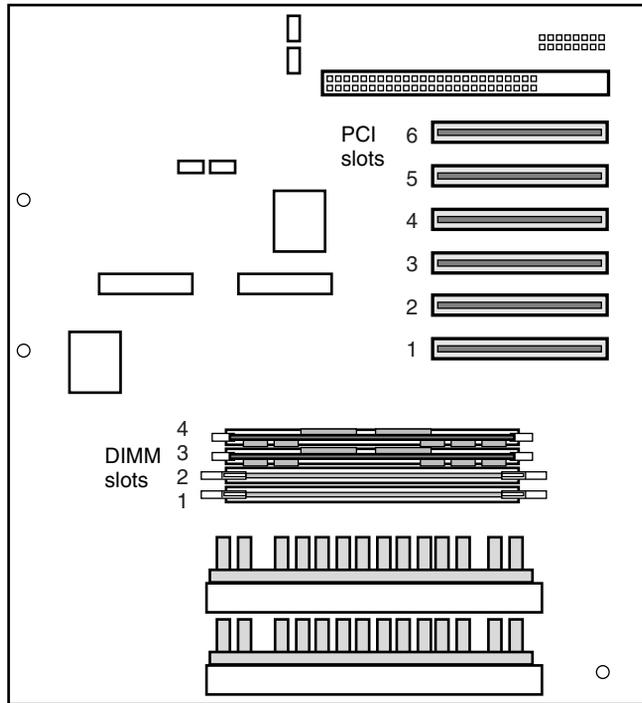

CS450013A

Installing and replacing option cards

The Contivity 4500 has six slots for option cards (see [Figure 34 on page 85](#)). This section provides instructions on adding new option cards to the gateway or, if necessary, replacing an existing card. The following procedure is for Nortel Networks trained service personnel only.

[Table 9](#) lists the option cards that you can install in the Contivity 4500.

Table 9 Supported option cards for the Contivity 4500

Option card	Maximum number	Restrictions
Hardware Accelerator	1	
10/100 Ethernet LAN interface	6	
ISDN BRI S/T or U interface ¹	5	
V.90 modem interface ¹	5	
T1 CSU/DSU WAN interface (full-height)	5	For E1 support, you must install the half-height interface card.
T1/E1 CSU/DSU WAN interface (half-height)	5	
Single V.35/X.21 WAN interface	5	
Dual V.35 WAN interface ²	5	
HSSI WAN interface	2	

¹ The Contivity 4500 must be running Version 4.80 or later.

² This option card is no longer available for purchase.

To install or replace an interface card or a hardware encryption accelerator card:

- 1** Turn off the gateway and unplug both power cords from the power source.
- 2** Unscrew the four slotted thumb screws securing the slide-out tray. Pull out the tray by gripping it with the screws. It will only pull out half way.
- 3** Remove the filler panel screw and pull out the slot filler panel.
- 4** Slide the option card into the intended slot. Make sure the card seats firmly and evenly into the card slot. If the card is not seated properly, it will not work. Populate the slots from Slot 1 to Slot 6, in that order.
- 5** Secure the option card in the tray with the slot filler panel screw.


- 6 Push in the tray by gripping it with the screws. Tighten the four slotted thumb screws securing the slide-out tray.
- 7 Plug in both power cords to the power source and turn on the gateway.



Caution: Be careful when inserting option cards into the Contivity 4500, because the slide-out tray is not fully supported once pulled out. You should support the back of the tray with your hand while inserting an option card.

Figure 35 shows you how to install LAN, WAN, or hardware accelerator option cards into the Contivity 4500. You can use the 6 slots for any mix of LAN and WAN or hardware accelerator cards; however, **you must populate the slots from bottom to top, in that order.**


Figure 35 Installing Contivity 4500 option cards

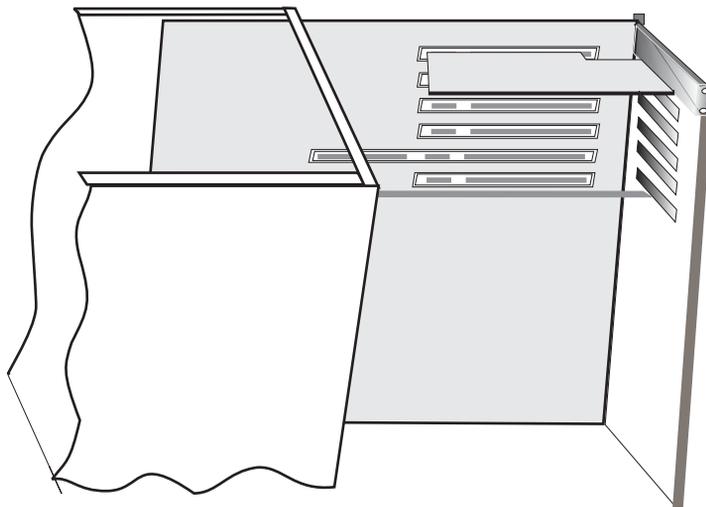

Installing and replacing DIMMs

Figure 36 shows you how to unlock a dual inline memory module (DIMM) in the Contivity 4500, and remove or install a DIMM. Install a DIMM in the next available slot (for example, if the DIMM #1 slot is populated, then add the next DIMM to the DIMM #2 slot).

Figure 36 Installing Contivity 4500 DIMMs

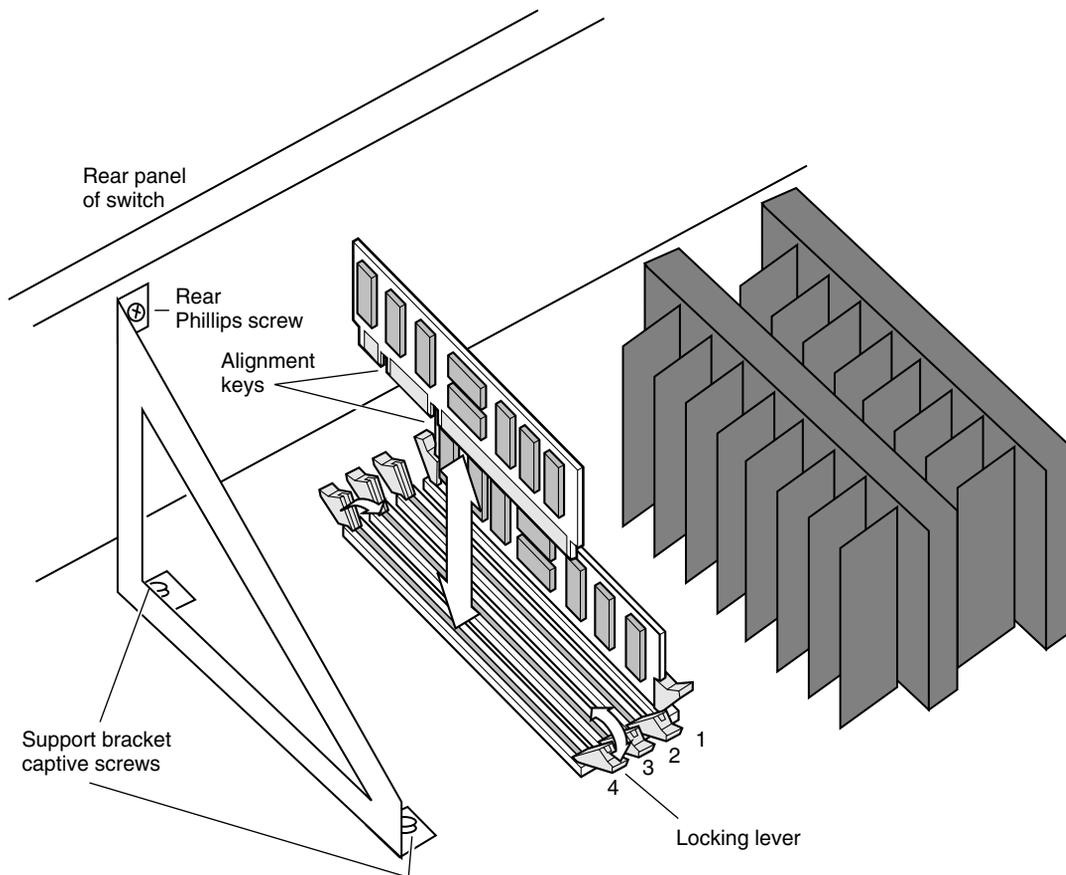

CS450015A

To install a DIMM in the Contivity 4500:

- 1 Turn off the gateway.
- 2 Remove the power cords.
- 3 Unscrew the slide-out tray at the back of the unit and pull it out using the thumb screws.
- 4 Remove the support bracket by loosening the two secured captive screws and the rear Phillips screw.
- 5 Press down the locking levers on both sides of the next available DIMM slot to allow the new DIMM to be inserted.
- 6 Place the new DIMM in the slot, making sure to properly position the DIMM's alignment keys. Make sure the DIMM is pressed firmly into the socket.
- 7 Pull up the locking levers on both sides of the DIMM, and snap the DIMM into the socket.
- 8 Replace the support bracket by tightening the two secured captive screws and the rear Phillips screw.
- 9 Push in the slide-out tray and tighten the thumb screws.




Caution: Be careful when inserting DIMMs into the Contivity 4500, because the slide-out tray is not fully supported once pulled out. You should support the back of the tray with your hand while inserting a DIMM.

Replacing a power supply

Figure 37 shows you how to replace a hot-swappable power supply for the Contivity 4500.

Figure 37 Removing a Contivity 4500 power supply

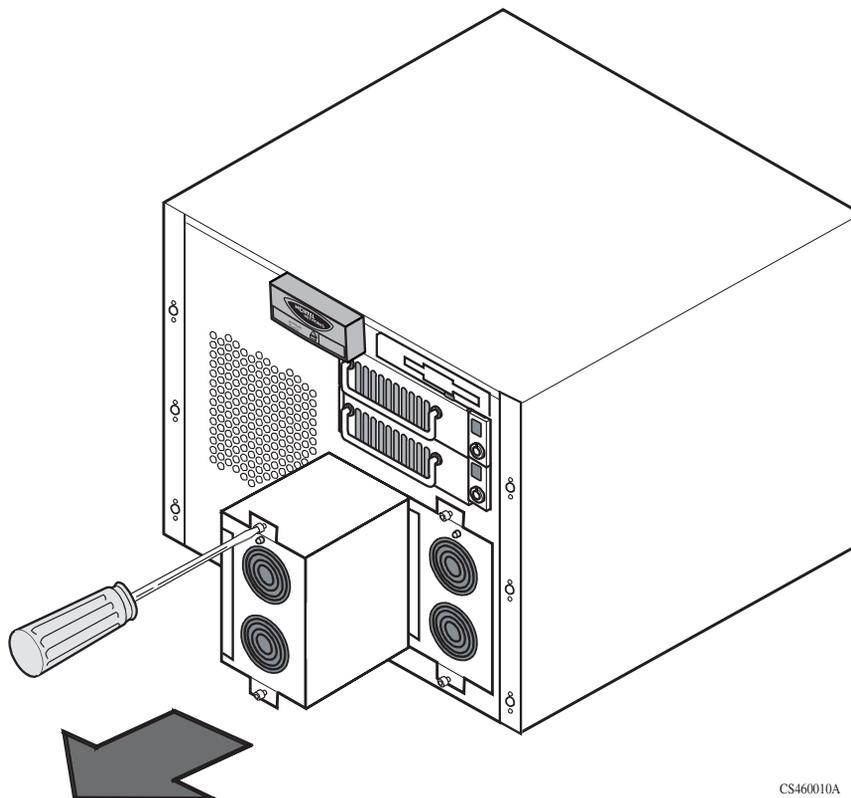

CS460010A

To remove the power supply:

- 1 Remove the front bezel as shown in [Figure 32](#).
- 2 Use a flat-head screwdriver to unscrew the top and bottom power supply screws.
- 3 Grab the handle and pull the power supply firmly, until the device disengages. Avoid the sharp sheet-metal edges.

- 4 Insert the new power supply. Make sure the power supply seats firmly in its socket and is locked in. Be sure the green power LED on the front of the power supply is on.
- 5 Secure the power supply screws tightly with a screwdriver.
- 6 Replace the front bezel.

Replacing a hard disk drive



Warning: Contivity 4500 hard disks are not hot-swappable.

When swapping a disk drive, you must first perform the steps listed below to ready the Contivity 4500 for the swap. This process is referred to as “warm-swapping” a disk drive.

Software

First save any data that has not yet been saved to the hard disk from the disk cache:

- 1 Connect to the gateway using a Web browser and go to the Admin > File System screen.
- 2 Click the button “Prepare selected device for removal.”

Hardware

Remove the front bezel from the Contivity 4500 as shown in [Figure 32](#), and then follow these steps:


- 1 Insert and turn the hard disk drive key to the right. The LED becomes a “U” for unlocked.



Note: Turning the key shuts off the power to the hard disk drive.

- 2 Pull the handle to remove the hard disk drive as shown in [Figure 38](#).

Figure 38 Removing a Contivity 4500 hard disk drive

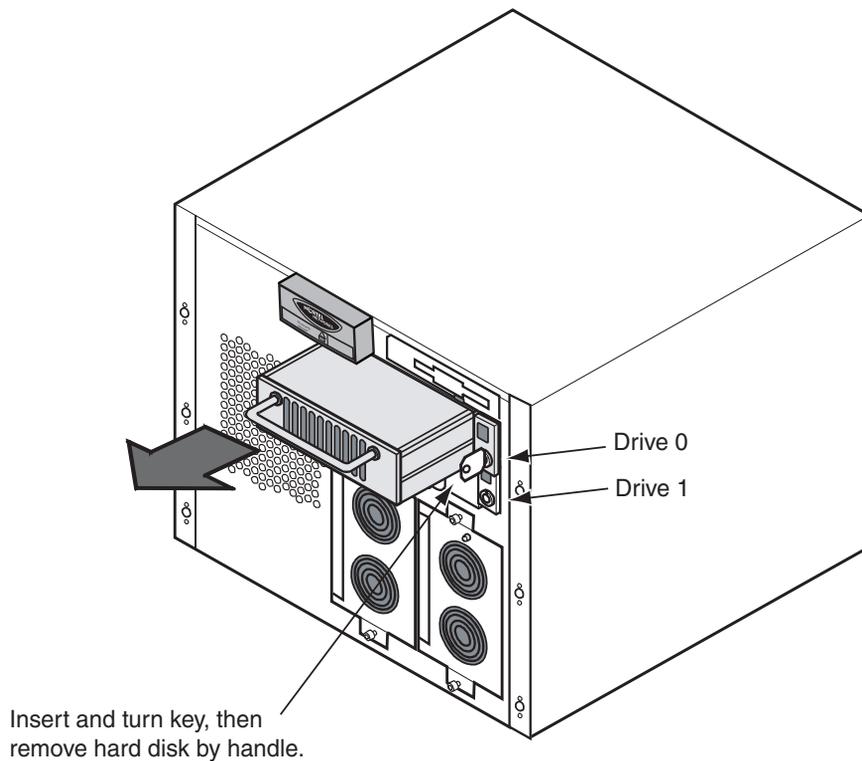

CS460011A

- 3** Insert the replacement hard drive fully, and lock it by turning the key clockwise. Make sure the hard disk drive LED shows the proper drive number.
- 4** Replace the front bezel.
- 5** Reload the software on the disk. Refer to “Using the Recovery Diskette” in *Installing the Contivity 4600* for more information on using the recovery diskette.

Software

Enable the gateway by following these steps:

- 1** Connect to the gateway using a Web browser and go to the Admin > File System screen.
- 2** Click on the drive and click the Enable button.

Chapter 7

Contivity 4600 option installation

This section describes how to install or replace hardware components for the Contivity 4600.



Caution: Wear an antistatic wrist strap when handling electronic components for the gateway to avoid damaging them.



Danger: Turn off the Contivity 4600 and unplug both power cords before you attempt to install option cards or system memory.

Opening the Contivity 4600

To replace power supplies and hard disk drives, or to access the diskette drive for system recovery operations, you must remove the front bezel from the Contivity 4600.



Note: Removing the front bezel on the Contivity 4600 activates the chassis intrusion alarm on power only. This intrusion is reported to the system log file.

The first few times you remove the front bezel it might seem to resist removal. This is simply because the ball stud and sockets are new. After a few times, removal is easier. Remove the Contivity 4600 front bezel as follows:


- 1 Insert a flat-head screwdriver into the slots on the lower left and right sides of the chassis, and pry the bezel forward.
- 2 Slide your fingers between the front bezel and the gateway.

- 3 Pull the bezel forward firmly, separating the ball studs on the bezel from the sockets on the chassis.

Figure 39 shows how to remove the front bezel from the Contivity 4600. You do not need to turn off the gateway to remove the front bezel when installing a power supply or hard disk drive.

Figure 39 Removing the Contivity 4600 front bezel


Using a Phillips screwdriver, rotate screws a quarter turn counterclockwise (top right and left corners), then separate ball stud on bezel from socket on chassis (middle of both sides and bottom right and left corners)

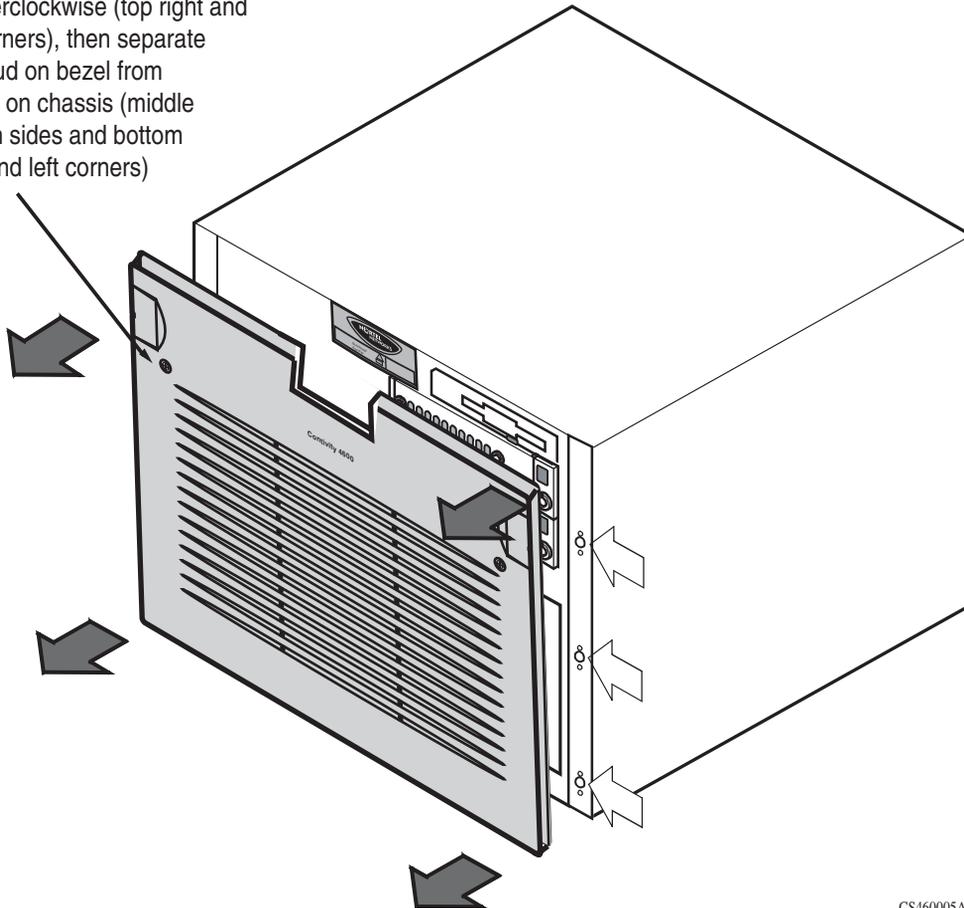

CS460005A

Figure 40 shows the Contivity 4600 front components.

Figure 40 Contivity 4600 front components

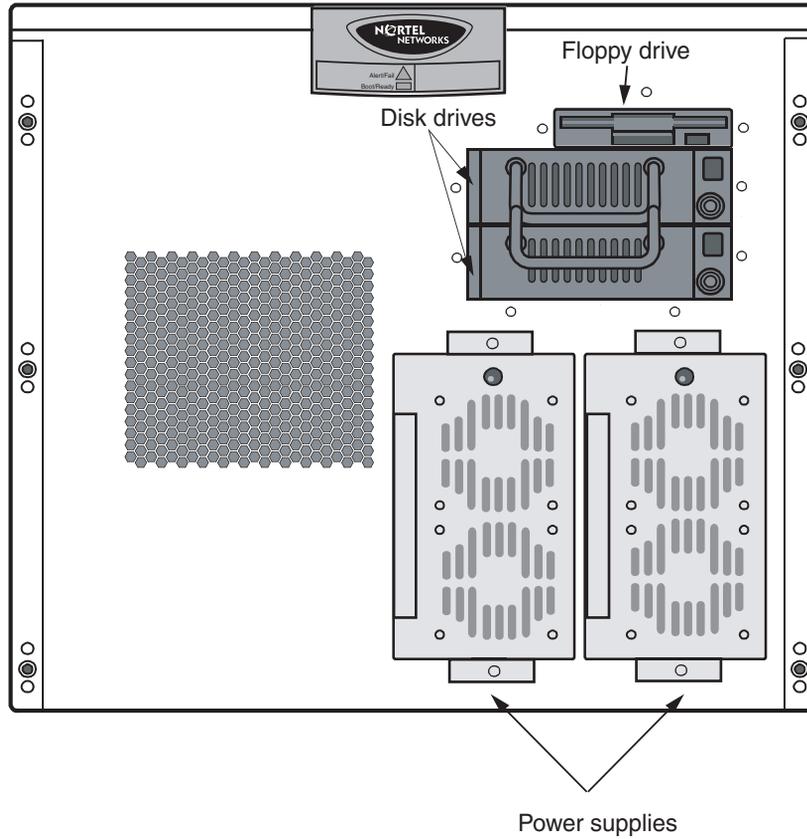

CS460006A

Contivity 4600 system board layout


This section shows the Contivity 4600 system board.



Warning: Only Nortel Networks trained service personnel should change existing hardware configurations. *Improper handling of internal components or assemblies, with the power connected, could cause severe injury.*

Figure 41 shows a sample Contivity 4600 system board, including the dual inline memory modules (DIMMs) and peripheral component interconnect (PCI) slots.

Figure 41 Sample Contivity 4600 system board

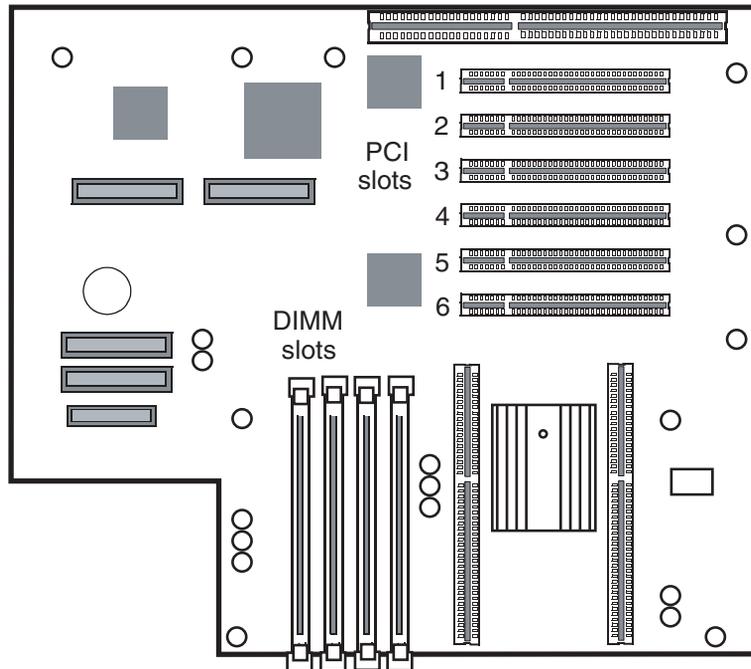

CS460007A

Installing and replacing option cards

The Contivity 4600 has six slots for option cards (see [Figure 41 on page 96](#)). This section provides instructions on adding new option cards to the gateway or, if necessary, replacing an existing card. The following procedure is for Nortel Networks trained service personnel only.

[Table 10](#) lists the option cards that you can install in the Contivity 4600.

Table 10 Supported option cards for the Contivity 4600

Option card	Maximum number	Restrictions
Contivity Security Accelerator (CSA) ¹	2 ²	Install two cards of either type, or one card of each type. Do not install the CSA card in slot 4.
Hardware Accelerator		
10/100 Ethernet LAN interface	6	
1000BASE-T interface (copper) ¹	2	Install two 1000BASE-T cards, two 1000BASE-SX cards, or one card of each type. Do not install either card in slot 4.
1000BASE-SX interface (fiber) ¹		
56/64K CSU/DSU WAN interface ³	5	
ISDN BRI S/T or U interface ⁴	5	
T1 CSU/DSU WAN interface (full-height)	5	For E1 support, you must install the half-height interface card.
T1/E1 CSU/DSU WAN interface (half-height)	5	
Quad T1/E1 CSU/DSU WAN interface ³	3	
V.90 modem interface ⁴	5	
Single V.35/X.21 WAN interface	5	
Dual V.35 WAN interface ⁵	5	
HSSI WAN interface	2	

1 The Contivity 4600 must be running Version 4.90 or later.

2 To support two Hardware Accelerator cards, the gateway must be running Version 4.76 or later.

3 The Contivity 4600 must be running Version 5.0 or later.

4 The Contivity 4600 must be running Version 4.80 or later.

5 This option card is no longer available for purchase.


The Contivity 4600 supports a maximum of 16 I/O ports. This number includes the built-in LAN port on the gateway. When you provision a Contivity 4600 with I/O cards, do not exceed the 16-port maximum. For example, the following configuration results in 17 I/O ports:

- Built-in LAN port and installed 10/100 Ethernet LAN interface card (2 ports)
- Three quad T1/E1 CSU/DSU WAN interface cards (12 ports)
- One dual V.35 WAN interface card (2 ports)
- One ISDN BRI S/T interface card (1 port)

To install or replace an interface card or a hardware encryption accelerator card:

- 1 Turn off the gateway and unplug both power cords from the power source.
- 2 Unscrew the four slotted thumb-screws securing the slide-out tray. Pull out the tray by gripping it with the screws. It will only pull out halfway.
- 3 Remove the filler panel screw and pull out the slot filler panel.
- 4 Slide the option card into the intended slot. Make sure the card seats firmly and evenly in the card slot. If the card is not seated properly, it will not work. Populate the slots from slot 1 to slot 6 (top to bottom), in that order, as shown in [Figure 42](#).

Figure 42 Installing Contivity 4600 option cards

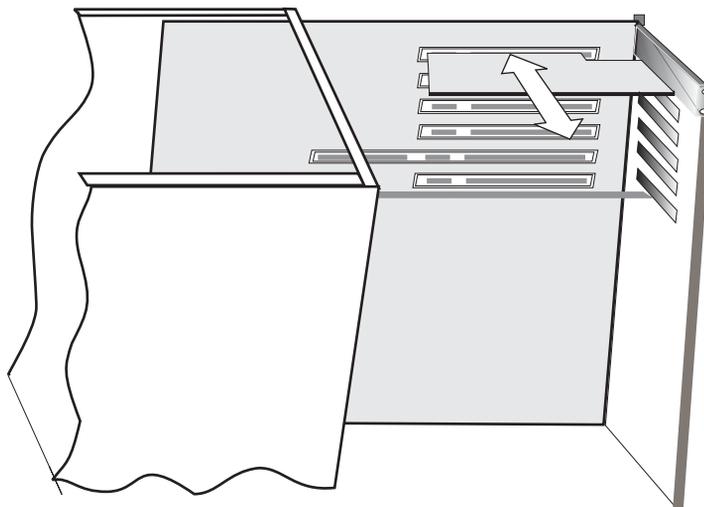

CS460014A

- 5 Secure the option card in the tray with the slot filler panel screw.
- 6 Push in the tray by gripping it with the screws. Tighten the four slotted thumb-screws securing the slide-out tray.
- 7 Plug in both power cords to the power source and turn on the Contivity 4600.



Caution: Be careful when inserting option cards into the Contivity 4600, because the slide-out tray is not fully supported once pulled out. You should support the back of the tray with your hand while inserting an option card.


Installing and replacing DIMMs

[Figure 43](#) shows you how to unlock a DIMM in the Contivity 4600, and remove or install a DIMM. Install a DIMM in the next available slot (for example, if the DIMM #1 slot is populated, then add the next DIMM to the DIMM #2 slot).

To install a DIMM in the Contivity 4600:

- 1 Turn off the gateway and unplug both power cords from the power source.
- 2 Unscrew the four slotted thumb-screws securing the slide-out tray. Pull out the tray by gripping it with the screws. It will only pull out halfway.
- 3 Unscrew the slide-out tray at the back of the unit and pull it out using the thumb screws.
- 4 Remove the support bracket by loosening the two secured captive screws and the rear Phillips screw.
- 5 Press down the locking levers on both sides of the next available DIMM slot.
- 6 Place a new DIMM in the slot, making sure to properly position the DIMM alignment keys, as shown in [Figure 43](#).

Figure 43 Installing Contivity 4600 DIMMs

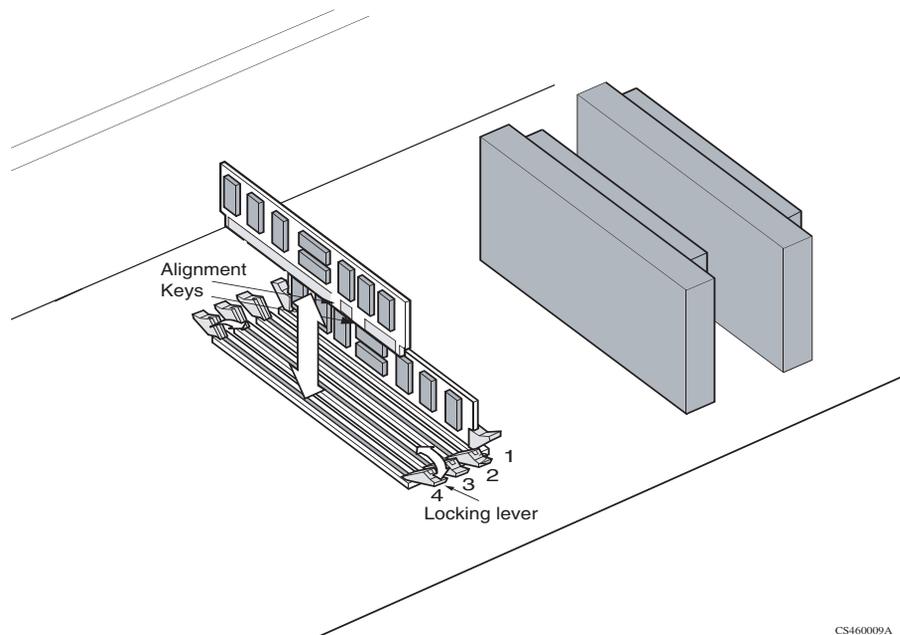


- 7 Pull up the locking levers on both sides of the next available DIMM, and snap the DIMM into its socket.
- 8 Replace the support bracket by tightening the two secured captive screws and the rear Phillips screw.
- 9 Push in the slide-out tray and tighten the thumb-screws.

Replacing a power supply

To remove the power supply:

- 1 Remove the front bezel as shown in [Figure 39](#).
- 2 Use a flat-head screwdriver to unscrew the top and bottom power supply screws, as shown in [Figure 44](#).

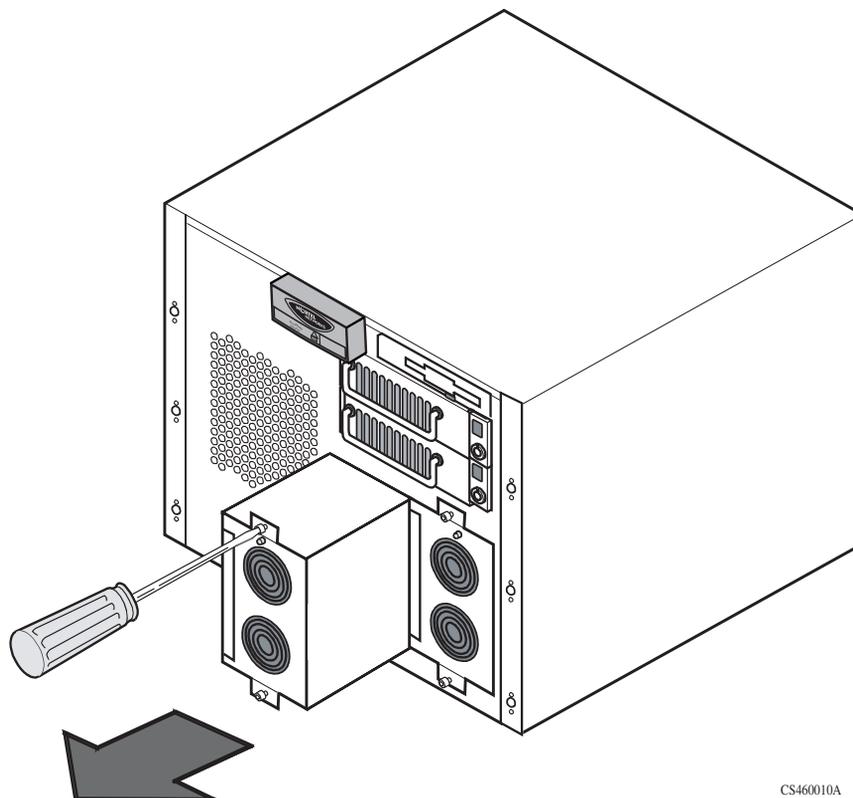Figure 44 Removing a Contivity 4600 power supply

- 3** Grab the handle and pull the power supply firmly, until the device disengages. Be careful of the sharp sheet-metal edges.
- 4** Insert the new power supply. Make sure it seats firmly in its socket and is locked in. Be sure the green power LED on the front of the power supply is on.
- 5** Secure the power supply screws tightly with a screwdriver.
- 6** Replace the front bezel.

Replacing a hard disk drive

[Figure 45](#) shows you how to replace Contivity 4600 hard disk drives.



Caution: Hard disks are not hot-swappable.

To replace a hard disk drive, you must do the following:

Software

First save any data that has not yet been saved to the hard disk from the disk cache:

- 1 Use your Web browser to navigate to the gateway, and go to the Admin > File System display.
- 2 Click the button “Prepare selected device for removal.”

Hardware


Next, remove the Contivity 4600 front bezel as shown in [Figure 39](#), and then follow these steps:

- 1 Insert and turn the hard disk drive key to the right. The LED becomes a “U” for unlocked.



Note: Turning the key shuts off the power to the hard disk drive.

- 2 Pull the handle to remove the hard disk drive, as shown in [Figure 45](#).

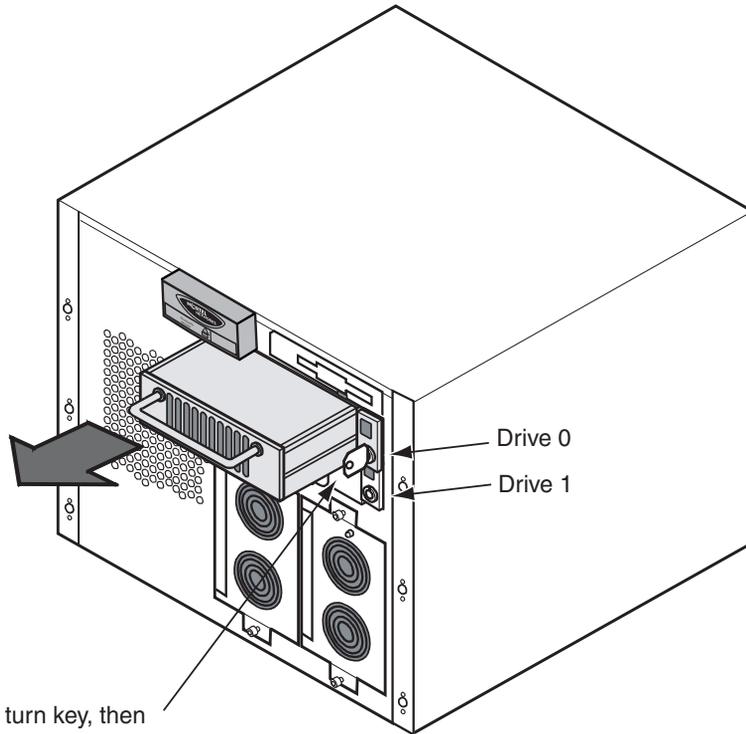Figure 45 Removing a Contivity 4600 hard disk drive

CS460011A

- 3** Insert the replacement hard drive fully, and lock it by turning the key clockwise. Make sure the hard disk drive LED shows the proper drive number.
- 4** Replace the front bezel.

If you need to reload the software on the disk, see the information on using the recovery diskette in the book *Installing the Contivity 4600*.

Software

Enable the Contivity 4600 by following these steps:

- 1** Use your Web browser to navigate to the gateway, and go to the Admin > File System display.
- 2** Click on the drive and click the Enable button.

Chapter 8

Contivity 5000 option installation

This chapter provides instructions on how to install and replace the following field replaceable units (FRUs) in the Contivity 5000:

- LAN, WAN, and serial interface cards
- SSL VPN Module 1000
- Hardware accelerator cards
- Dual inline memory modules (DIMMs)
- Power supplies
- Hard disk drives
- Fan trays

This chapter contains the following topics:

Topic	Page
Preparing to install hardware options	106
Shutting down the system to add or replace hardware	107
Removing the front bezel and top cover	108
Attaching the antistatic wrist strap	112
Installing and replacing option cards	113
Installing and replacing DIMMs	120
Replacing a power supply	124
Replacing a hard disk drive	127
Replacing a fan tray	131

Preparing to install hardware options

This section describes preliminary steps for installing and replacing field replaceable units in the Contivity 5000.

Option cards, DIMMs, and fan trays

To install an option card, pair of DIMMs, or fan tray, you must first follow these steps:

- 1 Shut down the Contivity 5000 and unplug it.
- 2 Remove the front bezel from the chassis.
- 3 Remove the chassis from the equipment rack.
- 4 Remove the top cover from the chassis.

If you need to add or replace an option card, pair of DIMMs, or fan tray, see [“Shutting down the system to add or replace hardware” on page 107](#).

Power supplies

The Contivity 5000 power supplies are hot-swappable. You do not need to shut down the system to replace a power supply. For instructions, see [“Replacing a power supply” on page 124](#).

Hard disk drives

The backup hard disk drive is hot-swappable, but the primary disk drive is not.

- To replace either hard disk drive, you must remove the front bezel.
- To replace the primary hard disk drive, you must first shut down the gateway.

For complete information about replacing a hard disk drive, see [“Replacing a hard disk drive” on page 127](#).

Shutting down the system to add or replace hardware

Shut down the Contivity 5000 and unplug it to install or replace any of these field replaceable units:

- Option card
- Pair of DIMMs
- Fan tray

To replace the primary hard disk drive, shut down the system as described in this section. However, you do not need to unplug the chassis to replace a hard drive.



Caution: Shut down the Contivity 5000 as described in this section before you attempt to add or replace option cards, DIMMs, fan trays, or hard disk drives.

To shut down the Contivity 5000:

- 1 Use the Web GUI or the command line interface to shut down the gateway.
 - Web GUI: Choose Admin > Shutdown. Select the option to power off the gateway after shutdown.
 - Command line interface: Use the **reload** command to shut down the system. For example, enter **reload power-off disable-logins "Upgrade hardware"**

For the complete syntax of the **reload** command, see the *Reference for the Contivity Secure IP Services Gateway Command Line Interface*.

- 2 Wait for the system to shut down. You may need to wait several minutes.
- 3 Disconnect the two power cords from the power outlets and then disconnect the cords from the Contivity 5000.

The power receptacles are located on the rear of the Contivity 5000.



Danger: Make sure to turn off the Contivity 5000 and unplug *both* power cords before you attempt to remove or install an option card, DIMM, or fan tray.

Removing the front bezel and top cover

To replace a hard disk drive, you must remove the front bezel from the Contivity 5000. To install option cards or DIMMs, or to replace a fan tray, you must remove the front bezel and the top cover from the Contivity 5000.

To remove the front bezel:

- 1 Shut down the Contivity 5000 using the Web GUI or the command line interface and then unplug it as described in [“Shutting down the system to add or replace hardware” on page 107](#).


You do not need to unplug the gateway to replace a hard disk drive.



Danger: Make sure to turn off the Contivity 5000 and unplug it before you attempt to install an option card, DIMM, or fan tray.

- 2 Using a Phillips screwdriver, turn each of the 2 screws on the front bezel a quarter turn counterclockwise ([Figure 46](#)).

Figure 46 Removing the front bezel

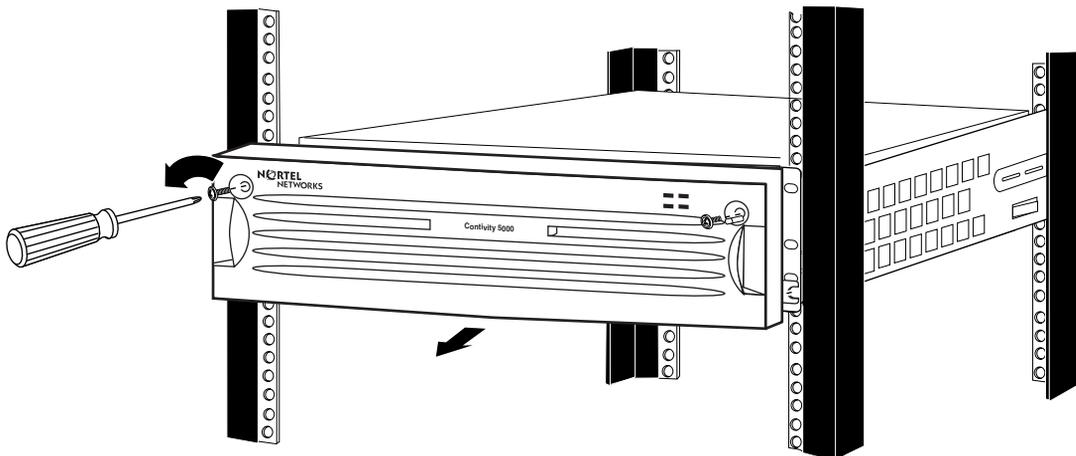

CS260015C

- 3 Grip the two handles and firmly pull the bezel toward you to unsnap it from the chassis.

The first few times that you remove the front bezel, it may be somewhat difficult to remove because the ball studs and socket clips are new.



Note: If you are replacing a hard disk drive, you do not need to remove the chassis from the equipment rack; go to [“Replacing a hard disk drive” on page 127](#).

If the Contivity 5000 is installed in an equipment rack, you must remove it from the rack to add or replace DIMMs, option cards, or fan trays.

To remove the chassis from the rack:

- 1 At the front of the chassis, remove the two 1/2-in. truss screws that secure the bottom of the chassis to the equipment rack.




Warning: The Contivity 5000 weighs approximately 50 pounds (23 kg). This weight is not evenly distributed; the right side of the gateway weighs more than the left. For this reason, two people should remove the system from the equipment rack.

- 2 With two people facing the front of the equipment rack, remove the Contivity 5000 from the rack-mount shelf and set it on a sturdy surface.

To remove the top cover:

- 1 Using a Phillips screwdriver, remove the 4 screws that secure the cover to the chassis ([Figure 47](#)).
- 2 Slide the top cover forward approximately 1/4 inch.

Figure 47 Removing the top cover

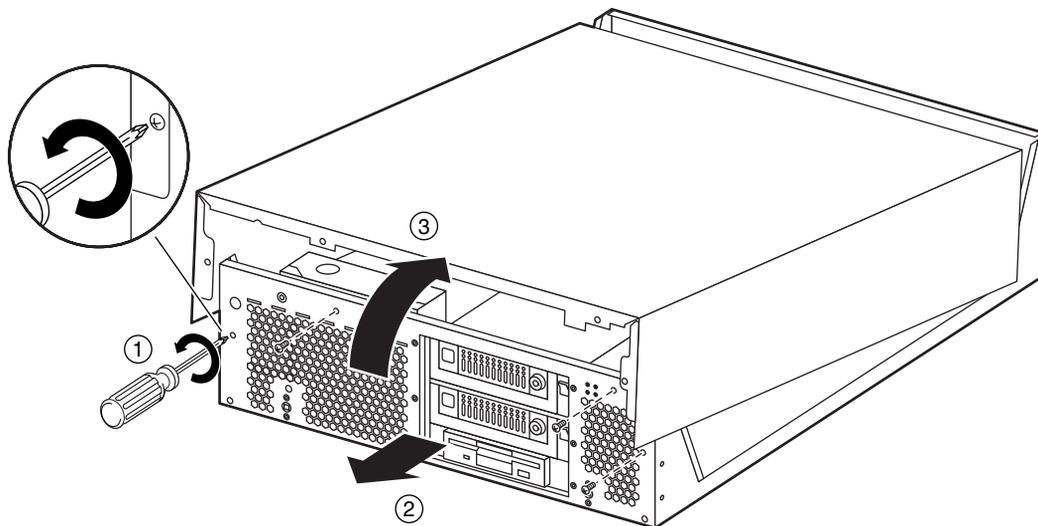


10966FA

- 3** Lift the lid 2 or 3 inches and pull it toward you to remove it from the chassis.

The Contivity 5000 system board is now exposed. [Figure 48](#) shows the location of the option card slots, the DIMM slots, and the fan trays on the system board.

Go to the appropriate section in this chapter.

- [“Installing and replacing option cards” on page 113](#)
- [“Installing and replacing DIMMs” on page 120](#)
- [“Replacing a fan tray” on page 131](#)

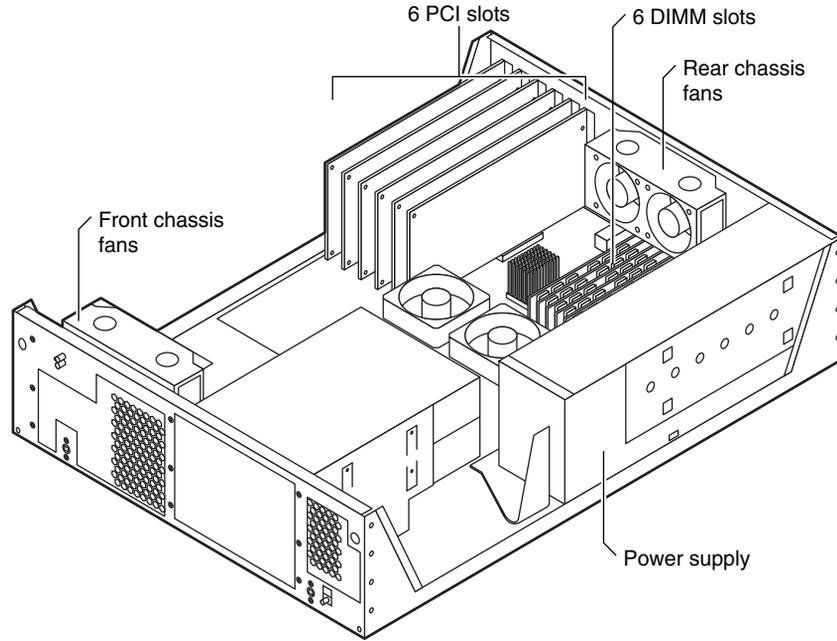Figure 48 Location of option cards, DIMMs, and fan trays on the system board

10894FA



Warning: Beware of danger if battery is incorrectly replaced. Replace with the *same* or an *equivalent battery* only, as recommended by the manufacturer's instructions.



Danger: In spite of the above warning, which is mandated for regulatory approval, *you should not change the battery*. If you suspect a dead battery, contact Nortel Networks Customer Support.

Attaching the antistatic wrist strap

Nortel Networks ships the Contivity 5000 with an antistatic wrist strap. The antistatic wrist strap directs the discharge of static electricity from your body to the chassis of the gateway to avoid damage to sensitive electronic components.

You must wear an antistatic wrist strap on your arm whenever you remove, install, or handle option cards, DIMMs, power supplies, hard disk drives, and fan trays.




Caution: Electrostatic discharge can damage hardware. Follow the procedure in this section to protect your equipment from damage.

To attach the antistatic wrist strap:

- 1 Locate the antistatic wrist strap and verify that the cable is attached to the wrist strap.
- 2 Place the strap around your wrist and adjust it to ensure that the metal buckle inside the strap touches your skin.
- 3 Insert the banana plug into the grounding jack at the rear of the chassis (Figure 49).

Figure 49 Location of the grounding jack for the antistatic wrist strap

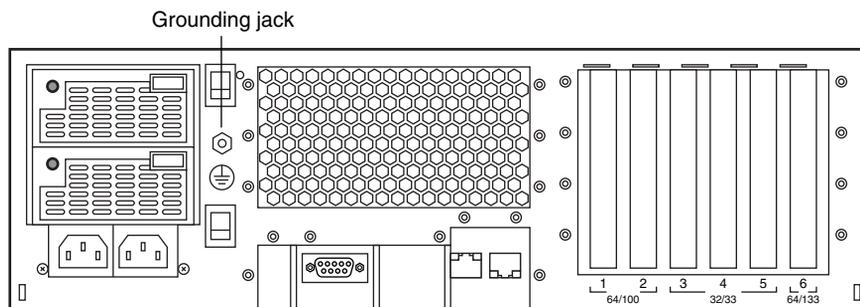

10893EA

Installing and replacing option cards


This section provides information about the optimal placement of option cards in the Contivity 5000 and instructions for installing option cards.

Considerations for installing option cards

The Contivity 5000 has six slots for option cards (see [Figure 48 on page 111](#)). These slots are connected to three separate buses ([Figure 50](#)).

- Slots 1 and 2 are connected to the 64-bit/100-MHz bus (Bus 1).
- Slots 3, 4, and 5 are connected to the 32-bit/33-MHz bus (Bus 2).
- Slot 6 is connected to the 64-bit/133-MHz bus (Bus 3).

Figure 50 Contivity 5000 option card slots and buses

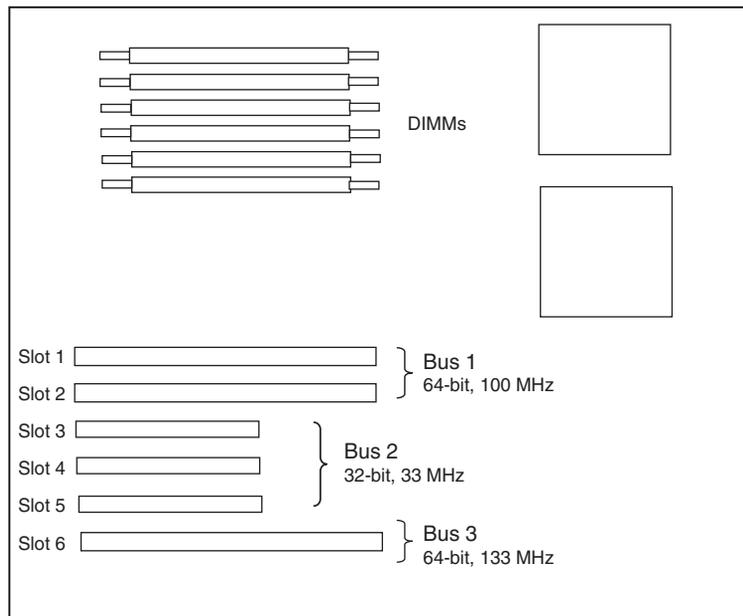

11357EA

The 1000BASE-T, 1000BASE-SX, and CSA cards are high-speed cards; most other option cards are low-speed (33-bit/33-MHz) cards. To maximize system performance, reserve slots 1, 2, and 6 for high-speed cards, and install low-speed cards in slots 3, 4, and 5. (The SSL VPN Module 1000 must be installed in slot 1.)

If you install a slower (32-bit/33-MHz) card such as the 10/100 Ethernet LAN in a slot attached to a faster bus, the speed of the whole bus is reduced to the width and speed of the slower card. For example, if you install a 10/100 Ethernet LAN card in slot 1, a 1000BASE-T card installed in slot 2 runs at 32-bit/33-MHz, not at the bus speed of 64-bit/100-MHz.

[Table 11](#) lists all option cards that you can install in the Contivity 5000. [Table 12](#) provides guidelines for the placement of the cards in the chassis.

Table 11 Supported option cards for the Contivity 5000

Option card	Maximum number	Restrictions
SSL VPN Module 1000 ¹	1	Install this card in slot 1 only.
Contivity Security Accelerator (CSA) ²	2	You can install two cards of either type or one card of each type. See Table 12 for information about slot placement.
Hardware Accelerator		
10/100 Ethernet interface	5	If possible, install in slots 3, 4, and 5.
1000BASE-T interface (copper) ²	2	Install two 1000BASE-T cards, two 1000BASE-SX cards, or one card of each type. See Table 12 for more information about slot placement.
1000BASE-SX interface (fiber) ²		
56/64K CSU/DSU WAN interface ¹	5	If possible, install in slots 3, 4, and 5.
ADSL WAN interface ²	5	If possible, install in slots 3, 4, and 5.
ISDN BRI S/T or U interface ³	5	If possible, install in slots 3, 4, and 5.
T1 CSU/DSU WAN interface (full-height)	5	If possible, install in slots 3, 4, and 5. For E1 support, you must install the half-height interface card.
T1/E1 CSU/DSU WAN interface (half-height)	5	
Quad T1/E1 CSU/DSU WAN interface ¹	3	If possible, install in slots 3, 4, and 5.
V.90 modem interface ³	5	If possible, install in slots 3, 4, and 5. If an SSL VPN Module 1000 is installed in slot 1, do not install the V.90 modem interface card in slot 2.
Single V.35/X.21 WAN interface	5	If possible, install in slots 3, 4, and 5.
HSSI WAN interface	2	Install in slots 3, 4, and 5 only.
Dual V.35 WAN interface ⁴	3	Install in slots 3, 4, and 5 only.

1 The Contivity 5000 must be running Version 5.0 or later.

2 The Contivity 5000 must be running Version 4.90 or later.

3 The Contivity 5000 must be running Version 4.80 or later.

4 This option card is no longer available for purchase.

Table 12 provides guidelines for the placement of option cards in the chassis.


Table 12 Optimal placement of option cards in the Contivity 5000

Installation order	Option card	Slot placement in order of preference	
		With SSL VPN card in slot 1	No SSL VPN card in slot 1
1	SSL VPN Module 1000 (slot 1)	---	---
2	Contivity Security Accelerator (CSA)	First card: slot 6 Second card: slot 2	First card: slot 6 Second card: slot 2 or 1
3	Hardware Accelerator	First card: slot 6; slot 3, 4, or 5 Second card: slot 3, 4, or 5	First card: slot 6; slot 3, 4, or 5 Second card: slot 3, 4, or 5
4	1000BASE-T or 1000BASE-SX interface	First card: slot 2; slot 6; slot 3, 4, or 5 Second card: slot 6; slot 3, 4, or 5	First card: slot 2 or 1; slot 6; slot 3, 4, or 5 Second card: slot 1 or 6; slot 3, 4, or 5
5	V.90 modem interface	Slots 3, 4, and 5 (Do not install this card in slot 2.)	Slots 3, 4, and 5
6	Other option cards (see Table 11)	Slots 3, 4, and 5; slot 6; slot 2	Slots 3, 4, and 5; slot 6; slot 2

Figure 51 is a flowchart that illustrates the placement of option cards in the Contivity 5000. The typical order for installing option cards is as follows:

- 1** Hardware accelerator cards, from highest speed to lowest speed:
 - a** SSL VPN Module 1000
 - b** Contivity Security Accelerator
 - c** Hardware Accelerator
- 2** High-speed (64-bit) I/O cards (that is, the 1000BASE-T and 1000BASE-SX)
- 3** Lower-speed (32-bit) I/O cards

Figure 51 Flowchart for option card installation in the Contivity 5000

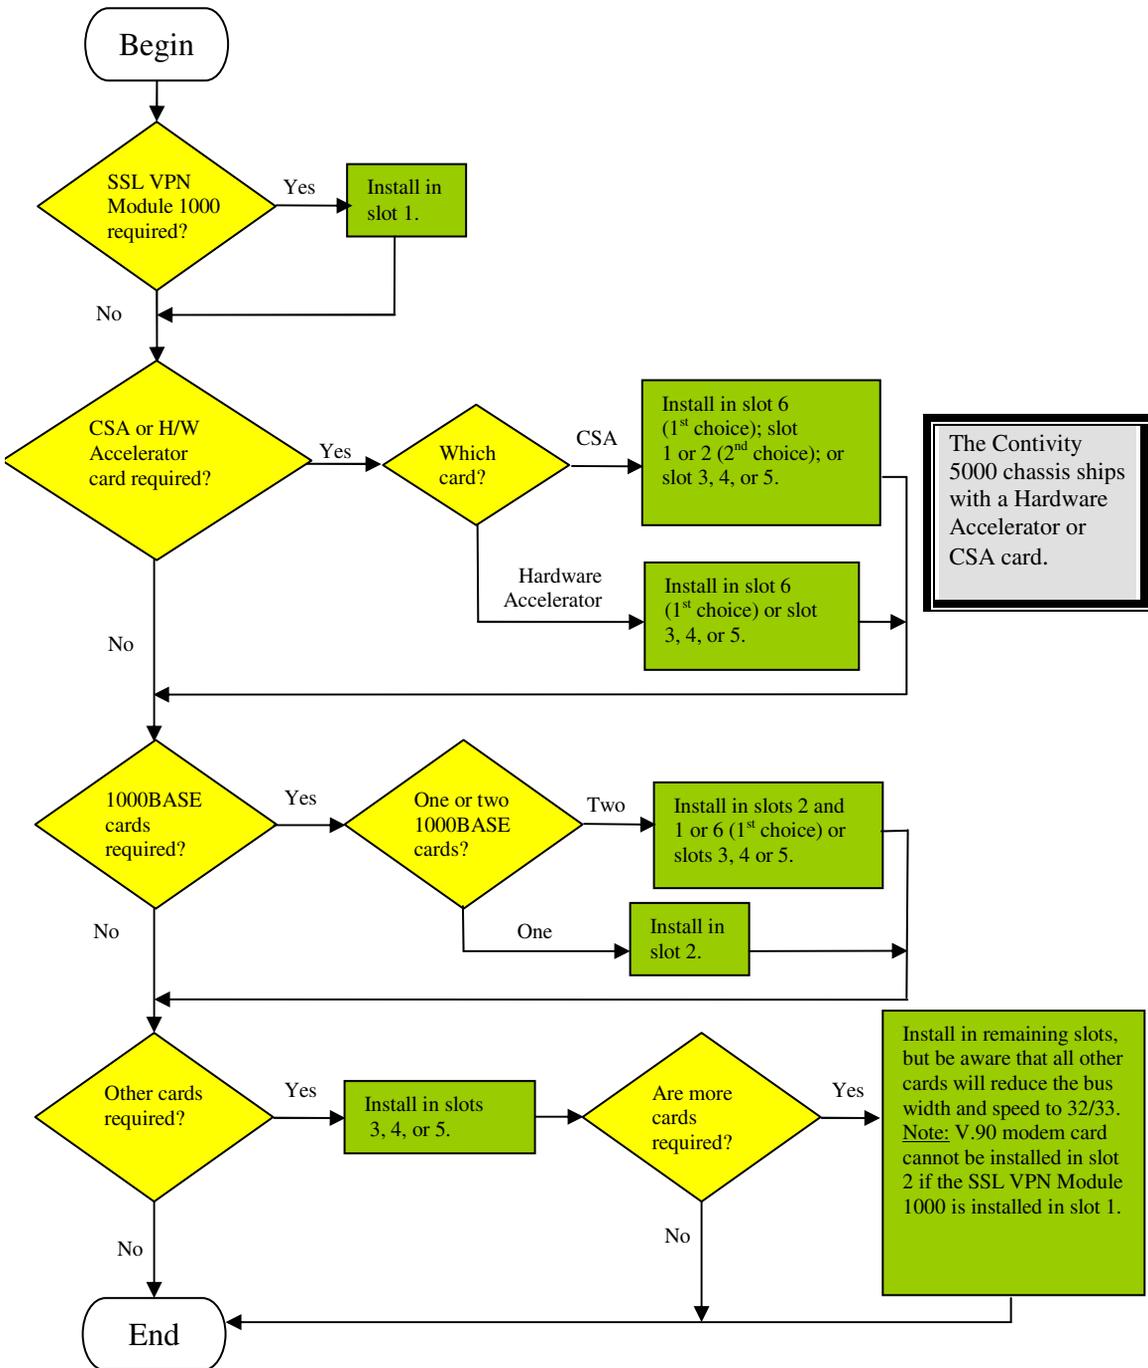

Support for 16 I/O ports

The Contivity 5000 supports a maximum of 16 I/O ports. This number includes the two built-in LAN ports on the gateway. When you provision a Contivity 5000 with I/O cards, do not exceed the 16-port maximum. For example, the following configuration results in 17 I/O ports:

- Two built-in LAN ports (2 ports)
- Three quad T1/E1 CSU/DSU WAN interface cards (12 ports)
- One 1000BASE-SX Ethernet interface card (1 port)
- One (legacy) dual V.35 WAN interface card (2 ports)

Installing and replacing an option card

To install or replace an interface card or a hardware encryption accelerator card:

- 1 Shut down the Contivity 5000 using the Web GUI or the command line interface and then unplug it as described in [“Shutting down the system to add or replace hardware” on page 107](#).




Danger: Turn off the Contivity 5000 and unplug it before you attempt to install an option card.

- 2 Remove the front bezel from the chassis, then remove the chassis from the equipment rack (see [“Removing the front bezel and top cover” on page 108](#)).
- 3 Remove the top cover from the chassis (see [“Removing the front bezel and top cover” on page 108](#)).
- 4 Attach the antistatic wrist strap that was shipped with the Contivity 5000 (see [“Attaching the antistatic wrist strap” on page 112](#)).
- 5 Locate the slot where you plan to install the new or replacement option card (see [Table 11 on page 114](#) for guidelines).
- 6 Remove the filler panel screw and pull out the filler panel (or the option card that you are replacing) from the slot ([Figure 52](#)).
- 7 Lower the new option card into the slot connector and gently press the option card into the connector.

Make sure that the card is seated firmly in the slot. If the card is not seated properly, it will not work.

Figure 52 Installing and removing an option card

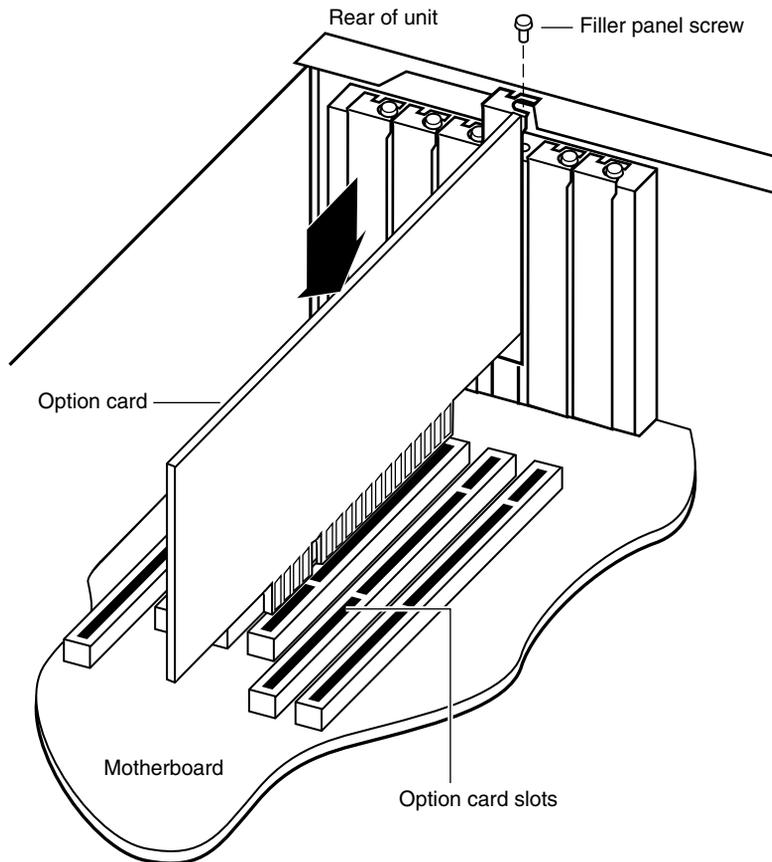

CS2600017B


- 8** Replace the screw that secures the card to the slot (Figure 52).
- 9** Replace the top cover on the chassis (see Figure 47 on page 110).
 - a** Hold the cover at an angle and slide it onto the chassis.
 - b** Using a screwdriver, insert and tighten the 4 screws that secure the cover to the chassis.



Warning: The Contivity 5000 weighs approximately 50 pounds (23 kg). Two people are needed to install the gateway in the equipment rack.

- 10 With two people facing the front of the equipment rack, set the Contivity 5000 on the rack-mount shelf.
- 11 Insert one of the 1/2-in. truss screws through the bottom hole on each side of the shelf into the hole in the rack and tighten the screws.
- 12 Replace the front bezel (Figure 53).
 - a Hold the bezel by its two handles and push it onto the chassis.
 - b Using a screwdriver, tighten the 2 screws to secure the bezel to the chassis.

Figure 53 Replacing the front bezel

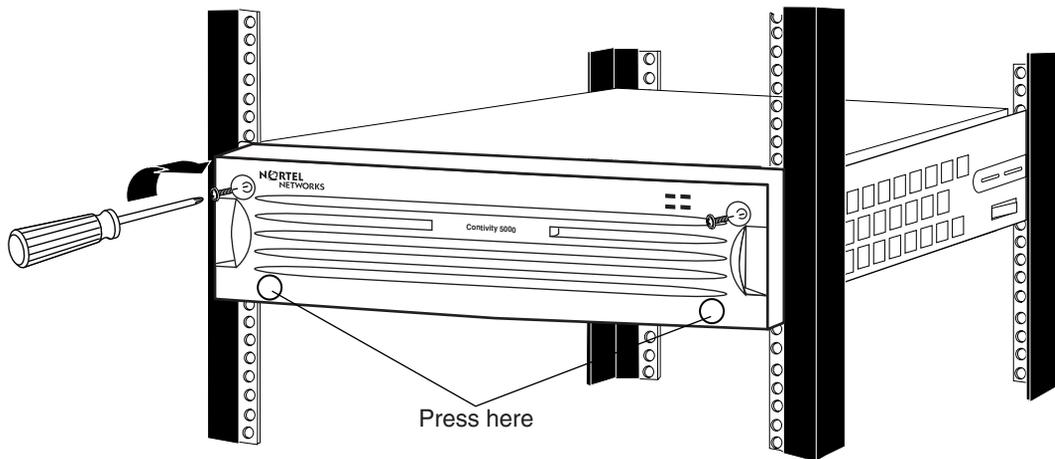

CS260005C


Installing and replacing DIMMs

This section provides information about the placement of dual inline memory modules (DIMMs) in the Contivity 5000 and instructions for installing them.

Considerations for installing DIMMs

The Contivity 5000 has six slots for DIMMs. These six slots are divided into three memory banks (Figure 54).

Figure 54 DIMM memory banks on the Contivity 5000 motherboard

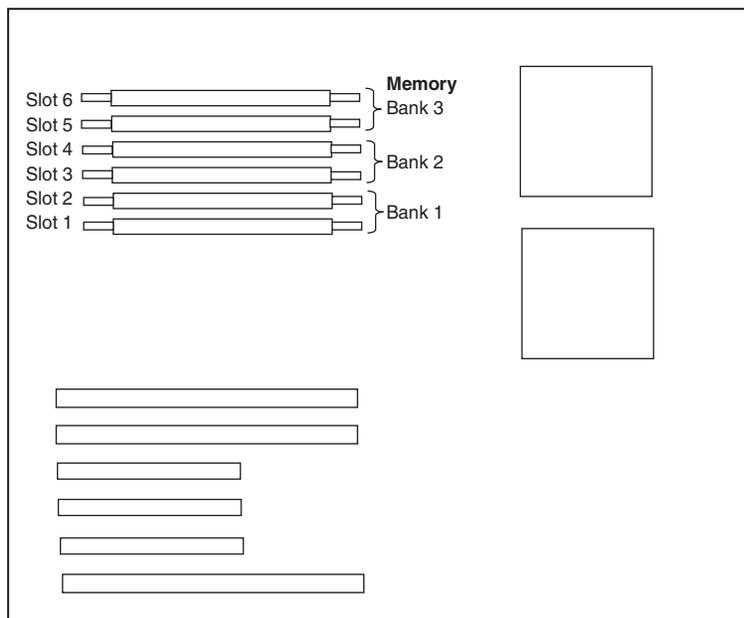

11357EA

Unless you ordered additional memory, the Contivity 5000 is shipped with two 256 MB DIMMs installed in slots 1 and 2 (memory bank 1).

You can upgrade memory by installing one or two additional *pairs* of DIMMs.

- The new DIMMs must be installed in slots 3 and 4 *or* in slots 5 and 6. (Do not remove the DIMMs installed in slots 1 and 2.)

- The new DIMMs to be installed in a memory bank must be of the same type. The memory type is printed on the label on each DIMM ([Figure 55](#) and [Figure 56](#)).




Caution: Do not mix different types of DIMMs within a memory bank. For example, you must install a DIMM of type AVM7232R37C2266K0-A with a second DIMM of the same type in slots 3 and 4 or in slots 5 and 6.

Model numbers for DIMMs include the following:

- Avant: AVM232R37C2266K0-A
- Avant: AVM7232R39C5266K1-A
- Micron: MT9VDDT3272G-265C3


[Figure 55](#) illustrates one type of DIMM that you could receive.

Figure 55 DIMM label: Example 1

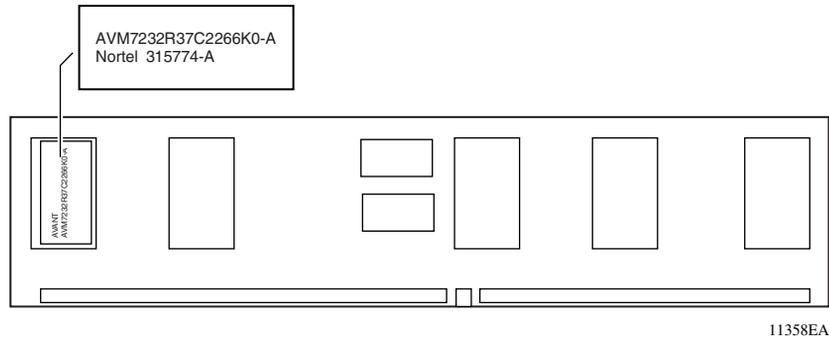

[Figure 56](#) illustrates a second type of DIMM that you could receive.

Figure 56 DIMM label: Example 2

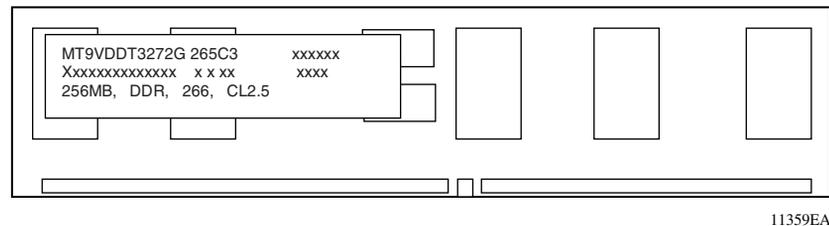

Installing DIMMs

To install or replace a DIMM:

- 1 Shut down the Contivity 5000 using the Web GUI or the command line interface and then unplug it as described in [“Shutting down the system to add or replace hardware” on page 107](#).



Danger: Turn off the Contivity 5000 and unplug it before you attempt to install DIMMs.


- 2 Remove the front bezel from the chassis, then remove the chassis from the equipment rack (see [“Removing the front bezel and top cover” on page 108](#)).
- 3 Remove the top cover from the chassis (see [“Removing the front bezel and top cover” on page 108](#)).
- 4 Attach the antistatic wrist strap that was shipped with the Contivity 5000 (see [“Attaching the antistatic wrist strap” on page 112](#)).
- 5 If you are replacing a DIMM, remove the installed DIMM as follows:
 - a Press down the locking lever on either side of the DIMM ([Figure 57](#)).
 - b Pull the DIMM up to remove it from the slot.



Caution: Replace and install a *pair* of DIMMs of the same type in a single memory bank. See [“Considerations for installing DIMMs” on page 120](#).

- 6 Install each new DIMM by pressing down the locking lever on either side of the empty DIMM slot ([Figure 57](#)).
- 7 Place the new or replacement DIMM in the slot ([Figure 57](#)).

Use the alignment keys to properly position the DIMM in the slot. The alignment keys enforce the proper installation of the DIMM.
- 8 Press the DIMM firmly into the socket.
- 9 Pull up the locking lever on either side of the DIMM to snap it into position.

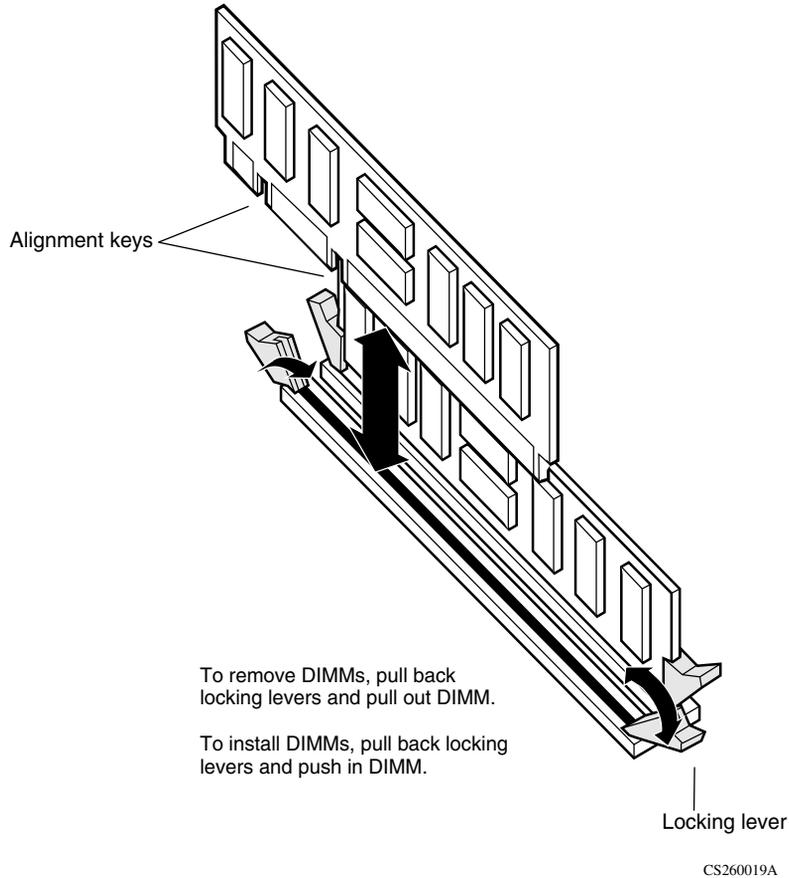Figure 57 Installing and removing a DIMM

10 Replace the top cover on the chassis (see [Figure 47](#) on page 110).

- a** Hold the cover at an angle and slide it onto the chassis.
- b** Using a screwdriver, insert and tighten the 4 screws to secure the cover to the chassis.



Warning: The Contivity 5000 weighs approximately 50 pounds (23 kg). Two people are needed to install the gateway in the equipment rack.

11 With two people facing the front of the equipment rack, set the Contivity 5000 on the rack-mount shelf.


- 12 Insert one of the 1/2-in. truss screws through the bottom hole on each side of the shelf into the hole in the rack and tighten the screws.
- 13 Replace the front bezel (see [Figure 53 on page 119](#)).
 - a Hold the bezel by its two handles and push it onto the chassis.
 - b Using the screwdriver, tighten the 2 screws to secure the bezel to the chassis.

Replacing a power supply

The Contivity 5000 ships with dual hot-swappable 350 W power supplies installed in the chassis. The power supplies share the load of providing power to the Contivity 5000. If one power supply fails, the second one provides all the power required by the gateway.

The power supplies are accessible from the rear of the chassis ([Figure 58](#)).

Figure 58 Location of the Contivity 5000 power supplies

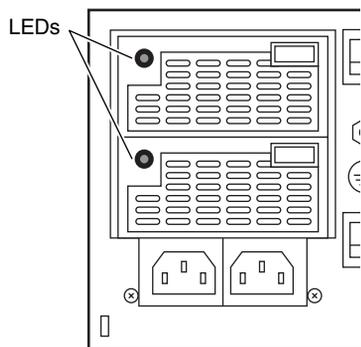

10893EB

If a power supply fails, the following indicators report the failure:

- LED on the power supply lights yellow.
- Front-panel Fail LED lights red.
- Audible alarm beeps.
- Event and system logs report the failure.

Replace a failed power supply as soon as possible.



Caution: Two power supplies must be installed to ensure proper airflow. If a power supply fails and you do not have a replacement power supply, leave the failed power supply installed until a replacement is available.

You can replace a power supply with the system power on or off. (To turn off the system, see [“Shutting down the system to add or replace hardware” on page 107.](#))

To replace a power supply:

- 1 Attach the antistatic wrist strap that was shipped with the Contivity 5000 (see [“Attaching the antistatic wrist strap” on page 112.](#))
- 2 Remove the failed power supply from the chassis.
 - a Squeeze up on the metal portion of the power supply handle that is on the underside of the handle ([Figure 59](#)).
 - b Pull on the handle to remove the power supply from the chassis.
As you pull on the handle, the handle rotates to the left.




Caution: The power supply will feel hot to the touch, even if the Contivity 5000 has been turned off. The power supply is operating as designed.

- c Support the bottom of the power supply as you pull it free of the chassis.


When you remove a power supply, the Contivity 5000 automatically redistributes the power load to the remaining power supply.

Figure 59 Removing a power supply

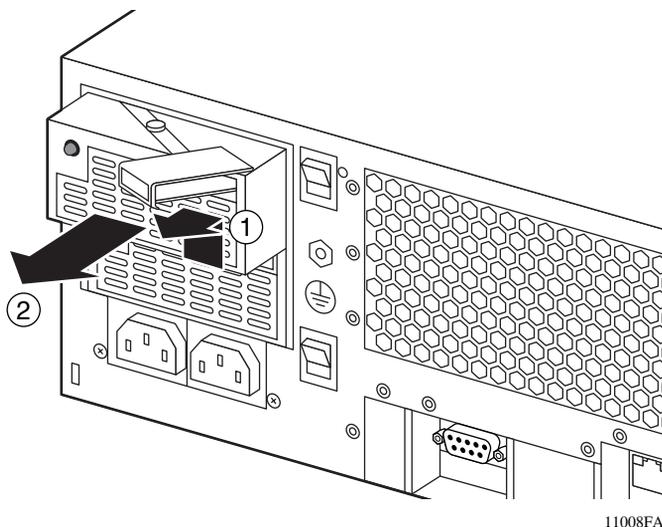

- 3** Insert the replacement power supply into the chassis.
 - a** Guide the power supply into the slot (Figure 60).

Figure 60 Inserting a power supply

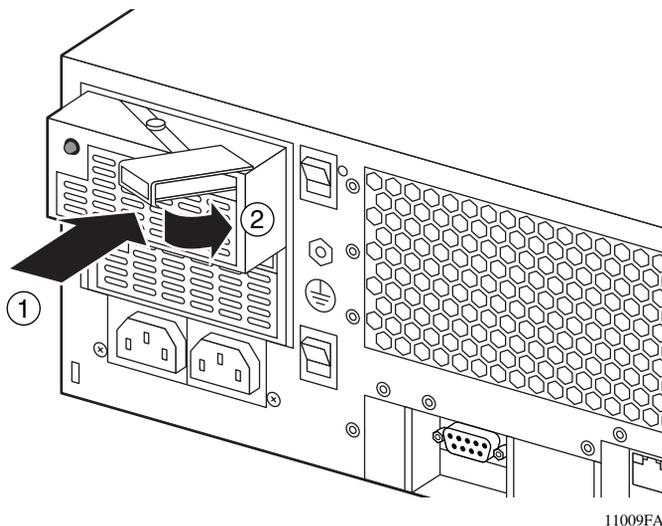


- b** Push the power supply all the way into the slot.
When you push the power supply in, the handle rotates to the right.

When the replacement power supply is correctly inserted into the slot, its LED should light green and the front-panel Fail LED should turn off. The Contivity 5000 automatically redistributes the power load between the two power supplies.

Replacing a hard disk drive

The Contivity 5000 ships with dual hard disk drives installed in the chassis. The hard disk drives are accessible from the front of the chassis (Figure 61). Remove the front bezel to access the hard disk drives.

Figure 61 Location of the Contivity 5000 hard disk drives

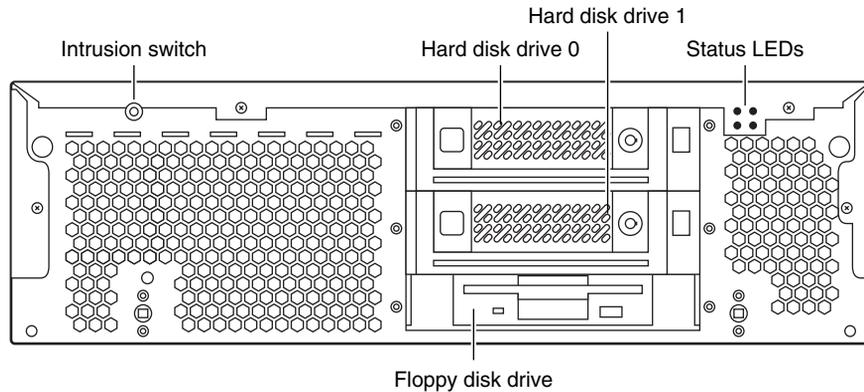

10892EA

The top disk drive slot is slot 0; the bottom disk drive slot is slot 1. The hard disk drive in slot 0 is referred to as “hard drive 0”; the hard disk drive in slot 1 is referred to as “hard drive 1.”

One hard disk drive is the primary drive, that is, the active system disk. The other hard disk drive is the backup drive. By default, the disk drive installed in slot 0 is the primary disk, but you can select either disk drive as the primary on the Admin > Shutdown screen.

The backup disk drive is redundant and is used only to store a copy of the primary disk in case the primary disk fails. You configure the frequency of the backup operation to the redundant drive on the Admin > Auto Backup screen.



Note: For instructions on configuring automatic backups and designating the primary disk drive, see *Managing and Troubleshooting the Contivity Secure IP Services Gateway*.

You can hot-swap the backup disk drive only. To replace the primary disk drive, you must first shut down the system.



Note: If you do not want to shut down the Contivity 5000 to replace the primary disk drive, you can reboot the system from the backup disk. For example, if disk 0 is the primary disk, reboot the gateway from disk 1. After the reboot, disk 1 is the primary disk and you can hot-swap disk 0.

To replace a hard disk drive:

- 1 If you are replacing the primary disk drive, shut down the Contivity 5000. (If you are replacing the backup disk drive, go to step 2.)



Caution: To avoid damage to the hard disk drive, you must shut down the Contivity 5000 before you replace the primary disk drive.

- a Use the Web GUI or the command line interface to shut down the gateway.
 - Web GUI: Choose Admin > Shutdown. Select the option to power off the gateway after shutdown.
 - Command line interface: Use the **reload** command to shut down the system. For example, enter **reload power-off disable-logins "Upgrade hardware"**

For the complete syntax of the **reload** command, see the *Reference for the Contivity Secure IP Services Gateway Command Line Interface*.

- b Wait for the system to shut down. You may need to wait several minutes.
- c Go to step 3.

- 2 If you are replacing the secondary disk drive, save any data that has not yet been saved to the hard disk from the disk cache.
 - a Using the Web GUI, go to the Admin > File System screen and select the backup disk drive from the Devices list.
 - b Click on the Prepare button to prepare the hard drive for removal.
- 3 Remove the front bezel from the chassis (see “[Removing the front bezel and top cover](#)” on page 108).
- 4 Attach the antistatic wrist strap that was shipped with the Contivity 5000 (see “[Attaching the antistatic wrist strap](#)” on page 112).
- 5 Insert the hard disk drive key into the lock and turn it to the right (Figure 62). The LED displays the letter “U” (for “unlocked”).


You may need to push the key in before you can turn it. The key should now be straight up and down.



Note: Turning the key shuts off the power to the hard disk drive.

- 6 Grasp the handle on the hard disk drive and pull the drive out of the chassis (Figure 62).


Figure 62 Removing a hard disk drive

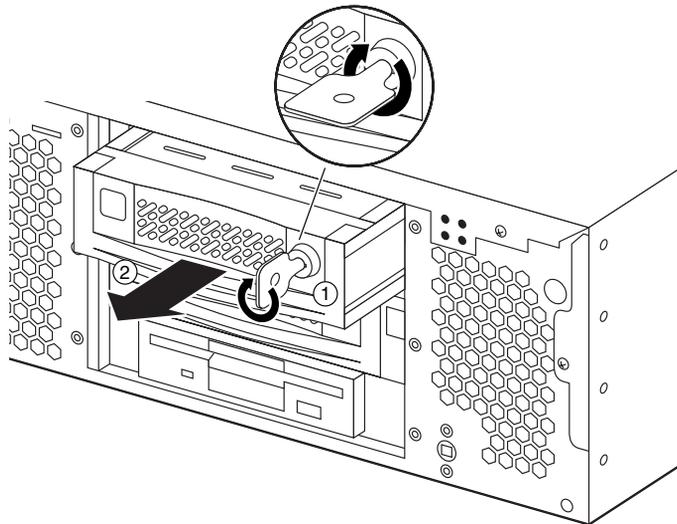

11010FA

- 7 Insert the replacement hard drive into the chassis and push it all the way into the chassis.
- 8 Insert the hard disk drive key into the lock and turn the key left (Figure 63). Make sure that the hard disk drive LED displays the drive number.

Figure 63 Inserting a hard disk drive

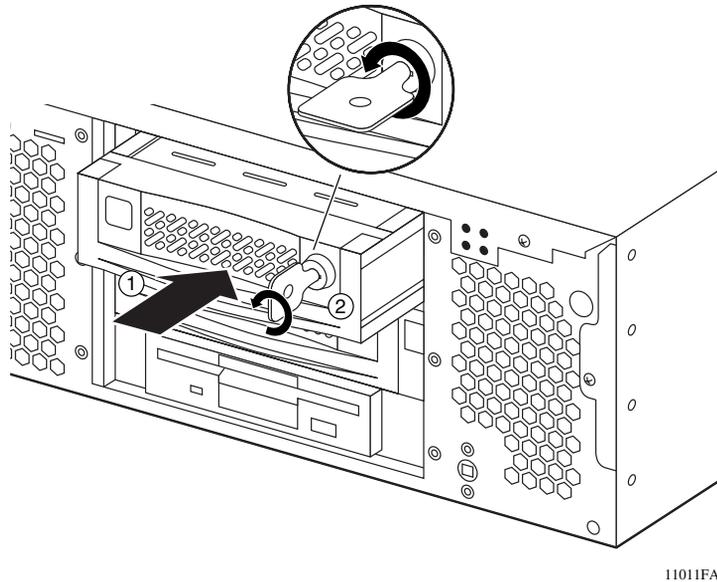


- 9 Replace the front bezel (see Figure 53 on page 119).
 - a Hold the bezel by its two handles and push it onto the chassis.
 - b Using the screwdriver, tighten the 2 screws to secure the bezel to the chassis.
- 10 If you shut down the gateway before you replaced the hard disk drive, press and release the power switch on the rear of the Contivity 5000 and wait for the gateway to boot.
- 11 Use your Web browser to navigate to the Contivity 5000.
- 12 Go to the Admin > File System screen and select the new disk drive from the Devices list.
- 13 Click on the Enable button.

Replacing a fan tray

The Contivity 5000 ships with two fan trays installed in the chassis: one tray in the front of the chassis and the other in the rear of the chassis (Figure 64).

Figure 64 Location of the Contivity 5000 fan trays

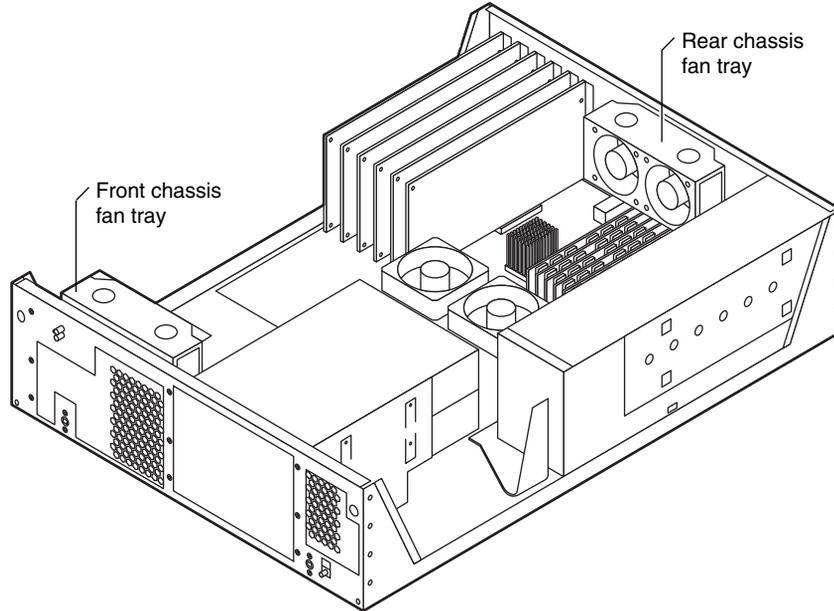

10894FA

If a fan fails, the following indicators report the failure:

- Front-panel Fail LED lights red.
- Audible alarm beeps.
- Event and system logs report the failure.



Caution: Replace a failed fan tray as soon as possible. Overheating can damage Contivity 5000 components.

To replace a fan tray:


- 1 Shut down the Contivity 5000 using the Web GUI or the command line interface and then unplug it as described in [“Shutting down the system to add or replace hardware” on page 107](#).



Danger: Turn off the Contivity 5000 and unplug it before you attempt to replace a fan tray.

- 2 Remove the front bezel from the chassis, then remove the chassis from the equipment rack (see [“Removing the front bezel and top cover” on page 108](#)).
- 3 Remove the top cover from the chassis (see [“Removing the front bezel and top cover” on page 108](#)).
- 4 Attach the antistatic wrist strap that was shipped with the Contivity 5000 (see [“Attaching the antistatic wrist strap” on page 112](#)).
- 5 Locate the connectors on the system board where the two fan plugs for the fan tray are attached ([Figure 65](#)).

Figure 65 Removing a fan tray

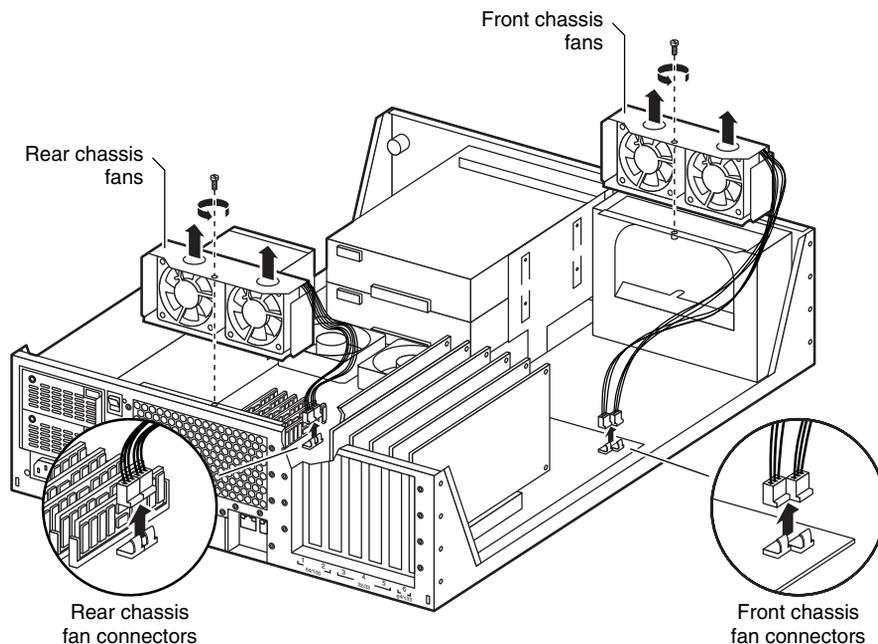

11049FA

Each fan tray has a bundle of cables attached to it. The cables are terminated by two 3-hole plugs. When you replace a fan tray, you must attach the fan plugs to the correct connectors on the system board. (However, either plug can go onto either of the connectors.)



Caution: Do not remove the fan tray cables from the system board until you are certain that you know where to attach them again when you replace the fan tray (see [Figure 65 on page 132](#)).

- 6 After you note the location of the fan plugs, disconnect the plugs for the fan tray that you are replacing from the system board.
- 7 Remove the cables from the plastic hooks that secure them to the chassis base and to the fan tray itself.
- 8 Using a flat-tip screwdriver, unscrew the single captive screw in the center of the fan tray (see [Figure 65 on page 132](#)).
- 9 Insert two fingers into the holes on top of the fan tray and pull it straight up, out of its enclosure.

The front fan tray is contained in a bay; the rear fan tray rests on a metal support.


- 10 Insert two fingers into the holes in the replacement fan tray and lower it straight down to install it ([Figure 66](#)).

If you are replacing the front fan tray, the fans face the outside of the chassis; for the rear fan tray, the fans face the inside of the chassis.



Note: There is only one type of fan tray for the Contivity 5000. You install the same fan tray in the front or the rear of the chassis.

- 11 Insert the single captive screw into the hole in the bay (front fan tray) or the support (rear fan tray) and use the flat-tip screwdriver to secure the screw ([Figure 66](#)).
- 12 Secure the cables to the side of the fan tray and to the chassis base by inserting the cable bundles into the small plastic hooks.

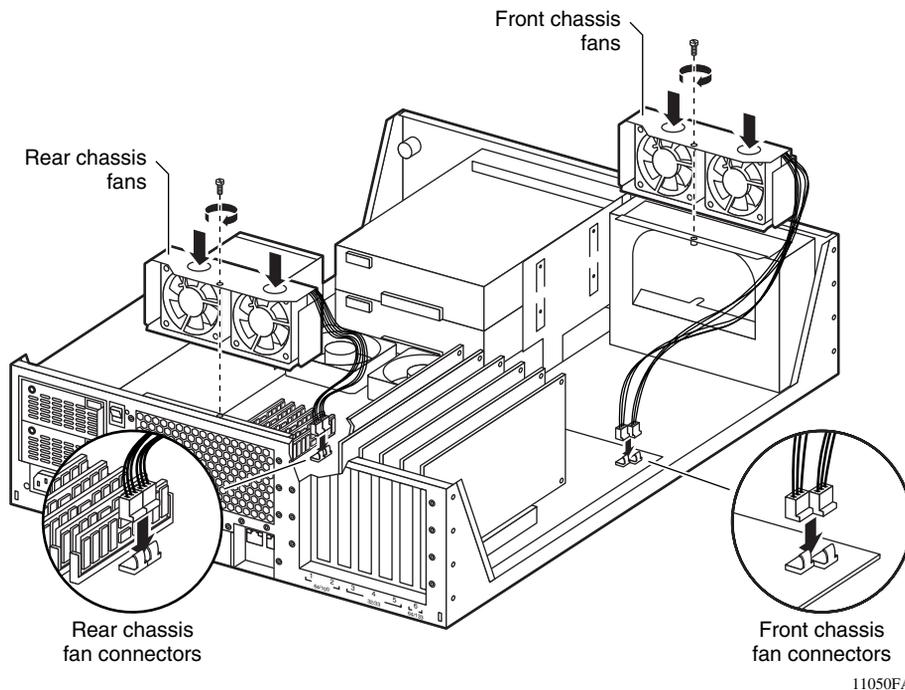Figure 66 Installing a fan tray

- 13** Attach the two fan plugs to the correct 3-pin connectors on the system board (Figure 66). Either plug can go onto either connector.

When you replace the rear fan tray, make sure that the excess cable length is neatly folded below the top of the fan tray.

- 14** Replace the top cover on the chassis (see Figure 47 on page 110).
- a** Hold the cover at an angle and slide it onto the chassis.
 - b** Using a screwdriver, insert and tighten the 4 screws to secure the cover to the chassis.



Warning: The Contivity 5000 weighs approximately 50 pounds (23 kg). Two people are needed to install the gateway in the equipment rack.

- 15** With two people facing the front of the equipment rack, set the Contivity 5000 on the rack-mount shelf.

- 16** Insert one of the 1/2-in. truss screws through the bottom hole on each side of the shelf into the hole in the rack and tighten the screws.
- 17** Replace the front bezel (see [Figure 53 on page 119](#)).
 - a** Hold the bezel by its two handles and push it onto the chassis.
 - b** Using the screwdriver, tighten the 2 screws to secure the bezel to the chassis.

Appendix A

Technical specifications

The Contivity Secure IP Services Gateway provides PCI slots that support interface cards and one or two hardware encryption accelerator cards, depending on the Contivity model.



Note: To find out which option cards are supported in your Contivity gateway, see the price list or the appropriate chapter in this guide.

This appendix provides information about the option cards, including the connector and the cable pinouts for each supported network interface card.

Topic	Page
Contivity Security Accelerator (CSA) and Hardware Accelerator cards	138
SSL VPN Module 1000	139
10/100BASE Ethernet interface card	140
1000BASE-T Ethernet interface card	142
1000BASE-SX Ethernet interface card	143
56/64K CSU/DSU WAN interface card	144
ADSL WAN interface card	146
ISDN BRI interface card	147
T1/E1 CSU/DSU WAN interface card	149
Quad T1/E1 CSU/DSU WAN interface card	151
V.90 modem interface card	152
Single V.35/X.21 WAN interface card	152
Dual V.35 WAN interface card	156
HSSI WAN interface card	158
External modem adapter for the Contivity 1010/1050/1100	160

Contivity Security Accelerator (CSA) and Hardware Accelerator cards

Nortel Networks supports two option cards that perform bulk encryption and compression algorithms for IPsec tunnel traffic:

- Contivity Security Accelerator (CSA) card
The CSA card uses a single Hifn* 7854 chip for encryption and compression and has 64 MB of onboard RAM. It supports AES-128 cryptography with SHA-1 authentication and triple DES cryptography with either MD5 or SHA-1 authentication.
- Hardware Accelerator card
The Hardware Accelerator card uses a single Hifn 7811 chip for encryption and compression. It performs triple DES and DES cryptography, LZS* compression, and MD5 or SHA-1 authentication.

The CSA card is the successor to the Hardware Accelerator card. Along with providing support for AES, the CSA card provides increased encryption throughput and improved compression performance.



Note: The CSA card has one green LED; the Hardware Accelerator card has no LEDs.

At startup, whenever an accelerator card is manually enabled, or whenever the accelerator recovers from a failure, the power-on self-test (POST) verifies the integrity of the hardware. This test includes validation of the accelerator's encryption, MAC, and compression algorithms against their software counterparts. In the event POST fails, the accelerator is set offline.


For more information about the Contivity Security Accelerator card and the Hardware Accelerator card and instructions for configuring these cards, see the guide *Configuring Advanced Features for the Contivity Secure IP Services Gateway*.

SSL VPN Module 1000

The SSL VPN Module 1000 provides complete SSL VPN processing capability to the Contivity gateway. This module provides a unified solution for IPsec and remote access SSL VPN.

Figure 67 shows the SSL VPN Module 1000.

Figure 67 SSL VPN Module 1000

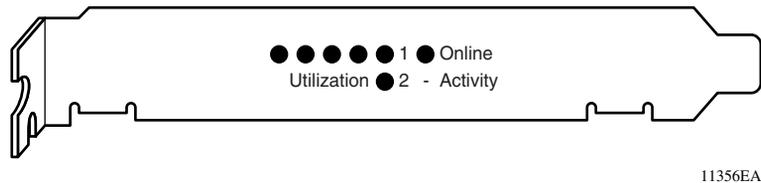

The SSL VPN Module 1000 has no external access: all traffic to and from the SSL VPN Module 1000 card occurs over an internal high-speed link.

The SSL VPN Module 1000 is supported on Contivity 5000, 2700, and 1740 gateways running Contivity Version 5.0 software. You must install the SSL VPN Module 1000 in slot 1 of the Contivity 5000, 2700, or 1740.

The Contivity gateway distinguishes between the services that it provides and the services that the SSL VPN Module 1000 provides and immediately forwards the appropriate traffic to the SSL VPN module.



Note: For complete information about the SSL VPN Module 1000 and instructions for configuring it, see *Configuring SSL VPN Services on the Contivity Secure IP Services Gateway*.

10/100BASE Ethernet interface card

The 10/100BASE Ethernet interface card has a single RJ-45 connector that provides the signals needed to interface to 10BASE-T and 100BASE-TX Ethernet equipment.

Figure 68 shows the 10/100BASE Ethernet interface card.



Note: The 10/100BASE Ethernet interface card for the Contivity 1100 looks very similar to Figure 68. However, the cable pinouts are different (see Table 14 on page 141).

Figure 68 10/100BASE Ethernet interface card



CS260009A

Depending on whether you will use the interface for 10BASE-T or 100BASE-TX operation, select cables for the interface as follows:

- 100BASE-TX connections require Category 5 twisted-pair wire. The 100BASE-TX specification supports 100 Mb/s transmission over two pairs of Category 5 twisted-pair Ethernet wiring: one pair each for transmit and receive operations.

The maximum recommended cable segment length is 100 meters between a 100BASE-TX repeater and a workstation (due to signal timing requirements). This wiring scheme complies with the EIA 568 wiring standard.

- 10BASE-T connections can use Category 3, 4, or 5 twisted-pair wiring.

Table 13 provides the port pinouts for the 10/100BASE Ethernet interface card installed in all Contivity gateways other than the Contivity 1100.

Table 13 10/100BASE Ethernet port pinouts (all models except Contivity 1100)

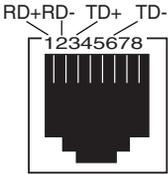
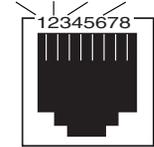
 CS260010A	Pin	Description
	1	RD +
	2	RD -
	3	TD +
	6	TD -

Table 14 provides the port pinouts for the 10/100BASE Ethernet interface card installed in the Contivity 1100.

Table 14 10/100BASE Ethernet port pinouts (Contivity 1100 only)


 CS260010A	Pin	Description
	1	TX +
	2	TX -
	3	RX +
	6	RX -

1000BASE-T Ethernet interface card

The 1000BASE-T Ethernet interface card is generally used to connect to Gigabit Ethernet interfaces on other devices in your network, as well as to provide increased throughput. This interface card has a single RJ-45 connector.

Figure 69 shows the 1000BASE-T Ethernet interface card.

Figure 69 1000BASE-T Ethernet interface card

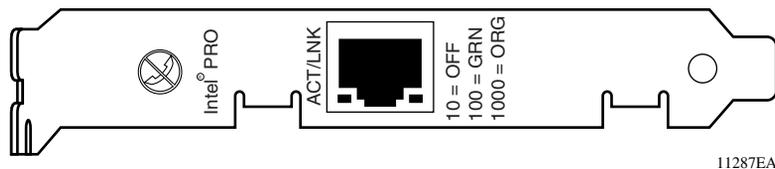


The port on the 1000BASE-T Ethernet interface card accommodates an RJ-45 straight-through cable. Select cables for this port as follows:

- For 1000BASE-T operation, use Category 5 four-pair Ethernet wiring. The cable must comply with the TIA 568 wiring specification. The maximum recommended cable segment length is 100 meters.
- For 100BASE-TX operation, use Category 5 twisted-pair wiring: one pair each for transmit and receive operations. The cable must comply with the EIA 568 wiring specification. The maximum recommended cable segment length is 100 meters.
- For 10BASE-T operation, use Category 3, 4, or 5 twisted-pair wiring.

Table 15 provides the 1000BASE-T Ethernet port pinouts.

Table 15 1000BASE-T Ethernet port pinouts

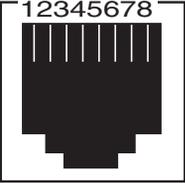
 CS260010A	Pin	Description
	1	TP0+
	2	TP0-
	3	TP1+
	4	TP2+
	5	TP2-
	6	TP1-
	7	TP3+
	8	TP3-

1000BASE-SX Ethernet interface card

The 1000BASE-SX Ethernet interface card implements short-wavelength (850 nm) laser transmissions. This interface card is generally used to connect to fiber Gigabit Ethernet interfaces on other devices in your network, as well as to provide increased throughput. The 1000BASE-SX Ethernet interface card has a single type LC fiber connector.

Figure 70 shows the 1000BASE-SX Ethernet interface card.

Figure 70 1000BASE-SX Ethernet interface card

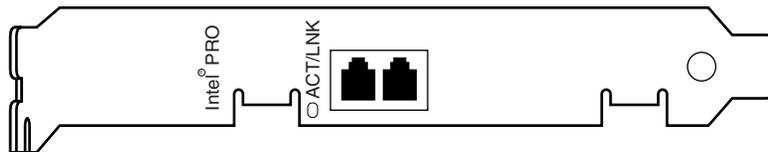

11288EA

The port on the 1000BASE-SX Ethernet interface card accommodates a multimode fiber (MMF) cable that meets MMF standards. Select fiber cable for this interface as follows:

- 50-micron MMF cable: provides a distance range of 500—550 meters (m)
- 62.5-micron MMF cable: provides a distance range of 220—275 m


You can order a 10-foot MMF cable from Nortel Networks:

- Order no. DM0011117 provides an LC-to-LC connector
- Order no. DM0011118 provides an LC-to-SC connector

56/64K CSU/DSU WAN interface card

The 56/64K CSU/DSU WAN interface card has a single RJ-48 connector that provides the signals needed to interface to network equipment. [Figure 71](#) shows the 56/64K CSU/DSU WAN interface card.

Figure 71 56/64K CSU/DSU WAN interface card

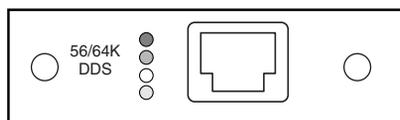

10972EA

The connector on the 56/64K CSU/DSU WAN interface card accommodates an 8-pin RJ-48 modular patch cord. These cables are commonly sold as Category 5, or Ethernet, cables.



Note: Nortel Networks does not supply an interface cable with the 56/64K CSU/DSU WAN interface card.

The cable you use should be wired in accordance with EIA-568-A wiring style. This wiring style ensures that the transmit signal (pins 1 and 2) and the receive signal (pins 7 and 8) are carried on a twisted pair inside the patch cord. The use of factory-made patch cords is strongly recommended.

You connect the 56/64K CSU/DSU WAN interface card to the service provider network using a straight-through cable or a crossover cable, depending on how the service provider wired its jack.

- For a straight-through connection, you can use a standard Category 5 (Ethernet) straight-through cable.
- For a crossover connection, you cannot use a standard Category 5 crossover cable. The 56/64K CSU/DSU crossover cable and the Ethernet crossover cable are not interchangeable.

Table 16 provides the 56/64K CSU/DSU cable pinouts for a crossover connection.

Table 16 56/64K CSU/DSU cable pinouts for crossover connection

Nortel Networks termination		Remote termination	
Signal	Pin # to	Pin #	Signal
Transmit tip	1	7	Receive tip
Transmit ring	2	8	Receive ring
not used	3	3	not used
not used	4	4	not used
not used	5	5	not used
not used	6	6	not used
Receive tip	7	1	Transmit tip
Receive ring	8	2	Transmit ring

The cable will operate properly if pins 3, 4, 5, and 6 are not connected.



Caution: For crossover connections, do not use Ethernet cable. The link will not be established.

Table 17 provides the 56/64K CSU/DSU cable pinouts for a straight-through connection.

Table 17 56/64K CSU/DSU cable pinouts for straight-through connection

Nortel Networks termination		Remote termination	
Signal	Pin # to	Pin #	Signal
Transmit tip	1	1	Transmit tip
Transmit ring	2	2	Transmit ring
not used	3	3	not used
not used	4	4	not used
not used	5	5	not used
not used	6	6	not used
Receive tip	7	7	Receive tip
Receive ring	8	8	Receive ring

ADSL WAN interface card


The ADSL Annex A and Annex B WAN interface cards have a single RJ-11 connector that provides the signals needed to interface to the digital subscriber line access multiplexer (DSLAM) and to telephone equipment.

Figure 72 shows the ADSL WAN interface card.



Note: The ADSL Annex A and ADSL Annex B cards look identical.

Figure 72 ADSL WAN interface card

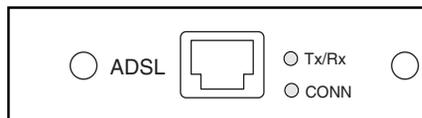

10972EA

Included in the accessory box is a 7-foot RJ-11 cable to attach to the DSLAM.

Table 18 provides the ADSL port pinouts.

Table 18 ADSL cable pinouts

Pin	Function
1	N/C
2	Tip
3	Ring
4	N/C

ISDN BRI interface card

The ISDN BRI S/T and ISDN BRI U interface cards have a single RJ-45 connector that provides the signals needed to interface to ISDN equipment. (To connect the ISDN BRI S/T interface to the ISDN network, you must attach an external NT-1 device to the RJ-45 connector.)

Figure 73 shows the ISDN BRI S/T interface card.

Figure 73 ISDN BRI S/T interface card


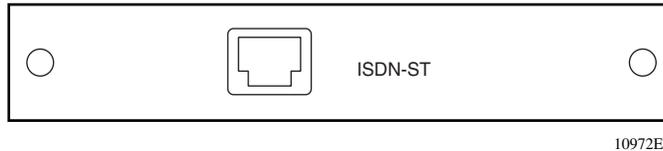


Figure 74 shows the ISDN BRI U interface card.

Figure 74 ISDN BRI U interface card



The connector on the ISDN BRI S/T and ISDN BRI U interface cards accommodates an 8-pin RJ-45 modular patch cord. These cables are commonly sold as Category 5, or Ethernet, cables.

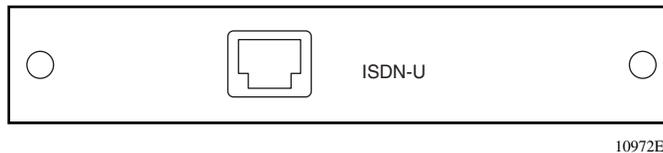

Note: Nortel Networks does not supply a cable with the ISDN BRI interface cards.

Table 19 provides the ISDN BRI S/T cable pinouts.

Table 19 ISDN BRI S/T cable pinouts

Pin	Function
1	N/C
2	N/C
3	Receive +
4	Transmit +
5	Transmit -
6	Receive -
7	N/C
8	N/C

Table 20 provides the ISDN BRI U cable pinouts.


Table 20 ISDN BRI U cable pinouts

Pin	Function
1	N/C
2	N/C
3	N/C
4	U interface network connection (tip)
5	U interface network connection (ring)
6	N/C
7	N/C
8	N/C

T1/E1 CSU/DSU WAN interface card

The T1/E1 CSU/DSU WAN interface card has a single connector that provides the signals needed to interface to T1 or E1 equipment. [Figure 75](#) shows the T1/E1 CSU/DSU WAN interface card. This interface card ships as a half-height card and as a full-height card.

Figure 75 T1/E1 CSU/DSU WAN interface card

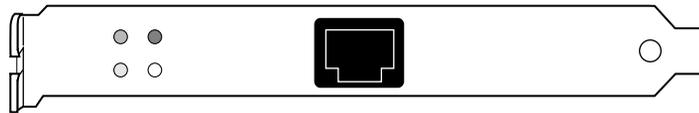

CS160012A



Note: For E1 service, you must install the half-height version of the T1/E1 CSU/DSU WAN interface card.

The connector on the T1/E1 CSU/DSU WAN interface card accommodates an 8-pin RJ-48 modular patch cord. These cables are commonly sold as Category 5, or Ethernet, cables.



Note: Nortel Networks does not supply an interface cable with the T1/E1 CSU/DSU WAN interface card.

The cable you use should be wired in accordance with EIA-568-A wiring style. This wiring style ensures that the transmit signal (pins 4 and 5) and the receive signal (pins 1 and 2) are carried on a twisted pair inside the patch cord. The use of factory-made patch cords is strongly recommended.

You connect the T1/E1 CSU/DSU WAN interface card to the service provider network using a straight-through cable or a crossover cable, depending on how the service provider wired its jack.

- For a straight-through connection, you can use a standard Category 5 (Ethernet) straight-through cable.
- For a crossover connection, you cannot use a standard Category 5 crossover cable. The T1/E1 CSU/DSU crossover cable and the Ethernet crossover cable are not interchangeable.

Table 21 provides the T1/E1 CSU/DSU cable pinouts for a crossover connection.

Table 21 T1/E1 CSU/DSU cable pinouts for crossover connection

Standard-wired end 8-pin male	Signal name	Pair number and conductor	Special-wired end 8-pin male
1	RXDA<-TXDA	wht/org pair 2A	5
2	RXDB<-TXDB	orange pair 2B	4
3	not used	wht/grn pair 3A	3
4	TXDB->RXDB	blue pair 1B	2
5	TXDA->RXDA	wht/blu pair 1A	1
6	not used	green pair 3B	6
7	not used	wht/brn pair 4A	7
8	not used	brown pair 4B	8

The cable will operate properly if pins 3, 6, 7, and 8 are not connected.



Caution: For crossover connections, do not use Ethernet cable. The T1/E1 CSU/DSU will not work to specifications. Data may be corrupted.

Table 22 provides the T1/E1 CSU/DSU cable pinouts for a straight-through connection.


Table 22 T1/E1 CSU/DSU cable pinouts for straight-through connection

Nortel Networks termination		Remote termination	
Signal	Pin # to Pin #	Signal	
Receive A (RXDA)	1	1	Receive A (RXDA)
Receive B (RXDB)	2	2	Receive B (RXDB)
not used	3	3	not used
Transmit B (TXDB)	4	4	Transmit B (TXDB)
Transmit A (TXDA)	5	5	Transmit A (TXDA)
not used	6	6	not used
not used	7	7	not used
not used	8	8	not used

Quad T1/E1 CSU/DSU WAN interface card

The quad T1/E1 CSU/DSU WAN interface card has four connectors that provide the signals needed to interface to T1 or E1 equipment. [Figure 76](#) shows the quad T1/E1 CSU/DSU WAN interface card.

Figure 76 Quad T1/E1 CSU/DSU WAN interface card

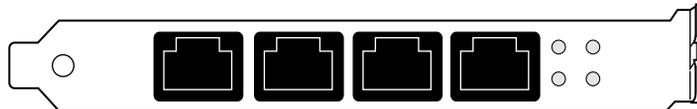

CS160012A

Each connector on the quad T1/E1 CSU/DSU WAN interface card accommodates an 8-pin RJ-48 modular patch cord. These cables are commonly sold as Category 5, or Ethernet, cables.



Note: Nortel Networks does not supply cables with the quad T1/E1 CSU/DSU interface card.

The cables you use should be wired in accordance with EIA-568-A wiring style. This wiring style ensures that the transmit signal (pins 4 and 5) and the receive signal (pins 1 and 2) are carried on a twisted pair inside the patch cord. The use of factory-made patch cords is strongly recommended.

You connect the quad T1/E1 CSU/DSU WAN interface card to the service provider network using a straight-through cable or a crossover cable, depending on how the service provider wired its jack.


- For a straight-through connection, you can use a standard Category 5 (Ethernet) straight-through cable.
- For a crossover connection, you cannot use a standard Category 5 crossover cable. The T1/E1 CSU/DSU crossover cable and the Ethernet crossover cable are not interchangeable.

For information about the cable pinouts for a crossover connection, see [Table 21 on page 150](#). For information about the cable pinouts for a straight-through connection, see [Table 22 on page 150](#).

V.90 modem interface card

The V.90 modem interface card has two RJ-11 connectors that provide the signals needed to interface to an incoming telephone line and to telephone equipment. [Figure 77](#) shows the V.90 modem interface card.

Figure 77 V.90 modem interface card

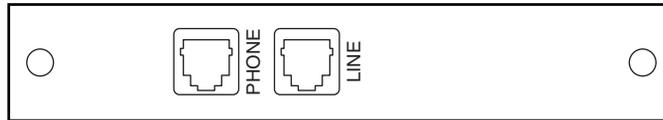

10973EA

Included in the accessory box is a 7-foot RJ-11 cable to attach to a telephone jack.

[Table 23](#) provides the V.90 modem port cable pinouts.


Table 23 V.90 modem cable pinouts

Pin	Function
1	N/C
2	Tip
3	Ring
4	N/C

Single V.35/X.21 WAN interface card

The single V.35/X.21 WAN interface card has a single DB28S connector that provides the signals needed to interface to V.35 and X.21 equipment. [Figure 78](#) shows the single V.35/X.21 WAN interface card.

Figure 78 Single V.35/X.21 WAN interface card

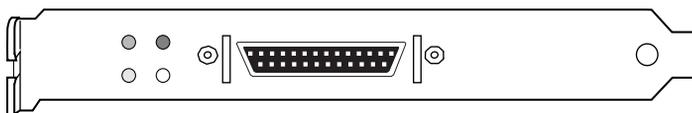

CS160011A

You need a DSU/CSU (digital service unit/channel service unit) between the WAN connection and the gateway. You can order a V.35 or X.21 cable to attach to the connector. This cable enables the WAN adapter to function as DTE (data terminal equipment).

[Table 24](#) provides the V.35 cable pinouts. [Table 25 on page 154](#) provides the X.21 cable pinouts. (The pair suffix A or B refers to an individual wire within a twisted pair.)

Table 24 V.35 cable pinouts

Standard-wired end 28-pin male	Signal name	Pair number and conductor	Special-wired end 34-pin male	Notes
2	TXDA	pair 1A	P	
14	TXDB	pair 1B	S	
3	RXDA	pair 2A	R	
16	RXDB	pair 2B	T	
15	TXCA	pair 3A	Y	
12	TXCB	pair 3B	AA	
17	RXCA	pair 4A	V	
9	RXCB	pair 4B	X	
24	SCTEA	pair 5A	U	
11	SCTEB	pair 5B	W	
4	RTSA	pair 6A	C	
19	RTSB	pair 6B	no conn	Note 1
5	CTSA	pair 7A	D	
13	CTSB	pair 7B	no conn	Note 1
6	DSRA	pair 8A	E	
22	DSRB	pair 8B	J	
20	DTRA	pair 9A	H	
23	DTRB	pair 9B	no conn	Note 1
8	DCDA	pair 10A	F	
10	DCDB	pair 10B	no conn	Note 1
18	LL	pair 11A	L	
21	RL	pair 11B	N	

Table 24 V.35 cable pinouts (continued)

Standard-wired end 28-pin male	Signal name	Pair number and conductor	Special-wired end 34-pin male	Notes
25	TM	pair 12A	NN	
26	M0<-SIGNAL GROUND	pair 12B	B	Note 2
27	M1<-SIGNAL GROUND	pair 13A	B	Note 2
28	M2	pair 13B	no conn	Note 1
1	SHIELD	pair 14A	A	Notes 3,4
7	SIGNAL GROUND	pair 14B	B	Notes 2,4

The following notes apply to the single V.35 DTE cable:

1. The term "no conn" means the wire is not connected to a pin in the 34-pin connector.
2. Wires 12B, 13A, and 14B connect to pin B in the 34-pin connector.
3. At each end, the cable shield and connector shell must connect respectively to pin A of the 34-pin connector and pin 1 of the standard 28-pin connector.
4. Do not connect Shield to Signal Ground because these are separate signals.

[Table 25](#) provides the X.21 cable pinouts. (The pair suffix A or B refers to an individual wire within a twisted pair.)

Table 25 X.21 cable pinouts

Standard-wired end 28-pin male	Signal name	Pair number and conductor	Standard-wired end 15-pin male	Notes
2	TXDA	pair 1A	2	
14	TXDB	pair 1B	9	
3	RXDA	pair 2A	4	
16	RXDB	pair 2B	11	
15	TXCA	pair 3A	6	
12	TXCB	pair 3B	13	
17	RXCA	pair 4A	pair 5A	Note 1
9	RXCB	pair 4B	pair 5B	Note 1
24	SCTEA	pair 5A	pair 4A	Note 1
11	SCTEB	pair 5B	pair 4B	Note 1
4	RTSA	pair 6A	3	
19	RTSB	pair 6B	10	

Table 25 X.21 cable pinouts (continued)

Standard-wired end 28-pin male	Signal name	Pair number and conductor	Standard-wired end 15-pin male	Notes
5	CTSA	pair 7A	5	
13	CTSB	pair 7B	12	
6	DSRA	pair 8A	no conn	Note 2
22	DSRB	pair 8B	no conn	Note 2
20	DTRA	pair 9A	no conn	Note 2
23	DTRB	pair 9B	no conn	Note 2
8	DCDA	pair 10A	no conn	Note 2
10	DCDB	pair 10B	no conn	Note 2
18	LL	pair 11A	no conn	Note 2
21	RL	pair 11B	no conn	Note 2
25	TM	pair 12A	no conn	Note 2
26	M0	pair 12B	no conn	Note 2
27	M1	pair 13A	no conn	Note 2
28	M2<-SIGNAL GROUND	pair 13B	8	Note 3
1	SHIELD	pair 14A	1	Note 4,5
7	SIGNAL GROUND	pair 14B	8	Note 3,5

The following notes apply to the single X.21 cable:


1. Wires of pair 4 connect to wires of pair 5, but not to any pins in the DA-15.
2. The term "no conn" means the wire is not connected to a pin in the 15-pin connector.
3. Wires 13B and 14B connect to pin 8 in the 15-pin connector.
4. At each end, the cable shield and connector shell must connect to pin 1 of the connector.
5. Do not interconnect Shield to Signal Ground because these are separate signals.

Dual V.35 WAN interface card

The dual V.35 WAN interface card has two DB26 connectors that provide the signals needed to interface to V.35 equipment.

Figure 79 shows the dual V.35 WAN interface card.

Figure 79 Dual V.35 WAN interface card

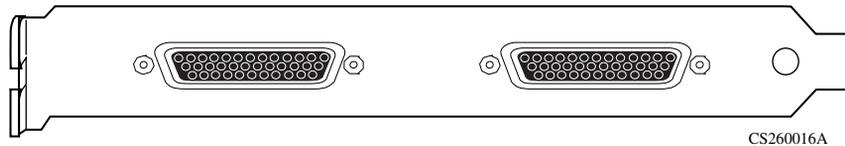

Note: The dual V.35 WAN interface card is no longer available for purchase. Version 5.0 is the last release of Contivity software that will support the dual V.35 WAN interface card.

You need a DSU/CSU (digital service unit/channel service unit) between the WAN connection and the gateway. This section documents the connector and cables used with V.35 WAN synchronous adapters.

If you build your own V.35 DTE cables, observe the following guidelines:

- All connector hoods must be metal.
- Braid must enter and make contact inside the metal connector hood.
- V.35 conn strain relief must be conductive.

Included in the accessory box are two cables to attach to the V.35 connectors. These cables enable the WAN adapter to function as DTE (data terminal equipment).

Table 26 provides the DB26-to-V.35 cable pinouts.


Table 26 DB26-to-V.35 cable pinouts

Standard-wired end 26-pin male	Signal name	Pair number and conductor	Special-wired end 34-pin male
2	TDA	pair 1A	P
14	TDB	pair 1B	S
3	RDA	pair 2A	R
16	RDB	pair 2B	T
24	ETA	pair 3A	U
11	ETB	pair 3B	W
17	RCA	pair 4A	V
9	RCB	pair 4B	X
15	TCA	pair 5A	Y
12	TCB	pair 5B	AA
4	RTS	pair 6A	C
		pair 6B	no conn
5	CTS	pair 7A	D
		pair 7B	no conn
6	DSR	pair 8A	E
		pair 8B	no conn
8	DCD	pair 9A	F
		pair 9B	no conn
20	DTR	pair 10A	H
		pair 10B	no conn
7	SGND	pair 11A	B
		pair 11B	no conn
1	CGND	pair 12A	A
		pair 12B	no conn

HSSI WAN interface card

The HSSI WAN interface card has a 50-pin SCSI II female connector that provides the signals needed to interface to a T3 modem or modem eliminator. [Figure 80](#) shows the HSSI WAN interface card.

Figure 80 HSSI WAN interface card

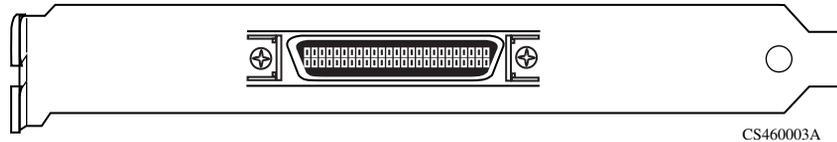

Included in the accessory box is a cable that maps the T3 signals out to a 50-pin SCSI II male connector.

[Table 27](#) provides the T3 cable pinouts.

Table 27 T3 cable pinouts

50-pin SCSI male	Signal name	50-pin SCSI male
1	GND	1
2	RCB	2
3	CAB	3
4	RDB	4
5	LCB	5
6	STB	6
7	GND	7
8	TAB	8
9	TTB	9
10	LAB	10
11	TDB	11
12	LBB	12
13	GND	13
19	GND	19
24	TESTB	24
25	GND	25

Table 27 T3 cable pinouts (continued)

50-pin SCSI male	Signal name	50-pin SCSI male
26	GND	26
27	RCA	27
28	CAA	28
29	RDA	29
30	LCA	30
31	STA	31
32	GND	32
33	TAA	33
34	TTA	34
35	LAA	35
36	TDA	36
37	LBA	37
38	GND	38
44	GND	44
49	TESTA	49
50	GND	50

External modem adapter for the Contivity 1010/1050/1100

If you need to connect a Contivity 1010, 1050, or 1100 to a modem, you can order a null modem adapter from Nortel Networks. This adapter allows you to connect the Contivity 1010/1050/1100 console cable to an RS-232-C modem port.



Caution: Use only the serial cable shipped with the Contivity 1010, 1050, or 1100 and this modem adapter to connect a modem to the Contivity 1010, 1050, or 1100. Other cables and adapters may not provide adequate shielding for EMI regulatory compliance.

To ensure correct dial-in and dial-out operation, configure the modem with the settings “verbal result codes” and “display result codes.” For more information, see the modem documentation.

The cable adapter has a DB9 connector that connects to the serial cable and a DB-25 connector that connects to the modem ([Figure 81](#)).

Figure 81 Serial cable adapter for connection to modem (DB9-to-DB25)

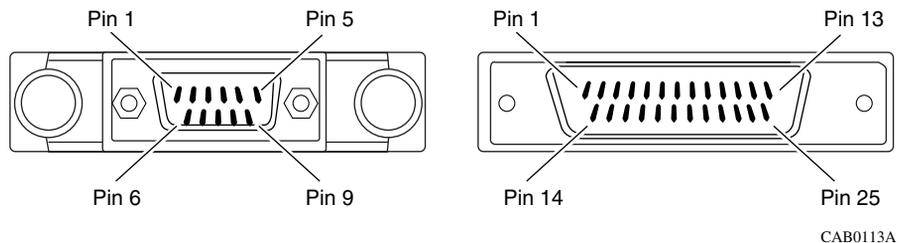


Table 28 provides the null modem adapter cable pinouts.

Table 28 Null modem adapter cable pinouts

DB9 termination		DB25 termination	
Signal	Pin #	Pin #	Signal
Receive Data	2	2	Send Data
Send Data	3	3	Receive Data
Data Terminal Ready	4	6	Data Set Ready
Signal Ground	5	7	Signal Ground
Data Set Ready	6	20	Data Terminal Ready
Request to Send	7	5	Clear to Send
Clear to Send	8	4	Request to Send

Index

Numbers

10/100BASE Ethernet interface card
 cable specifications 140
 connector 141
 described 140
 installing. *See* option cards, installing
 port pinouts, Contivity 1100 141
 port pinouts, other Contivity gateways 141

1000BASE-SX Ethernet interface card
 cable specifications 144
 connector 143
 described 143
 installing. *See* option cards, installing

1000BASE-T Ethernet interface card
 cable specifications 142
 connector 142
 described 142
 installing. *See* option cards, installing

56/64K CSU/DSU WAN interface card
 cable specifications 145
 connector 144
 described 144
 installing. *See* option cards, installing

A

AC power supplies, replacing. *See* power supplies, replacing

accelerator cards, hardware encryption
 described 138
 installing. *See* option cards, installing

acronyms 18

adapter, for connecting Contivity 1010, 1050, 1100
 serial cable to a modem 160

ADSL WAN interface card
 cable pinouts 147
 connector 146
 described 146
 installing. *See* option cards, installing

C

cable adapter for modem, Contivity 1010, 1050, 1100 160

cables, technical specifications
 1000BASE-SX connector 144
 1000BASE-T connector 142
 100BASE-TX connector 140
 10BASE-T connector 140
 56/64K CSU/DSU WAN interface 144
 ADSL WAN interface 146
 dual V.35 WAN interface 156
 HSSI WAN interface 158
 ISDN BRI interface 148
 quad T1/E1 CSU/DSU WAN interface 151
 single V.35/X.21 WAN interface 153
 T1/E1 CSU/DSU WAN interface 149
 V.90 modem interface 152

Category 5 wiring requirements 140, 142

connectors

10/100BASE Ethernet interface 141
 1000BASE-SX Ethernet interface 143
 1000BASE-T Ethernet interface 142
 56/64K CSU/DSU WAN interface 144
 ADSL WAN interface 146
 dual V.35 WAN interface 156
 HSSI WAN interface 158
 ISDN BRI S/T interface 147
 ISDN BRI U interface 147

connectors (*continued*)

- quad T1/E1 CSU/DSU WAN interface 151
- single V.35/X.21 WAN interface 152
- T1/E1 CSU/DSU WAN interface 149
- V.90 modem interface 152

Contivity 1010 and 1050, external modem adapter 160

Contivity 1100

- 10/100 Ethernet interface card port pinouts 141
- external modem adapter 160
- installing option cards 33
- removing the chassis cover 34
- shutting down 34

Contivity 1700 and 1600

- attaching the antistatic wrist strap 42
- installing DIMMs 47
- option cards
 - installing 43
 - supported in Contivity 1600 44
 - supported in Contivity 1700 43
- removing the front bezel 39
- removing the top cover 40
- shutting down 38

Contivity 1740

- attaching the antistatic wrist strap 56
- installing DIMMs 61
- installing option cards 57
- removing the front bezel 53
- removing the top cover 54
- shutting down 52

Contivity 2700 and 2600

- attaching the antistatic wrist strap 70
- installing DIMMs 76
- option cards
 - installing 71
 - supported in Contivity 2600 72
 - supported in Contivity 2700 71
- removing the front bezel 67
- removing the top cover 68
- shutting down 66

Contivity 4500

- installing DIMMs 88
- installing option cards 86
- removing the front bezel 82
- replacing a hard disk drive 91
- replacing a power supply 90

Contivity 4600

- installing DIMMs 99
- installing option cards 97
- removing the front bezel 93
- replacing a hard disk drive 102
- replacing a power supply 100

Contivity 5000

- attaching the antistatic wrist strap 112
- installing DIMMs 120
- installing option cards 113
- removing the front bezel 108
- removing the top cover 109
- replacing a fan tray 131
- replacing a hard disk drive 127
- replacing a power supply 124
- replacing the front bezel 119
- replacing the top cover 118
- shutting down 107

Contivity 600

- installing DIMMs 30
- installing option cards 26
- removing from steel enclosure 22
- shutting down 22

Contivity Security Accelerator card

- described 138
- installing. *See* option cards, installing

conventions, text 18

customer support 20

D

DIMMs (dual inline memory modules), installing

- Contivity 1700 and 1600 47
- Contivity 1740 61
- Contivity 2700 and 2600 76
- Contivity 4500 88
- Contivity 4600 99

DIMMs, installing (*continued*)

Contivity 5000 120

Contivity 600 30

disk drives, replacing. *See* hard disk drives, replacing

dual V.35 WAN interface card

cable pinouts 157

connector 156

described 156

installing. *See* option cards, installing**E**E1 CSU/DSU WAN interface card. *See* T1/E1

CSU/DSU WAN interface card

encryption accelerator cards, hardware

described 138

installing. *See* option cards, installing

Ethernet interface cards

installing. *See* option cards, installing specifications

10/100BASE 140

1000BASE-SX 143

1000BASE-T 142

F

fan trays, replacing in Contivity 5000 131

field replaceable units (FRUs). *See* DIMMs, fan

trays, hard disk drives, option cards, power supplies

G

Gigabit Ethernet interface cards

installing. *See* option cards, installing specifications

1000BASE-SX 143

1000BASE-T 142

H

hard disk drives, replacing

Contivity 4500 91

Contivity 4600 102

Contivity 5000 127

Hardware Accelerator card

described 138

installing. *See* option cards, installing

hardware option cards

specifications 137

installing. *See* option cards, installing

HSSI WAN interface card

cable pinouts 158

connector 158

described 158

installing. *See* option cards, installing**I**

installing a fan tray, Contivity 5000 131

installing DIMMs. *See* DIMMs, installing

installing hard disk drives

Contivity 4500 91

Contivity 4600 102

Contivity 5000 127

installing option cards. *See* option cards, installing

installing power supplies

Contivity 4500 90

Contivity 4600 100

Contivity 5000 124

ISDN BRI S/T interface card

cable pinouts 148

connector 147

described 147

installing. *See* option cards, installing

ISDN BRI U interface card

cable pinouts 148

connector 147

described 147

installing. *See* option cards, installing

L

LAN interface cards

- installing. *See* option cards, installing
- specifications
 - 10/100BASE Ethernet 140
 - 1000BASE-SX 143
 - 1000BASE-T 142

M

memory modules, installing. *See* DIMMs (dual inline memory modules), installing

modem, cable adapter for connection to Contivity 1010, 1050, 1100 160

N

NT-1 device, required for ISDN BRI S/T interface 147

O

option cards

- specifications 137
- See also* Contivity Security Accelerator card, Ethernet interface cards, Hardware Accelerator card, serial interface cards, SSL VPN Module 1000, WAN interface cards

option cards, installing

- Contivity 1100 33
- Contivity 1700 and 1600 43
- Contivity 1740 57
- Contivity 2700 and 2600 71
- Contivity 4500 86
- Contivity 4600 97
- Contivity 5000 113
- Contivity 600 26

P

pinouts

- 10/100BASE Ethernet interface
 - Contivity 1100 141
 - gateways other than Contivity 1100 141
- 1000BASE-SX Ethernet interface 143
- 1000BASE-T Ethernet interface 143
- 56/64K CSU/DSU WAN interface 145
- ADSL WAN interface 147
- dual V.35 WAN interface 157
- HSSI WAN interface 158
- ISDN BRI S/T interface 148
- ISDN BRI U interface 148
- quad T1/E1 CSU/DSU WAN interface 150
- single V.35 WAN interface 153
- single X.21 WAN interface 154
- T1/E1 CSU/DSU WAN interface 150
- V.90 modem interface 152

power supplies, replacing

- Contivity 4500 90
- Contivity 4600 100
- Contivity 5000 124

processor cards, *See* Contivity Security Accelerator card, Hardware Accelerator card, SSL VPN Module 1000

product support 20

publications

- hard copy 20
- related 19

Q

quad T1/E1 CSU/DSU WAN interface card

- cable pinouts 150
- connector 151
- described 151
- installing. *See* option cards, installing

R

replacing a fan tray, Contivity 5000 131

replacing DIMMs. *See* DIMMs, installing

replacing hard disk drives
 Contivity 4500 91
 Contivity 4600 102
 Contivity 5000 127

replacing option cards. *See* option cards, installing

replacing power supplies
 Contivity 4500 90
 Contivity 4600 100
 Contivity 5000 124

RJ-45, pinouts 143

S

serial cable connector, Contivity
 1010/1050/1100 160

serial interface cards
 installing. *See* option cards, installing

specifications
 ISDN BRI 147
 V.90 modem 152

single V.35/X.21 WAN interface card
 cable pinouts, V.35 153
 cable pinouts, X.21 154
 connector 152
 described 152
 installing. *See* option cards, installing

specifications, option cards 137

SSL VPN Module 1000
 described 139
 installing. *See* option cards, installing

support, Nortel Networks 20

T

T1/E1 CSU/DSU WAN interface card
 cable pinouts 150
 connector 149
 described 149
 installing. *See* option cards, installing

T3 HSSI WAN interface card. *See* HSSI WAN
 interface card

technical publications 20

technical support 20

text conventions 18

V

V.90 modem interface card
 cable pinouts 152
 connectors 152
 described 152
 installing. *See* option cards, installing

W

WAN interface cards
 installing. *See* option cards, installing

specifications
 56/64K CSU/DSU 144
 ADSL 146
 dual V.35 156
 HSSI 158
 quad T1/E1 CSU/DSU 151
 single V.35/X.21 152
 T1/E1 CSU/DSU 149

wiring requirements, Category 5 140, 142

