

Part No. 312746-C Rev 00
September 2002

4655 Great America Parkway
Santa Clara, CA 95054

Installing and Maintaining the 8010co Chassis and Components



NORTEL
NETWORKS™

Copyright © 2002 Nortel Networks

All rights reserved. September 2002.

The information in this document is subject to change without notice. The statements, configurations, technical data, and recommendations in this document are believed to be accurate and reliable, but are presented without express or implied warranty. Users must take full responsibility for their applications of any products specified in this document. The information in this document is proprietary to Nortel Networks Inc.

Trademarks

Nortel Networks, the Nortel Networks logo, the Globemark, Unified Networks, BayStack, and Passport are trademarks of Nortel Networks.

Adobe and Acrobat Reader are trademarks of Adobe Systems Incorporated.

3COM is a trademark of 3COM Corporation.

Hendry is a trademark of Hendry Mechanical Works.

Intel is a trademark of Intel Corporation.

SanDisk is a trademark of SanDisk Corporation.

The asterisk after a name denotes a trademarked item.

Statement of conditions

In the interest of improving internal design, operational function, and/or reliability, Nortel Networks Inc. reserves the right to make changes to the products described in this document without notice.

Nortel Networks Inc. does not assume any liability that may occur due to the use or application of the product(s) or circuit layout(s) described herein.

International regulatory statements of conformity

This is to certify that the Nortel Networks 8000 Series chassis and components installed within the chassis were evaluated to the international regulatory standards for electromagnetic compliance (EMC) and safety and were found to have met the requirements for the following international standards:

- EMC - Electromagnetic Emissions – CISPR 22, Class A
- EMC - Electromagnetic Immunity – CISPR 24
- Electrical Safety – IEC 60950, with CB member national deviations

Further, the equipment has been certified as compliant with the national standards as detailed below.

National electromagnetic compliance (EMC) statements of compliance

FCC statement (USA only)

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the Federal Communications Commission (FCC) rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy. If it is not installed and used in accordance with the instruction manual, it may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case users will be required to take whatever measures may be necessary to correct the interference at their own expense.

ICES statement (Canada only)

Canadian Department of Communications Radio Interference Regulations

This digital apparatus (8000 Series chassis and installed components) does not exceed the Class A limits for radio-noise emissions from digital apparatus as set out in the Radio Interference Regulations of the Canadian Department of Communications.

Règlement sur le brouillage radioélectrique du ministère des Communications

Cet appareil numérique (8000 Series chassis) respecte les limites de bruits radioélectriques visant les appareils numériques de classe A prescrites dans le Règlement sur le brouillage radioélectrique du ministère des Communications du Canada.

CE marking statement (Europe only)

EN 55 022 statements

This is to certify that the Nortel Networks 8000 Series chassis and components installed within the chassis are shielded against the generation of radio interference in accordance with the application of Council Directive 89/336/EEC. Conformity is declared by the application of EN 55 022 Class A (CISPR 22).

Warning: This is a Class A product. In a domestic environment, this product may cause radio interference, in which case, the user may be required to take appropriate measures.

Achtung: Dieses ist ein Gerät der Funkstörgrenzwertklasse A. In Wohnbereichen können bei Betrieb dieses Gerätes Rundfunkstörungen auftreten, in welchen Fällen der Benutzer für entsprechende Gegenmaßnahmen verantwortlich ist.

Attention: Ceci est un produit de Classe A. Dans un environnement domestique, ce produit risque de créer des interférences radioélectriques, il appartiendra alors à l'utilisateur de prendre les mesures spécifiques appropriées.

EN 55 024 statement

This is to certify that the Nortel Networks 8000 Series chassis is shielded against the susceptibility to radio interference in accordance with the application of Council Directive 89/336/EEC. Conformity is declared by the application of EN 55 024 (CISPR 24).

EC Declaration of Conformity

This product conforms to the provisions of the R&TTE Directive 1999/5/EC.

VCCI statement (Japan/Nippon only)

This is a Class A product based on the standard of the Voluntary Control Council for Interference (VCCI) for information technology equipment. If this equipment is used in a domestic environment, radio disturbance may arise. When such trouble occurs, the user may be required to take corrective actions.

この装置は、情報処理装置等電波障害自主規制協議会（VCCI）の基準に基づくクラスA情報技術装置です。この装置を家庭環境で使用すると電波妨害を引き起こすことがあります。この場合には使用者が適切な対策を講ずるよう要求されることがあります。

National safety statements of compliance

CE marking statement (Europe only)

EN 60 950 statement

This is to certify that the Nortel Networks 8000 Series chassis and components installed within the chassis are in compliance with the requirements of EN 60 950 in accordance with the Low Voltage Directive. Additional national differences for all European Union countries have been evaluated for compliance. Some components installed within the 8000 Series chassis may use a nickel-metal hydride (NiMH) and/or lithium-ion battery. The NiMH and lithium-ion batteries are long-life batteries, and it is very possible that you will never need to replace them. However, should you need to replace them, refer to the individual component manual for directions on replacement and disposal of the battery.

Nortel Networks Inc. software license agreement

This Software License Agreement (“License Agreement”) is between you, the end-user (“Customer”) and Nortel Networks Corporation and its subsidiaries and affiliates (“Nortel Networks”). PLEASE READ THE FOLLOWING CAREFULLY. YOU MUST ACCEPT THESE LICENSE TERMS IN ORDER TO DOWNLOAD AND/OR USE THE SOFTWARE. USE OF THE SOFTWARE CONSTITUTES YOUR ACCEPTANCE OF THIS LICENSE AGREEMENT. If you do not accept these terms and conditions, return the Software, unused and in the original shipping container, within 30 days of purchase to obtain a credit for the full purchase price.

“Software” is owned or licensed by Nortel Networks, its parent or one of its subsidiaries or affiliates, and is copyrighted and licensed, not sold. Software consists of machine-readable instructions, its components, data, audio-visual content (such as images, text, recordings or pictures) and related licensed materials including all whole or partial copies. Nortel Networks grants you a license to use the Software only in the country where you acquired the Software. You obtain no rights other than those granted to you under this License Agreement. You are responsible for the selection of the Software and for the installation of, use of, and results obtained from the Software.

1. Licensed Use of Software. Nortel Networks grants Customer a nonexclusive license to use a copy of the Software on only one machine at any one time or to the extent of the activation or authorized usage level, whichever is applicable. To the extent Software is furnished for use with designated hardware or Customer furnished equipment (“CFE”), Customer is granted a nonexclusive license to use Software only on such hardware or CFE, as applicable. Software contains trade secrets and Customer agrees to treat Software as confidential information using the same care and discretion Customer uses with its own similar information that it does not wish to disclose, publish or disseminate. Customer will ensure that anyone who uses the Software does so only in compliance with the terms of this Agreement. Customer shall not a) use, copy, modify, transfer or distribute the Software except as expressly authorized; b) reverse assemble, reverse compile, reverse engineer or otherwise translate the Software; c) create derivative works or modifications unless expressly authorized; or d) sublicense, rent or lease the Software. Licensors of intellectual property to Nortel Networks are beneficiaries of this provision. Upon termination or breach of the license by Customer or in the event designated hardware or CFE is no longer in use, Customer will promptly return the Software to Nortel Networks or certify its destruction. Nortel Networks may audit by remote polling or other reasonable means to determine Customer’s

Software activation or usage levels. If suppliers of third party software included in Software require Nortel Networks to include additional or different terms, Customer agrees to abide by such terms provided by Nortel Networks with respect to such third party software.

2. Warranty. Except as may be otherwise expressly agreed to in writing between Nortel Networks and Customer, Software is provided "AS IS" without any warranties (conditions) of any kind. NORTEL NETWORKS DISCLAIMS ALL WARRANTIES (CONDITIONS) FOR THE SOFTWARE, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE AND ANY WARRANTY OF NON-INFRINGEMENT. Nortel Networks is not obligated to provide support of any kind for the Software. Some jurisdictions do not allow exclusion of implied warranties, and, in such event, the above exclusions may not apply.

3. Limitation of Remedies. IN NO EVENT SHALL NORTEL NETWORKS OR ITS AGENTS OR SUPPLIERS BE LIABLE FOR ANY OF THE FOLLOWING: a) DAMAGES BASED ON ANY THIRD PARTY CLAIM; b) LOSS OF, OR DAMAGE TO, CUSTOMER'S RECORDS, FILES OR DATA; OR c) DIRECT, INDIRECT, SPECIAL, INCIDENTAL, PUNITIVE, OR CONSEQUENTIAL DAMAGES (INCLUDING LOST PROFITS OR SAVINGS), WHETHER IN CONTRACT, TORT OR OTHERWISE (INCLUDING NEGLIGENCE) ARISING OUT OF YOUR USE OF THE SOFTWARE, EVEN IF NORTEL NETWORKS, ITS AGENTS OR SUPPLIERS HAVE BEEN ADVISED OF THEIR POSSIBILITY. The forgoing limitations of remedies also apply to any developer and/or supplier of the Software. Such developer and/or supplier is an intended beneficiary of this Section. Some jurisdictions do not allow these limitations or exclusions and, in such event, they may not apply.

4. General

- a)** If Customer is the United States Government, the following paragraph shall apply: All Nortel Networks Software available under this License Agreement is commercial computer software and commercial computer software documentation and, in the event Software is licensed for or on behalf of the United States Government, the respective rights to the software and software documentation are governed by Nortel Networks standard commercial license in accordance with U.S. Federal Regulations at 48 C.F.R. Sections 12.212 (for non-DoD entities) and 48 C.F.R. 227.7202 (for DoD entities).
- b)** Customer may terminate the license at any time. Nortel Networks may terminate the license if Customer fails to comply with the terms and conditions of this license. In either event, upon termination, Customer must either return the Software to Nortel Networks or certify its destruction.
- c)** Customer is responsible for payment of any taxes, including personal property taxes, resulting from Customer's use of the Software. Customer agrees to comply with all applicable laws including all applicable export and import laws and regulations.
- d)** Neither party may bring an action, regardless of form, more than two years after the cause of the action arose.
- e)** The terms and conditions of this License Agreement form the complete and exclusive agreement between Customer and Nortel Networks.
- f)** This License Agreement is governed by the laws of the country in which Customer acquires the Software. If the Software is acquired in the United States, then this License Agreement is governed by the laws of the state of New York.

Contents

Preface	25
Before you begin	25
Text conventions	26
Hard-copy technical manuals	26
How to get help	27
Chapter 1	
8010co Chassis hardware components	29
Chassis	31
Power supplies	31
Fan tray	32
Chapter 2	
8100 modules	33
8108GBIC Module	34
8116FX Module	37
8132TX Module	40
10BASE-T/100BASE-TX port connectors	42
MDA slot	43
8148TX Module	44
8190SM Module	46
Ethernet management port	49
DCE/DTE switch	49
Serial ports	49
Reset button	50
PCMCIA card slot	50

Chapter 3	
8600 modules	51
8608GBE and 8608GBM Modules	54
8608GTE and 8608GTM Modules	57
8608SXE Module	60
8616GTE Module	62
8616SXE Module	63
8624FXE Module	66
8632TXE and 8632TXM Modules	68
8648TXE and 8648TXM Modules	70
8672ATME and 8672ATMM Modules	73
8681XLR Module	75
8681XLW Module	77
8683POSM Module	79
8691SF Module	80
Ethernet management port	84
DCE/DTE switch	84
Serial ports	84
Reset button	84
PCMCIA card slot	85
Chapter 4	
Installing the 8010co Chassis	87
Preparing to install the 8010co Chassis	87
Shipment contents	88
Supplying equipment	91
Cables	91
Hardware for mounting the chassis in an equipment rack	91
Management console	91
Site requirements	92
Space requirements	92
AC input electrical requirements	92
DC input electrical requirements	93
Environmental requirements	93
Installing the chassis	94

Positioning the 8010co Chassis on a flat surface	94
Mounting the 8010co Chassis in a two-post rack	95
Mounting the 8010co Chassis in a 19-inch rack	97
Mounting the 8010co Chassis in a Hendry rack	101
Installing the cable management brackets	105
Grounding the 8010co chassis	107
Connecting the ground cables to the rack grounding strip	113
Chapter 5	
Installing power supplies	115
Power supplies for the 8010co Chassis	115
Removing and replacing the bottom bezel	118
Removing and installing a power filler panel	120
Installing the DC power supply	122
Before you begin	122
Preparing cables	123
Installing the power supply	125
Removing the DC power supply	132
Installing the AC power supply	138
Removing the AC power supply	141
Chapter 6	
Installing 8000 Series modules and connecting equipment	145
Location of the 8000 Series modules	145
Attaching the antistatic wrist strap	147
Removing and installing a filler panel	148
Removing a filler panel	149
Installing a filler panel	149
Installing and replacing a module	150
Removing a module	150
Installing a module	154
Connecting a PC or terminal to the console port	159
Connecting a network management station to the switch	160
Connecting a modem	161
Connecting communications cables to 8100 modules	163

Connecting communications cables to 8600 modules 164
Connecting the shelf alarm cable from the BIP to the chassis 166
Managing cables 168

Chapter 7

Installing gigabit interface converters 173

Installing a GBIC 175
Removing a GBIC 176

Chapter 8

Installing media dependent adapters on 8100 modules. 177

450 Series MDAs 178
8100-4TX MDA 180
8100 Series fiber MDAs 181
Installing an MDA on a 8100 module 182

Chapter 9

Installing media dependent adapters on 8600 modules. 185

8672ATME and 8672ATMM Modules MDAs 186
 Specifications for the 8672ATME and 8672ATMM Modules MDAs 188
8683POSM Module MDAs 191
 Specifications for the 8683POSM Module MDAs 192
Installing an MDA on a 8600 module 194
Replacing an MDA on a 8600 module 197
Connecting fiber cables to a 8600 module MDA 198
Connecting coaxial cables to a 8600 module MDA 201

Chapter 10

Installing and removing the fan tray 203

Replacing the fan tray 204

Chapter 11

Operating the 8000 Series switch. 209

Turning the 8000 Series switch on and off 210
 Turning DC power supplies on and off 210

Turning AC power supplies on and off	212
Verifying a successful installation	213
Initializing the 8672ATME, 8672ATMM, and 8683POSM Modules	214
Initializing the 8672ATME and 8672ATMM Modules	214
Initializing the 8683POSM Module	217
Configuring the chassis to operate in 32K or 128K Mode	219
Resetting the 8000 Series switch	220
Removing flash memory cards	221
Installing flash memory cards	222
Protecting memory card files	223
Replacing an air filter	224
Removing and inserting an air filter	225
Troubleshooting	226
LED indications of problems	227
Apparent module failure	228
Module failure workaround 1	228
Module failure workaround 2	228
Failure to get a login prompt from the Console port	228
Cable connection problems	229
10BASE-T cables	229
100BASE-T cables	230
8100 Series fiber MDA cables	230
GBIC cables	230
Autonegotiation mode problems for 8100 modules	230
Appendix A	
Technical specifications for the 8010co Chassis	233
Appendix B	
Technical specifications for 8100 modules	237
General specifications	238
8108GBIC Module	240
GBICs	240
1000BASE-SX GBIC	241
1000BASE-LX GBIC	241
1000BASE-XD GBIC	241

1000BASE-ZX GBIC	242
8116FX Module	243
8132TX Module	244
Data port connectors	244
MDAs	245
8148TX Module	247
Port connectors	247
8190SM Module	248
Management port	249
Console serial port	249
Modem serial port	250
MDI and MDI-X connections	251

Appendix C

Technical specifications for 8600 modules

General specifications	254
8608GBE and 8608GBM Modules	256
GBICs	257
1000BASE-SX GBIC	257
1000BASE-LX GBIC	257
1000BASE-XD GBIC	258
1000BASE-ZX GBIC	258
1000BASE-CWDM GBIC	259
8608GTE and 8608GTM Modules	260
Port connectors	260
8608SXE Module	261
8616GTE Module	262
Port connectors	262
8616SXE Module	263
8624FXE Module	264
8632TXE and 8632TXM Modules	265
8648TXE and 8648TXM Modules	266
Port connectors	266
8672ATME and 8672ATMM Modules	267
8681XLR Module	269

8681XLW Module	270
8683POSM Module	271
8691SF Module	272
Management port	273
Console serial port	273
Modem serial port	274
Index	277

Figures

Figure 1	8010co Chassis and components	30
Figure 2	8108GBIC Module	34
Figure 3	8108GBIC Module LEDs	35
Figure 4	8116FX Module	37
Figure 5	8116FX Module LEDs	38
Figure 6	8132TX Module	40
Figure 7	8132TX Module LEDs	41
Figure 8	8148TX Module	44
Figure 9	8148TX Module LEDs	45
Figure 10	8190SM Module	46
Figure 11	8190SM Module LEDs	48
Figure 12	8608GBE or 8608GBM Module	54
Figure 13	8608GBE/8608GBM Module LEDs	55
Figure 14	8608GTE/8608GTM Module	58
Figure 15	8608GTE/8608GTM Module LEDs	58
Figure 16	8608SXE Module	60
Figure 17	8608SXE Module LEDs	61
Figure 18	8616GTE Module	62
Figure 19	8616GTE Module LEDs	62
Figure 20	8616SXE Module	64
Figure 21	8616SXE Module LEDs	64
Figure 22	8624FXE Module	66
Figure 23	8624FXE Module LEDs	67
Figure 24	8632TXE/8632TXM Module	68
Figure 25	8632TXE/8632TXM Module LEDs	69
Figure 26	8648TXE/8648TXM Module	71
Figure 27	8648TXE/8648TXM Module LEDs	71
Figure 28	8672ATME/8672ATMM Module with an OC-12c/STM-4 MDA	73
Figure 29	8681XLR Module	75

Figure 30	8681XLR Module LEDs	76
Figure 31	8681XLW Module	77
Figure 32	8681XLW Module LEDs	78
Figure 33	8683POSM Module with an OC-12c/STM-4 MDA	79
Figure 34	8691SF Module	81
Figure 35	8691SF Module LEDs	82
Figure 36	Accessories in the 8010co Chassis shipping container	90
Figure 37	Two 8010co Chassis with BIP in a two-post rack	96
Figure 38	Location of handles on the 8010co chassis	98
Figure 39	Installing the installation shelf in a 19-inch equipment rack	99
Figure 40	Installing the 8010co Chassis in a 19-inch two-post rack	100
Figure 41	Installing the installation shelf in a Hendry rack	101
Figure 42	Removing the mounting rails from the 8010co Chassis	102
Figure 43	Installing the mounting rails for a Hendry rack	103
Figure 44	Location of handles on 8010co chassis	104
Figure 45	Installing cable management brackets	106
Figure 46	Location of 8010co chassis ground studs	107
Figure 47	Chassis and DC power supply grounding example	109
Figure 48	Chassis and AC power supply grounding example	111
Figure 49	Rack grounding strip example	113
Figure 50	8004 DC power supply	116
Figure 51	8004 AC power supply	116
Figure 52	Removing the 8010co Chassis bottom bezel	118
Figure 53	Replacing the 8010co Chassis bottom bezel	119
Figure 54	Removing a power filler panel	120
Figure 55	Installing a power filler panel	121
Figure 56	Cable stripping requirements	124
Figure 57	DC power supply power switch	125
Figure 58	Inserting the DC power supply	126
Figure 59	Removing the plastic safety cover	126
Figure 60	DC power supply input and ground stud location	127
Figure 61	Attaching the earth ground lead to the grounding stud	128
Figure 62	Attaching the voltage leads to the power supply terminals	129
Figure 63	Replacing the plastic safety cover	130
Figure 64	Tightening the retaining screws on the DC power supply	130

Figure 65	DC power supply power switch	131
Figure 66	DC power supply power switch	133
Figure 67	Loosening the retaining screws on the DC power supply	134
Figure 68	Disconnecting the DC power supply from the backplane	134
Figure 69	Removing the plastic safety cover	135
Figure 70	Disconnecting the earth ground lead from the DC power supply	136
Figure 71	Disconnecting the positive and negative voltage lead	137
Figure 72	Removing the DC power supply from the chassis	137
Figure 73	Installing the AC power supply	139
Figure 74	Tightening the retaining screws on the AC power supply	139
Figure 75	Connecting the power cord to the AC power supply	140
Figure 76	AC power supply power switch on	140
Figure 77	AC power supply power switch off	142
Figure 78	Disconnecting the power cord from the AC power supply	142
Figure 79	Loosening the retaining screws on the AC power supply	143
Figure 80	Disconnecting the AC power supply from the chassis backplane	143
Figure 81	Location of the 8000 Series modules	146
Figure 82	Connecting the wrist strap jack to the front ground port	148
Figure 83	Removing a filler panel	149
Figure 84	Removing a 8000 Series module	152
Figure 85	Sliding the module out of the chassis	153
Figure 86	Insert/extract levers in extended position	155
Figure 87	Installing a 8000 Series module	156
Figure 88	Seating the backplane connectors	157
Figure 89	Securing the 8000 Series module in the chassis	158
Figure 90	Connecting a modem to the 8010co Chassis	162
Figure 91	BIP shelf alarm connections (upper and lower shelves)	167
Figure 92	Managing 8010co cables	169
Figure 93	Wrapping cables with sheet fiber and securing with lacing cord	170
Figure 94	Types of GBICs	174
Figure 95	Installing a GBIC	175
Figure 96	Removing a GBIC	176
Figure 97	1000BASE-SX (shortwave gigabit) MDA front panels	178
Figure 98	1000BASE-LX (longwave gigabit) MDA front panels	179
Figure 99	8100-4TX MDA front panel	180

Figure 100	8100 Series fiber MDA front panels	181
Figure 101	Installing an MDA on the 8132TX Module	183
Figure 102	8672ATME/8672ATMM Modules MDA: OC-12c/STM-4	186
Figure 103	8672ATME/8672ATMM Modules MDA: OC-3c/STM-1	186
Figure 104	8672ATME/8672ATMM Modules MDA: DS-3	186
Figure 105	Product label for the 8672ATME and 8672ATMM Modules MDA	187
Figure 106	8683POSM Module MDA: OC-12c/STM-4	191
Figure 107	8683POSM Module MDA: OC-3c/STM-1	191
Figure 108	Product label for the 8683POSM Module MDA	192
Figure 109	Removing the MDA slot cover	195
Figure 110	Aligning the MDA with the front of the module	195
Figure 111	Aligning the MDA with the mounting posts of the module	195
Figure 112	Seating the MDA on the module	196
Figure 113	Tightening the screws on the MDA	196
Figure 114	Preparing an MDA for removal	197
Figure 115	Loosening the MDA from the mounting posts	197
Figure 116	Removing the MDA from the module	198
Figure 117	OC-12c/STM-4 MDA duplex SC connector with dust cover	198
Figure 118	OC-3c/STM-1 MDA MT-RJ connector with dust cap	198
Figure 119	Removing the dust plug from an OC-12c/STM-4 MDA (SC) connector	199
Figure 120	Removing the dust plug from an OC-3c/STM-1 MDA (MT-RJ) connector	199
Figure 121	Removing the dust cap from an SC fiber cable connector	199
Figure 122	Removing the dust cap from an MT-RJ fiber cable connector	200
Figure 123	Inserting the SC cable connector into an OC-12c/STM-4 MDA	200
Figure 124	Inserting the MT-RJ cable connector into an OC-3c/STM-1 MDA	200
Figure 125	Pushing the coaxial cable BNC connector onto a DS-3 connector	201
Figure 126	Fan tray	203
Figure 127	Unlocking the fan tray	205
Figure 128	Removing the fan tray	206
Figure 129	Installing the fan tray	207
Figure 130	DC power supply power switch	211
Figure 131	Unsuccessful download screen output	216
Figure 132	Reset button on the 8190SM Module	220
Figure 133	Reset button on the 8691SF Module	220
Figure 134	Removing a flash memory card	221

Figure 135	Inserting a flash memory card	222
Figure 136	Memory card read-write protect switch	224
Figure 137	Inserting an air filter	226
Figure 138	DCE/DTE switch	229
Figure 139	MDI-X to MDI cable connections	251
Figure 140	MDI-X to MDI-X cable connections	252

Tables

Table 1	Maximum port densities for 8100 modules	34
Table 2	8108GBIC Module LEDs	36
Table 3	8116FX Module LEDs	39
Table 4	8132TX Module LEDs	41
Table 5	8148TX Module LEDs	45
Table 6	8190SM Module LEDs	48
Table 7	Maximum port densities for 8600 modules	52
Table 8	8608GBE/8608GBM Module LEDs	56
Table 9	8608GTE/8608GTM Module LEDs	59
Table 10	8608SXE Module LEDs	61
Table 11	8616GTE Module LEDs	63
Table 12	8616SXE Module LEDs	65
Table 13	8624FXE Module LEDs	67
Table 14	8632TXE/8632TXM Module LEDs	69
Table 15	8648TXE Module LEDs	72
Table 16	8672ATME/8672ATMM Module LED	74
Table 17	8681XLR Module LEDs	76
Table 18	8681XLW Module LEDs	78
Table 19	8683POSM Module LED	80
Table 20	8691SF Module LEDs	82
Table 21	8010co Chassis shipping accessories	88
Table 22	Wall receptacle requirements for AC power	92
Table 23	DC power requirement for BIP	93
Table 24	Environmental requirements	93
Table 25	Item description for chassis and DC power supply grounding	110
Table 26	Item description for chassis and AC power supply grounding	112
Table 27	Power supply LED	117
Table 28	Number of power supplies to install	117
Table 29	Power supply installation reading path	122

Table 30	DC power supply shipping accessories	123
Table 31	Correct cable connection to the DC power supply	127
Table 32	PC and terminal parameters	159
Table 33	Modem settings	161
Table 34	Connectors and cables for 8100 modules	163
Table 35	Connectors and cables for 8600 modules	164
Table 36	In-line optical attenuators for 1000BASE-ZX and 1000BASE-XD GBICs 176	
Table 37	1000BASE-SX and 1000BASE-LX MDA LEDs	179
Table 38	8100-4TX MDA LEDs	180
Table 39	8100 Series fiber MDA LEDs	181
Table 40	MDAs for the 8672ATME and 8672ATMM Modules	187
Table 41	LEDs on the 8672ATME/8672ATMM Module MDA	188
Table 42	8672ATME and 8672ATMM Modules MDA specifications- OC-3c/STM-1 and OC-12c/STM-4	188
Table 43	OC-3c/STM-1 specifications: 8672ATME and 8672ATMM Modules MDA	189
Table 44	OC-12c/STM-1 specifications: 8672ATME and 8672ATMM Modules MDA	190
Table 45	DS-3 specifications: 8672ATME and 8672ATMM Modules MDA	190
Table 46	MDAs for the 8683POSM Module	191
Table 47	LEDs on the 8683POSM Module MDA	192
Table 48	8683POSM Module MDA specifications	192
Table 49	OC-3c/STM-1 specifications: 8683POSM Module MDA	193
Table 50	OC-12c/STM-4 specifications: 8683POSM Module MDA	193
Table 51	Fan LEDs	204
Table 52	Image filenames for 8672ATME/8672ATMM/8683POSM	214
Table 53	Boot mode at startup	219
Table 54	8010co air filter physical specifications	225
Table 55	LED problem indicators	227
Table 56	8132TX Module port pin assignments	244
Table 57	Passport 8148TX Module port pin assignments	247
Table 58	Pin assignments in the 8190SM Module Management port	249
Table 59	Pin assignments in the 8190SM Module console port	250
Table 60	DTE-to-DCE pin assignments	250
Table 61	Pin assignments: 8608GTE Module port	260
Table 62	Pin assignments: 8616GTE Module port	262

Table 63	Pin assignments: 8648TXE Module port	266
Table 64	Pin assignments: 8691SF Module Management port	273
Table 65	Pin assignments: 8691SF Module Console port	274
Table 66	Pin assignments: DTE to DCE	274

Preface

The Nortel Networks* 8010co Chassis provides the physical framework for the 8000 Series switch modules. When switch modules are installed in the chassis, the resulting network switch provides a range of data speeds and high-performance switching and routing features.

This guide provides instructions on how to install the 8010co Chassis in an equipment rack and how to install and replace fan trays, power supplies, modules, gigabit interface converters, and media dependent adapters. This guide also describes some of the routine tasks of operating the 8000 Series switch and includes technical specifications for the chassis and modules.

For a list of related publications, see the release notes that accompany your software.

Before you begin

This guide is intended for qualified service personnel who are installing a 8000 Series switch in a 8010co Chassis for the first time or who need to install or replace any 8000 Series customer-replaceable unit (CRU) in the chassis.

Before installing the 8010co Chassis, ensure that all network wiring has been installed on the premises using standard cable-system practices.

Text conventions

This guide uses the following text conventions:

bold Courier text Indicates command names and options and text that you need to enter.

Example: Use the **dinfo** command.

Example: Enter **show ip {alerts|routes}**.

italic text

Indicates new terms, book titles, and variables in command syntax descriptions. Where a variable is two or more words, the words are connected by an underscore.

Example: If the command syntax is *show at <valid_route>*, *valid_route* is one variable and you substitute one value for it.

Hard-copy technical manuals

You can print selected technical manuals and release notes free, directly from the Internet. Go to the www.nortelnetworks.com/documentation URL. Find the product for which you need documentation. Then locate the specific category and model or version for your hardware or software product. Use Adobe* Acrobat Reader* to open the manuals and release notes, search for the sections you need, and print them on most standard printers. Go to Adobe Systems at the www.adobe.com URL to download a free copy of the Adobe Acrobat Reader.

You can purchase printed books and documentation sets from Vervante. To order printed documentation, go to Vervante at the www.vervante.com/nortel URL.

How to get help

If you purchased a service contract for your Nortel Networks product from a distributor or authorized reseller, contact the technical support staff for that distributor or reseller for assistance.

If you purchased a Nortel Networks service program, contact one of the following Nortel Networks Technical Solutions Centers:

Technical Solutions Center	Telephone
Europe, Middle East, and Africa	(33) (4) 92-966-968
North America	(800) 4NORTEL or (800) 466-7835
Asia Pacific	(61) (2) 9927-8800
China	(800) 810-5000

Additional information about the Nortel Networks Technical Solutions Centers is available from the www.nortelnetworks.com/help/contact/global URL.

An Express Routing Code (ERC) is available for many Nortel Networks products and services. When you use an ERC, your call is routed to a technical support person who specializes in supporting that product or service. To locate an ERC for your product or service, go to the <http://www130.nortelnetworks.com/cgi-bin/eserv/common/essContactUs.jsp> URL.

Chapter 1


8010co Chassis hardware components

The 8010co Chassis provides the physical enclosure for 8000 Series switch modules. When 8000 Series modules are installed in the chassis, the resulting switch provides high-performance switching and routing functions for the network.

The 8010co Chassis consists of a sheet metal enclosure, a backplane, a power backplane, three bays for either AC or DC power supplies, and two fan trays for cooling.

[Figure 1](#) shows the location of customer-replaceable components in the chassis.

Figure 1 8010co Chassis and components

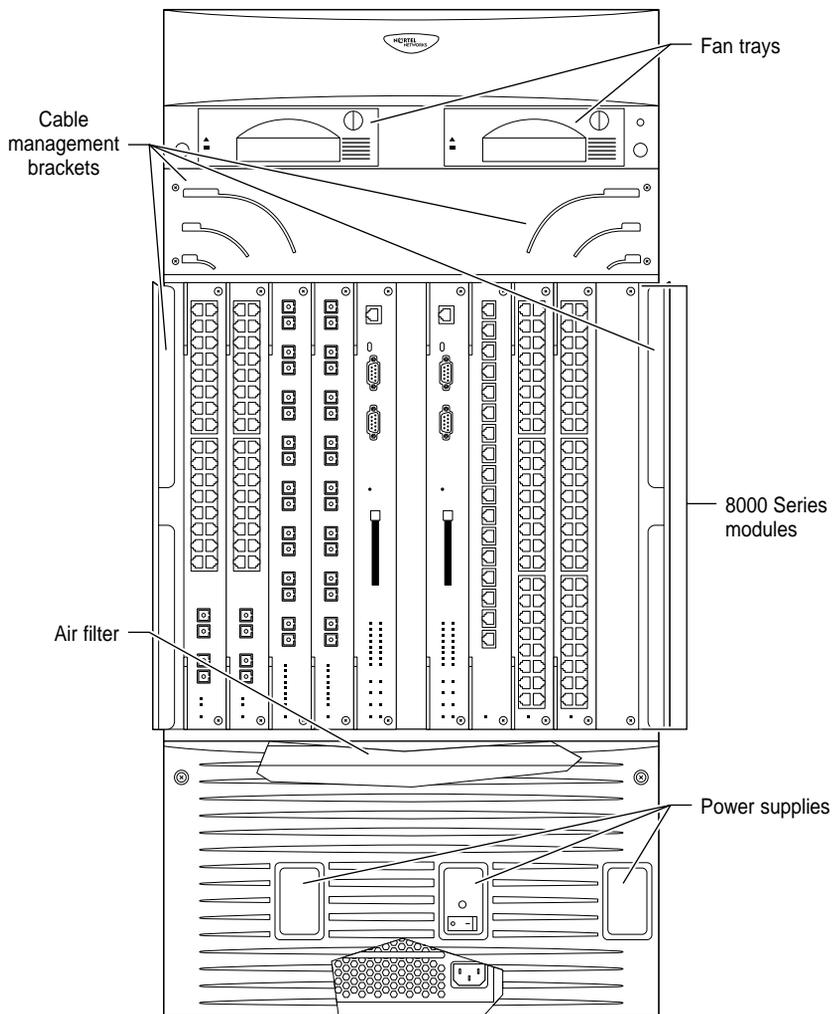

10216EC

Chassis

The 8010co Chassis provides eight slots for installing I/O modules and two slots for installing either 8190SM switch management modules or 8691SF switch fabric modules. Slots are numbered from left to right.

You can install either 8100 or 8600 I/O switch modules in slots 1 through 4 and slots 7 through 10. Slots 5 and 6 are reserved for 8000 Series switch fabric or switch management modules.

8100 modules installed in slots 1 or 2 serve as a clock source for the entire chassis. Therefore, you must install a 8100 series module in either slot 1 or 2 to avoid traffic loss.



Note: 8000 Series software Release 3.2 and later does not support configurations of 8100 modules and 8600 modules installed within the same chassis.

Power supplies

The chassis provides three bays for installing power supplies. The following power supplies are available:

- 8004 AC Power Supply
- 8004 DC Power Supply

A minimum of two power supplies is required for the 8010co Chassis. You can also install an additional power supply for redundancy.



Note: The 8004 AC Power Supply is derated from 850 W to 780 W maximum output @ 100 - 109 VAC input. See [Appendix A, “Technical specifications for the 8010co Chassis,”](#) on [page 233](#) for additional power supply technical specifications.

For complete information about the power supplies and instructions for installing them, see [Chapter 5, “Installing power supplies,”](#) on [page 115](#).

Fan tray

Two fan trays provide cooling for the chassis; each fan tray contains two high-capacity, multispeed fans. A control/monitor board in the fan tray reports temperature and fan operating status to the network management software.

Chapter 2

8100 modules

The 8100 modules provide a full complement of switching capabilities in a 8010co Chassis. The 8100 modules include a switch management module and input/output (I/O) modules. For CPU system redundancy, you can install two management modules. A 8010co Chassis with installed 8100 modules constitutes a switch with distributed management and full redundancy.

The 8100 I/O modules support different types of Ethernet interfaces with different speeds and port types, including:

- 10/100 megabit per second (Mb/s) autonegotiating twisted pair Ethernet ports
- 100 Mb/s fiber Ethernet ports
- 1000 Mb/s Ethernet ports

This chapter introduces the 8100 modules and describes the LEDs on each module. It includes the following topics:

Topic	Page
8108GBIC Module	34
8116FX Module	37
8132TX Module	40
8148TX Module	44
8190SM Module	46

Table 1 lists the maximum port densities available with each type of 8100 I/O module in the 8010co Chassis.

Table 1 Maximum port densities for 8100 modules


Module type	Port type	Maximum number of ports
8108GBIC	1000BASE-SX	64
	1000BASE-LX	64
	1000BASE-ZX	64
	1000BASE-XD	64
8116FX	100BASE-FX	128
8132TX	10BASE-T/100BASE-TX	256 ¹
8148TX	10/100 Mb/s	384

¹ Does not include ports on MDAs; for information about the MDAs, see Chapter 8, "Installing media dependent adapters on 8100 modules," on page 177.

8108GBIC Module

The 8108GBIC Module (Figure 2) is a single-slot I/O module that provides eight bays for installing any of five types of gigabit interface converters (GBICs).

Figure 2 8108GBIC Module

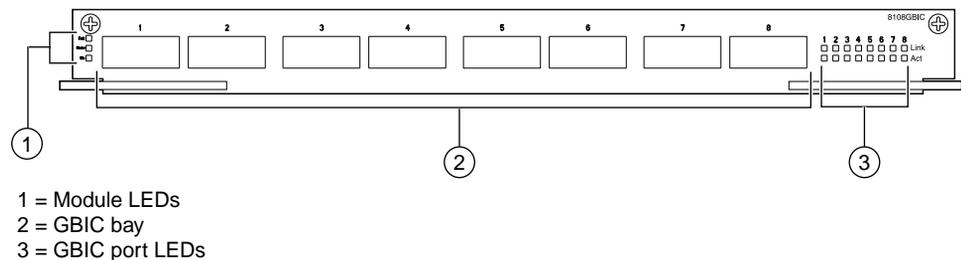

10353EA

The following four types of GBICs are supported:

- 1000BASE-SX
- 1000BASE-LX
- 1000BASE-XD
- 1000BASE-ZX

The fiber ports on the GBICs allow you to make riser connections, server attachments, or interswitch links.




Note: Only GBICs qualified by Nortel Networks are supported for use in the 8108GBIC Module. For specific model numbers, refer to the Nortel Networks price list.

For more information about the GBICs and instructions for installing them, see [Chapter 7, “Installing gigabit interface converters,” on page 173](#).

[Figure 3](#) shows the 8108GBIC Module LEDs.

Figure 3 8108GBIC Module LEDs

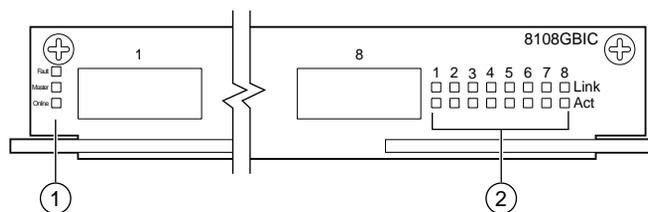

9682EA

1 = Module LEDs

2 = GBIC port Link and Activity LEDs

Table 2 describes the 8108GBIC Module LEDs.


Table 2 8108GBIC Module LEDs

Type	Label	Color/State	Meaning
Module	Fault	Amber/Steady	A diagnostics failure or hardware failure has been detected.
		Amber/Blinking	A chassis failure has been detected.
		Off	The system is functioning normally.
	Master	Green/Steady	The module is properly generating the system clock for the switch.
		Amber/Steady	The module has detected a system clock generation failure on its own circuitry.
		Off	The module is not providing the system clock for the switch. You can pull the module out of the chassis without resetting the switch.
	Online	Green/Steady	The module has completed its power-on self-test and software initialization and is operating normally.
		Amber/Steady	The module failed its power-on self-test.
		Off	The switch power is off, or the power has been turned on and the module is going through its power-on self-test and software initialization. A module in this state is not yet functional.
Port	Activity	Green	The port is transmitting data.
		Off	No data activity is occurring.
	Link	Green	The port has established a link and is enabled.
		Off	The port has no link.

8116FX Module

The 8116FX Module ([Figure 4](#)) is a single-slot I/O module that provides 16 fiber optic 100 Mb/s ports that can operate in full- or half-duplex mode.

Figure 4 8116FX Module

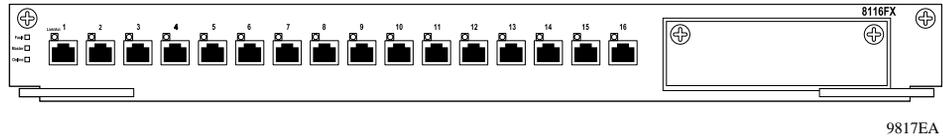

The 8116FX Module includes a slot for one of the following optional media dependent adapters (MDAs):

- 8100-4TX MDA—10BASE-T/100BASE-TX MDA (4-port copper)
- 8100-2FX MDA—100BASE-FX MDA (2-port multimode fiber with SC connectors)
- 8100-4FX MDA—100BASE-FX MDA (4-port multimode fiber with MT-RJ connectors)
- 450-1SX MDA—1000BASE-SX MDA (1-port shortwave gigabit fiber)
- 450-1SR MDA—1000BASE-SX MDA (1-port shortwave gigabit fiber with 1 redundant port)
- 450-1LX MDA—1000BASE-LX MDA (1-port longwave gigabit fiber)
- 450-1LR MDA—1000BASE-LX MDA (1-port longwave gigabit fiber with 1 redundant port)

For information about installing MDAs, see [Chapter 8, “Installing media dependent adapters on 8100 modules,”](#) on page 177.

The port connectors on the 8116FX Module are MT-RJ connectors for use with multimode fiber optic cable.

Each port on the 8116FX Module has a bicolor LED that indicates link and activity status for the port. In addition, the module has three LEDs to indicate system operating conditions (Table 3). Figure 5 shows the locations of the LEDs.

Figure 5 8116FX Module LEDs

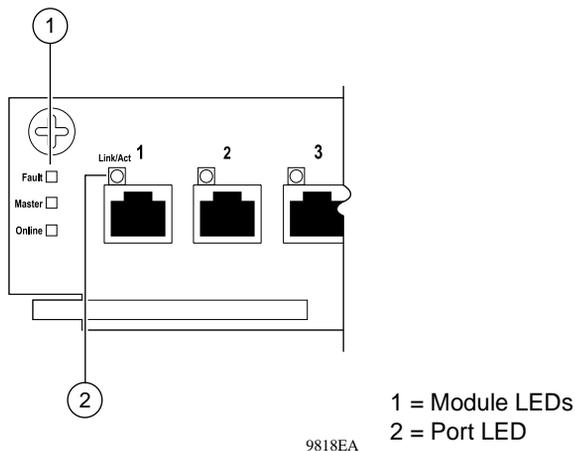



Table 3 8116FX Module LEDs

Type	Label	Color/State	Meaning
Module	Fault	Amber/Steady	A diagnostics failure or hardware failure has been detected.
		Amber/Blinking	A chassis failure has been detected.
		Off	The system is functioning normally.
	Master	Green/Steady	The module is properly generating the system clock for the switch. This LED indication is valid only when the module is installed in chassis slot 1 or 2.
		Amber/Steady	The module has detected a system clock generation failure on its own circuitry. This LED indication is valid only when the module is installed in chassis slot 1 or 2.
		Off	The module is not providing the system clock for the switch. You can pull the module out of the chassis without resetting the switch. (When the module is installed in any slot other than slot 1 or 2, the Master LED is always off.)
	Online	Green/Steady	The module is functioning normally and is in switching mode.
		Green/Blinking	The module is running diagnostic tests.
		Amber/Steady	The module is not in switching mode. Software incompatibility exists, or the module cannot communicate with the master module over the backplane.
		Off	The module is not receiving power or is administratively disabled.
Port	Link/Act	Green/Steady	The link is good.
		Green/Blinking	The link is good, and the port is transmitting or receiving traffic.
		Off	No link exists, or the port is disabled.

8132TX Module

The 8132TX Module (Figure 6) is a single-slot I/O module that provides 32 autosensing 10BASE-T/100BASE-TX switched ports with RJ-45 connectors. The ports have integrated LEDs to indicate port operation, and the module has three additional LEDs to indicate system operation.

Figure 6 8132TX Module

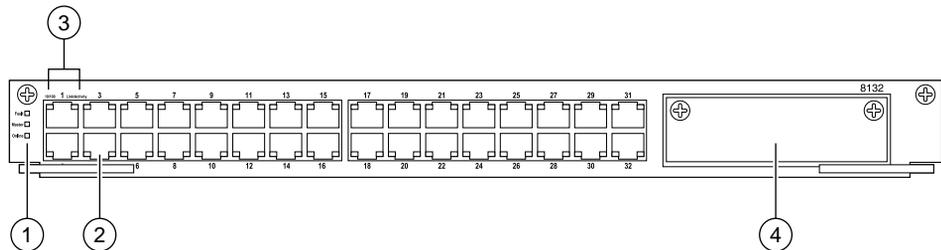

- | | |
|------------------------|---------------|
| 1 = Module LEDs | 3 = Port LEDs |
| 2 = 10/100BASE-TX port | 4 = MDA slot |

10295EA

An expansion slot allows you to install an MDA to provide additional port types. You can add 10/100BASE-T, 100BASE-FX, or Gigabit Ethernet ports by installing an optional MDA (see “MDA slot” on page 43). The MDAs support high-speed connections to servers, shared 100BASE-T hubs, or backbone devices.

Figure 7 shows the 8132TX Module LEDs.

Figure 7 8132TX Module LEDs

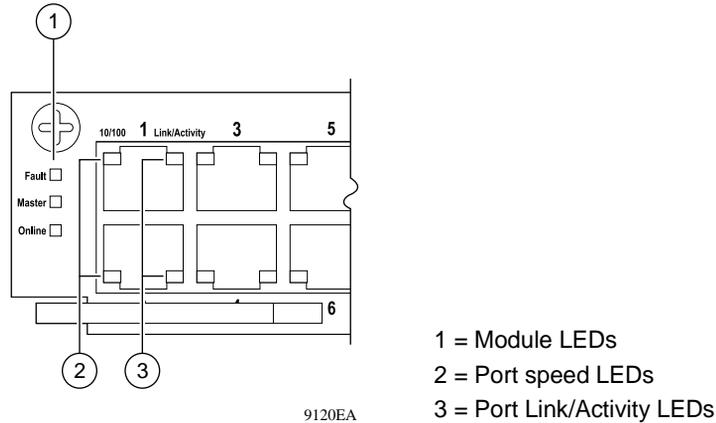


Table 4 describes the 8132TX Module LEDs.

Table 4 8132TX Module LEDs

Type	Label	Color/State	Meaning
Module	Fault	Amber/Steady	A diagnostics failure or hardware failure has been detected.
		Amber/Blinking	A chassis failure has been detected.
		Off	The system is functioning normally.
	Master	Green/Steady	The module is properly generating the system clock for the switch.
		Amber/Steady	The module has detected a system clock generation failure on its own circuitry.
		Off	The module is not providing the system clock for the switch. You can pull the module out of the chassis without resetting the switch.
	Online	Green/Steady	The module is functioning normally and is in switching mode.
		Green/Blinking	The module is running diagnostic tests.
		Amber/Steady	The module is not in switching mode. Software incompatibility exists, or the module cannot communicate with the master module over the backplane.
		Off	The module is not receiving power or is administratively disabled.

Table 4 8132TX Module LEDs (continued)

Type	Label	Color/State	Meaning
Port	10/100 (speed)	Green/Steady	The port is set to operate at 100 Mb/s.
		Off	The port is set to operate at 10 Mb/s.
	Link/ Activity	Green/Steady	The link is good.
		Green/Blinking	The link is good, and the port is transmitting or receiving traffic.
		Off	No link exists, or the port is disabled.

10BASE-T/100BASE-TX port connectors

The 8132TX Module module provides 32 autosensing 10/100 Mb/s ports that support the IEEE 802.3 1998 Clause 28 autonegotiation standard. Each port can operate in full- or half-duplex mode. When a port is connected to another device that also supports the IEEE 802.3 1998 Clause 28 standard, the two devices negotiate the best speed and duplex mode of operation.

The port connectors are 8-pin modular RJ-45 connectors configured as media-dependent interface-crossover (MDI-X) connections. You can connect these ports to an MDI port (for example, a workstation or server) using a straight-through cable. If you are connecting to a device that does not have an MDI port, use a crossover cable (see [“MDI and MDI-X connections”](#) on [page 251](#)).



Note: For 10 Mb/s connections, you can use Category 3, 4, or 5 copper unshielded twisted pair (UTP) cable. Use only Category 5 UTP cable to connect ports that will operate at 100 Mb/s.

MDA slot

The MDA slot allows you to install optional media dependent adapters (MDAs) that support a range of media types. The 8132TX Module supports the following MDAs:


- 8100-4TX MDA—10BASE-T/100BASE-TX MDA (4-port copper)
- 8100-2FX MDA—100BASE-FX MDA (2-port multimode fiber with SC connectors)
- 8100-4FX MDA—100BASE-FX MDA (4-port multimode fiber with MT-RJ connectors)
- 450-1SX MDA—1000BASE-SX MDA (1-port shortwave gigabit fiber)
- 450-1SR MDA—1000BASE-SX MDA (1-port shortwave gigabit fiber with 1 redundant port)
- 450-1LX MDA—1000BASE-LX MDA (1-port longwave gigabit fiber)
- 450-1LR MDA—1000BASE-LX MDA (1-port longwave gigabit fiber with 1 redundant port)

For information about installing MDAs, see [Chapter 8, “Installing media dependent adapters on 8100 modules,”](#) on page 177.

8148TX Module

The 8148TX Module provides 48 autonegotiating 10/100 Mb/s ports (Figure 8). Each port can operate in full- or half-duplex mode. Autonegotiation circuitry automatically negotiates the highest possible data rate and the duplex operation possible with the attached device, if the attached device supports the IEEE 802.3 1998 Clause 28 autonegotiation standard.

Figure 8 8148TX Module

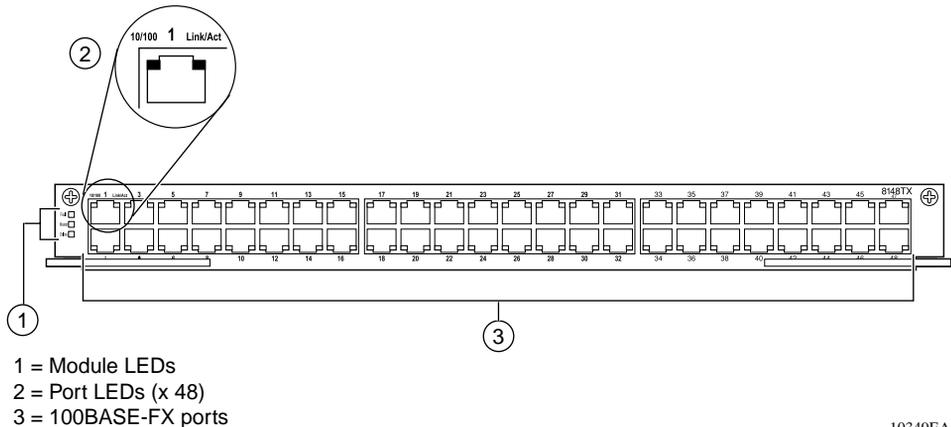

10349EA

The 8148TX Module uses 10BASE-T/100BASE-TX RJ-45 port connectors to connect to 10 Mb/s or 100 Mb/s Ethernet segments or nodes.



Note: For 10 Mb/s connections, you can use Category 3, 4, or 5 copper unshielded twisted pair (UTP) cable. Use only Category 5 UTP cable to connect ports that will operate at 100 Mb/s.

The port connectors are modular RJ-45 connectors with MDI-X wiring. Each port can be connected to an MDI port (for example, a workstation or server) using a straight-through cable. If you are connecting to a device that does not have an MDI port, use a crossover cable (see “[MDI and MDI-X connections](#)” on [page 251](#)).

Figure 9 shows the 8148TX Module LEDs.

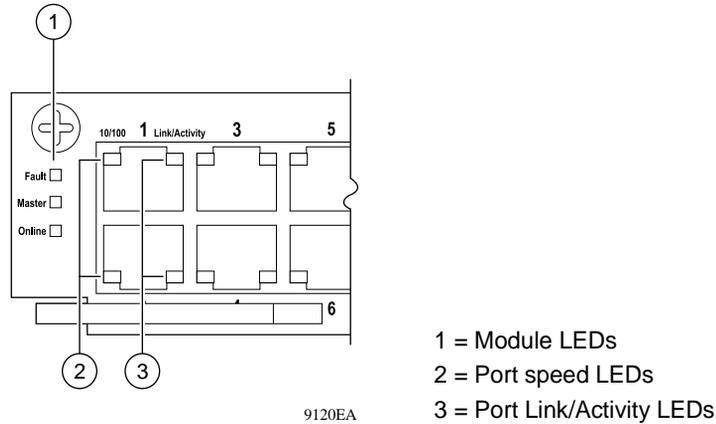
Figure 9 8148TX Module LEDs

Table 5 describes the 8148TX Module LEDs.

Table 5 8148TX Module LEDs

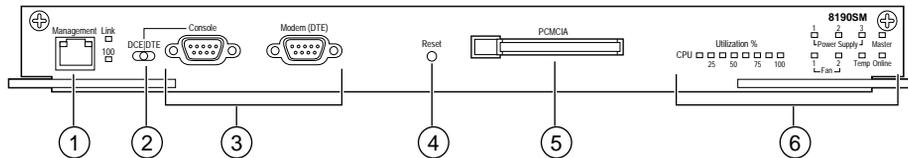
Type	Label	Color/State	Meaning
Module	Fault	Amber/Steady	A diagnostics failure or hardware failure has been detected.
		Amber/Blinking	A chassis failure has been detected.
		Off	The system is functioning normally.
	Master	Green/Steady	The module is properly generating the system clock for the switch.
		Amber/Steady	The module has detected a system clock generation failure on its own circuitry.
		Off	The module is not providing the system clock for the switch. You can pull the module out of the chassis without resetting the switch.
	Online	Green/Steady	The module is functioning normally and is in switching mode.
		Green/Blinking	The module is running diagnostic tests.
		Amber/Steady	The module is not in switching mode. Software incompatibility exists, or the module cannot communicate with the master module over the backplane.
		Off	The module is not receiving power or is administratively disabled.

Table 5 8148TX Module LEDs (continued)

Type	Label	Color/State	Meaning
Port	10/100 (speed)	Green/Steady	The port is set to operate at 100 Mb/s.
		Off	The port is set to operate at 10 Mb/s.
	Link/Activity	Green/Steady	The link is good.
		Green/Blinking	The link is good, and the port is transmitting or receiving traffic.
		Off	No link exists, or the port is disabled.

8190SM Module

The 8190SM Module (Figure 10) provides an onboard CPU for management of the 8100 modules. A 8010co Chassis with 8100 modules requires one 8190SM Module. The 8010co Chassis supports two 8190SM Modules in slots 5 and 6.

Figure 10 8190SM Module

10455EA

- 1 = Ethernet Management port
- 2 = DCE/DTE switch
- 3 = Console and Modem ports
- 4 = Reset button
- 5 = PCMCIA card slot
- 6 = Module LEDs

The 8190SM Module consists of a printed circuit board with status LEDs, a PCMCIA card slot, a management port, a console port, a modem port, a reset button, and a DCE/DTE switch for the console port (Figure 10).

Image, configuration, and log files are stored on the flash memory (onboard and PCMCIA) of the module. The Ethernet port on the module provides out-of-band management.



Note: Nortel Networks recommends that you use the Ethernet port on the 8190SM Module for management instead of a switched port.

To enable redundant operation, install a 8190SM Module in both slots 5 and 6 of the chassis. If one CPU fails, control is automatically passed to the redundant 8190SM Module.


You can install the switch management module (8190SM Module) in the chassis with the switch fabric module (8691SF Module). The 8691SF Module provides layer 3 functionality for routing switch modules.



Note: 8000 Series software Release 3.2 and beyond does not support configurations of 8100 modules and 8600 modules installed within the same chassis.

[Figure 11](#) shows the location of the LEDs on the 8190SM Module. [Table 6](#) describes the 8190SM Module LEDs.

Figure 11 8190SM Module LEDs

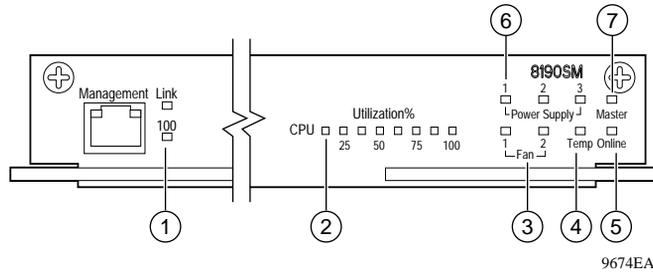

- 1 = Management port LEDs
- 2 = CPU utilization LEDs
- 3 = Fan LEDs
- 4 = Temp LED
- 5 = Online LED
- 6 = Power Supply LEDs
- 7 = Master LED

Table 6 8190SM Module LEDs

Label	Color/State	Meaning
Link	Green/Steady	The management port is connected, and the link is good.
	Off	There is no link to the management port.
100	Green/Steady	The management port is operating at 100 Mb/s.
	Off	The management port is operating at 10 Mb/s.
Utilization % (8 LEDs)	Green	The number of lit LEDs indicates the level of CPU activity.
Power Supply 1, 2, 3	Green/Steady	The specified power supply is operating normally.
	Amber/Steady	The specified power supply has a fault.
	Off	A power supply is not present in the specified bay, or the power supply in the specified bay is not turned on.
Fan 1, 2	Green/Steady	The specified fan is operating normally.
	Amber/Steady	The specified fan has failed.
Temp	Green/Steady	The temperature is normal for switch operation.
	Amber/Steady	The maximum operating temperature has been exceeded.

Table 6 8190SM Module LEDs (continued)

Label	Color/State	Meaning
Master	Green/Steady	The CPU subsystem on the module is up and in standby mode.
	Green/Blinking	The module is providing active CPU functions for the switch.
	Amber/Steady	The CPU subsystem is in a fault state.
	Off	The CPU subsystem on the module is performing diagnostics.
Online	Off	This LED is always off during operation of the 8190SM module.

Ethernet management port

The Ethernet management port on the 8190SM Module is an MDI 10/100BASE-T port that allows out-of-band management of the switch using a Web browser or Device Manager. You can also establish a Telnet session to access the command line interface (CLI). Use the Ethernet management port to connect the switch to a network management station. The Ethernet management port has its own IP address but does not switch traffic to other ports in the chassis.



Note: This port should be used only as a management port. This port provides out-of-band management for the 8190SM CPU Module.

DCE/DTE switch

The DCE/DTE switch changes the pin assignments on the Console port and allows you to designate the connector as either DTE or DCE. For information about pin assignments for the Console port, see [“Console serial port” on page 249](#).

Serial ports

The 8190SM Module provides two serial ports for attaching modem and console devices. The Console port provides terminal access to the 8190SM Module to use the CLI. The Modem port allows you to connect a standard modem for out-of-band, dial-up management. For information about pin assignments for these ports, see [“Console serial port” on page 249](#) and [“Modem serial port” on page 250](#).

Reset button

The recessed Reset button on the module allows you to perform a hard reset or reboot of the system.

PCMCIA card slot

The 8190SM Module provides a PCMCIA card slot for use with an ATA-type SanDisk*-compatible flash memory card. This memory card provides a convenient way to store switch configurations and boot images. Using a memory card, you can quickly transfer configurations and images among multiple switches or store multiple configurations for a single switch.



Caution: You cannot use the Accelar 1200 PCMCIA card in 8000 Series equipment.

Chapter 3

8600 modules

The 8600 modules provide a full complement of core routing and switching capabilities in a 8010co Chassis. The 8600 modules include a switch fabric module and input/output (I/O) modules. For CPU system redundancy, you can install two management modules. A 8010co Chassis with installed 8600 modules constitutes a 8600 Switch with distributed management and full redundancy that delivers wire-speed routing and layer 2 switching.

The 8600 I/O modules support different types of interfaces with different speeds and port types including:

- 10/100 megabit per second (Mb/s) autonegotiating twisted pair Ethernet ports
- 100 Mb/s fiber Ethernet ports
- 1000 Mb/s fiber Ethernet ports
- 10,000 Mb/s fiber Ethernet ports
- ATM OC-3c/STM-1, OC-12c/STM-4 and DS-3 ports
- POS OC-3c/STM-1 and OC-12c/STM-4 ports

This chapter includes the following topics:

Topic	Page
8608GBE and 8608GBM Modules	54
8608GTE and 8608GTM Modules	57
8608SXE Module	60
8616GTE Module	62
8616SXE Module	63
8624FXE Module	66
8632TXE and 8632TXM Modules	68
8648TXE and 8648TXM Modules	70

Topic	Page
8672ATME and 8672ATMM Modules	73
8681XLR Module	75
8681XLW Module	77
8683POSM Module	79
8691SF Module	80

Table 7 lists the maximum port densities available with each type of I/O module.

Table 7 Maximum port densities for 8600 modules

Module type	Port type	Maximum number of ports
8608GBE or 8608GBM	1000BASE-SX	64
	1000BASE-LX	64
	1000BASE-ZX	64
	1000BASE-XD	64
	1000BASE-WDM	64
8608GTE or 8608GTM	1000BASE-T	64
8608SXE	1000BASE-SX	64
8616GTE	1000BASE-T	128
8616SXE	1000BASE-SX	128
8624FXE	100BASE-FX	192
8632TXE or 8632TXM	10BASE-T/100BASE-TX	256
	1000BASE-SX	16
	1000BASE-LX	16
	1000BASE-ZX	16
	1000BASE-XD	16
	1000BASE-WDM	16
8648TXE or 8648TXM	10/100 Mb/s	384

Table 7 Maximum port densities for 8600 modules (continued)

Module type	Port type	Maximum number of ports
8672ATME or 8672ATMM ¹	OC-3c MDA	48
	OC-12c MDA	12
	DS-3 MDA	24
8681XLR	10BASE-LR	8
8681XLW	10BASE-LW	8
8683POSM ²	OC-3c MDA	24
	OC-12c MDA	12

1 For information about MDAs for the 8672ATME and 8672ATMM Modules, see [“8672ATME and 8672ATMM Modules” on page 73](#).

2 For information about MDAs for the 8683POSM Module, see [“8683POSM Module.”](#)

Local storage of forwarding data allows the forwarding engine to resolve addresses and to forward packets through the switch fabric without CPU intervention. The forwarding engine also filters packets against current prioritization policies and can set prioritization information in the internal packet header.

The backplane forwarding module is equipped with eight priority queues per port. You can use either of the following two prioritization schemes:

- Strict priority
- Weighted Round Robin (WRR)

Strict priority guarantees the highest priority. WRR gives priority based on a round robin algorithm. For more information on prioritization schemes see *Network Design Guidelines*.

Output buffer memory consists of 8 MB of memory allocated to each Gigabit Ethernet port or shared among eight 10/100 ports. For the 8681XLR and the 8681XLW Modules, output buffer memory consists of 64 MB of memory allocated to the port.

The front of the module contains the physical layer devices, including the optical transceivers and the MAC controllers.

8608GBE and 8608GBM Modules

The 8608GBE Module is a 32K records module.



Note: If one, or more modules installed in the chassis is a 32K records module, these modules will be disabled if the chassis is configured to operate in MMode (128K records mode). For instructions on enabling or disabling MMode, see *Platform and System Management*.


The 8608GBM Module is a 128K records module which allows support for large layer 2 and layer 3 configurations. The 8608GBM module will only operate with 8000 Series software release 3.3 and later.

For 128K record support the following configurations are required:

- The chassis must include at least one 8691SF CPU module. If the chassis includes a 8690SF module, the mode defaults back to 32K mode.
- All modules installed in the chassis must support 128K records (M modules) running 3.3 and later software.
- MMode (128K records mode) must be enabled. If one or more modules installed in the chassis is a 32K records module, these modules will be disabled if the chassis is configured to operate in MMode. For instructions on enabling MMode, see *Platform and System Management*.

Both the 8608GBE and 8608GBM Modules ([Figure 12](#)) provide eight bays for installing gigabit interface converters (GBICs). The fiber ports on the GBICs allow you to make riser connections, server attachments, or interswitch links.

Figure 12 8608GBE or 8608GBM Module

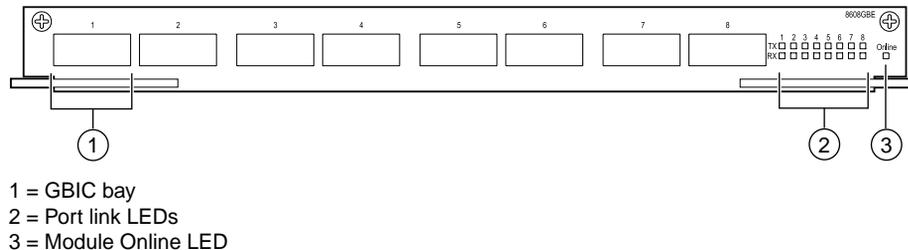

9717EC

The following types of GBICs are supported:

- 1000BASE-WDM
- 1000BASE-SX
- 1000BASE-LX
- 1000BASE-ZX
- 1000BASE-XD




Note: Only GBICs qualified by Nortel Networks are supported for use in the 8608GBE and 8608GBM Modules. For specific model numbers, refer to the Nortel Networks price list.

For more information about the GBICs and instructions for installing them, see [Chapter 7, “Installing gigabit interface converters,”](#) on page 173.

[Figure 13](#) shows the location of the 8608GBE/8608GBM Module LEDs.

Figure 13 8608GBE/8608GBM Module LEDs

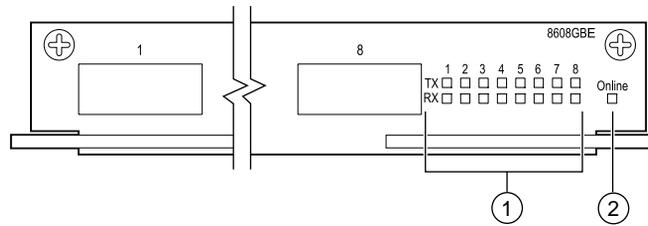

1 = Port TX and RX LEDs
2 = Module Online LED

9718EB

Table 8 describes the 8608GBE and 8608GBM Module LEDs.

Table 8 8608GBE/8608GBM Module LEDs

Type	Label	Color/State	Meaning
Port	TX	Green/Blinking	The port is transmitting data.
		Amber/Steady	A fault condition exists on the line or on the attached remote device.
		Off	The port has not detected a fault condition.
	RX	Green/Steady	The port has a link and is enabled.
		Green/Blinking	The port is receiving data.
		Amber/Steady	The port has either no optical signal or no link synchronization.
		Off	The port has signal but no link.
Module	Online	Green/Steady	The module has completed its power-on self-test and software initialization and is operating normally.
		Amber/Steady	The module failed its power-on self-test.
		Off	The switch power is off, or the power has been turned on and the module is going through its power-on self-test and software initialization. A module in this state is not yet functional.

8608GTE and 8608GTM Modules

The 8608GTE Module is a 32K records module.



Note: If one, or more modules installed in the chassis is a 32K records module, these modules will be disabled if the chassis is configured to operate in MMode (128K records mode). For instructions on enabling or disabling MMode, see *Platform and System Management*.


The 8608GTM Module is a 128K records module which allows support for large layer 2 and layer 3 configurations. The 8608GTM module will only operate with 8000 Series software release 3.3 and later.

For 128K record support the following configurations are required:

- The chassis must include at least one 8691SF CPU module. If the chassis includes a 8690SF module, the mode defaults back to 32K mode.
- All modules installed in the chassis must support 128K records (M modules) running 3.3 and later software.
- MMode (128K records mode) must be enabled. If one or more modules installed in the chassis is a 32K records module, these modules will be disabled if the chassis is configured to operate in MMode. For instructions on enabling MMode, see *Platform and System Management*.

Both the 8608GTE and 8608GTM Modules ([Figure 14](#)) provide eight 1000BASE-T, copper gigabit ports. The ports support the IEEE 802.3ab standard for autonegotiation. The ports can operate full duplex at a rate of 1000 Mb/s. Links will only be established with devices that can support autonegotiated connections that meet these parameters.


Figure 14 8608GTE/8608GTM Module

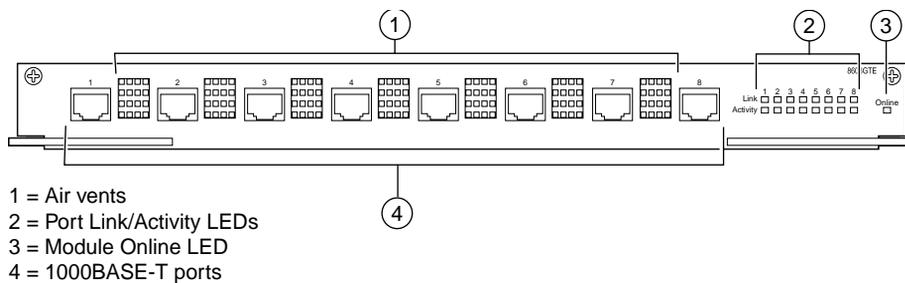

10351EB

Figure 15 shows the location of the 8608GTE/8608GTM Module LEDs.

Figure 15 8608GTE/8608GTM Module LEDs

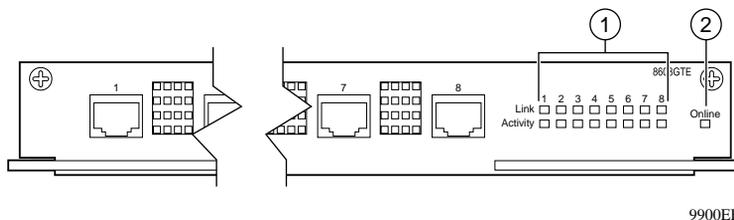

9900EB

- 1 = Port Link and Activity LEDs
- 2 = Module Online LED

Table 9 describes the 8608GTE and 8608GTM Module LEDs.

Table 9 8608GTE/8608GTM Module LEDs

Type	Label	Color/State	Meaning
Port	Link	Green/Steady	The port has established a link and is enabled.
		Amber/Steady	The port is connected, but an error condition is detected.
		Off	The port is disabled or has no link.
	Activity	Green/Blinking	The port is receiving data. NOTE: As port utilization increases this LED may blink so fast that it appears to be steady.
Module	Online	Green/Steady	The module has completed its power-on self-test and software initialization and is operating normally.
		Amber/Steady	The module failed its power-on self-test.
		Amber/Blinking	The module has been inserted into the chassis and diagnostics are running.
		Off	The module power is off, or the power has been turned on, and the module is going through its power-on self-test and software initialization. A module in this state is not yet functional.

8608SXE Module


The 8608SXE Module ([Figure 16](#)) is a 32K records module.



Note: If one, or more modules installed in the chassis is a 32K records module, these modules will be disabled if the chassis is configured to operate in MMode (128K records mode). For instructions on enabling or disabling MMode, see *Platform and System Management*.

The 8608SXE Module consists of a printed circuit board with eight 1000BASE-SX ports (850 nanometer [nm] shortwave, Gigabit Ethernet) for riser connections, server attachments, or interswitch links.

Figure 16 8608SXE Module

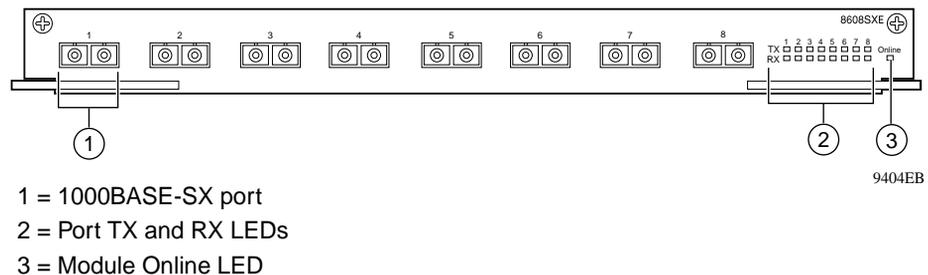


The shortwave optical transceivers provide transmission ranges as follows:

- Up to 260 meters (m) using 62.5 micrometers (μm) multimode fiber cable
- Up to 440 m using 50 μm multimode fiber cable

The 8608SXE Module supports standards-based full-duplex operation only.

[Figure 17](#) shows the location of the 8608SXE Module LEDs.

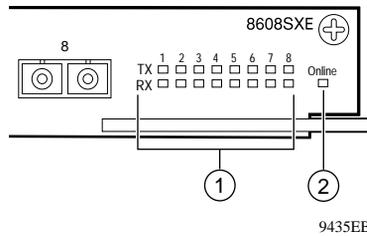Figure 17 8608SXE Module LEDs

1 = Port TX and RX LEDs

2 = Module Online LED

[Table 10](#) describes the 8608SXE Module LEDs.

Table 10 8608SXE Module LEDs

Type	Label	Color/State	Meaning
Port	TX	Green/Blinking	The port is transmitting data.
		Amber/Steady	A fault condition exists on the line or on the attached remote device.
		Off	The port has not detected a fault condition.
	RX	Green/Steady	The port has established a link and is enabled.
		Green/Blinking	The port is receiving data.
		Amber/Steady	The port has either no optical signal or no link synchronization.
		Off	The port has signal but no link.
Module	Online	Green/Steady	The module has completed its power-on self-test and software initialization and is operating normally.
		Amber/Steady	The module failed its power-on self-test.
		Off	The switch power is off, or the power has been turned on and the module is going through its power-on self-test and software initialization. A module in this state is not yet functional.

8616GTE Module


The 8616GTE Module (Figure 18) is a 32K records module.



Note: If one, or more modules installed in the chassis is a 32K records module, these modules will be disabled if the chassis is configured to operate in MMode (128K records mode). For instructions on enabling or disabling MMode, see *Platform and System Management*.

The 8616GTE Module provides sixteen 1000BASE-T, copper gigabit ports. The ports support the IEEE 802.3ab standard for autonegotiation. The ports can operate full duplex at a rate of 1000 Mb/s. Links will only be established with devices that can support autonegotiated connections that meet these parameters.


Figure 18 8616GTE Module

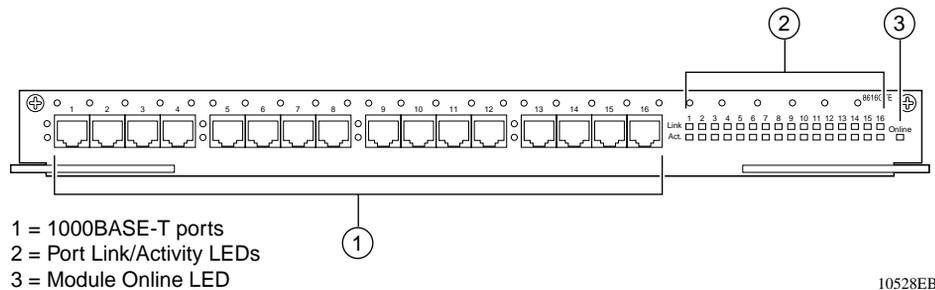

10528EB

Figure 19 shows the location of the 8616GTE Module LEDs.

Figure 19 8616GTE Module LEDs

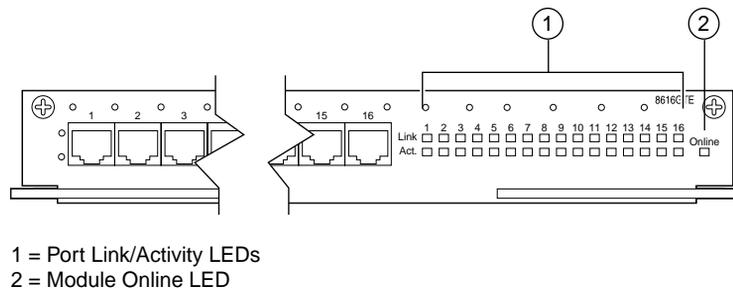

10529EB

Table 11 describes the 8616GTE Module LEDs.

Table 11 8616GTE Module LEDs

Type	Label	Color/State	Meaning
Port	Link	Green/Steady	The port has established a link and is enabled.
		Amber/Steady	The port is connected, but an error condition is detected.
		Off	The port is disabled or has no link.
	Activity	Green/Blinking	The port is receiving data. NOTE: As port utilization increases this LED may blink so fast that it appears to be steady.
Module	Online	Green/Steady	The module has completed its power-on self-test and software initialization and is operating normally.
		Amber/Steady	The module failed its power-on self-test.
		Amber/Blinking	The module has been inserted into the chassis and diagnostics are running.
		Off	The module power is off, or the power has been turned on, and the module is going through its power-on self-test and software initialization. A module in this state is not yet functional.


8616SXE Module

The 8616SXE Module (Figure 20) is a 32K records module.



Note: If one, or more modules installed in the chassis is a 32K records module, these modules will be disabled if the chassis is configured to operate in MMode (128K records mode). For instructions on enabling or disabling MMode, see *Platform and System Management*.

It provides 16 1000BASE-SX ports (850 nm, shortwave, Gigabit Ethernet) for riser connections, server attachments, or interswitch links.

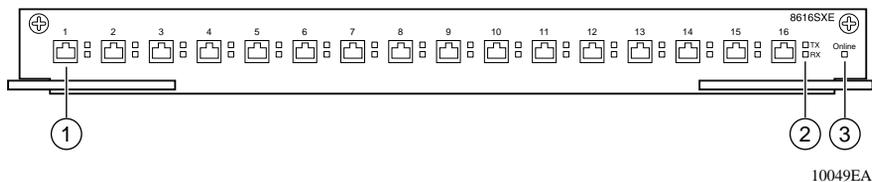Figure 20 8616SXE Module


- 1 = 1000BASE-SX port
- 2 = Port TX and RX LEDs
- 3 = Module Online LED

The shortwave optical transceivers provide transmission ranges as follows:

- Up to 275 m using 62.5 μm multimode fiber cable
- Up to 550 m using 50 μm multimode fiber cable

The 8616SXE Module supports standards-based 1000 Mb/s full-duplex operation only.

[Figure 21](#) shows the location of the 8616SXE Module LEDs.

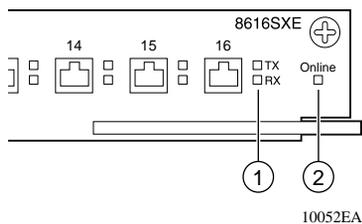Figure 21 8616SXE Module LEDs

- 1 = Port TX and RX LEDs
- 2 = Module Online LED

Table 12 describes the 8616SXE Module LEDs.

Table 12 8616SXE Module LEDs

Type	Label	Color/State	Meaning
Port	TX	Green/Blinking	The port is transferring data.
		Off	There is no port activity.
	RX	Green/Steady	The port has established a link and is enabled.
		Green/Blinking	The port is receiving data.
		Amber/Steady	The port has either no optical signal or no link synchronization.
		Off	The port has a signal but no link.
Module	Online	Green/Steady	The module has completed its power-on self-test and software initialization and is operating normally.
		Amber/Steady	The module failed its power-on self-test.
		Off	The switch power is off, or the power has been turned on and the module is going through its power-on self-test and software initialization. A module in this state is not yet functional.

8624FXE Module


The 8624FXE Module (Figure 22) is a 32K records module.



Note: If one, or more modules installed in the chassis is a 32K records module, these modules will be disabled if the chassis is configured to operate in MMode (128K records mode). For instructions on enabling or disabling MMode, see *Platform and System Management*.

The 8624FXE Module uses fiber optic technology to allow long-distance connections for backbone and riser applications. The module consists of a printed circuit board with status LEDs and 24 100BASE-FX ports.

Figure 22 8624FXE Module

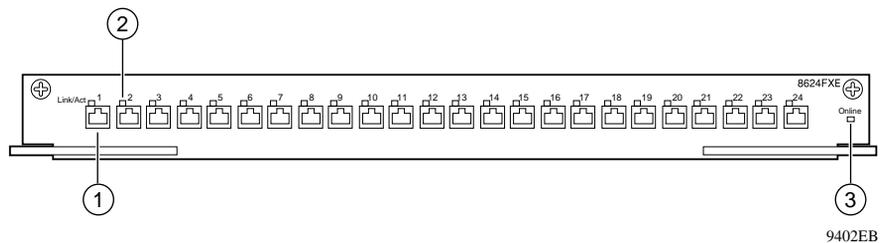


- 1 = 100BASE-FX port
- 2 = Port LED
- 3 = Module Online LED

The 24 100BASE-FX ports on the 8624FXE Module can operate in full-duplex mode. The optical transceivers provide transmission ranges of up to 6562 ft (2 km) using 62.5 μm multimode fiber cable.

Figure 23 shows the location of the LEDs.

Figure 23 8624FXE Module LEDs

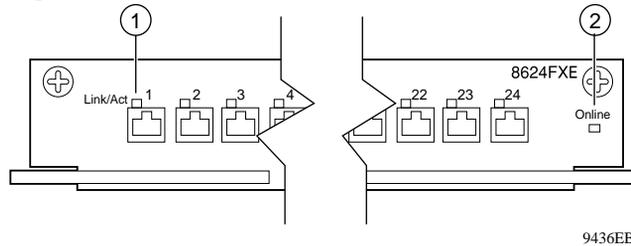

1 = Port Link/Activity LEDs

2 = Module Online LED

Table 13 describes the 8624FXE Module LEDs.

Table 13 8624FXE Module LEDs

Type	Label	Color/State	Meaning
Port	Link/Act	Green/Steady	The port is connected, and the link is good.
		Green/Blinking	Data is passing through this port.
		Amber/Steady	A fault condition exists at the far end of the connection.
		Amber/Blinking	A fault condition exists at the far end of the connection, and the port is sending or receiving.
		Off	The port is not connected, or it is connected but has no link.
Module	Online	Green/Steady	The module has completed its power-on self-test and software initialization and is operating normally.
		Amber/Steady	The module failed its power-on self-test.
		Off	The switch power is off, or the power has been turned on and the module is going through its power-on self-test and software initialization. A module in this state is not yet functional.

8632TXE and 8632TXM Modules

The 8632TXE Module is a 32K records module.



Note: If one, or more modules installed in the chassis is a 32K records module, these modules will be disabled if the chassis is configured to operate in MMode (128K records mode). For instructions on enabling or disabling MMode, see *Platform and System Management*.


The 8632TXM Module is a 128K records module which allows support for large layer 2 and layer 3 configurations. The 8632TXM module will only operate with 8000 Series software release 3.3 and later.

For 128K record support the following configurations are required:

- The chassis must include at least one 8691SF CPU module.
- All modules installed in the chassis must support 128K records (M modules) running 3.3 and later software.
- MMode (128K records mode) must be enabled. If one or more modules installed in the chassis is a 32K records module, these modules will be disabled if the chassis is configured to operate in MMode. For instructions on enabling MMode, see *Platform and System Management*.

Both the 8632TXE and 8632TXM Modules (Figure 24) consist of a printed circuit board with status LEDs, 32 autonegotiating 10/100 Mb/s ports, and two bays for 1000BASE-X gigabit interface connectors (GBICs).

Figure 24 8632TXE/8632TXM Module

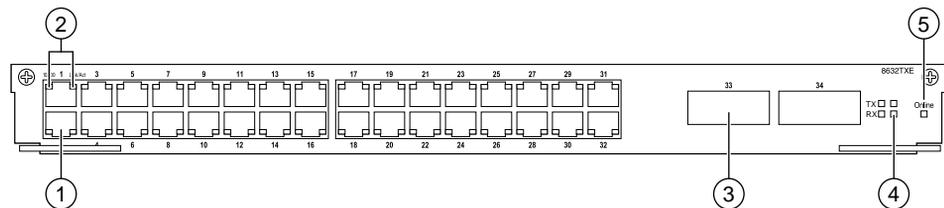


- 1 = 10/100 Mb/s port
- 2 = Port LEDs: 10/100 (speed), link/activity
- 3 = GBIC bay
- 4 = GBIC TX and RX LEDs
- 5 = Module online LED

10458EA

Both the 8632TXE and 8632TXM Module ports support the IEEE 802.3 1998 Clause 28 autonegotiation standard. Each port can operate in full- or half-duplex mode. When a port is connected to another device that also supports the IEEE 802.3 1998 Clause 28 autonegotiation standard, the two devices negotiate the highest possible data rate and the duplex mode of operation.

Figure 25 shows the location of the 8632TXE and 8632TXM Module LEDs.

Figure 25 8632TXE/8632TXM Module LEDs

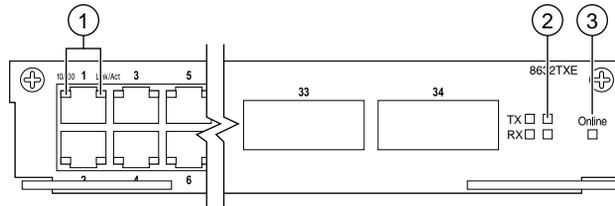

- 1 = Port LEDs: 10/100 (speed), link/activity
- 2 = GBIC TX and RX LEDs
- 3 = Module online LED

10459EA

Table 14 describes the 8632TXE and 8632TXM Module LEDs.

Table 14 8632TXE/8632TXM Module LEDs

Type	Label	Color/State	Meaning
Module	Online	Green/Steady	The module has completed its power-on self-test and software initialization and is operating normally.
		Amber/Steady	The module failed its power-on self-test.
		Off	The switch power is off, or the power has been turned on and the module is performing its power-on self-test and software initialization. A module in this state is not yet functional.
Port	10/100	Green/Steady	The port is operating at 100 Mb/s.
		Off	The port is operating at 10 Mb/s.
	Link/Act	Green/Steady	The port is connected, and the link is good.
		Green/Blinking	Data is passing through this port.
		Off	The port is disabled or has no link.

Table 14 8632TXE/8632TXM Module LEDs (continued)

Type	Label	Color/State	Meaning
GBIC	TX	Green/Blinking	The port is transmitting data.
		Amber/Steady	A fault condition exists on the line or on the attached remote device.
		Off	The port has not detected a fault condition.
	RX	Green/Steady	The port has a link and is enabled.
		Green/Blinking	The port is receiving data.
		Amber/Steady	The port has either no optical signal or no link synchronization.
		Off	The port has a signal but no link.

8648TXE and 8648TXM Modules

The 8648TXE Module is a 32K records module.



Note: If one, or more modules installed in the chassis is a 32K records module, these modules will be disabled if the chassis is configured to operate in MMode (128K records mode). For instructions on enabling or disabling MMode, see *Platform and System Management*.


The 8648TXM Module is a 128K records module which allows support for large layer 2 and layer 3 configurations. The 8648TXM module will only operate with 8000 Series software release 3.3 and later.

For 128K record support the following configurations are required:

- The chassis must include at least one 8691SF CPU module.
- All modules installed in the chassis must support 128K records (M modules) running 3.3 and later software.
- MMode (128K records mode) must be enabled. If one or more modules installed in the chassis is a 32K records module, these modules will be disabled if the chassis is configured to operate in MMode. For instructions on enabling MMode, see *Platform and System Management*.

Both the 8648TXE and 8648TXM Modules (Figure 26) consist of a printed circuit board with status LEDs and 48 autonegotiating 10/100 Mb/s ports.

Figure 26 8648TXE/8648TXM Module

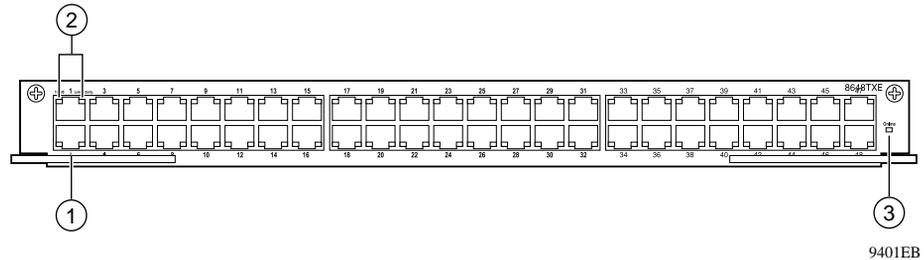


- 1 = 10/100BASE-T port
- 2 = Port LEDs: 10/100 (speed)
Link/Activity
- 3 = Module Online LED

Both the 8648TXE and 8648TXM Module ports support the IEEE 802.3 1998 Clause 28 autonegotiation standard. Each port can operate in full- or half-duplex mode. When a port is connected to another device that also supports the IEEE 802.3 1998 Clause 28 autonegotiation standard, the two devices negotiate the highest possible data rate and the duplex mode of operation.

Figure 27 shows the location of the 8648TXE or 8648TXM Module LEDs.

Figure 27 8648TXE/8648TXM Module LEDs

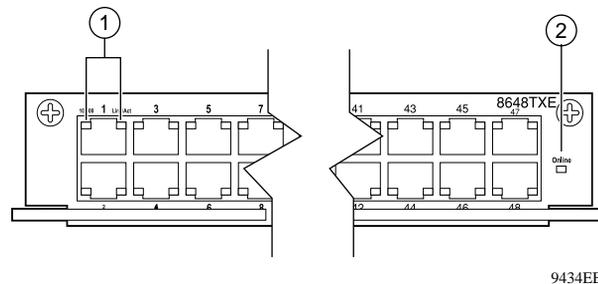

- 1 = Port LEDs: 10/100 (speed) and Link/Activity
- 2 = Module Online LED

Table 15 describes the 8648TXE and 8648TXM Module LEDs.

Table 15 8648TXE Module LEDs

Type	Label	Color/State	Meaning
Port	10/100	Green/Steady	The port is operating at 100 Mb/s.
		Off	The port is operating at 10 Mb/s.
	Link/Activity	Green/Steady	The port is connected, and the link is good.
		Green/Blinking	Data is passing through the port.
		Off	The port is disabled or has no link.
Module	Online	Green/Steady	The module has completed its power-on self-test and software initialization and is operating normally.
		Amber/Steady	The module failed its power-on self-test.
		Off	The switch power is off, or the power has been turned on and the module is going through its power-on self-test and software initialization. A module in this state is not yet functional.

8672ATME and 8672ATMM Modules

The 8672ATME Module is a 32K records module.



Note: If one, or more modules installed in the chassis is a 32K records module, these modules will be disabled if the chassis is configured to operate in MMode (128K records mode). For instructions on enabling or disabling MMode, see *Platform and System Management*.


The 8672ATMM Module is a 128K records module which allows support for large layer 2 and layer 3 configurations. The 8672ATMM module will only operate with 8000 Series software release 3.3 and later.

For 128K record support the following configurations are required:

- The chassis must include at least one 8691SF CPU module.
- All modules installed in the chassis must support 128K records (M modules) running 3.3 and later software.
- MMode (128K records mode) must be enabled. If one or more modules installed in the chassis is a 32K records module, these modules will be disabled if the chassis is configured to operate in MMode. For instructions on enabling MMode, see *Platform and System Management*.

Both the 8672ATME and 8672ATMM Modules (Figure 28) have two bays each for installing ATM MDAs. These MDAs provide network transmission that supports RFC 1483 routed and bridged PVCs. The 8672ATME and 8672ATMM Modules supports SONET and SDH frame structures for data.

Figure 28 8672ATME/8672ATMM Module with an OC-12c/STM-4 MDA

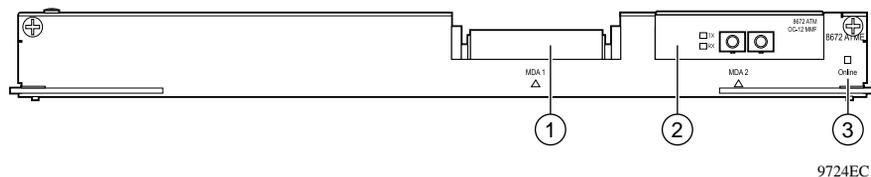

- 1 = MDA bay
2 = Installed MDA
3 = Online LED

The modules requires at least one of the following MDAs:

- 1-port OC-12c/STM-4: single-mode fiber (SMF) or multimode fiber (MMF) using the Synchronous Optical Network (SONET) or Synchronous Digital Hierarchy (SDH) media
- 4-port OC-3c/STM-1: SMF or MMF using SONET or SDH media
- 2-port DS-3

For more information about the MDAs for the 8672ATME and 8672ATMM Modules, see [Chapter 9, “Installing media dependent adapters on 8600 modules,” on page 185.](#)

The PCMCIA card contains the image file for the 8672ATME and 8672ATMM modules. To initialize these modules, see [“Initializing the 8672ATME, 8672ATMM, and 8683POSM Modules.” on page 214.](#)

In the data center, the 8672ATME and 8672ATMM Modules acts as an edge device for WAN connectivity to connect a 8600 switch to public or private ATM networks. In the wiring closet, this module provides inter-building connections for campus networks where each building is supported by frame-switched networks. You can install six 8672ATME or 8672ATMM Modules in one 8010co chassis.

Both the 8672ATME and 8672ATMM Modules have an Online LED that indicates overall status for the module. [Table 16](#) describes the Online LED.

Table 16 8672ATME/8672ATMM Module LED

Color/State	Meaning
Green	The module is receiving power and is ready to receive and transmit traffic.
Amber	The module is initializing and performing diagnostic self-tests.
Off	The module is offline and not receiving power.

See *Using the 8672ATME and 8672ATMM Modules* for a description of how to configure the 8672ATME and 8672ATMM Modules using the Command Line Interface (CLI) or Device Manager.

8681XLR Module


The 8681XLR Module is a 128K records module which allows support for large layer 2 and layer 3 configurations. This module only operates with 8000 Series software release 3.3 and later.

For 128K record support the following configurations are required:

- The chassis must include at least one 8691SF CPU module.
- All modules installed in the chassis must support 128K records (M modules) running 3.3 and later software.
- MMode (128K records mode) must be enabled. If one or more modules installed in the chassis is a 32K records module, these modules will be disabled if the chassis is configured to operate in MMode. For instructions on enabling MMode, see *Platform and System Management*.

The 8681XLR Module (Figure 29) consists of a printed circuit board with status LEDs and one 10GBASE-LR 1310nm 10 gigabit Ethernet serial port. The 10GBASE-LR port (10.3 Gb/s LAN PHY) operates in full-duplex mode and provides transmission ranges of up to 10 km using 9/125 μm single-mode fiber cable.

Figure 29 8681XLR Module

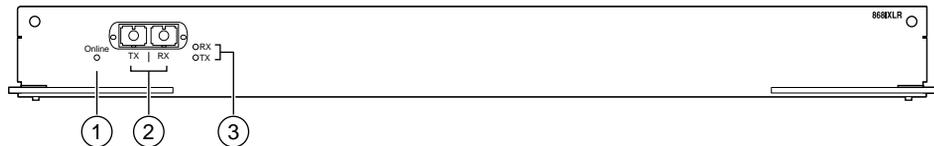

- 1 = Online LED
 2 = 10GBASE LR port
 3 = Port RX and TX LEDs


10548EA

You can install up to eight 8681XLR Modules in one 8010o chassis.

Figure 30 shows the location of the 8681XLR Module LEDs.



Note: Unlike other 8600 Modules, the TX LED for the 8681XLR and 8681XLW Modules is located below the RX LED.

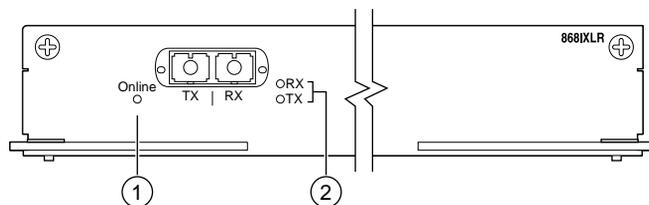Figure 30 8681XLR Module LEDs

1 = Online LED
 2 = Port RX and TX LEDs

10550EA

Table 17 describes the 8681XLR Module LEDs.

Table 17 8681XLR Module LEDs

Type	Label	Color/State	Meaning
Port	TX	Green/Steady	The port is enabled but not transmitting data.
		Green/Blinking	The port is transmitting data.
		Off	The port transmit is disabled.
	RX	Green/Steady	The port has a link and is enabled.
		Green/Blinking	The port is receiving data.
		Amber/Steady	The cable is disconnected, the port is disabled, or the link is down.
Module	Online	Green/Steady	The module has completed its power-on self-test and software initialization and is operating normally.
		Amber/Steady	The module slot is disabled.
		Off	The switch power is off, or the power has been turned on and the module is going through its power-on self-test and software initialization. A module in this state is not yet functional.

8681XLW Module

The 8681XLW Module is a 128K records module which allows support for large layer 2 and layer 3 configurations. This module only operates with 8000 Series software release 3.3 and later.


For 128K record support the following configurations are required:

- The chassis must include at least 8691SF CPU module.
- All modules installed in the chassis must support 128K records (M modules) running 3.3 and later software.
- MMode (128K records mode) must be enabled. If one or more modules installed in the chassis is a 32K records module, these modules will be disabled if the chassis is configured to operate in MMode. For instructions on enabling MMode, see *Platform and System Management*.

The 8681XLW Module (Figure 29) consists of a printed circuit board with status LEDs and one 10GBASE-LW 1310 10 gigabit Ethernet serial WAN port. The 10GBASE-LW port (9.95 Gb/s WAN PHY) operates in full-duplex mode and provides transmission ranges of up to 10 km using 9/125 μm single-mode fiber cable.

You can install up to eight 8681XLR Modules in one 8010co chassis.

Figure 31 8681XLW Module

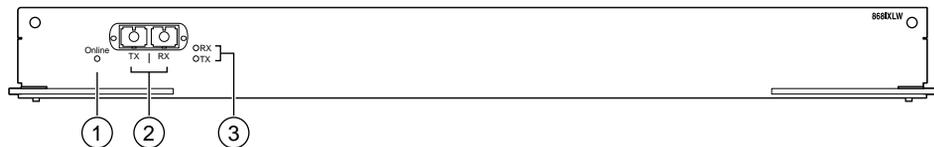


- 1 = Online LED
 2 = 10GBASE LW port
 3 = Port RX and TX LEDs

10547EA

Figure 32 shows the location of the 8681XLW Module LEDs.



Note: Unlike other 8600 Modules, the TX LED for the 8681XLR and 8681XLW Modules is located below the RX LED.

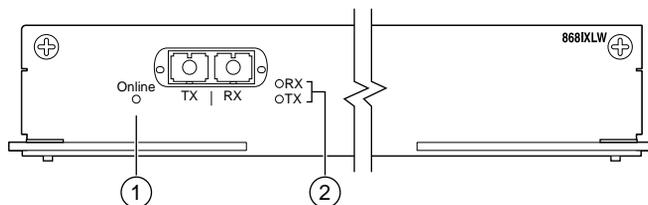Figure 32 8681XLW Module LEDs

1 = Online LED
2 = Port RX and TX LEDs

10549EA

Table 18 describes the 8681XLW Module LEDs.

Table 18 8681XLW Module LEDs

Type	Label	Color/State	Meaning
Port	TX	Green/Steady	The port is enabled but not transmitting data.
		Green/Blinking	The port is transmitting data.
		Off	The port transmit is disabled.
	RX	Green/Steady	The port has a link and is enabled.
		Green/Blinking	The port is receiving data.
		Amber/Steady	The port is disconnected, the port is disabled, the link is down, or SONET errors are detected.
Module	Online	Green/Steady	The module has completed its power-on self-test and software initialization and is operating normally.
		Amber/Steady	The module slot is disabled.
		Off	The switch power is off, or the power has been turned on and the module is going through its power-on self-test and software initialization. A module in this state is not yet functional.

8683POSM Module


The 8683POSM Module is a 128K records module which allows support for large layer 2 and layer 3 configurations. This module only operates with 8000 Series software release 3.3 and later.

For 128K record support the following configurations are required:

- The chassis must include at least one 8691SF CPU module.
- All modules installed in the chassis must support 128K records (M modules) running 3.3 and later software.
- MMode (128K records mode) must be enabled. If one or more modules installed in the chassis is a 32K records module, these modules will be disabled if the chassis is configured to operate in MMode. For instructions on enabling MMode, see *Platform and System Management*.

The 8683POSM Module (Figure 33) has three bays for installing POS MDAs. These MDAs provide WAN support by allowing access to SONET services in the metropolitan area. You can connect multiple campuses in a single metropolitan area without compromising performance or increasing complexity.

Figure 33 8683POSM Module with an OC-12c/STM-4 MDA

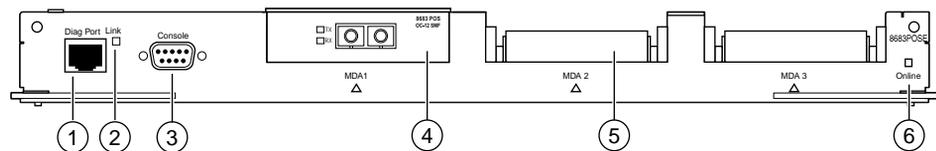

- | | | |
|---------------|-------------------|----------------|
| 1 = Diag port | 3 = Console port | 5 = MDA bay |
| 2 = Link LED | 4 = Installed MDA | 6 = Online LED |

10352EB

To operate, each module requires at least one of the following MDAs:

- 1-port OC-12c/STM-4: SMF or MMF using SONET media
- 2-port OC-3c/STM-1: SMF or MMF using SONET media

For more information about the MDAs for the 8683POSM Module, see [Chapter 9, “Installing media dependent adapters on 8600 modules,”](#) on page 185.

The PCMCIA card contains the image file for the 8683POSM module. To initialize this module, see [“Initializing the 8672ATME, 8672ATMM, and 8683POSM Modules.”](#) on page 214.”

The 8683POSM Module supports a mixture of OC-3c/STM-1 and OC-12c/STM-4 lines. For example, you can install an OC-12c/STM-4 MDA in the first bay and OC-3c MDAs in the two remaining bays. This module supports up to six I/O OC-3c/STM-1 lines and up to three I/O OC-12c/STM-4 lines. You can install up to four 8683POSM Modules in one 8010co Chassis.

The 8683POSM Module has an Online LED that indicates overall status for the module. [Table 19](#) describes the Online LED.


Table 19 8683POSM Module LED

Color/State	Meaning
Green	The module is receiving power and is ready to receive and transmit traffic.
Amber	The module is initializing and performing diagnostic self-tests.
Off	The module is offline and is not receiving power.

See *Using the 8683POSM Module* for a description of how to configure the 8683POSM Module using the Command Line Interface (CLI) or Device Manager.

8691SF Module

The 8691SF Module ([Figure 34](#)) provides the core switching fabric for the 8600 Switch, as well as a CPU subsystem and a real-time clock. The core switching fabric switches all traffic through the routing switch modules. The CPU subsystem manages the routing switch fabric and the other I/O modules.

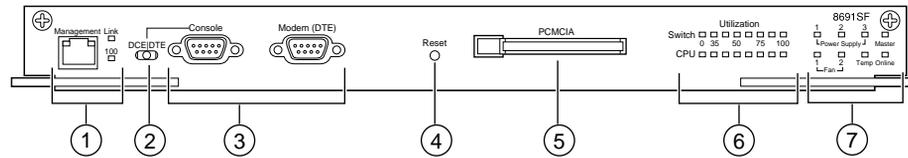Figure 34 8691SF Module

- | | |
|------------------------------|------------------------|
| 1 = Management port and LEDs | 5 = PCMCIA card slot |
| 2 = DCE/DTE switch | 6 = Utilization LEDs |
| 3 = Console and Modem ports | 7 = Module status LEDs |
| 4 = Reset button | |

10354EA

The 8691SF Module consists of a printed circuit board with status LEDs, a management port, a DCE/DTE switch for the console port, a console port, a modem port, a reset button, and a PCMCIA card slot.

The CPU subsystem uses a PowerPC CPU and has 64 megabytes (MB) of synchronous dynamic random access memory (SDRAM). The 8691SF Module contains 16 MB of onboard flash memory, used to store the image file, and 2 MB of boot memory (ROM).


The routing switch fabric uses 10 MB of shared, high-speed memory. This memory buffers traffic destined for I/O modules. The switch logic allocates memory to the various switch priority queues according to traffic usage and current switch configuration.

To enable redundant operation, install a 8691SF Module in both slots 5 and 6 of the chassis. The redundant module in slot 6 can then assume the processing duties of a failing primary 8691SF Module in slot 5. When the 8691SF Module in slot 6 completes initialization, it relearns the routing and VLAN bridging information for the switch unless the HA-CPU flag has been enabled. In that case the static routes and ARP entries for routing are synchronized to the redundant CPU which will result in no interruption of network services.

The two 8691SF Modules share switch fabric functions for the switch. If one 8691SF Module fails, the system reverts to operation with a single 8691SF Module.

[Figure 35](#) shows the location of the 8691SF Module LEDs.

Figure 35 8691SF Module LEDs

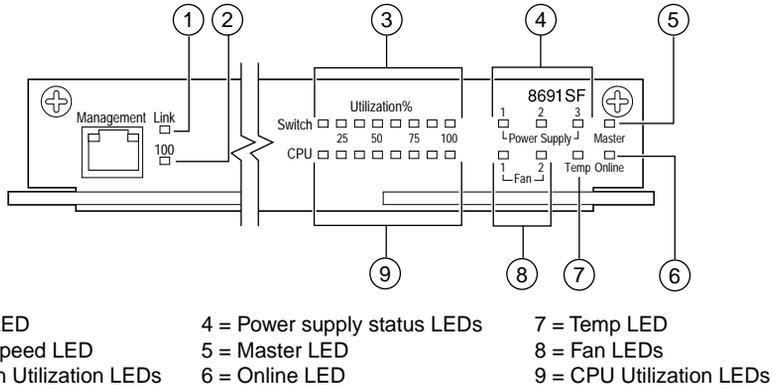

10350EA

The Switch LEDs and the CPU LEDs serve as a bar graph to indicate card activity. The Switch bar graph increases as the switch fabric utilization increases. The CPU bar graph increases when the CPU is actively performing tasks, such as learning media access control (MAC) addresses, updating routing tables, or interacting with the device management station.

Table 20 describes the 8691SF Module LEDs.

Table 20 8691SF Module LEDs

Label	Color/State	Meaning
Link	Green/Steady	The management port is connected, and the link is good.
	Off	There is no link to the management port.
100	Green/Steady	The management port is operating at 100 Mb/s.
	Off	The management port is operating at 10 Mb/s.
Switch Utilization (8 LEDs)	Green	The number of lit LEDs indicates the utilization level of the switch fabric as follows: 1 LED = 10 Mb/s 5 LEDs = 10 Gb/s 2 LEDs = 100 Mb/s 6 LEDs = 20 Gb/s 3 LEDs = 1 Gb/s 7 LEDs = 40 Gb/s 4 LEDs = 5 Gb/s 8 LEDs = 64 Gb/s

Table 20 8691SF Module LEDs (continued)

Label	Color/State	Meaning
CPU Utilization (8 LEDs)	Green	The number of lit LEDs indicates the level of CPU activity as follows: 1 LED = 12% 5 LEDs = 60% 2 LEDs = 24% 6 LEDs = 72% 3 LEDs = 36% 7 LEDs = 84% 4 LEDs = 48% 8 LEDs = 100%
Power Supply 1, 2, 3	Green/Steady	The specified power supply is operating normally.
	Amber/Steady	The specified power supply has a fault.
	Off	A power supply is not present in the specified bay, or the power supply in the specified bay is not turned on.
Fan 1, 2	Green/Steady	The specified fan is operating normally.
	Amber/Steady	The specified fan has failed.
Temp	Green/Steady	The temperature is normal for switch operation.
	Amber/Steady	The maximum operating temperature has been exceeded.
Master	Green/Steady	The CPU subsystem on the module is performing diagnostics.
	Green/Blinking	This module is providing active CPU functions for the switch and is the master CPU module.
	Amber/Steady	The CPU subsystem is in a fault state.
	Off	The CPU subsystem on the module is up and is in standby mode.
Online	Green/Steady	The switch fabric portion of the module is online and is load-sharing.
	Amber/Steady	The switch fabric portion of the module has failed diagnostics.
	Off	The switch fabric portion of the module is off-line.

Ethernet management port

The Ethernet management port on the 8691SF Module is an MDI 10/100BASE-T port that allows out-of-band management of the switch using a Web browser or Device Manager. You can also establish a Telnet or SSH (Secure Shell) session to access the CLI. Use this port to connect the switch to a network management station. The Ethernet management port has its own IP address but does not switch traffic to other ports in the chassis.



Note: This port should be used only as a management port. This port provides out-of-band management for the 8691SF Module.

DCE/DTE switch

The DCE/DTE switch changes the pin assignments on the Console port and allows you to designate the connector as either DTE or DCE. For information about pin assignments for the Console port, see [“Console serial port” on page 273](#).

Serial ports

The 8691SF Module provides two serial ports for attaching modem and console devices. The Console port provides terminal access to the 8691SF Module to use the CLI. The Modem port allows you to connect a standard modem for out-of-band, dial-up management. For information about pin assignments for these ports, see [“Console serial port” on page 273](#) and [“Modem serial port” on page 274](#).

Reset button

The recessed Reset button on the module allows you to perform a hard reset or reboot of the system.

PCMCIA card slot

The PCMCIA card slot in the 8691SF Module accepts an ATA-type, SanDisk-compatible flash memory card. This memory card provides a convenient way to store switch configurations and boot images. Using a memory card, you can quickly transfer configurations and images between switches or store multiple configurations for a single switch.

Supported memory cards for the 8691SF Module include the following:

- Modem cards that are compatible with Intel* 8250 or National 16552 serial ports
- LAN cards from 3Com* 589, 562, or 556 equipment.



Caution: You cannot use the Accelar 1200 PCMCIA card in 8000 Series equipment.

Chapter 4

Installing the 8010co Chassis

This chapter describes how to install the 8010co Chassis. It includes the following topics:

Topic	Page
Preparing to install the 8010co Chassis	87
Installing the chassis	94
Grounding the 8010co chassis	107



Note: If you plan to install DC power supplies and the optional breaker interface panel (BIP), first install the 8010co Chassis as described in this chapter, then install the DC power supplies as described in [Chapter 5, “Installing power supplies.”](#) Install the BIP as described in *Installing the Breaker Interface Panel for the 8010co Chassis*.

Preparing to install the 8010co Chassis

Before beginning the installation, verify that:

- Your shipment is complete and undamaged.
- You have the cables, tools, and other equipment that you need.
- Your installation site meets the physical, electrical, and environmental requirements.

The sections that follow provide information to help you prepare for installation.



Caution: The 8010co Chassis is intended for use in a restricted access location.

Shipment contents

Inspect all items for shipping damage. If you detect any damage, do not install the 8010co Chassis. Call the Nortel Networks Technical Solutions Center in your area (see [“How to get help” on page 27](#)).

In addition to the 8010co Chassis, your shipping container contains several hardware accessories. Verify that the items in the shipping container match those on the shipment packing list.

Use Table 21 as a checklist when verifying the contents of the shipping container.

Table 21 8010co Chassis shipping accessories


Check	Accessory	Use to
	Antistatic wrist strap	Direct the discharge of static electricity from your body to the chassis, thereby avoiding discharge to, and possible damage of, sensitive electronic components.
	<ul style="list-style-type: none"> • One cable adapter • One 10-foot console serial cable 	Connect an optional management console.
	Screws and hardware: <ul style="list-style-type: none"> • 12 Phillips head screws • 12 self tapping hex head screws • 12 clipnuts 	NOTE: The hardware required for mounting the chassis in a rack depends on your rack type. Mount the chassis to a rack rail. Mount the chassis to a Hendry rack. Use the clipnuts if necessary.
	<ul style="list-style-type: none"> • 4 Phillips head screws • 4 hex nuts • 4 self tapping hex head screws 	NOTE: The hardware required for mounting the installation shelf in a rack depends on your rack type. Mount the installation shelf to a rack rail. Mount the installation shelf to a rack rail. Mount the installation shelf to a Hendry rack.
	<ul style="list-style-type: none"> • 4 pan head screws 	Installing the cable management bracket.

Table 21 8010co Chassis shipping accessories

Check	Accessory	Use to
	Installation shelf	Eases mounting the 8010co Chassis in an equipment rack.
	1 upper cable management bracket	Manage network interface cables.
	2 side cable management brackets	Manage network interface cables.
	Bottom bezel	Cover the power supplies and separate the chassis air intake from the power supply air intake.

[Figure 36](#) illustrates the accessories in the 8010co Chassis shipping container.

Figure 36 Accessories in the 8010co Chassis shipping container

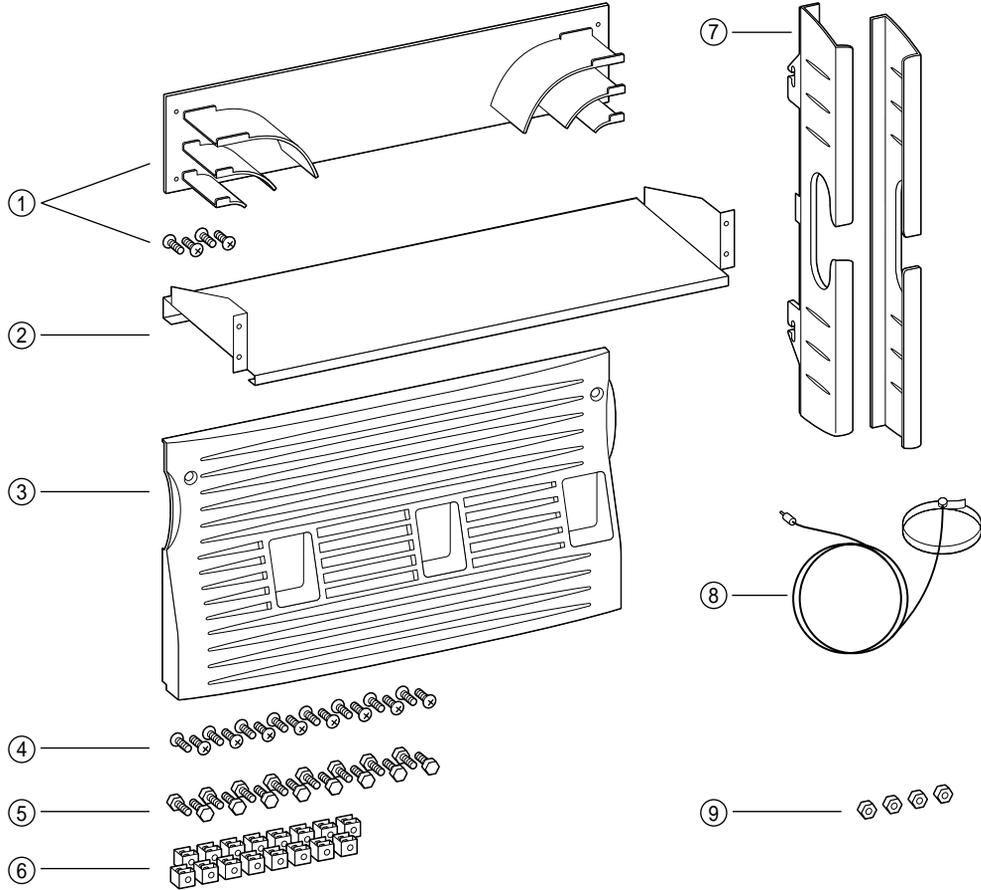

- 1 = Upper cable management bracket and screws (x 4)
- 2 = Installation shelf
- 3 = Bottom bezel
- 4 = Phillips head screws for mounting chassis and installation shelf in a standard 19-inch rack (x 16)

- 5 = Hex head screws for mounting chassis and installation shelf in a Hendry rack (x 16)
- 6 = Clipnuts, use as required for rack type (x 16)
- 7 = Side cable management brackets (x 2)
- 8 = Antistatic wrist strap
- 9 = Hex nuts for mounting installation shelf in a standard 19-inch rack (x4)

10452FB

Supplying equipment

You might need items that are not included in the 8010co Chassis accessory package. Before installing the 8010co hardware, ensure that you have all the cables, tools, and other equipment that you need.

Cables

Unless you specifically ordered them, the cables required for your network configuration are not included in the 8010co Chassis accessory package. If you do not have the proper cables, contact your network administrator.

Hardware for mounting the chassis in an equipment rack

The hardware required for mounting the 8010co Chassis in an equipment rack depends on your equipment rack type.

You will need a Phillips screwdriver to install the 8010co Chassis in a standard rail-type equipment rack. You will need a nutdriver to install the 8010co Chassis in a Hendry rack.

The racks must meet the following specifications:

- Heavy-duty steel construction
- Electronic Industries Association (EIA) standard hole-spacing
- Two-post rack with width of 19 in. (48.26 cm) and depth of 24 in. (60.96 cm)
- Two-post rack with width of 23 in. (58.42 cm) and depth of 24 in. (60.96 cm) (Requires an EIA 19-to-23-inch adapter. Contact your rack manufacturer to order this adapter).

If the rack does not have threaded rail holes, you must use the supplied clipnuts with the clipnut screws (see [Figure 40](#)).

Management console

To configure startup options and to monitor the results of startup diagnostics, you can attach a PC, laptop, VT-100 console or equivalent, such as a PC terminal emulator. Or, you can attach an AT-compatible modem to allow dial-in access to startup configuration and diagnostics.

Site requirements

Ensure that the installation site meets the space, electrical, and environmental requirements listed in this section. See [Appendix A, “Technical specifications for the 8010co Chassis”](#) for more information.

Space requirements

The installation site must provide sufficient free space around the 8010co Chassis to ensure proper ventilation and access for servicing.


Use the following guidelines to plan front and rear access:

- The maintenance aisle in front of the frame requires a clearance of 76.2 cm (30 inches).
- The wiring aisle at the back of the frame requires a clearance of 61 cm (24 inches).

AC input electrical requirements

If you purchased the AC power supplies, the installation site must meet the following electrical requirements for AC power ([Table 22](#)).

Table 22 Wall receptacle requirements for AC power

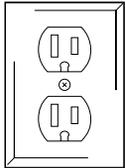Country	Receptacle	Voltage
United States and Canada	National Electrical Manufacturers Association (NEMA) 5-15P  10405EA	100-120 V
Any other country	For installation outside of North America, make sure that you have the proper power cord for your country.	100-240 V

DC input electrical requirements

If you are installing a BIP, the installation site must meet the following electrical requirements for DC power (Table 23).

Table 23 DC power requirement for BIP

Nominal input voltage	Maximum input current	Physical
-48 /-60 VDC	60 A	Reinforced insulation from the main DC power

If you are not installing a BIP, refer to the system power specifications for the 8004DC power supply in [Appendix A, “Technical specifications for the 8010co Chassis”](#) on [page 233](#).

Environmental requirements

The installation site must meet the following environmental requirements (Table 24).

Table 24 Environmental requirements

Environmental specifications	
Operating temperature:	-5° to 55° C (23° to 131° F)
Storage temperature:	-40° to 70° C (-40° to 158° F)
Operating humidity:	90%
Storage humidity:	92.5%
Operating altitude:	13,123 ft. at 35°C and 45°C 6,000 ft. at 55°C -200 ft. at 55°C
Storage altitude:	40,000 ft

Installing the chassis

To install the 8010co Chassis, you can do one of the following:

- Position the 8010co Chassis on a flat, sturdy surface.
- Mount the 8010co Chassis in a standard two-post equipment rack.



Note: To make the chassis lighter to install, you should do the following:

- Remove the power supply filler panels (see [“Removing and installing a power filler panel” on page 120](#)).
 - Remove the module filler panels (see [“Removing and installing a filler panel” on page 148](#)).
 - Remove the fan trays (see [Chapter 10, “Installing and removing the fan tray,” on page 203](#)).
-

Positioning the 8010co Chassis on a flat surface

Before you position the 8010co Chassis on a flat surface, make sure that the surface is large enough for the 8010co Chassis to operate properly and sturdy enough to support the combined weight of the 8010co Chassis, its components, and any cables that you attach to it.

Mounting the 8010co Chassis in a two-post rack

To mount the 8010co Chassis in a two-post rack, you need the following equipment:

- Installation shelf (shipped with the 8010co Chassis)
- A standard 19-inch or 23-inch equipment rack

Attach the clipnuts shipped with the 8010co Chassis if necessary.




Note: To install the 8010co Chassis in a 23-inch equipment rack refer to the rack manufacturer's 19-to-23-inch adapter installation instructions.

The hardware required for mounting the chassis in a rack depends on your rack type. Use the 12 Phillips screws and a Phillips screwdriver to install the chassis in a standard rack. Use the 12 hex head screws and a nutdriver to install the chassis in a Hendry rack.

In a 7-foot two-post rack, you can install two 8010co Chassis platforms and a BIP.

[Figure 37](#) shows two 8010co Chassis with a BIP installed in a two-post rack.

Figure 37 Two 8010co Chassis with BIP in a two-post rack

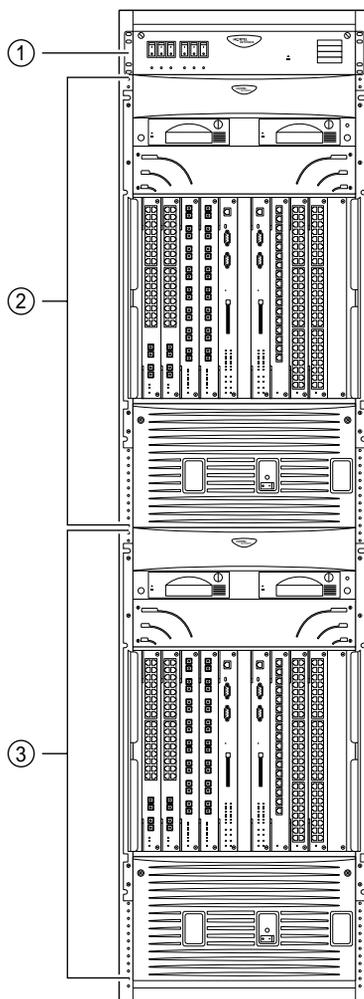

- 1 = Breaker interface panel
- 2 = 8010co Chassis (upper shelf position)
- 3 = 8010co Chassis (lower shelf position)

10404EC

Mounting the 8010co Chassis in a 19-inch rack


To install the 8010co Chassis in a 19-inch two-post rack:

- 1 Place the installation shelf at the bottom of the rack inside the rails.
- 2 Holding the installation shelf in position, align the shelf's mounting rail with two holes on each side of the vertical rack support.
- 3 Insert a Phillips screw through each installation shelf mounting hole and into the corresponding hole in the rack (Figure 39).
- 4 Add a hex nut to each screw and tighten using a hex wrench.
- 5 Tighten each screw with a Phillips screwdriver.
- 6 If the holes in the rack's vertical supports requires clipnuts, insert a clipnut in 12 locations.
- 7 Using the chassis handles shown in Figure 38, lift the 8010co Chassis onto the installation shelf.



Warning: It requires three people to lift the 8010co Chassis. You must remove the I/O modules and power supplies before lifting.


Figure 38 Location of handles on the 8010co chassis

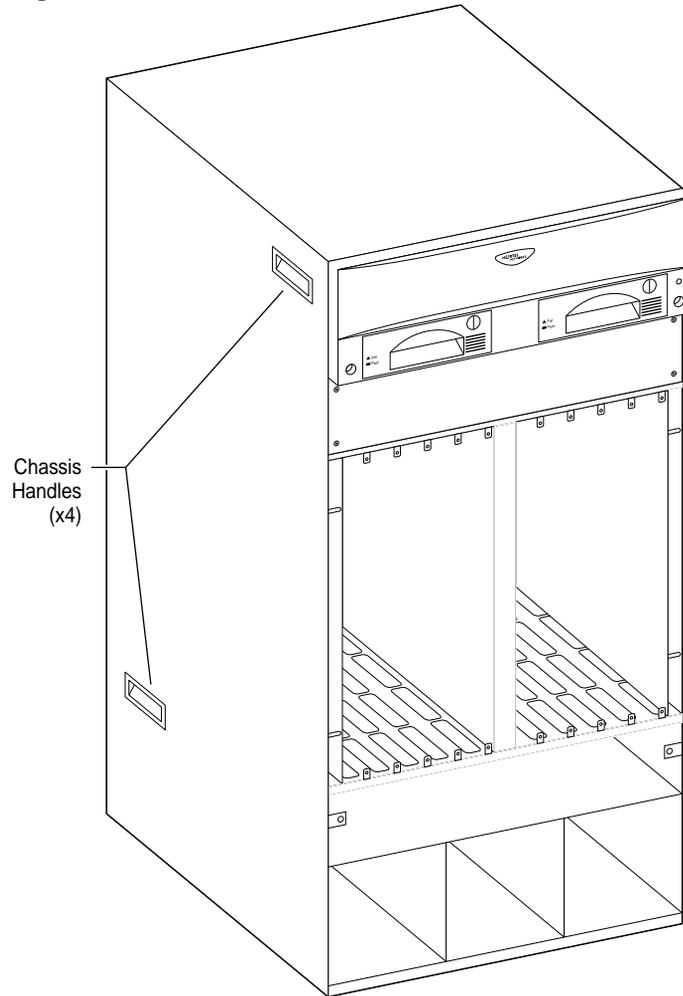

10737FA


- 8** Holding the 8010co Chassis in position, align the flanged end of the chassis mounting rail with six holes on each side of the vertical rack support (Figure 40).
- 9** Make sure that the hole pairs on either side of the vertical support match horizontally.
- 10** Tighten each screw with a Phillips screwdriver.

Figure 39 Installing the installation shelf in a 19-inch equipment rack

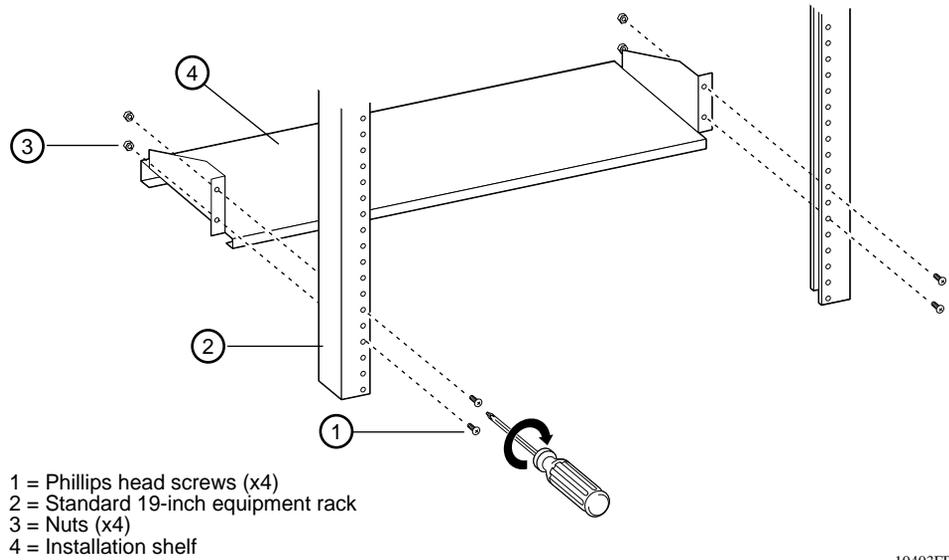

10403FB

Figure 40 Installing the 8010co Chassis in a 19-inch two-post rack

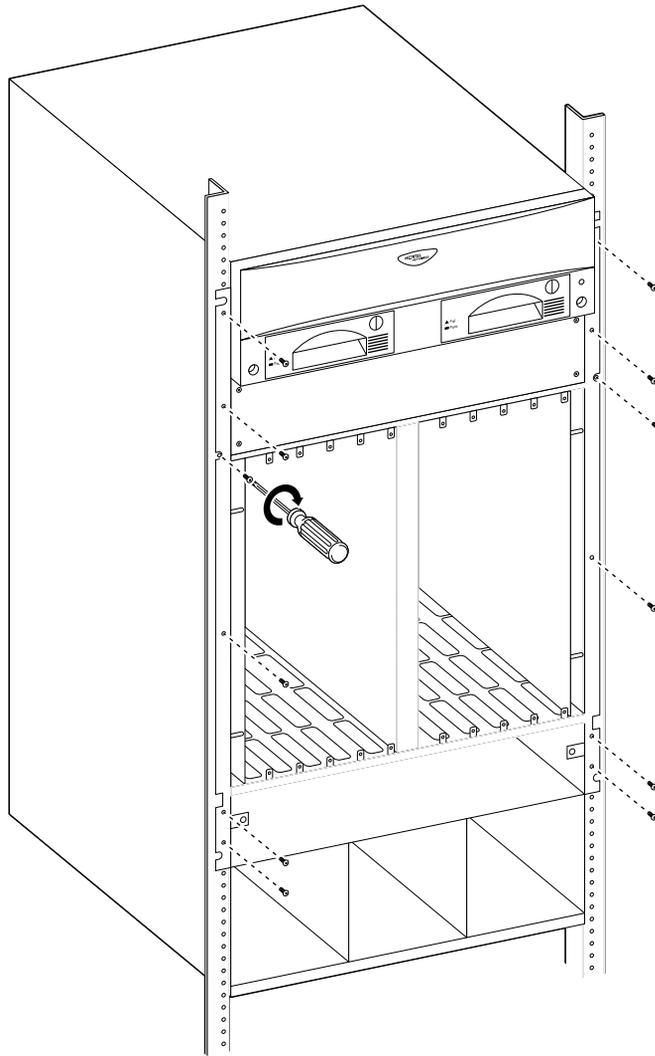


10225FA

Mounting the 8010co Chassis in a Hendry rack

To install the 8010co Chassis in a Hendry rack:

- 1 Place the installation shelf at the bottom of the rack.
- 2 Holding the installation shelf in position, align the shelf's mounting rail with two holes on each side of the vertical rack support.
- 3 Insert a hex head screw through each installation shelf mounting hole and into the corresponding hole in the rack (Figure 41).


Figure 41 Installing the installation shelf in a Hendry rack

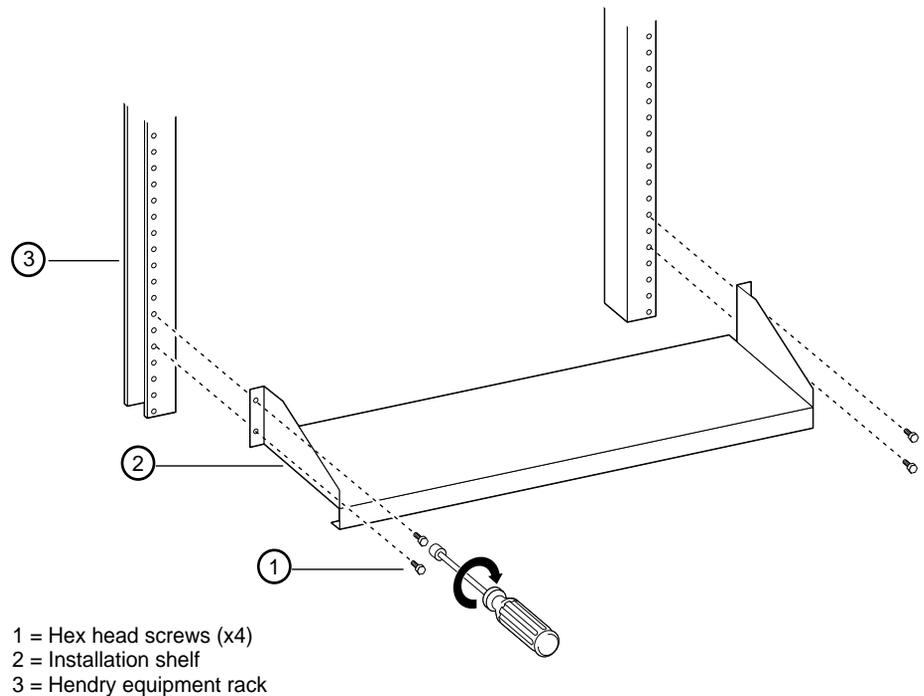

10402FB

- 4 Tighten each screw with a nutdriver.
- 5 Using a Phillips screwdriver, remove the 5 screws securing each of the two mounting rails to the 8010co Chassis (Figure 42).


Figure 42 Removing the mounting rails from the 8010co Chassis

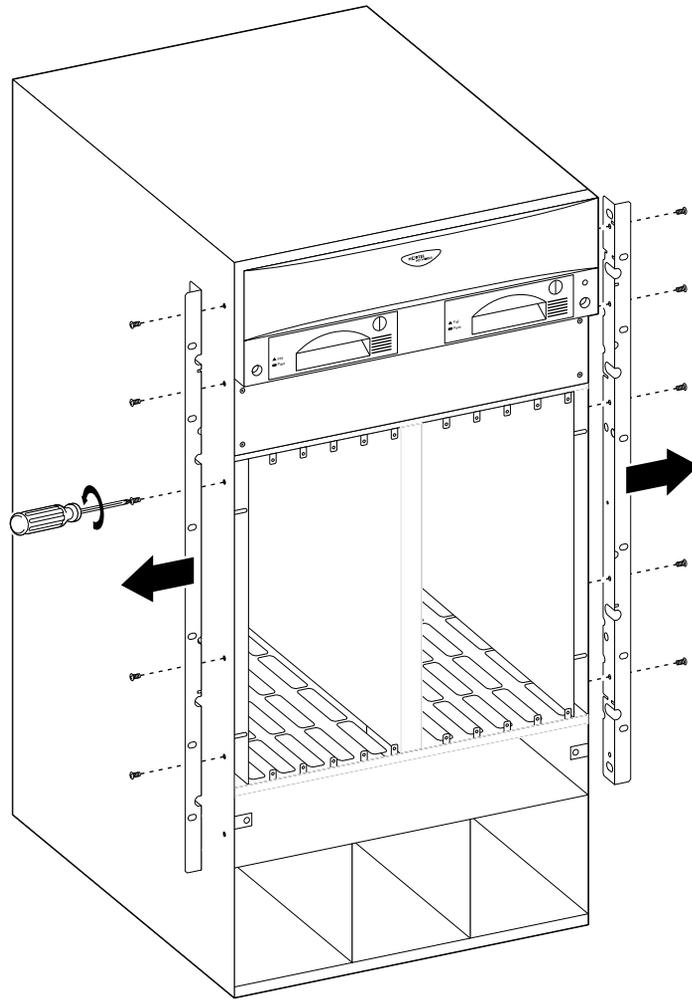

10417FA

- Using the 10 screws that you removed from the two mounting rails, reinstall the mounting rails as shown in [Figure 43](#).

Figure 43 Installing the mounting rails for a Hendry rack

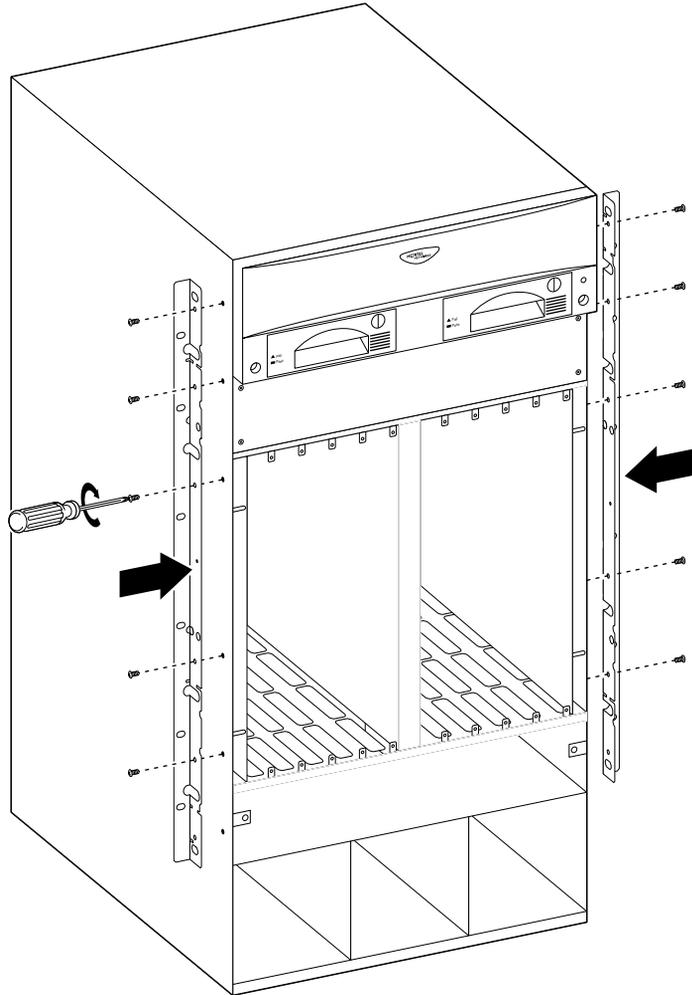

10418FA


- If the holes in the rack's vertical supports require clipnuts, insert a clipnut in 12 locations.

- Using the chassis handles shown in [Figure 44](#), lift the 8010co Chassis onto the installation shelf.



Warning: It requires three people to lift the 8010co Chassis. You must remove the I/O modules and power supplies before lifting

Figure 44 Location of handles on 8010co chassis

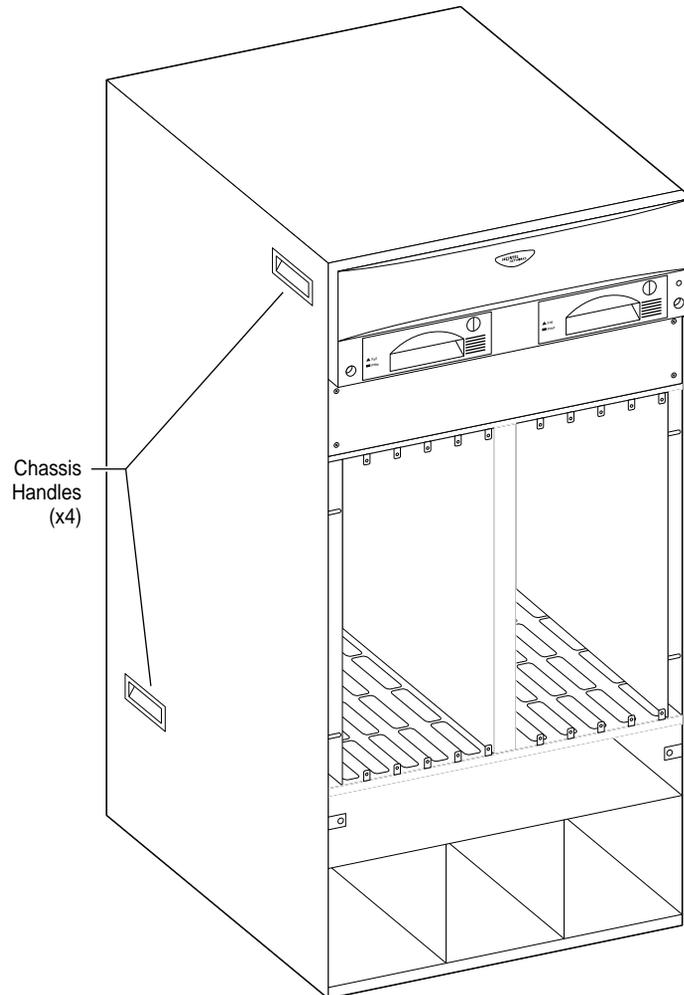

10737FA

- 9 Holding the 8010co Chassis in position, align the flanged end of the chassis mounting rail with six holes on each side of the vertical rack support.
- 10 Make sure that the hole pairs on either side of the vertical support match horizontally.
- 11 Tighten each clipnut screw with a Phillips screwdriver.



Note: After the 8010co Chassis is secured in the rack, you can remove the installation shelf.

Installing the cable management brackets

The cable management brackets keep groups of cables fastened and out of the way, but accessible for maintenance.


To install the top cable management bracket:

- 1 Align the mounting retainers on the inside of the top cable management bracket with the holes on the front of the chassis (Figure 45).
- 2 Push the sides of the top cable management bracket in place.
- 3 Insert and tighten the 8 screws using a Phillips screwdriver to secure the top cable management bracket to the chassis (Figure 45).

To install the two side cable management brackets:

- 1 Align the slots on the side bracket with the rods in the chassis (Figure 45).
- 2 Push the bracket into place.

Figure 45 Installing cable management brackets

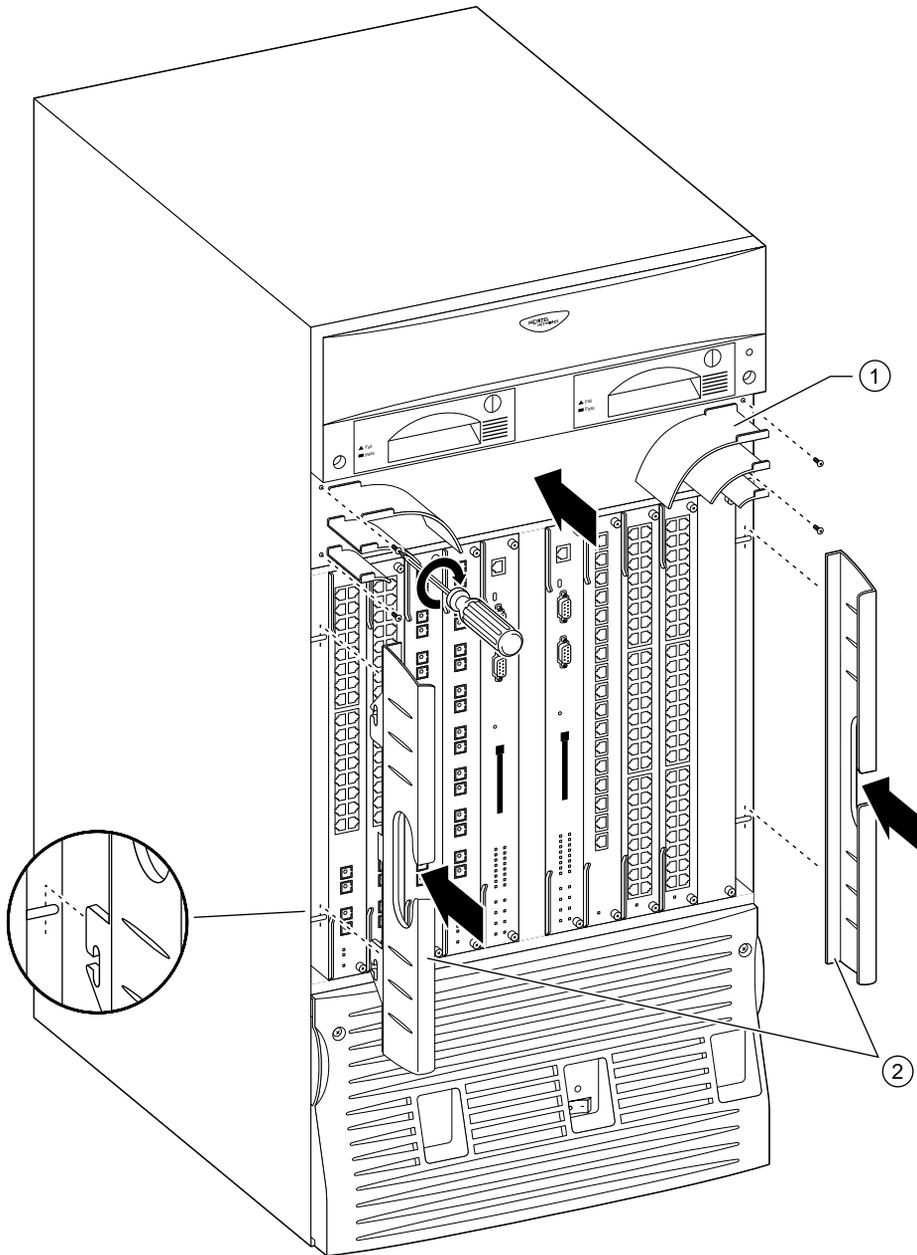


- 1 = Top cable management bracket
- 2 = Side cable management brackets (x2)

10217FB

Grounding the 8010co chassis

Before you connect power cables or network cables to your switch, Nortel Networks recommends that you ground the 8010co chassis. [Figure 46](#) shows the location of the ground studs on the 8010co chassis rear panel.

Figure 46 Location of 8010co chassis ground studs

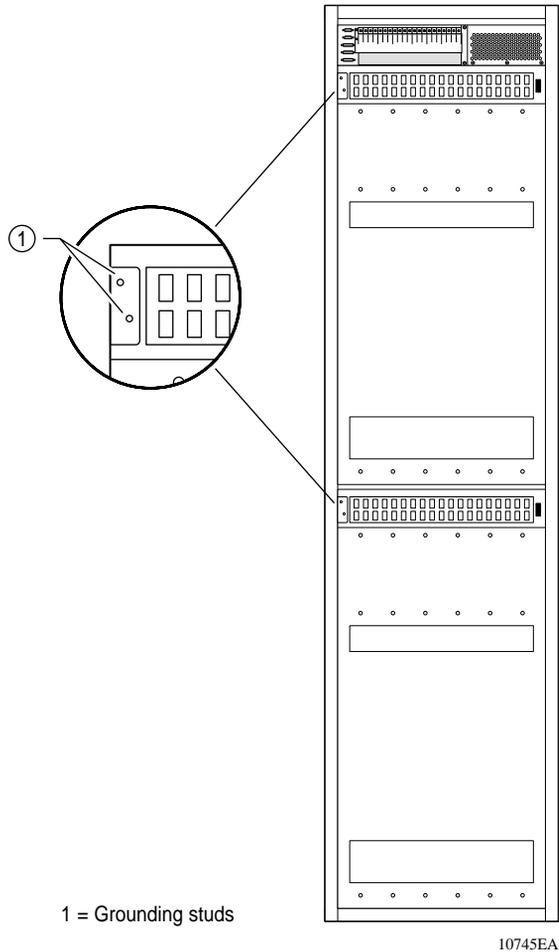

To attach a ground to one of the chassis grounding studs, you need the following:

- One single-hole cable lug that fits over one of the grounding studs
- Nut and a locking washer for the grounding stud.
- 6-AWG grounding wire that is long enough to connect to the ground point.
- 7/16-inch hex wrench to fasten the hardware in the correct order.


Figure 47 shows an example of how to ground two 8010co chassis and a BIP. For this example, each chassis is configured with three DC power supplies.



Note: Your rack-grounding strip may look different or may be in a different location than the one shown in the following example.

Table 25 describes the reference items shown in Figure 47.

Figure 47 Chassis and DC power supply grounding example

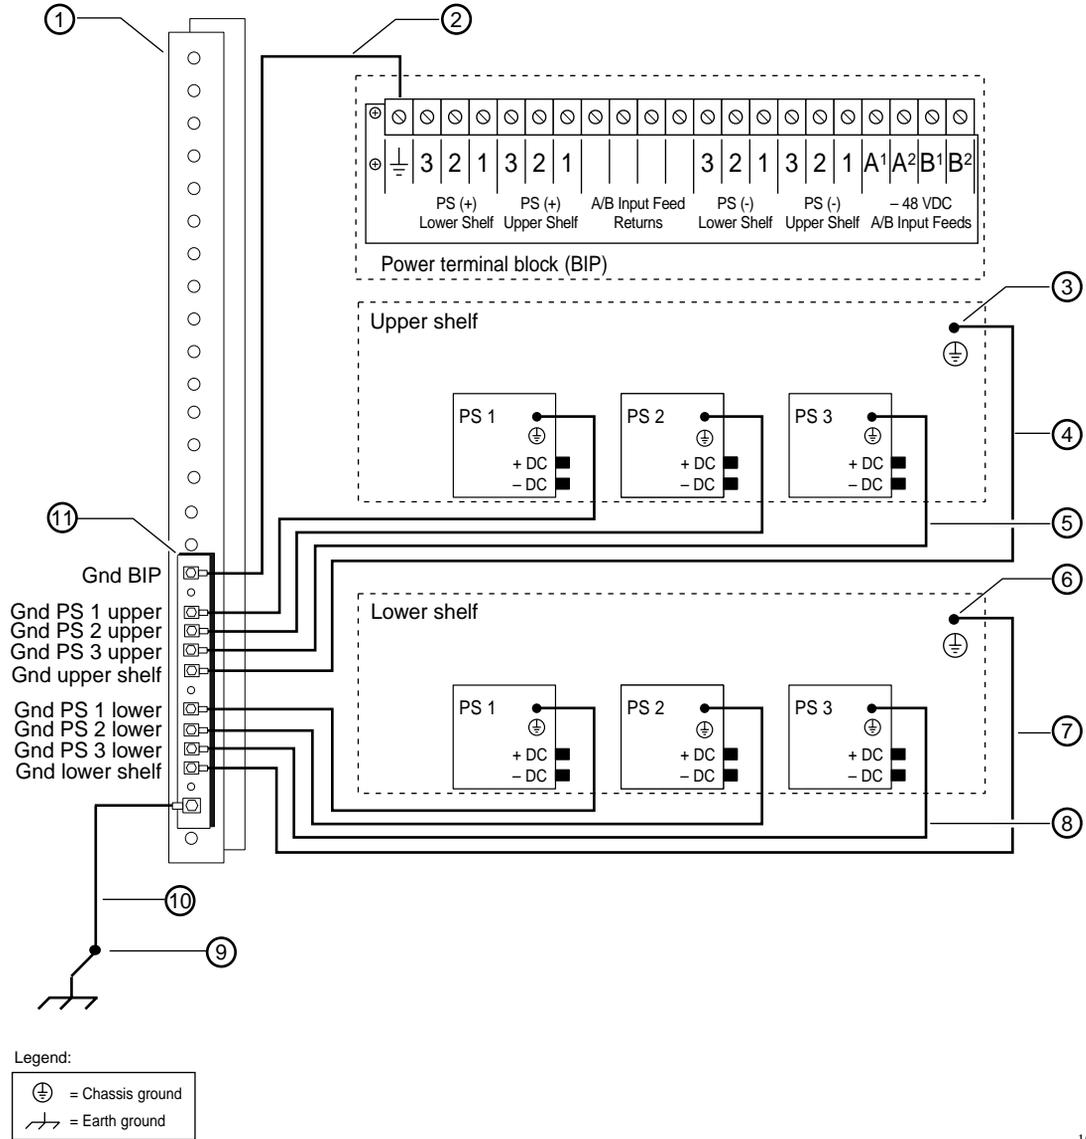


10761EA

Table 25 Item description for chassis and DC power supply grounding

Item	Description
1	Cabinet frame or equipment rack
2	AWG#6 ground lead (provided with BIP)
3	Upper shelf chassis ground stud.
4	Upper shelf ground lead (not provided).
5	Upper shelf power supply ground leads x 3. (Provided with BIP option)
6	Lower shelf chassis ground stud
7	Lower shelf ground lead (not provided)
8	Lower shelf power supply ground leads x 3. (Provided with BIP option)
9	Single point ground system
10	Awg #6 ground lead (not provided). Customer provides lead to ground cabinet frame or equipment rack.
11	Rack ground strip (example only). Design and location of this item determined by customer

[Figure 48](#) shows an example of how to ground two 8010co chassis. For this example, each chassis is configured with three AC power supplies. [Table 26](#) describes the reference items shown in [Figure 48](#).

Figure 48 Chassis and AC power supply grounding example

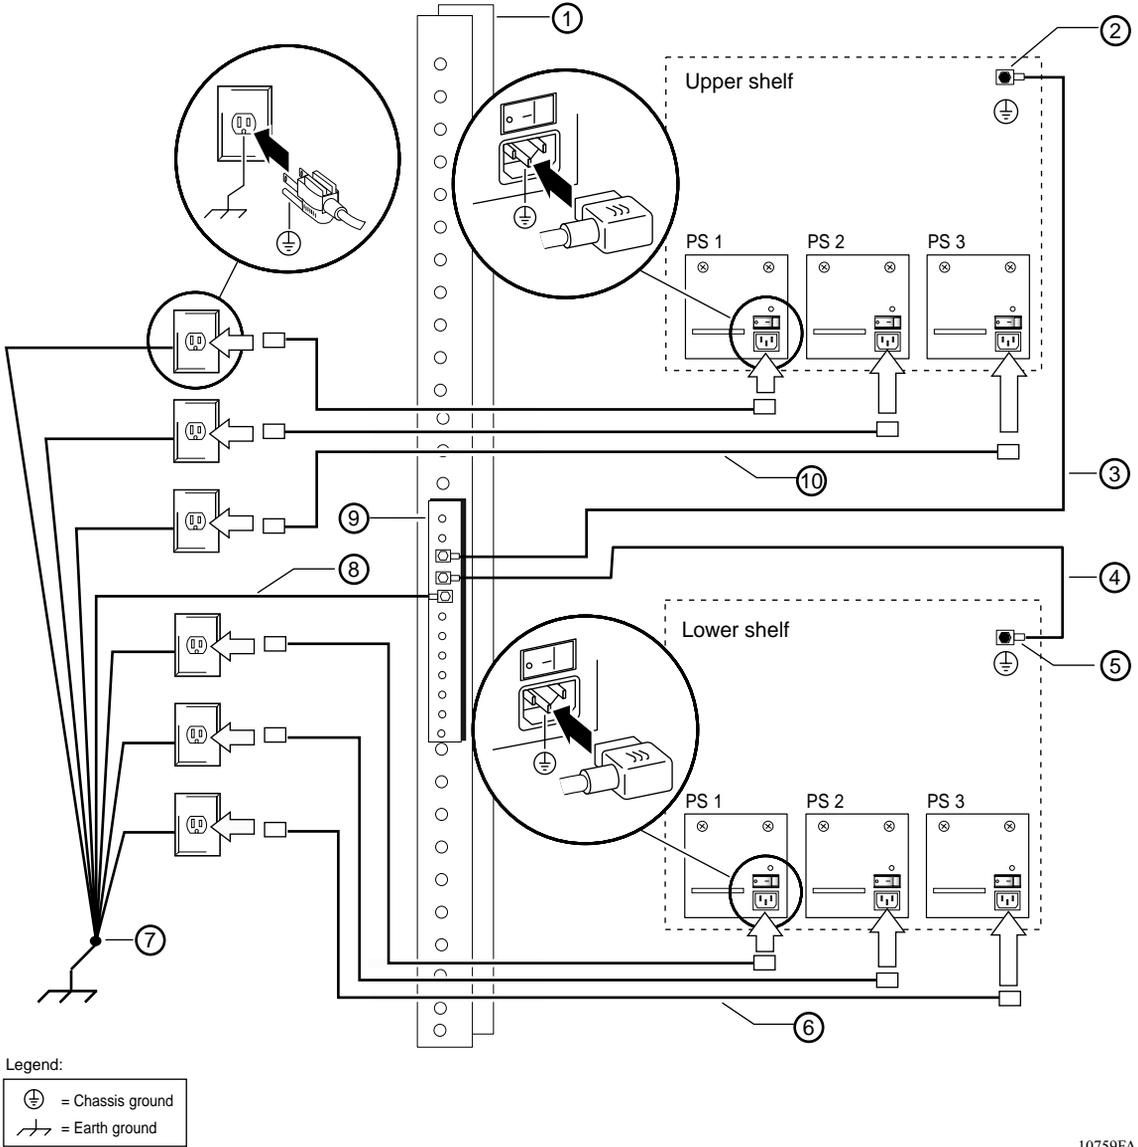

10759FA

Table 26 Item description for chassis and AC power supply grounding

Item	Description
1	Cabinet frame or equipment rack
2	Upper shelf chassis ground stud
3	Upper shelf ground leads (not provided)
4	Lower shelf chassis ground stud
5	Upper shelf ground leads (not provided)
6	AC equipment ground (ACEG) leads within individual lower shelf cords (x 3)
7	Single-point ground system
8	Awg #6 ground lead (not provided). Customer provides lead to ground cabinet frame or equipment rack
9	Rack ground strip (example only). Design and location of this item determined by customer
10	AC equipment ground (ACEG) leads within individual upper shelf cords (x 3)

Connecting the ground cables to the rack grounding strip

To connect the chassis ground cables to the rack grounding strip:

- 1 Locate the shelf grounding point on the rack. This grounding point could be a grounding strip at the back base, top, or side of the rack.




Note: Figure 49 shows an example of a rack grounding strip. Your rack grounding strip may look different than the one shown in this example.

- 2 Attach the lug ends of the chassis ground cables to the rack grounding strip (Figure 49).

Use a 7/16-inch hex wrench to fasten the hardware in the correct order.

Figure 49 Rack grounding strip example

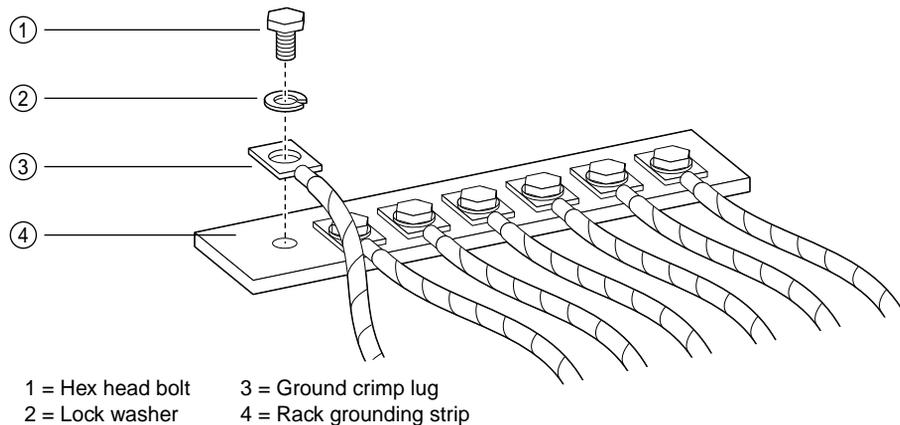

10433FA

Chapter 5

Installing power supplies


This chapter contains information about installing power supplies. This chapter includes the following topics:

Topic	Page
Power supplies for the 8010co Chassis	115
Removing and replacing the bottom bezel	118
Removing and installing a power filler panel	120
Installing the DC power supply	122
Removing the DC power supply	132
Installing the AC power supply	138
Removing the AC power supply	141

Power supplies for the 8010co Chassis


The 8010co Chassis operates with either an AC or DC input power source. The 8010co Chassis contains two, or three AC or DC power supplies. Use the AC power supply with an AC input power source. Use the DC power supply with a DC input power source. [Figure 50](#) shows a DC power supply. [Figure 51](#) shows an AC power supply.

Figure 50 8004 DC power supply

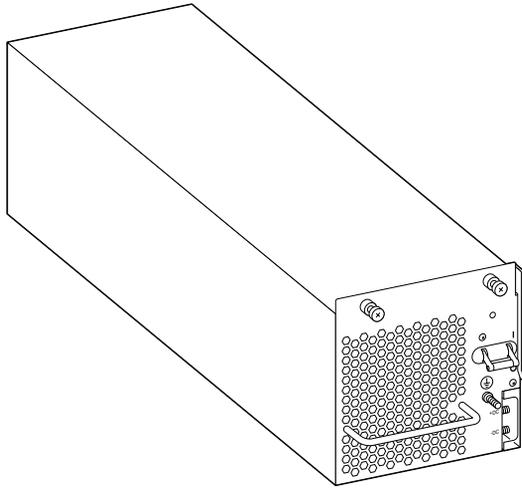

10220FA

Figure 51 8004 AC power supply

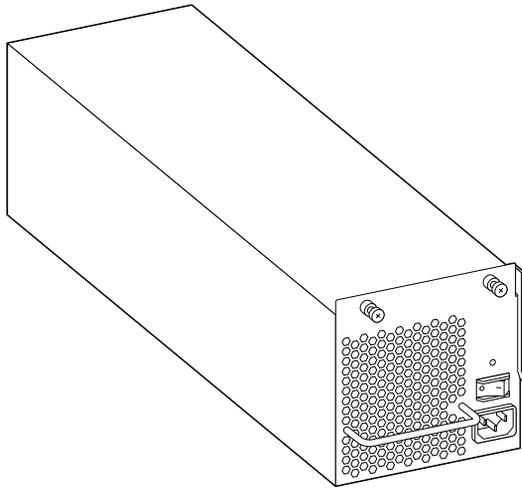

10221FA

Table 27 describes the power supply LED on the AC and DC power supply.

Table 27 Power supply LED

State	Meaning
Off	No output is present.
On (green)	Power supply output is normal.

The 8010co Chassis ships with no installed power supplies. Install the first power supply in the leftmost bay. (Power supply bays are numbered 1, 2, and 3 left to right as viewed from the front of the chassis.)

The number of power supplies that you need to install—2, or 3—depends on whether you want an optional redundant power supply. (Table 28).

Table 28 Number of power supplies to install

Number of modules ¹	Number of power supplies	
	Required	Redundant configuration
1—10	2	3

¹ Includes 1 or 2 CPU modules

If a chassis has a redundant power configuration, and one power supply fails, the chassis continues to operate with no interruption of service.



Note: When you plug the power cord for each power supply into separate AC circuits or separate DC power sources, the redundant power supply also provides protection against the disconnection or failure of an individual circuit or power source.


Removing and replacing the bottom bezel

To access the 8010co Chassis power supplies, you must remove the bottom front bezel.

To remove the bottom bezel:

- 1 Using a Phillips screwdriver, loosen the 2 captive screws securing the bezel to the chassis.
- 2 Pull the top of the bezel forward and then lift the bezel from the two tabs on the bottom of the chassis (Figure 52).

Figure 52 Removing the 8010co Chassis bottom bezel

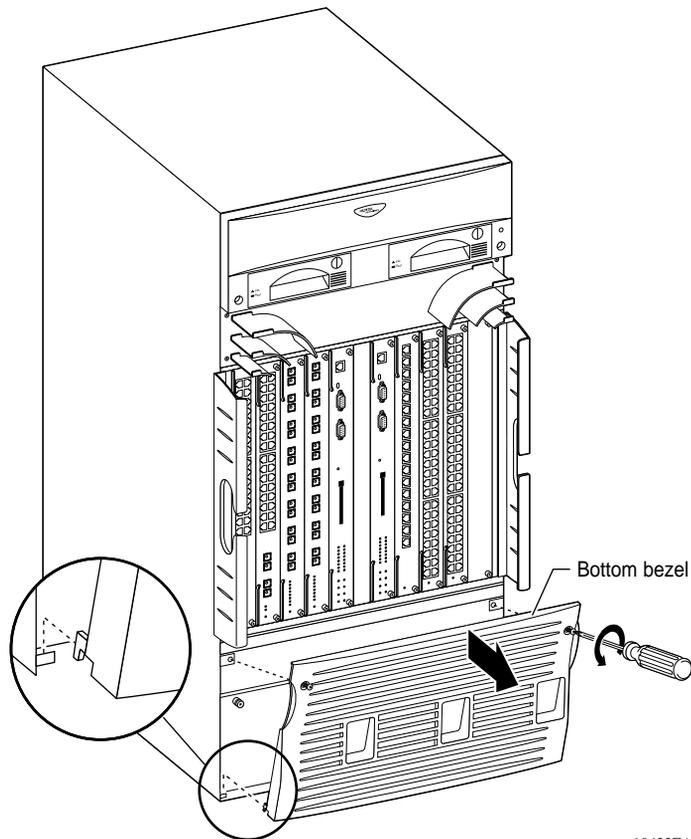


10422FA

To replace the bottom bezel:

- 1 Hook the two bezel slots on the two chassis tabs (Figure 53).

Figure 53 Replacing the 8010co Chassis bottom bezel

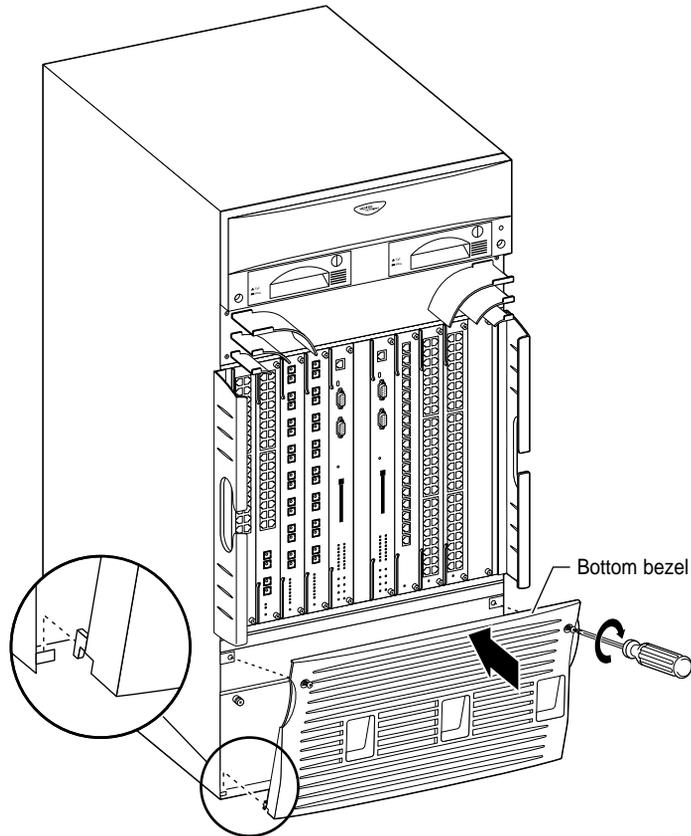

10434FA

- 2 Align the captive screws with the holes on the front of the chassis (Figure 53).
- 3 Push the sides of the bezel into place.
- 4 Using a Phillips screwdriver, tighten the 2 screws securing the bezel to the chassis (Figure 53).

Removing and installing a power filler panel

A power filler panel maintains the proper cooling airflow in the 8010co Chassis. If you remove a power supply from the 8010co Chassis without replacing it, you must install a power filler panel. When you add a third power supply, you must first remove the power filler panel from the power bay.


To remove a power filler panel:

- 1 Remove the bottom bezel.

For instructions, see [“Removing and replacing the bottom bezel”](#) on [page 118](#).

- 2 Using a Phillips screwdriver, loosen the 2 captive screws that fasten the power filler panel to the chassis until the screws are free of the threads in the chassis frame ([Figure 54](#)).

Figure 54 Removing a power filler panel

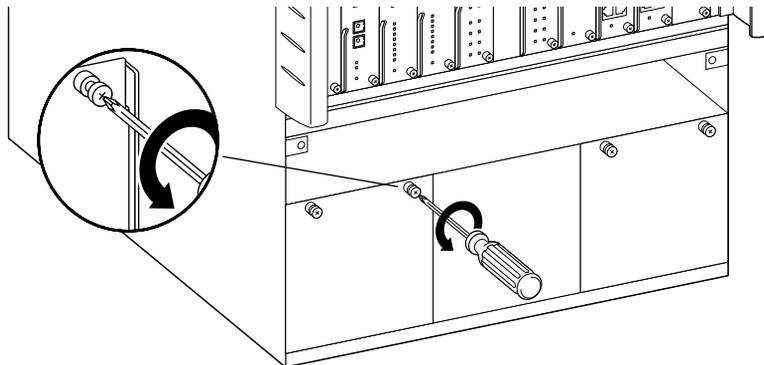

10416FA

- 3 Pull the power filler panel out of the 8010co Chassis.

To install a power filler panel:


- 1 Remove the bottom front bezel.

For instructions, see [“Removing and replacing the bottom bezel”](#) on [page 118](#).

- 2 Place the power filler panel in the empty power supply bay ([Figure 55](#)).

- 3 Tighten the 2 captive screws until the power filler panel is seated firmly.

Figure 55 Installing a power filler panel

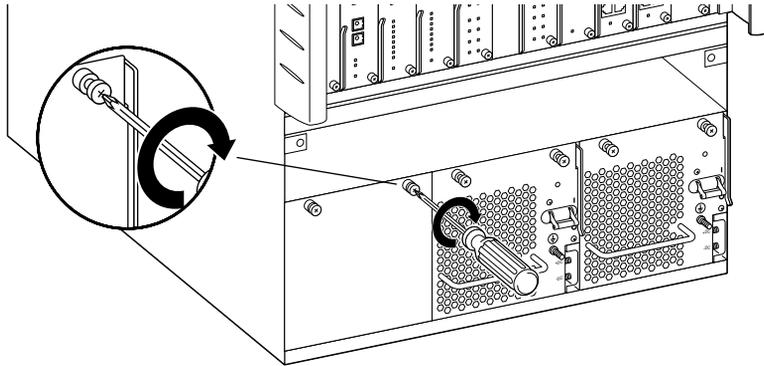

10415FA

Installing the DC power supply



Danger: Due to high-energy hazards, only qualified service personnel are permitted to connect the 8010co Chassis to the DC power source. Make sure that the DC power source is off and disconnected at the remote end before you perform any of the steps in this section.



Danger: To avoid electrical shock, be sure to disconnect all power supply cords before servicing this unit.

If you ordered the optional breaker interface panel (BIP), the cables for connecting the BIP to the DC power supplies are included in the shipment. Before you install the BIP, you must install the DC power supplies as described in [“Installing the power supply”](#) on [page 125](#).

Use [Table 29](#) to determine which section to go to next.

Table 29 Power supply installation reading path


Are you installing a BIP?	Go to
No	Before you begin
Yes	Installing the power supply

Before you begin

In addition to the DC power supply and a guide for installing it, your DC power supply shipping container contains several hardware accessories. Verify that the items in the shipping container match those on the shipment packing list.

Use Table 30 as a checklist to verify the contents of the shipping container.

Table 30 DC power supply shipping accessories

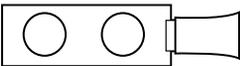Check	Accessory		Use to
	2 two-hole crimp lug terminals with attached tubing		Connect the positive and negative power inputs.
	1 one-hole crimp lug terminal with attached tubing		Connect the ground stud.
	5 nuts		Connect all leads.
	5 lock washers		Connect all leads.
	1 washer		Connect the ground stud.

Before you begin the installation, verify that you have the following tools and materials:

- Cable
- Crimping tool for crimping the lugs onto the cable
- Heat gun to shrink the tubing around the cable (optional)
- 7/16-inch hex wrench
- Phillips screwdriver

Preparing cables

Nortel Networks does not supply the cables for connecting the 8010co 8004DC Power Supply to the DC input power source. Select cables that comply with the electrical code of the country where you will use the DC power supply.




Caution: You have the sole responsibility of ensuring that the connection cable used with the 8004DC Power Supply is appropriate for use with the DC power source to which the power supply is connected. Consider gauge, flammability, and mechanical serviceability when determining which cables to use.

To prepare cables for connecting the power supply:

- 1 Strip 0.81 in. (2.1 cm) of insulation from the ends of the cables (Figure 56).

Figure 56 Cable stripping requirements

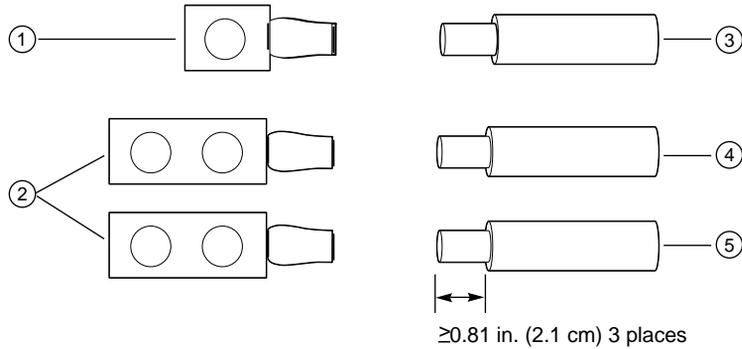

- | | |
|---------------------------|------------------------|
| 1 = Single-hole crimp lug | 3 = Ground lead wire |
| 2 = Two-hole crimp lug | 4 = Positive lead wire |
| | 5 = Negative lead wire |

10296EA


- 2 Crimp the lugs onto the cables using a standard crimping tool.
Failure to properly crimp the lugs onto the cables constitutes a safety hazard.
- 3 If necessary, use a heat gun to shrink the tubing around the cable.

Installing the power supply

To install a DC power supply:

- 1 Make sure that the power switch is turned off (Figure 57).

Figure 57 DC power supply power switch

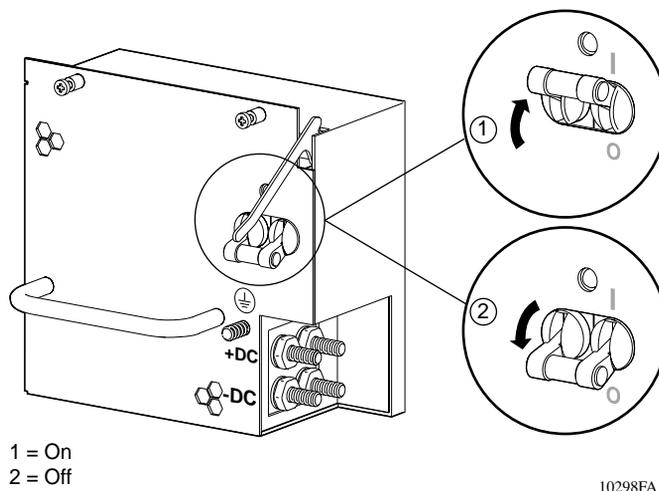


- 2 Remove the bottom front bezel.
For instructions, see [“Removing and replacing the bottom bezel”](#) on page 118.
- 3 Remove the filler panel from the power bay if necessary.
For instructions, see [“Removing and installing a power filler panel”](#) on page 120.
- 4 If you are replacing a failed power supply, remove the failed supply.
For instructions, see [“Removing the DC power supply”](#) on page 132.
- 5 Grasp the handle of the new power supply.
- 6 Push the new power supply partway into the bay, leaving the terminal block at the side of the power supply exposed (Figure 58).

- 7 If you are installing a BIP, skip the remaining steps in this section and go to *Installing the Breaker Interface Panel for the 8010co Chassis*.



Note: After you install the BIP, return to this manual to complete the 8010co Chassis installation.


Figure 58 Inserting the DC power supply

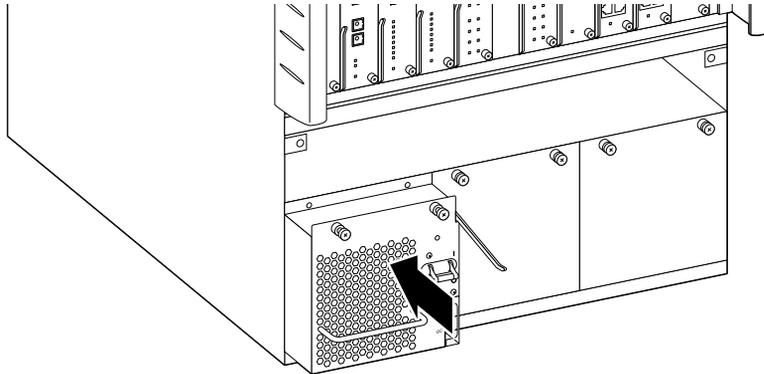

10340FA

- 8 Using a Phillips screwdriver, remove the plastic safety shield from the power supply (Figure 59).

Figure 59 Removing the plastic safety cover

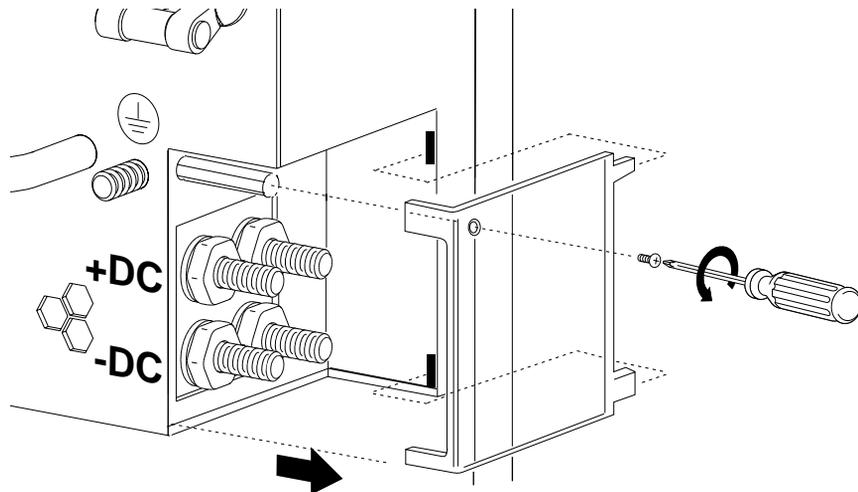


10412FA

- 9 Note the positions of the ground stud and of the positive and negative power inputs (Figure 60).

The +VDC and -VDC inputs to the power supply are isolated from frame ground. Either +VDC or -VDC may be referenced to frame ground.

Figure 60 DC power supply input and ground stud location

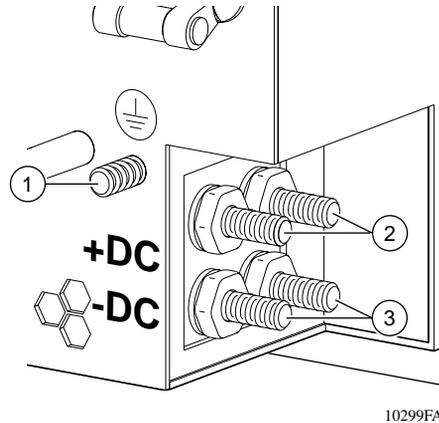

10299FA

- 1 = Ground stud
2 = Positive power inputs
3 = Negative power inputs

- 10 Refer to Table 31 to verify the proper connection of the positive and negative power leads.

Table 31 Correct cable connection to the DC power supply


Type of DC voltage	Voltage lead	Power supply terminal
Positive	Ground	Ground
	Positive voltage	+ terminal
	Return	- terminal
Negative	Ground	Ground
	Negative voltage	- terminal
	Return	+ terminal



Danger: Make sure that both the AC power source and the DC power source is off and disconnected at the remote end before you connect the terminal leads to the power supply.

- 11** Attach the earth ground lead to the grounding stud on the power supply (Figure 61). Use the washers in this order:
- a** Flat washer
 - b** Crimp lug
 - c** Lock washer
 - d** Hex nut

Figure 61 Attaching the earth ground lead to the grounding stud

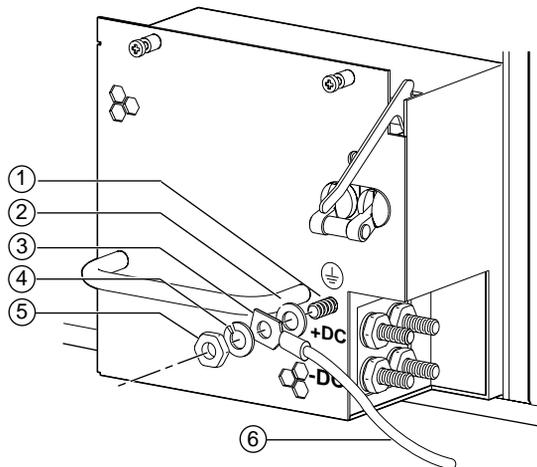


- | | |
|--------------------|-----------------------|
| 1 = Grounding stud | 4 = Lock washer |
| 2 = Flat washer | 5 = Hex nut |
| 3 = Crimp lug | 6 = Earth ground lead |

10297FA

- 12** Attach the positive voltage lead to the positive terminal on the power supply, inserting a lock washer between the crimp lug and each hex nut (Figure 62).

Figure 62 Attaching the voltage leads to the power supply terminals

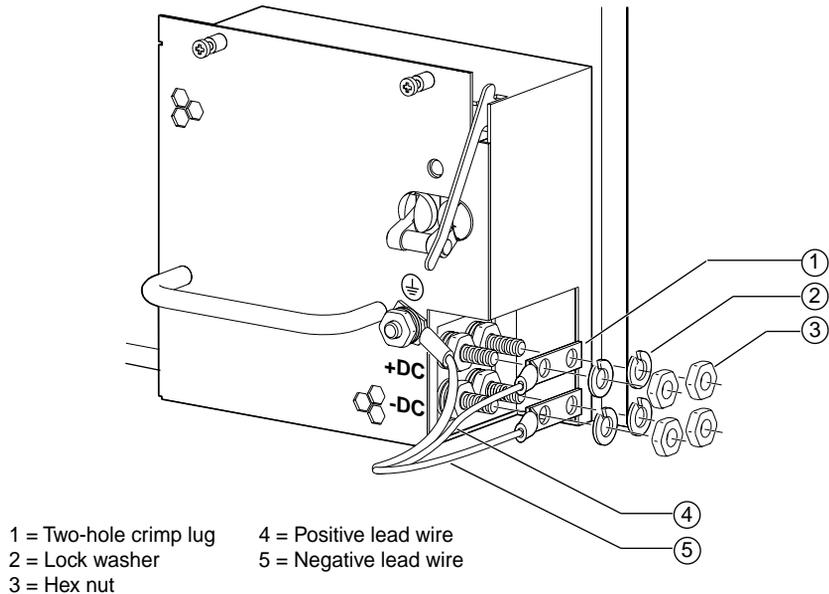


10300FA

- 13** Attach the negative voltage lead to the negative terminal on the power supply inserting a lock washer between the crimp lug and each hex nut (Figure 62).
- 14** Using a 7/16 in. hex wrench, tighten the hex nut on each terminal.
- 15** Attach the earth ground cable to the system or rack ground for your DC input power source.

- Using a Phillips screwdriver, install the plastic safety cover on the power supply (Figure 63).


Figure 63 Replacing the plastic safety cover

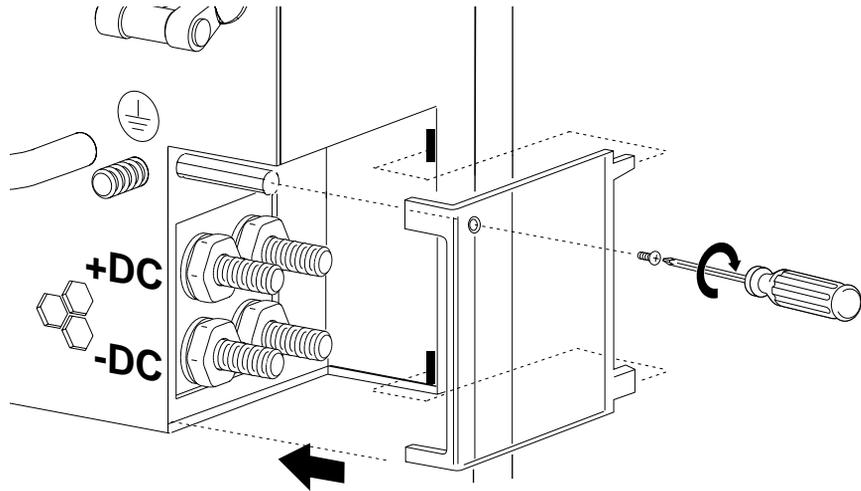

10413FA

- Firmly slide the power supply all the way into the bay.
- Tighten the retaining screws until the power supply is seated firmly (Figure 64).

Figure 64 Tightening the retaining screws on the DC power supply

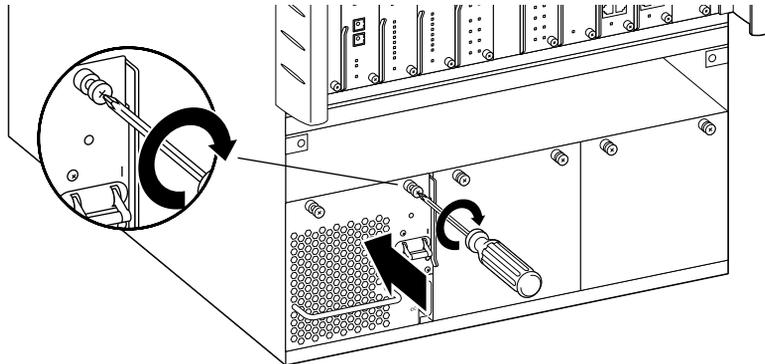


10339FA

- Attach the positive and negative terminal leads and ground to the DC input power source according to the proper safety and technical specifications for your 48 V power distribution system.

20 Replace the bezel.

For instructions, see “[Removing and replacing the bottom bezel](#)” on page 118.

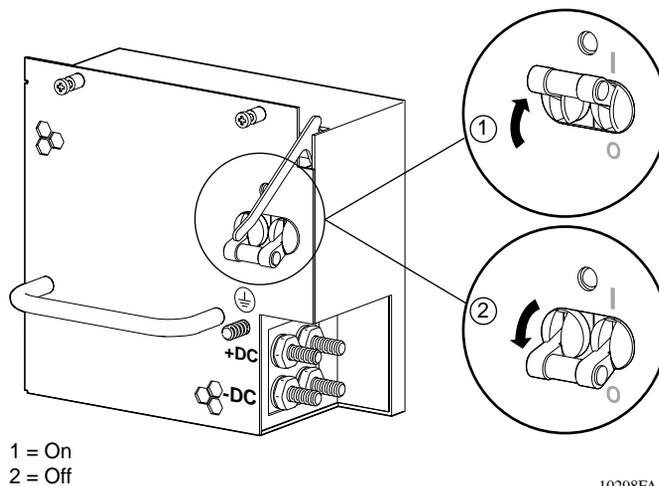21 Turn the DC input power source on, or reset the power source circuit breaker, to provide power to the power supply.**22** Turn the power supply switch to the on position ([Figure 65](#)).**Figure 65** DC power supply power switch

Note: When you first install a 8010co Chassis that contains two or three power supplies, you must turn on two of the power supply units within 2 seconds of each other. If you wait longer to turn on the second power supply, one of the power supplies could shut down. To correct this condition, turn off both power supplies, wait at least 30 seconds, and then turn on both power supplies again within 2 seconds.

If the LED on the power supply does not turn on, contact the Nortel Networks Technical Solutions Center.

Removing the DC power supply

You can remove a redundant power supply without affecting the operation of the 8000 Series switch. When you remove a power supply, the LED on the power supply turns off, and the 8010co Chassis automatically redistributes the load to the remaining power supplies.



Caution: To maintain proper cooling, never operate the 8010co Chassis with an empty power supply bay. If you are replacing a failed power supply and you do not have a power filler panel, leave the failed power supply installed until a replacement power supply is available.



Danger: To avoid electrical shock, be sure to disconnect all power supply cords before servicing this unit.

To remove a DC power supply:

- 1 Remove the bottom front bezel.


For instructions, see [“Removing and replacing the bottom bezel”](#) on page 118.

- 2 If you installed an optional breaker interface panel (BIP), set the BIP circuit breakers to the off position.

For information, see *Installing the Breaker Interface Panel for the 8010co Chassis*.

- 3 Turn the power supply switch to the off position (Figure 66).

Figure 66 DC power supply power switch

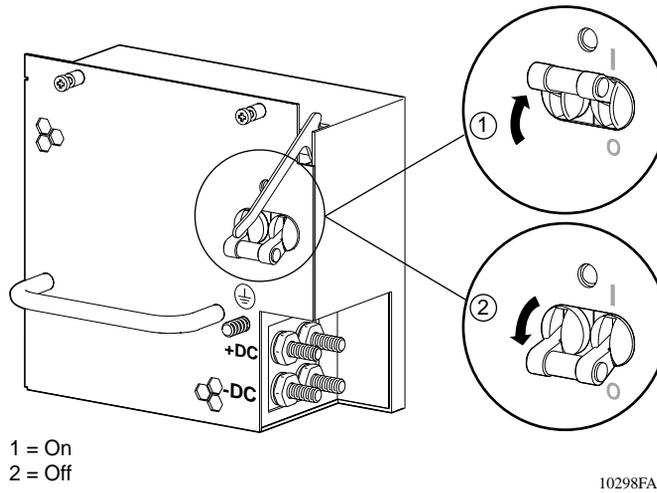


- 4 Disable the incoming power from the DC input power source. You may need to switch a circuit breaker or turn off the DC input power source.



Danger: Make sure that both the AC power source and the DC power source is off and disconnected at the remote end before you connect or disconnect cables from the power supply.

- 5 Loosen the retaining screws on the power supply (Figure 67).


Figure 67 Loosening the retaining screws on the DC power supply

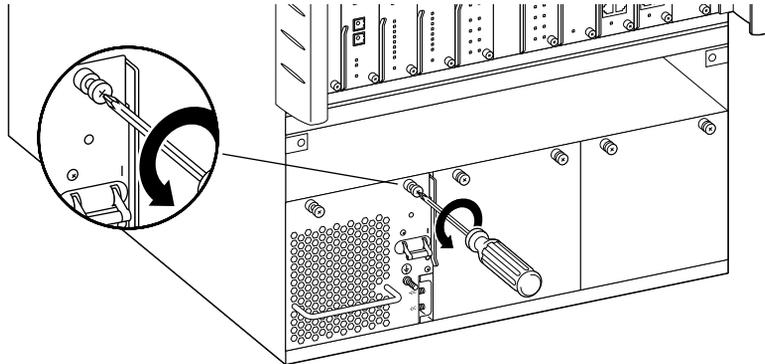

10338FA

- 6 Lift the extractor lever to disconnect the power supply from the backplane connector (Figure 68).

Figure 68 Disconnecting the DC power supply from the backplane

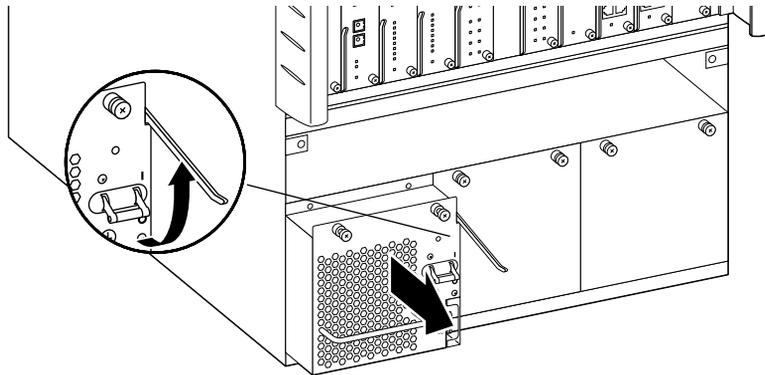


10337FA

- 7 Slide the power supply partway out of the chassis.

- 8 Using a Phillips screwdriver, remove the screw securing the plastic safety cover to the power supply, and then remove the cover (Figure 69).
Set the cover aside for replacement later.


Figure 69 Removing the plastic safety cover

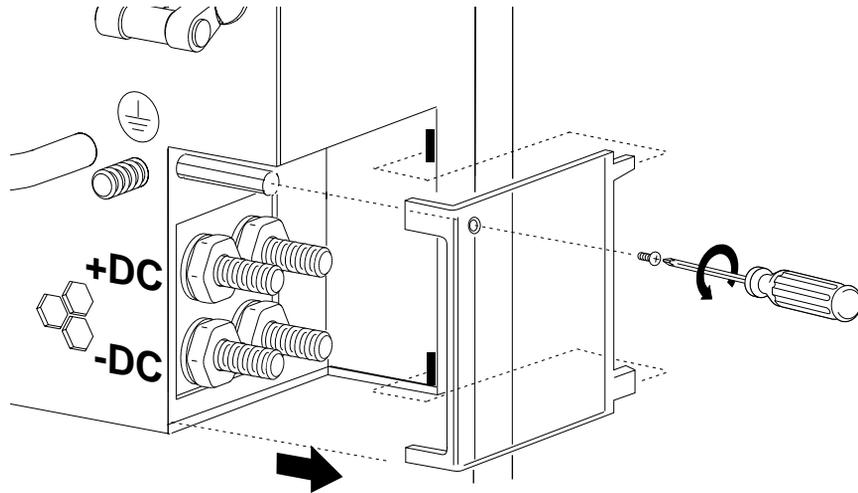

10412FA

- 9** Disconnect the earth ground lead from the ground lug on the power supply (Figure 70).


Figure 70 Disconnecting the earth ground lead from the DC power supply

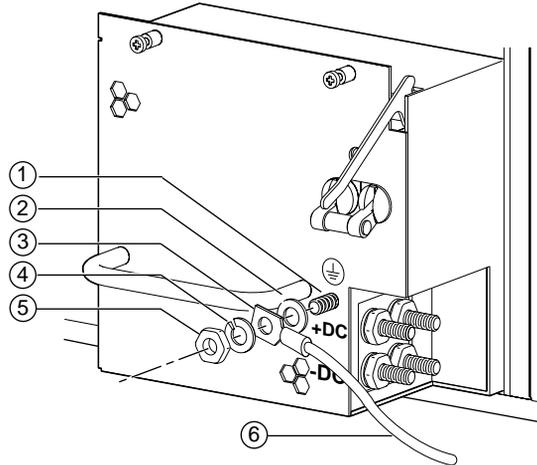

- | | |
|--------------------|-----------------------|
| 1 = Grounding stud | 4 = Lock washer |
| 2 = Flat washer | 5 = Hex nut |
| 3 = Crimp lug | 6 = Earth ground lead |


10297FA

- 10** Disconnect the positive and negative voltage leads from the power supply terminals (Figure 71).

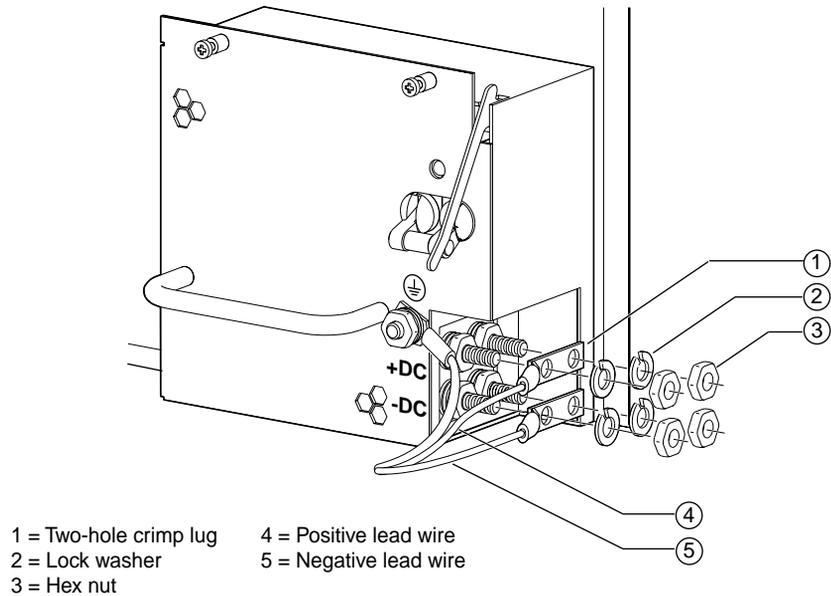Figure 71 Disconnecting the positive and negative voltage lead

10300FA

11 Slide the power supply all the way out of the chassis and set it aside (Figure 72).

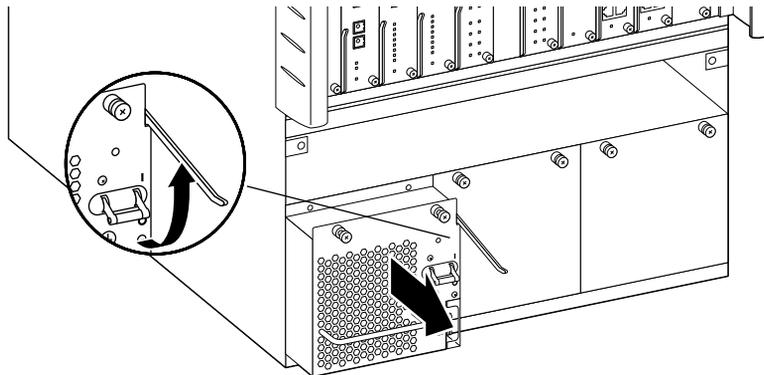Figure 72 Removing the DC power supply from the chassis

10337FA

12 Install a new power supply (see “Installing the DC power supply” on page 122) or install a power filler panel (see “Removing and installing a power filler panel” on page 120).

Installing the AC power supply

To install an AC power supply:

- 1 Remove the bottom front bezel.

For instructions, see [“Removing and replacing the bottom bezel”](#) on page 118.

- 2 Remove the filler panel from the power bay if necessary.

For instructions, see [“Removing and installing a power filler panel”](#) on page 120.


- 3 If you are replacing a failed power supply, remove the failed supply.

For instructions, see [“Removing the AC power supply”](#) on page 140.

- 4 Grasp the handle of the new power supply.

- 5 Push the power supply firmly into the bay (Figure 73).


Figure 73 Installing the AC power supply

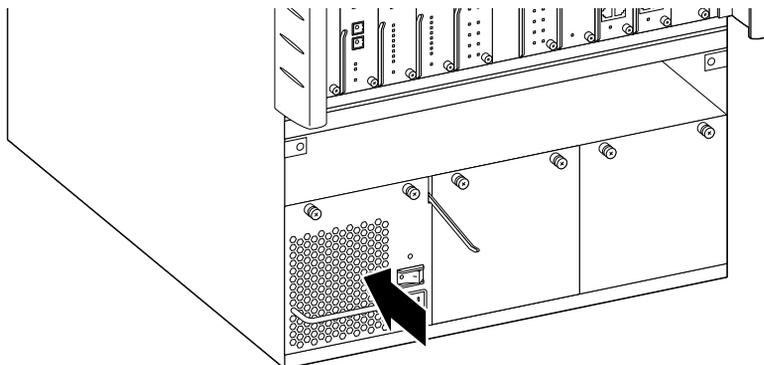

10344FA

- 6 Tighten the retaining screws until the power supply is seated firmly (Figure 74).

Figure 74 Tightening the retaining screws on the AC power supply

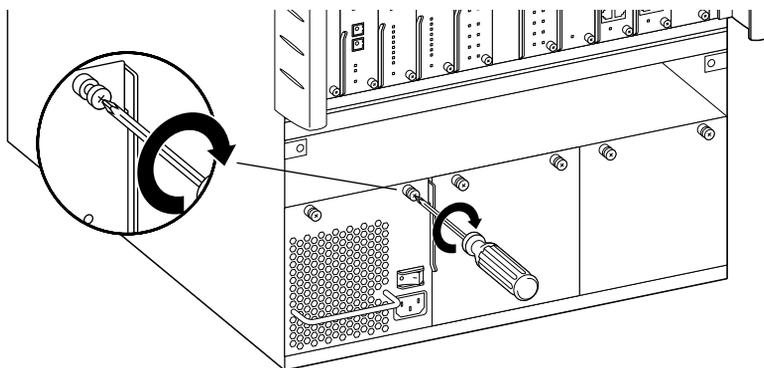


10345FA

- 7 With the AC power switch off, connect the power cord to the power supply and to an AC power outlet that is on a circuit with no other equipment connected to it (Figure 75).

Connect each power supply in the chassis to a separate AC circuit.


Figure 75 Connecting the power cord to the AC power supply

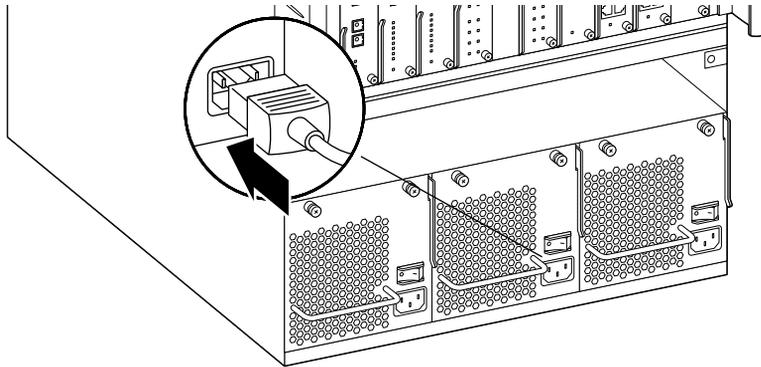

10343FA

8 Turn on the power switch (Figure 76).

Figure 76 AC power supply power switch on

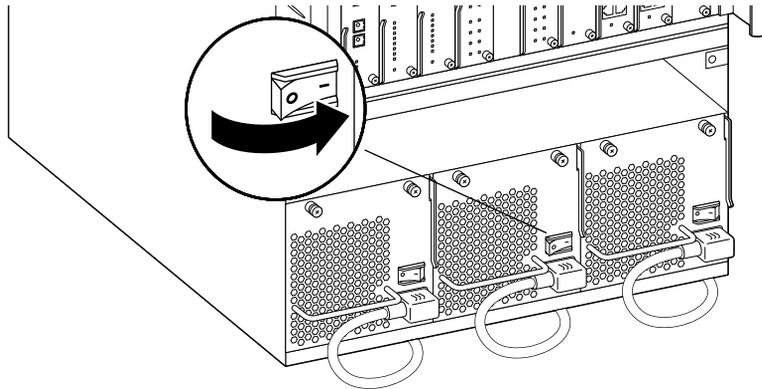

10364FB



Note: When you first install a 8010co Chassis that contains two or three power supplies, you must turn on two of the power supply units within 2 seconds of each other. If you wait longer to turn on the second power supply, one of the power supplies could shut down. To correct this condition, turn off both power supplies, wait at least 30 seconds, and then turn on both power supplies again within 2 seconds.

Removing the AC power supply

You can remove a redundant power supply without affecting the operation of the 8000 Series switch. When you remove a power supply, the LED on the power supply turns off, and the 8010co Chassis automatically redistributes the load to the remaining power supplies.



Danger: Make sure that the AC power source is off or disconnected at the remote end before performing any of the steps in this section.




Danger: To avoid electrical shock, be sure to disconnect all power supply cords before servicing this unit.

To remove an AC power supply:

- 1 Attach the antistatic wrist strap.
For instructions, see [“Attaching the antistatic wrist strap”](#) on page 147.
- 2 Remove the bottom front bezel.
For instructions, see [“Removing and replacing the bottom bezel”](#) on page 118.
- 3 Turn off the power switch on the power supply that you are replacing ([Figure 77](#)).


Figure 77 AC power supply power switch off

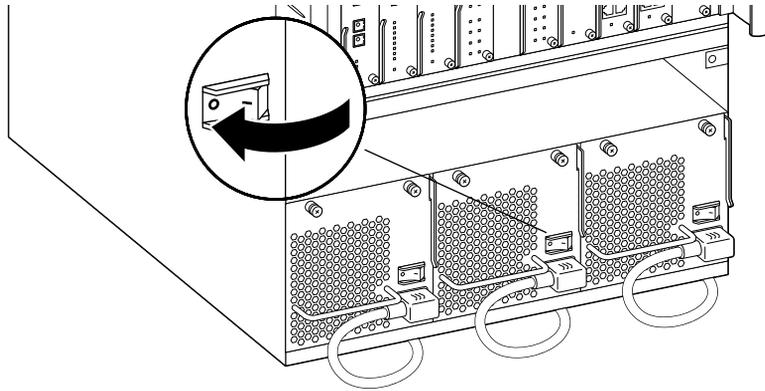

10342FB

- 4 Disconnect the power cord from the power outlet and from the power supply (Figure 78).


Figure 78 Disconnecting the power cord from the AC power supply

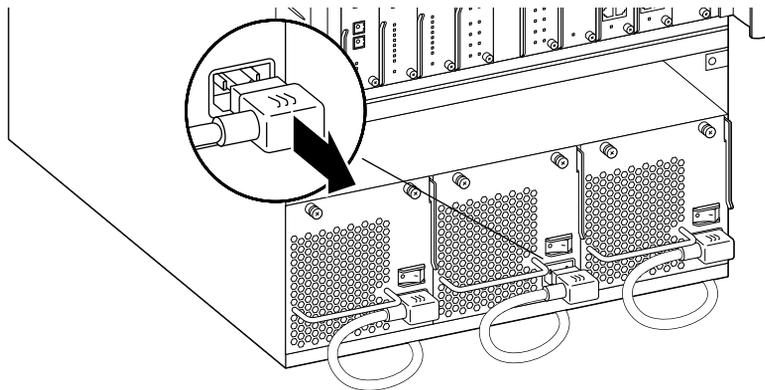

10341FB

- 5 Loosen the retaining screws on the power supply ([Figure 79](#)).


Figure 79 Loosening the retaining screws on the AC power supply

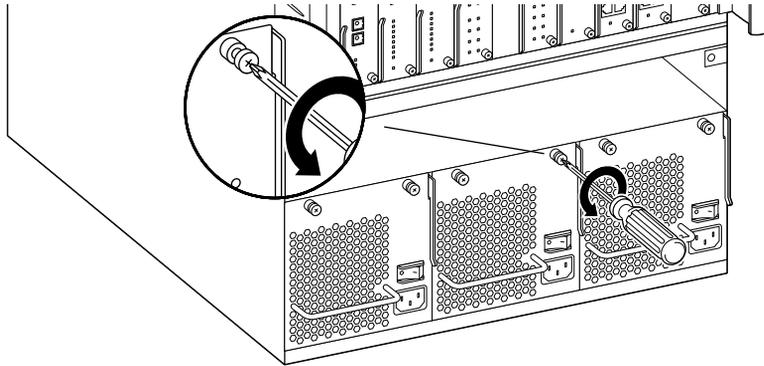

10346FA

- 6 Lift the extractor lever to disconnect the power supply from the backplane connector ([Figure 80](#)).

Figure 80 Disconnecting the AC power supply from the chassis backplane

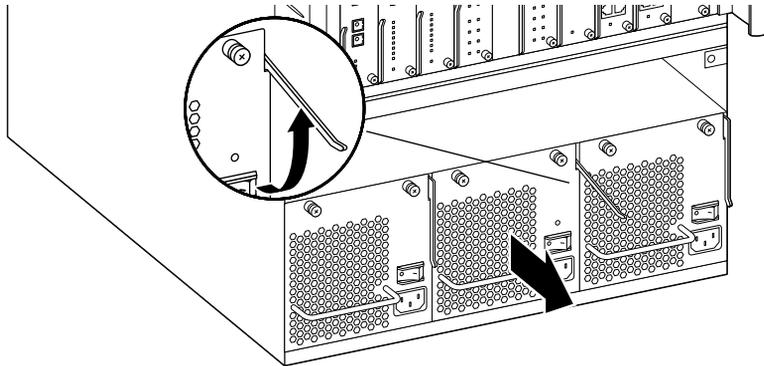

10347FA

- 7 Pull the power supply out of the chassis.
- 8 Install a new power supply (see [“Installing the AC power supply”](#) on page [138](#)) or install a power filler panel (see [“Removing and installing a power filler panel”](#) on page [120](#)).

Chapter 6

Installing 8000 Series modules and connecting equipment

This chapter provides instructions for installing and connecting 8000 Series modules in a 8010co Chassis to create a 8000 Series switch. It includes the following topics:

Topic	Page
Location of the 8000 Series modules	145
Attaching the antistatic wrist strap	147
Removing and installing a filler panel	148
Installing and replacing a module	150
Connecting a PC or terminal to the console port	159
Connecting a network management station to the switch	160
Connecting a network management station to the switch	160
Connecting communications cables to 8100 modules	163
Connecting communications cables to 8600 modules	164
Connecting the shelf alarm cable from the BIP to the chassis	166
Managing cables	168

Location of the 8000 Series modules


[Figure 81](#) shows the location of the 8000 Series modules in a 8010co Chassis. For descriptions of these modules, see [Chapter 2, “8100 modules”](#) and [Chapter 3, “8600 modules.”](#)

8100 modules installed in slots 1 or 2 serve as a clock source for the entire chassis. Therefore, you must install a 8100 module in either slot 1 or 2 to avoid traffic loss.



Note: 8000 Series software Release 3.2 and later does not support configurations of 8100 modules and 8600 modules installed within the same chassis.

Figure 81 Location of the 8000 Series modules

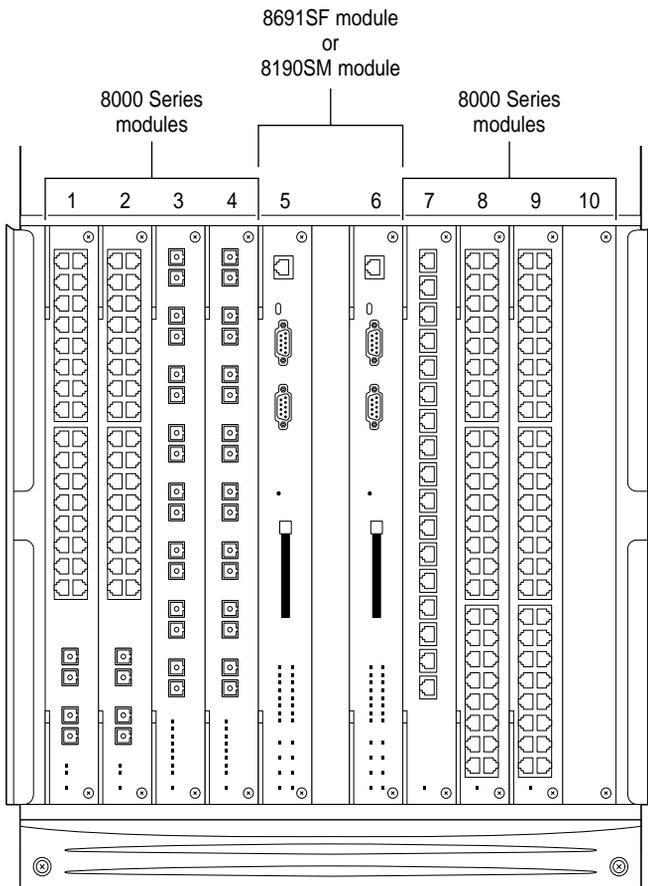

Attaching the antistatic wrist strap

The 8010co Chassis ships with an antistatic wrist strap. The antistatic wrist strap directs the discharge of static electricity from your body to the chassis, thereby avoiding discharge to, and possible damage of, sensitive electronic components.

You must wear the antistatic wrist strap whenever you remove, install, and handle modules or components such as the fan tray and power supplies.




Caution: Electrostatic discharge can damage hardware. Follow the procedure in this section to protect your equipment from damage.

To attach the antistatic wrist strap:

- 1 Locate the antistatic wrist strap in the shipping container.
- 2 Verify that the cable is attached to the wrist strap.
- 3 Place the strap around your wrist.
- 4 Adjust the strap to ensure that the metal buckle inside the strap touches your skin.
- 5 Insert the jack into the ground port on the front of the chassis ([Figure 82](#)).

Figure 82 Connecting the wrist strap jack to the front ground port

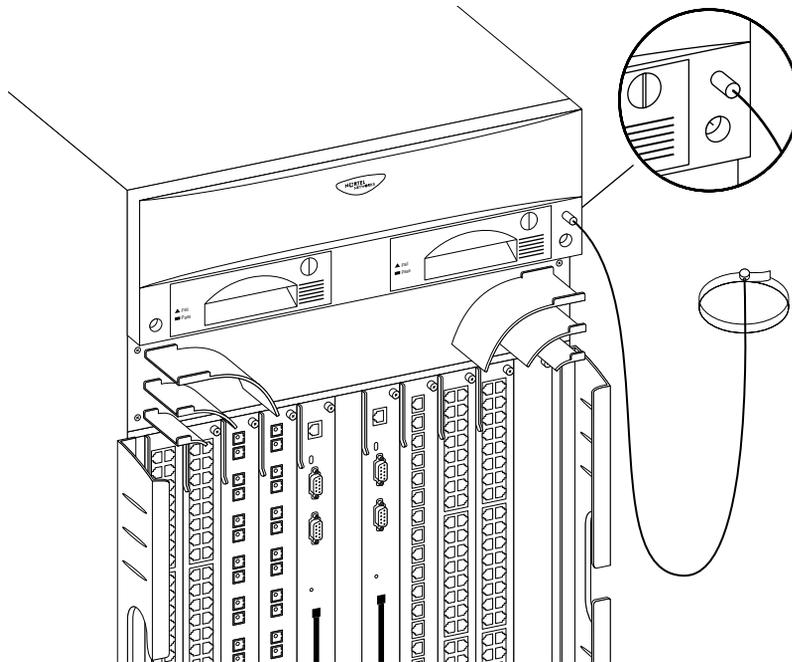

10230FA

Removing and installing a filler panel

Nortel Networks ships the 8010co Chassis with a filler panel in each empty module slot.

Before you can install a new module, you must remove the appropriate filler panel. For instructions, see the next section, [“Removing a filler panel.”](#)


If you need to install a filler panel, see [“Installing a filler panel”](#) on [page 149](#).

Removing a filler panel

To remove a filler panel:

- 1 Using a Phillips screwdriver, loosen the 2 captive screws that fasten the filler panel to the slot (Figure 83).

Figure 83 Removing a filler panel

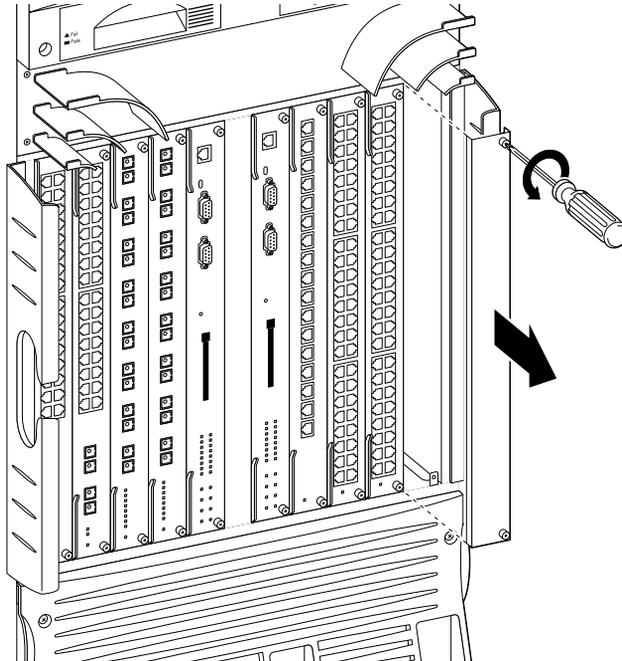

10227FA

- 2 Pull the filler panel out of the slot.

Installing a filler panel

If you plan to remove a module from the 8010co Chassis without immediately replacing it, you must install a filler panel in the slot.

To install a filler panel:

- 1 Locate the slot where you want to install the filler panel.

- 2 Slide the filler panel into the slot.
- 3 Tighten the 2 screws with a Phillips screwdriver.

Installing and replacing a module

You can add or replace a module with the power on or off. To replace a module, see the next section, [“Removing a module.”](#) To install a module, see [“Installing a module”](#) on [page 154](#).



Warning: Fiber optic equipment can emit laser or infrared light that can injure your eyes. Never look into an optical fiber or connector port. Always assume that fiber optic cables are connected to a light source.



8769EB



Caution: Electrostatic discharge can damage hardware. Follow the procedure in [“Attaching the antistatic wrist strap”](#) to protect your equipment from damage.

Removing a module

You can remove any 8000 Series module from an operating switch chassis without turning off the chassis power.



Caution: Do not operate the 8010co Chassis with an empty module slot. If you need to replace a failed module and you do not yet have a replacement module, leave the failed module installed or install a filler panel.

After you remove or replace a module in your chassis, you can expect the following results:

- If you remove an I/O module from an operating switch without turning off the chassis power and replace it with the same type module, the system restores the configuration.
- If you remove a 8672ATME, 8672ATMM, or 8683POSM module from an operating switch without turning off the chassis power and the module you insert has the same type MDAs installed as the module which was removed, the system saves the configuration.
- If you remove a 8672ATME, 8672ATMM, or 8683POSM module from an operating switch without turning off the chassis power and the module you insert has different MDAs installed than the module which was removed, you must reconfigure the module. Nortel Networks recommends that you save the original configuration in a file for future use.
- If you replace a module with a different type module, the system discards the configuration of the old ports, and the new ports are added to either the default VLAN or a null VLAN, depending on the operating mode of the switch.
- If you save the configuration in nonvolatile random access memory (NVRAM), turn off the switch, replace a module with a different module type, and turn the system on again, the system discards the configuration of the old ports, add adds new ports to either the default VLAN or an unassigned VLAN, depending on the operating mode of the switch.
- If you replace a 8691SF Module, all the other modules in the chassis reset and revert to their saved configuration settings. If configuration settings for a module were not saved, the module reverts to its factory default settings.
- If you remove a 8190SM Module (for example, to replace it), the switch continues switching for up to 2 minutes. Then it reboots using the configuration settings on the backup switch management module, if one is present. If, after 2 minutes, no backup switch management module is present, all ports go to blocking mode.

To remove a module:


- 1** Attach the antistatic wrist strap.

For instructions, see [“Attaching the antistatic wrist strap”](#) on [page 147](#).

- 2** Disconnect any cables attached to the ports on the module.

- 3 Using a Phillips screwdriver, loosen the 2 captive screws that secure the module to the chassis (Figure 84).

Figure 84 Removing a 8000 Series module

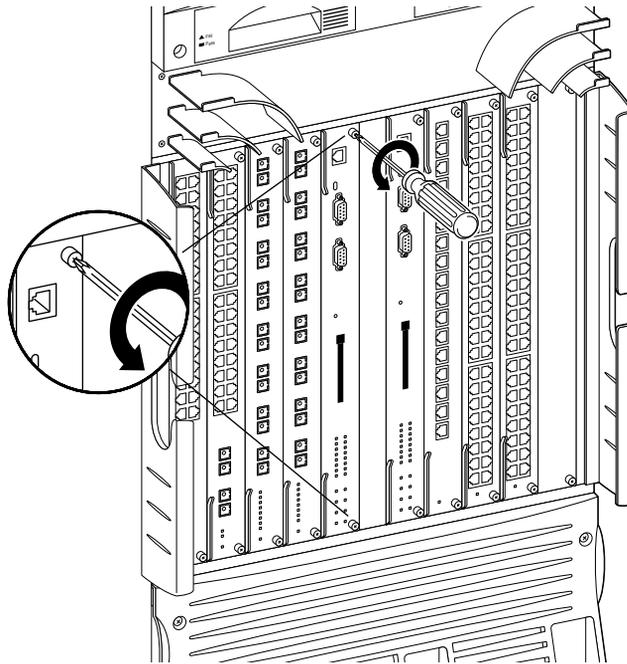


10274FA

- 4 Rotate the insert/extract levers to eject the module from the chassis.

- 5 Slide the module out of the chassis ([Figure 85](#)).

Figure 85 Sliding the module out of the chassis

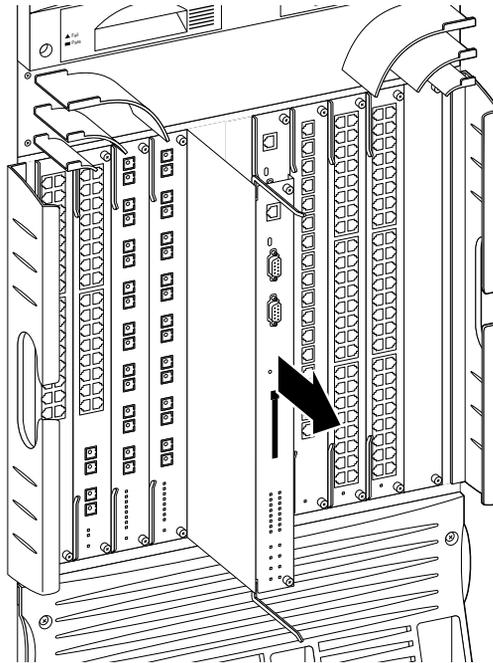

10229FA

- 6 If you are installing a replacement module, go to the next section. Otherwise, install a filler panel (see [“Installing a filler panel”](#) on page 149).

Installing a module

You can install a 8000 Series module with the power on or off. If you install a module in the same chassis and slot where the same type of module was previously installed, the previous configuration is maintained for the new module in that slot. In all other cases, a module installed in a 8010co Chassis is reset to factory defaults.



Caution: Electrostatic discharge can damage hardware. Attach the antistatic wrist strap before handling any 8000 Series components.

If you are installing modules for an initial installation, follow the steps in this section to install all modules except the 8672ATME, 8672ATMM, and 8683POSM Modules. Then follow the steps in the section, [“Verifying a successful installation”](#) on [page 213](#). Return to this section and install the 8672ATME, 8672ATMM, and 8683POSM Modules, then refer to [“Initializing the 8672ATME, 8672ATMM, and 8683POSM Modules”](#) on [page 214](#).

If you are adding the 8672ATME, 8672ATMM, and 8683POSM Modules to an existing system, follow the steps in this section then refer to [“Initializing the 8672ATME, 8672ATMM, and 8683POSM Modules”](#) on [page 214](#).

To install a 8000 Series module:

- 1 Attach the antistatic wrist strap.

For instructions, see [“Attaching the antistatic wrist strap”](#) on [page 147](#).


- 2 Locate the slot where you want to install the module.

- 3 Remove the filler panel.

For instructions, see [“Removing a filler panel”](#) on [page 149](#).

- 4 Make sure that the insert/extract levers are extended away from the front of the module (Figure 86).


Figure 86 Insert/extract levers in extended position

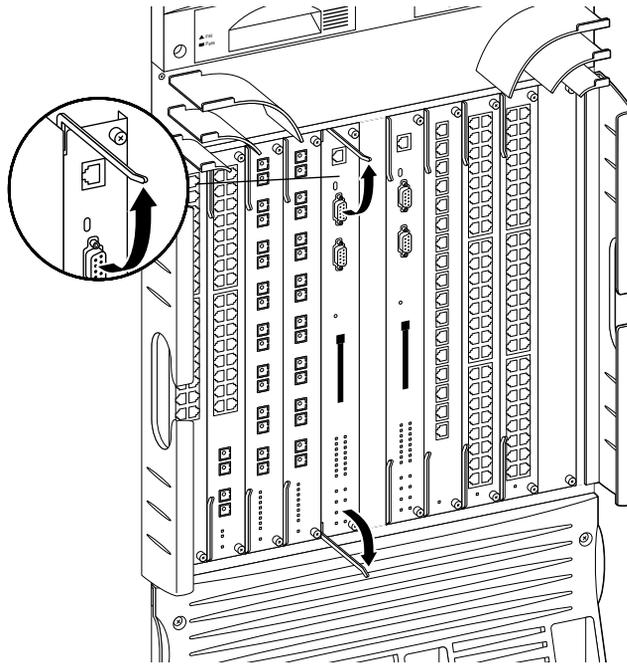

10228FA

- 5 Slide the 8000 Series module into the slot using the slot module guides (Figure 87).

Figure 87 Installing a 8000 Series module

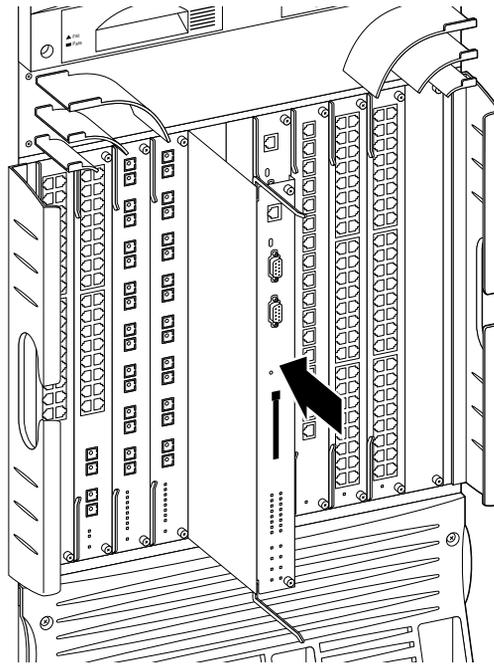


10275FA

- 6 Slide the module into the chassis until its connector panel touches the 8010co Chassis back panel.

- 7 Rotate the inserter/extractor levers to seat the module backplane connectors (Figure 88).


Figure 88 Seating the backplane connectors

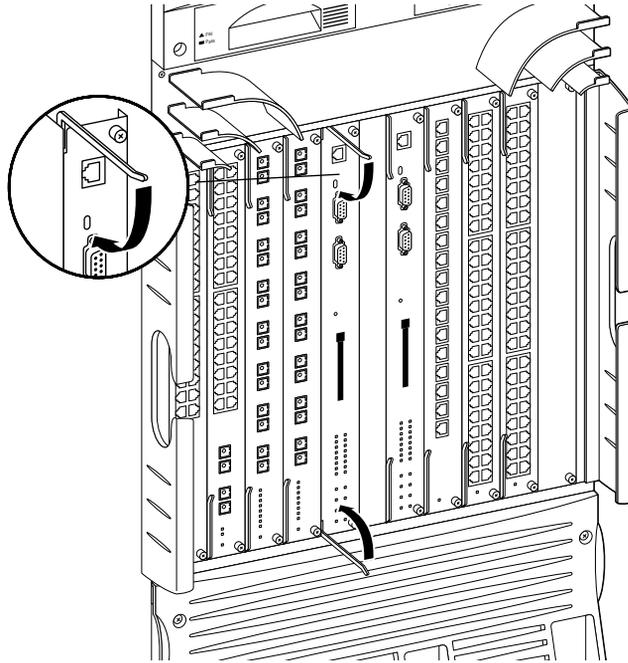

10276FA

- 8 Using a Phillips screwdriver, tighten the 2 captive screws to secure the module in the chassis (Figure 89).

Figure 89 Securing the 8000 Series module in the chassis

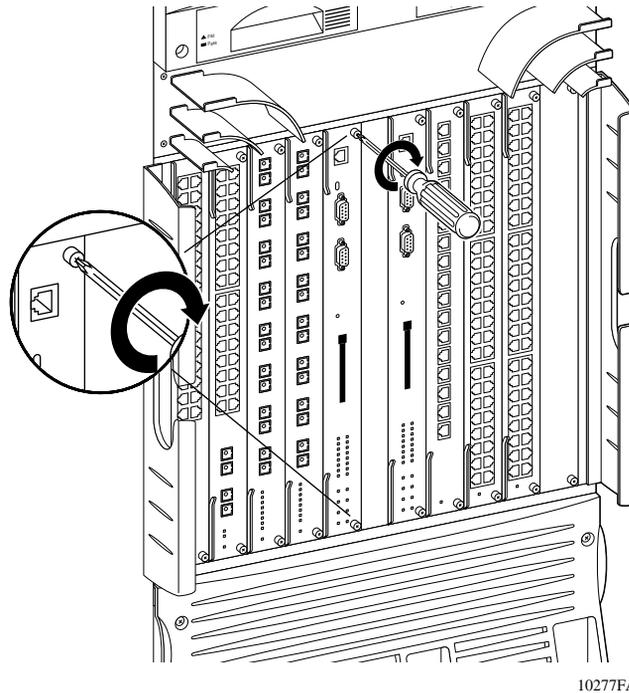

Note: Make sure that both screws are tight for proper module operation.

After you install the modules, connect console equipment and network cables. For instructions, see these sections:

- “Connecting a PC or terminal to the console port” on page 159
- “Connecting a network management station to the switch” on page 160”
- “Connecting a modem” on page 161
- “Connecting communications cables to 8100 modules” on page 163
- “Connecting communications cables to 8600 modules” on page 164

Connecting a PC or terminal to the console port

You use Device Manager or the command line interface (CLI) to customize your 8000 Series switch configuration (for example, by editing IP parameters). To establish a local CLI or Device Manager session, you must connect a PC, laptop, or a VT-100 terminal to the console port on the 8190SM Module or the 8691SF Module.

To connect a PC, laptop, or terminal to the console port, you need the serial console cable with the 9-pin receptacle connector (shipped with the 8010co Chassis). See [“Console serial port” on page 273](#) for a list of pin assignments.

To connect a PC or terminal to the console port:

- 1 Turn on and configure the terminal or a communications port on the PC, using the parameters in [Table 32](#).

See the PC or terminal user manual for instructions.

Table 32 PC and terminal parameters

Parameter	Value
Baud rate	9600
Data bits	8
Stop bits	1
Parity	None

- 2 Insert the 9-pin receptacle end of the console cable into the console connector on the 8190SM Module or the 8691SF Module.
- 3 Attach the 9-pin plug end of the cable to the serial communications port on the back of the PC or terminal.

Connecting a network management station to the switch

The management port on the 8190SM Module and the 8691SF Module is a 10/100 Mb/s Ethernet port implemented on an RJ-45 connector wired as an MDI connection. You can use this port to connect the switch to a network management station for out-of-band management of the switch using a Web browser or Device Manager.

The port has its own IP address but does not switch traffic to other ports in the chassis.



Note: For 10 Mb/s connections, you can use Category 3, 4, or 5 copper unshielded twisted pair (UTP) cable. Use only Category 5 UTP cable to connect ports that will operate at 100 Mb/s.

To connect a UTP cable to the management port insert the cable into the RJ-45 receptacle connector on the 8190SM Module or the 8691SF Module.

Connecting a modem

If you need remote dial-in access to the CLI, you can connect a modem (AT or Hayes compatible) to the 8190SM Module or the 8691SF Module using a serial cable.

To connect a modem to the 8000 Series switch:

- 1 Turn on and configure the modem, using the parameters in [Table 33](#).


See the modem documentation for instructions.

Table 33 Modem settings

Setting	Value
Clear to send (CTS) signal	On
Data terminal ready (DTR) signal	Modem will only connect if the DTR signal is present. If the DTR signal is not present, the modem will disconnect.
Data carrier detect (DCD) or received line signal detection (RLSD)	On while the carrier is present. The switch uses DCD to detect modem connect and disconnect.
Data set ready (DSR) signal	On
Ready to send (RTS) signal	Ignored
Synchronous/asynchronous mode	Asynchronous
Auto answer	Answer on two rings when DTR is active.
Local character echo	Off
Supervisory functions	Off
Baud rate	9600
Data bits	8
Stop bits	1
Parity	None

- 2 Insert the 9-pin receptacle end of the serial cable into the modem connector on the 8190SM Module or the 8691SF Module ([Figure 90](#)).

Figure 90 Connecting a modem to the 8010co Chassis

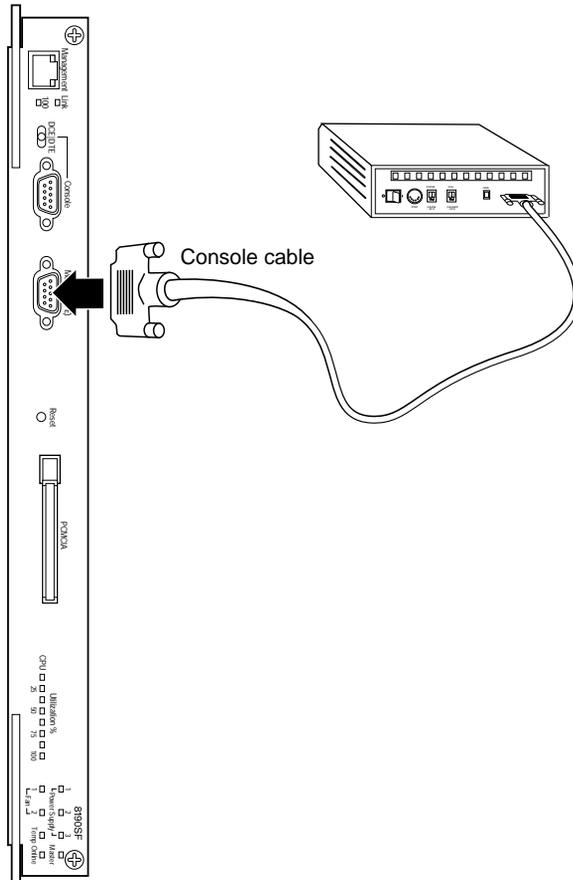

OPT0012A

Insert the 25-pin plug connector at the other end of the serial cable into the modem's RS-232 data communications port.

Connecting communications cables to 8100 modules

Gather the communications equipment and cables that you will attach to the 8100 modules. If you do not have the proper cables, contact your network administrator. [Table 34](#) lists the cable requirements for the 8100 modules.

Table 34 Connectors and cables for 8100 modules

Module	Port	Connector	Recommended cable type	Maximum cable length
8108GBIC	1000 Mb/s Ethernet port	Duplex SC	Depends on installed GBIC model; for specifications, see "Technical specifications for 8100 modules" on page 237 .	
8116FX	100 Mb/s Ethernet port	MT-RJ	62.5 μ m or 50 μ m multimode fiber optic	1352 ft (412 m) for half-duplex links 6562 ft (2 km) for full-duplex links
8132TX	10/100 Mb/s Ethernet ports	RJ-45 wired as MDI-X	EIA Category 3, 4, or 5 UTP for 10 Mb/s operation; EIA Category 5 required for 100 Mb/s operation	328 ft (100 m)
8148TX	10/100 Mb/s Ethernet ports	RJ-45 wired as MDI-X	EIA Category 3, 4, or 5 UTP for 10 Mb/s operation; EIA Category 5 required for 100 Mb/s operation	328 ft (100 m)
8190SM	Ethernet Management port	RJ-45	EIA Category 3, 4, or 5 UTP for 10 Mb/s operation; EIA Category 5 required for 100 Mb/s operation	328 ft (100 m)
	Serial ports	DB-9	RS-232 (shipped with the chassis)	



Note: Ports on the 8132TX and 8148TX Modules are wired as MDI-X. Use straight-through cables to connect these ports to MDI connections such as workstations or servers. Use crossover cables to connect these ports to other MDI-X connections such as hubs or other switches.

Connecting communications cables to 8600 modules

Gather the communications equipment and cables that you will attach to the 8600 modules. If you do not have the proper cables, contact your network administrator. [Table 35](#) lists the cable requirements for the 8600 modules.

Table 35 Connectors and cables for 8600 modules

Module	Port	Connector	Recommended cable type	Minimum cable length	Maximum cable length
8608GBE or 8608GBM	1000 Mb/s Ethernet port	Duplex SC fiber optic connector	Depends on installed GBIC model; for specifications, see "GBICs" on page 257.	None	Depends on installed GBIC model; for specifications, see "GBICs" on page 257.
8608GTE or 8608GTM	1000BASE-T Ethernet ports	RJ-45	EIA Category 5 or better UTP/STP straight-through cable. Cables must use all four pairs.	7 ft (2.1 m)	328 ft (100 m)
8608SXE	1000BASE-SX Ethernet ports	Duplex SC	62.5 μ m multimode fiber optic cable	None	722 ft (220 m) @ 160 MHz/km bandwidth 902 ft (275 m) @ 200 MHz/km band- width
			50 μ m multimode fiber optic cable	None	1640 ft (500 m) @ 400 MHz/km bandwidth 1804 ft (550 m) @ 400 MHz/km bandwidth
8616GTE	1000BASE-T Ethernet ports	RJ-45	EIA Category 5 or better UTP/STP straight-through cable. Cables must use all four pairs.	7 ft (2.1 m)	328 ft (100 m)

Table 35 Connectors and cables for 8600 modules (continued)

Module	Port	Connector	Recommended cable type	Minimum cable length	Maximum cable length
8616SXE	1000BASE-SX Ethernet ports	MT-RJ	62.5 μ m multimode fiber optic cable	None	722 ft (220 m) @ 160 MHz/km bandwidth 902 ft (275 m) @ 200 MHz/km bandwidth
			50 μ m multimode fiber optic cable	None	1640 ft (500 m) @ 400 MHz/km bandwidth 1804 ft (550 m) @ 400 MHz/km bandwidth
8624FXE	100BASE-FX Ethernet ports	MT-RJ	62.5 μ m multimode fiber optic cable	None	6562 ft (2 km)
8632TXE or 8632TXM	1000 Mb/s Ethernet port	Duplex SC	Depends on installed GBIC model; for specifications, “GBICs” on page 257..	None	Depends on installed GBIC model; for specifications, see “GBICs” on page 257.
	10/100 Mb/s Ethernet ports	RJ-45 wired as MDI-X	EIA Category 3, 4, or 5 UTP for 10 Mb/s operation; EIA Category 5 required for 100 Mb/s operation	None	328 ft (100 m)
8648TXE or 8648TXM	10/100 Mb/s Ethernet ports	RJ-45 wired as MDI-X	EIA Category 3, 4, or 5 UTP for 10 Mb/s operation; EIA Category 5 required for 100 Mb/s operation	None	328 ft (100 m)
8672ATME OC-3 or 8672ATMM OC-3	OC-3	MT-RJ	9/125 μ m single-mode fiber optic cable	None	9.3 mi (15 km)
	OC-3	MT-RJ	62.5/125 μ m multimode fiber optic cable	None	1.24 mi (2 km)
8672ATME OC-12 or 8672ATMM OC-12	OC-12	Duplex SC	9/125- μ m single-mode fiber optic cable	None	9.3 mi (15 km)
	OC-12	Duplex SC	62.5/125 μ m multimode fiber optic cable	None	1640 ft (500 m)
8672ATME DS-3 or 8672ATMM DS-3	DS-3	BNC	75 ohm coaxial cable	None	450 ft (137 m)

Table 35 Connectors and cables for 8600 modules (continued)

Module	Port	Connector	Recommended cable type	Minimum cable length	Maximum cable length
8681XLR	10GBASE-LR port	Duplex SC	9/125 μ m single-mode fiber optic cable	None	6.2 mi (10) km
8681XLW	10GBASE-LW port	Duplex SC	9/125 μ m single-mode fiber optic cable	None	6.2 mi (10) km
8683POSM OC-3	OC-3	MT-RJ	9/125 μ m single-mode fiber optic cable	None	9.4 mi (20 km)
	OC-3	MT-RJ	62.5/125 μ m multimode fiber optic cable	None	1.3 mi (15 km)
8683POSM OC-12	OC-12	Duplex SC	9/125- μ m single-mode fiber optic cable	None	9.3 mi (15 km)
	OC-12	Duplex SC	62.5/125 μ m multimode fiber optic cable	None	1640 ft (500 m)
8691SF	Ethernet Management port	RJ-45	EIA Category 3, 4, or 5 UTP for 10 Mb/s operation; EIA Category 5 required for 100 Mb/s operation	None	328 ft (100 m)
	Serial ports	DB-9	RS-232 (shipped with the chassis)	None	328 ft (100 m)




Note: Ports on the 8632TXE and 8648TXE Modules are wired as MDI-X. Use straight-through cables to connect these ports to MDI connections such as workstations or servers. Use crossover cables to connect these ports to other MDI-X connections such as hubs or other switches.

Connecting the shelf alarm cable from the BIP to the chassis

To enable the BIP to monitor central office alarms on the 8010co Chassis, you must connect the appropriate shelf alarm connector on the BIP to the connector on the chassis (Figure 91). Use the cable shipped with the BIP.

Figure 91 BIP shelf alarm connections (upper and lower shelves)

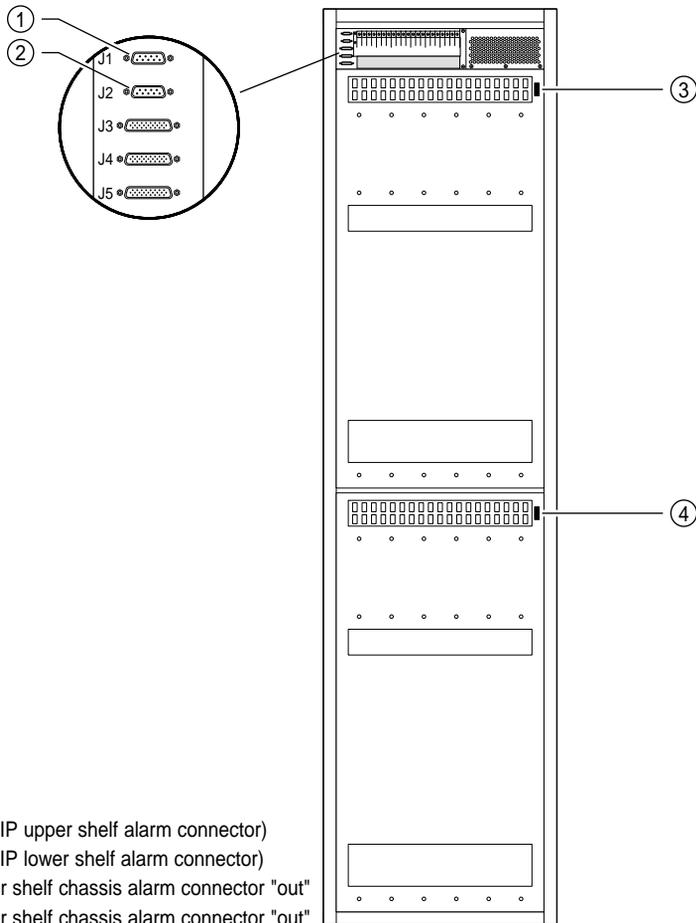

- 1 = J1 (BIP upper shelf alarm connector)
- 2 = J2 (BIP lower shelf alarm connector)
- 3 = Upper shelf chassis alarm connector "out"
- 4 = Lower shelf chassis alarm connector "out"

10380EA

For complete information about connecting the BIP to the 8010co Chassis, see *Installing the Breaker Interface Panel for the 8010co Chassis*.

Managing cables


The 8010co Chassis ships with cable management brackets. The cable management brackets keep groups of cable clusters fastened and out of the way, but accessible for maintenance. (If you have not installed these brackets, see [“Installing the cable management brackets” on page 105.](#))

To facilitate card installation and removal, bundle the cables for each slot. Connect, label, and bundle the cables for each module together, then use velcro straps or sheet fiber wrapped around the cables to organize them along the entire cable path before you connect cables to another module. Secure the velcro straps or sheet fiber to brackets with lacing cord or tie wrap.

To manage cables for the 8010co Chassis:

- 1 Connect the appropriate cable to the module.
- 2 Route the cable up to the appropriate cable management bracket and channel ([Figure 92](#)).

Figure 92 Managing 8010co cables

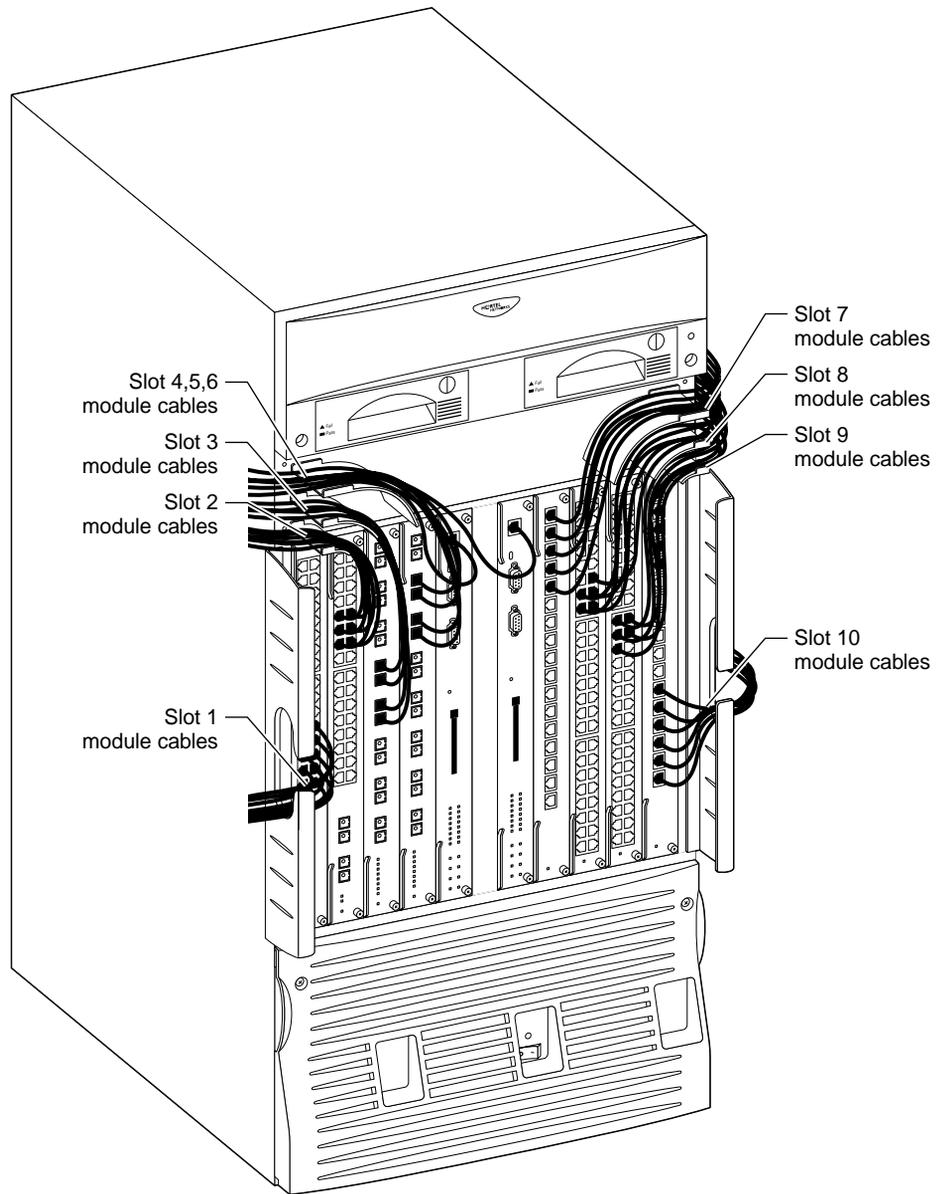


10520FA

- 3** Route the cable to the termination panel, loosely fastening it with velcro straps or sheet fiber along the path.

- 4 Fasten the connector onto the termination panel end of the cable. Use the instructions supplied with the connector. If you are using cables manufactured by Nortel Networks, the connectors are already fastened to predetermined lengths of cable.
- 5 Label the unconnected end of the cable with the node identifier (from site records) and the shelf, cage, slot, and port number.
- 6 When all the transmitting cables from the same module are connected to the termination panel, use velcro straps or sheet fiber wrapped around the cables to manage them.
- 7 Using a scissors, cut a section of the sheet fiber that is wide enough to wrap around the cables.
- 8 Using a scissors, round the corners of the sheet fiber section.
- 9 Loosely wrap the sheet fiber and secure it using lacing cord or tie wraps (Figure 93).

Figure 93 Wrapping cables with sheet fiber and securing with lacing cord

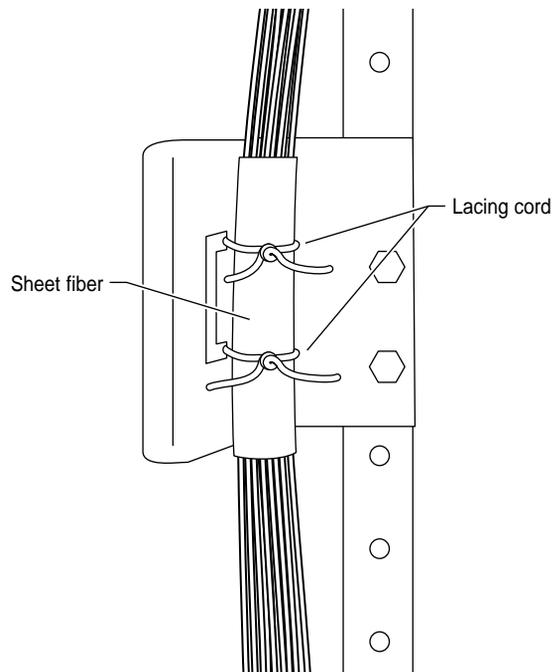

10826EA

- 10 Secure the velcro straps or sheet fiber to brackets with lacing cord or tie wraps.

Chapter 7

Installing gigabit interface converters

Gigabit interface converters (GBICs) are hot-swappable I/O enhancement components that link Gigabit Ethernet ports to fiber optic networks.

This chapter describes how to install GBICs in the following 8000 Series modules that support GBICs:

- 8108GBIC Module
- 8608GBE Module
- 8608GBM Module
- 8632TXE Module
- 8632TXM Module

This chapter does not describe how to install coarse wavelength division multiplexing (CWDM) GBICs in 8000 Series modules. To install the CWDM GBICs and the optical routing system, see the following documents:

- *Installing CWDM Gigabit Interface Converters*
Describes how to install CWDM GBICs in 8000 Series modules.
- *Installation and Networking Guidelines for Optical Routing*
Describes how to install the optical routing system, including connections between the GBICs, multiplexers, and the switch.

This chapter includes the following topics:

Topic	Page
Installing a GBIC	175
Removing a GBIC	176

The 8108GBIC, 8608GBE and 8608GBM Modules have eight bays for installing GBICs. The 8632TXE and 8632TXM Modules have two bays for installing GBICs. The GBIC bays are covered by spring-loaded filler panels that rotate out of the way when you push the GBIC into place.

The following types of GBIC are supported:


- 1000BASE-SX—uses multimode fiber over distances up to 550 meters (m)
- 1000BASE-LX—uses multimode fiber over distances up to 550 m or single-mode fiber over distances up to 5 kilometers (km)
- 1000BASE-XD—uses single-mode fiber over distances up to 50 km
- 1000BASE-ZX—uses single-mode fiber over distances up to 70 km
- 1000BASE-CWDM—uses single-mode fiber over distances up to 120 km



Note: CWDM GBICs are not supported on the 8108GBIC Module.

GBICs are available in different case styles ([Figure 94](#)). One type has two spring tabs at the front of the GBIC; the other type has an extractor handle on the front.

Figure 94 Types of GBICs

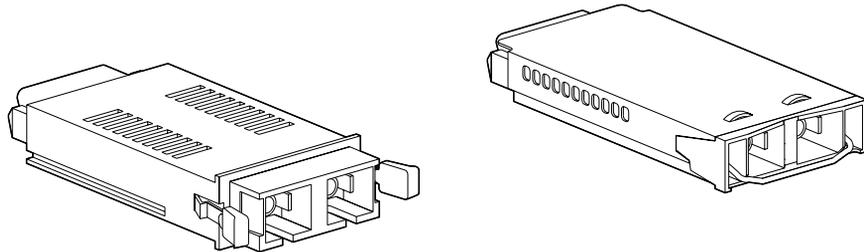

9702FA

GBICs are shipped with a protective rubber plug in the connectors. Leave the plug in place when no cables are connected to the GBIC.

Installing a GBIC

You can install or replace a GBIC in an operating 8600 module without turning off power to the switch.



Danger: Fiber optic equipment can emit laser or infrared light that can injure your eyes. Never look into an optical fiber or connector port. Always assume that fiber optic cables are connected to a light source.

To install a GBIC:


- 1 Attach the antistatic wrist strap.

For instructions, see [“Attaching the antistatic wrist strap”](#) on [page 147](#).

- 2 Remove the GBIC from its protective packaging.
- 3 Insert the GBIC into the bay on the module ([Figure 95](#)).

GBICs are keyed to prevent improper insertion. If the GBIC resists pressure, do not force it. Remove it, turn it over, and reinsert it.

Figure 95 Installing a GBIC

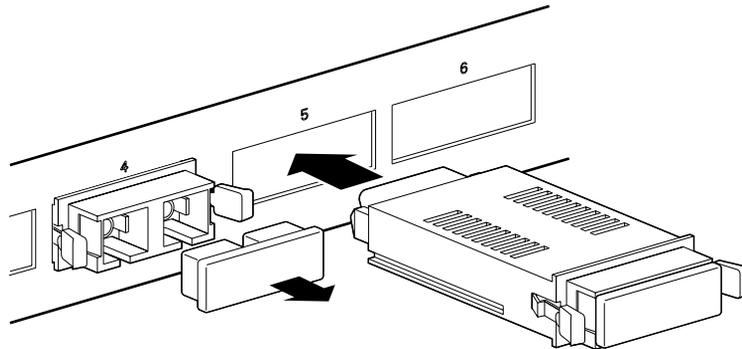

9703FA

- 4 Press on the front of the GBIC until it snaps into place.
- 5 Remove the rubber plug from the connectors to connect the cables.

When shorter lengths of single-mode fiber cable are used with the 1000BASE-ZX and 1000BASE-XD GBICs, there is a risk of overloading the receiver. You may need to insert an in-line optical attenuator at each end of the link between the fiber optic cable plant and the receiving port on the 1000BASE-ZX or 1000BASE-XD GBIC (Table 36).

Table 36 In-line optical attenuators for 1000BASE-ZX and 1000BASE-XD GBICs

Fiber optic cable span	In-line optical attenuator
Less than 25 km	10 dB
Less than 50 km	5 dB

Removing a GBIC

To remove an installed GBIC:


- 1 Attach the antistatic wrist strap.

For instructions, see [“Attaching the antistatic wrist strap”](#) on [page 147](#).

- 2 Remove the GBIC

- If the GBIC has an extractor handle, grasp the handle and pull firmly to remove the GBIC from the bay.
- If the GBIC has spring tabs, press in on the tabs on each side of the GBIC and pull the GBIC out of the bay (Figure 96).

Figure 96 Removing a GBIC

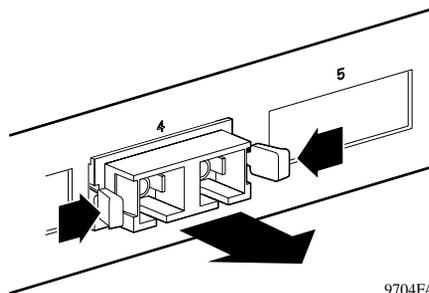

Chapter 8

Installing media dependent adapters on 8100 modules

This chapter describes the 400 Series and 8100 Series media dependent adapters (MDAs) and how to install them on the 8116FX and 8132TX Modules. The MDAs support high-speed connections to servers, shared Fast Ethernet hubs, or backbone devices.

This chapter includes the following topics:

Topic	Page
450 Series MDAs	178
8100-4TX MDA	180
8100 Series fiber MDAs	181
Installing an MDA on a 8100 module	182

The 8116FX and 8132TX Modules support the following MDAs:

- 450-1SX MDA—1000BASE-SX MDA (1-port shortwave gigabit fiber)
- 450-1SR MDA—1000BASE-SX MDA (1-port shortwave gigabit fiber with 1 redundant port)
- 450-1LX MDA—1000BASE-LX MDA (1-port longwave gigabit fiber)
- 450-1LR MDA—1000BASE-LX MDA (1-port longwave gigabit fiber with 1 redundant port)
- 8100-4TX MDA—10BASE-T/100BASE-TX MDA (4-port copper)
- 8100-2FX MDA—100BASE-FX MDA (2-port multimode fiber with SC connectors)
- 8100-4FX MDA—100BASE-FX MDA (4-port multimode fiber with MT-RJ connectors)

450 Series MDAs

Four Gigabit Ethernet MDAs are available for the 8116FX Module and the 8132TX Module:

- Two shortwave gigabit MDAs (Figure 97):
 - The 450-1SX MDA is a single-Phy MDA.
 - The 450-1SR MDA is a single-MAC MDA with a redundant Phy port.

These MDAs use shortwave 850 nm fiber optic connectors to connect devices over multimode (550 meter) fiber optic cable.

- Two longwave gigabit MDAs (Figure 98):
 - The 450-1LX MDA is a single-Phy MDA.
 - The 450-1LR MDA is a single-MAC MDA with a redundant Phy port.

These MDAs use longwave 1300 nm fiber optic connectors to connect devices over single-mode (3 kilometer) or multimode (550 meter) fiber optic cable.

Figure 97 1000BASE-SX (shortwave gigabit) MDA front panels

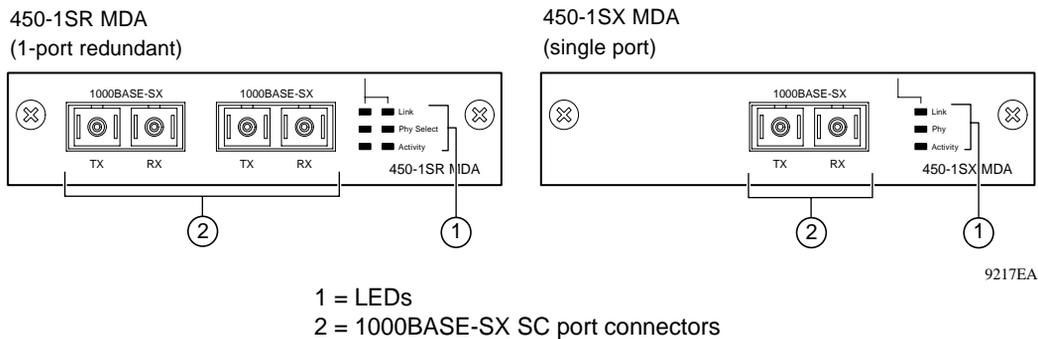


Figure 98 1000BASE-LX (longwave gigabit) MDA front panels

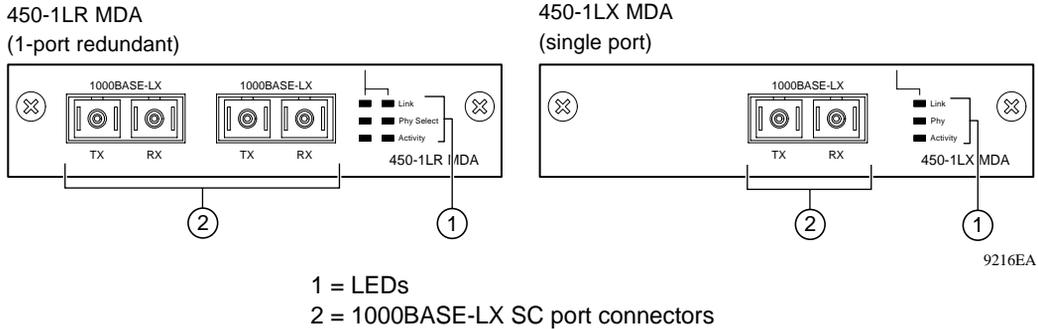


Table 37 describes the 1000BASE-SX and 1000BASE-LX MDA LEDs.


Table 37 1000BASE-SX and 1000BASE-LX MDA LEDs

Label	Color/State	Meaning
Link	Green/Steady	A valid communication link is established.
	Green/Blinking	The corresponding port is management disabled.
	Off	The communication link connection is bad, or there is no connection to this port.
Phy Select	Green/Steady	The corresponding Phy port is selected.
	Off	The corresponding Phy port is in backup mode.
Activity	Green/Blinking	Indicates the network activity level for the corresponding port. A high level of network activity can cause LEDs to appear to be on continuously.

8100-4TX MDA

The 8100-4TX MDA (Figure 99) has four standard RJ-45 connectors to attach to Ethernet devices. This MDA can operate at either 10 Mb/s or 100 Mb/s speed. The speed is determined through autonegotiation with the connected device.

Figure 99 8100-4TX MDA front panel

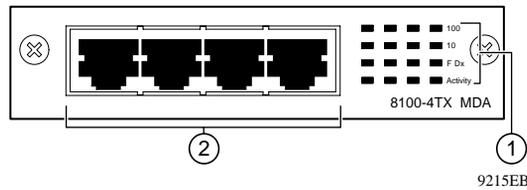

1 = LEDs

2 = 10BASE-T/100BASE-TX port connectors

Table 38 describes the 8100-4TX MDA LEDs.

Table 38 8100-4TX MDA LEDs

Label	Description	Color/State	Meaning
100	100BASE-TX port status LEDs	Green/Steady	The corresponding port is set to operate at 100 Mb/s.
		Green/Blinking	The corresponding port is management disabled.
		Off	The link connection is bad, or there is no connection to this port.
10	10BASE-T port status LEDs	Green/Steady	The corresponding port is set to operate at 10 Mb/s.
		Green/Blinking	The corresponding port is management disabled.
		Off	The link connection is bad, or there is no connection to this port.
F Dx	Full-duplex port status LEDs	Green/Steady	The corresponding port is in full-duplex mode.
		Off	The corresponding port is in half-duplex mode.
Activity	Port activity LEDs	Green/Blinking	Indicates the network activity level for the corresponding port. A high level of network activity can cause LEDs to appear to be on continuously.

8100 Series fiber MDAs

The 8100 Series fiber MDAs are used to make fiber-based 100 Mb/s connections to the switch. Two versions of this MDA are available (Figure 100):

- The 8100-2FX MDA uses two longwave 1300 nm SC connectors to connect devices over 62.5/125 μm multimode fiber optic cable.
- The 8100-4FX MDA uses four longwave 1300 nm MT-RJ connectors to connect devices over 62.5/125 μm multimode fiber optic cable.

The 8100 Series fiber MDAs do not support single-mode fiber cable.

Figure 100 8100 Series fiber MDA front panels

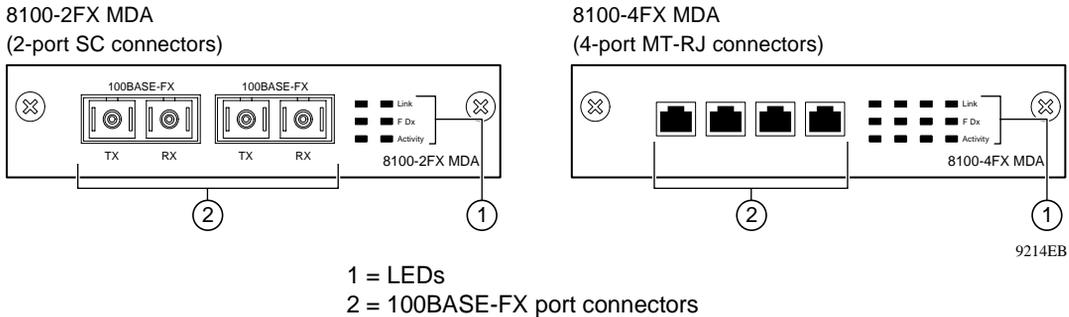


Table 39 describes the 8100 Series fiber MDA LEDs.

Table 39 8100 Series fiber MDA LEDs

Label	Description	Color/State	Meaning
Link	Communication link LEDs	Green/Steady	A valid communication link is established.
		Green/Blinking	The corresponding port is management disabled.
		Off	The communication link connection is bad, or there is no connection to this port.
F Dx	Full-duplex port status LEDs	Green/Steady	The corresponding port is in full-duplex mode.
		Off	The corresponding port is in half-duplex mode.
Activity	Port activity LEDs	Green/Blinking	Indicates the network activity level for the corresponding port. A high level of network activity can cause LEDs to appear to be on continuously.

Installing an MDA on a 8100 module

The 8116FX Module and the 8132TX Module have one slot for a single MDA.



Note: You can install or replace an MDA without turning off the chassis; however, the module resets when an MDA is inserted or removed.


To install or replace an MDA:

- 1 Attach the antistatic wrist strap.
For instructions, see [“Attaching the antistatic wrist strap”](#) on [page 147](#).
- 2 Loosen the retaining screw at each end of the module.
- 3 Use the inserter/extractor levers to disconnect the module from the chassis backplane connector.
- 4 Loosen the thumbscrews and remove the filler panel (or the installed MDA) from the MDA slot.
- 5 Insert the MDA into the slot ([Figure 101](#)), taking care to slide the MDA onto the guides provided on the module backing.



Caution: Make sure that the MDA slides in on the guides provided. Failure to align the MDA with the guides can result in bent and broken pins.

Figure 101 Installing an MDA on the 8132TX Module

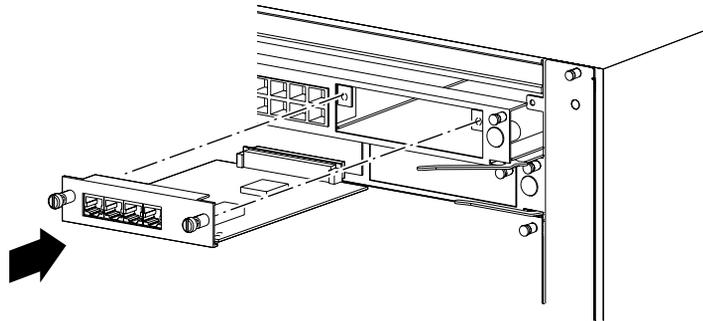

9169FA

- 6 Press the MDA firmly into the slot. Make sure that the MDA is fully seated in the connector.
- 7 Secure the MDA in the module by tightening the thumbscrews on the MDA front panel.
- 8 Use the inserter/extractor levers to reseal the module backplane connector.
- 9 Tighten the module retaining screws.
- 10 Attach devices to the MDA ports.



Note: The IEEE 802.3 1998 Clause 28 autonegotiation specification requires that all ports operating at 100 Mb/s use only Category 5 unshielded twisted pair (UTP) cabling.

Chapter 9

Installing media dependent adapters on 8600 modules

This chapter provides instructions for adding and replacing media dependent adapters (MDAs) on the 8672ATME and 8672ATMM Modules and the 8683POSM Module. It also discusses connecting communications cables. This chapter includes the following topics:

Topic	Page
8672ATME and 8672ATMM Modules MDAs	191
8683POSM Module MDAs	191
Installing an MDA on a 8600 module	194
Replacing an MDA on a 8600 module	197
Connecting fiber cables to a 8600 module MDA	198
Connecting coaxial cables to a 8600 module MDA	201

8672ATME and 8672ATMM Modules MDAs

The media dependent adapters (MDAs) for the 8672ATME and 8672ATMM Modules are modular port adapters that you install on the module. The module has two slots for MDAs. You can install one or two of the following MDAs:

- 1-port OC-12c/STM-4 (Figure 102)
- 4-port OC-3c/STM-1 (Figure 103)
- 2-port DS-3 (Figure 104)

Figure 102 8672ATME/8672ATMM Modules MDA: OC-12c/STM-4

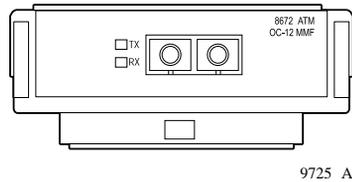


Figure 103 8672ATME/8672ATMM Modules MDA: OC-3c/STM-1


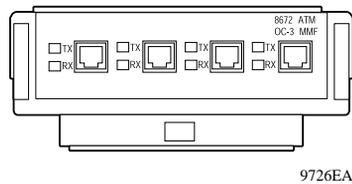


Figure 104 8672ATME/8672ATMM Modules MDA: DS-3

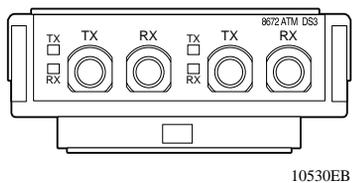

Each MDA has ports for connection to an ATM network. You can install any of the three types of MDA to achieve flexibility in connectivity types. [Table 40](#) lists the MDAs available for the 8672ATME and 8672ATMM Modules.

Table 40 MDAs for the 8672ATME and 8672ATMM Modules

Port type	Model	Cable type	Connector type
OC-12c/STM-4	DS1304004	Multimode fiber	Duplex SC
	DS1304005	Single-mode fiber	Duplex SC
OC-3c/STM-1	DS1304006	Multimode fiber	MT-RJ
	DS1304007	Single-mode fiber	MT-RJ
DS-3	DS1304002	75 ohm coaxial	BNC

The OC-3c/STM1 and OC-12c/STM-4 MDAs for the 8672ATME and 8672ATMM Modules are Class 1 laser products, as identified by the label on the MDA ([Figure 105](#)).

Figure 105 Product label for the 8672ATME and 8672ATMM Modules MDA



8769EB

The MDAs have two bicolor LEDs for each port: one marked TX (transmit) and one marked RX (receive). [Table 41](#) describes the LEDs.

Table 41 LEDs on the 8672ATME/8672ATMM Module MDA

Label	Color	State	Meaning
Tx	Green	Steady/ Blinking	The port is receiving data.
	Amber	Steady	An alarm (RDI) ¹ condition has been detected; the administrative state is down
	Amber	Blinking	The port is out of order; the administrative state is down.
	—	Off	The port is not transmitting data.
Rx	Green	Steady/ Blinking	The port is receiving data.
	Amber	Steady	An alarm (OOF/LOF/LOS) condition has been detected; the administrative state is down.
	Amber	Blinking	The port is out of order; the administrative state is down.
	—	Off	The port is not receiving data.

¹ Remote defect indications (RDI) indicates that a failure has occurred at the far end of the network. In ATM, when the physical layer detects loss of signal or cell synchronization, RDI cells are used to report a VPC/VCC failure. RDI cells are sent upstream by a VPC/VCC endpoint to notify the source VPC/VCC endpoint of the downstream failure.

Specifications for the 8672ATME and 8672ATMM Modules MDAs

[Table 42](#) lists the specifications for the 8672ATME and 8672ATMM Modules MDA- OC3c/STM-1 and OC-12c/STM-4.

Table 42 8672ATME and 8672ATMM Modules MDA specifications- OC-3c/STM-1 and OC-12c/STM-4

Port type	Operating wavelength	Operating power	Pulse repetition rate
OC-12c/STM-4	1274-1356 nm	-14 to -20 dBm	622.08 Mb/s
	1260-1360 nm	-8 to -15 dBm	622.08 Mb/s

Table 42 8672ATME and 8672ATMM Modules MDA specifications- OC-3c/STM-1 and OC-12c/STM-4

Port type	Operating wavelength	Operating power	Pulse repetition rate
OC-3c/STM-1	1274-1356 nm	-14 to -20 dBm	155.52 Mb/s
	1260-1360 nm	-8 to -15 dBm	155.52 Mb/s



Note: See [Table 45](#) for DS-3 specifications.

The OC-3c/STM-1 MDA uses SONET STS-3c/SDH STM-1 1300 nm optical transceivers with MT-RJ fiber optic connectors and either single-mode fiber (SMF) or multimode fiber (MMF) cabling. [Table 43](#) describes the connector specifications.

Table 43 OC-3c/STM-1 specifications: 8672ATME and 8672ATMM Modules MDA

Parameter	SMF description	MMF description
Physical media	9/125 μ m	62.5/125 μ m
Line code	NRZ	NRZ
Wavelength	1274 to 1356 nm	1274 to 1356 nm
Average transmit output power	-8 to -15 dBm	-14 to -20 dBm
Average receiver sensitivity	-8 to -28 dBm	-14 to -30 dBm
Distance	15 km	2 km
Input power	40 W	40 W
Thermal rating	138 Btu/hour maximum	138 Btu/hour maximum

The OC-12c/STM-1 MDA uses SONET STS-3c/SDH STM-1 1300 nm optical transceivers with SC-type fiber optic connectors and either single-mode fiber (SMF) or multimode fiber (MMF) cabling. [Table 44](#) describes the connector specifications.

Table 44 OC-12c/STM-1 specifications: 8672ATME and 8672ATMM Modules MDA

Parameter	SMF description	MMF description
Physical media	9/125 μm	62.5/125 μm
Line code	NRZ	NRZ
Wavelength	1274 to 1356 nm	1274 to 1356 nm
Average transmit output power	-8 to -15 dBm	-14 to -20 dBm
Average receiver sensitivity	-8 to -28 dBm	-14 to -26 dBm
Distance	15 km	2 km
Input power	40 W	40 W
Thermal rating	138 Btu/hour maximum	138 Btu/hour maximum

The DS-3 MDA uses a 75-ohm coaxial cable. [Table 45](#) lists the specifications for the DS-3 MDA.

Table 45 DS-3 specifications: 8672ATME and 8672ATMM Modules MDA

Parameter	Specification
Line rate	44.736 Mb/s (20 ppm)
Impedance	75 ohms
Maximum length	450 feet (135 m)

8683POSM Module MDAs

The MDAs for the 8683POSM Module are modular port adapters that you install on the module. The module has three slots for MDAs. You can install one, two, or three of the following SMF and MMF MDAs:

- 1-port OC-12c/STM-4 (Figure 106)
- 2-port OC-3c/STM-1 (Figure 107)

Figure 106 8683POSM Module MDA: OC-12c/STM-4


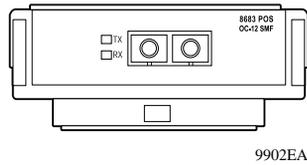


Figure 107 8683POSM Module MDA: OC-3c/STM-1

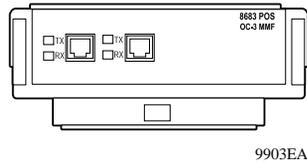

Each MDA has ports for connection to a packet over SONET (POS) network. You can install both types of MDA to achieve flexibility in connectivity types.

Table 46 lists the MDAs available for the 8683POSM Module.

Table 46 MDAs for the 8683POSM Module

Port type	Model	Cable type	Connector type
OC-12c/STM-4	DS1333001	Multimode fiber	Duplex SC
	DS1333002	Single-mode fiber	Duplex SC
OC-3c/STM-1	DS1333003	Multimode fiber	MT-RJ
	DS1333004	Single-mode fiber	MT-RJ

The MDAs for the 8683POSM Module are Class 1 laser products, as identified by the label on the MDA (Figure 108).

Figure 108 Product label for the 8683POSM Module MDA



The MDAs have two bicolor LEDs for each port: one marked TX (transmit) and one marked RX (receive). [Table 47](#) describes the LEDs.

Table 47 LEDs on the 8683POSM Module MDA

Label	Color	State	Meaning
Tx	Green	Steady	The port is transmitting data.
	Amber	Steady	An alarm (RDI) condition has been detected; the administrative state is down.
	Amber	Blinking	The port is out of order; the administrative state is down.
	—	Off	The port is not transmitting data.
Rx	Green	Steady/ Blinking	The port is receiving data.
	Amber	Steady	An alarm (RDI) condition has been detected; the administrative state is down.
	Amber	Blinking	The port is out of order; the administrative state is down.
	—	Off	The port is not receiving data.

Specifications for the 8683POSM Module MDAs

[Table 48](#) lists the specifications for the 8683POSM Module MDA.

Table 48 8683POSM Module MDA specifications

Port type	Operating wavelength	Operating power	Pulse repetition rate
OC-12c/STM-4	1274-1356 nm	-14 to -20 dBm	622.08 Mbs
	1260-1360 nm	-8 to -15 dBm	622.08 Mbs

Table 48 8683POSM Module MDA specifications

Port type	Operating wavelength	Operating power	Pulse repetition rate
OC-3c/STM-1	1274-1356 nm	-14 to -20 dBm	155.52 Mbs
	1260-1360 nm	-8 to -15 dBm	155.52 Mbs

The OC-3c/STM-1 MDA uses SONET STS-3c/STM-1 1300 nm optical transceivers with MT-RJ fiber optic connectors and either single-mode fiber (SMF) or multimode fiber (MMF) cabling. [Table 49](#) describes the connector specifications for OC-3c/STM-1.

Table 49 OC-3c/STM-1 specifications: 8683POSM Module MDA

Parameter	SMF description	MMF description
Physical media	9/125 μ m	62.5/125 μ m
Line code	NRZ	NRZ
Wavelength	1274 to 1356 nm	1274 to 1356 nm
Average transmit output power	-8 to -15 dBm	-14 to -20 dBm
Average receiver sensitivity	-14 to -28 dBm	-4 to -29 dBm
Distance	15 km	2 km
Input power	70 W	70 W
Thermal rating	241 Btu/hour maximum	241 Btu/hour maximum

The OC-12c/STM-4 MDA uses SONET STS-3c/STM-1 1300 nm optical transceivers with duplex SC-type fiber optic connectors and either single-mode fiber (SMF) or multimode fiber (MMF) cabling. [Table 50](#) describes the connector specifications for OC-12c/STM-4.

Table 50 OC-12c/STM-4 specifications: 8683POSM Module MDA

Parameter	SMF description	MMF description
Physical media	9/125 μ m	62.5/125 μ m
Line code	NRZ	NRZ
Wavelength	1274 to 1356 nm	1260 to 1360 nm

Table 50 OC-12c/STM-4 specifications: 8683POSM Module MDA

Parameter	SMF description	MMF description
Average transmit output power	-8 to -15 dBm	-14 to -20 dBm
Average receiver sensitivity	-7 to -18 dBm	-14 to -28 dBm
Distance	15 km	500 m
Input power	90 W	90 W
Thermal rating	310 Btu/hour maximum	310 Btu/hour maximum

Installing an MDA on a 8600 module

To install an MDA on a 8672ATME, 8672ATMM or a 8683POSM Module:


- 1 Attach the antistatic wrist strap.
For instructions, see [“Attaching the antistatic wrist strap”](#) on [page 147](#).
- 2 Remove the module from the chassis and place it on a flat, static-free surface.
For instructions on removing a module, see [“Removing a module”](#) on [page 150](#).



Warning: You cannot hot-swap an MDA. You must remove the 8672ATME, 8672ATMM, or 8683POSM Module, install the MDA, and then reinstall the module.


- 3 Using a Phillips screwdriver, remove the 2 screws securing the MDA slot cover to the module ([Figure 109](#)).
- 4 Lift the cover straight up. (Save the cover for possible future use.)

Figure 109 Removing the MDA slot cover

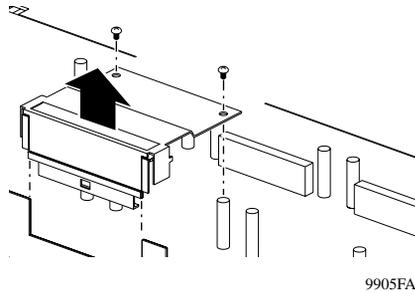


- 5 Align the front of the MDA with the front of the 8672ATME or 8683POSM Module (Figure 110).

Figure 110 Aligning the MDA with the front of the module

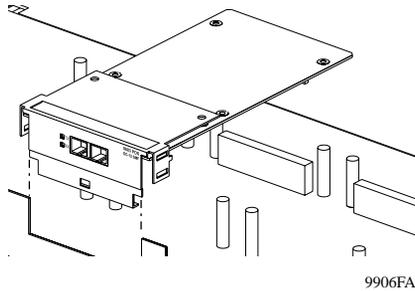


- 6 Align the four holes on the MDA with the mounting posts on the module (Figure 111).

Figure 111 Aligning the MDA with the mounting posts of the module

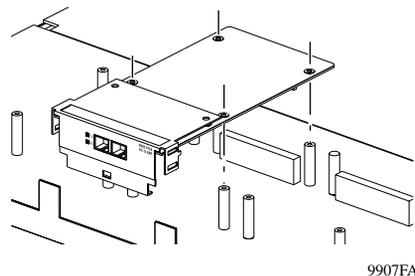

- 7 Press firmly on the MDA in the middle of the back to seat the MDA in the mounting posts on the module (Figure 112). Apply about 20 pounds of pressure.

Figure 112 Seating the MDA on the module

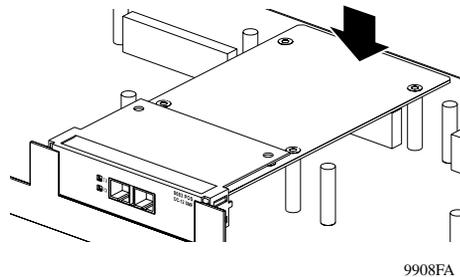


When the MDA is seated properly, the posts of the module are visible in the holes of the MDA.

- 8 Insert the Phillips screws through the holes. Use the Phillips screwdriver to tighten the screws (Figure 113).



Note: Tighten the rear screws before you tighten the front screws.

Figure 113 Tightening the screws on the MDA

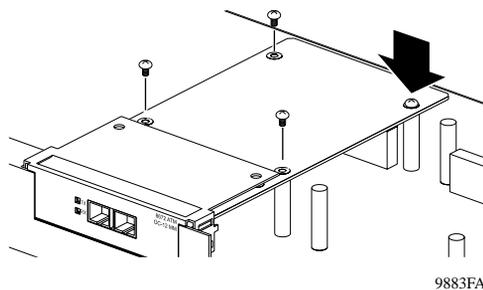

- 9 Attach the supplied laser product label to the front panel of the host module, directly below the MDA. Use the label that is printed in the appropriate language for the country where you are installing the equipment.
- 10 Reinstall the 8672ATME, 8672ATMM, or the 8683POSM Module in the chassis.

For instructions on installing a module, see [“Installing a module” on page 154](#).

Replacing an MDA on a 8600 module

To replace an MDA on a 8672ATME, 8672ATMM, or 8683POSM Module:

- 1 Remove the module from the chassis and place it on a flat, static-free surface.


For instructions on removing a module, see [“Removing a module” on page 150](#).



Warning: You cannot hot-swap an MDA. You must remove the 8672ATME, 8672ATMM, or 8683POSM Module, replace the MDA, and then reinstall the module.


- 2 Using a Phillips screwdriver, unscrew the 4 screws from the MDA that you want to replace ([Figure 114](#)).

Figure 114 Preparing an MDA for removal

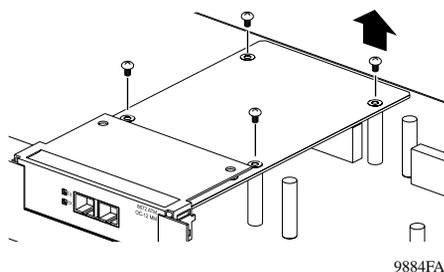


- 3 Place the palm of your hand on top of the MDA and cup your fingers around the back of the MDA. Lift the MDA enough to loosen it from the mounting posts ([Figure 115](#)).

Figure 115 Loosening the MDA from the mounting posts

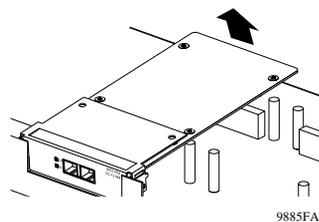

- 4 When the MDA is loosened from the mounting posts, hold the sheet metal by each side and lift the MDA straight up (Figure 116). Be careful not to catch the lip of the MDA on the module. Store the MDA in a static-free container.

Figure 116 Removing the MDA from the module

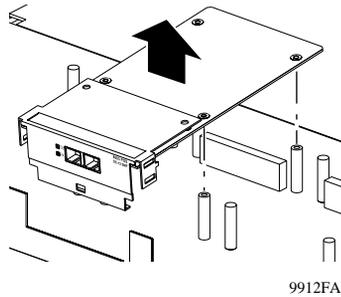


- 5 See “Installing an MDA on a 8600 module” on page 194 for instructions on installing the replacement MDA.

Connecting fiber cables to a 8600 module MDA


The OC-12c/STM-4 MDA uses duplex SC connectors (Figure 117).

Figure 117 OC-12c/STM-4 MDA duplex SC connector with dust cover

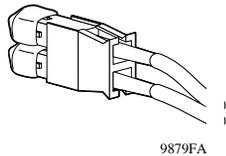

The OC-3c/STM-1 MDA uses MT-RJ connectors (Figure 118).

Figure 118 OC-3c/STM-1 MDA MT-RJ connector with dust cap

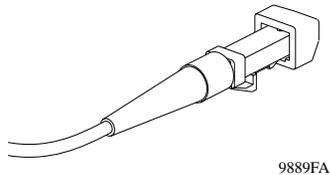

To connect a fiber cable to an MDA:

- 1 Remove the protective dust plug from the connector on the MDA (Figure 119 and Figure 120). Save the dust plug for future use.

Figure 119 Removing the dust plug from an OC-12c/STM-4 MDA (SC) connector


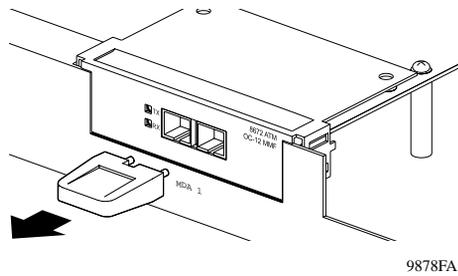


Figure 120 Removing the dust plug from an OC-3c/STM-1 MDA (MT-RJ) connector

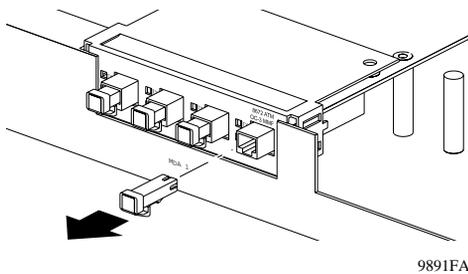

- 2 Remove the protective dust caps from the connector on the fiber cable. Save the dust caps for future use (Figure 121 and Figure 122).

Figure 121 Removing the dust cap from an SC fiber cable connector


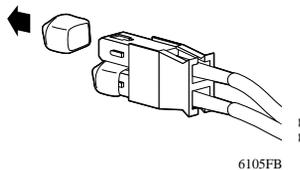


Figure 122 Removing the dust cap from an MT-RJ fiber cable connector

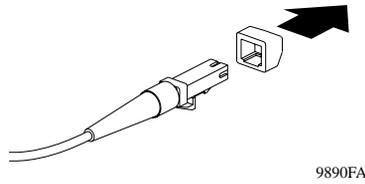

- 3 Hold the cable connector so that the keyed surface will insert easily into the MDA connector.
- 4 Carefully insert the cable connector into the MDA connector and push gently until you hear the cable connector snap into place ([Figure 123](#) and [Figure 124](#)).

Figure 123 Inserting the SC cable connector into an OC-12c/STM-4 MDA


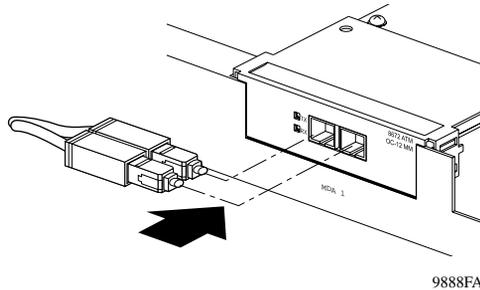


Figure 124 Inserting the MT-RJ cable connector into an OC-3c/STM-1 MDA

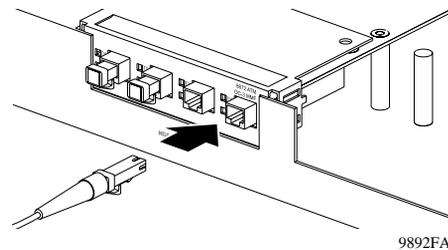


Connecting coaxial cables to a 8600 module MDA

The DS-3 MDA uses BNC connectors (Figure 125).

To connect a coaxial cable to an MDA:

- 1 Push the coaxial cable onto the DS-3 connector (Figure 125).

Figure 125 Pushing the coaxial cable BNC connector onto a DS-3 connector

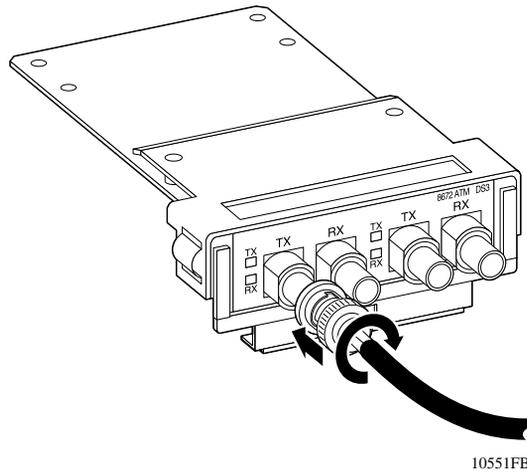

- 2 Turn the coaxial cable to the right until the key on the DS-3 connector clicks into the notch on the coaxial cable.


Chapter 10

Installing and removing the fan tray

This chapter describes how to replace a fan tray in the 8010co Chassis.

The 8010co Chassis has two fan trays that are installed at the top of the chassis. Each fan tray contains two high-capacity, multiple-speed fans and a control/monitor circuit board ([Figure 126](#)).

Figure 126 Fan tray

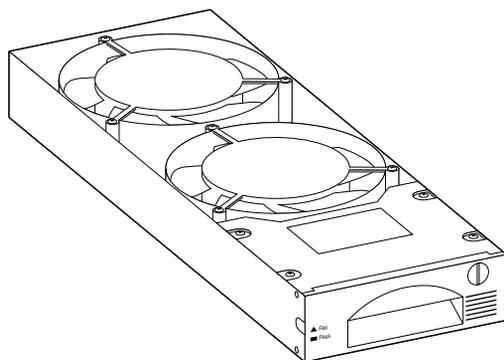

10278FA

If one of the fans in a tray fails, the Fail LED lights red and the remaining fan speeds up to maintain airflow. If a fan fails, replace the fan tray as quickly as possible to maintain high-availability operation. Failure to replace the fan tray could cause the 8010co Chassis to overheat.

[Table 51](#) describes the fan tray LEDs.

Table 51 Fan LEDs


Label	Color/State	Meaning
Fail	Red/Steady	One of the fans has failed.
	Red/Blinking	The fans are powering to operational speed.
	Off	The fan tray is functioning normally.
Pass	Green/Steady	The fan tray is functioning normally.
	Off	The fan tray is not receiving power.

Replacing the fan tray

You can replace a fan tray in the 8010co Chassis with the power on or off.

To replace a fan tray:


- 1 Attach the antistatic wrist strap.
For instructions, see [“Attaching the antistatic wrist strap”](#) on [page 147](#).
- 2 Turn the fan tray lock to the unlocked position ([Figure 127](#)).

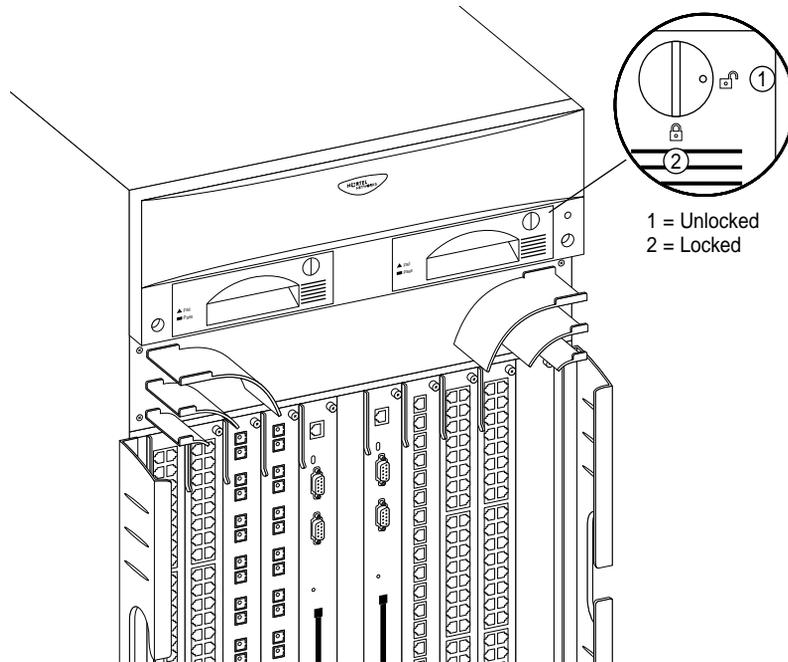Figure 127 Unlocking the fan tray

10362FA

- 3** Press up on the inside of the handle to disengage it from the chassis back panel, then pull the fan tray part way out of the chassis.
- 4** Wait 10 seconds for the fans to stop turning, and then pull the fan tray out of the chassis ([Figure 128](#)).

Figure 128 Removing the fan tray

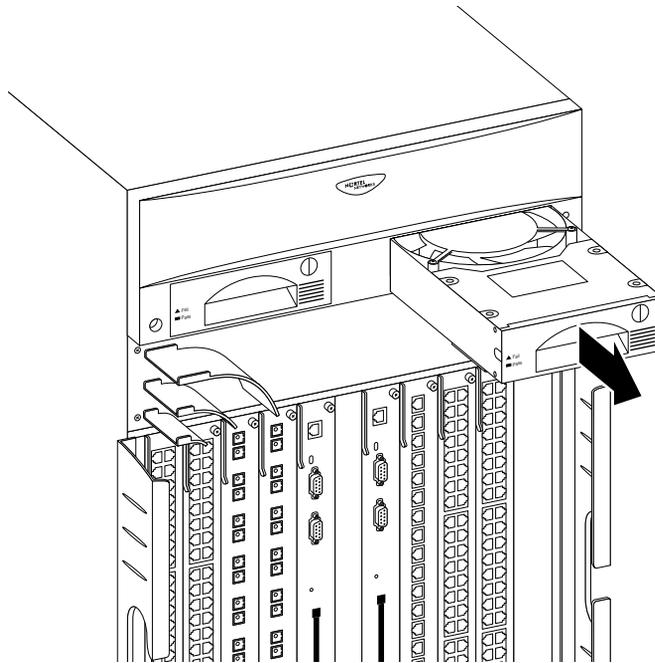

10279FA


- 5 Slide the new fan tray into the chassis until the latch in the handle engages (Figure 129).

If the chassis is on, the fans start turning when the fan tray connectors fully engage.



Note: The red fail LED may light briefly while the fans are powering to operational speed.

Figure 129 Installing the fan tray

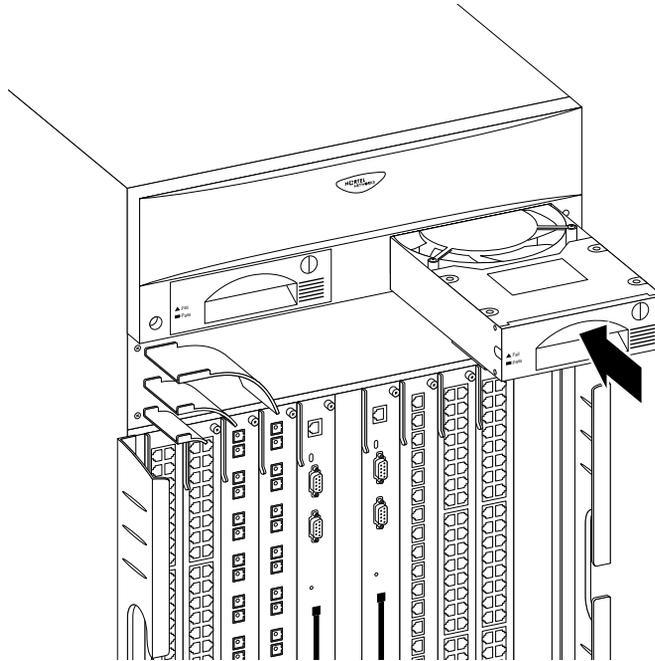

10280FA

- 6 Turn the fan tray lock to the locked position (see [Figure 127](#) on page 205).

Chapter 11

Operating the 8000 Series switch

This chapter describes some of the routine tasks of operating the 8000 Series switch and provides troubleshooting information. It includes the following topics:

Topic	Page
Turning the 8000 Series switch on and off	210
Verifying a successful installation	213
Initializing the 8672ATME, 8672ATMM, and 8683POSM Modules	214
Configuring the chassis to operate in 32K or 128K Mode	219
Resetting the 8000 Series switch	220
Removing flash memory cards	221
Installing flash memory cards	222
Protecting memory card files	223
Replacing an air filter	224
Troubleshooting	226

Turning the 8000 Series switch on and off

If the 8010co Chassis has one or more DC power supplies, go to the next section, [“Turning DC power supplies on and off.”](#) If the 8010co Chassis has one or more AC power supplies, go to [“Turning AC power supplies on and off” on page 212.](#)


Turning DC power supplies on and off

To turn on a 8000 Series switch with a DC power source:

- 1 If the 8010co Chassis is connected to the optional breaker interface panel, make sure that the circuit breakers on the BIP are in the on position.
- 2 Turn the power switch on each DC power supply to the on position ([Figure 130](#)). Do not remove the bezel to turn the switch on. You can access the switch with the bezel on. Do not operate the 8010co Chassis with only one power supply.



Note: When you first install a 8010co Chassis that contains two or three power supplies, you must turn on two of the power supply units simultaneously. If you wait longer to turn on the second power supply, one of the power supplies could shut down. To correct this condition, turn off both power supplies, wait at least 30 seconds, and then turn on both power supplies again simultaneously.

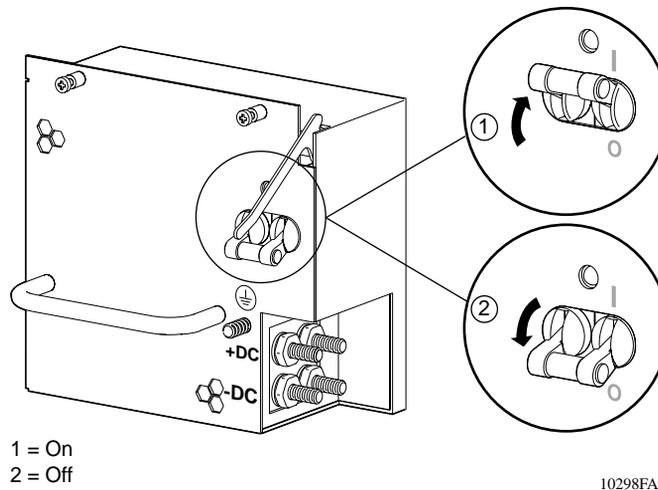Figure 130 DC power supply power switch

1 = On
2 = Off

10298FA

- 3 Verify that the power output LED for each power supply lights green.
- 4 Verify that air is flowing from the cooling fans out through the back of the 8010co Chassis.



Note: The fan tray red fail LED may light briefly while the fans are powering to operational speed.

After you turn on the 8000 Series switch, each module automatically initiates a diagnostic test to verify proper module function (see [“Verifying a successful installation”](#) on page 213).

If the power supply LED remains off, or if you cannot feel air flow from the 8010co Chassis vents, do the following:

- 1 Turn the power switch on each power supply to the off position.
- 2 If the 8010co Chassis is connected to the optional breaker interface panel, make sure that the circuit breakers on the BIP are in the off position.
- 3 Wait 1 minute.
- 4 If the 8010co Chassis is connected to the optional breaker interface panel, turn the circuit breakers on the BIP to the on position.
- 5 Turn the power switch on each power supply to the on position.

If the problem persists, contact the Nortel Networks Technical Solutions Center.

To turn off a 8000 Series switch with a DC power source:

- 1 Turn the power switch on each power supply to the off position (see [Figure 130 on page 211](#)).
- 2 If the 8010co Chassis is connected to the optional breaker interface panel, make sure that the circuit breakers on the BIP are in the off position.

Turning AC power supplies on and off

To turn on a 8000 Series switch with an AC power supply:

- 1 Verify that the AC power cords are connected to AC power outlets.
- 2 Turn the power switch on each AC power supply to the on position. Do not operate the 8010co Chassis with only one power supply.



Note: When you first install a 8010co Chassis that contains two or three power supplies, you must turn on two of the power supply units simultaneously. If you wait longer to turn on the second power supply, one of the power supplies could shut down. To correct this condition, turn off both power supplies, wait at least 30 seconds, and then turn on both power supplies again simultaneously.

- 3 Verify that the power LED on each power supply lights green.
- 4 Verify that air is flowing from the cooling fans out through the vents of the chassis.



Note: The fan tray red fail LED may light briefly while the fans are powering to operational speed.

After you turn on the 8000 Series switch, each module automatically initiates a diagnostic test to verify proper module function (see [“Verifying a successful installation” on page 213](#)).

If the power supply LED remains off, or if you cannot feel air flow from the 8010co Chassis vents, turn the AC power supplies off, wait 1 minute, and then turn them on again. If the problem persists, contact the Nortel Networks Technical Solutions Center.

Verifying a successful installation

In a normal power-up sequence, the LEDs light as follows:

- 1 When power is applied to the 8000 Series switch, the green LED on each power supply and fan tray turns on within 5 seconds.
- 2 Each module initiates a self-test, during which the port and module LEDs display various patterns to indicate the progress of the self-test.
- 3 Upon successful completion of the self-test (within 10 seconds after power is applied), the module Online LED lights.
- 4 After one minute of operation, the fan tray Pass LED lights steady green.

If the LEDs on the modules light in this sequence, your installation is successful. Contact your network administrator to verify that the 8000 Series switch is now connected to the network.

If the LEDs do not light in this sequence, contact your local Nortel Networks Technical Solutions Center.

Initializing the 8672ATME, 8672ATMM, and 8683POSM Modules

If you have installed a 8672ATME, 8672ATMM, or 8683POSM Module with at least one MDA into a 8010co chassis, the 8691SF Module retrieves the image file to download to these modules. Ensure that the installed 8691SF Module has a PCMCIA card inserted and that the PCMCIA card contains the correct image for the installed module. See [Table 52](#) for a list of image filenames.

Table 52 Image filenames for 8672ATME/8672ATMM/8683POSM

Module	Image filename
8672ATME	p80t3300.dld
8672ATMM	p80t3300.dld
8683POSM	p80p3300.dld

For more information about the PCMCIA slot and the 8691SF Module, refer to [“8691SF Module”](#) on [page 80](#).

The following sections describe the initialization process for the 8672ATME, 8672ATMM, and 8683POSM Modules.

Initializing the 8672ATME and 8672ATMM Modules

The 8691SF Module retrieves the image file to download to the 8672ATME or 8672ATMM Module. First, the 8691SF Module searches the host flash memory for the file, then the PCMCIA card. The 8691SF Module downloads the image file to the 8672ATME, or 8672ATMM and identifies which MDAs are installed. The screen displays a message similar to the following:

```
Using image = /slot/p80t3200.dld for ATM card download.
ATM card: Slot 4 MDA [OC-12c MM] [Quad OC-3c MM] Ver=2.2
```

If the image file is not found in either the flash memory or the PCMCIA, the system stops and the screen displays an error message such as:

```
ERROR Task=rcStart Couldn't find an ATM download image!
Aborting card initialization in Slot=4
```

or:

```
ERROR Task=rcStart portPresent:port=X/X, invalid port Type
```

The 8672ATME or 8672ATMM Module requests a redownload from the switch fabric module, and the screen displays the following message:

```
Redownload requested by ATM card in slot <number>.
```

If the image download is unsuccessful, the screen displays the following message:

```
ATM card in slot <number> not ready.
```

If there are three unsuccessful attempts to download, the screen displays the message shown in [Figure 131](#).

Figure 131 Unsuccessful download screen output

```
Copyright (c) 2002 Nortel Networks, Inc.
CPU Slot 5:   PPC 740 Map B
Version:     3.3.0.0/097
Creation Time: Aug 27 2002, 17:51:07
Hardware Time: SEP 05 2002, 13:58:01 UTC
Memory Size: 0x04000000
Start Type:  warm
CENTENNIAL  ATA
/flash/ - Volume is OK
Loaded boot configuration from file /flash/boot.cfg
Press <Return> to stop auto-boot...
/pcmcia/ - Volume is OK
4739529 to 15708054 (15708054)
Starting at 0x10000...
CENTENNIAL  ATA
/flash/ - Volume is OK
Passport 8600 System Software Release REL3.3.0.0_B097
Copyright (c) 1996-2002 Nortel Networks, Inc.
[09/05/02 14:58:20] System boot
/pcmcia/ - Volume is OK
[09/05/02 14:58:20] Passport System Software Release
REL3.3.0.0_B097
[09/05/02 14:58:21] Card inserted: Slot=1 Type=8672ATME
[09/05/02 14:58:21] Card inserted: Slot=2 Type=8683POS
[09/05/02 14:58:21] Card inserted: Slot=3 Type=8608SX
[09/05/02 14:58:21] Card inserted: Slot=4 Type=8608GT
[09/05/02 14:58:21] Card inserted: Slot=5 Type=8690SF
[09/05/02 14:58:21] Initializing 8690SF in slot #5 ...
[09/05/02 14:58:24] Initializing 8672ATME in slot #1 ...
[09/05/02 14:58:41] ERROR Task=rcStart Couldn't find an ATM download
image!
(File name: /flash/p80t3300.dld or /pcmcia/p80t3300.dld)
Slot 1 ATM card is put offline!
[09/05/02 14:58:41] Initialization of card failed for Slot 1 !
[09/05/02 14:58:41] Initializing 8683POS in slot #2 ...
[09/05/02 14:58:43] Initializing 8608SX in slot #3 ...
[09/05/02 14:58:46] Initializing 8608GT in slot #4 ...
[09/05/02 14:58:50] Loading configuration from /flash/config.cfg
[09/05/02 14:58:50] The system is ready
[09/05/02 14:58:50] Booted with PRIMARY boot image source - /pcmcia/
p80a3300b097
```

After the image loads onto the 8672ATME or 8672ATMM Module, it performs a series of self-diagnostic tests. If the module fails the diagnostics, the screen displays the following message:

```
Fatal bring up error on ATM card in slot <number>.
```

If you see this message, contact a service representative. For information on contacting service representatives, refer to [“How to get help” on page 27](#).

When the image successfully loads onto the 8672ATME or 8672ATMM Module, the screen displays the following message:

```
ATM card in slot <number> is online.
```



Note: If you accidentally delete the image file, reset the 8691SF Module and redownload the file. For information on how to reset the 8691SF Module, see [“Resetting the 8000 Series switch” on page 220](#).

If you have one MDA installed, you can proceed to configure the 8672ATME or 8672ATMM Module as described in *Using the 8672ATME and 8672ATMM Modules*.



Note: You must save your configuration (using either the CLI or Device Manager) to preserve the configuration changes you made to the 8672ATME or 8672ATMM Module across reboots.

Initializing the 8683POSM Module

The 8691SF Module retrieves the image file to download to the 8683POSM Module. First, the 8691SF Module searches the host flash memory for the file, then the PCMCIA card. The 8691SF Module downloads the image file to the 8683POSM Module and identifies which MDAs are installed. The screen displays a message similar to the following:

```
Downloading POS image to slot <number> .....Done (file  
name and image size.)
```

If the image file is not found in either the flash memory or the PCMCIA, the screen displays this message:

POS image file name not found either in FLASH or PCMCIA.

If the image download is unsuccessful, the screen displays the following message:

```
Card is off line.
```

The 8683POSM Module requests a redownload from the 8691SF module, and the screen displays this message:

```
Redownload requested by POS card in slot <number>.
```

The 8683POSM Module attempts a redownload three times. If the download is still unsuccessful, the 8683POSM Module goes offline and the screen displays this message:

```
Redownload of POS card in slot <number> failed maximum 3  
times; POS card is offline.
```

When the 8683POSM Module boots, the redownload count is reset to 0. After the image loads onto the 8683POSM Module, it performs a series of self-diagnostic tests. If the module fails the diagnostics, the screen displays the following message:

```
Port <number> for POS card in slot <number> failed  
diagnostics.
```

If you see this message, contact a service representative. For information on contacting service representatives, refer to [“How to get help”](#) on [page 27](#).

When the image successfully loads onto the 8683POSM Module, the screen displays the following message:

```
POS card in slot <number> is online.
```



Note: If you accidentally delete the image file, reset the 8691SF Module and redownload the file. For information on how to reset the 8691SF Module, see [“Resetting the 8000 Series switch”](#) on [page 220](#).

If you have one MDA installed, you can proceed to configure the 8683POSM Module as described in *Using the 8683POSM Module*.



Note: You must save your configuration (using either the CLI or Device Manager) to preserve the configuration changes you made to the 8683POSM Module across reboots.

Configuring the chassis to operate in 32K or 128K Mode

You can configure the chassis to operate either in 32K or 128K extended memory mode (MMode) if you installed a 8691SF CPU Module.

When you configure a chassis you need to ensure that a system having both 128K and 32K modules will reboot in the desired mode. The boot mode is determined by the type of modules installed in the chassis and whether 128K mode is enabled ([Table 53](#)).

Table 53 Boot mode at startup

if configuration is:	And 128K mode status at startup is:	Then:
All 128K modules	Enabled	System starts in 128K mode
Mixed modules	Enabled	System starts in 128K mode. Non-128K modules are disabled.
All non-128K modules	Enabled	Non-128K modules are disabled.
All 128K modules	Disabled	System starts in 32K mode
Mixed modules	Disabled	System starts in 32K mode
All non-128K modules	Disabled	System starts in 32K mode

For information on using Device Manager or the CLI to configure 128K records, see *Platform and System Management*.

Resetting the 8000 Series switch

You can use the Reset button to reboot the 8000 Series switch hardware without cycling power. To *warm-start* the 8000 Series switch (no diagnostic tests are run), press the Reset button for less than 5 seconds.

Figure 132 shows the location of the Reset button on the 8190SM Module.

Figure 132 Reset button on the 8190SM Module


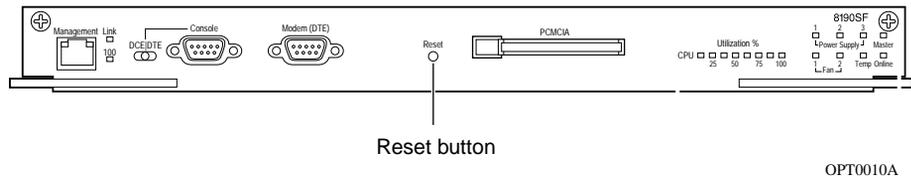


Figure 133 shows the location of the Reset button on the 8691SF Module.

Figure 133 Reset button on the 8691SF Module

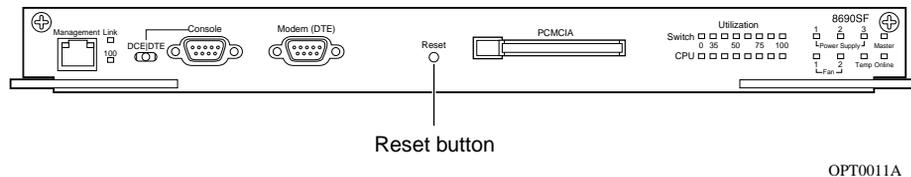


Removing flash memory cards

To remove flash memory cards from the 8190SM Module or the 8691SF Module:

- 1 Press the eject button above the memory card receptacle on the 8190SM Module or the 8691SF Module (Figure 134).

The card pops out slightly.

Figure 134 Removing a flash memory card

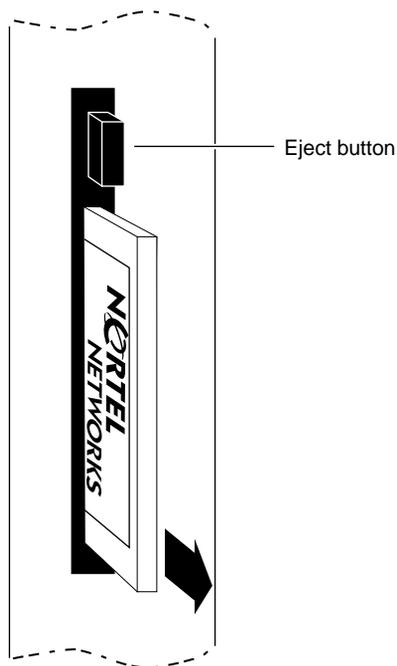

BAC0031A

- 2 Pull the flash memory card out of the card receptacle.

Installing flash memory cards




Caution: You cannot use the Accelar 1200 PCMCIA card in the 8010co Chassis.

To install a flash memory card in a 8190SM Module or a 8691SF Module:

- 1 Position the card with the label facing to the left and the insert arrow pointing toward the card receptacle ([Figure 135](#)).

Figure 135 Inserting a flash memory card

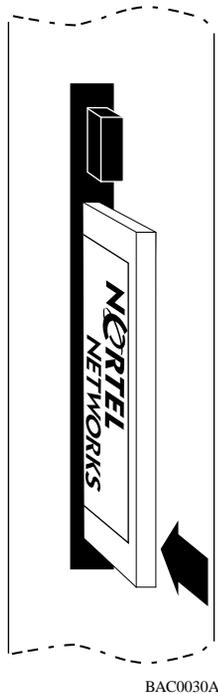

- 2 Insert the card into the card receptacle.
- 3 Gently push the card in until it fits snugly in place.

Protecting memory card files

Nortel Networks ships each memory card with its read-write protect switch in the unprotected position. After you successfully load the configuration file and save your configuration, you may want to write-protect the memory card for backup purposes.



Note: You typically do not operate a 8000 Series switch with a write-protected memory card. You should make a copy of your configuration on another memory card, write-protect that card, and store it in a safe place.


To change memory card protection:

- 1 Remove the memory card from the 8010co Chassis.
 - a Press the eject button above the memory card receptacle (see [Figure 134 on page 221](#)).
 - b Pull the card out of the card receptacle.



Caution: You must remove the card from the 8010co Chassis before changing the read-write protection. Failure to remove the card may result in improper write protection.

- 2 Locate the read-write protect switch on the edge opposite the arrow on the memory card ([Figure 136](#)).

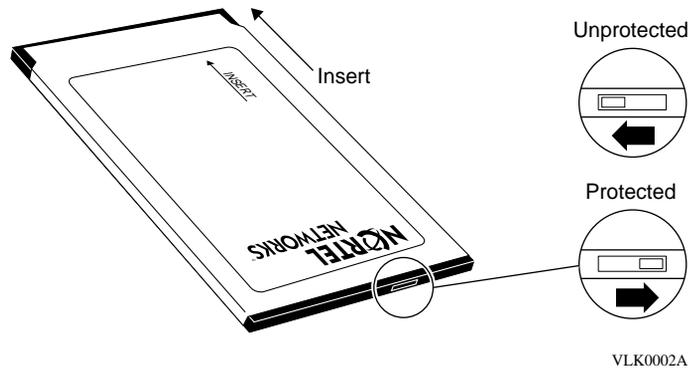Figure 136 Memory card read-write protect switch

- 3 Adjust the read-write protect switch.
- 4 Reinsert the memory card into the card receptacle (see [Figure 135 on page 222](#)).
 - a Position the card with the label facing to the left and the insert arrow pointing toward the card receptacle.
 - b Insert the card into the card receptacle.
 - c Gently push the card in until it fits snugly in place.

Replacing an air filter

To maintain proper operation of the 8010co Chassis, you must periodically replace the air filter in the chassis. How often you need to replace the air filter depends on the conditions of cleanliness at the installation site. Replacement air filters (part number 312194-A) are available from Nortel Networks. To order, contact the Nortel Networks Technical Solutions Center.

The air filter complies with the following standards:

- Telcordia (formerly Bellcore)
- GR-63-CORE
- GR-78-CORE
- UL 94 HF-1 flame safety

[Table 54](#) lists the air filter physical specifications.

Table 54 8010co air filter physical specifications

Parameter	Specifications
Part number	312194-A
Height	1.09 cm (0.43 in.)
Width	43.68 cm (17.20 in.)
Depth	46.27 cm (18.22 in.)


Nortel Networks recommends that you replace the air filter every three months. After you install the first 8010co Chassis at your site, inspect the air filter monthly until you can establish an average period of replacement.

If you install a second 8010co Chassis in the same equipment rack, the effect of the total airflow on the filters changes. Inspect the air filters frequently: the average period of replacement for the lower air filter can differ from that of the upper air filter because of its proximity to the floor. You may want to replace both filters according to the shortest average.

Removing and inserting an air filter

Replace an air filter in the 8010co Chassis while the switch continues to operate. To minimize the amount of time that the switch operates without an air filter, have the replacement filter ready to install before you remove the old one.

- 1 Open the container of the new air filter.
- 2 Remove the bottom front bezel of the 8010co Chassis. For instructions, see [“Removing and replacing the bottom bezel”](#) on page 118.
- 3 Remove the installed air filter from its housing and set it aside.
If dust is visible on it, move it to another area to prevent dust re-contamination.
- 4 Hold the new filter by its short sides with the airflow indicator pointing up and align it with the filter housing ([Figure 137](#)).
- 5 Slide the new filter gently into the housing.
- 6 Reinstall the bottom front bezel.

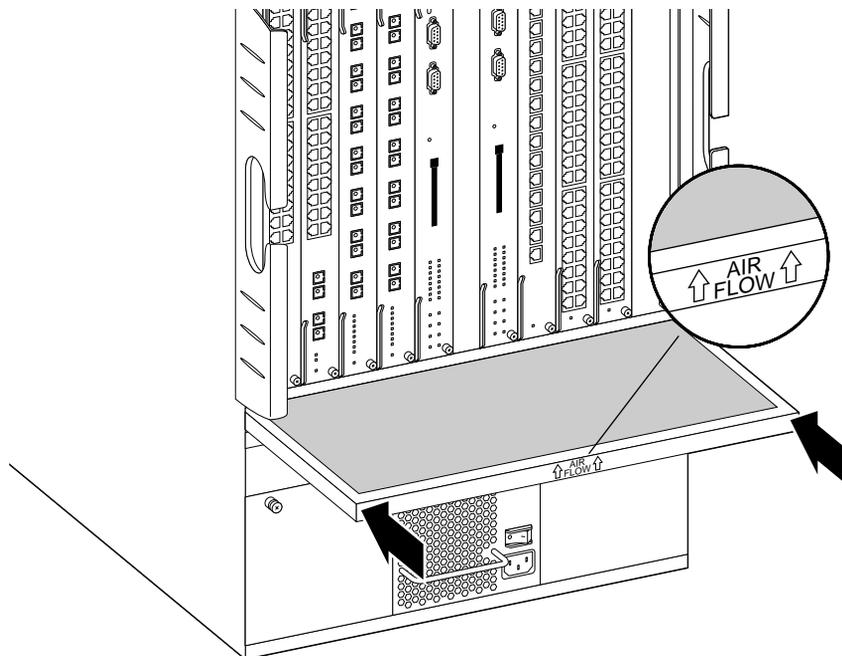Figure 137 Inserting an air filter

10282FB

Troubleshooting

The following sections provide troubleshooting information for some of the more common problems that you may encounter with the 8000 Series switch.

Topic	Page
LED indications of problems	227
Apparent module failure	228
Failure to get a login prompt from the Console port	228
Cable connection problems	229
Autonegotiation mode problems for 8100 modules	230

LED indications of problems

Table 55 lists possible problems indicated by the LEDs on the switch modules and suggests corrective action.

Table 55 LED problem indicators

Symptom	Probable cause	Corrective action
Green AC power supply LEDs are off.	The switch is not receiving AC power.	Verify that each AC power cord is fastened securely at both ends and that power is available at each AC power outlet. Verify that each power supply is turned on.
The Link/Activity LED for a connected port is off or does not blink (and you believe that traffic is present).	The switch is experiencing a port connection problem, or the switch's link partner is not autonegotiating properly.	Verify that the cable connections to the link partner are correct. Verify port configuration parameters for both ends of the connection. Move the cable to another port to see whether the problem occurs on the new port.
The Link/Activity LED blinks continuously.	There may be a port configuration error.	Verify port configuration parameters for both ends of the connection.
The Online LED on an I/O module is amber.	Software incompatibility exists, or the module cannot communicate with the master module over the backplane.	Use the <code>show log</code> command to check the system log for indications of communication problems. Use the <code>boot</code> command to download a new software image.
The Master LED on a module in slot 1 or slot 2 is amber.	The module has detected a system clock generation failure on its own circuitry.	Replace the module; make sure that it is in the correct slot. Note: This LED has significance only for the module in slot 1 or slot 2 that provides the clock function for the switch.
The Fault LED is blinking amber.	A chassis failure has been detected.	From the console management station, use the <code>show log</code> command to check the system log for information about hardware failures. Check the fan tray in the 8010co Chassis to make sure both fans are running. Check the switch power supplies; one may have stopped functioning. The module may have failed to read the MAC address from the chassis backplane. If this is the case, arrange to replace the chassis.
The Fault LED is steady amber.	The module failed its power-on self-test. A diagnostic or hardware failure has been detected.	Replace the module.
No LEDs are lit.	A hardware failure has been detected.	Turn the switch power off and then turn it on again.

Apparent module failure

If a module failure occurs, check for possible backplane connection problems. Make sure that the module is correctly seated in the backplane connector and that the retaining screws are securely tightened.

If a module fails during module initialization and the replacement module is the same module type, in rare cases the new module may not initialize.

To workaroud this issue, follow the steps in either workaroud 1 or 2.

Module failure workaroud 1

- 1 Remove the faulty module.
- 2 Insert a module type that is different from the module type removed in Step 1 and wait for this replacement module to initialize.
- 3 Remove the module inserted in Step 2.
- 4 Insert a new module model in the same slot as the faulty module resided. This new module model must be identical to the module model removed in Step 1.


Module failure workaroud 2

- 1 Remove the faulty module.
- 2 Insert a new module.
- 3 Reboot the chassis.

If the module still fails to operate, contact the Nortel Networks Technical Solutions Center for assistance.

Failure to get a login prompt from the Console port

If you connect a terminal to the Console port of the 8190SM Module or the 8691SF Module and you fail to get a login prompt, the port may have an incorrect DCE/DTE setting. Try moving the DCE/DTE switch from its current setting to the other position ([Figure 138](#)).

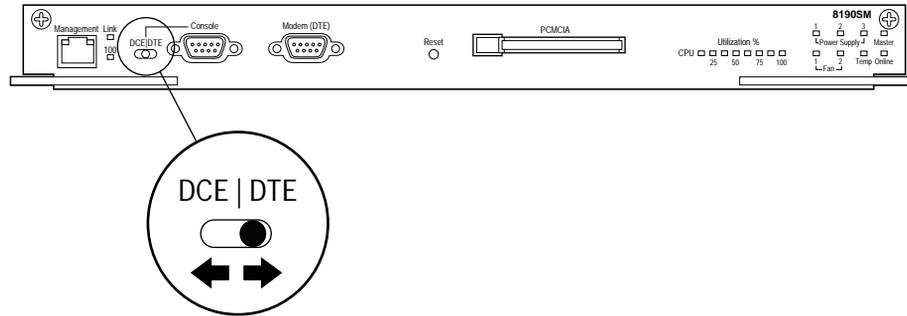Figure 138 DCE/DTE switch

10456EA

Cable connection problems

Port connection problems can usually be traced to a poor cable connection or to an improper connection of the port cables at either end of the link. To remedy such problems, make sure that the cable connections are secure and that the cables are connected to the correct ports at both ends of the link.



Note: Port connection problems can also be traced to the autonegotiation mode (see [“Autonegotiation mode problems for 8100 modules”](#) on page 230).

10BASE-T cables

Cabling for 10BASE-T networks can consist of two-pair Category 3, 4, or 5 unshielded twisted pair (UTP) wiring. However, to prepare for future upgrades to Fast Ethernet, Nortel Networks strongly recommends that you use all Category 5 cable in your network.

Ethernet 10BASE-T network installations use cables consisting of two pairs of twisted pair wires—one pair to send data and one to receive data. These wires must connect to another 10BASE-T station that has the sending pair attached to its receiving pair and vice versa. If the two nodes are wired alike, they both attempt to send data out on the same RJ-45 pins. In such a case, a straight-through cable would not work. However, a crossover cable would operate normally.

The 8100 modules are designed to have Ethernet network interface cards (NICs) connect directly to their RJ-45 ports using straight-through (MDI) cables. However, if a 8100 module must connect to a hub or another switch that follows usual conventions, a crossover cable (MDI-X) is required.

100BASE-T cables

The 100 Mb/s ports are designed to operate using Category 5 UTP cabling only. Category 5 UTP cable is a two-pair cable certified to handle up to 100 Mb/s bandwidth. To minimize crosstalk noise, maintain the twist ratio of the cable up to the point of termination; untwist at any termination should not exceed 0.5 in. (1.27 cm).

For best performance with respect to noise immunity and emissions, the unused pairs in the two-pair cable should be terminated at their characteristic impedance (that is, 100 ohms) in the equipment at each end of the cable. All Nortel Networks 100BASE-TX equipment includes such a Common Mode Termination (CMT).

8100 Series fiber MDA cables

The 8100 Series fiber MDAs use only multimode 62.5/125 μm fiber cable. The Nortel Networks 100BASE-FX MDA is not supported on single-mode fiber. SC connectors are used on 2-port 100BASE-FX MDAs, and MT-RJ connectors are used on 4-port 100BASE-FX MDAs.

GBIC cables

Cables for the GBICs vary depending on the specific GBIC type. For information about the cable requirements for GBICs, see [“GBICs” on page 240](#) (8100 modules) and [“GBICs” on page 257](#) (8600 modules).

Autonegotiation mode problems for 8100 modules

Port connection problems can occur when a port (or station) is connected to another port (or station) that is not operating in a compatible mode (for example, connecting a full-duplex port on one station to a half-duplex port on another station).

The 8100 modules negotiate port speeds according to the IEEE 802.3 Clause 1998 autonegotiating standard. The switch adjusts (autonegotiates) its port speed and duplex mode to match the best service provided by the connected station, up to 100 Mb/s in full-duplex mode.

The following autonegotiation problems can occur:

- If the connected station uses a form of autonegotiation that is not compatible with the IEEE 802.3 Clause 1998 autonegotiating standard, the 8100 module cannot negotiate a compatible mode for correct operation.
- If the autonegotiation feature is not present or is not enabled at the connected station, the 8100 module may not be able to determine the correct duplex mode.

In both situations, the 8100 module autosenses the speed of the connected station and, by default, reverts to half-duplex mode. If the connected station is operating in full-duplex mode, it cannot communicate with the switch.

To correct this mode mismatch problem:

- 1** Use the CLI to disable autonegotiation for the suspect port.

See *Configuring Network Management and Diagnostics* for the appropriate CLI commands.

- 2** Use the CLI to set the speed and duplex mode of the port to match the speed and duplex mode of the connected station.

You may need to try several settings before you find the correct speed/duplex mode for the connected station.

If the problem persists, follow these additional steps:

- 1** Using the CLI, disable the autonegotiation feature at the connected station.

- 2 Manually set the speed/duplex mode of the connected station to the same speed/duplex mode that you manually set for the 8100 module port.



Note: Nortel Networks recommends that you manually set the 8100 module port to the desired speed/duplex mode when connecting to any of the following Nortel Networks products:

- Nortel Networks 28000 product family
 - Nortel Networks 58000 product family
 - BayStack* 302T switch (100 Mb/s port)
-

Appendix A

Technical specifications for the 8010co Chassis

This appendix lists the specifications for the 8010co Chassis.

Physical specifications

Height:	35 in. (88.9 cm)
Rack units (RUs)	20
Width:	19 in (48.26 cm)
Depth:	23.7 in. (60.19 cm)
Weight:	
Empty:	127 lbs (57.6kg)
Including the following components: cable management brackets, power supply filler panels, power supply bezel, fan trays, module filler panels.	191 lbs (86.63kg)
Fully loaded:	315 lbs (142.88 kg)

Network Equipment Building Standard

Complies with Network Equipment Building Standard (NEBS) Level 3 as specified in SR3580

Environmental specifications

Operating temperature:	-5° to 55° C (23° to 131° F)
Storage temperature:	-40° to 70° C (-40° to 158° F)
Operating humidity:	90%

Environmental specifications

Storage humidity:	92.5%
Operating altitude:	13,123 ft. at 35°C and 45°C 6,000 ft.at 55°C -200 ft. at 55°C
Storage altitude:	40,000 ft

Maximum airflow

330 linear ft/min.

8004AC Power Supply specifications

Nominal input voltage:	100 - 240 VAC
Input frequency:	47 - 63 Hz
Input current:	12 - 6 A
Input power:	1308 W
Input volt amperes:	1.3 kilovolt amperes (kVA)
Output power:	850 W maximum (110 - 240 VAC) Derated 780 W maximum (100 - 109 VAC)
Thermal output	4464 Btu/hr maximum

8004DC Power Supply specifications

Nominal input voltage:	-48 / -60 VDC
Input current:	29 - 23 A
Input power:	1308 W
Input volt amperes:	1.3 kVA
Output power:	850 W
Thermal output:	4464 Btu/hr maximum
Crimp lugs:	
Two-hole lug terminal:	Panduit LCD6-14A-L or equivalent
One-hole terminal:	Panduit LCA6-14H-L or equivalent

System power specifications

	8004AC-DC	8004DC-DC
Input voltage:	100-240 VAC	-48/-60 VDC
Input current:	3 x 12 - 6 A	3 x 29 -23 A
Output power	1700 W maximum	1700 W maximum
	Derated 1560 W maximum @ < 110 VAC	
Thermal output	8928 Btu/hr maximum	8928 Btu/hr maximum

International regulatory requirements

Electromagnetic emissions
regulatory requirements:

Global basis for certification:	CISPR 22-1997 Class A
US:	FCC CFR47 Part 15, Subpart B, Class A
Canada:	ICES-003, Issue-2, Class A
Europe:	EN 55022-1998 Class A; EN 61000-3-2/A14, EN 61000-3-3 (CE Marking)
Australia/New Zealand:	AS/NZS 3548:1995, Class A
Japan:	VCCI-V3/97.04, Class A

Electromagnetic immunity regulatory requirements:

Global basis for certification:	CISPR 24:1997
Europe:	EN 55024:1998

Safety regulatory requirements:

Global basis for certification:	IEC 60950 current edition with all CB member deviations
US:	UL60950
Canada:	CSA 22.2 No. 60950
Europe:	EN60950 (CE Marking)
Australia/New Zealand:	AS/NZS 3260

Appendix B

Technical specifications for 8100 modules

This appendix provides technical specifications for the 8100 modules. The appendix includes the following information:

Topic	Page
General specifications	238
8108GBIC Module	240
8116FX Module	243
8132TX Module	244
8148TX Module	247
8190SM Module	248
MDI and MDI-X connections	251

General specifications

Standards supported

IEEE Std 802.3, 1998 Clause 4 Media Access Control CSMA/CD
IEEE Std 802.3, 1998 Clause 14 10Base T New
IEEE Std 802.3, 1998 Clause 21 100Base T
ANSI/IEEE Std 802.1D, 1998 Media Access Control (MAC) Bridges
IEEE 802.1Q Virtual Bridged Local Area Networks
IEEE Std 802.3, 1998 Clause 34-42
IEEE Std 802.3, 1998 Clause 31 (MAC Control)

Data rate and encoding

10 Mb/s Manchester encoding
100 Mb/s 4B/5B encoding
1000 Mb/s 8B/10B encoding

Environmental specifications

Operating temperature:	5° to 40° C (41° to 104° F)
Storage temperature:	-25° to 70° C (-13° to 158° F)
Operating humidity:	85% maximum relative humidity, noncondensing
Storage humidity:	95% maximum relative humidity, noncondensing
Operating altitude:	3000 m (10,000 ft) maximum
Free fall/drop:	ISO 4180-s, NISTA 1A
Vibration:	IEC 68-2-6/34
Shock/bump:	IEC 68-2-27/29

Performance specifications (64-byte packets)

Aggregate throughput:	3,000,000 pps maximum
Switched forwarding rates:	For 10 Mb/s: 14,880 pps maximum For 100 Mb/s: 148,810 pps maximum For 1000 Mb/s: 1,488,100 pps maximum
Latency:	9 ms

Address database size

Addressing:	48-bit MAC address
Frame Length:	64 to 1518 bytes (IEEE 802.1Q Untagged) 64 to 1522 bytes (IEEE 802.1Q Tagged)

International regulatory requirements

Electromagnetic emissions regulatory requirements:

Global basis for certification:	CISPR 22-1997 Class A
US:	FCC CFR47 Part 15, Subpart B, Class A
Canada:	ICES-003, Issue-2, Class A
Europe:	EN 55022-1998 Class A; EN 61000-3-2/A14, EN 61000-3-3 (CE Marking)
Australia/New Zealand:	AS/NZS 3548:1995, Class A
Japan:	VCCI-V3/97.04, Class A

Electromagnetic immunity regulatory requirements:

Global basis for certification:	CISPR 24:1997
Europe:	EN 55024:1998

Safety regulatory requirements:

Global basis for certification:	IEC 60950 current edition with all CB member deviations
US:	UL60950
Canada:	CSA 22.2 No. 60950
Europe:	EN60950 (CE Marking)
Australia/New Zealand:	AS/NZS 3260



Note: The GBICs installed in the 8108GBIC Module must also meet these standards. In addition, the GBICs are certified to FDA requirement 21 CFR, Chapter 1, Subchapter J and the international requirements of IEC 60825 for Class 1 Laser

8108GBIC Module

Physical specifications

Height:	1.5 in. (3.8 cm)
Width:	15.4 in. (39.1 cm)
Depth:	18.5 in. (47.0 cm)
Weight:	8 lb (4 kg)

Electrical specifications

Input power:	65 W maximum
Thermal rating:	224 Btu/hr maximum

MTBF rating

93,284 hr

Connector type

Duplex SC

GBICs

Physical specifications

Height:	12 mm
Width:	30 mm
Depth:	65 mm
Weight:	Varies with GBIC type

Connector type

Duplex SC

1000BASE-SX GBIC

Cable specifications

Type:	62.5 μm or 50 μm multimode fiber
Maximum distance:	1804 ft (550 m)

Optical Specifications

Wavelength:	850 nm (VCSEL)
Average transmit output power:	-9.5 to -4 dBm
Average receiver sensitivity:	-17 dBm (minimum)

1000BASE-LX GBIC

Cable specifications

Type	62.5 μm multimode fiber or 10 μm single-mode fiber Note: Multimode fiber may require a DMD patch cord.
Maximum distance:	Multimode fiber: 1804 ft (550 m) Single-mode fiber: 16,405 ft (5 km)

Optical specifications

Wavelength:	1300 nm (FP laser diode)
Average transmit output power:	-5.2 to 0 dBm
Average receiver sensitivity:	-22 dBm (minimum)

1000BASE-XD GBIC

Cable specifications

Type:	9 μm single-mode fiber
Maximum distance:	31 mi (50 km)

Note: For a shorter link distance, you may need an in-line attenuator to prevent overloading the receiver.

Optical specifications

Wavelength:	1550 nm (DFB laser diode)
Average transmit output power:	-5.2 to 0 dBm
Average receiver sensitivity:	-24 dBm

1000BASE-ZX GBIC

Cable specifications

Type: 9 μ m single-mode fiber

Maximum distance: 43 mi (70 km)

Note: For a shorter link distance, you may need an in-line attenuator to prevent overloading the receiver.

Optical specifications

Wavelength: 1550 nm (DFB laser diode)

Average transmit output power: 0 to 5.2 dBm

Average receiver sensitivity: -22 dBm (minimum)

8116FX Module

Physical specifications

Height:	1.5 in. (3.8 cm)
Width:	15.4 in. (39.1 cm)
Depth:	18.5 in. (47.0 cm)
Weight:	8 lb (3.6 kg)

Electrical specifications

Input power:	76 W maximum
Thermal rating:	261 Btu/hr maximum

MTBF rating	102,814 hr
--------------------	------------

Connector type	MT-RJ
-----------------------	-------

Cable specifications

Type:	62.5 μm or 50 μm multimode fiber optic cable
Maximum distance:	1352 ft (412 m) for half-duplex links 6562 ft (2 km) for full-duplex links

Optical specifications

Wavelength:	1300 nm
Optical budget:	4 dB to 11 dB
Transmitter characteristics:	Minimum optical power: -20 dBm Maximum optical power: -14 dBm

8132TX Module

Physical specifications

Height:	1.5 in. (3.8 cm)
Width:	15.4 in. (39.1 cm)
Depth:	18.5 in. (47.0 cm)
Weight:	8.06 lb (4 kg approximate)

Electrical specifications

Input power:	75 W maximum
Thermal rating:	250 Btu/hr maximum

MTBF rating

244,700 hr

Connector types

10/100 Ethernet ports: RJ-45 connector wired as MDI-X ([Table 56](#))


Cable specifications

Type:	Category 3, 4, or 5 UTP cable (10 Mb/s operation) Category 5 UTP cable (100 Mb/s operation)
Maximum distance:	328 ft (100 m)

Data port connectors

The data ports on the 8132TX Module are RJ-45 ports wired as MDI-X connectors ([Table 56](#)).

Table 56 8132TX Module port pin assignments

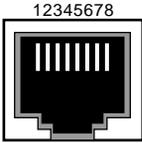Connector	Pin number	Signal
 <p>12345678</p> <p>8020EA</p>	1	Input receive data + (RX+)
	2	Input receive data - (RX-)
	3	Output transmit data + (TX+)
	6	Output transmit data - (TX-)
	4, 5, 7, 8	Not used

MDAs

450-1SR MDA, 450-1SX MDA

Required cable:	Multimode fiber optic
Maximum distance:	1804 ft (550 m)
Wavelength:	850 nm
Average transmit output power:	-9.5 to -4 dBm
Average receiver sensitivity:	-17 dBm (minimum)
Connector type:	SC

450-1LR MDA, 450-1LX MDA

Required cable:	Multimode or single-mode fiber optic
Maximum distance:	Multimode: 1804 ft (550 m) Single-mode: 9843 ft (3 km)
Wavelength:	1300 nm
Average transmit output power:	-5.2 to 0 dBm
Average receiver sensitivity:	-22 dBm (minimum)
Connector type:	SC

s

8100-4TX MDA

Required cable:	Category 3, 4, or 5 UTP cable (10 Mb/s operation) Category 5 UTP cable (100 Mb/s operation)
Connector type:	RJ-45

8100-2FX MDA

Required cable:	62.5/125 μ m multimode fiber optic
Maximum distance:	1804 ft (550 m)
Wavelength:	1300 nm
Average transmit output power:	-5.2 to 0 dBm
Average receiver sensitivity:	-22 dBm (minimum)
Connector type:	SC

8100-4FX MDA

Required cable:	62.5/125 μ m multimode fiber optic
Maximum distance:	1804 ft (550 m)
Wavelength:	1300 nm
Average transmit output power:	-5.2 to 0 dBm
Average receiver sensitivity:	-22 dBm (minimum)
Connector type:	MT-RJ

8148TX Module

Physical specifications

Height:	1.5 in. (3.8 cm)
Width:	15.4 in. (39.1 cm)
Depth:	18.5 in. (47.0 cm)
Weight:	9 lb (4 kg)

Electrical specifications

Input power:	75 W maximum
Thermal rating:	250 Btu/hr maximum

MTBF rating	72,213 hr
--------------------	-----------

Connector type	RJ-45 connector wired as MDI-X (Table 57)
-----------------------	---


Cable specifications

Type:	Category 3, 4, or 5 UTP cable (10 Mb/s operation) Category 5 UTP cable (100 Mb/s operation)
Maximum distance:	328 ft (100 m)

Port connectors

The ports on the Passport 8148TX Module are RJ-45 ports wired as MDI-X connectors ([Table 57](#)).

Table 57 Passport 8148TX Module port pin assignments

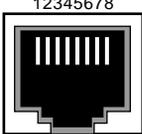Connector	Pin number	Signal
	1	Input receive data + (RX+)
	2	Input receive data - (RX-)
	3	Output transmit data + (TX+)
	6	Output transmit data - (TX-)
	4, 5, 7, 8	Not used

8190SM Module

Physical specifications

Height:	1.5 in. (3.8 cm)
Width:	15.4 in. (39.1 cm)
Depth:	18.5 in. (47.0 cm)
Weight:	7 lb (3.15 kg)

Electrical specifications

Input power:	75 W
Thermal rating:	250 Btu/hr maximum

MTBF rating

229,623 hr

Connector types

Ethernet Management port:	RJ-45 connector wired as MDI (Table 58)
Console port:	DB-9 connector (Table 59)
Modem port:	DB-9 connector (Table 60)


Required cables

Ethernet Management port:	Category 3, 4, or 5 UTP cable (10 Mb/s operation) Category 5 UTP cable (100 Mb/s operation)
Console port:	RS-232 cable
Modem port:	DTE-to-DCE cable (straight or transmit cable)

Management port

The Management port is a 10/100 Mb/s Ethernet port implemented on an RJ-45 connector wired as an MDI connection. [Table 58](#) shows the pin assignments for this connector.

Table 58 Pin assignments in the 8190SM Module Management port

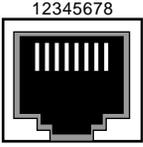Connector	Pin number	Signal
	1	Output transmit data + (TX+)
	2	Output transmit data - (TX-)
	3	Input receive data + (RX+)
	6	Input receive data - (RX-)
	4, 5, 7, 8	Not used


Console serial port

The Console serial port is implemented as a DB-9 connector. This port can operate as a data terminal equipment (DTE) or data communication equipment (DCE) device. Use the switch to the left of the port to set the port to DTE (left) or DCE (right). Default settings for this port are 9600 bits/s, 8 data bits, no parity, and one stop bit.

Because the Console port expects to receive data set ready (DSR) and clear to send (CTS) signals before transmitting, these control lines are required in the cabling. The Console port does not support any inbound flow control; that is, the port does not toggle control lines to indicate an input buffer full condition.

Table 59 lists the pin assignments for the Console port for both the DTE and DCE settings.

Table 59 Pin assignments in the 8190SM Module console port

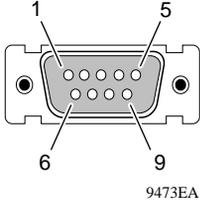Connector	Pin number	DCE signal	DTE signal
	2	RXD	TXD
	3	TXD	RXD
	4	DTR	DSR
	5	GND	GND
	6	DSR	DTR
	7	RTS	CTS
	9	CTS	RTS

Modem serial port

The Modem serial port is implemented on a DB-9 connector wired as a DTE connection.

To set up modem access, you need a DTE-to-DCE cable (straight or transmit cable) between the Modem port and a modem or terminal server. The cable should have the pin assignments listed in Table 60.

Table 60 DTE-to-DCE pin assignments


Signal	Switch	Modem	
	Pin number	DCE DB-9 pin number	DCE DB-25 pin number
RXD	2	2	3
TXD	3	3	2
DTR	4	4	20
GND	5	5	7
DSR	6	6	6
RTS	7	7	4
CTS	8	8	5

MDI and MDI-X connections

For communication to take place between two devices, the transmitter of one device must connect to the receiver of the other device. The connection must be achieved through a crossover function, which could be a crossover cable or a port that implements the crossover function internally.

Ports that implement the crossover function internally are known as MDI-X ports (where “X” refers to the crossover function). The 8100 modules use MDI-X ports that allow you to connect directly to end stations without using crossover cables (Figure 139).


Figure 139 MDI-X to MDI cable connections

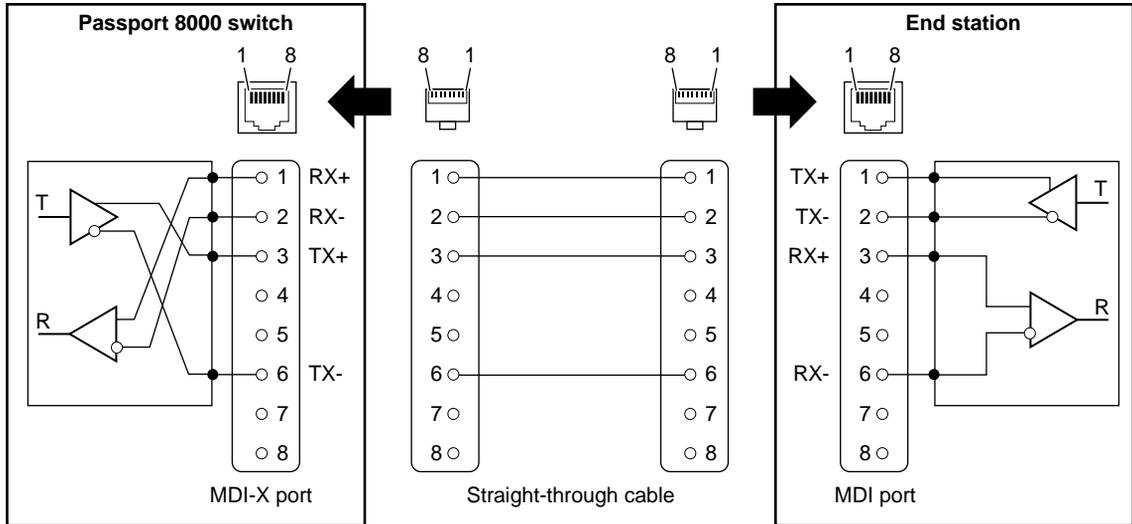

617EF

If you are connecting a device to the 8100 module that also implements MDI-X ports, use a crossover cable (Figure 140).

Figure 140 MDI-X to MDI-X cable connections

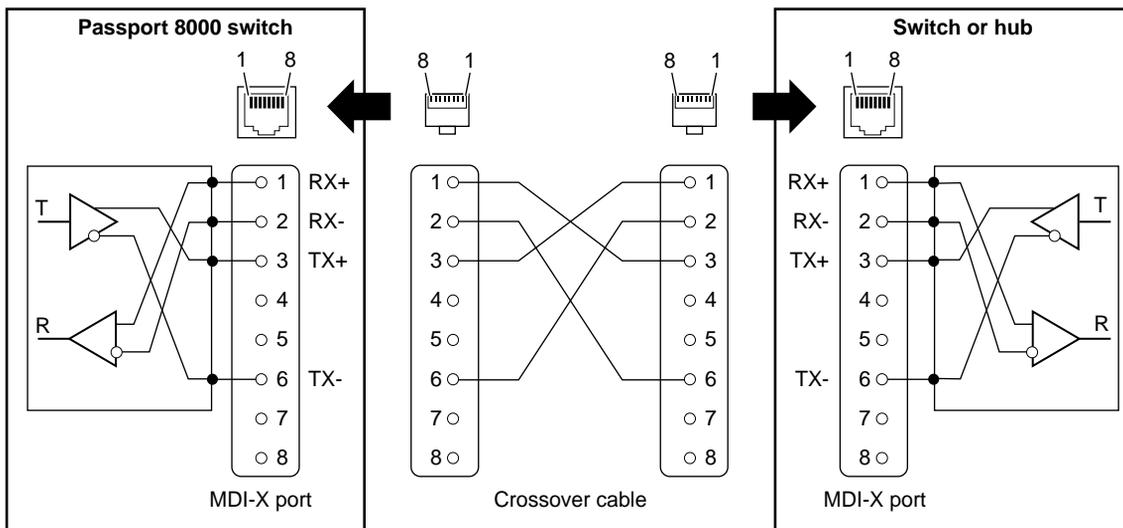

618EF

Appendix C

Technical specifications for 8600 modules

This appendix lists technical specifications for the 8600 modules. The appendix includes the following information:

Topic	Page
General specifications	254
8608GBE and 8608GBM Modules	256
8608GTE and 8608GTM Modules	260
8608SXE Module	261
8616GTE Module	262
8616SXE Module	263
8624FXE Module	264
8632TXE and 8632TXM Modules	265
8648TXE and 8648TXM Modules	266
8672ATME and 8672ATMM Modules	267
8681XLR Module	269
8681XLW Module	270
8683POSM Module	271
8691SF Module	272

General specifications

Standards supported

IEEE Std 802.3, 1998 Clause 4 Media Access Control CSMA/CD
IEEE Std 802.3, 1998 Clause 14 10Base T New
IEEE Std 802.3, 1998 Clause 21 100Base T
ANSI/IEEE Std 802.1D, 1998 Media Access Control (MAC)
IEEE 802.1Q Virtual Bridged Local Area Networks
IEEE Std 802.3, 1998 Clause 34-42
IEEE Std 802.3, 1998 Clause 31 (MAC Control)
IEEE Std 802.3ab
IEEE Std 802.3ae

Data rate and encoding

10 Mb/s Manchester encoding
100 Mb/s 4B/5B encoding
1000 Mb/s 8B/10B encoding
10 Gb/s 64/66B encoding

Environmental specifications

Operating temperature:	0°C to 40°C (32°F to 104°F)
Storage temperature:	-25°C to 70°C (-13°F to 158°F)
Operating humidity:	85% maximum relative humidity, noncondensing
Storage humidity:	95% maximum relative humidity, noncondensing
Operating altitude:	3000 m (10,000 ft) maximum
Free fall/drop:	ISO 4180-s, NATA 1A
Vibration:	IEC 68-2-6/34
Shock/bump:	IEC 68-2-27/29

Performance specifications (64-byte packets)

Aggregate throughput:	10 Mb/s; 100 Mb/s; 1000 Mb/s: 100 million pps 10Gb/s: 8x488,100 pps
Routing and switching forwarding rates:	10 Mb/s: 14,880 pps maximum 100 Mb/s: 148,810 pps maximum 1000 Mb/s: 1,488,100 pps maximum 10 Gb/s: 8x1,488,100 pps maximum

Latency: 10 Mb/s; 100 Mb/s; 1000 Mb/s:10 microseconds (LIFO)
10 Gb/s:

Gigabit link power budget

1000BASE-SX: 7.5 dBm
1000BASE-SX SMF: 8.0 dBm
10GBASE-LR: -6.0 dBm
10GBASE-LW: -6.0 dBm

Address database size

Addressing: 48-bit MAC address
Frame length: 64 to 1518 bytes (IEEE 802.1Q Untagged)
64 to 1522 bytes (IEEE 802.1Q Tagged)

Safety agency approvals

UL Listed (UL 1950)
CUL CSA 22.2 No. 950
CB with all national deviations
NOM NOM-019-SCFI 1994

Electromagnetic emissions

Meets requirements of: US: FCC CFR 47, Part 15, Subpart B, Class A
Canada: ICES-003, Issue-2, Class A
Australia/New Zealand: AS/NZS 3548:1995, Class A
Japan: VCCI V-3/97.04, Class A
Taiwan: CNS 13438, Class A
EN 55 022 (CISPR 22:1985), Class A
CE Mark

Electromagnetic immunity: EN50082-1:1997



Note: The GBICs installed in the 8608GBE and 8608GBM Modules must also meet these standards. In addition, the GBICs are certified to FDA requirement 21 CFR, Chapter 1, Subchapter J and the international requirements of IEC 60825 for Class 1 Laser.

8608GBE and 8608GBM Modules

Physical specifications

Height:	1.5 in. (3.8 cm)
Width:	15.4 in. (39.1 cm)
Depth:	18.5 in. (47.0 cm)
Weight:	8.0 lb (3.6 kg)

Electrical specifications

Input power:	65 W maximum
Thermal rating:	224 Btu/hr maximum

MTBF rating 197,096 hr

Connector type Duplex SC

GBICs

Physical specifications

Height:	12 mm
Width:	30 mm
Depth:	65 mm
Weight:	Varies with GBIC type

Connector type

Duplex SC

1000BASE-SX GBIC

Cable specifications

Type:	62.5 μm or 50 μm multimode fiber
Maximum distance:	1804 ft (550 m)

Optical specifications

Wavelength:	850 nm (VCSEL)
Average transmit output power:	-9.5 to -4 dBm
Average receiver sensitivity:	-17 dBm (minimum)

1000BASE-LX GBIC

Cable specifications

Type:	62.5 μm multimode fiber or 9 μm single-mode fiber
Maximum distance:	Single-mode fiber: 32,810 ft (10 km) Multimode fiber: 1804 ft (550 m)

Note: Multimode fiber may require a DMD patch cord.

Optical specifications

Wavelength:	1300 nm (FP laser diode)
Average transmit output power:	-5.2 to 0 dBm
Average receiver sensitivity:	-22 dBm (minimum)

1000BASE-XD GBIC

Cable specifications

Type: 9 μ m single-mode fiber
Maximum distance: 31 mi (50 km)

Note: For a shorter link distance, you may need an in-line attenuator to prevent overloading the receiver.

Optical specifications

Wavelength: 1550 nm (DFB laser diode)
Average transmit output power: -5.2 to 0 dBm
Average receiver sensitivity: -24 dBm

1000BASE-ZX GBIC

Cable specifications

Type: 9 μ m single-mode fiber
Maximum distance: 43 mi (70 km)

Note: For a shorter link distance, you may need an in-line attenuator to prevent overloading the receiver.

Optical specifications

Wavelength: 1550 nm (DFB laser diode)
Average transmit output power: 0 to 5.2 dBm
Average receiver sensitivity: -22 dBm (minimum)

1000BASE-CWDM GBIC

Cable specifications

Type: 9 μ m single-mode fiber

Maximum distance: 74.5 mi (120 km)

Note: Given 30dB loss budget and 0.25 db/Km fiber loss, up to 120 Km in transmission distance is supported with no intermediate multiplexer.

Optical specifications

Wavelength: 1450 to 1620 nm

Average transmit
output power: +2.0 to 6 dBm

Receiver optical input power: -30 dBm (minimum at 60° case temperature)
-28 dBm (minimum at 70° case temperature)

8608GTE and 8608GTM Modules

Physical specifications

Height:	1.5 in. (3.8 cm)
Width:	15.4 in. (39.1 cm)
Depth:	18.5 in. (47.0 cm)
Weight:	8.0 lb (3.6 kg)

Electrical specifications

Input power:	100 W maximum
Thermal rating:	344 Btu/hr maximum

MTBF rating

180,449 hr

Connector type

RJ-45 (see [Table 61](#))


Cable specifications

Type:	Category 5 or better UTP cable for 1000 Mb/s operation. Cables must use all four pairs. Wiring configuration and performance are defined by EIA/TIA Standard 568 and IEEE Standard 802.3 2000 edition.
Maximum distance:	328 ft (100 m)

Port connectors

The ports on the 8608GTE Module are RJ-45 ports wired as shown in [Table 61](#).

Table 61 Pin assignments: 8608GTE Module port

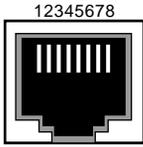Connector	Pin number	Signal
	1	Bidirectional Data A + (BI_DA+)
	2	Bidirectional Data A – (BI_DA–)
	3	Bidirectional Data B + (BI_DB+)
	4	Bidirectional Data C + (BI_DC+)
	5	Bidirectional Data C – (BI_DC–)
	6	Bidirectional Data B – (BI_DB–)
	7	Bidirectional Data D + (BI_DD+)
	8	Bidirectional Data D – (BI_DD–)

8608SXE Module

Physical specifications

Height:	1.5 in. (3.8 cm)
Width:	15.4 in. (39.1 cm)
Depth:	18.5 in. (47.0 cm)
Weight:	8.0 lb (3.6 kg)

Electrical specifications

Input power:	65 W maximum
Thermal rating:	224 Btu/hr maximum

MTBF rating 197,887 hr

Connector type Duplex SC

Cable specifications

Type:	62.5 μm or 50 μm multimode fiber optic cable
Maximum distance:	62.5 μm multimode fiber optic cable: 722 ft (220 m) @ 160 MHz/km bandwidth 902 ft (275 m) @ 200 MHz/km bandwidth 50 μm multimode fiber optic cable: 1604 ft (500 m) @ 400 MHz/km bandwidth 1804 ft (550 m) @ 400 MHz/km bandwidth

Optical specifications

Wavelength:	850 nm
Optical budget:	7 dB
Laser transmitter characteristics:	Minimum launch power: -10 dBm Maximum launch power: -4 dBm
Receiver characteristics:	Minimum receiver sensitivity: -17 dBm Maximum input power: 0 dBm

8616GTE Module

Physical specifications

Height:	1.5 in. (3.8 cm)
Width:	15.4 in. (39.1 cm)
Depth:	18.5 in. (47.0 cm)
Weight:	8.0 lb (3.6 kg)

Electrical specifications

Input power:	102 W maximum
Thermal rating:	344 Btu/hr maximum

MTBF rating

147,602 hr

Connector type

RJ-45 (see [Table 62](#))


Cable specifications

Type:	Category 5 or better UTP cable for 1000 Mb/s operation. Cables must use all four pairs. Wiring configuration and performance are defined by EIA/TIA Standard 568 and IEEE Standard 802.3 2000 edition.
Maximum distance:	328 ft (100 m)

Port connectors

The ports on the 8616GTE Module are RJ-45 ports wired as shown in [Table 62](#).

Table 62 Pin assignments: 8616GTE Module port

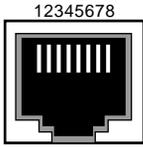Connector	Pin number	Signal
	1	Bidirectional Data A + (BI_DA+)
	2	Bidirectional Data A – (BI_DA–)
	3	Bidirectional Data B + (BI_DB+)
	4	Bidirectional Data C + (BI_DC+)
	5	Bidirectional Data C – (BI_DC–)
	6	Bidirectional Data B – (BI_DB–)
	7	Bidirectional Data D + (BI_DD+)
	8	Bidirectional Data D – (BI_DD–)

8616SXE Module

Physical specifications

Height:	1.5 in. (3.8 cm)
Width:	15.4 in. (39.1 cm)
Depth:	18.5 in. (47.0 cm)
Weight:	8.0 lb (3.6 kg)

Electrical specifications

Input power:	115 W maximum
Thermal rating:	396 Btu/hr maximum

MTBF rating

178,403 hr

Connector type

MT-RJ

Cable specifications

Type:	62.5 μm or 50 μm multimode fiber optic cable
Maximum distance:	62.5 μm multimode fiber optic cable: 722 ft (220 m) @ 160 MHz/km bandwidth 902 ft (275 m) @ 200 MHz/km bandwidth 50 μm multimode fiber optic cable: 1604 ft (500 m) @ 400 MHz/km bandwidth 1804 ft (550 m) @ 400 MHz/km bandwidth

Optical specifications

Wavelength:	850 nm
Optical budget:	7 dB
Laser transmitter characteristics:	Minimum launch power: -10 dBm Maximum launch power: -4 dBm
Receiver characteristics:	Minimum receiver sensitivity: -17 dBm Maximum input power: 0 dBm

8624FXE Module

Physical specifications

Height:	1.5 in. (3.8 cm)
Width:	15.4 in. (39.1 cm)
Depth:	18.5 in. (47.0 cm)
Weight:	7.6 lb (3.4 kg)

Electrical specifications

Input power:	56 W maximum
Thermal rating:	193 BTU/hr maximum

MTBF rating

320,972 hr

Connector type

MT-RJ

Cable specifications

Type:	62.5 μ m multimode fiber optic cable
Distance:	6562 ft (2 km) for full-duplex links

Optical specifications

Wavelength:	1300 nm
Optical budget:	-20 dBm to -14 dBm
Transmitter characteristics:	Minimum optical power: -10 dBm Maximum optical power: -4 dBm

8632TXE and 8632TXM Modules

Physical specifications

Height:	1.5 in. (3.8 cm)
Width:	15.4 in. (39.1 cm)
Depth:	18.5 in. (47.0 cm)
Weight:	9 lb (4 kg)

Electrical specifications

Input power:	56 W maximum
Thermal rating:	193 Btu/hr maximum

MTBF rating

217,744 hr

Connector type

RJ-45 connector wired as MDI-X
SC duplex connectors on GBICs; see GBIC descriptions starting on page [257](#).

Cable specifications

Type:	Category 3, 4, or 5 UTP cable (10 Mb/s operation) Category 5 UTP cable (100 Mb/s operation)
Maximum distance:	328 ft (100 m) 328 ft (100 m) for 10/100 Mb/s ports For GBIC ports, distance varies with the GBIC; see descriptions starting on page 257 .

8648TXE and 8648TXM Modules

Physical specifications

Height:	1.5 in. (3.8 cm)
Width:	15.4 in. (39.1 cm)
Depth:	18.5 in. (47.0 cm)
Weight:	8.0 lb (3.6 kg)

Electrical specifications

Input power:	76 W maximum
Thermal rating:	261 Btu/hr maximum

MTBF rating

244,708 hr

Connector type

RJ-45 connector wired as MDI-X (see [Table 63](#))


Cable specifications

Type:	Category 3, 4, or 5 UTP cable (10 Mb/s operation) Category 5 UTP cable (100 Mb/s operation)
Maximum distance:	328 ft (100 m)

Port connectors

The ports on the 8648TXE Module are RJ-45 ports wired as MDI-X connectors ([Table 63](#)).

Table 63 Pin assignments: 8648TXE Module port

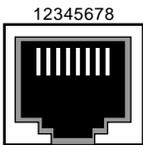Connector	Pin number	Signal
	1	Input receive data + (RX+)
	2	Input receive data - (RX-)
	3	Output transmit data + (TX+)
	6	Output transmit data - (TX-)
	4, 5, 7, 8	Not used

8672ATME and 8672ATMM Modules

Physical specifications

Height:	1.5 in. (3.8 cm)
Width:	15.4 in. (39.1 cm)
Depth:	18.5 in. (47.0 cm)
Weight:	8.0 lb (3.6 kg)

Electrical specifications

Input power:	OC-3c MDA: 40 W maximum
	OC-12c MDA: 40 W maximum
	DS-3 MDA: 40 W maximum
Thermal rating:	OC-3c MDA: 138 Btu/hr maximum
	OC-12c MDA: 138 Btu/hr maximum
	DS-3 MDA: 138 Btu/hr maximum

MTBF rating

222,103 hr

Connector type

OC-3c MDA: MT-RJ
 OC-12c MDA: Duplex SC
 DS-3 MDA: BNC

Cable specifications

Type:	Multimode or single-mode fiber optic cable, coaxial cable
Maximum distance:	Multimode fiber optic cable:
	1.24 mi (2 km) for OC-3c connection
	1640 ft (500 m) for OC-12c connection
	Single-mode fiber optic cable:
	9.3 mi (15 km) for OC-3c connection
	9.3 mi (15 km) for OC-12c connection
	Coaxial cable: 450 ft (137 m) for DS-3 connection

Optical specifications

Wavelength:	OC-3c MDA SMF: 1274 to 1356 nm
	OC-3c MDA MMF: 1274 to 1356 nm
	OC-12c MDA SMF: 1274 to 1356 nm
	OC-12c MDA MMF: 1260 to 1360 nm

Average transmit output power: OC-3c and OC-12c MDAs SMF: -8 to -15 dBm
OC-3c and OC-12c MDAs MMF: -14 to -29 dBm

Average receiver sensitivity: OC-3c MDA SMF: -14 to -28 dBm
OC-3c MDA MMF: -14 to -29 dBm
OC-12c MDA SMF: -7 to -18 dBm
OC-12c MDA MMF: -14 to -28 dBm

8681XLR Module

Physical specifications

Height:	1.5 in. (3.8 cm)
Width:	15.4 in. (39.1 cm)
Depth:	18.5 in. (47.0 cm)
Weight:	8 lb (3.6 kg)

Electrical specifications

Input power:	150 W maximum
Thermal rating:	512 BTU/hr maximum

MTBF rating 140,000 hr

Data Rate and encoding 64b/66b (IEEE 802.3ae specified)

Compatible with STM-64 No

Module Performance (64 byte packets)

Aggregate throughput	8x1,488,100 pps
Routing and Switch Forwarding Rates	8x1,488,100 pps

Connector type SC Duplex

Port type 10GBASE-LR 1310nm serial PMD

Cable specifications

Type:	9/125 μ m single mode fiber optic cable
Distance:	6.2 miles (10 km)

Optical specifications

Wavelength:	1310 nm
Optical budget:	5 dB
Transmitter characteristics:	Minimum optical power: -6 dBm Maximum optical power: -1 dBm
Receiver characteristics:	Minimum receiver sensitivity: -12 dBm Maximum input power: -1 dBm

8681XLW Module

Physical specifications

Height:	1.5 in. (3.8 cm)
Width:	15.4 in. (39.1 cm)
Depth:	18.5 in. (47.0 cm)
Weight:	8 lb (3.6 kg)

Electrical specifications

Input power:	150 W maximum
Thermal rating:	512 BTU/hr maximum

MTBF rating

140,000 hr

Data Rate and encoding

64b/66b (IEEE 802.3ae specified)

Compatible with STM-64

Yes

Module Performance (64 byte packets)

Aggregate throughput	8x1,488,100 pps
Routing and Switch Forwarding Rates	8x1,488,100 pps

Connector type

SC Duplex

Port type

10GBASE-LW 1310nm serial PMD

Cable specifications

Type:	9/125 μ m single mode fiber optic cable
Distance:	6.2 miles (10 km)

Optical specifications

Wavelength:	1310 nm
Optical budget:	5 dB
Transmitter characteristics:	Minimum optical power: -6 dBm Maximum optical power: -1 dBm
Receiver characteristics:	Minimum receiver sensitivity: -12 dBm Maximum input power: -1 dBm

8683POSM Module

Physical specifications

Height:	1.5 in. (3.8 cm)
Width:	15.4 in. (39.1 cm)
Depth:	18.5 in. (47.0 cm)
Weight:	8.0 lb (3.6 kg)

Electrical specifications

Input power:	OC-3c MDA: 70 W maximum
	OC-12c MDA: 90 W maximum
Thermal rating:	OC-3c MDA: 241 Btu/hr maximum
	OC-12c MDA: 310 Btu/hr maximum

MTBF rating

255,693 hr

Connector types

OC-3c MDA: MT-RJ
 OC-12c MDA: Duplex SC

Cable specifications

Type:	Multimode or single-mode fiber optic cable
Maximum distance:	Multimode fiber optic cable:
	1.24 mi (2 km) for OC-3c connection
	1640 ft (500 m) for OC-12c connection
	Single-mode fiber optic cable:
	9.3 mi (15 km) for OC-3c connection
	9.3 mi (15 km) for OC-12c connection

Optical specifications

Wavelength:	OC-3c MDA SMF: 1274 to 1356 nm
	OC-3c MDA MMF: 1274 to 1356 nm
	OC-12c MDA SMF: 1274 to 1356 nm
	OC-12c MDA MMF: 1260 to 1360 nm
Average transmit output power:	OC-3c and OC-12c MDAs SMF: -8 to -15 dBm
	OC-3c and OC-12c MDAs MMF: -14 to -29 dBm
Average receiver sensitivity:	OC-3c MDA SMF: -14 to -28 dBm
	OC-3c MDA MMF: -14 to -29 dBm
	OC-12c MDA SMF: -7 to -18 dBm
	OC-12c MDA MMF: -14 to -28 dBm

8691SF Module

Physical specifications

Height:	1.5 in. (3.8 cm)
Width:	15.4 in. (39.1 cm)
Depth:	18.5 in. (47.0 cm)
Weight:	7.2 lb (3.3 kg)

Electrical specifications

Input power:	70 W maximum
Thermal rating:	241 Btu/hr maximum

MTBF rating 119,047 hr

Connector types

Ethernet Management port:	RJ-45 connector wired as MDI (see Table 64)
Console port:	DB-9 connector (see Table 65)
Modem port:	DB-9 connector (see Table 66)

Cable specifications

Ethernet Management port:	Category 3, 4, or 5 UTP cable (10 Mb/s operation) Category 5 UTP cable (100 Mb/s operation)
Console port:	RS-232 cable
Modem port:	DTE-to-DCE cable (straight or transmit cable)

Management port

The Management port is a 10/100 Mb/s Ethernet port implemented on an RJ-45 connector wired as an MDI connection. [Table 64](#) shows the pin assignments for this connector.

Table 64 Pin assignments: 8691SF Module Management port

Connector	Pin number	Signal
 8020EA	1	Output transmit data + (TX+)
	2	Output transmit data - (TX-)
	3	Input receive data + (RX+)
	6	Input receive data - (RX-)
	4, 5, 7, 8	Not used


Console serial port

The Console serial port is implemented as a DB-9 connector. This port can operate as a data terminal equipment (DTE) or data communication equipment (DCE) device. Use the switch to the left of the port to set the port to DTE (left) or DCE (right). Default settings for this port are 9600 bits/s, 8 data bits, no parity, and one stop bit.

Because the Console port expects to receive data set ready (DSR) and clear to send (CTS) signals before transmitting, these control lines are required in the cabling. The Console port does not support any inbound flow control; that is, the port does not toggle control lines to indicate an input buffer full condition.

Table 65 lists the pin assignments for the Console port for both the DTE and DCE settings.

Table 65 Pin assignments: 8691SF Module Console port

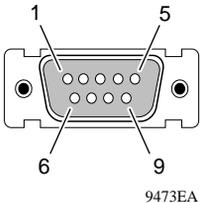Connector	Pin number	DCE signal	DTE signal
	2	RXD	TXD
	3	TXD	RXD
	4	DTR	DSR
	5	GND	GND
	6	DSR	DTR
	7	RTS	CTS
	9	CTS	RTS

Modem serial port

The Modem serial port is implemented on a DB-9 connector wired as a DTE connection.

To set up modem access, you need a DTE-to-DCE cable (straight or transmit cable) between the Modem port and a modem or terminal server.

Table 66 describes the required cable pin assignments.

Table 66 Pin assignments: DTE to DCE

Switch		Modem	
Signal	Pin number	DCE DB-9 pin number	DCE DB-25 pin number
RXD	2	2	3
TXD	3	3	2
DTR	4	4	20
GND	5	5	7
DSR	6	6	6
RTS	7	7	4
CTS	8	8	5

Index

Numbers

- 10/100 Mb/s ports 44, 68, 71
- 10/100BASE-T interface, connecting to 160
- 1000BASE-CWDM GBIC
 - description 174
 - installing and replacing 175
 - technical specifications 259
- 1000BASE-LX GBIC
 - description 174
 - installing and replacing 175
 - technical specifications 241, 257
- 1000BASE-LX MDA
 - description 178
 - installing and replacing 182
- 1000BASE-SX GBIC
 - description 174
 - installing and replacing 175
 - technical specifications 241, 257
- 1000BASE-SX MDA
 - description 178
 - installing and replacing 182
 - LEDs 179
- 1000BASE-SX ports 60, 63
- 1000BASE-T ports 57, 62
- 1000BASE-XD GBIC 258
 - description 174
 - installing and replacing 175
 - technical specifications 241
- 1000BASE-ZX GBIC
 - description 174
 - installing and replacing 175
 - technical specifications 242, 258
- 100BASE-FX MDA, troubleshooting 230
- 100BASE-FX ports 66
- 10GBASE-LR port 75
- 10GBASE-LW port 77
- 450-series MDA
 - description 178
 - installing and replacing 182
 - LEDs 179
 - technical specifications 245
- 8100 modules
 - 8108GBIC 34
 - 8116FX 37
 - 8132TX 40
 - 8148TX 44
 - 8190SM 46
 - installing and replacing 150
 - MDAs 177
- 8100 series fiber MDA
 - description 181
 - installing and replacing 182
 - LEDs 181
 - technical specifications 245
- 8100-4TX MDA
 - description 180
 - installing and replacing 182
 - LEDs 180
 - technical specifications 245
- 8108GBIC module
 - description 34
 - installing and replacing 150
 - status LEDs 36
 - technical specifications 240
- 8116FX module 243
 - description 37
 - installing and replacing 150

- status LEDs 38
- technical specifications 243
- 8132TX module 244
 - description 40
 - installing and replacing 150
 - status LEDs 41
 - technical specifications 244
- 8148TX module 247
 - description 44
 - installing and replacing 150
 - status LEDs 45
 - technical specifications 247
- 8190SM module
 - connecting 10/100BASE-T cable 160
 - connecting modem to 161
 - description 46
 - installing and replacing 150
 - technical specifications 47, 248
- 8600 modules
 - 8608GBE 54
 - 8608GBM 54
 - 8608GTE 57
 - 8608GTM 57
 - 8608SXE 60
 - 8616GTE 62
 - 8616SXE 62
 - 8624FXE 66
 - 8632TXE 68
 - 8632TXM 68
 - 8648TXE 70
 - 8648TXM 70
 - 8672ATME 73
 - 8672ATMM 73
 - 8681XLR 75
 - 8681XLW 77
 - 8683POSM 79
 - 8691SF 80
 - installing and replacing 150
 - MDAs 185
- 8608GBE module
 - description 54
 - installing and replacing 150
 - status LEDs 56
 - technical specifications 256
- 8608GBM module
 - description 54
 - installing and replacing 150
 - status LEDs 56
 - technical specifications 256
- 8608GTE module
 - description 57
 - installing and replacing 150
 - status LEDs 59, 63
 - technical specifications 260
- 8608GTM module
 - description 57
 - installing and replacing 150
 - status LEDs 59
 - technical specifications 260
- 8608SXE module
 - description 60
 - installing and replacing 150
 - status LEDs 61
 - technical specifications 261
- 8616GTE module
 - description 62
 - installing and replacing 150
 - status LEDs 62
 - technical specifications 262
- 8616SXE module
 - description 63
 - installing and replacing 150
 - status LEDs 65
 - technical specifications 263
- 8624FXE module
 - description 66
 - installing and replacing 150
 - status LEDs 67
 - technical specifications 264
- 8632TXE module
 - description 68
 - installing and replacing 150
 - status LEDs 69
 - technical specifications 265
- 8632TXM module

- description 68
- installing and replacing 150
- status LEDs 69
- technical specifications 265

8648TXE module

- description 71
- installing and replacing 150
- status LEDs 71, 75, 77
- technical specifications 266

8648TXM module

- description 71
- installing and replacing 150
- status LEDs 71
- technical specifications 266

8672ATME module

- description 73
- installing a MDA on 194
- installing and replacing 150
- status LED 74
- technical specifications 267

8672ATMM module

- description 73
- installing a MDA on 194
- installing and replacing 150, 154
- status LED 74
- technical specifications 267

8681XLR module

- description 75
- installing and replacing 150
- status LEDs 76
- technical specifications 269

8681XLW module

- description 77
- installing and replacing 150
- status LEDs 78
- technical specifications 270

8683POSM module

- description 79
- installing a MDA on 194
- installing and replacing 150
- status LED 80
- technical specifications 271

8683POSM module MDA
LEDs 192

8691SF module

- connecting modem to 161
- description 80
- installing and replacing 150
- status LEDs 81
- technical specifications 272

A

AC power supply

- description 115
- status LEDs 117

antistatic wrist strap, attaching 147

autonegotiation, troubleshooting 230

B

bezel, removing 118

C

cable

- Category 5 230
- crossover 229, 251
- fiber 230
- fiber optic 244
- straight-through 163, 229, 250
- troubleshooting 229
- UTP 244, 247

cable lengths 163, 164

cables

- connecting
 - 10/100BASE-T 160
 - to modem 161
- crossover 166
- fiber optic
 - 8608SXE module 261
 - 8616SXE module 263
 - 8624FXE module 264
 - 8632TXE module 265
 - 8632TXM module 265

- 8672ATME module 267
- 8672ATMM module 267
- 8681XLR module 269
- 8681XLW module 270
- 8683POSM module 271
- ground cables, connecting to rack 113
- ordering 91
- straight-through 166, 274
- UTP 260, 262, 266
- chassis
 - components, described 51
 - connecting communications cables 163
 - installing 87
 - installing and replacing CRUs 145, 173, 177, 185
 - mounting in a 19-inch rack 97
 - mounting in a Hendry rack 101
 - operating 209
 - resetting 220
 - technical specifications 233
 - verifying a successful installation 213
- connecting
 - 10/100BASE-T cables 160
 - modem cables 161
- connections
 - MDI-X 42
 - MDI-X to MDI 251
 - MDI-X to MDI-X 252
- connectors
 - DB-9 249, 273
 - MDI-X 44, 244, 247, 260, 262, 266
 - RJ-45 42, 44, 249, 273
- Console port 49, 84
 - on 8190SM module 249
 - on 8691SF module 273
- conventions, text 26
- CPU subsystem 80
- crossover cable 163, 166, 229, 252
- CRUs (customer-replaceable units)
 - 8108 GBIC module
 - description 34
 - installing and replacing 150
 - 8116FX module
 - description 37
 - installing and replacing 150
 - 8132TX module
 - description 40
 - installing and replacing 150
 - 8148TX module
 - description 44
 - installing and replacing 150
 - 8190SM Switch Management Module
 - description 46
 - installing and replacing 150
 - 8608GBE module
 - description 54
 - installing and replacing 150
 - 8608GBM module
 - description 54
 - installing and replacing 150
 - 8608GTE module
 - description 57
 - installing and replacing 154
 - 8608GTM module
 - description 57
 - installing and replacing 154
 - 8608SXE module
 - description 60
 - installing and replacing 150
 - 8616GTE module
 - description 62
 - installing and replacing 150
 - 8616SXE module
 - description 63
 - installing and replacing 154
 - 8624FXE module
 - description 66
 - installing and replacing 150
 - 8632TXE module
 - description 68
 - installing and replacing 154
 - 8632TXM module
 - description 68
 - installing and replacing 154
 - 8648TXE module
 - description 70

- installing and replacing 150
- 8648TXM module
 - description 70
 - installing and replacing 154
- 8672ATME module
 - description 73
 - installing and replacing 154
- 8672ATMM module
 - description 73
 - installing and replacing 154
- 868IXLR module
 - description 75
 - installing and replacing 154
- 868IXLW module
 - description 77
 - installing and replacing 154
- 8683POSM module 79
 - description 79
 - installing and replacing 154
- 8691SF module
 - description 80
 - installing and replacing 150
- fan tray
 - description 203
 - installing and replacing 204
- GBICs
 - description 174
 - installing and replacing 175
- MDAs for 8100 modules
 - description 178
 - installing 182
 - LEDs 179
- MDAs for 8600 modules
 - description 186, 191
 - installing 194
 - LEDs 192
- power supplies
 - description 115
 - installing AC 138
 - installing DC 122
 - removing DC 132
- customer support 27

D

- DC power supply
 - description 115
 - installing 122
 - removing 132
 - status LEDs 117
- default settings 273
- downloading image 217, 218
- DS-3 ports 74
- DTE/DCE switch 273
 - changing setting of 228
 - default settings 249
 - description 49, 84
- duplex mode, troubleshooting 231

E

- electrical specifications 92, 93
- electromagnetic emissions
 - routing switch 255
- environmental specifications 93, 233
 - 8100 modules 238
 - 8600 modules 254
- Ethernet Management port 49, 84
 - pin assignments 249, 273

F

- failure to display login prompt 228
- fan LED 83
- fan tray
 - description 203
 - removing 204
 - status LEDs 204
- fiber cables
 - for 8100 Series MDA 230
 - for 8600 modules MDAs 188
- fiber optic equipment 150
- flash memory card 85
 - changing read-write protection 223

installing 222
removing 221

G

GBICs (gigabit interface converters)

8108GBIC types 34
8608GBE types 55
8608GBM types 55
8632TXE type 277
8632TXM type 277
installing 173

Gigabit Ethernet modules 57, 62

8608GBE 54
8608GBM 54
8608GTE 57
8608GTM 57
8608SXE 60
8616GTE 62
8616SXE 63
8681XLR 75
8681XLW 77

gigabit interface converter. See GBIC

H

hardware

shipped with the 8010co chassis 88
shipped with the DC power supply 122

heat dissipation, ensuring 92

I

installation

AC power supply 138
DC power supply 122
flash memory card 222
GBICs (gigabit interface converters) 173
MDAs on the 8100 modules 182
MDAs on the 8600 modules 185
modules 154
power filler panel 120
preparing for 87

L

LEDs

1000BASE-LX MDA 179
1000BASE-SX MDA 179
8100 series fiber MDA 181
8100-4TX MDA 180
8108GBIC 35
8116FX module 38
8132TX module 41
8148TX module 44
8190SM module 47
8608GBE module 56
8608GBM module 56
8608GTE module 58
8608GTM module 58
8608SXE module 61
8616GTE module 62
8616GTM module 62
8616SXE module 64
8624FXE module 67
8632TXE module 69
8632TXM module 69
8648TXE module 71, 72
8648TXM module 71, 72
8672ATME
MDA 188
8672ATME module 74
8672ATMM
MDA 188
8672ATMM module 74
8681XLR module 76
8681XLW module 78
8683POSM module 80
MDA 192
8691SF module 81
AC power supply 117
DC power supply 117
fan tray 204
power supplies 227
problem indications 227
length, cables 163, 164
login prompt, failure to display 228
longwave gigabit MDAs 178

M

Management port 49, 84, 249, 273
management, out-of-band 49, 84
maximum cable distances 164
MDAs
 gigabit Ethernet 178
 installing 182
 versions 177
MDI connections
 MDI-X to MDI 251
 MDI-X to MDI-X 252
 troubleshooting 251
MDI-X connections 42, 44, 166
 cables 163
 troubleshooting 251
memory
 output buffer 53
 PCMCIA 85
memory cards
 changing read-write protection 223
 removing 221
memory, PCMCIA 50
modem
 connecting to 8010co 161
Modem port
 8190SM module 49
 8691SF module 84
 pin assignments 250, 274
modules. See 8100 or 8600 modules
MTBF rating. See individual module entries

O

OC-12 ports 74, 79
OC-3 ports 74, 79
optical specifications
 8608SXE module 261
 8616SXE module 263
 8624FXE module 264
 8672ATME module 267

8672ATMM module 267
8681XLR module 269
8681XLW module 270
8683POSM module 271

P

PCMCIA card slot 50, 85
pin assignments
 10/100 Mb/s ports 244, 247, 260, 262, 266
 Console port 250, 274
 Ethernet Management port 249, 273
 modem port 250, 274
port connections, troubleshooting 229
port densities
 8100 modules 34
 8600 modules 52
ports
 10/100 Mb/s 44, 68, 71, 244, 247, 260, 262,
 266
 1000BASE-SX 60, 63
 1000BASE-T 57, 62
 100BASE-FX 66
 10GBASE-LR 75
 10GBASE-LW 77
 Console 249, 273
 DS-3 74
 Ethernet Management 49, 84, 249, 273
 MDI-X/MDI connections 251
 modem 250, 274
 OC-12 74, 79
 OC-3 74, 79
 serial 49, 84
POS module 79
power specifications 92, 93
power supplies
 description 115
power-up sequence 213
product support 27
publications
 hard copy 26

R

redundancy

CPUs 47, 81

removing

AC power supply 141

bottom bezel 118

DC power supply 132

fan tray 204

flash memory card 221

modules 150

option memory card 221

power filler panel 120

replacing

AC-DC power supply 141

DC power supply 132

fan tray 204

modules 150

reset button 50, 84

RJ-45 connectors 44

routing switch fabric module

description 81

S

safety agency approvals 255

serial ports 49, 84

shipment contents, verifying 88

shortwave gigabit MDAs 178

site requirements 92

software incompatibility 227

space requirements 92

specifications, technical

450-series MDA 245

8108GBIC module 240

8116FX module 243

8132TX switch module 244

8148TX switch module 247

8608GBE module 256

8608GBM module 256

8608GTE module 260

8608GTM module 260

8608SXE module 261, 263

8616GTE module 262

8616SX module 262, 263

8624FXE module 264

8632TXE module 265

8632TXM module 265

8648TXE module 266

8648TXM module 266

8672ATME module 267

8672ATMM module 267

8681SLW module 270

8681XLR module 269

8683POSM module 271

8691SF module 272

electrical 92, 93

environmental 93

space 92

standards 238, 254

straight-through cable 163, 166, 229, 250, 274

support, Nortel Networks 27

system log 227

T

technical publications 26

technical specifications

8100 modules 237

8600 modules 253

technical support 27

text conventions 26

troubleshooting

cables 229

downloading the image file 217

image download 218

LED indications 227

port interface 230

power-up sequence 213

saving configuration changes 219

saving your configuration 217

troubleshooting, MDI and MDI-X

connections 251

V

voltage specifications 92, 93

W

wrist strap, antistatic 147

