

Part No. 314708-C Rev 00  
April 2004

600 Technology Park Drive  
Billerica, MA 01821-4130

# Installing the Contivity 2700



\* 3 1 4 7 0 8 - C R E V 0 0 \*

**NORTEL**  
**NETWORKS™**

## Copyright © 2004 Nortel Networks

All rights reserved. April 2004.

The information in this document is subject to change without notice. The statements, configurations, technical data, and recommendations in this document are believed to be accurate and reliable, but are presented without express or implied warranty. Users must take full responsibility for their applications of any products specified in this document. The information in this document is proprietary to Nortel Networks Inc.

## Trademarks

Nortel Networks, the Nortel Networks logo, the Globemark, Unified Networks, and Contivity are trademarks of Nortel Networks.

Adobe and Acrobat Reader are trademarks of Adobe Systems Incorporated.

Hi/fn and LZS are trademarks of Hi/fn, Inc.

HyperTerminal is a trademark of Hilgraeve, Inc.

Microsoft, Windows, and Windows NT are trademarks of Microsoft Corporation.

Netscape and Netscape Navigator are trademarks of Netscape Communications Corporation.

Ethernet is a trademark of Xerox Corporation.

The asterisk after a name denotes a trademarked item.

## Statement of conditions

In the interest of improving internal design, operational function, and/or reliability, Nortel Networks Inc. reserves the right to make changes to the products described in this document without notice.

Nortel Networks Inc. does not assume any liability that may occur due to the use or application of the product(s) or circuit layout(s) described herein.

## USA requirements only

### Federal Communications Commission (FCC) Compliance Notice: Radio Frequency Notice

**Note:** This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy. If it is not installed and used in accordance with the instruction manual, it may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case users will be required to take whatever measures may be necessary to correct the interference at their own expense.

## European requirements only

### EN 55 022 statement

This is to certify that the Nortel Networks Contivity 2700 is shielded against the generation of radio interference in accordance with the application of Council Directive 89/336/EEC, Article 4a. Conformity is declared by the application of EN 55 022 Class A (CISPR 22).

**Warning:** This is a Class A product. In a domestic environment, this product may cause radio interference, in which case, the user may be required to take appropriate measures.

**Achtung:** Dieses ist ein Gerät der Funkstörgrenzwertklasse A. In Wohnbereichen können bei Betrieb dieses Gerätes Rundfunkstörungen auftreten, in welchen Fällen der Benutzer für entsprechende Gegenmaßnahmen verantwortlich ist.

**Attention:** Ceci est un produit de Classe A. Dans un environnement domestique, ce produit risque de créer des interférences radioélectriques, il appartiendra alors à l'utilisateur de prendre les mesures spécifiques appropriées.

### **EC Declaration of Conformity**

This product conforms (or these products conform) to the provisions of the R&TTE Directive 1999/5/EC.

### **Japan/Nippon requirements only**

#### **Voluntary Control Council for Interference (VCCI) statement**

この装置は、情報処理装置等電波障害自主規制協議会（VCCI）の基準に基づくクラス A 情報技術装置です。この装置を家庭環境で使用すると電波妨害を引き起こすことがあります。この場合には使用者が適切な対策を講ずるよう要求されることがあります。

### **Taiwan requirements**

#### **Bureau of Standards, Metrology and Inspection (BSMI) statement**

警告使用者:

這是甲類的資訊產品，在居住的環境中使用時，可能會造成射頻干擾，在這種情況下，使用者會被要求採取某些適當的對策。

### **Canada requirements only**

#### **Canadian Department of Communications Radio Interference Regulations**

This digital apparatus (Contivity 2700) does not exceed the Class A limits for radio-noise emissions from digital apparatus as set out in the Radio Interference Regulations of the Canadian Department of Communications.

#### **Règlement sur le brouillage radioélectrique du ministère des Communications**

Cet appareil numérique (Contivity 2700) respecte les limites de bruits radioélectriques visant les appareils numériques de classe A prescrites dans le Règlement sur le brouillage radioélectrique du ministère des Communications du Canada.

## Nortel Networks Inc. software license agreement

This Software License Agreement (“License Agreement”) is between you, the end-user (“Customer”) and Nortel Networks Corporation and its subsidiaries and affiliates (“Nortel Networks”). PLEASE READ THE FOLLOWING CAREFULLY. YOU MUST ACCEPT THESE LICENSE TERMS IN ORDER TO DOWNLOAD AND/OR USE THE SOFTWARE. USE OF THE SOFTWARE CONSTITUTES YOUR ACCEPTANCE OF THIS LICENSE AGREEMENT. If you do not accept these terms and conditions, return the Software, unused and in the original shipping container, within 30 days of purchase to obtain a credit for the full purchase price.

“Software” is owned or licensed by Nortel Networks, its parent or one of its subsidiaries or affiliates, and is copyrighted and licensed, not sold. Software consists of machine-readable instructions, its components, data, audio-visual content (such as images, text, recordings or pictures) and related licensed materials including all whole or partial copies. Nortel Networks grants you a license to use the Software only in the country where you acquired the Software. You obtain no rights other than those granted to you under this License Agreement. You are responsible for the selection of the Software and for the installation of, use of, and results obtained from the Software.

**1. Licensed Use of Software.** Nortel Networks grants Customer a nonexclusive license to use a copy of the Software on only one machine at any one time or to the extent of the activation or authorized usage level, whichever is applicable. To the extent Software is furnished for use with designated hardware or Customer furnished equipment (“CFE”), Customer is granted a nonexclusive license to use Software only on such hardware or CFE, as applicable. Software contains trade secrets and Customer agrees to treat Software as confidential information using the same care and discretion Customer uses with its own similar information that it does not wish to disclose, publish or disseminate. Customer will ensure that anyone who uses the Software does so only in compliance with the terms of this Agreement. Customer shall not a) use, copy, modify, transfer or distribute the Software except as expressly authorized; b) reverse assemble, reverse compile, reverse engineer or otherwise translate the Software; c) create derivative works or modifications unless expressly authorized; or d) sublicense, rent or lease the Software. Licensors of intellectual property to Nortel Networks are beneficiaries of this provision. Upon termination or breach of the license by Customer or in the event designated hardware or CFE is no longer in use, Customer will promptly return the Software to Nortel Networks or certify its destruction. Nortel Networks may audit by remote polling or other reasonable means to determine Customer’s Software activation or usage levels. If suppliers of third party software included in Software require Nortel Networks to include additional or different terms, Customer agrees to abide by such terms provided by Nortel Networks with respect to such third party software.

**2. Warranty.** Except as may be otherwise expressly agreed to in writing between Nortel Networks and Customer, Software is provided “AS IS” without any warranties (conditions) of any kind. NORTEL NETWORKS DISCLAIMS ALL WARRANTIES (CONDITIONS) FOR THE SOFTWARE, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE AND ANY WARRANTY OF NON-INFRINGEMENT. Nortel Networks is not obligated to provide support of any kind for the Software. Some jurisdictions do not allow exclusion of implied warranties, and, in such event, the above exclusions may not apply.

**3. Limitation of Remedies.** IN NO EVENT SHALL NORTEL NETWORKS OR ITS AGENTS OR SUPPLIERS BE LIABLE FOR ANY OF THE FOLLOWING: a) DAMAGES BASED ON ANY THIRD PARTY CLAIM; b) LOSS OF, OR DAMAGE TO, CUSTOMER’S RECORDS, FILES OR DATA; OR c) DIRECT, INDIRECT, SPECIAL, INCIDENTAL, PUNITIVE, OR CONSEQUENTIAL DAMAGES (INCLUDING LOST PROFITS OR SAVINGS), WHETHER IN CONTRACT, TORT OR OTHERWISE (INCLUDING NEGLIGENCE) ARISING OUT OF YOUR USE OF THE SOFTWARE, EVEN IF NORTEL NETWORKS, ITS AGENTS OR SUPPLIERS HAVE BEEN ADVISED OF THEIR POSSIBILITY. The forgoing limitations of remedies also apply to any developer and/or supplier of the Software. Such developer and/or supplier is an intended beneficiary of this Section. Some jurisdictions do not allow these limitations or exclusions and, in such event, they may not apply.

---

#### 4. General

- a. If Customer is the United States Government, the following paragraph shall apply: All Nortel Networks Software available under this License Agreement is commercial computer software and commercial computer software documentation and, in the event Software is licensed for or on behalf of the United States Government, the respective rights to the software and software documentation are governed by Nortel Networks standard commercial license in accordance with U.S. Federal Regulations at 48 C.F.R. Sections 12.212 (for non-DoD entities) and 48 C.F.R. 227.7202 (for DoD entities).
- b. Customer may terminate the license at any time. Nortel Networks may terminate the license if Customer fails to comply with the terms and conditions of this license. In either event, upon termination, Customer must either return the Software to Nortel Networks or certify its destruction.
- c. Customer is responsible for payment of any taxes, including personal property taxes, resulting from Customer's use of the Software. Customer agrees to comply with all applicable laws including all applicable export and import laws and regulations.
- d. Neither party may bring an action, regardless of form, more than two years after the cause of the action arose.
- e. The terms and conditions of this License Agreement form the complete and exclusive agreement between Customer and Nortel Networks.
- f. This License Agreement is governed by the laws of the country in which Customer acquires the Software. If the Software is acquired in the United States, then this License Agreement is governed by the laws of the state of New York.



---

# Contents

---

|                                                              |           |
|--------------------------------------------------------------|-----------|
| <b>Preface</b> .....                                         | <b>15</b> |
| Before you begin .....                                       | 15        |
| Text conventions .....                                       | 16        |
| Acronyms .....                                               | 16        |
| Related publications .....                                   | 17        |
| How to get help .....                                        | 18        |
| <br><b>Chapter 1</b>                                         |           |
| <b>Installing the Contivity 2700 chassis</b> .....           | <b>19</b> |
| Description of the Contivity 2700 .....                      | 19        |
| Preparing to install the Contivity 2700 .....                | 20        |
| Shipment contents .....                                      | 21        |
| Additional equipment .....                                   | 22        |
| Cables .....                                                 | 22        |
| Hardware for mounting the chassis in an equipment rack ..... | 22        |
| Site requirements .....                                      | 22        |
| Installing the chassis .....                                 | 23        |
| Installing the chassis on a flat surface .....               | 23        |
| Installing the chassis in an equipment rack .....            | 24        |
| Rack-mount recommendations .....                             | 24        |
| Attaching the shelf in the equipment rack .....              | 24        |
| Mounting the chassis in the equipment rack .....             | 26        |
| <br><b>Chapter 2</b>                                         |           |
| <b>Cabling the gateway and turning the power on</b> .....    | <b>29</b> |
| Connecting communications cables .....                       | 30        |
| Connecting the power cord .....                              | 32        |
| Verifying a successful installation .....                    | 33        |

|                                                   |    |
|---------------------------------------------------|----|
| Understanding the LEDs .....                      | 34 |
| Front panel LEDs .....                            | 34 |
| LEDs on the system 10/100BASE Ethernet port ..... | 35 |
| 10/100BASE Ethernet interface card LEDs .....     | 36 |
| 1000BASE-T Ethernet interface card LEDs .....     | 36 |
| 1000BASE-SX Ethernet interface card LEDs .....    | 37 |
| ADSL WAN interface card LEDs .....                | 38 |
| T1/E1 CSU/DSU WAN interface card LEDs .....       | 39 |
| Quad T1/E1 CSU/DSU WAN interface card LEDs .....  | 40 |
| Single V.35/X.21 WAN interface card LEDs .....    | 41 |

### **Chapter 3**

#### **Configuring the management IP interface..... 43**

|                                                    |    |
|----------------------------------------------------|----|
| Required information .....                         | 44 |
| Using the IP address configuration utility .....   | 44 |
| System requirements .....                          | 44 |
| Running the IP address configuration utility ..... | 45 |
| Using the serial interface .....                   | 47 |
| Testing the configuration .....                    | 51 |
| Troubleshooting .....                              | 53 |

### **Chapter 4**

#### **Installing option cards and DIMMs..... 55**

|                                                           |    |
|-----------------------------------------------------------|----|
| Shutting down the system to add or replace hardware ..... | 56 |
| Removing the front bezel and top cover .....              | 57 |
| Attaching the antistatic wrist strap .....                | 60 |
| Installing and replacing option cards .....               | 61 |
| Installing and replacing DIMMs .....                      | 65 |

### **Appendix A**

#### **Technical specifications ..... 69**

|                                    |    |
|------------------------------------|----|
| Chassis specifications .....       | 69 |
| System ports .....                 | 70 |
| 10/100BASE Ethernet LAN port ..... | 70 |
| Serial port .....                  | 71 |

---

|                                                                           |           |
|---------------------------------------------------------------------------|-----------|
| Modem cable specifications .....                                          | 72        |
| Hardware option cards .....                                               | 73        |
| Contivity Security Accelerator (CSA) and Hardware Accelerator cards ..... | 73        |
| 10/100BASE Ethernet interface card .....                                  | 74        |
| 1000BASE-T Ethernet interface card .....                                  | 75        |
| 1000BASE-SX Ethernet interface card .....                                 | 76        |
| ADSL WAN interface card .....                                             | 77        |
| ISDN BRI interface card .....                                             | 78        |
| T1/E1 CSU/DSU WAN interface card .....                                    | 80        |
| Quad T1/E1 CSU/DSU WAN interface card .....                               | 82        |
| Single V.35/X.21 WAN interface card .....                                 | 83        |
| Dual V.35 WAN interface card .....                                        | 86        |
| HSSI WAN interface card .....                                             | 88        |
| V.90 modem interface card .....                                           | 90        |
| <b>Index .....</b>                                                        | <b>91</b> |



---

## Figures

---

|           |                                                                     |    |
|-----------|---------------------------------------------------------------------|----|
| Figure 1  | Front view of the Contivity 2700 .....                              | 20 |
| Figure 2  | Placement of rubber feet on the bottom of the chassis .....         | 23 |
| Figure 3  | Attaching the cage nuts to the rack .....                           | 25 |
| Figure 4  | Installing the shelf in the equipment rack .....                    | 25 |
| Figure 5  | Removing the front bezel .....                                      | 26 |
| Figure 6  | Replacing the front bezel .....                                     | 27 |
| Figure 7  | Rear view of the Contivity 2700 .....                               | 31 |
| Figure 8  | Front panel LEDs .....                                              | 34 |
| Figure 9  | LEDs on the system LAN port .....                                   | 35 |
| Figure 10 | LEDs on the 10/100BASE Ethernet interface card .....                | 36 |
| Figure 11 | LEDs on the 1000BASE-T Ethernet interface card .....                | 36 |
| Figure 12 | LEDs on the 1000BASE-SX Ethernet interface card .....               | 37 |
| Figure 13 | LEDs on the ADSL WAN interface card .....                           | 38 |
| Figure 14 | LEDs on the T1/E1 CSU/DSU WAN interface card .....                  | 39 |
| Figure 15 | LEDs on the quad T1/E1 CSU/DSU WAN interface card .....             | 40 |
| Figure 16 | LEDs on the single V.35/X.21 WAN interface card .....               | 41 |
| Figure 17 | Icon for the IP address configuration utility .....                 | 45 |
| Figure 18 | IP address configuration utility dialog box .....                   | 46 |
| Figure 19 | Welcome screen .....                                                | 52 |
| Figure 20 | Removing the front bezel .....                                      | 57 |
| Figure 21 | Removing the top cover .....                                        | 58 |
| Figure 22 | Location of option card slots and DIMMs on the system board .....   | 59 |
| Figure 23 | Location of the grounding jack for the antistatic wrist strap ..... | 60 |
| Figure 24 | Installing and removing an option card .....                        | 63 |
| Figure 25 | Replacing the front bezel .....                                     | 64 |
| Figure 26 | Installing and removing a DIMM .....                                | 66 |
| Figure 27 | 10/100BASE Ethernet connector .....                                 | 70 |
| Figure 28 | Modem cable (9-pin D-sub plug to RS-232-C modem plug) .....         | 72 |
| Figure 29 | 10/100BASE Ethernet interface card .....                            | 74 |

|           |                                                 |    |
|-----------|-------------------------------------------------|----|
| Figure 30 | 1000BASE-T Ethernet interface card . . . . .    | 75 |
| Figure 31 | 1000BASE-SX Ethernet interface card . . . . .   | 76 |
| Figure 32 | ADSL WAN interface card . . . . .               | 77 |
| Figure 33 | ISDN BRI S/T interface card . . . . .           | 78 |
| Figure 34 | ISDN BRI U interface card . . . . .             | 78 |
| Figure 35 | T1/E1 CSU/DSU WAN interface card . . . . .      | 80 |
| Figure 36 | Quad T1/E1 CSU/DSU WAN interface card . . . . . | 82 |
| Figure 37 | Single V.35/X.21 WAN interface card . . . . .   | 83 |
| Figure 38 | Dual V.35 WAN interface card . . . . .          | 86 |
| Figure 39 | HSSI WAN interface card . . . . .               | 88 |
| Figure 40 | V.90 modem interface card . . . . .             | 90 |

---

## Tables

---

|          |                                                                   |    |
|----------|-------------------------------------------------------------------|----|
| Table 1  | Items shipped with the Contivity 2700 .....                       | 21 |
| Table 2  | Interfaces and cables for the Contivity 2700 .....                | 30 |
| Table 3  | Power cord requirements .....                                     | 32 |
| Table 4  | Front panel LED indicators .....                                  | 34 |
| Table 5  | LED indicators on the system 10/100BASE Ethernet port .....       | 35 |
| Table 6  | LED indicators on the 10/100BASE Ethernet interface card .....    | 36 |
| Table 7  | LED indicators on the 1000BASE-T Ethernet interface card .....    | 37 |
| Table 8  | LED indicators on the 1000BASE-SX Ethernet interface card .....   | 37 |
| Table 9  | LED indicators on the ADSL WAN interface card .....               | 38 |
| Table 10 | LED indicators on the T1/E1 CSU/DSU WAN interface card .....      | 39 |
| Table 11 | LED indicators on the quad T1/E1 CSU/DSU WAN interface card ..... | 40 |
| Table 12 | LED indicators on the single V.35/X.21 WAN interface card .....   | 41 |
| Table 13 | Supported option cards for the Contivity 2700 .....               | 61 |
| Table 14 | Physical, electrical, and environmental specifications .....      | 69 |
| Table 15 | 10/100BASE Ethernet port pinouts .....                            | 71 |
| Table 16 | Multiple DB9 and DB25 connector pinouts .....                     | 71 |
| Table 17 | Modem cable pinouts .....                                         | 72 |
| Table 18 | 1000BASE-T Ethernet port pinouts .....                            | 76 |
| Table 19 | ADSL cable pinouts .....                                          | 78 |
| Table 20 | ISDN BRI S/T cable pinouts .....                                  | 79 |
| Table 21 | ISDN BRI U cable pinouts .....                                    | 79 |
| Table 22 | T1/E1 CSU/DSU cable pinouts for crossover connection .....        | 81 |
| Table 23 | T1/E1 CSU/DSU cable pinouts for straight-through connection ..... | 81 |
| Table 24 | V.35 cable pinouts .....                                          | 83 |
| Table 25 | X.21 cable pinouts .....                                          | 85 |
| Table 26 | DB26-to-V.35 cable pinouts .....                                  | 87 |
| Table 27 | T3 cable pinouts .....                                            | 88 |
| Table 28 | V.90 modem cable pinouts .....                                    | 90 |



---

## Preface

---

The Contivity\* 2700 is part of the Nortel Networks\* Contivity Secure IP Services Gateway product family. Contivity Secure IP Services Gateways support secure, reliable IP VPNs in a single, integrated hardware device. Throughout this guide, the Contivity 2700 is also referred to as *the gateway*.

This guide provides instructions on how to install the Contivity 2700 in an equipment rack and how to install and replace option cards and dual inline memory modules (DIMMs). This guide also provides some initial configuration information and includes technical specifications for the Contivity 2700.

For complete information about configuring and monitoring the Contivity 2700, see the documentation on the software CD. (For information about Contivity documentation, see [“Related publications” on page 17.](#))

## Before you begin

This guide is intended for qualified service personnel who are installing the Contivity 2700 for the first time or who need to install or replace any of the following field replaceable units (FRUs):

- LAN, WAN, and serial option cards
- Hardware encryption accelerator cards
- Dual inline memory modules (DIMMs)

Before you install the Contivity 2700, make sure that all network wiring has been installed on the premises using standard cable system practices.

## Text conventions

This guide uses the following text conventions:

|                          |                                                                                                                                                                            |
|--------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <b>bold Courier text</b> | Indicates command names and options and text that you need to enter.<br>Example: Use the <b>show health</b> command.<br>Example: Enter <b>terminal paging {off   on}</b> . |
| <i>italic text</i>       | Indicates new terms and book titles.                                                                                                                                       |
| plain Courier text       | Indicates system output, for example, prompts and system messages.<br>Example: File not found.                                                                             |
| separator ( > )          | Shows menu paths.<br>Example: Choose Status > Health Check.                                                                                                                |

## Acronyms

This guide uses the following acronyms:

|       |                                    |
|-------|------------------------------------|
| ADSL  | asymmetric digital subscriber line |
| AIS   | alarm indication signal            |
| CSU   | channel service unit               |
| DIMM  | dual inline memory module          |
| DSU   | digital service unit               |
| DTE   | data terminal equipment            |
| HSSI  | High Speed Serial Interface        |
| IP    | Internet Protocol                  |
| IPsec | IP Security                        |
| LAN   | local area network                 |
| LED   | light emitting diode               |
| LOS   | loss of signal                     |

|     |                                   |
|-----|-----------------------------------|
| OOF | out of frame                      |
| PCI | peripheral component interconnect |
| PDN | public data network               |
| URL | uniform resource locator          |
| VPN | virtual private network           |
| WAN | wide area network                 |

## Related publications

For complete information about configuring, monitoring, and managing the Contivity 2700, refer to the following publications (included on the software CD):

- Release notes provide the latest information, including brief descriptions of the new features, problems fixed in this release, and known problems and workarounds.
- *Configuring Basic Features for the Contivity Secure IP Services Gateway* introduces the product and provides information about initial setup and configuration.
- *Configuring Authentication and Certificates for the Contivity Secure IP Services Gateway* provides instructions for configuring authentication services and digital certificates.
- *Configuring Firewalls, Filters, NAT, and QoS for the Contivity Secure IP Services Gateway* provides instructions for configuring the Contivity Stateful Firewall, NAT, and Contivity interface and tunnel filters.
- *Configuring Advanced Features for the Contivity Secure IP Services Gateway* provides instructions for configuring the tunneling protocols IPsec, L2TP, PPTP, and L2F, as well as instructions for configuring physical interfaces, PPP, frame relay, PPPoE, and advanced WAN settings.
- *Configuring Routing for the Contivity Secure IP Services Gateway* provides instructions for configuring RIP, OSPF, and VRRP, as well as instructions for configuring ECMP, routing policy services, and client address redistribution (CAR).
- *Reference for the Contivity Secure IP Services Gateway Command Line Interface* provides syntax, descriptions, and examples for the commands that you can use from the command line interface.

- *Managing and Troubleshooting the Contivity Secure IP Services Gateway* provides information about system administrator tasks such as backup and recovery, file management, and upgrading software, and instructions for monitoring gateway status and performance. Also, provides troubleshooting information and interoperability considerations.

You can print selected technical manuals and release notes free, directly from the Internet. Go to the [www.nortelnetworks.com/documentation](http://www.nortelnetworks.com/documentation) URL. Find the product for which you need documentation. Then locate the specific category and model or version for your hardware or software product. Use Adobe\* Acrobat Reader\* to open the manuals and release notes, search for the sections you need, and print them on most standard printers. Go to Adobe Systems at the [www.adobe.com](http://www.adobe.com) URL to download a free copy of the Adobe Acrobat Reader.

## How to get help

If you purchased a service contract for your Nortel Networks product from a distributor or authorized reseller, contact the technical support staff for that distributor or reseller for assistance.

If you purchased a Nortel Networks service program, contact Nortel Networks Technical Support. To obtain contact information online, go to the [www.nortelnetworks.com/cgi-bin/comments/comments.cgi](http://www.nortelnetworks.com/cgi-bin/comments/comments.cgi) URL, then click on Technical Support.

From the Technical Support page, you can open a Customer Service Request online or find the telephone number for the nearest Technical Solutions Center. If you are not connected to the Internet, you can call 1-800-4NORTEL (1-800-466-7835) to learn the telephone number for the nearest Technical Solutions Center.

An Express Routing Code (ERC) is available for many Nortel Networks products and services. When you use an ERC, your call is routed to a technical support person who specializes in supporting that product or service. To locate an ERC for your product or service, go to the <http://www.nortelnetworks.com/help/contact/erc/index.html> URL.

---

# Chapter 1

## Installing the Contivity 2700 chassis

---

This chapter describes how to install the Contivity 2700 chassis.

---



**Note:** Before you install the chassis, make sure that all network wiring has been installed on the premises using standard cable system practices.

---

This chapter contains the following topics:

| Topic                                                   | Page               |
|---------------------------------------------------------|--------------------|
| <a href="#">Description of the Contivity 2700</a>       | <a href="#">19</a> |
| <a href="#">Preparing to install the Contivity 2700</a> | <a href="#">20</a> |
| <a href="#">Installing the chassis</a>                  | <a href="#">23</a> |


## Description of the Contivity 2700

The Contivity 2700 enables scalable, secure, and robust IP VPNs across the public data network (PDN). The Contivity 2700 uses the infrastructure of the Internet to replace traditional remote access gear.

The Contivity 2700 provides routing, firewall, bandwidth management, encryption, authentication, and data integrity services to ensure secure tunneling across IP networks and the Internet. An individual user or group of users can be associated with a set of attributes that provide custom access to an extranet.

Figure 1 shows the front view of the Contivity 2700.

**Figure 1** Front view of the Contivity 2700

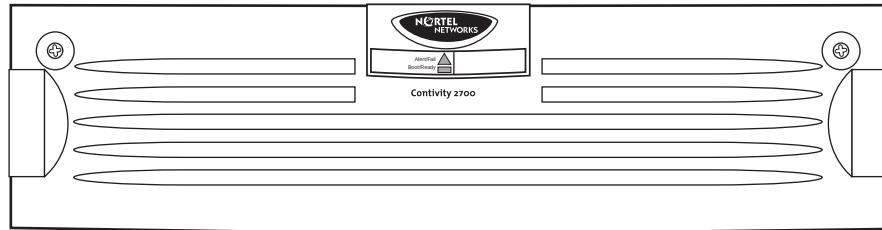

CS260001B

The Contivity 2700 chassis provides the following:

- One 10/100 Ethernet\* LAN port on the base system
- One serial port for out-of-band management of the Contivity 2700
- Four expansion PCI slots that can contain interface cards and hardware encryption accelerator cards
- One 10/100 Ethernet interface card installed in PCI slot 4
- 256 MB memory upgradable to 512 MB total

## Preparing to install the Contivity 2700

Before you begin the installation, verify that:

- Your shipment is complete and undamaged.
- You have the cables, tools, and other equipment that you need.
- Your installation site meets the physical, electrical, and environmental requirements.

The sections that follow provide information to help you prepare for installation.

## Shipment contents

In addition to the gateway and this guide, the shipping container for the Contivity 2700 contains a number of hardware accessories and other items.



**Note:** Unless you specifically ordered a power cable, no power cable is shipped with the Contivity 2700.

[Table 1](#) lists the hardware accessories and other items shipped with the Contivity 2700.

**Table 1** Items shipped with the Contivity 2700

| Quantity | Item                                             | Description                                                                                                                           |
|----------|--------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------|
| 1        | Rack mount shelf                                 | Used to support the chassis in an equipment rack                                                                                      |
| 4        | 10-32 panhead screws                             | Secures the rack mount shelf to the equipment rack and the chassis to the shelf                                                       |
| 4        | 10-32 panhead cage nuts                          | Used only if the equipment rack does not have threaded rail holes                                                                     |
| 4        | Rubber feet                                      | Used to install the chassis on a surface                                                                                              |
| 1        | Antistatic wrist strap                           | Used to direct the discharge of static electricity from your body to the chassis to prevent damage to sensitive electronic components |
| 1        | Molded serial cable DB9/DB25-to-DB9/DB25         | Used to connect the Contivity 2700 to a PC or a local terminal                                                                        |
| 1        | <i>Installing the Contivity 2700</i> (this book) | Provides instructions for installing the chassis and hardware options                                                                 |
| 1        | Recovery diskette                                | Used to restore the software image and file system                                                                                    |
| 1        | Contivity software kit                           | Contains Contivity Secure IP Services Gateway software and documentation on CD                                                        |
| 1        | Contivity client kit                             | Contains Contivity VPN Client software and documentation on CD                                                                        |

Inspect all items for shipping damage. If you detect any damage, do not install the Contivity 2700. Call the Nortel Networks Technical Solutions Center in your area (see [“How to get help” on page 18](#)).

## Additional equipment

You may need items that are not included in the Contivity 2700 shipping container. Before you begin the installation, make sure that you have all the cables, tools, and other equipment that you need.

### Cables

You will need cables that are not included in the Contivity 2700 shipping container. For information about which cables are shipped and which ones you can order, see [“Connecting communications cables” on page 30](#). If you do not have the proper cables, contact your network administrator.

### Hardware for mounting the chassis in an equipment rack

To install the Contivity 2700 in an equipment rack, you need a Phillips screwdriver and an equipment rack that meets the following specifications:

- Heavy-duty steel construction
- Width of 19 in. (48.26 cm) and depth of 24 in. (60.96 cm)
- Electronic Industries Association (EIA) standard hole-spacing

If the rack does not have threaded rail holes, you must use the cage nuts shipped with the Contivity 2700.

## Site requirements

The installation site must provide sufficient free space around the Contivity 2700 to ensure proper ventilation and access for servicing. For information about the physical, electrical, and environmental requirements for the Contivity 2700, see [“Chassis specifications” on page 69](#).

## Installing the chassis

To install the Contivity 2700, do one of the following:


- Position the chassis on a flat, sturdy, horizontal surface.
- Mount the chassis in a standard equipment rack (see [“Installing the chassis in an equipment rack” on page 24](#)).

### Installing the chassis on a flat surface

If you decide to place the Contivity 2700 on a flat surface, make sure that the surface is large enough for the gateway and sturdy enough to support the combined weight of the Contivity 2700 and the cables that you attach to it.

The Contivity 2700 accessory kit includes four rubber feet that can be attached to the bottom of the gateway. [Figure 2](#) shows the placement of these rubber feet.

**Figure 2** Placement of rubber feet on the bottom of the chassis

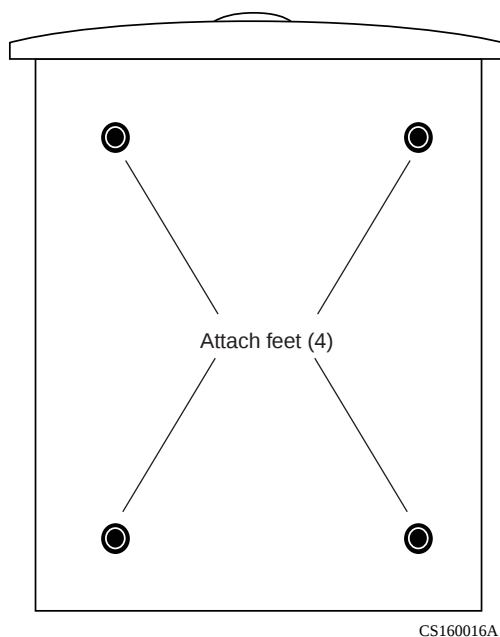

## Installing the chassis in an equipment rack

To mount the Contivity 2700 in an equipment rack, you need the following equipment:

- Standard 19-inch equipment rack
- 4 screws (supplied with the chassis)
- 4 cage nuts (supplied with the chassis) if the rack does not have threaded rail holes
- #2 Phillips screwdriver

### Rack-mount recommendations

When you mount the chassis in the rack, observe the following standard recommendations:


- The maximum recommended ambient temperature is 40°C (104°F). Make sure that the internal temperature of the rack does not exceed 40°C (104°F).
- Do not block the power supply vents or otherwise restrict air flow when installing the chassis in a rack.
- Stabilize your rack so that it does not tip over under the weight of the gateway and other devices.
- Make sure that the electrical branch circuits can handle the Contivity 2700 and other units in the rack before you install and turn on the gateway.
- Maintain a reliable earth-ground path in the rack system. The gateway is intended to connect to an earth ground.

### Attaching the shelf in the equipment rack

The Contivity 2700 ships with a rack-mount shelf to support the chassis in the equipment rack.


To attach the shelf to the inside of the equipment rack:

- 1 If the holes in the rack's vertical supports are not threaded, attach a cage nut in four locations at the front of the rack ([Figure 3](#)).

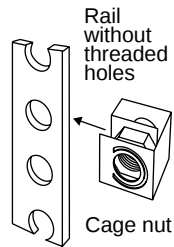**Figure 3** Attaching the cage nuts to the rack

CS260003A

- 2 Position the rack-mount shelf inside the rack as shown in [Figure 4](#).
- 3 Align the holes in the shelf with holes in the front of the rack.

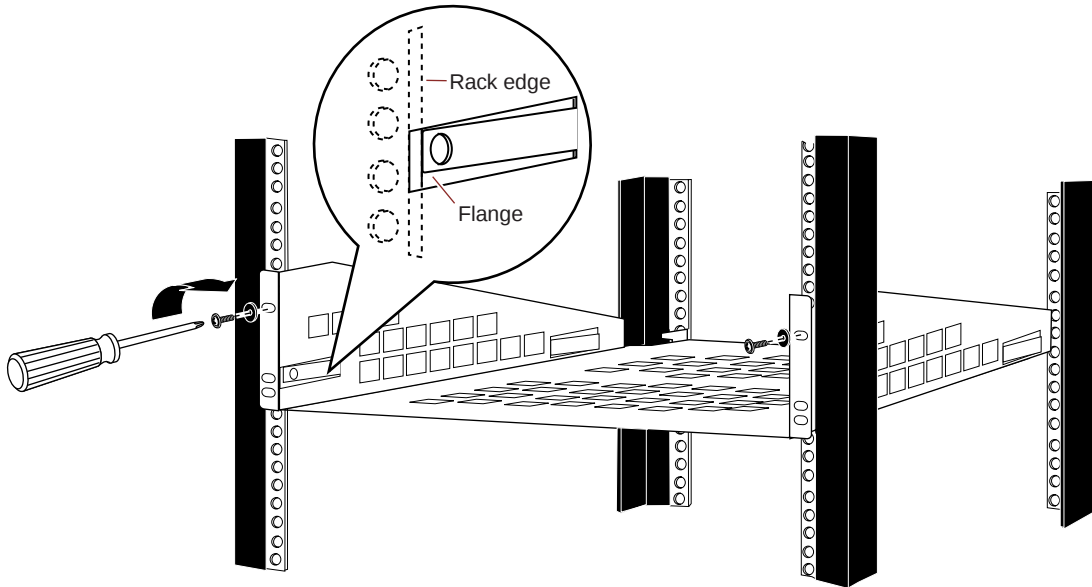**Figure 4** Installing the shelf in the equipment rack

CS260003A

- 4 Make sure that the support flange snaps into place ([Figure 4](#)).
- 5 Insert one of the supplied panhead screws through the top hole on each side of the shelf into the hole in the rack and tighten the screws ([Figure 4](#)).


## Mounting the chassis in the equipment rack

Nortel Networks recommends that two people install the chassis in the rack.

To install the Contivity 2700 in the equipment rack:

- 1 Set the Contivity 2700 on the rack-mount shelf.
- 2 Remove the front bezel from the Contivity 2700 (Figure 5).
  - a Using the Phillips screwdriver, turn each of the 2 screws on the front bezel a quarter turn counterclockwise.

**Figure 5** Removing the front bezel

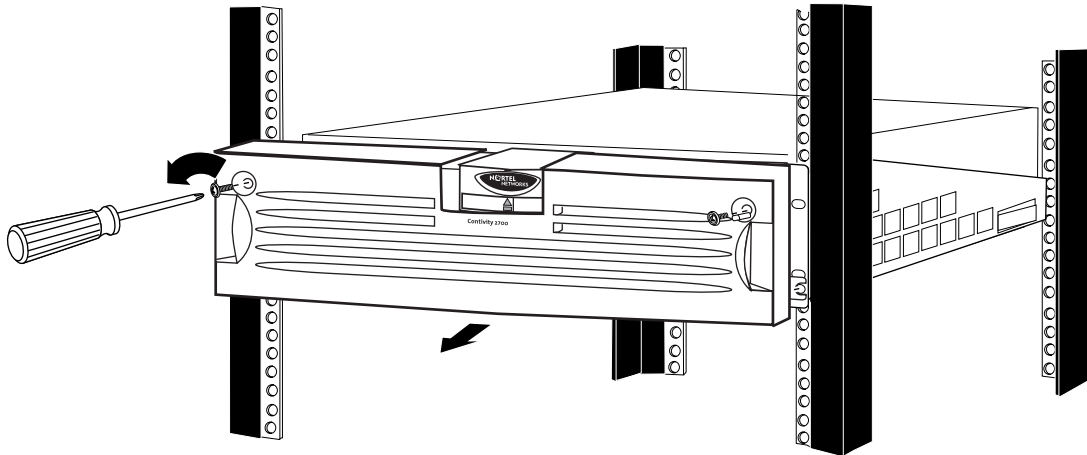

CS260015B

- b Grip the two handles and firmly pull the bezel toward you to unsnap it from the chassis.




**Caution:** Do not use the piece with the Nortel Networks logo and the LEDs as a handle.

The first few times that you remove the front bezel, it may be somewhat difficult to remove because the ball studs and socket clips are new.

- 3 Insert one of the supplied panhead screws through the bottom hole on each side of the shelf into the hole in the rack and tighten the screws (see [Figure 4 on page 25](#)).
- 4 Replace the front bezel ([Figure 6](#)).
  - a Hold the two handles on the bezel and push it onto the chassis.
  - b Using the Phillips screwdriver, tighten the 2 screws to secure the bezel to the chassis.

**Figure 6** Replacing the front bezel

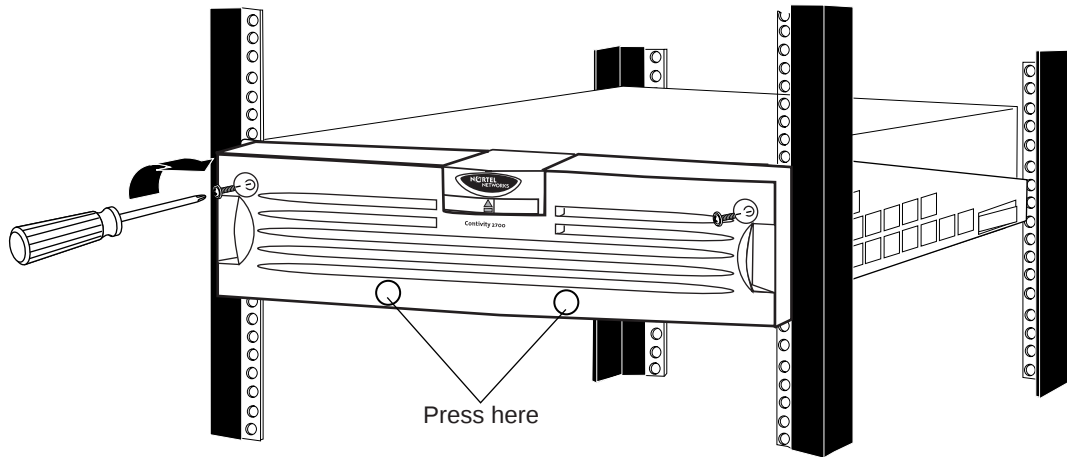

CS260005B



---

# Chapter 2

## Cabling the gateway and turning the power on

---

This chapter provides information about how to connect communications cables and the power cord to the Contivity 2700.

---



**Caution:** Connect the cables to the built-in Ethernet port and to the interfaces on the option cards installed in the Contivity 2700 before you plug the power cord into the outlet.

---

This chapter contains the following topics:

| Topic                                               | Page               |
|-----------------------------------------------------|--------------------|
| <a href="#">Connecting communications cables</a>    | <a href="#">30</a> |
| <a href="#">Connecting the power cord</a>           | <a href="#">32</a> |
| <a href="#">Verifying a successful installation</a> | <a href="#">33</a> |
| <a href="#">Understanding the LEDs</a>              | <a href="#">34</a> |

---



**Caution:** Cabling for all WAN, LAN, and serial connections is not to be routed outside the building environment.

---

# Connecting communications cables

Gather the cables that you will attach to the Contivity 2700.

[Table 2](#) lists the system ports and the ports provided on the optional interface cards that you can install in the Contivity 2700. The table also indicates whether you can obtain cables for the ports from Nortel Networks.

**Table 2** Interfaces and cables for the Contivity 2700

| Interface                    | Cable available from Nortel Networks |                    | Contact supplier |
|------------------------------|--------------------------------------|--------------------|------------------|
|                              | Included                             | Ordered separately |                  |
| 10/100 Ethernet system port  |                                      |                    | X                |
| Serial port                  | X                                    |                    |                  |
| 10/100BASE Ethernet          |                                      |                    | X                |
| 1000BASE-T Ethernet (copper) |                                      |                    | X                |
| 1000BASE-SX Ethernet (fiber) |                                      | X <sup>1</sup>     |                  |
| ADSL WAN                     | X                                    |                    |                  |
| ISDN BRI                     |                                      |                    | X                |
| T1/E1 CSU/DSU WAN            |                                      |                    | X                |
| Quad T1/E1 CSU/DSU WAN       |                                      |                    | X                |
| Single V.35/X.21 WAN         |                                      | X <sup>2</sup>     |                  |
| Dual V.35 WAN                | X                                    |                    |                  |
| V.90 modem                   | X                                    |                    |                  |
| HSSI WAN                     | X                                    |                    |                  |


1 Order either the LC-to-LC cable or the LC-to-SC cable.

2 Order either the V.35 cable or the X.21 cable.

For information about the connectors and cable pinouts, see [Appendix A, “Technical specifications.”](#)

[Figure 7](#) shows the back of the Contivity 2700. All interface cables and the power cord attach to the rear of the gateway.

**Figure 7** Rear view of the Contivity 2700

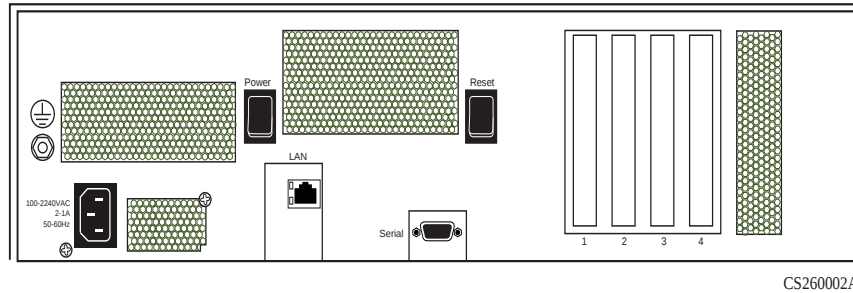

Connect the interface cables to the Contivity 2700 in this order:

- 1** Connect the 10/100BASE RJ-45 cable to the built-in 10/100BASE Ethernet LAN port on the gateway (see [Figure 7 on page 31](#)).
- 2** If you plan to connect a terminal or PC to the gateway, connect the serial cable shipped with the Contivity 2700 to the serial port (see [Figure 7 on page 31](#)).
- 3** Connect all other cables to the ports on the installed interface cards.

If you ordered optional interface cards, connect the cables for these interfaces to the ports.

## Connecting the power cord

You must order the power cord for the Contivity 2700 separately.



**Warning:** Do not modify or use the AC power cord if it is not the exact type that is required for your power outlet.

The power cord must meet the requirements described in [Table 3](#).

**Table 3** Power cord requirements

| Requirement                 | Description                                                                                                                                                                            |
|-----------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Current rating              | The power cord must be rated for the available AC voltage and must have a current rating that is at least 125 percent of the gateway's current rating (2 A @ 100 VAC or 1A @ 220 VAC). |
| Certification               | The power cord must have certification marks from an acceptable regional agency.                                                                                                       |
| Cord length and flexibility | The power cord must be less than 4.5 meters (14.7 feet) long. It must be a flexible HAR (harmonized) cord or VDE-certified cordage to comply with the gateway's safety certifications. |
| Power supply connector      | The connector that you plug into the AC receptacle on the gateway must be an IEC 320, Sheet C13 female.                                                                                |
| Wall outlet connector       | The power cord must terminate in a male plug with appropriate grounding.                                                                                                               |

To connect the power cord and turn on the system power:

- 1 Connect the power cord to the AC receptacle on the back of the gateway (see [Figure 7 on page 31](#)).
- 2 Connect the power cord to the power outlet.



**Caution:** You should protect the Contivity 2700 by plugging it into a surge suppressor.

- 3 Press and release the power switch on the rear of the Contivity 2700 (see [Figure 7 on page 31](#)) and wait for the gateway to boot.

## Verifying a successful installation

After you connect the gateway to the power source and turn it on, you can verify a successful installation by checking the LEDs on the front panel ([Figure 8](#)).

The following sequence of LEDs should occur:

- 1 The power LED (the Nortel Networks logo) lights blue.
- 2 As the gateway boots, the Boot/Ready LED lights yellow.
- 3 When the boot process completes successfully, the Boot/Ready LED lights green, indicating that the gateway is operational.
- 4 The Alert/Fail LED lights yellow because the gateway is not configured.

For a newly installed Contivity 2700, a yellow Alert/Fail LED does not indicate an alarm condition. After you configure the management IP address on the gateway, the Alert/Fail LED turns off. (See [Chapter 3, “Configuring the management IP interface,”](#) on page 43.)

If the LEDs on the front panel light in this sequence, your installation is successful. If the LEDs do not light in this sequence, check that the bezel is on the gateway and that the power cord is properly attached to the power supplies (see [“Connecting the power cord”](#) on page 32).

If the Contivity 2700 still does not boot, contact your local Nortel Networks Technical Solutions Center (see [“How to get help”](#) on page 18).

# Understanding the LEDs

This section describes the LEDs on the front panel of the Contivity 2700 and on the interface cards that have LEDs. You can confirm that the LAN and WAN interfaces are cabled properly by examining the LEDs.

## Front panel LEDs

The front panel of the Contivity 2700 has a lighted Nortel Networks logo and two LEDs (Figure 8). These LEDs indicate the status of the Contivity 2700.

**Figure 8** Front panel LEDs

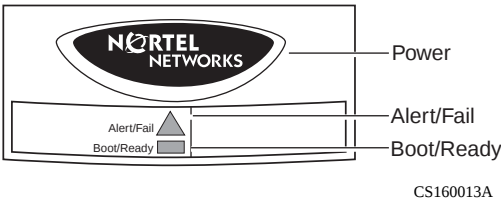


Table 4 describes the LEDs on the Contivity 2700 front panel.

**Table 4** Front panel LED indicators

| LED                          | Indicator | Description                                                                                                                                                                 |
|------------------------------|-----------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Power (Nortel Networks logo) | On        | The gateway is receiving AC power.                                                                                                                                          |
|                              | Off       | The gateway is not receiving AC power.                                                                                                                                      |
| Alert/Fail                   | Yellow    | A non-fatal alarm condition exists. The yellow alert condition is described in the health check display.                                                                    |
|                              | Red       | A serious alarm condition exists that requires attention. A red alert usually indicates a hardware error. The red alert condition is described in the health check display. |
| Boot/Ready                   | Yellow    | The gateway is booting and is in a non-ready state.                                                                                                                         |
|                              | Green     | The boot process has completed successfully and the gateway has reached a state of readiness.                                                                               |

For complete information about the health check, event log, and system log, see *Managing and Troubleshooting the Contivity Secure IP Services Gateway*.

## LEDs on the system 10/100BASE Ethernet port

Figure 9 shows the LEDs for the 10/100BASE Ethernet port located on the rear of the Contivity 2700.

**Figure 9** LEDs on the system LAN port

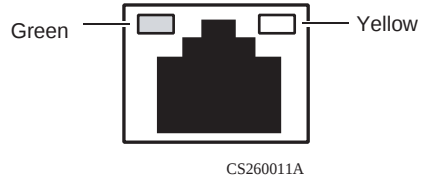


Table 5 describes the LEDs on the system 10/100BASE Ethernet port.

**Table 5** LED indicators on the system 10/100BASE Ethernet port

| LED    | Indicator | Description                                                                                                       |
|--------|-----------|-------------------------------------------------------------------------------------------------------------------|
| Green  | On        | The LAN port is operating at 100 Mb/s.                                                                            |
|        | Off       | The LAN port is operating at 10 Mb/s.                                                                             |
| Yellow | On        | The cable connections between the LAN port and the hub are good.                                                  |
|        | Off       | The cable connections between the LAN port and the hub are faulty.                                                |
|        | Flashing  | The LAN port is sending or receiving network data. The frequency of the flashes increases with increased traffic. |

# 10/100BASE Ethernet interface card LEDs

Figure 10 shows the LEDs on the 10/100BASE Ethernet interface card.

**Figure 10** LEDs on the 10/100BASE Ethernet interface card

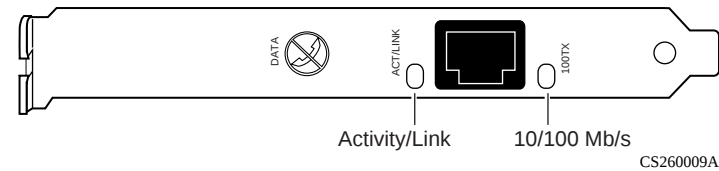


Table 6 describes the LEDs on the 10/100BASE Ethernet interface card.

**Table 6** LED indicators on the 10/100BASE Ethernet interface card

| LED      | Indicator                      | Description                                                                                                   |
|----------|--------------------------------|---------------------------------------------------------------------------------------------------------------|
| ACT/LINK | Steady Green or Flashing Green | The card is sending or receiving network data. The frequency of the flashes increases with increased traffic. |
|          | Off                            | The card is not sending or receiving data.                                                                    |
| 10/100TX | Green                          | The port is operating at 100 Mb/s.                                                                            |
|          | Off                            | The port is operating at 10 Mb/s.                                                                             |

# 1000BASE-T Ethernet interface card LEDs

Figure 11 shows the LEDs on the 1000BASE-T Ethernet interface card.

**Figure 11** LEDs on the 1000BASE-T Ethernet interface card

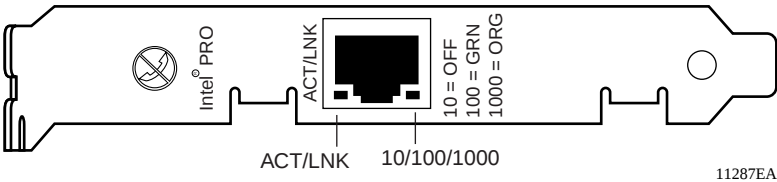


Table 7 describes the LEDs on the 1000BASE-T Ethernet interface card.

**Table 7** LED indicators on the 1000BASE-T Ethernet interface card

| LED         | Indicator      | Description                                        |
|-------------|----------------|----------------------------------------------------|
| ACT/LNK     | Green steady   | The port is connected to a valid link partner.     |
|             | Green flashing | The LAN port is sending or receiving network data. |
|             | Off            | The port is not linked to a valid partner.         |
| 10/100/1000 | Off            | The LAN port is operating at 10 Mb/s.              |
|             | Green          | The LAN port is operating at 100 Mb/s.             |
|             | Orange         | The LAN port is operating at 1000 Mb/s.            |

## 1000BASE-SX Ethernet interface card LEDs

Figure 12 shows the LEDs on the 1000BASE-SX Ethernet interface card.

**Figure 12** LEDs on the 1000BASE-SX Ethernet interface card

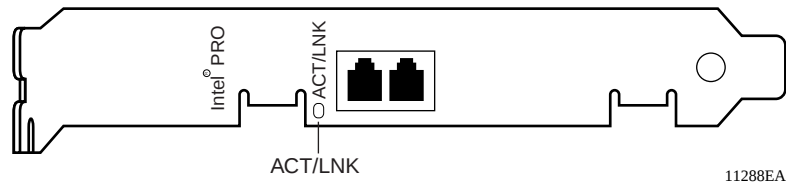


Table 8 describes the LED on the 1000BASE-SX Ethernet interface card.


**Table 8** LED indicators on the 1000BASE-SX Ethernet interface card

| LED     | Indicator      | Description                                        |
|---------|----------------|----------------------------------------------------|
| ACT/LNK | Green steady   | The port is connected to a valid link partner.     |
|         | Green flashing | The LAN port is sending or receiving network data. |
|         | Off            | The port is not linked to a valid partner.         |

# ADSL WAN interface card LEDs

Figure 13 shows the LEDs on the ADSL WAN interface card.

**Figure 13** LEDs on the ADSL WAN interface card

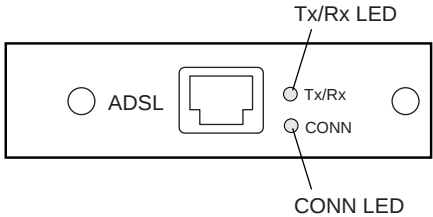

10972EA

Table 9 describes the LEDs on the ADSL WAN interface card.

**Table 9** LED indicators on the ADSL WAN interface card

| CONN LED       | Tx/Rx LED      | Description                                                                                   |
|----------------|----------------|-----------------------------------------------------------------------------------------------|
| Steady green   | Steady green   | The ADSL interface card is not initialized; the software driver is not installed.             |
| Off            | Off            | The ADSL interface card is initialized, but has not established a link with the ADSL network. |
| Flashing green | Off            | The ADSL interface card is attempting to establish a link with the ADSL network.              |
| Steady green   | Off            | The ADSL interface card has established a link with the ADSL network.                         |
| Steady green   | Flashing green | The ADSL interface card is sending or receiving network data. (The LED may be dim.)           |

## T1/E1 CSU/DSU WAN interface card LEDs

Figure 14 shows the LEDs on the T1/E1 CSU/DSU WAN interface card.

**Figure 14** LEDs on the T1/E1 CSU/DSU WAN interface card

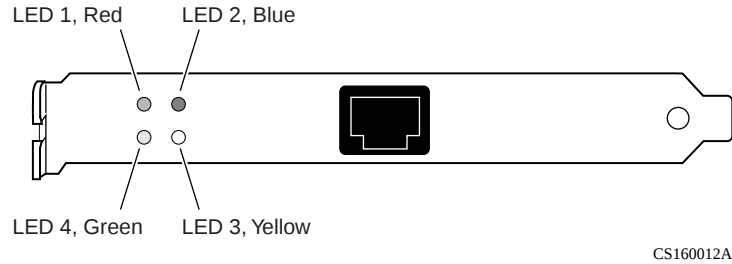


Table 10 describes the LEDs on the T1/E1 CSU/DSU WAN interface card.

**Table 10** LED indicators on the T1/E1 CSU/DSU WAN interface card

| LED   | Indicator | Description                                                                                                         |
|-------|-----------|---------------------------------------------------------------------------------------------------------------------|
| LED 1 | Red       | Red alarm LED is lit when a loss-of-signal (LOS) or out-of-frame (OOF) condition is detected on the receive signal. |
| LED 2 | Blue      | Blue alarm LED is lit when receiving an upstream failure denoted by an alarm indication signal (AIS).               |
| LED 3 | Yellow    | Yellow alarm LED is lit when the far-end equipment is in the red alarm condition.                                   |
| LED 4 | Green     | Normal operation.                                                                                                   |

# Quad T1/E1 CSU/DSU WAN interface card LEDs

Figure 15 shows the LEDs on the quad T1/E1 CSU/DSU WAN interface card.

**Figure 15** LEDs on the quad T1/E1 CSU/DSU WAN interface card

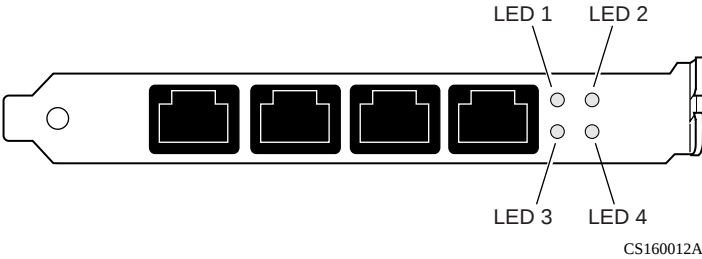


Table 11 describes the LEDs on the quad T1/E1 CSU/DSU WAN interface card.

**Table 11** LED indicators on the quad T1/E1 CSU/DSU WAN interface card

| LED   | Indicator | Description                                                     |
|-------|-----------|-----------------------------------------------------------------|
| LED 1 | Off       | Port 1 is disabled.                                             |
|       | On        | Port 1 is enabled and operating normally.                       |
|       | Flashing  | Port 1 is enabled and in an alarm state (red, yellow, or blue). |
| LED 2 | Off       | Port 2 is disabled.                                             |
|       | On        | Port 2 is enabled and operating normally.                       |
|       | Flashing  | Port 2 is enabled and in an alarm state (red, yellow, or blue). |
| LED 3 | Off       | Port 3 is disabled.                                             |
|       | On        | Port 3 is enabled and operating normally.                       |
|       | Flashing  | Port 3 is enabled and in an alarm state (red, yellow, or blue). |
| LED 4 | Off       | Port 4 is disabled.                                             |
|       | On        | Port 4 is enabled and operating normally.                       |
|       | Flashing  | Port 4 is enabled and in an alarm state (red, yellow, or blue). |

## Single V.35/X.21 WAN interface card LEDs

Figure 16 shows the LEDs on the single V.35/X.21 WAN interface card.

**Figure 16** LEDs on the single V.35/X.21 WAN interface card

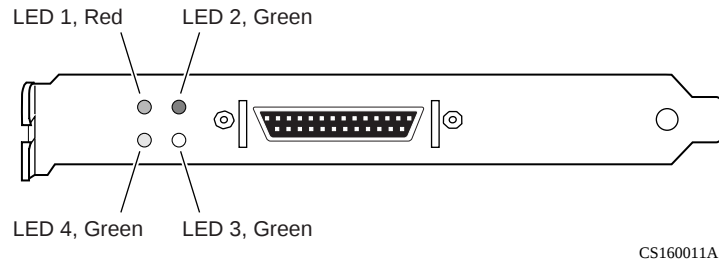


Table 12 describes the LEDs on the single V.35/X.21 WAN interface card.

**Table 12** LED indicators on the single V.35/X.21 WAN interface card

| LED   | Indicator | Description                                                                                        |
|-------|-----------|----------------------------------------------------------------------------------------------------|
| LED 1 | Red       | No external transmit clock source is available.                                                    |
| LED 2 | Green     | The signals CDC and DSR are on between the DSU and the adapter. LED 2 detects receive link status. |
| LED 3 | Green     | Power to the adapter is on and the onboard microcode is loaded.                                    |
| LED 4 | Green     | Cable is detected.                                                                                 |



---

## Chapter 3

# Configuring the management IP interface

---

This chapter describes how to configure a management IP address, subnet mask, and default gateway address on a newly installed Contivity 2700. After you complete the procedures in this chapter, you will be able to configure and manage the Contivity 2700 using a Web browser from a PC.

You can create the management IP interface on the gateway in one of two ways:

- IP address configuration utility (recommended)

This utility is included on the Contivity software CD. You execute the utility from a PC running on the same subnet as the Contivity 2700.

- Serial interface configuration menu

If you cannot use the IP address configuration utility, you can use the serial interface configuration menu. You must connect a PC or terminal to the serial port on the Contivity 2700.

This chapter contains the following topics:

| Topic                                                      | Page |
|------------------------------------------------------------|------|
| <a href="#">Required information</a>                       | 44   |
| <a href="#">Using the IP address configuration utility</a> | 44   |
| <a href="#">Using the serial interface</a>                 | 47   |
| <a href="#">Testing the configuration</a>                  | 51   |
| <a href="#">Troubleshooting</a>                            | 53   |

## Required information

Before you configure the management interface, collect this information:

- IP address for the management interface  
The management IP address must be accessible from one of the private physical interfaces on the Contivity 2700. For example, if you plan to assign IP address 10.2.3.3 with subnet mask 255.255.0.0 to the private physical interface, the management IP address must reside in the 10.2 network.
- Subnet mask  
The subnet mask specifies which IP addresses are directly reachable on the network and which ones must be routed through a gateway. For example, the IP address 10.2.3.3 with a subnet mask of 255.255.0.0 indicates that all hosts with addresses 10.2.*n.n* are directly reachable.
- Default gateway (optional)  
The default gateway routes packets to destinations for which there is no specific route in the routing table. You can configure a default gateway when you assign the management IP address, or you can configure it at a later time.



**Note:** Write down and save the management IP address. You will need it to configure the Contivity 2700.

---

## Using the IP address configuration utility

To create the initial IP interface on the Contivity Secure IP Services Gateway, Nortel Networks provides the IP address configuration utility on the Contivity server software CD.

### System requirements

To run the IP address configuration utility, your PC must meet the following requirements:

- Windows\* 95, Windows 98, Windows 2000, or Windows NT\*
- Microsoft\* TCP/IP protocol stack

- Located on the same subnet as the Contivity 2700 to be configured
- Operational network connection
- CD-ROM drive

To test the TCP/IP stack, send a ping command to any host.



**Note:** If your environment does not match these requirements, you can use the serial interface to configure the management IP address (see [“Using the serial interface” on page 47](#)).

---

## Running the IP address configuration utility

The IP address configuration utility searches for serial numbers of unconfigured gateways and prompts you to enter the management IP address, subnet mask, and default gateway (optional).

The ExtNetIP.exe program on the Contivity software CD starts the IP address configuration utility. You can copy the utility to your hard disk and execute it from there, or you can execute it from the CD drive.



**Note:** The IP address configuration utility has a Help file called ExtNetIP.hlp that you can display and copy to the hard drive.

---

To run the IP address configuration utility:


- 1 Insert the Contivity software CD into the CD-ROM drive.
- 2 Locate the Tools folder and then locate the ExtNetIP.exe file.  
If you want, copy the file to the hard drive on the CD.
- 3 Double-click on the ExtNetIP.exe icon ([Figure 17](#)).

**Figure 17** Icon for the IP address configuration utility



When the IP address configuration utility finds an unconfigured gateway, it displays a dialog box where you assign the IP address, subnet mask, and default gateway (Figure 18).

**Figure 18** IP address configuration utility dialog box

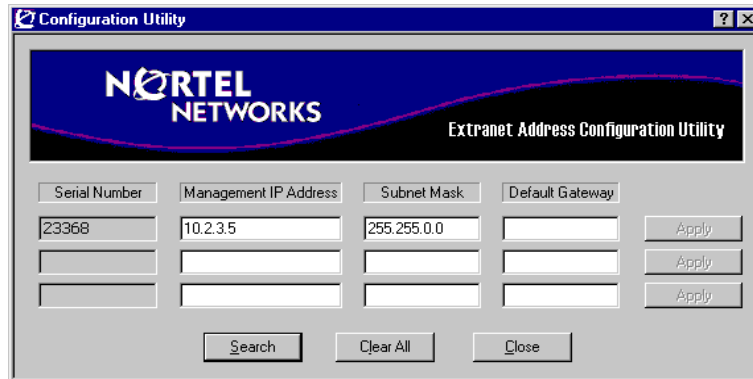

| Serial Number | Management IP Address | Subnet Mask | Default Gateway |       |
|---------------|-----------------------|-------------|-----------------|-------|
| 23368         | 10.2.3.5              | 255.255.0.0 |                 | Apply |
|               |                       |             |                 | Apply |
|               |                       |             |                 | Apply |

Search Clear All Close

The utility automatically displays the serial number of the first unconfigured gateway in the dialog box.

- 4 Assign an appropriate management IP address and subnet mask to the Contivity 2700.

The default gateway address is optional; you can configure it later.

- 5 Click on Apply to configure the management IP address, subnet mask, and, if specified, the default gateway on the Contivity 2700.
- 6 Click on Close.

The IP configuration utility dialog box closes.

- 7 Go to [“Testing the configuration” on page 51](#) to verify that you can access the Contivity 2700 from a Web browser.

For detailed information about configuring and managing the Contivity 2700, refer to the documentation on the Contivity software CD.

## Using the serial interface

You can use the serial interface to assign the Contivity 2700 a management IP address and subnet mask so that you can then use a Web browser for management.



**Note:** Nortel Networks recommends that you use the IP address configuration utility instead of the serial interface to assign the management IP address to the Contivity 2700 (see [“Using the IP address configuration utility” on page 44](#)).

---

To configure the management IP address using the serial interface:

- 1 Turn on the terminal or PC.

The terminal or PC should be configured as follows:

- 9600 baud
- 8 data bits
- 1 stop bit
- No parity
- No flow control

- 2 Connect the serial cable (supplied with the Contivity 2700) from the gateway’s serial port to a terminal or to the communications port on a PC.
- 3 On the PC, start HyperTerminal\* or another terminal emulation program and press Enter.

The Welcome screen appears.

Copyright (c) 1999-2004 Nortel Networks, Inc.

```
Version:           V04_90.215
Creation date:      May 27, 2004, 20:51:06
Date:              05/27/2004
Unit Serial Number: 317563
```

Please enter the administrator's user name:

- 4 Enter the default user name and password.

The factory default user name is *admin* and the default password is *setup*.

Please enter the administrator's user name: **admin**

Please enter the administrator's password: **\*\*\*\*\***

The serial main menu appears.

Main Menu: System is currently in NORMAL mode.

- 1) Interfaces
- 2) Administrator
- 3) Default Private Route Menu
- 4) Default Public Route Menu
- 5) Create A User Control Tunnel (IPsec) Profile
- 6) Restricted Management Mode FALSE
- 7) Allow HTTP Management TRUE
- 8) Firewall Options
- 9) Shutdown
- B) System Boot Options
- P) Configure Serial Port
- C) Controlled Crash
- L) Command Line Interface
- R) Reset System to Factory Defaults
- E) Exit, Save and Invoke Changes

Please select a menu choice (1 - 9,B,P,C,L,R,E):

- 5 Type **1** and press Enter.

The Interface menu appears.

- Interface Menu

- 0) Slot 0, Port 1, Private LAN
  - Interface IP Address =
  - Subnet Mask = 0.0.0.0
  - Speed/Duplex = AutoNegotiate

```
1) Slot 1, Port 1, Public LAN
   IP Address =
   Subnet Mask = 0.0.0.0
   Speed/Duplex = AutoNegotiate
```

R) Return to the Main Menu.

Please select a menu choice:

- 6** Type **0** and press Enter to add the management IP address.

The default settings appear, followed by the prompt for the management IP address. The old management IP address field is blank on a new gateway.

```
0) Slot 0, Port 1, Private LAN
   Interface IP Address =
   Subnet Mask = 0.0.0.0
   Speed/Duplex = AutoNegotiate
```

\* Type 0.0.0.0 to delete.

\* Just type <CR> to skip.

```
Old Management IP Address =
New Management IP Address* =
```

- 7** At the New Management IP Address prompt, type the management IP address and press Enter.

The prompt for the interface IP address appears.

```
Old Interface IP Address =
New Interface IP Address* =
```

- 8** Enter the IP address for the private LAN or press Enter to skip this prompt.

The subnet mask prompt appears.

```
Old Subnet Mask = 0.0.0.0
New Subnet Mask =
```

- 9** At the New Subnet Mask prompt, type the subnet mask for the management IP address and press Enter.

The Speed/Duplex prompt appears.

- 10** Press Enter to leave the speed and duplex settings unchanged.

The Interface menu appears again with the changes you made.

- Interface Menu

- 0) Slot 0, Port 1, Private LAN  
Management IP Address = 47.33.245.66, (Subnet Mask = 255.255.0.0)  
Interface IP Address = 47.33.245.64  
Subnet Mask = 255.255.0.0  
Speed/Duplex = AutoNegotiate
- 1) Slot 1, Port 1, Public LAN  
IP Address =  
Subnet Mask = 0.0.0.0  
Speed/Duplex = AutoNegotiate

R) Return to the Main Menu.

Please select a menu choice:

- 11** Type **R** and press Enter to return to the serial main menu.
- 12** From the serial main menu, type **E** and press Enter to save the new management IP address and mask and to exit the serial menu.
- 13** Go to the next section, [“Testing the configuration,”](#) to verify that you can access the Contivity 2700 from a Web browser.

For detailed information about configuring and managing the Contivity 2700, refer to the documentation on the Contivity software CD.

## Testing the configuration

After you assign a management IP address to the Contivity 2700, start your Web browser to verify that you can access the gateway from the browser.

To manage the Contivity 2700 using the GUI, your PC must be running one of the following browsers:

- Internet Explorer Version 5.5 or later
- Netscape\* Navigator 4.79 or later

To test the management IP address on the Contivity 2700:

- 1 Open a Web browser.
- 2 In the URL field, enter **http://** followed by the management IP address that you assigned to the Contivity 2700.

For example, if the management IP address is 10.2.3.2, enter **http://10.2.3.2**.


If the Welcome screen ([Figure 19](#)) appears, you correctly configured the management IP address for the Contivity 2700.



**Note:** If the Welcome screen does not appear, see [“Troubleshooting” on page 53](#).

---

- 3 Go to *Configuring Basic Features for the Contivity Secure IP Services Gateway* for information about configuring the Contivity 2700.

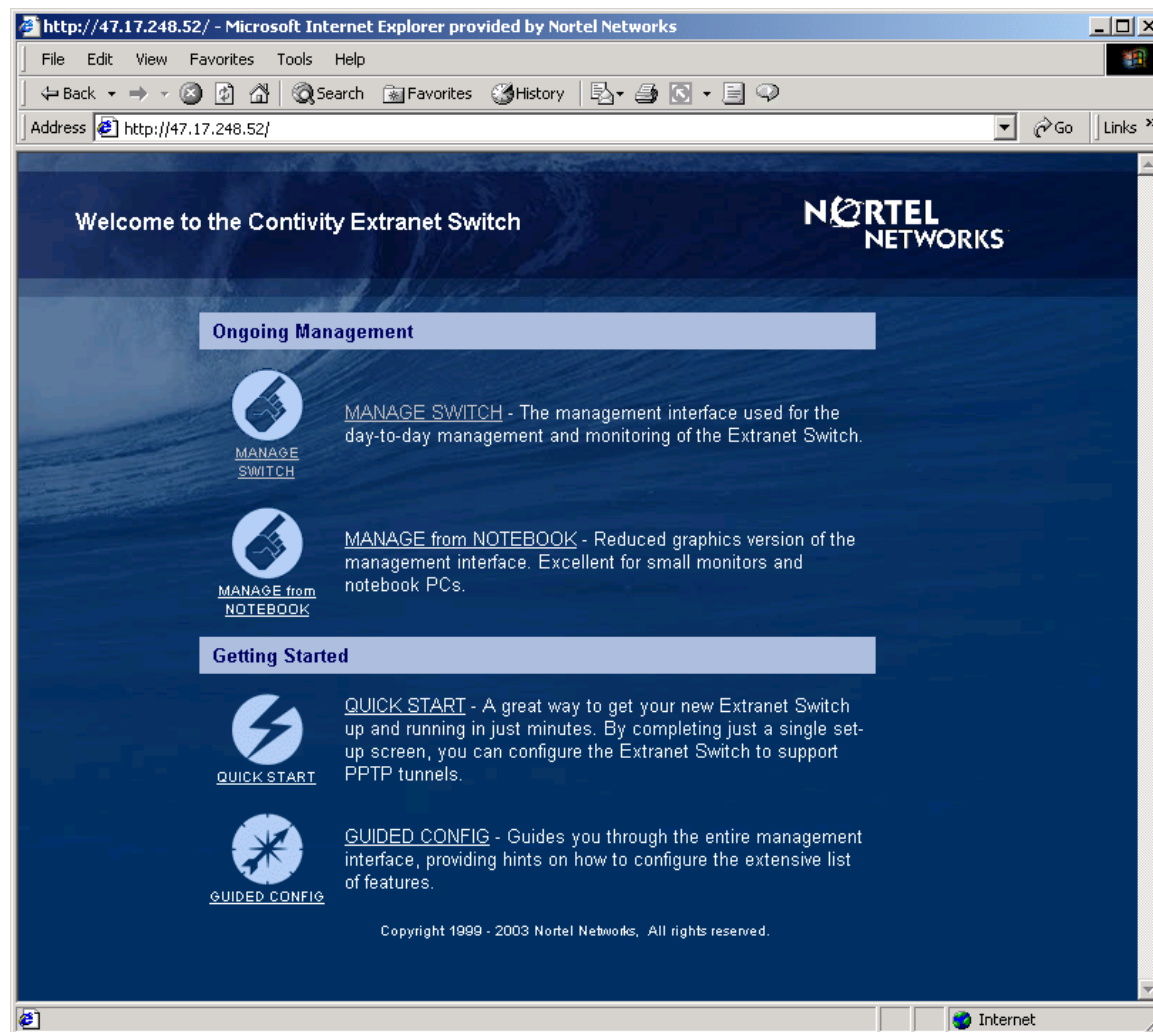**Figure 19** Welcome screen

## Troubleshooting

If you cannot connect to the Contivity 2700 using your browser, check the following items:

- Make sure that you entered the correct IP address in the browser window.
- Type a known URL in the browser window to make sure that your network connection is good.
- Check that the management IP address that you configured is on the same subnet as the physical LAN attached to the gateway.
- Make sure that your PC is running a supported browser, either Internet Explorer Version 5.5 or later, or Netscape Navigator\* 4.79 or later.
- Check the physical connections on the Contivity 2700, especially the LAN cable and the power cord.

If you still cannot connect to the Contivity 2700 using a browser, connect a terminal or PC to the gateway with the serial cable and check the management IP address listed in the serial menu (see [“Using the serial interface” on page 47](#)). Reconfigure the management IP address if necessary.

If you cannot resolve the problem, contact the Nortel Networks Technical Solutions Center closest to you (see [“How to get help” on page 18](#)).



---

## Chapter 4

# Installing option cards and DIMMs

---

This chapter provides instructions on how to install and replace the following field replaceable units (FRUs) in the Contivity 2700:

- LAN, WAN, and serial interface cards
- Hardware encryption accelerator cards
- Dual inline memory modules (DIMMs)

This chapter contains the following topics:

| Topic                                                               | Page               |
|---------------------------------------------------------------------|--------------------|
| <a href="#">Shutting down the system to add or replace hardware</a> | <a href="#">56</a> |
| <a href="#">Removing the front bezel and top cover</a>              | <a href="#">57</a> |
| <a href="#">Attaching the antistatic wrist strap</a>                | <a href="#">60</a> |
| <a href="#">Installing and replacing option cards</a>               | <a href="#">61</a> |
| <a href="#">Installing and replacing DIMMs</a>                      | <a href="#">65</a> |

## Shutting down the system to add or replace hardware

To install or replace an option card or a DIMM, you must first shut down the Contivity 2700 and unplug it.



**Caution:** Shut down the Contivity 2700 as described in this section before you attempt to add or replace an option card or DIMM.

---

To shut down the Contivity 2700:

- 1 Use the Web GUI or the command line interface to shut down the gateway.
  - Web GUI: Choose Admin > Shutdown. Select the option to power off the gateway after shutdown.
  - Command line interface: Use the **reload** command to shut down the system. For example, enter **reload power-off disable-logins "Upgrade hardware"**

For the complete syntax of the **reload** command, see the *Reference for the Contivity Secure IP Services Gateway Command Line Interface*.

- 2 Wait for the system to shut down.
- 3 Disconnect the power cord from the power outlet and then disconnect the cord from the Contivity 2700.

The power receptacle is located on the rear of the Contivity 2700.



**Danger:** Make sure to turn off the Contivity 2700 and unplug the power cord before you attempt to remove or install an option card or DIMM.

---

## Removing the front bezel and top cover

To install option cards or DIMMs, you must remove the front bezel and the top cover from the gateway. To remove the front bezel:


- 1 Shut down the Contivity 2700 using the Web GUI or the command line interface and then unplug it as described in [“Shutting down the system to add or replace hardware” on page 56](#).



**Danger:** Make sure to turn off the Contivity 2700 and unplug it before you attempt to install an option card or DIMM.

- 2 Using a Phillips screwdriver, turn each of the 2 screws on the front bezel a quarter turn counterclockwise ([Figure 20](#)).

**Figure 20** Removing the front bezel

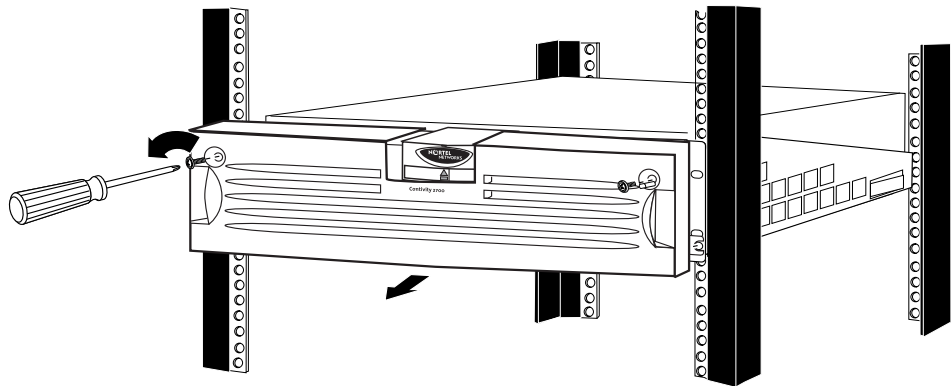

CS260015B

- 3 Grip the two handles and firmly pull the bezel toward you to unsnap it from the chassis.




**Caution:** Do not use the piece with the Nortel Networks logo and the LEDs as a handle.

The first few times that you remove the front bezel, it may be somewhat difficult to remove because the ball studs and socket clips are new.

To remove the top cover:

- 1 If the Contivity 2700 is installed in an equipment rack, remove it from the rack.
  - a At the front of the chassis, remove the 2 panhead screws that secure the bottom of the chassis to the equipment rack.
  - b Remove the Contivity 2700 from the rack-mount shelf and set it on a sturdy surface.
- 2 Using a Phillips screwdriver, remove the 4 screws that secure the cover to the chassis (Figure 21).

**Figure 21** Removing the top cover

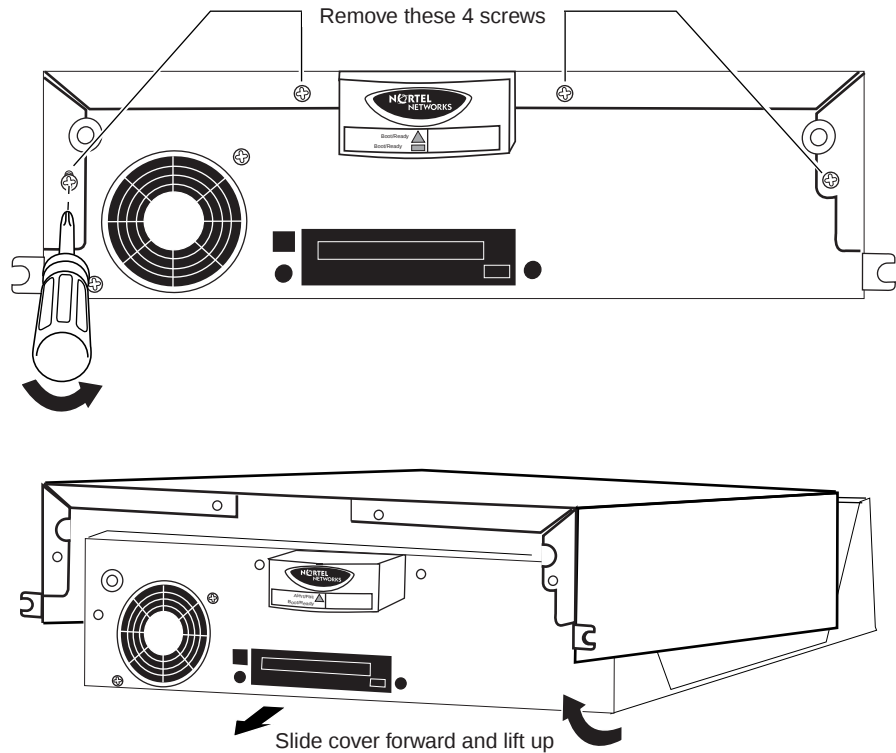


CS260006A

- 3 Slide the top cover forward approximately 1/4 inch.

- 4 Lift the lid 2 or 3 inches and pull it off the chassis.

The Contivity 2700 system board is now exposed. [Figure 22](#) shows the location of the option card slots and the DIMMs on the system board.

**Figure 22** Location of option card slots and DIMMs on the system board

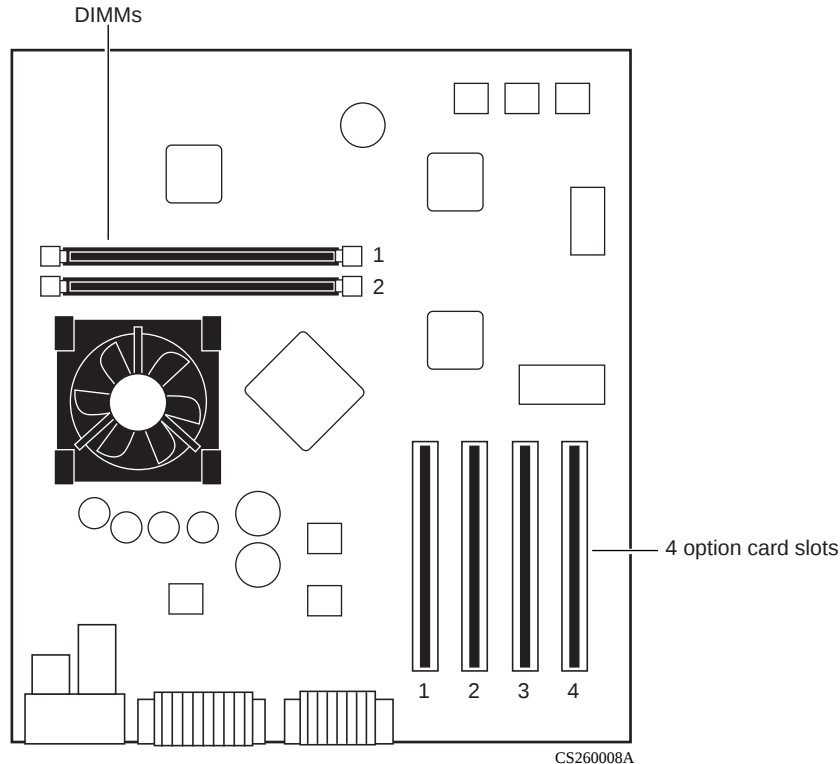

**Warning:** Beware of danger if battery is incorrectly replaced. Replace with the *same* or an *equivalent battery* only, as recommended by the manufacturer's instructions.



**Danger:** In spite of the above warning, which is mandated for regulatory approval, *you should not change the battery*. If you suspect a dead battery, contact Nortel Networks Customer Support.

## Attaching the antistatic wrist strap

Nortel Networks ships the Contivity 2700 with an antistatic wrist strap. The antistatic wrist strap directs the discharge of static electricity from your body to the chassis of the gateway to avoid damage to sensitive electronic components.

You must wear an antistatic wrist strap on your arm whenever you remove, install, or handle option cards and DIMMs.




**Caution:** Electrostatic discharge can damage hardware. Follow the procedure in this section to protect your equipment from damage.

To attach the antistatic wrist strap:

- 1 Locate the antistatic wrist strap and verify that the cable is attached to the wrist strap.
- 2 Place the strap around your wrist and adjust it to ensure that the metal buckle inside the strap touches your skin.
- 3 Insert the banana plug into the grounding jack at the rear of the chassis (Figure 23).

**Figure 23** Location of the grounding jack for the antistatic wrist strap

Grounding jack

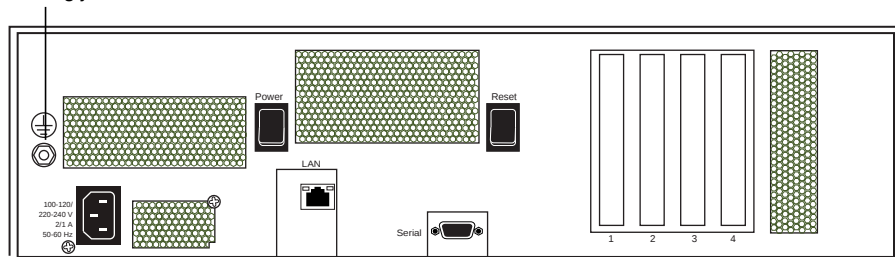

CS260002A

## Installing and replacing option cards

The Contivity 2700 has four slots for option cards (see [Figure 22 on page 59](#)). This section provides instructions on adding new option cards to the Contivity 2700 or, if necessary, replacing an existing card.

[Table 13](#) lists the option cards that you can install in the Contivity 2700.

**Table 13** Supported option cards for the Contivity 2700

| Option card                                       | Maximum number | Restrictions                                                                                      |
|---------------------------------------------------|----------------|---------------------------------------------------------------------------------------------------|
| Contivity Security Accelerator (CSA) <sup>1</sup> | 2              | Install two cards of either type, or one card of each type. Do not install either card in slot 4. |
| Hardware Accelerator                              | 2 <sup>2</sup> |                                                                                                   |
| 10/100 Ethernet interface                         | 4              |                                                                                                   |
| 1000BASE-T interface (copper) <sup>1</sup>        | 2              | Install two 1000BASE-T cards, two 1000BASE-SX cards, or one card of each type.                    |
| 1000BASE-SX interface (fiber) <sup>1</sup>        | 2              |                                                                                                   |
| ADSL WAN interface <sup>1</sup>                   | 4              |                                                                                                   |
| ISDN BRI S/T or U interface <sup>3</sup>          | 4              |                                                                                                   |
| T1/E1 CSU/DSU WAN interface                       | 4              |                                                                                                   |
| Quad T1/E1 CSU/DSU WAN interface <sup>1</sup>     | 3              |                                                                                                   |
| V.90 modem interface <sup>3</sup>                 | 4              |                                                                                                   |
| Single V.35/X.21 WAN interface                    | 4              |                                                                                                   |
| Dual V.35 WAN interface <sup>4</sup>              | 4              |                                                                                                   |
| HSSI WAN interface                                | 2              | Do not install in slot 4 (preferred slots are slots 1 and 3).                                     |

1 The Contivity 2700 must be running Version 4.90 or later.

2 To support two Hardware Accelerator cards, the gateway must be running Version 4.76 or later.

3 The Contivity 2700 must be running Version 4.80 or later.

4 This option card is no longer available for purchase.

To install or replace an interface card or a hardware encryption accelerator card:

- 1 Shut down the Contivity 2700 using the Web GUI or the command line interface and then unplug it as described in [“Shutting down the system to add or replace hardware” on page 56](#).



**Danger:** Turn off the Contivity 2700 and unplug it before you attempt to install an option card.

---


- 2 Remove the front bezel from the chassis, then remove the chassis from the equipment rack (see [“Removing the front bezel and top cover” on page 57](#)).
- 3 Remove the top cover from the chassis (see [“Removing the front bezel and top cover” on page 57](#)).
- 4 Attach the antistatic wrist strap that was shipped with the Contivity 2700 (see [“Attaching the antistatic wrist strap” on page 60](#)).
- 5 Locate the slot where you plan to install the new or replacement option card.



**Note:** Do not try to install an HSSI WAN interface card or a hardware encryption accelerator card in slot 4.

---


- 6 Remove the filler panel screw and pull out the filler panel (or the option card that you are replacing) from the slot ([Figure 24](#)).

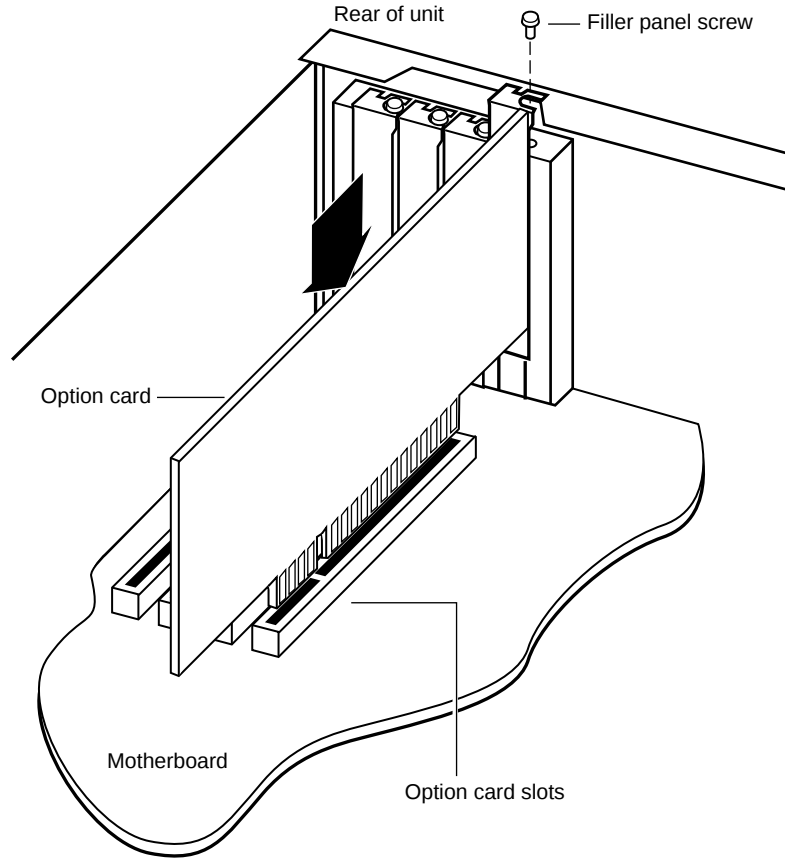**Figure 24** Installing and removing an option card

CS2600017A

- 7 Lower the new option card into the slot and gently press the connector into the slot.  
  
Make sure that the card is seated firmly in the slot. If the card is not seated properly, it will not work.
- 8 Replace the screw that secures the card to the slot ([Figure 24](#)).
- 9 Replace the top cover on the chassis (see [Figure 21 on page 58](#)).
  - a Hold the cover at an angle and slide it onto the chassis.
  - b Using a screwdriver, insert and tighten the 4 screws that secure the cover to the chassis.
- 10 If the Contivity 2700 is installed in an equipment rack, mount it in the rack.
  - a Set the Contivity 2700 on the rack-mount shelf in the rack.
  - b Insert one of the panhead screws through the bottom hole on each side of the shelf into the hole in the rack and tighten the screws.
- 11 Replace the front bezel ([Figure 25](#)).
  - a Hold the bezel by its two handles and push it onto the chassis.
  - b Using a screwdriver, tighten the 2 screws to secure the bezel to the chassis.

**Figure 25** Replacing the front bezel

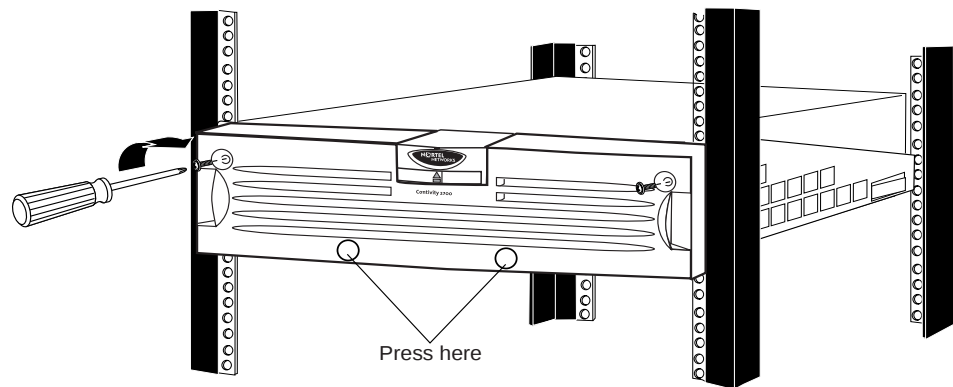

CS260005B

## Installing and replacing DIMMs

The Contivity 2700 has two slots for dual inline memory modules (DIMMs) (see [Figure 22 on page 59](#)). Unless you ordered additional memory, the Contivity 2700 is shipped with one 256 MB DIMM installed. You can upgrade memory in the gateway by installing a second 256 MB DIMM.

This section provides instructions on adding a second DIMM to the Contivity 2700 or, if necessary, replacing an existing DIMM.



**Caution:** Make sure to install the same type of DIMM that is already installed in the gateway. For example, do not install a 128 MB DIMM in the Contivity 2700.

To install or replace a DIMM:

- 1 Shut down the Contivity 2700 using the Web GUI or the command line interface and then unplug it as described in [“Shutting down the system to add or replace hardware” on page 56](#).



**Danger:** Turn off the Contivity 2700 and unplug it before you attempt to install a DIMM.

- 2 Remove the front bezel from the chassis, then remove the chassis from the equipment rack (see [“Removing the front bezel and top cover” on page 57](#)).
- 3 Remove the top cover from the chassis (see [“Removing the front bezel and top cover” on page 57](#)).
- 4 Attach the antistatic wrist strap that was shipped with the Contivity 2700 (see [“Attaching the antistatic wrist strap” on page 60](#)).




**Caution:** Electrostatic discharge can damage Contivity 2700 components.

- 5 If you are replacing a DIMM, remove the installed DIMM as follows:
  - a Press down the locking lever on either side of the DIMM ([Figure 26](#)).

- b** Pull the DIMM up to remove it from the slot.
- 6** Press down the locking lever on either side of the slot where you plan to install the new DIMM (Figure 26).
- 7** Place the new or replacement DIMM in the slot (Figure 26).  
Use the alignment keys to properly position the DIMM in the slot.
- 8** Press the DIMM firmly into the socket.
- 9** Pull up the locking lever on either side of the DIMM to snap it into position.

**Figure 26** Installing and removing a DIMM

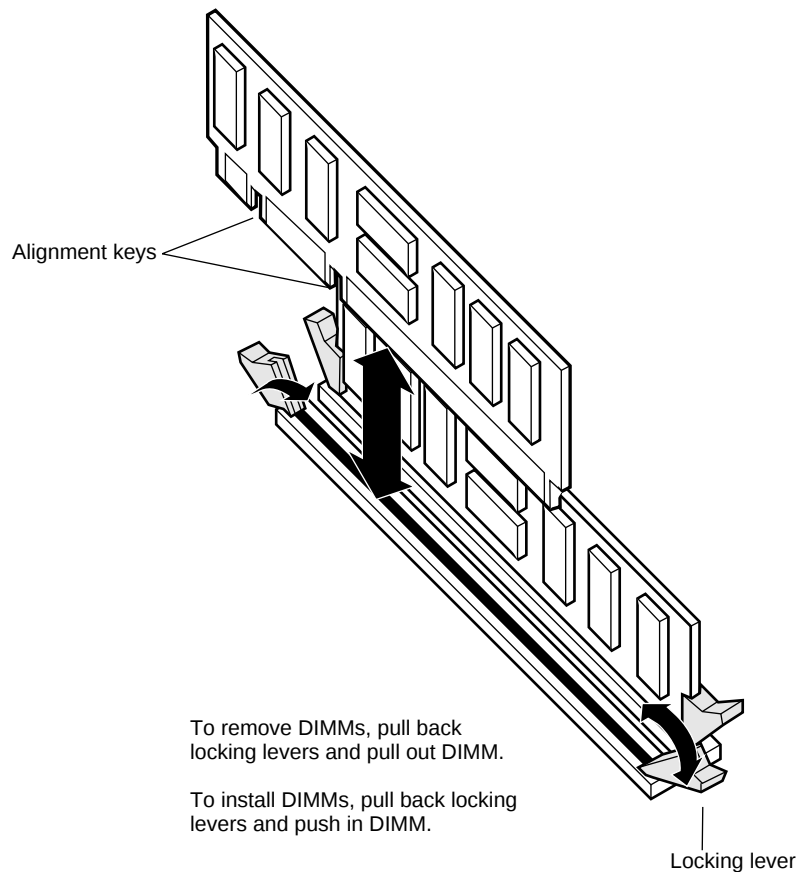

CS260019A

- 10** Replace the top cover on the chassis (see [Figure 21 on page 58](#)).
  - a** Hold the cover at an angle and slide it onto the chassis.
  - b** Using a screwdriver, insert and tighten the 4 screws to secure the cover to the chassis.
- 11** If the Contivity 2700 is installed in an equipment rack, mount it in the rack.
  - a** Set the Contivity 2700 on the rack-mount shelf in the rack.
  - b** Insert one of the panhead screws through the bottom hole on each side of the shelf into the hole in the rack and tighten the screws.
- 12** Replace the front bezel (see [Figure 25 on page 64](#)).
  - a** Hold the bezel by its two handles and push it onto the chassis.
  - b** Using the screwdriver, tighten the 2 screws to secure the bezel to the chassis.



---

## Appendix A

### Technical specifications

---

This appendix provides technical specifications for the Contivity 2700 chassis and its interface options.

### Chassis specifications

[Table 14](#) lists physical, electrical, and environmental specifications for the chassis.

**Table 14** Physical, electrical, and environmental specifications

| Specification         | Description                  |
|-----------------------|------------------------------|
| Physical              |                              |
| Height                | 5.25 in. (13.335 cm)         |
| Width                 | 17 in. (43.18 cm)            |
| Depth                 | 21 in. (53.34 cm)            |
| Weight                | 28 lbs. (12.7 kg)            |
| Electrical            |                              |
| Voltage               | 100–120 VAC; 220–240 VAC     |
| Current               | 2 A @ 100 VAC; 1 A @ 220 VAC |
| Frequency             | 50–60 Hz                     |
| Environmental         |                              |
| Operating temperature | 32–104°F (0–40°C)            |
| Storage temperature   | -40–185°F (-40–85°C)         |
| Operating humidity    | 10–90% noncondensing         |
| Storage humidity      | 10–95% noncondensing         |
| Operating altitude    | 7000 ft (2133.6 m) maximum   |
| Storage altitude      | 40,000 ft (12,192 m) maximum |

## System ports

The Contivity 2700 system board provides the following built-in interfaces:

- 10/100BASE Ethernet LAN port
- Serial port

This section provides information about the 10/100BASE Ethernet LAN port and the serial port on the system board.

### 10/100BASE Ethernet LAN port

The system board provides one 10/100BASE Ethernet LAN interface on the rear of the chassis. This LAN interface, which accommodates an RJ-45 straight-through cable, is generally used for Web management. Depending on whether you will use the interface for 10BASE-T or 100BASE-TX operation, select cables for the interface as follows:


- 100BASE-TX connections require Category 5 twisted-pair wire. The 100BASE-TX specification supports 100 Mb/s transmission over two pairs of Category 5 twisted-pair Ethernet wiring: one pair each for transmit and receive operations.

The maximum recommended cable segment length is 100 meters between a 100BASE-TX repeater and a workstation (due to signal timing requirements). This wiring scheme complies with the EIA 568 wiring standard.

- 10BASE-T connections can use Category 3, 4 or 5 twisted-pair wiring.

[Figure 27](#) shows the 10/100BASE connector and its pinouts.

**Figure 27** 10/100BASE Ethernet connector

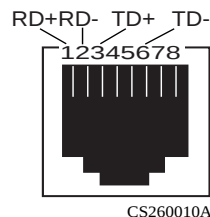

[Table 15](#) provides the 10/100BASE Ethernet port pinouts.

**Table 15** 10/100BASE Ethernet port pinouts

| Pin | Description |
|-----|-------------|
| 1   | RD +        |
| 2   | RD -        |
| 3   | TD +        |
| 6   | TD -        |

## Serial port

The system board provides a serial port on the rear of the chassis to enable out-of-band management. Using the serial port, you can assign the management IP address and subnet mask to the newly installed gateway (for more information, see [Chapter 3, “Configuring the management IP interface,” on page 43](#)).

The serial cable provided with the Contivity 2700 is a DB9/DB25-to-DB9/DB25 cable. This cable provides a crossover connection (transmit-to-receive and receive-to-transmit). The DB9 connector goes into the gateway and the other DB9 or DB25 connector goes into your workstation.

[Table 16](#) provides the multiple DB9/DB25 serial interface cable pinouts.

**Table 16** Multiple DB9 and DB25 connector pinouts

| Serial port DB9 connector |        | Serial port DB25 connector |        |   | Serial port DB25 connector |        | Serial port DB9 connector |        |
|---------------------------|--------|----------------------------|--------|---|----------------------------|--------|---------------------------|--------|
| Pinout                    | Signal | Pinout                     | Signal |   | Pinout                     | Signal | Pinout                    | Signal |
| 2                         | RXD    | 3                          | TXD    | > | 2                          | RXD    | 3                         | TXD    |
| 3                         | TXD    | 2                          | RXD    | > | 3                          | TXD    | 2                         | RXD    |
| 4                         | DTR    | 20                         | DSR    | > | 6                          | DTR    | 6                         | DSR    |
| 5                         | Ground | 7                          | Ground | > | 7                          | Ground | 5                         | Ground |
| 6                         | DSR    | 6                          | DTR    | > | 20                         | DSR    | 4                         | DTR    |
| 7                         | RTS    | 4                          | RTS    | > | 5                          | CTS    | 8                         | CTS    |
| 8                         | CTS    | 5                          | CTS    | > | 4                          | RTS    | 7                         | RTS    |

# Modem cable specifications

If you need to connect a modem to a Contivity 2700, you must obtain an appropriate modem cable. The modem cable must have a 9-pin D-sub plug that connects to the Contivity 2700 serial port and a 25-pin D-sub plug that connects to the RS-232-C modem port (Figure 28).

**Figure 28** Modem cable (9-pin D-sub plug to RS-232-C modem plug)

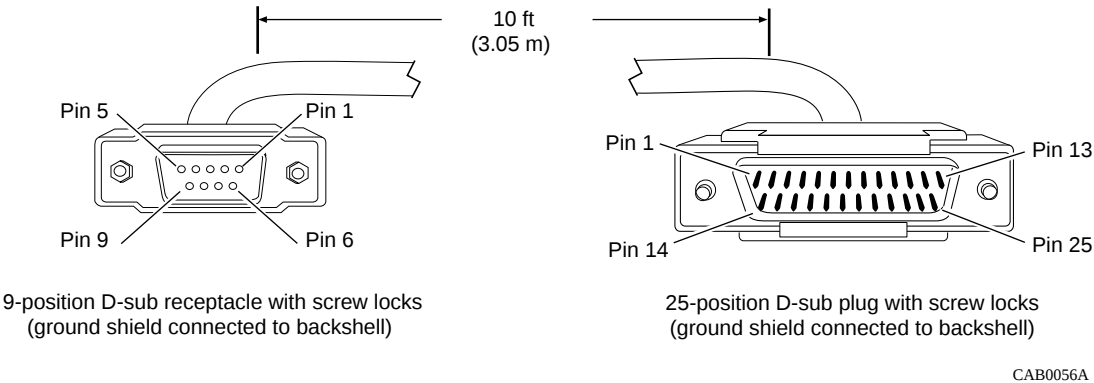


Table 17 provides the modem cable pinouts.

**Table 17** Modem cable pinouts

| Nortel Networks termination |                | Modem termination |                     |
|-----------------------------|----------------|-------------------|---------------------|
| Signal                      | Pin # to Pin # |                   | Signal              |
| Data Carrier Detect         | 1              | 8                 | Data Carrier Detect |
| Transmit Data (TXD)         | 2              | 2                 | Transmit Data (TXD) |
| Receive Data (RXD)          | 3              | 3                 | Receive Data (RXD)  |
| Data Set Ready              | 4              | 6                 | Data Set Ready      |
| Data Terminal Ready         | 6              | 20                | Data Terminal Ready |
| Clear to Send               | 7              | 5                 | Clear to Send       |
| Request to Send             | 8              | 4                 | Request to Send     |

## Hardware option cards

The Contivity 2700 provides four PCI slots that support a combination of the following option cards:

- Contivity Security Accelerator and Hardware Accelerator cards (not supported in slot 4)
- 10/100BASE Ethernet interface card
- 1000BASE-T Ethernet interface card
- 1000BASE-SX Ethernet interface card
- ADSL WAN interface card
- ISDN BRI interface card
- T1/E1 CSU/DSU WAN interface card
- Quad T1/E1 CSU/DSU WAN interface card
- Single V.35/X.21 WAN interface card
- Dual V.35 WAN interface card
- HSSI WAN interface card (not supported in slot 4)
- V.90 modem interface card

This section provides information about the option cards, including the connector and the cable pinouts for each supported network interface card.

### Contivity Security Accelerator (CSA) and Hardware Accelerator cards

Nortel Networks supports two option cards that perform bulk encryption and compression algorithms for IPsec tunnel traffic:

- Contivity Security Accelerator (CSA) card

The CSA card uses a single Hifn\* 7854 chip for encryption and compression and has 64 MB of onboard RAM. It supports AES-128 cryptography with SHA-1 authentication and triple DES cryptography with either MD5 or SHA-1 authentication.

- Hardware Accelerator card

The Hardware Accelerator card uses a single Hifn 7811 chip for encryption and compression. It performs triple DES and DES cryptography, LZS\* compression, and MD5 or SHA-1 authentication.

The CSA card is the successor to the Hardware Accelerator card. Along with providing support for AES, the CSA card provides increased encryption throughput and improved compression performance.



**Note:** The CSA card has one green LED; the Hardware Accelerator card has no LEDs.

---


At startup, whenever an accelerator card is manually enabled, or whenever the accelerator recovers from a failure, the power-on self-test (POST) verifies the integrity of the hardware. This test includes validation of the accelerator's encryption, MAC, and compression algorithms against their software counterparts. In the event POST fails, the accelerator is set offline.

For more information about the Contivity Security Accelerator card and the Hardware Accelerator card and instructions for configuring these cards, see the guide *Configuring Advanced Features for the Contivity Secure IP Services Gateway*.

## 10/100BASE Ethernet interface card

The 10/100BASE Ethernet interface card has a single RJ-45 connector that provides the signals needed to interface to 10BASE-T and 100BASE-TX Ethernet equipment. [Figure 29](#) shows the 10/100BASE Ethernet interface card.

**Figure 29** 10/100BASE Ethernet interface card

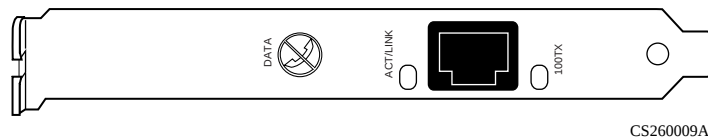


For information about the cables that you can connect to this interface and the cable pinouts, see [“10/100BASE Ethernet LAN port” on page 70](#).

## 1000BASE-T Ethernet interface card

The 1000BASE-T Ethernet interface card is generally used to connect to Gigabit Ethernet interfaces on other devices in your network, as well as to provide increased throughput. This interface card has a single RJ-45 connector.

Figure 30 shows the 1000BASE-T Ethernet interface card.

**Figure 30** 1000BASE-T Ethernet interface card

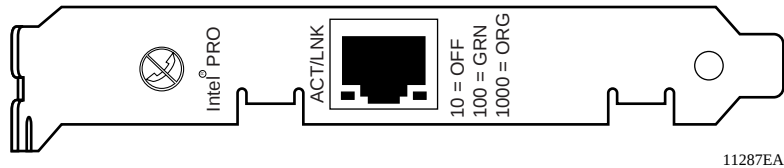


The port on the 1000BASE-T Ethernet interface card accommodates an RJ-45 straight-through cable. Select cables for this port as follows:

- For 1000BASE-T operation, use Category 5 four-pair Ethernet wiring. The cable must comply with the TIA 568 wiring specification. The maximum recommended cable segment length is 100 meters.
- For 100BASE-TX operation, use Category 5 twisted-pair wiring: one pair each for transmit and receive operations. The cable must comply with the EIA 568 wiring specification. The maximum recommended cable segment length is 100 meters.
- For 10BASE-T operation, use Category 3, 4, or 5 twisted-pair wiring.

Table 18 provides the 1000BASE-T Ethernet port pinouts.

**Table 18** 1000BASE-T Ethernet port pinouts

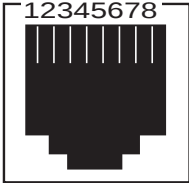
| <br>CS260010A | Pin | Description |
|------------------------------------------------------------------------------------------------|-----|-------------|
|                                                                                                | 1   | TP0+        |
|                                                                                                | 2   | TP0-        |
|                                                                                                | 3   | TP1+        |
|                                                                                                | 4   | TP2+        |
|                                                                                                | 5   | TP2-        |
|                                                                                                | 6   | TP1-        |
|                                                                                                | 7   | TP3+        |
|                                                                                                | 8   | TP3-        |

## 1000BASE-SX Ethernet interface card

The 1000BASE-SX Ethernet interface card implements short-wavelength (850 nm) laser transmissions. This interface card is generally used to connect to fiber Gigabit Ethernet interfaces on other devices in your network, as well as to provide increased throughput. The 1000BASE-SX Ethernet interface card has a single type LC fiber connector.

Figure 31 shows the 1000BASE-SX Ethernet interface card.

**Figure 31** 1000BASE-SX Ethernet interface card

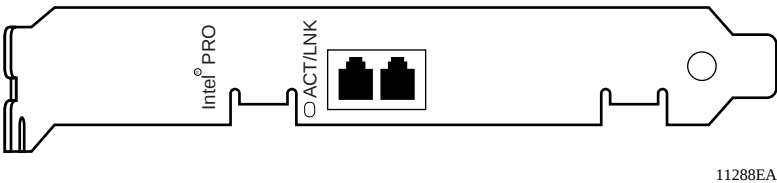

The port on the 1000BASE-SX Ethernet interface card accommodates a multimode fiber (MMF) cable that meets MMF standards. Select fiber cable for this interface as follows:

- 50-micron MMF cable: provides a distance range of 500—550 meters (m)
- 62.5-micron MMF cable: provides a distance range of 220—275 m

You can order a 10-foot MMF cable from Nortel Networks:

- Order no. DM0011117 provides an LC-to-LC connector
- Order no. DM0011118 provides an LC-to-SC connector

## ADSL WAN interface card


The ADSL Annex A and Annex B WAN interface cards have a single RJ-11 connector that provides the signals needed to interface to the digital subscriber line access multiplexer (DSLAM) and to telephone equipment.

Figure 32 shows the ADSL WAN interface card.



**Note:** The ADSL Annex A and ADSL Annex B cards look identical.

**Figure 32** ADSL WAN interface card



10972EA

Included in the accessory box is a 7-foot RJ-11 cable to attach to the DSLAM.

Table 19 provides the ADSL port pinouts.

**Table 19** ADSL cable pinouts

| Pin | Function |
|-----|----------|
| 1   | N/C      |
| 2   | Tip      |
| 3   | Ring     |
| 4   | N/C      |

## ISDN BRI interface card

The ISDN BRI S/T and ISDN BRI U interface cards have a single RJ-45 connector that provides the signals needed to interface to ISDN equipment. (To connect the ISDN S/T interface to the ISDN network, you must attach an external NT-1 device to the RJ-45 connector.)

Figure 33 shows the ISDN BRI S/T interface card.

**Figure 33** ISDN BRI S/T interface card


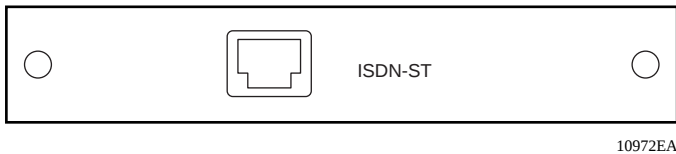


Figure 34 shows the ISDN BRI U interface card.

**Figure 34** ISDN BRI U interface card



The connector on the ISDN BRI S/T and ISDN BRI U interface cards accommodates an 8-pin RJ-45 modular patch cord. These cables are commonly sold as Category 5, or Ethernet, cables.

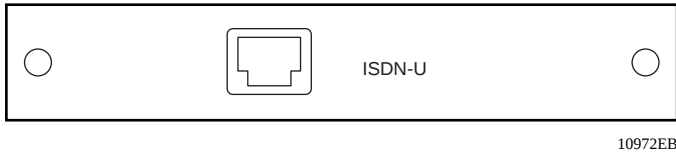

**Note:** Nortel Networks does not supply a cable with the ISDN BRI interface cards.

Table 20 provides the ISDN BRI S/T cable pinouts.

**Table 20** ISDN BRI S/T cable pinouts

| Pin | Function   |
|-----|------------|
| 1   | N/C        |
| 2   | N/C        |
| 3   | Receive +  |
| 4   | Transmit + |
| 5   | Transmit - |
| 6   | Receive -  |
| 7   | N/C        |
| 8   | N/C        |

Table 21 provides the ISDN BRI U cable pinouts.


**Table 21** ISDN BRI U cable pinouts

| Pin | Function                              |
|-----|---------------------------------------|
| 1   | N/C                                   |
| 2   | N/C                                   |
| 3   | N/C                                   |
| 4   | U interface network connection (tip)  |
| 5   | U interface network connection (ring) |
| 6   | N/C                                   |
| 7   | N/C                                   |
| 8   | N/C                                   |

## T1/E1 CSU/DSU WAN interface card

The T1/E1 CSU/DSU WAN interface card has a single connector that provides the signals needed to interface to T1 or E1 equipment. [Figure 35](#) shows the T1/E1 CSU/DSU WAN interface card.

**Figure 35** T1/E1 CSU/DSU WAN interface card

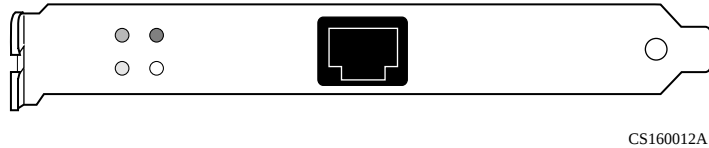

The connector on the T1/E1 CSU/DSU WAN interface accommodates an 8-pin RJ-48 modular patch cord. These cables are commonly sold as Category 5, or Ethernet, cables.



**Note:** Nortel Networks does not supply the T1/E1 CSU/DSU WAN interface cable with the WAN interface card.

---

The cable you use should be wired in accordance with EIA-568-A wiring style. This wiring style ensures that the transmit signal (pins 4 and 5) and the receive signal (pins 1 and 2) are carried on a twisted pair inside the patch cord. The use of factory made patch cords is strongly recommended.

You connect the T1/E1 CSU/DSU WAN interface card to the service provider network using a straight-through cable or a crossover cable, depending on how the service provider wired its jack.

- For a straight-through connection, you can use a standard Category 5 (Ethernet) straight-through cable.
- For a crossover connection, you cannot use a standard Category 5 crossover cable. The T1/E1 CSU/DSU crossover cable and the Ethernet crossover cable are not interchangeable.

Table 22 provides the T1/E1 CSU/DSU cable pinouts for a crossover connection.

**Table 22** T1/E1 CSU/DSU cable pinouts for crossover connection

| Standard-wired end 8-pin male | Signal name | Pair number and conductor | Special-wired end 8-pin male |
|-------------------------------|-------------|---------------------------|------------------------------|
| 1                             | RXDA<-TXDA  | wht/org pair 2A           | 5                            |
| 2                             | RXDB<-TXDB  | orange pair 2B            | 4                            |
| 3                             | not used    | wht/grn pair 3A           | 3                            |
| 4                             | TXDB->RXDB  | blue pair 1B              | 2                            |
| 5                             | TXDA->RXDA  | wht/blu pair 1A           | 1                            |
| 6                             | not used    | green pair 3B             | 6                            |
| 7                             | not used    | wht/brn pair 4A           | 7                            |
| 8                             | not used    | brown pair 4B             | 8                            |

The cable will operate properly if pins 3, 6, 7, and 8 are not connected.



**Caution:** For crossover connections, do not use Ethernet cable. The T1/E1 CSU/DSU will not work to specifications. Data may be corrupted.

Table 23 provides the T1/E1 CSU/DSU cable pinouts for a straight-through connection.


**Table 23** T1/E1 CSU/DSU cable pinouts for straight-through connection

| Nortel Networks termination |                | Remote termination |                   |
|-----------------------------|----------------|--------------------|-------------------|
| Signal                      | Pin # to Pin # |                    | Signal            |
| Receive A (RXDA)            | 1              | 1                  | Receive A (RXDA)  |
| Receive B (RXDB)            | 2              | 2                  | Receive B (RXDB)  |
| not used                    | 3              | 3                  | not used          |
| Transmit B (TXDB)           | 4              | 4                  | Transmit B (TXDB) |
| Transmit A (TXDA)           | 5              | 5                  | Transmit A (TXDA) |
| not used                    | 6              | 6                  | not used          |
| not used                    | 7              | 7                  | not used          |
| not used                    | 8              | 8                  | not used          |

## Quad T1/E1 CSU/DSU WAN interface card

The quad T1/E1 CSU/DSU WAN interface card has four connectors that provide the signals needed to interface to T1 or E1 equipment. [Figure 36](#) shows the quad T1/E1 CSU/DSU WAN interface card.

**Figure 36** Quad T1/E1 CSU/DSU WAN interface card

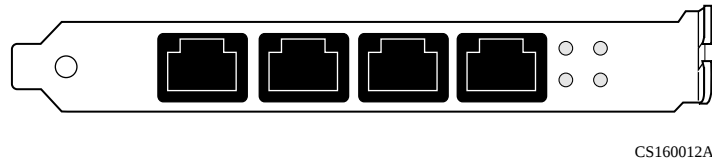

Each connector on the quad T1/E1 CSU/DSU WAN interface card accommodates an 8-pin RJ-48 modular patch cord. These cables are commonly sold as Category 5, or Ethernet, cables.



**Note:** Nortel Networks does not supply cables with the quad T1/E1 CSU/DSU interface card.

---

The cables you use should be wired in accordance with EIA-568-A wiring style. This wiring style ensures that the transmit signal (pins 4 and 5) and the receive signal (pins 1 and 2) are carried on a twisted pair inside the patch cord. The use of factory-made patch cords is strongly recommended.

You connect the quad T1/E1 CSU/DSU WAN interface card to the service provider network using a straight-through cable or a crossover cable, depending on how the service provider wired its jack.


- For a straight-through connection, you can use a standard Category 5 (Ethernet) straight-through cable.
- For a crossover connection, you cannot use a standard Category 5 crossover cable. The T1/E1 CSU/DSU crossover cable and the Ethernet crossover cable are not interchangeable.

For information about the cable pinouts for a crossover connection, see [Table 22 on page 81](#). For information about the cable pinouts for a straight-through connection, see [Table 23 on page 81](#).

## Single V.35/X.21 WAN interface card

The single V.35/X.21 WAN interface card has a single DB28S connector that provides the signals needed to interface to V.35 and X.21 equipment. [Figure 37](#) shows the single V.35/X.21 WAN interface card.

**Figure 37** Single V.35/X.21 WAN interface card



CS160011A

You need a DSU/CSU (digital service unit/channel service unit) between the WAN connection and the gateway. You can order a V.35 or X.21 cable to attach to the connector. This cable enables the WAN adapter to function as DTE (data terminal equipment).

[Table 24](#) provides the V.35 cable pinouts. [Table 25 on page 85](#) provides the X.21 cable pinouts. (The pair suffix A or B refers to an individual wire within a twisted pair.)

**Table 24** V.35 cable pinouts

| Standard-wired end 28-pin male | Signal name | Pair number and conductor | Special-wired end 34-pin male | Notes |
|--------------------------------|-------------|---------------------------|-------------------------------|-------|
| 2                              | TXDA        | pair 1A                   | P                             |       |
| 14                             | TXDB        | pair 1B                   | S                             |       |
| 3                              | RXDA        | pair 2A                   | R                             |       |
| 16                             | RXDB        | pair 2B                   | T                             |       |
| 15                             | TXCA        | pair 3A                   | Y                             |       |
| 12                             | TXCB        | pair 3B                   | AA                            |       |
| 17                             | RXCA        | pair 4A                   | V                             |       |
| 9                              | RXCB        | pair 4B                   | X                             |       |
| 24                             | SCTEA       | pair 5A                   | U                             |       |
| 11                             | SCTEB       | pair 5B                   | W                             |       |
| 4                              | RTSA        | pair 6A                   | C                             |       |

**Table 24** V.35 cable pinouts (continued)

| Standard-wired end 28-pin male | Signal name       | Pair number and conductor | Special-wired end 34-pin male | Notes     |
|--------------------------------|-------------------|---------------------------|-------------------------------|-----------|
| 19                             | RTSB              | pair 6B                   | no conn                       | Note 1    |
| 5                              | CTSA              | pair 7A                   | D                             |           |
| 13                             | CTSB              | pair 7B                   | no conn                       | Note 1    |
| 6                              | DSRA              | pair 8A                   | E                             |           |
| 22                             | DSRB              | pair 8B                   | J                             |           |
| 20                             | DTRA              | pair 9A                   | H                             |           |
| 23                             | DTRB              | pair 9B                   | no conn                       | Note 1    |
| 8                              | DCDA              | pair 10A                  | F                             |           |
| 10                             | DCDB              | pair 10B                  | no conn                       | Note 1    |
| 18                             | LL                | pair 11A                  | L                             |           |
| 21                             | RL                | pair 11B                  | N                             |           |
| 25                             | TM                | pair 12A                  | NN                            |           |
| 26                             | M0<-SIGNAL GROUND | pair 12B                  | B                             | Note 2    |
| 27                             | M1<-SIGNAL GROUND | pair 13A                  | B                             | Note 2    |
| 28                             | M2                | pair 13B                  | no conn                       | Note 1    |
| 1                              | SHIELD            | pair 14A                  | A                             | Notes 3,4 |
| 7                              | SIGNAL GROUND     | pair 14B                  | B                             | Notes 2,4 |

The following notes apply to the single V.35 DTE cable:

1. The term "no conn" means the wire is not connected to a pin in the 34-pin connector.
2. Wires 12B, 13A, and 14B connect to pin B in the 34-pin connector.
3. At each end, the cable shield and connector shell must connect respectively to pin A of the 34-pin connector and pin 1 of the standard 28-pin connector.
4. Do not connect Shield to Signal Ground because these are separate signals.

Table 25 provides the X.21 cable pinouts. (The pair suffix A or B refers to an individual wire within a twisted pair.)

**Table 25** X.21 cable pinouts

| Standard-wired<br>end 28-pin male | Signal name       | Pair number<br>and conductor | Standard-wired<br>end 15-pin male | Notes  |
|-----------------------------------|-------------------|------------------------------|-----------------------------------|--------|
| 2                                 | TXDA              | pair 1A                      | 2                                 |        |
| 14                                | TXDB              | pair 1B                      | 9                                 |        |
| 3                                 | RXDA              | pair 2A                      | 4                                 |        |
| 16                                | RXDB              | pair 2B                      | 11                                |        |
| 15                                | TXCA              | pair 3A                      | 6                                 |        |
| 12                                | TXCB              | pair 3B                      | 13                                |        |
| 17                                | RXCA              | pair 4A                      | pair 5A                           | Note 1 |
| 9                                 | RXCB              | pair 4B                      | pair 5B                           | Note 1 |
| 24                                | SCTEA             | pair 5A                      | pair 4A                           | Note 1 |
| 11                                | SCTEB             | pair 5B                      | pair 4B                           | Note 1 |
| 4                                 | RTSA              | pair 6A                      | 3                                 |        |
| 19                                | RTSB              | pair 6B                      | 10                                |        |
| 5                                 | CTSA              | pair 7A                      | 5                                 |        |
| 13                                | CTSB              | pair 7B                      | 12                                |        |
| 6                                 | DSRA              | pair 8A                      | no conn                           | Note 2 |
| 22                                | DSRB              | pair 8B                      | no conn                           | Note 2 |
| 20                                | DTRA              | pair 9A                      | no conn                           | Note 2 |
| 23                                | DTRB              | pair 9B                      | no conn                           | Note 2 |
| 8                                 | DCDA              | pair 10A                     | no conn                           | Note 2 |
| 10                                | DCDB              | pair 10B                     | no conn                           | Note 2 |
| 18                                | LL                | pair 11A                     | no conn                           | Note 2 |
| 21                                | RL                | pair 11B                     | no conn                           | Note 2 |
| 25                                | TM                | pair 12A                     | no conn                           | Note 2 |
| 26                                | M0                | pair 12B                     | no conn                           | Note 2 |
| 27                                | M1                | pair 13A                     | no conn                           | Note 2 |
| 28                                | M2<-SIGNAL GROUND | pair 13B                     | 8                                 | Note 3 |

**Table 25** X.21 cable pinouts (continued)

| Standard-wired end 28-pin male | Signal name   | Pair number and conductor | Standard-wired end 15-pin male | Notes    |
|--------------------------------|---------------|---------------------------|--------------------------------|----------|
| 1                              | SHIELD        | pair 14A                  | 1                              | Note 4,5 |
| 7                              | SIGNAL GROUND | pair 14B                  | 8                              | Note 3,5 |


The following notes apply to the single X.21 cable:

1. Wires of pair 4 connect to wires of pair 5, but not to any pins in the DA-15.
2. The term “no conn” means the wire is not connected to a pin in the 15-pin connector.
3. Wires 13B and 14B connect to pin 8 in the 15-pin connector.
4. At each end, the cable shield and connector shell must connect to pin 1 of the connector.
5. Do not interconnect Shield to Signal Ground because these are separate signals.

## Dual V.35 WAN interface card

The dual V.35 WAN interface card has two DB26 connectors that provide the signals needed to interface to V.35 equipment. [Figure 38](#) shows the dual V.35 WAN interface card.

**Figure 38** Dual V.35 WAN interface card

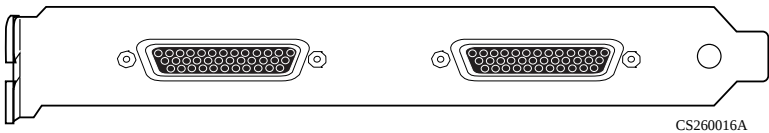

You need a DSU/CSU (digital service unit/channel service unit) between the WAN connection and the gateway. This section documents the connector and cables used with V.35 WAN synchronous adapters.

If you build your own V.35 DTE cables, observe the following guidelines:

- All connector hoods must be metal.
- Braid must enter and make contact inside the metal connector hood.
- V.35 conn strain relief must be conductive.

Included in the accessory box are two cables to attach to the V.35 connectors. These cables enable the WAN adapter to function as DTE (data terminal equipment). [Table 26](#) provides the DB26-to-V.35 cable pinouts.


**Table 26** DB26-to-V.35 cable pinouts

| Standard-wired end<br>26-pin male | Signal name | Pair number<br>and conductor | Special-wired end<br>34-pin male |
|-----------------------------------|-------------|------------------------------|----------------------------------|
| 2                                 | TDA         | pair 1A                      | P                                |
| 14                                | TDB         | pair 1B                      | S                                |
| 3                                 | RDA         | pair 2A                      | R                                |
| 16                                | RDB         | pair 2B                      | T                                |
| 24                                | ETA         | pair 3A                      | U                                |
| 11                                | ETB         | pair 3B                      | W                                |
| 17                                | RCA         | pair 4A                      | V                                |
| 9                                 | RCB         | pair 4B                      | X                                |
| 15                                | TCA         | pair 5A                      | Y                                |
| 12                                | TCB         | pair 5B                      | AA                               |
| 4                                 | RTS         | pair 6A                      | C                                |
|                                   |             | pair 6B                      | no conn                          |
| 5                                 | CTS         | pair 7A                      | D                                |
|                                   |             | pair 7B                      | no conn                          |
| 6                                 | DSR         | pair 8A                      | E                                |
|                                   |             | pair 8B                      | no conn                          |
| 8                                 | DCD         | pair 9A                      | F                                |
|                                   |             | pair 9B                      | no conn                          |
| 20                                | DTR         | pair 10A                     | H                                |
|                                   |             | pair 10B                     | no conn                          |
| 7                                 | SGND        | pair 11A                     | B                                |
|                                   |             | pair 11B                     | no conn                          |
| 1                                 | CGND        | pair 12A                     | A                                |
|                                   |             | pair 12B                     | no conn                          |

# HSSI WAN interface card

The HSSI WAN interface card has a 50-pin SCSI II female connector that provides the signals needed to interface to a T3 modem or modem eliminator. [Figure 39](#) shows the HSSI WAN interface card.

**Figure 39** HSSI WAN interface card

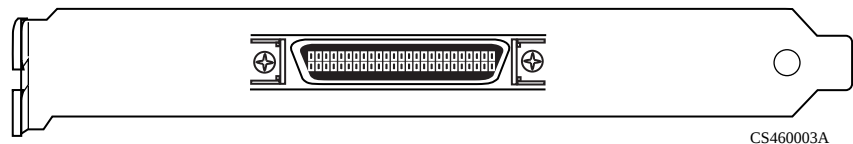

Included in the accessory box is a cable that maps the T3 signals out to a 50-pin SCSI II male connector.

[Table 27](#) provides the T3 cable pinouts.

**Table 27** T3 cable pinouts

| 50-pin SCSI male | Signal name | 50-pin SCSI male |
|------------------|-------------|------------------|
| 1                | GND         | 1                |
| 2                | RCB         | 2                |
| 3                | CAB         | 3                |
| 4                | RDB         | 4                |
| 5                | LCB         | 5                |
| 6                | STB         | 6                |
| 7                | GND         | 7                |
| 8                | TAB         | 8                |
| 9                | TTB         | 9                |
| 10               | LAB         | 10               |
| 11               | TDB         | 11               |
| 12               | LBB         | 12               |
| 13               | GND         | 13               |
| 19               | GND         | 19               |
| 24               | TESTB       | 24               |
| 25               | GND         | 25               |

**Table 27** T3 cable pinouts (continued)


| 50-pin SCSI male | Signal name | 50-pin SCSI male |
|------------------|-------------|------------------|
| 26               | GND         | 26               |
| 27               | RCA         | 27               |
| 28               | CAA         | 28               |
| 29               | RDA         | 29               |
| 30               | LCA         | 30               |
| 31               | STA         | 31               |
| 32               | GND         | 32               |
| 33               | TAA         | 33               |
| 34               | TTA         | 34               |
| 35               | LAA         | 35               |
| 36               | TDA         | 36               |
| 37               | LBA         | 37               |
| 38               | GND         | 38               |
| 44               | GND         | 44               |
| 49               | TESTA       | 49               |
| 50               | GND         | 50               |

# V.90 modem interface card

The V.90 modem interface card has two RJ-11 connectors that provide the signals needed to interface to an incoming telephone line and to telephone equipment.

[Figure 40](#) shows the V.90 modem interface card.

**Figure 40** V.90 modem interface card

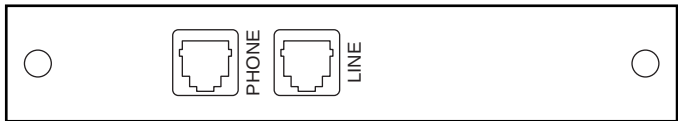

10973EA

Included in the accessory box is a 7-foot RJ-11 cable to attach to a telephone jack.

[Table 28](#) provides the V.90 modem port cable pinouts.

**Table 28** V.90 modem cable pinouts

| Pin | Function |
|-----|----------|
| 1   | N/C      |
| 2   | Tip      |
| 3   | Ring     |
| 4   | N/C      |

---

# Index

---

## Numbers

### 10/100BASE Ethernet interface card

- cable specifications 70
- connector 70
- described 74
- installing 61
- LEDs 36

### 10/100BASE system LAN port

- cable specifications 70
- connector 70
- LEDs 35

### 1000BASE-SX Ethernet interface card

- cable specifications 77
- connector 76
- described 76
- installing 61
- LEDs 37

### 1000BASE-T Ethernet interface card

- cable specifications 75
- connector 75
- described 75
- installing 61
- LEDs 36

## A

### AC power cord

- connecting 32
- ordering 21
- requirements 32

### accelerator cards, hardware encryption

- described 73
- installing 61

### accessories, hardware, shipped with the gateway 21

### acronyms 16

### ADSL WAN interface card

- cable pinouts 78
- connector 77
- described 77
- installing 61
- LEDs 38

### antistatic wrist strap, attaching 60

## B

### bezel, front

- removing 26, 57
- replacing 27, 64

### browsers, supported 51

## C

### cables

- available from Nortel Networks 30
- connecting to the gateway 31
- ordering 30
- power. *See* AC power cord
- technical specifications
  - 1000BASE-SX connector 77
  - 1000BASE-T connector 75
  - 100BASE-TX connector 70
  - 10BASE-T connector 70
  - ADSL WAN interface 77
  - dual V.35 WAN interface 86
  - HSSI WAN interface 88
  - ISDN BRI interface 79
  - modem 72

## cables

- technical specifications (*continued*)
  - quad T1/E1 CSU/DSU WAN interface 82
  - serial interface 71
  - single V.35/X.21 WAN interface 83
  - T1/E1 CSU/DSU WAN interface 80
  - V.90 modem interface 90

cage nuts, when used 22, 24

Category 5 wiring requirements 70, 75

## chassis

- installing 23
- removing
  - front bezel 26, 57
  - top cover 58
- replacing
  - front bezel 27, 64
  - top cover 64
- specifications 69

configuring the management IP address

- using the IP address configuration utility 44
- using the serial interface 47

## connecting

- cables 31
- power cord 32
- serial cable to the gateway 47
- to the gateway using a browser 51

## connectors

- 10/100BASE Ethernet interface card 74
- 10/100BASE system LAN port 70
- 1000BASE-SX Ethernet interface 76
- 1000BASE-T Ethernet interface 75
- ADSL WAN interface 77
- dual V.35 WAN interface 86
- HSSI WAN interface 88
- ISDN BRI S/T interface 78
- ISDN BRI U interface 78
- quad T1/E1 CSU/DSU WAN interface 82
- single V.35/X.21 WAN interface 83
- T1/E1 CSU/DSU WAN interface 80
- V.90 modem interface 90

## Contivity 2700

- configuring management IP address for 43
- connecting cables to 29
- connecting power cord 32
- description 19
- installing option cards and DIMMs 55
- installing the chassis 23
- shipment contents 21
- shutting down 56
- technical specifications 69
- verifying a successful installation 33
- verifying connectivity 51

## Contivity Security Accelerator card

- described 73
- installing 61

conventions, text 16

## cover, top

- removing 58
- replacing 64

customer support 18

**D**

default gateway, defined 44

DIMMs (dual inline memory modules),

- installing 65

## dual V.35 WAN interface card

- connector 86
- installing 61
- pinouts 87

**E**

electrical specifications 69

encryption accelerator cards, hardware

- described 73
- installing 61

environmental specifications 69

equipment rack, specifications 22

Ethernet interface cards  
installing 61  
specifications  
10/100BASE 74  
1000BASE-SX 76  
1000BASE-T 75

## F

field replaceable units (FRUs), installing 55  
front bezel  
removing 26, 57  
replacing 27, 64  
front panel LEDs 34

## G

gateway, default, defined 44  
Gigabit Ethernet interface cards  
installing 61  
specifications  
1000BASE-SX 76  
1000BASE-T 75  
GUI, Web-based 51

## H

Hardware Accelerator card  
described 73  
installing 61  
hardware accessories shipped with the gateway 21  
hardware option cards  
installing 61  
*See also* Ethernet interface card, serial interface  
cards, WAN interface cards  
specifications 73  
HSSI WAN interface card  
cable pinouts 88  
connector 88  
installing 61

## I

installing DIMMs 65  
installing option cards 61  
installing the chassis  
in an equipment rack 24  
on a flat surface 23  
prerequisites 20  
interfaces, option card, technical specifications 73  
interfaces, system, technical specifications 70  
Internet Explorer, supported versions 51  
IP address configuration utility 44  
IP address for managing the gateway. *See*  
management IP address  
ISDN BRI S/T interface card  
cable pinouts 79  
connector 78  
installing 61  
ISDN BRI U interface card  
cable pinouts 79  
connector 78  
installing 61

## L

LAN interface cards  
connector 70  
installing 61  
LEDs 36  
10/100BASE Ethernet 36  
1000BASE-SX Ethernet 37  
1000BASE-T Ethernet 36  
specifications 74  
10/100BASE 74  
1000BASE-SX 76  
1000BASE-T 75  
LAN port, system  
cable specifications 70  
connector 70  
LEDs 35

## LEDs

- 10/100BASE Ethernet interface card 36
- 1000BASE-SX Ethernet interface card 37
- 1000BASE-T Ethernet interface card 36
- ADSL WAN interface card 38
- front panel 34
- quad T1/E1 CSU/DSU WAN interface card 40
- single V.35/X.21 WAN interface card 41
- system LAN port 35
- T1/E1 CSU/DSU WAN interface card 39
- used to verify correct installation 33

## M

- main menu, serial interface 48
- management IP address
  - configuring
    - using the IP configuration utility 44
    - using the serial interface 47
  - defined 44
  - troubleshooting configuration of 53
  - verifying 51
- mask, subnet, defined 44
- memory modules, adding and replacing 65
- modem cable pinouts 72

## N

- Netscape Navigator, supported versions 51
- NT-1 device, required for ISDN BRI S/T 78

## O

- option cards
  - installing 61
  - See also* Ethernet interface card, serial interface cards, WAN interface cards
  - specifications 73

## P

- physical specifications 69

## pinouts

- 10/100BASE Ethernet connector 70
- 1000BASE-SX Ethernet interface 76
- 1000BASE-T Ethernet interface 76
- ADSL WAN interface 78
- dual V.35 WAN interface 87
- HSSI WAN interface 88
- ISDN BRI S/T interface 79
- ISDN BRI U interface 79
- modem cable 72
- quad T1/E1 CSU/DSU WAN interface 81
- serial interface cable 71
- single V.35 WAN interface 83
- single X.21 WAN interface 85
- T1/E1 CSU/DSU WAN interface 81
- V.90 modem interface 90

- plug, AC power, specifications 32

## power cord

- connecting 32
- ordering 21
- requirements 32

- powering down the gateway 56

- product support 18

## publications

- hard copy 18
- related 17

## Q

- quad T1/E1 CSU/DSU WAN interface card
  - connector 82
  - described 82
  - installing 61
  - LEDs 40
  - pinouts 81

## R

- rack, equipment, specifications 22
- rack-mount considerations 24
- rack-mount shelf 24
- requirements, site 22

RJ-45, pinouts 70, 76

## S

serial cable, connecting to the gateway 47

serial interface

    cable pinouts 71

    described 71

    using to configure the management IP  
        address 47

serial interface cards

    installing 61

    specifications

        ISDN BRI 78

        V.90 modem 90

serial main menu 48

shelf for rack-mount installation 24

shipment contents 21

shutting down the gateway 56

single V.35/X.21 WAN interface card

    connector 83

    installing 61

    LEDs 41

    V.35 pinouts 83

    X.21 pinouts 85

site requirements 22

specifications

    chassis 69

    equipment rack 22

    option cards 73

    serial port 71

    system ports 70

subnet mask, defined 44

support, Nortel Networks 18

system LAN port

    cable specifications 70

    connector 70

    LEDs 35

system ports, specifications 70

## T

T1/E1 CSU/DSU WAN interface card

    cable pinouts 81

    connector 80

    installing 61

    LEDs 39

T3 HSSI WAN interface card

    See HSSI WAN interface card

technical publications 18

technical specifications 69

technical support 18

testing connectivity to the gateway 51

text conventions 16

top cover

    removing 58

    replacing 64

troubleshooting the management IP address 53

turning off the gateway 56

## U

user interface, Web 51

## V

V.35 WAN interface card. *See* dual V.35 WAN interface card

V.35/X.21 WAN interface card. *See* single V.35/X.21 WAN interface card

V.90 modem interface card

    cable pinouts 90

    connectors 90

    installing 61

verifying a successful installation 33

verifying the management IP interface 51

## W

### WAN interface cards

- installing 61

#### LEDs

- ADSL 38

- quad T1/E1 CSU/DSU 40

- single V.35/X.21 41

- T1/E1 CSU/DSU 39

#### specifications

- ADSL 77

- dual V.35 86

- HSSI 88

- quad T1/E1 CSU/DSU 82

- single V.35/X.21 83

- T1/E1 CSU/DSU 80

Web interface to the gateway 51

Welcome screen 52

wiring requirements, Category 5 70, 75

wrist strap, antistatic, attaching 60

## X

X.21 WAN interface card. *See* single V.35/X.21

- WAN interface card