

Part No. 316314-E Rev 01
March 2006

4655 Great America Parkway
Santa Clara, CA 95054

Installing and Maintaining the Passport 8000 Series Chassis



>THIS IS THE WAY

>THIS IS NORTEL™

Copyright © Nortel Networks Limited 2005. All rights reserved.

The information in this document is subject to change without notice. The statements, configurations, technical data, and recommendations in this document are believed to be accurate and reliable, but are presented without express or implied warranty. Users must take full responsibility for their applications of any products specified in this document. The information in this document is proprietary to Nortel Networks Inc.

Trademarks

Nortel Networks, the Nortel Networks logo, the Globemark, Unified Networks, BayStack, and Passport are trademarks of Nortel Networks.

Adobe and Acrobat Reader are trademarks of Adobe Systems Incorporated.

3COM is a trademark of 3COM Corporation.

Hendry is a trademark of Hendry Mechanical Works.

Intel is a trademark of Intel Corporation.

SanDisk is a trademark of SanDisk Corporation.

The asterisk after a name denotes a trademarked item.

Statement of conditions

In the interest of improving internal design, operational function, and/or reliability, Nortel Networks Inc. reserves the right to make changes to the products described in this document without notice.

Nortel Networks Inc. does not assume any liability that may occur due to the use or application of the product(s) or circuit layout(s) described herein.

International regulatory statements of conformity

This is to certify that the Nortel Networks 8000 Series chassis and components installed within the chassis were evaluated to the international regulatory standards for electromagnetic compliance (EMC) and safety and were found to have met the requirements for the following international standards:

- EMC - Electromagnetic Emissions – CISPR 22, Class A
- EMC - Electromagnetic Immunity – CISPR 24
- Electrical Safety – IEC 60950, with CB member national deviations

Further, the equipment has been certified as compliant with the national standards as detailed below.

National electromagnetic compliance (EMC) statements of compliance

FCC statement (USA only)

This equipment has been tested and found to comply with the limits for a Class A digital device, pursuant to Part 15 of the Federal Communications Commission (FCC) rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy. If it is not installed and used in accordance with the instruction manual, it may cause harmful interference to radio communications. Operation of this equipment in a residential area is likely to cause harmful interference, in which case users will be required to take whatever measures may be necessary to correct the interference at their own expense.

ICES statement (Canada only)

Canadian Department of Communications Radio Interference Regulations

This digital apparatus (8000 Series chassis and installed components) does not exceed the Class A limits for radio-noise emissions from digital apparatus as set out in the Radio Interference Regulations of the Canadian Department of Communications.

Règlement sur le brouillage radioélectrique du ministère des Communications

Cet appareil numérique (8000 Series chassis) respecte les limites de bruits radioélectriques visant les appareils numériques de classe A prescrites dans le Règlement sur le brouillage radioélectrique du ministère des Communications du Canada.

CE marking statement (Europe only)

EN 55 022 statements

This is to certify that the Nortel Networks 8000 Series chassis and components installed within the chassis are shielded against the generation of radio interference in accordance with the application of Council Directive 89/336/EEC. Conformity is declared by the application of EN 55 022 Class A (CISPR 22).

Warning: This is a Class A product. In a domestic environment, this product may cause radio interference, in which case, the user may be required to take appropriate measures.

Achtung: Dieses ist ein Gerät der Funkstörgrenzwertklasse A. In Wohnbereichen können bei Betrieb dieses Gerätes Rundfunkstörungen auftreten, in welchen Fällen der Benutzer für entsprechende Gegenmaßnahmen verantwortlich ist.

Attention: Ceci est un produit de Classe A. Dans un environnement domestique, ce produit risque de créer des interférences radioélectriques, il appartiendra alors à l'utilisateur de prendre les mesures spécifiques appropriées.

EN 55 024 statement

This is to certify that the Nortel Networks 8000 Series chassis is shielded against the susceptibility to radio interference in accordance with the application of Council Directive 89/336/EEC. Conformity is declared by the application of EN 55 024 (CISPR 24).

EC Declaration of Conformity

This product conforms to the provisions of the R&TTE Directive 1999/5/EC.

VCCI statement (Japan/Nippon only)

This is a Class A product based on the standard of the Voluntary Control Council for Interference (VCCI) for information technology equipment. If this equipment is used in a domestic environment, radio disturbance may arise. When such trouble occurs, the user may be required to take corrective actions.

この装置は、情報処理装置等電波障害自主規制協議会（VCCI）の基準に基づくクラスA情報技術装置です。この装置を家庭環境で使用すると電波妨害を引き起こすことがあります。この場合には使用者が適切な対策を講ずるよう要求されることがあります。

BSMI statement for 8010, 8006 and 8003 chassis (Taiwan only)

This is a Class A product based on the standard of the Bureau of Standards, Metrology and Inspection (BSMI) CNS 13438, Class A.

警告使用者：

這是甲類的資訊產品，在居住的環境中使用時，可能會造成射頻干擾，在這種情況下，使用者會被要求採取某些適當的對策。

MIC notice for 8010, 8006, 8003 chassis (Republic of Korea only)

This device has been approved for use in Business applications only per the Class A requirements of the Republic of Korea Ministry of Information and Communications (MIC). This device may not be sold for use in a non-business application.



명 칭 (모델명) : Switch (Passport 8600)
인 증 번 호 : E-E011-02-0015 (A)
인증받은자의상호 : Nortel Networks Ltd.
제 조 일 : 별도표기
제 조 자(제 조 국) : Nortel Networks Ltd.(미국)

National safety statements of compliance

CE marking statement (Europe only)

EN 60 950 statement

This is to certify that the Nortel Networks 8000 Series chassis and components installed within the chassis are in compliance with the requirements of EN 60 950 in accordance with the Low Voltage Directive. Additional national differences for all European Union countries have been evaluated for compliance. Some components installed within the 8000 Series chassis may use a nickel-metal hydride (NiMH) and/or lithium-ion battery. The NiMH and lithium-ion batteries are long-life batteries, and it is very possible that you will never need to replace them. However, should you need to replace them, refer to the individual component manual for directions on replacement and disposal of the battery.

NOM statement 8010, 8006, and 8003 chassis (Mexico only)

The following information is provided on the devices described in this document in compliance with the safety requirements of the Norma Oficial Mexicana (NOM):

Exporter:	Nortel Networks, Inc. 4655 Great America Parkway Santa Clara CA 95054 USA
Importer:	Nortel Networks de México, S.A. de C.V. Avenida Insurgentes Sur #1605 Piso 30, Oficina Col. San Jose Insurgentes Deleg-Benito Juarez México D.F. 03900
Tel:	52 5 480 2100
Fax:	52 5 480 2199
Input:	Model 8003AC: 100-240 VAC, 50-60 Hz, 9 A max. per power supply Model 8004AC: 100-240 VAC, 50 to 60 Hz, 12-6 A max. per power supply single supply, single supply + one redundant supply, two supplies, or two + one redundant supply configuration Model 8005AC: 100 to 120 VAC, 50 to 60 Hz, 16 A max. per power supply 200 to 240 VAC, 50 to 60 Hz, 9.5 A max. per power supply single supply, single supply + one redundant supply, two supplies, or two + one redundant supply configuration Model 8004DC: -48 VDC, 29 A single supply, single supply + one redundant supply, two supplies, or two + one redundant supply configuration

Model 8005DC:

-48 VDC, 42 A

single supply, single supply + one redundant supply, two supplies, or two + one redundant supply configuration

Información NOM (unicamente para México)

La información siguiente se proporciona en el dispositivo o en los dispositivos descritos en este documento, en cumplimiento con los requisitos de la Norma Oficial Mexicana (NOM):

Exportador: Nortel Networks, Inc.
4655 Great America Parkway
Santa Clara, CA 95054 USA

Importador: Nortel Networks de México, S.A. de C.V.
Avenida Insurgentes Sur #1605
Piso 30, Oficina
Col. San Jose Insurgentes
Deleg-Benito Juarez
México D.F. 03900

Tel: 52 5 480 2100

Fax: 52 5 480 2199

Embarcar a: Model 8003AC:

100-240 VCA, 50-60 Hz, 9 A max. por fuente de poder

Model 8004AC:

100-240 VCA, 50 - 60 Hz, 12-6 A max. por fuente de poder

una fuente, una fuente + configuraciones de una fuente redundante, dos fuentes o dos + configuraciones de una fuente redundante

Model 8005AC:

100 - 120 VCA, 50 -60 Hz, 16 A max. por fuente de poder

200 - 240 VCA, 50 - 60 Hz, 9,5 A max. por fuente de poder

una fuente, una fuente + configuraciones de una fuente redundante, dos fuentes o dos + configuraciones de una fuente redundante

Model 8004DC:

-48 VCD, 29 A

una fuente, una fuente + configuraciones de una fuente redundante, dos fuentes o dos + configuraciones de una fuente redundante

Model 8005DC:

-48 VCD, 42 A

una fuente, una fuente + configuraciones de una fuente redundante, dos fuentes o dos + configuraciones de una fuente redundante

Nortel Networks Inc. software license agreement

This Software License Agreement (“License Agreement”) is between you, the end-user (“Customer”) and Nortel Networks Corporation and its subsidiaries and affiliates (“Nortel Networks”). PLEASE READ THE FOLLOWING CAREFULLY. YOU MUST ACCEPT THESE LICENSE TERMS IN ORDER TO DOWNLOAD AND/OR USE THE SOFTWARE. USE OF THE SOFTWARE CONSTITUTES YOUR ACCEPTANCE OF THIS LICENSE AGREEMENT. If you do not accept these terms and conditions, return the Software, unused and in the original shipping container, within 30 days of purchase to obtain a credit for the full purchase price.

“Software” is owned or licensed by Nortel Networks, its parent or one of its subsidiaries or affiliates, and is copyrighted and licensed, not sold. Software consists of machine-readable instructions, its components, data, audio-visual content (such as images, text, recordings or pictures) and related licensed materials including all whole or partial copies. Nortel Networks grants you a license to use the Software only in the country where you acquired the Software. You obtain no rights other than those granted to you under this License Agreement. You are responsible for the selection of the Software and for the installation of, use of, and results obtained from the Software.

1. Licensed Use of Software. Nortel Networks grants Customer a nonexclusive license to use a copy of the Software on only one machine at any one time or to the extent of the activation or authorized usage level, whichever is applicable. To the extent Software is furnished for use with designated hardware or Customer furnished equipment (“CFE”), Customer is granted a nonexclusive license to use Software only on such hardware or CFE, as applicable. Software contains trade secrets and Customer agrees to treat Software as confidential information using the same care and discretion Customer uses with its own similar information that it does not wish to disclose, publish or disseminate. Customer will ensure that anyone who uses the Software does so only in compliance with the terms of this Agreement. Customer shall not a) use, copy, modify, transfer or distribute the Software except as expressly authorized; b) reverse assemble, reverse compile, reverse engineer or otherwise translate the Software; c) create derivative works or modifications unless expressly authorized; or d) sublicense, rent or lease the Software. Licensors of intellectual property to Nortel Networks are beneficiaries of this provision. Upon termination or breach of the license by Customer or in the event designated hardware or CFE is no longer in use, Customer will promptly return the Software to Nortel Networks or certify its destruction. Nortel Networks may audit by remote polling or other reasonable means to determine Customer’s Software activation or usage levels. If suppliers of third party software included in Software require Nortel Networks to include additional or different terms, Customer agrees to abide by such terms provided by Nortel Networks with respect to such third party software.

2. Warranty. Except as may be otherwise expressly agreed to in writing between Nortel Networks and Customer, Software is provided “AS IS” without any warranties (conditions) of any kind. NORTEL NETWORKS DISCLAIMS ALL WARRANTIES (CONDITIONS) FOR THE SOFTWARE, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE AND ANY WARRANTY OF NON-INFRINGEMENT. Nortel Networks is not obligated to provide support of any kind for the Software. Some jurisdictions do not allow exclusion of implied warranties, and, in such event, the above exclusions may not apply.

3. Limitation of Remedies. IN NO EVENT SHALL NORTEL NETWORKS OR ITS AGENTS OR SUPPLIERS BE LIABLE FOR ANY OF THE FOLLOWING: a) DAMAGES BASED ON ANY THIRD PARTY CLAIM; b) LOSS OF, OR DAMAGE TO, CUSTOMER’S RECORDS, FILES OR DATA; OR c) DIRECT, INDIRECT, SPECIAL, INCIDENTAL, PUNITIVE, OR CONSEQUENTIAL DAMAGES (INCLUDING LOST PROFITS OR SAVINGS), WHETHER IN CONTRACT, TORT OR OTHERWISE (INCLUDING NEGLIGENCE) ARISING OUT OF YOUR USE OF THE SOFTWARE, EVEN IF NORTEL NETWORKS, ITS AGENTS OR SUPPLIERS HAVE BEEN ADVISED OF THEIR POSSIBILITY. The forgoing limitations of remedies also apply to any developer and/or supplier of the Software. Such developer and/or supplier is an intended beneficiary of this Section. Some jurisdictions do not allow these limitations or exclusions and, in such event, they may not apply.

4. General

a) If Customer is the United States Government, the following paragraph shall apply: All Nortel Networks Software available under this License Agreement is commercial computer software and commercial computer software documentation and, in the event Software is licensed for or on behalf of the United States Government, the respective

rights to the software and software documentation are governed by Nortel Networks standard commercial license in accordance with U.S. Federal Regulations at 48 C.F.R. Sections 12.212 (for non-DoD entities) and 48 C.F.R. 227.7202 (for DoD entities).

- b)** Customer may terminate the license at any time. Nortel Networks may terminate the license if Customer fails to comply with the terms and conditions of this license. In either event, upon termination, Customer must either return the Software to Nortel Networks or certify its destruction.
- c)** Customer is responsible for payment of any taxes, including personal property taxes, resulting from Customer's use of the Software. Customer agrees to comply with all applicable laws including all applicable export and import laws and regulations.
- d)** Neither party may bring an action, regardless of form, more than two years after the cause of the action arose.
- e)** The terms and conditions of this License Agreement form the complete and exclusive agreement between Customer and Nortel Networks.
- f)** This License Agreement is governed by the laws of the country in which Customer acquires the Software. If the Software is acquired in the United States, then this License Agreement is governed by the laws of the state of New York.

Revision history

March 2006

CR Q01300584: Change in documentation: Removed Pressing the Reset button causes a warm restart. Added the following Note: Pressing the Reset button causes a cold restart.

Contents

Preface	19
Before you begin	19
Text conventions	20
Hard-copy technical manuals	20
How to get help	21
Chapter 1	
Passport 8000 Series chassis hardware components	23
8010co chassis	24
8010 chassis	26
8006 chassis	28
8003 chassis	30
Power supplies	31
Fan trays	33
Chapter 2	
Installing the 8010, 8006, and 8003 chassis	35
Preparing to install the 8010, 8006, and 8003 chassis	35
Shipment contents	36
Supplying equipment	39
Management console	39
Cables	40
Hardware for mounting the 8010, 8006, 8003 chassis in an equipment rack	40
Site requirements	40
Space requirements	40
AC input electrical requirements (8010, 8006 and 8003 chassis)	41
DC input electrical requirements (8010 and 8006 chassis)	41
Environmental requirements	41
Installing the chassis	41

Positioning the 8010, 8006, and 8003 chassis on a flat surface 42
Mounting the 8010, 8006, and 8003 chassis in an equipment rack 43
Installing the cable guides 49

Chapter 3

Installing the 8010co chassis 53

Preparing to install the 8010co chassis 53
 Shipment contents 54
 Supplying equipment 56
 Cables 56
 Hardware for mounting the chassis in an equipment rack 56
 Management console 56
 Site requirements 57
 Space requirements 57
 AC input electrical requirements 57
 DC input electrical requirements 57
 Environmental requirements 58
Installing the chassis 58
 Mounting the 8010co chassis in a two-post rack 59
 Mounting the 8010co chassis in a 19-inch rack 61
 Mounting the 8010co chassis in a Hendry rack 64
 Installing the cable management brackets 67
Grounding the 8010co chassis 69
 Connecting the ground cables to the rack grounding strip 75

Chapter 4

Operating the Passport 8000 Series switch 77

Turning the Passport 8000 Series switch on and off 78
 Turning DC power supplies on and off 78
 Turning AC power supplies on and off 80
Verifying a successful installation 81
Configuring the chassis to operate in default, M, or R mode 82
Resetting the Passport 8000 Series switch 82
Installing removable flash memory cards 83
Removing removable flash memory cards 85

Protecting memory card files	86
Replacing an air filter (8010co chassis only)	87
Removing and inserting an air filter (8010co chassis only)	88
Troubleshooting	90
LED indications of problems	90
Apparent module failure	91
Module failure work around 1	91
Module failure work around 2	92
Failure to get a login prompt from the Console port	92
Cable connection problems	93
10BASE-T cables	93
100BASE-T and 1000BASE-T cables	93
GBIC cables	94

Appendix A

Technical specifications for the Passport 8000 Series Chassis 95

Model 8003AC power supply	96
AC input power specifications	96
DC output power specifications	96
Model 8004AC power supply	97
AC input power specifications	97
DC output power specifications	97
Model 8005AC power supply	98
AC input power specifications	98
DC output power specifications	98
Model 8004DC power supply	99
DC input power specifications	99
DC output power specifications	99
Model 8005DC power supply	100
DC input power specifications	100
DC output power specifications	100
Passport 8600 component input power	101
Input power consumption example: 8010 chassis	102
8004AC power supply example	103
8004DC power supply example	103

- Input power consumption example: 8006 chassis 104
 - 8005AC power supply example 104
 - 8005DC power supply example 105
- 8010co chassis 107
 - Physical specifications 107
 - Network Equipment Building Standard 107
 - Environmental specifications 108
 - Maximum airflow 108
 - International regulatory requirements 108
 - Electromagnetic emissions 108
 - Electromagnetic immunity 109
 - Safety agency certification 109
- 8010 chassis 109
 - Physical specifications 110
 - Environmental specifications 110
 - International regulatory requirements 111
 - Electromagnetic emissions 111
 - Electromagnetic immunity 111
 - Safety agency certification 112
- 8006 chassis 112
 - Physical specifications 112
 - Environmental specifications 113
 - International regulatory requirements 113
 - Electromagnetic emissions 113
 - Electromagnetic immunity 114
 - Safety agency certification 114
- 8003 chassis 115
 - Physical specifications 115
 - Environmental specifications 116
 - International regulatory requirements 116
 - Electromagnetic emissions 117
 - Electromagnetic immunity 117
 - Safety agency certification 117
- Index 119**

Figures

Figure 1	8010co chassis and components	25
Figure 2	8010 chassis and components	28
Figure 3	8006 chassis and components	30
Figure 4	8003 chassis and components	31
Figure 5	Items in the 8010 chassis shipping container	37
Figure 6	Items in the 8006 chassis shipping container	38
Figure 7	Items in the 8003 chassis shipping container	39
Figure 8	Positioning the rack-mounting brackets: 8010 chassis	44
Figure 9	Positioning the rack-mounting brackets: 8006 chassis	44
Figure 10	Positioning the rack-mounting brackets: 8003 chassis	45
Figure 11	Attaching the rack-mounting brackets to the chassis: 8010 chassis	45
Figure 12	Attaching the rack-mounting brackets to the chassis: 8006 chassis	45
Figure 13	Attaching the rack-mounting brackets to the chassis: 8003 chassis	46
Figure 14	Aligning the rack-mounting brackets with the equipment rack: 8010 chassis	47
Figure 15	Aligning the rack-mounting brackets with the equipment rack: 8006 chassis	47
Figure 16	Aligning the rack-mounting brackets with the equipment rack: 8003 chassis	47
Figure 17	Installing the 8010 chassis in an equipment rack	48
Figure 18	Installing the 8006 chassis in an equipment rack	48
Figure 19	Installing the 8003 chassis in an equipment rack	49
Figure 20	Loosening the rack-mounting screws: 8010 chassis	49
Figure 21	Loosening the rack-mounting screws: 8006 chassis	50
Figure 22	Loosening the rack-mounting screws: 8003 chassis	50
Figure 23	Sliding the cable guide onto the screws (8010 and 8006 chassis)	50
Figure 24	Sliding the cable guide onto the screws: 8003 chassis	51
Figure 25	Securing the cable guide to the chassis: 8010 chassis	51
Figure 26	Securing the cable guide to the chassis: 8006 chassis	51
Figure 27	Securing the cable guide to the chassis: 8003 chassis	52

Figure 28	Accessories in the 8010co chassis shipping container	55
Figure 29	Two 8010co chassis with BIP in a two-post rack	60
Figure 30	Installing the installation shelf in a 19-inch equipment rack	62
Figure 31	Installing the 8010co chassis in a 19-inch two-post rack	63
Figure 32	Installing the installation shelf in a Hendry rack	64
Figure 33	Removing the mounting rails from the 8010co chassis	65
Figure 34	Installing the mounting rails for a Hendry rack	66
Figure 35	Installing cable management brackets	68
Figure 36	Location of 8010co chassis ground studs	69
Figure 37	Chassis and 8004DC power supply grounding example	71
Figure 38	Chassis and AC power supply grounding example	73
Figure 39	Rack grounding strip example	75
Figure 40	DC power supply power switch	79
Figure 41	Reset button	83
Figure 42	Inserting a removable flash memory card: 8010co chassis	84
Figure 43	Inserting a removable flash memory card: 8010, 8006, and 8003 chassis	84
Figure 44	Removing a removable flash memory card: 8010co chassis	85
Figure 45	Removing a removable flash memory card: 8010, 8006, 8003 chassis	86
Figure 46	Memory card read-write protect switch	87
Figure 47	Inserting an air filter into the 8010co chassis	89
Figure 48	DCE/DTE switch	92

Tables

Table 1	Number of fan trays installed each chassis	33
Table 2	Chassis shipping accessories: 8010, 8006, 8003	36
Table 3	Electrical requirements for the DC models	41
Table 4	Environmental requirements	41
Table 5	Chassis weight including components and cables	42
Table 6	Maximum number of chassis in 7-foot rack	43
Table 7	Number of rack units to allocate for chassis	46
Table 8	8010co chassis shipping accessories	54
Table 9	DC power requirement for BIP	57
Table 10	Environmental requirements	58
Table 11	Item description for chassis and 8004DC power supply grounding	72
Table 12	Item description for chassis and AC power supply grounding	74
Table 13	8010co air filter physical specifications	88
Table 14	LED problem indicators	90
Table 15	Passport 8600 components input power	101
Table 16	Input power consumption sample configuration: 8010 chassis	102
Table 17	8004AC power supply example at 200-240VAC	103
Table 18	8004DC power supply example	103
Table 19	Input power-consumption sample configuration: 8006 chassis	104
Table 20	8005AC power supply example at 100-120VAC	104
Table 21	8005AC power supply example at 200-240VAC	105
Table 22	8005DC power supply example	105

Preface

The Nortel Networks* Passport 8000 Series chassis provides the physical framework for the Passport 8000 Series switch modules. When switch modules are installed in the chassis, the resulting network switch provides a range of data speeds and high-performance switching and routing features.

This guide provides instructions on how to install the Passport 8000 Series chassis in an equipment rack and how to install and replace fan trays, power supplies, modules, gigabit interface converters, and media-dependent adapters. This guide also describes some of the routine tasks of operating the Passport 8000 Series switch and includes technical specifications for the chassis and modules.

Before you begin

This guide is intended for qualified service personnel who are installing a Passport 8000 Series switch in a Passport 8000 Series chassis for the first time or who need to install or replace any Passport 8000 Series customer-replaceable unit (CRU) in the chassis.

Before installing the Passport 8000 Series chassis, ensure that all network wiring has been installed on the premises using standard cable-system practices.

Text conventions

This guide uses the following text conventions:

bold Courier text	Indicates command names and options and text that you need to enter. Example: Use the dinfo command. Example: Enter show ip {alerts routes} .
<i>italic text</i>	Indicates new terms, book titles, and variables in command syntax descriptions. Where a variable is two or more words, the words are connected by an underscore. Example: If the command syntax is <i>show at <valid_route></i> , <i>valid_route</i> is one variable and you substitute one value for it.

Hard-copy technical manuals

You can print selected technical manuals and release notes free, directly from the Internet. Go to the www.nortel.com/documentation URL. Find the product for which you need documentation. Then locate the specific category and model or version for your hardware or software product. Use Adobe* Acrobat Reader* to open the manuals and release notes, search for the sections you need, and print them on most standard printers. Go to Adobe Systems at the www.adobe.com URL to download a free copy of the Adobe Acrobat Reader.



Note: For a list of related publications, see the release notes that accompany your software.

How to get help

If you purchased a service contract for your Nortel Networks product from a distributor or authorized reseller, contact the technical support staff for that distributor or reseller for assistance.

If you purchased a Nortel Networks service program, contact Nortel Networks Technical Support. To obtain contact information online, go to the www.nortel.com/cgi-bin/comments/comments.cgi URL, then click on Technical Support.

From the Technical Support page, you can open a Customer Service Request online or find the telephone number for the nearest Technical Solutions Center. If you are not connected to the Internet, you can call 1-800-4NORTEL (1-800-466-7835) to learn the telephone number for the nearest Technical Solutions Center.

An Express Routing Code (ERC) is available for many Nortel Networks products and services. When you use an ERC, your call is routed to a technical support person who specializes in supporting that product or service. To locate an ERC for your product or service, go to the <http://www.nortel.com/help/contact/erc/index.html> URL.

Chapter 1

Passport 8000 Series chassis hardware components

Each Passport 8000 Series chassis consists of a sheet metal enclosure, a backplane, and a power backplane. The number of bays for power supplies and the number of fan trays depends on the chassis type.

The Passport 8000 Series chassis comprise the following chassis types:

- 8010co chassis
- 8010 chassis
- 8006 chassis
- 8003 chassis

This chapter includes the following topics:

Topic	Page
8010co chassis	24
8010 chassis	26
8006 chassis	28
8003 chassis	30
Power supplies	31
Fan trays	33

8010co chassis

As shown in [Figure 1](#), the 8010co chassis provides eight slots for installing Passport 8600 interface modules and two slots for installing the 8691SF or 8692SF switch fabric modules. Slots are numbered from left to right. You can install Passport 8600 interface modules in slots 1 through 4 and slots 7 through 10. Slots 5 and 6 are reserved for Passport 8000 Series switch fabric modules. For complete information about Passport 8600 modules and instructions for installing them, see *Installing Passport 8600 Switch Modules (312749-J)*.

The 8010co chassis has three bays for either AC or DC power supplies. The 8010co chassis supports the following AC power supplies:

- 8004AC
- 8005AC

The 8010co chassis supports the following DC power supplies:

- 8004DC
- 8005DC




Caution: The 8004 and 8005 power supplies have different power ratings. Therefore, Nortel Networks recommends that you do not operate the Passport 8000 Series chassis with a mix of power supply models (8004, and 8005).

If you are upgrading the Passport 8600 switch and have a redundant power configuration, you can hot-swap the 8004 power supply with the 8005 power supply while the Passport 8000 system remains in operation. Do not operate the chassis with a mix of power supply models for an extended period of time.

Upgrade the power supplies before upgrading the modules.

For complete information about the Passport power supplies and instructions for installing them, see *Installing an AC Power Supply in a Passport 8000 Series Chassis (312751-D)* or *Installing a DC Power Supply in a Passport 8000 Series Chassis (313070-D)*. The 8010co chassis has two fan trays for cooling (refer to *Installing a Fan Tray in an Passport 8000 Series Switch (312752-D)*). [Figure 1](#) also shows the location of customer-replaceable components in the 8010co chassis.

Figure 1 8010co chassis and components

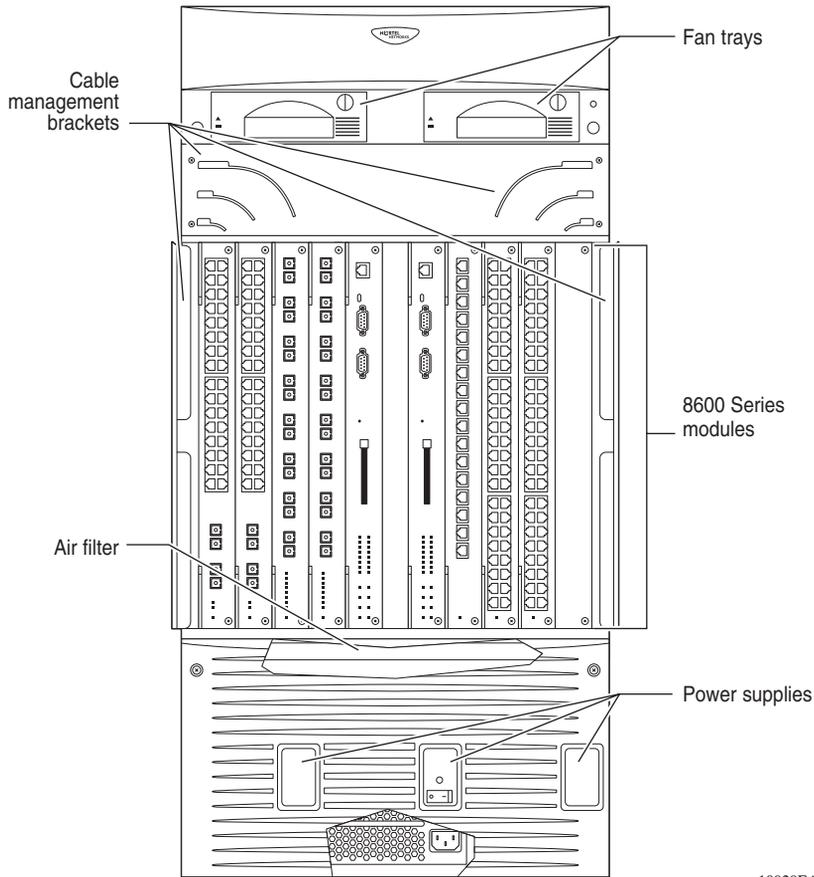

10929EA

8010 chassis

As shown in [Figure 2 on page 28](#), the 8010 chassis provides eight slots for installing interface modules and two slots for installing Passport 8691SF or 8692SF switch fabric modules. Slots are numbered from the top down. You can install Passport 8600 interface modules in slots 1 through 4 and slots 7 through 10. Slots 5 and 6 are reserved for Passport 8600 Series switch fabric modules.

For complete information about Passport 8600 modules and instructions for installing them, see *Installing Passport 8600 Switch Modules (312749-J)*.

The 8010 chassis has three bays for either AC or DC power supplies. The 8010 chassis supports the following AC power supplies:

- 8001AC (discontinued)
- 8004AC
- 8005AC

The 8010 chassis supports the following DC power supplies:

- 8002DC (discontinued)
- 8004DC
- 8005DC



Note: The 8001AC and 8002DC power supplies have not been tested with Passport 8600 modules released since Passport 8600 Release 3.7. Therefore, Nortel Networks recommends that you use the 8004 or 8005 power supply with these modules.



Caution: The 8004 and 8005 power supplies have different power ratings. Therefore, Nortel Networks recommends that you do not operate the Passport 8000 Series chassis with a mix of power supply models (8004, and 8005).


If you are upgrading the Passport 8600 switch and have a redundant power configuration, you can hot-swap the 8004 power supply with the 8005 power supply while the Passport 8000 system remains in operation. Do not operate the chassis with a mix of power supply models for an extended period of time.

Upgrade the power supplies before upgrading the modules.

For complete information about the Passport power supplies and instructions for installing them, see *Installing an AC Power Supply in a Passport 8000 Series Chassis (312751-D)* or *Installing a DC Power Supply in a Passport 8000 Series Chassis (313070-D)*.

The 8010 chassis has two fan trays for cooling (refer to *Installing a Fan Tray in a Passport 8000 Series Switch (312752-D)*). [Figure 2 on page 28](#) also shows the location of customer-replaceable components in the 8010 chassis.

Figure 2 8010 chassis and components

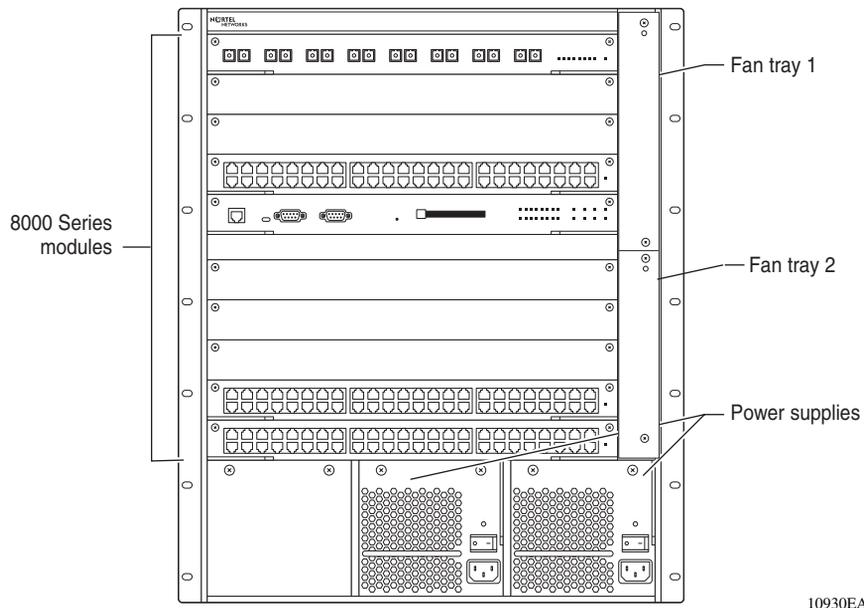

8006 chassis

As shown in [Figure 3 on page 30](#), the 8006 chassis provides four slots for installing interface modules and two slots for installing 8691SF or 8692SF switch fabric modules. The top four slots allow you to install 8600 interface modules. Slots 5 and 6 are reserved for Passport 8000 Series switch fabric modules.

For complete information about Passport 8600 modules and instructions for installing them, see *Installing Passport 8600 Switch Modules (312749-J)*.

The 8006 chassis has three bays for either AC or DC power supplies. The 8006 chassis supports the following AC power supplies:

- 8001AC (discontinued)
- 8004AC
- 8005AC

The 8006 chassis supports the following DC power supplies:

- 8002DC (discontinued)
- 8004DC
- 8005DC



Note: The 8001AC and 8002DC power supplies have not been tested with Passport 8600 modules released since Passport 8600 Release 3.7. Therefore, Nortel Networks recommends that you use the 8004 or 8005 power supply with these modules.




Caution: The 8004 and 8005 power supplies have different power ratings. Therefore, Nortel Networks recommends that you do not operate the Passport 8000 Series chassis with a mix of power supply models (8004, and 8005).

If you are upgrading the Passport 8600 switch and have a redundant power configuration, you can hot-swap the 8004 power supply with the 8005 power supply while the Passport 8000 system remains in operation. Do not operate the chassis with a mix of power supply models for an extended period of time.

Upgrade the power supplies before upgrading the modules.

For complete information about the Passport power supplies and instructions for installing them, see *Installing an AC Power Supply in a Passport 8000 Series Chassis (312751-D)* or *Installing a DC Power Supply in a Passport 8000 Series Chassis (313070-D)*. The 8006 chassis has a single fan tray for cooling (refer to *Installing a Fan Tray in a Passport 8000 Series Switch (312752-D)*). **Figure 3** also shows the location of customer-replaceable components in the 8006 chassis.

Figure 3 8006 chassis and components

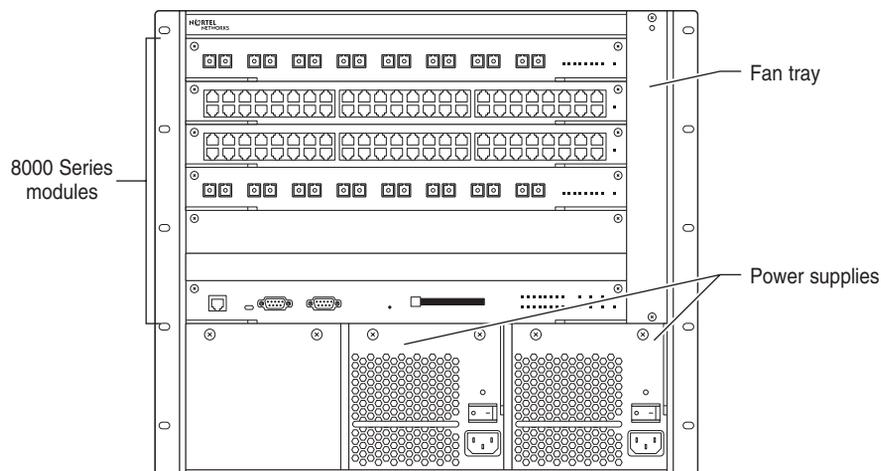

10931EA

8003 chassis

As shown in [Figure 4 on page 31](#), the 8003 chassis provides two slots for installing Passport 8600 interface modules and one slot for installing a 8691SF Switch Fabric Module.



Note: The 8692SF is not supported in the 8003 chassis with Passport 8600 software Release 3.7.


The following modules are not supported in the 8003 chassis with Passport 8600 software Release 4.0:

- 8630GBR
- 8648GTR
- 8683XLR

Slots are numbered from the top down. Slots 1 and 2 allow you to install Passport 8600 interface modules. Slot 3 is reserved for the Passport 8690SF or 8691SF Switch Fabric Module. For complete information about Passport 8600 modules and instructions for installing them, see *Installing Passport 8600 Series Switch Modules (312749-J)*.

The 8003 chassis has two bays for 8003AC power supplies (refer to *Installing an AC Power Supply in a Passport 8000 Series Chassis (312751-D)*), and a single 8003 fan tray for cooling (refer to *Installing a Fan Tray in an 8000 Series Switch (312752-D)*). [Figure 4](#) also shows the location of customer-replaceable components in the 8003 chassis.

Figure 4 8003 chassis and components

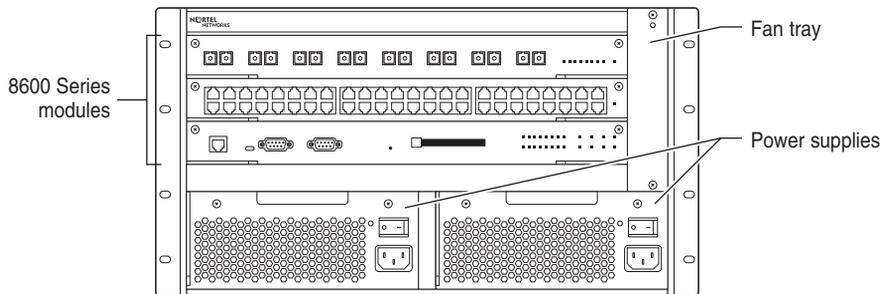

10932EA

Power supplies

The 8010, and 8006 chassis each provide three bays for installing power supplies. The following power supplies are available for these chassis:

- 8001AC Power Supply (discontinued)
- 8004AC Power Supply
- 8005AC Power Supply
- 8002DC Power Supply (discontinued)
- 8004DC Power Supply
- 8005DC Power Supply

The 8010co chassis provides three bays for installing power supplies. The following power supplies are available for these chassis:

- 8004AC Power Supply
- 8005AC Power Supply
- 8004DC Power Supply
- 8005DC Power Supply

A minimum of two power supplies is required for the 8010co chassis. You can also install an additional power supply for redundancy.



Note: The 8001AC and 8002DC power supplies have not been tested with Passport 8600 modules released since Passport 8600 Release 3.7. Therefore, Nortel Networks recommends that you use the 8004 or 8005 power supply with these modules.



Caution: The 8004 and 8005 power supplies have different power ratings. Therefore, Nortel Networks recommends that you do not operate the Passport 8000 Series chassis with a mix of power supply models (8004, and 8005).

If you are upgrading the Passport 8600 switch and have a redundant power configuration, you can hot-swap the 8004 power supply with the 8005 power supply while the Passport 8000 system remains in operation. Do not operate the chassis with a mix of power supply models for an extended period of time.

Upgrade the power supplies before upgrading the modules.

The 8003 chassis provides two bays for installing 8003AC power supplies. Each power supply provides 500 watts (W) of output power for the switch. Two power supplies constitute a redundant power configuration for all installed module configurations in the chassis.

For power supply and system power technical specifications, see [Appendix A, “Technical specifications for the Passport 8000 Series Chassis,”](#) on page 95.

For complete information about the power supplies and instructions for installing them, see *Installing an AC Power Supply in a Passport 8000 Series Chassis (312751-D)*, and *Installing a DC Power Supply in a Passport 8000 Series Chassis (313070-D)*.

Fan trays

[Table 1](#) lists the number of fan trays for each Passport 8000 Series chassis.

Table 1 Number of fan trays installed each chassis

Chassis	Fan tray
8010co	Two fan trays; each fan tray contains two high-capacity fans
8010	Two fan trays; each fan tray contains eight high-capacity fans
8006	One fan tray containing six high-capacity fans.
8003	One fan tray containing three high-capacity, fans.

A control/monitor circuit board in the fan tray reports temperature and fan operating status to the network management software. A green LED indicates that the fan is operating correctly. For instructions on installing the fan, see *Installing a Fan Tray in a Passport 8000 Series Switch (312752-D)*.

Chapter 2

Installing the 8010, 8006, and 8003 chassis

This chapter describes how to install the 8010, 8006, and 8003 chassis. It includes the following topics:

Topic	Page
Preparing to install the 8010, 8006, and 8003 chassis	35
Installing the chassis	41

Preparing to install the 8010, 8006, and 8003 chassis

Before beginning the installation, verify that:

- Your shipment is complete and undamaged.
- You have the cables, tools, and other equipment that you need.
- Your installation site meets the physical, electrical, and environmental requirements described in [“Site requirements”](#) on [page 40](#).

The sections that follow provide information to help you prepare for installation.

Shipment contents

Inspect all items for shipping damage. If you detect any damage, do not install the chassis. Call the Nortel Networks Technical Solutions Center in your area (see [“How to get help” on page 21.](#))

In addition to the 8010, 8006 or 8003 chassis, your shipping container contains several hardware accessories. Verify that the items in the shipping container match those on the shipment packing list.


Use [Table 2](#) as a checklist when verifying the contents of the shipping container.

Table 2 Chassis shipping accessories: 8010, 8006, 8003

Check	Accessory	Use to
	Bracket kit containing <ul style="list-style-type: none"> • Two rack mounting brackets • Flat head screws 	Prepare the chassis for installation in an equipment rack.
	Screw package	Mount the chassis in an equipment rack.
	Side cable management bracket(s) (Two brackets for the 8010 chassis; one bracket each for the 8006 and 8003 chassis)	Manage network interface cables.
	Rubber footpads	Keep the chassis from slipping when mounting it on a flat surface.
	Console cable	Connect an optional management console to the chassis.
	Cable adapter	Connect an optional management console to the DB-9 connector.

[Figure 5 on page 37](#), [Figure 6 on page 38](#), and [Figure 7 on page 39](#) illustrate the items in the chassis shipping container.


Figure 5 Items in the 8010 chassis shipping container

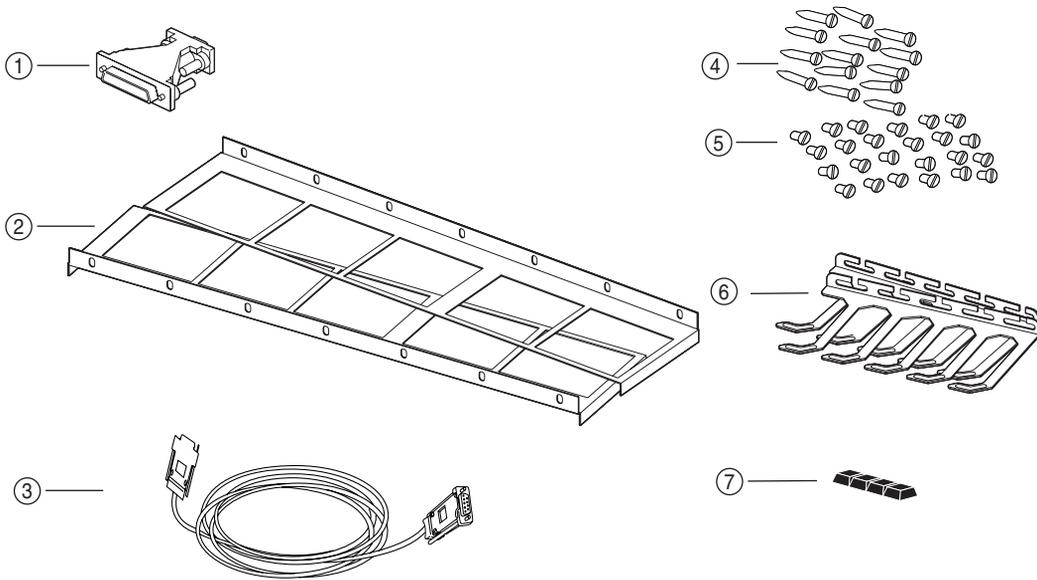

- 1 = Cable adapter
- 2 = Rack mounting brackets
- 3 = Console cable
- 4 = Screws (x14) for brackets
- 5 = Screws (x24) for equipment rack
- 6 = Cable guides
- 7 = Rubber footpads


9073FB

Figure 6 Items in the 8006 chassis shipping container

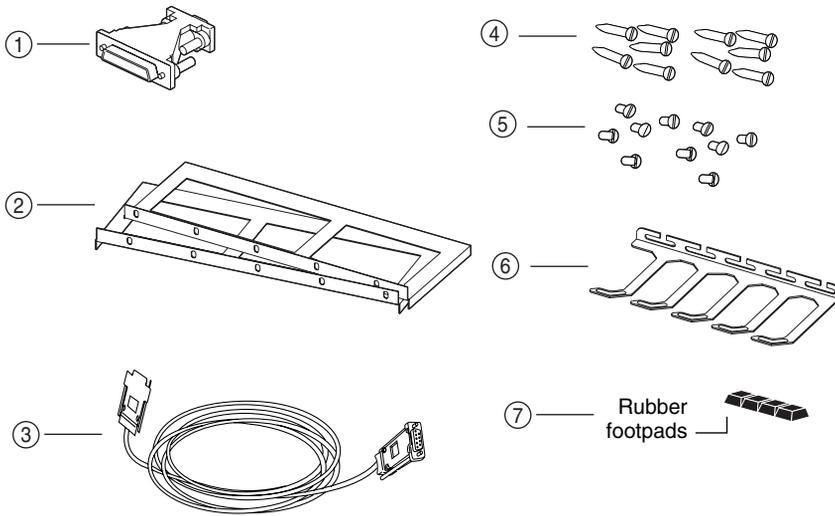

- 1 = Cable adapter
- 2 = Rack mounting brackets
- 3 = Console cable
- 4 = Screws (x10) for brackets
- 5 = Screws (x10) for equipment rack
- 6 = Cable guide
- 7 = Rubber footpads

9416FB

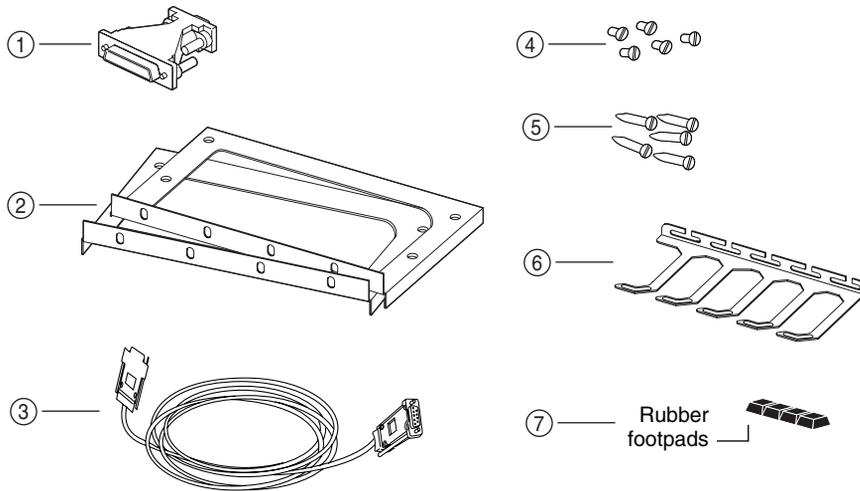Figure 7 Items in the 8003 chassis shipping container

- 1 = Cable adapter
- 2 = Rack mounting brackets
- 3 = Console cable
- 4 = Screws for brackets
- 5 = Screws for equipment rack
- 6 = Cable guide
- 7 = Rubber footpads

10235FB

Supplying equipment

You need items that are not included in the 8010, 8006, 8003 chassis accessory package. Before installing the hardware, make sure that you have all the cables, tools, and other equipment that you will need.

Management console

To configure startup options and to monitor the results of startup diagnostics, you can attach an optional PC, laptop, VT-100 console or equivalent, such as a PC terminal emulator. Or, you can attach an AT-compatible modem to allow dial-in access to startup configuration and diagnostics.

Cables

Unless you specifically ordered them, the cables required for your network configuration are not included in the chassis accessory package. If you do not have the proper cables, contact your network administrator.

Hardware for mounting the 8010, 8006, 8003 chassis in an equipment rack

To install the 8010, 8006, or 8003 chassis in an equipment rack, you need a Phillips screwdriver and an equipment rack that meets the following specifications:

- Heavy-duty steel construction
- Electronic Industries Association (EIA) standard hole-spacing
- Width of 19 in. (48.26 cm) and depth of 24 in. (60.96 cm)

Site requirements

Ensure that the installation site meets the space, electrical, and environmental requirements listed in this section. See [Appendix A, “Technical specifications for the Passport 8000 Series Chassis,” on page 95](#) for more information.

Space requirements

The installation site must provide sufficient free space around the chassis to ensure proper ventilation and access for servicing.

Use the following guidelines to plan front and rear access:

- The maintenance aisle in front of the frame requires a clearance of 76.2 cm (30 inches).
- The wiring aisle at the back of the frame requires a clearance of 61 cm (24 inches).

AC input electrical requirements (8010, 8006 and 8003 chassis)

Refer to the power specifications for the power supply in [Appendix A, “Technical specifications for the Passport 8000 Series Chassis,”](#) on page 95. For AC input power specifications for each of the modules, see *Installing Passport 8600 Switch Modules (312749-J)*.

DC input electrical requirements (8010 and 8006 chassis)

The installation site must meet the following electrical requirements for DC power ([Table 3](#)). For additional electrical requirements, see [Appendix A, “Technical specifications for the Passport 8000 Series Chassis,”](#) on page 95.

Table 3 Electrical requirements for the DC models

DC power supply	Nominal Input voltage	Input current	Input power
8004DC	-48 VDC	29 A	1392 W
8005DC	-48 VDC	42 A	1950 W

Environmental requirements

The installation site must meet the following environmental requirements ([Table 4](#)).

Table 4 Environmental requirements

Altitude	Humidity	Temperature
0-10,000 ft (0-3048 m)	5%-85%, noncondensing	32° F-104° F (0° C-40° C), stable

Installing the chassis

When you are ready to install the chassis, you can do one of the following:

- Position the chassis on a flat, sturdy, horizontal surface.
- Mount the chassis in a standard 19-inch equipment rack.

To make the chassis lighter to install, you can do the following:

- Remove the power supply filler panels (see “Removing and Installing a Power Filler Panel” in *Installing an AC Power Supply in an 8000 Series Switch (312751-D)* or *Installing a DC Power Supply in an 8000 Series Switch (313070-D)*).
- Remove the module filler panels (see “Removing and Installing a Filler Panel” in *Installing Passport 8600 Switch Modules (312749-J)*).
- Remove the fan trays (see *Installing a Fan Tray in an 8000 Series Switch (312752-D)*).

Positioning the 8010, 8006, and 8003 chassis on a flat surface

The Passport 8010 and 8006 chassis can be mounted onto any appropriate flat, level surface that can safely support the weight of the chassis, its components, and its attached cables, as long as there is adequate space around the unit for access to cable connectors ([Table 5](#)).

Table 5 Chassis weight including components and cables

Chassis	Weight (chassis, components, cables)
8010	225 lbs 101 kilograms
8006	170 lbs 77 kilograms
8003	110 lbs 49.5 kilograms

To install the switch on a tabletop, shelf, or any other flat surface, follow these steps:

- 1** Set the switch on the flat surface and check for proper ventilation.
Allow at least 2 inches (5.1 cm) on each side for proper ventilation and 5 inches (12.7 cm) at the front for power cord clearance.
- 2** Attach rubber feet to each marked location on the bottom of the chassis.
The rubber feet are optional but recommended to keep the unit from slipping.

- 3 Attach all devices to the ports.

Mounting the 8010, 8006, and 8003 chassis in an equipment rack

To mount the chassis in an equipment rack, you need the following items:

- Standard 19-in. (48.2 cm) equipment rack



Note: If you are mounting the chassis in a 23-inch equipment rack, refer to the rack manufacturer's 19-inch-to-23-inch rack adapter installation instructions.

- 10 screws and washers (extra screws are shipped with the 8010 chassis)
- Phillips screwdriver

Table 6 list the maximum number of chassis installed in a 7-foot rack.

Table 6 Maximum number of chassis in 7-foot rack

Chassis	Maximum number of chassis installed in 7-foot rack
8010	3
8006	5
8003	7

To install the chassis in a 19-inch equipment rack:

- 1 Hold each rack-mounting bracket against one side of the chassis. Make sure that the attachment holes in the bracket match the holes in the chassis (Figure 8, Figure 9, and Figure 10 on page 45).



Note: Each bracket fits only one side of the chassis. The brackets are labeled R (right) and L (left). If the mounting holes do not line up between a bracket and the chassis, try that bracket on the other side of the chassis.

Figure 8 Positioning the rack-mounting brackets: 8010 chassis

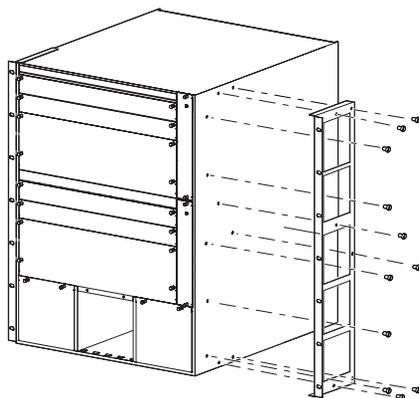


Figure 9 Positioning the rack-mounting brackets: 8006 chassis


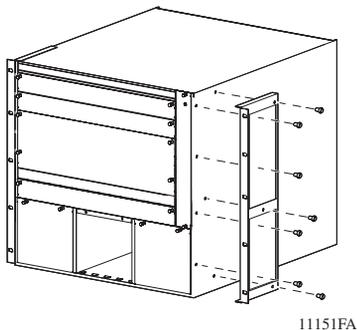


Figure 10 Positioning the rack-mounting brackets: 8003 chassis

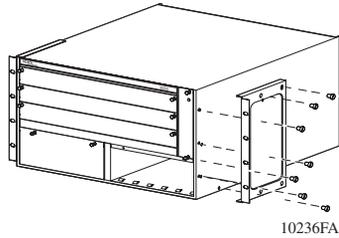

- 2 Insert and tighten the supplied flat-head screws to fasten each bracket to the chassis ([Figure 11](#), [Figure 12](#), and [Figure 13](#) on page 46).

Figure 11 Attaching the rack-mounting brackets to the chassis: 8010 chassis

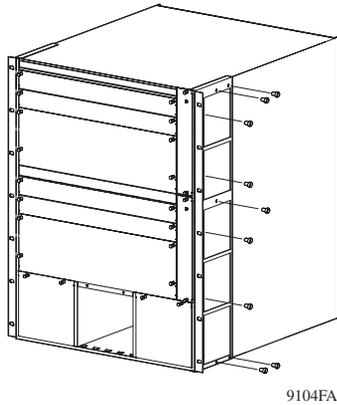


Figure 12 Attaching the rack-mounting brackets to the chassis: 8006 chassis

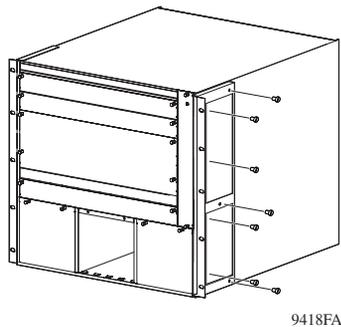
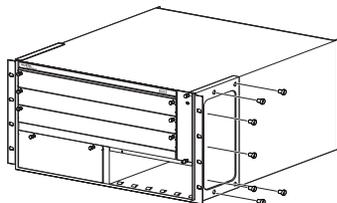


Figure 13 Attaching the rack-mounting brackets to the chassis: 8003 chassis

10237FA

- 3 Measure the appropriate number of rack units of free vertical space inside the rack and mark the spot ([Table 7](#)).

Table 7 Number of rack units to allocate for chassis

Chassis	Rack units	Inches
8010	13.2	23.10
8006	9.7	16.9
8003	6	10.5

- 4 Holding the chassis in position, align the flanged end of each mounting rail with two holes on each side of the vertical rack support.

It is easiest to complete this step with two people. Make sure that the hole pairs on either side of the vertical support match horizontally ([Figure 14 on page 47](#), [Figure 15 on page 47](#), and [Figure 16 on page 47](#)).

Figure 14 Aligning the rack-mounting brackets with the equipment rack: 8010 chassis

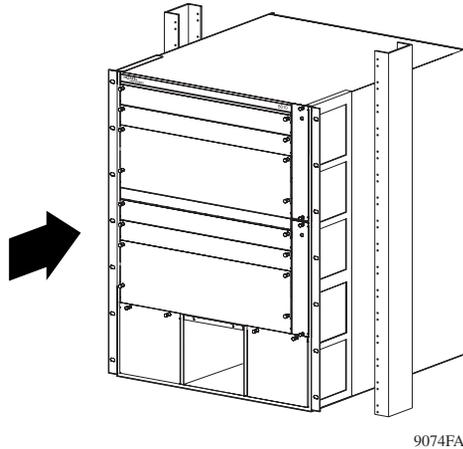


Figure 15 Aligning the rack-mounting brackets with the equipment rack: 8006 chassis


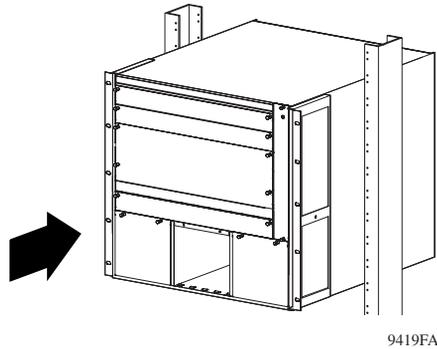


Figure 16 Aligning the rack-mounting brackets with the equipment rack: 8003 chassis

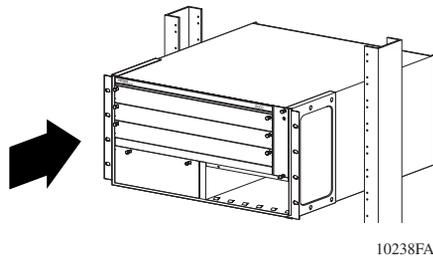

- 5 Insert and tighten the rack-mounting screws with a Phillips screwdriver (Figure 17, Figure 18, and Figure 19 on page 49).

Figure 17 Installing the 8010 chassis in an equipment rack

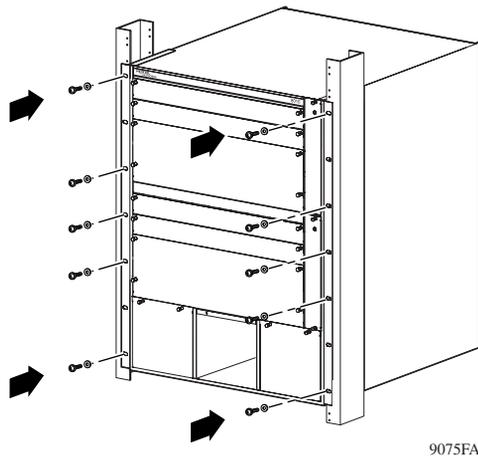


Figure 18 Installing the 8006 chassis in an equipment rack

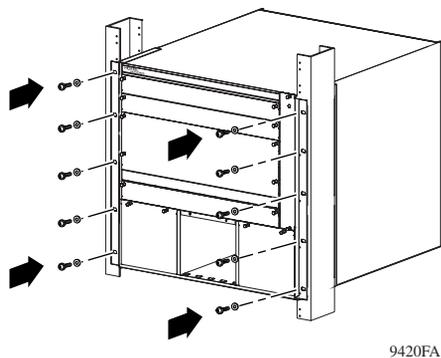
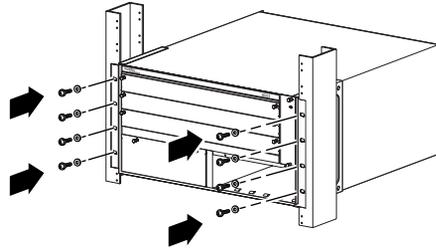


Figure 19 Installing the 8003 chassis in an equipment rack


10239FA

Installing the cable guides

The cable guides keep cable clusters fastened and out of the way, but still accessible for maintenance.

To install the cable guides:

- 1 Loosen, but do not remove, the rack-mounting screws needed to install one cable guide ([Figure 20](#), [Figure 21 on page 50](#) and [Figure 22 on page 50](#)).

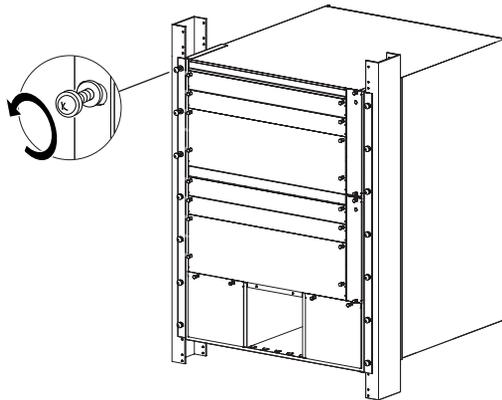Figure 20 Loosening the rack-mounting screws: 8010 chassis

9105FA

Figure 21 Loosening the rack-mounting screws: 8006 chassis


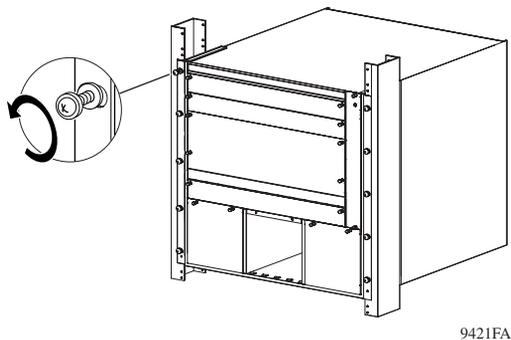


Figure 22 Loosening the rack-mounting screws: 8003 chassis

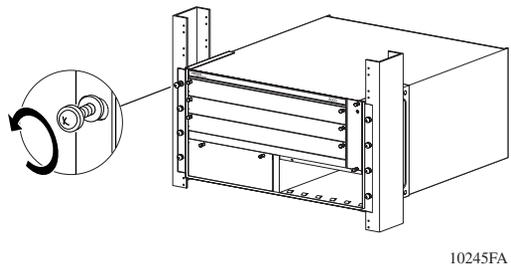

2 Slide the guide onto the loosened screws ([Figure 23](#), [Figure 24 on page 51](#)).

Figure 23 Sliding the cable guide onto the screws (8010 and 8006 chassis)


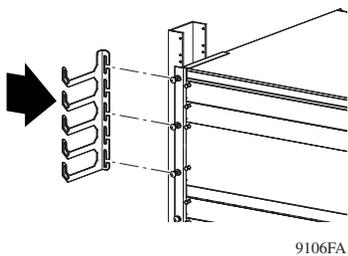


Figure 24 Sliding the cable guide onto the screws: 8003 chassis

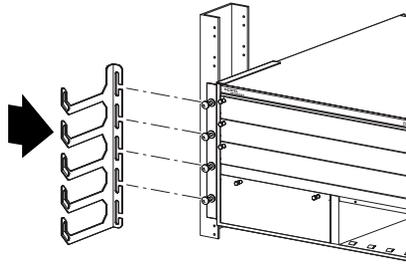

- 3 Tighten the screws to secure the guide to the chassis (Figure 25, Figure 26, and Figure 27 on page 52).

Figure 25 Securing the cable guide to the chassis: 8010 chassis

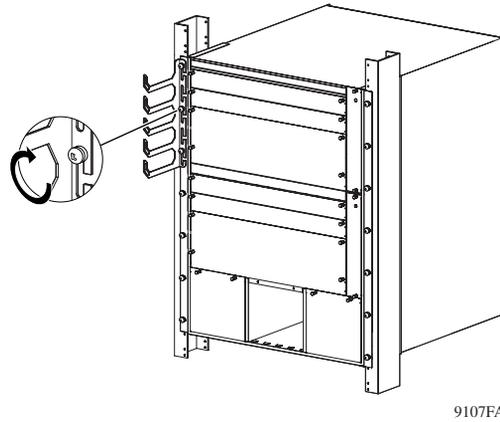


Figure 26 Securing the cable guide to the chassis: 8006 chassis


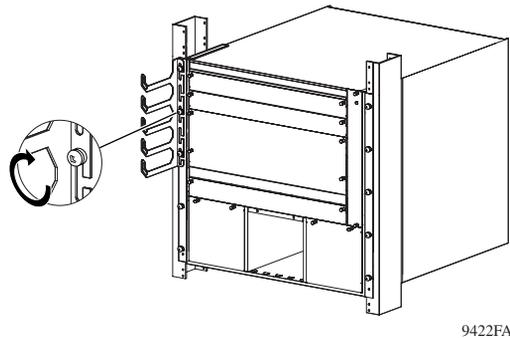


Figure 27 Securing the cable guide to the chassis: 8003 chassis

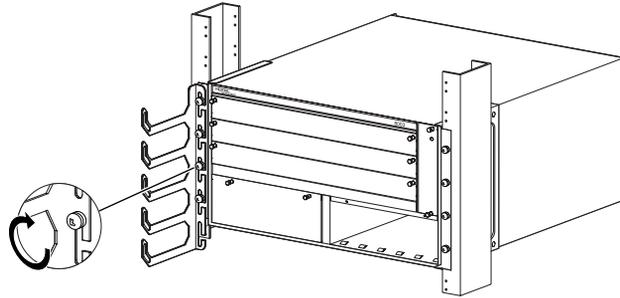

10247FA

Chapter 3

Installing the 8010co chassis

This chapter describes how to install the 8010co chassis. It includes the following topics:

Topic	Page
Preparing to install the 8010co chassis	53
Installing the chassis	58
Grounding the 8010co chassis	69



Note: If you plan to install 8004DC power supplies and the optional breaker interface panel (BIP), first install the 8010co chassis as described in this chapter, then install the 8004DC power supplies as described in *Installing a DC Power Supply in an 8000 Series Switch (313070-D)*. Install the BIP as described in *Installing the Breaker Interface Panel for the 8010co Chassis (312755-E)*.

The BIP (DS1400001) does not support the 8005DC power supply.

Preparing to install the 8010co chassis

Before beginning the installation, verify that:

- Your shipment is complete and undamaged.
- You have the cables, tools, and other equipment that you need.
- Your installation site meets the physical, electrical, and environmental requirements.

The sections that follow provide information to help you prepare for installation.

Shipment contents

Inspect all items for shipping damage. If you detect any damage, do not install the 8010co chassis. Call the Nortel Networks Technical Solutions Center in your area (see [“How to get help” on page 21](#)).

In addition to the 8010co chassis, your shipping container contains several hardware accessories. Verify that the items in the shipping container match those on the shipment packing list.


Use [Table 8](#) as a checklist when verifying the contents of the shipping container.

Table 8 8010co chassis shipping accessories

Check	Accessory	Use to
	Antistatic wrist strap	Direct the discharge of static electricity from your body to the chassis, thereby avoiding discharge to, and possible damage of, sensitive electronic components.
	<ul style="list-style-type: none"> • One cable adapter • One 10-foot console serial cable 	Connect an optional management console.
	Screws and hardware: <ul style="list-style-type: none"> • 12 Phillips head screws • 12 self tapping hex head screws • 12 clipnuts • 4 Phillips head screws • 4 hex nuts • 4 self tapping hex head screws • 4 pan head screws 	NOTE: The hardware required for mounting the chassis in a rack depends on your rack type. Mount the chassis to a rack rail. Mount the chassis to a Hendry rack. Use the clipnuts if necessary. NOTE: The hardware required for mounting the installation shelf in a rack depends on your rack type. Mount the installation shelf to a rack rail. Mount the installation shelf to a rack rail. Mount the installation shelf to a Hendry rack. Install the cable management bracket.
	Installation shelf	Eases mounting the 8010co chassis in an equipment rack.
	1 upper cable management bracket	Manage network interface cables.
	2 side cable management brackets	Manage network interface cables.
	Bottom bezel	Cover the power supplies and separate the chassis air intake from the power supply air intake.

Figure 28 illustrates the accessories in the 8010co chassis shipping container.

Figure 28 Accessories in the 8010co chassis shipping container

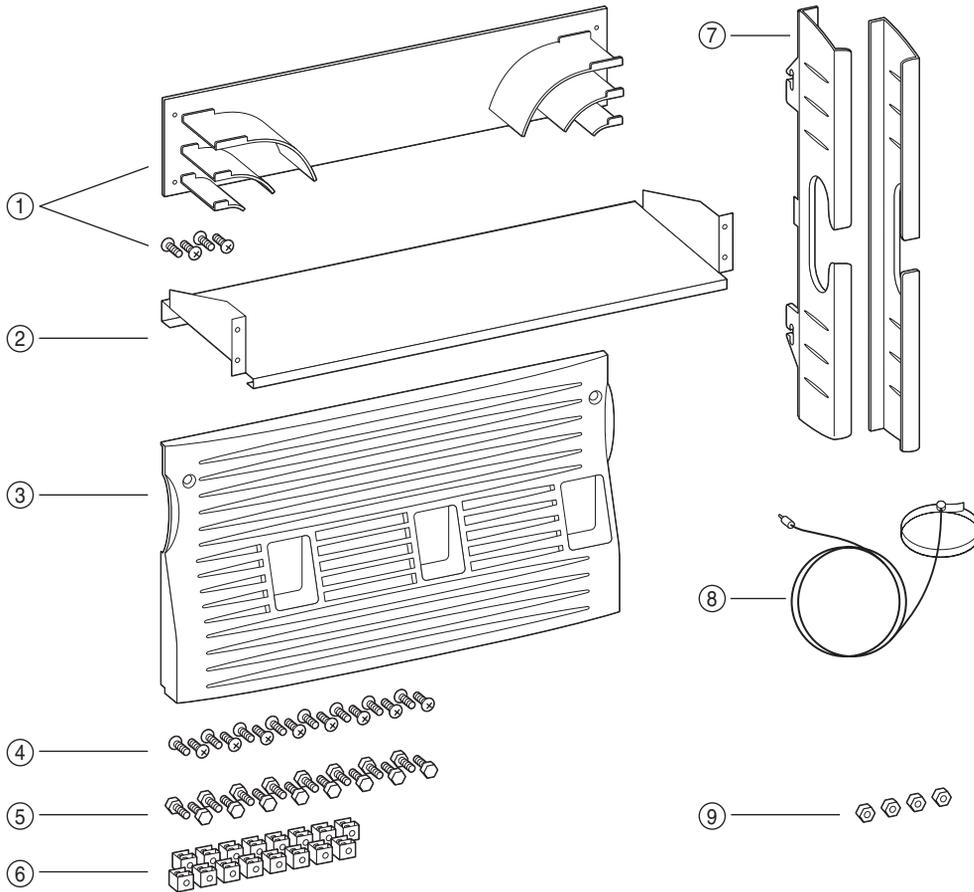

1 = Upper cable management bracket and screws (x 4)

2 = Installation shelf

3 = Bottom bezel

4 = Phillips head screws for mounting chassis and installation shelf in a standard 19-inch rack (x 16)

5 = Hex head screws for mounting chassis and installation shelf in a Hendry rack (x 16)

6 = Clipnuts, use as required for rack type (x 16)

7 = Side cable management brackets (x 2)

8 = Antistatic wrist strap

9 = Hex nuts for mounting installation shelf in a standard 19-inch rack (x4)

10452FB

Supplying equipment

You might need items that are not included in the 8010co chassis accessory package. Before installing the 8010co hardware, ensure that you have all the cables, tools, and other equipment that you need.

Cables

Unless you specifically ordered them, the cables required for your network configuration are not included in the 8010co chassis accessory package. If you do not have the proper cables, contact your network administrator.

Hardware for mounting the chassis in an equipment rack

The hardware required for mounting the 8010co chassis in an equipment rack depends on your equipment rack type.

You will need a Phillips screwdriver to install the 8010co chassis in a standard rail-type equipment rack. You will need a nutdriver to install the 8010co chassis in a Hendry rack.

The racks must meet the following specifications:

- Heavy-duty steel construction
- Electronic Industries Association (EIA) standard hole-spacing
- Two-post rack with width of 19 in. (48.26 cm) and depth of 24 in. (60.96 cm)
- Two-post rack with width of 23 in. (58.42 cm) and depth of 24 in. (60.96 cm) (Requires an EIA 19-to-23-inch adapter. Contact your rack manufacturer to order this adapter).

If the rack does not have threaded rail holes, you must use the supplied clipnuts with the clipnut screws (see [Figure 31 on page 63](#)).

Management console

To configure startup options and to monitor the results of startup diagnostics, you can attach a PC, laptop, VT-100 console or equivalent, such as a PC terminal emulator. Or, you can attach an AT-compatible modem to allow dial-in access to startup configuration and diagnostics.

Site requirements

Ensure that the installation site meets the space, electrical, and environmental requirements listed in this section. See [Appendix A, “Technical specifications for the Passport 8000 Series Chassis,”](#) on page 95 for more information.

Space requirements

The installation site must provide sufficient free space around the 8010co chassis to ensure proper ventilation and access for servicing.

Use the following guidelines to plan front and rear access:

- The maintenance aisle in front of the frame requires a clearance of 76.2 cm (30 inches).
- The wiring aisle at the back of the frame requires a clearance of 61 cm (24 inches).

AC input electrical requirements

Refer to the power specifications for the power supply in [Appendix A, “Technical specifications for the Passport 8000 Series Chassis,”](#) on page 95,

DC input electrical requirements

If you are installing a BIP, the installation site must meet the following electrical requirements for DC power ([Table 9](#)).

Table 9 DC power requirement for BIP

Nominal input voltage	Maximum input current	Physical
-48 VDC	60 A per DC input feed	Reinforced insulation from the main DC power

If you are not installing a BIP, refer to the system power specifications for the 8004DC or 8005DC power supply in [Appendix A, “Technical specifications for the Passport 8000 Series Chassis,”](#) on page 95.

Environmental requirements

The installation site must meet the following environmental requirements (Table 10).

Table 10 Environmental requirements

Environmental specifications	
Operating temperature:	-5° to 55° C (23° to 131° F)
Storage temperature:	-40° to 70° C (-40° to 158° F)
Operating humidity:	90%
Storage humidity:	92.5%
Operating altitude:	13,123 ft. at 35° C and 45° C 6,000 ft. at 55° C -200 ft. at 55° C
Storage altitude:	40,000 ft

Installing the chassis

To install the 8010co chassis, you can mount the 8010co chassis in a standard two-post equipment rack.



Note: To make the chassis lighter to install, you should do the following:

- Remove the power supply filler panels (see “Removing and Installing a Power Filler Panel” in *Installing an AC Power Supply in an 8000 Series Switch (312751-D)* or *Installing a DC Power Supply in an 8000 Series Switch (313070-D)*).
 - Remove the module filler panels (see “Removing and Installing a Filler Panel” in *Installing Passport 8600 Switch Modules (312749-J)*).
 - Remove the fan trays (see *Installing a Fan Tray in an 8000 Series Switch (312752-D)*).
-

Mounting the 8010co chassis in a two-post rack

To mount the 8010co chassis in a two-post rack, you need the following equipment:

- Installation shelf (shipped with the 8010co chassis)
- A standard 19-inch or 23-inch equipment rack

Attach the clipnuts shipped with the 8010co chassis if necessary.




Note: To install the 8010co chassis in a 23-inch equipment rack refer to the rack manufacturer's 19-to-23-inch adapter installation instructions.

The hardware required for mounting the chassis in a rack depends on your rack type. Use the 12 Phillips screws and a Phillips screwdriver to install the chassis in a standard rack. Use the 12 hex head screws and a nutdriver to install the chassis in a Hendry rack.

In a 7-foot two-post rack, you can install two 8010co chassis platforms and a BIP.

[Figure 29 on page 60](#) shows two 8010co chassis with a BIP installed in a two-post rack.

Figure 29 Two 8010co chassis with BIP in a two-post rack

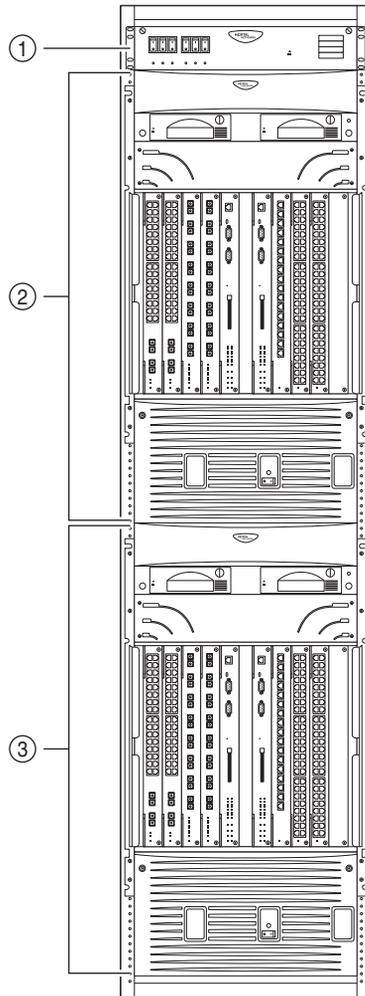

- 1 = Breaker interface panel
- 2 = 8010co Chassis (upper shelf position)
- 3 = 8010co Chassis (lower shelf position)

10404EC

Mounting the 8010co chassis in a 19-inch rack

To install the 8010co chassis in a 19-inch two-post rack:

- 1 Place the installation shelf at the bottom of the rack inside the rails.
- 2 Holding the installation shelf in position, align the shelf's mounting rail with two holes on each side of the vertical rack support.
- 3 Insert a Phillips screw through each installation shelf mounting hole and into the corresponding hole in the rack (Figure 30 on page 62).
- 4 Add a hex nut to each screw and tighten using a hex wrench.
- 5 Tighten each screw with a Phillips screwdriver.
- 6 If the holes in the rack's vertical supports requires clipnuts, insert a clipnut in 12 locations.
- 7 Lift the 8010co chassis onto the installation shelf.



Warning: It requires three people to lift the 8010co chassis. You must remove the I/O modules and power supplies before lifting.

- 8 Holding the 8010co chassis in position, align the flanged end of the chassis mounting rail with six holes on each side of the vertical rack support (Figure 31 on page 63).
- 9 Make sure that the hole pairs on either side of the vertical support match horizontally.
- 10 Tighten each screw with a Phillips screwdriver.

Figure 30 Installing the installation shelf in a 19-inch equipment rack


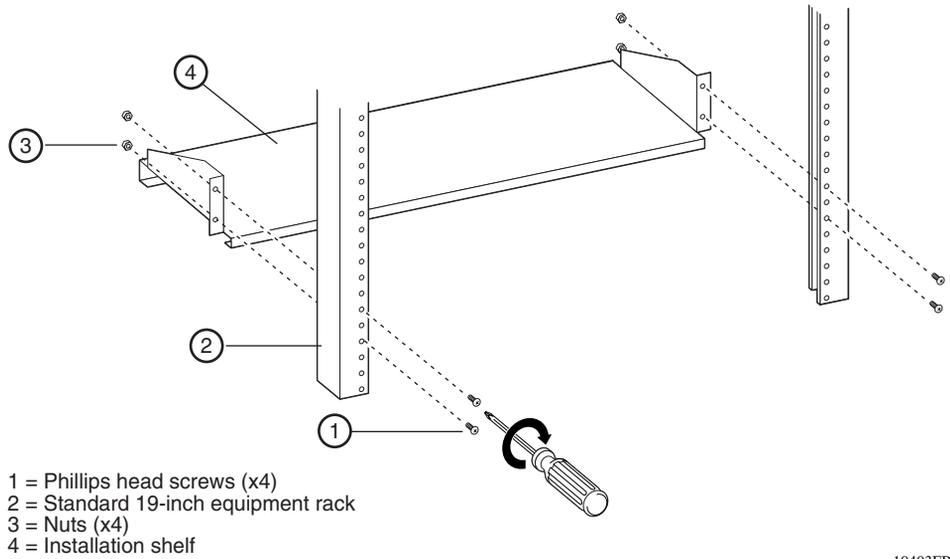


Figure 31 Installing the 8010co chassis in a 19-inch two-post rack

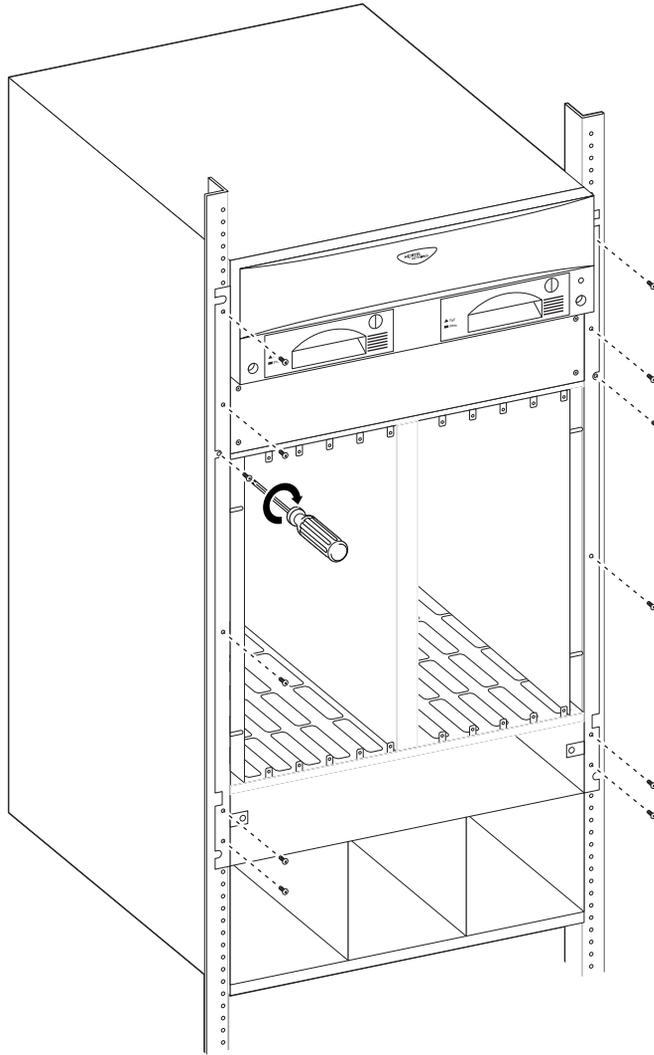


10225FA

Mounting the 8010co chassis in a Hendry rack

To install the 8010co chassis in a Hendry rack:

- 1 Place the installation shelf at the bottom of the rack.
- 2 Holding the installation shelf in position, align the shelf's mounting rail with two holes on each side of the vertical rack support.
- 3 Insert a hex head screw through each installation shelf mounting hole and into the corresponding hole in the rack (Figure 32).


Figure 32 Installing the installation shelf in a Hendry rack

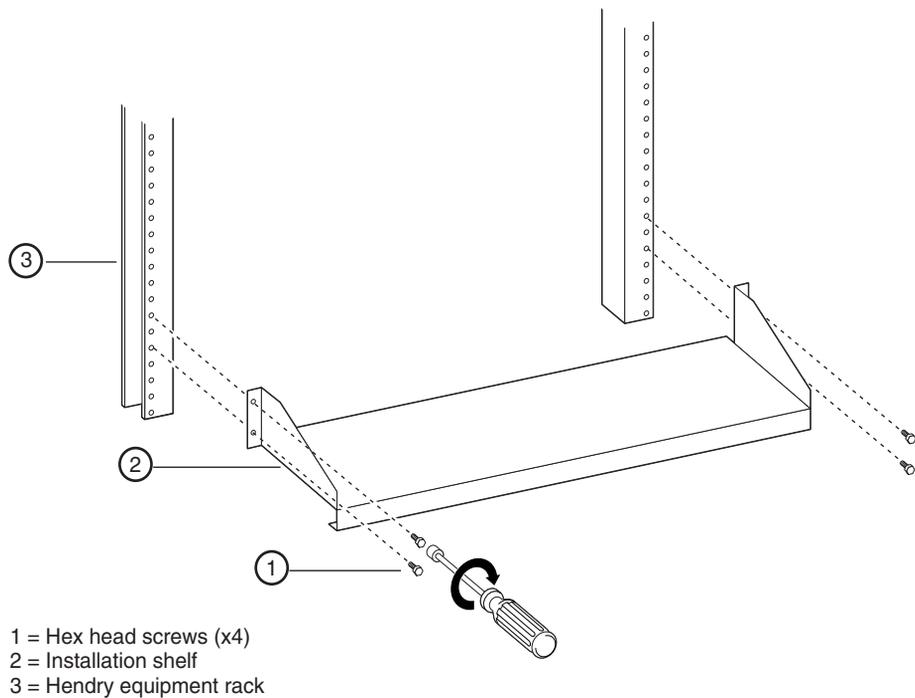

10402FB

- 4 Tighten each screw with a nutdriver.
- 5 Using a Phillips screwdriver, remove the 5 screws securing each of the two mounting rails to the 8010co chassis (Figure 33 on page 65).


Figure 33 Removing the mounting rails from the 8010co chassis

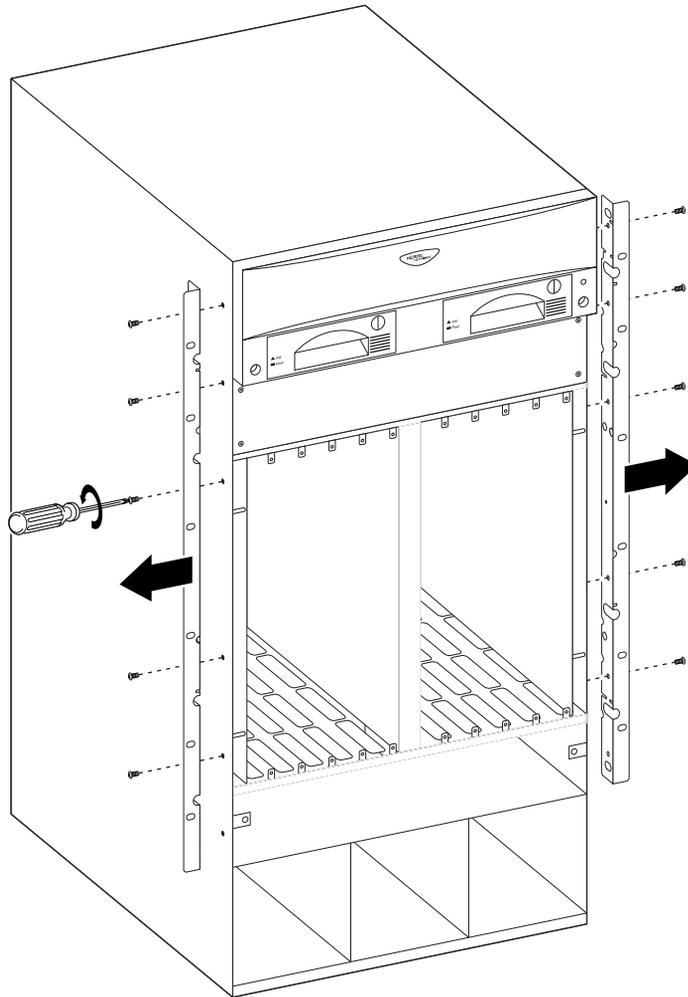

10417FA

- Using the 10 screws that you removed from the two mounting rails, reinstall the mounting rails as shown in [Figure 34](#).

Figure 34 Installing the mounting rails for a Hendry rack

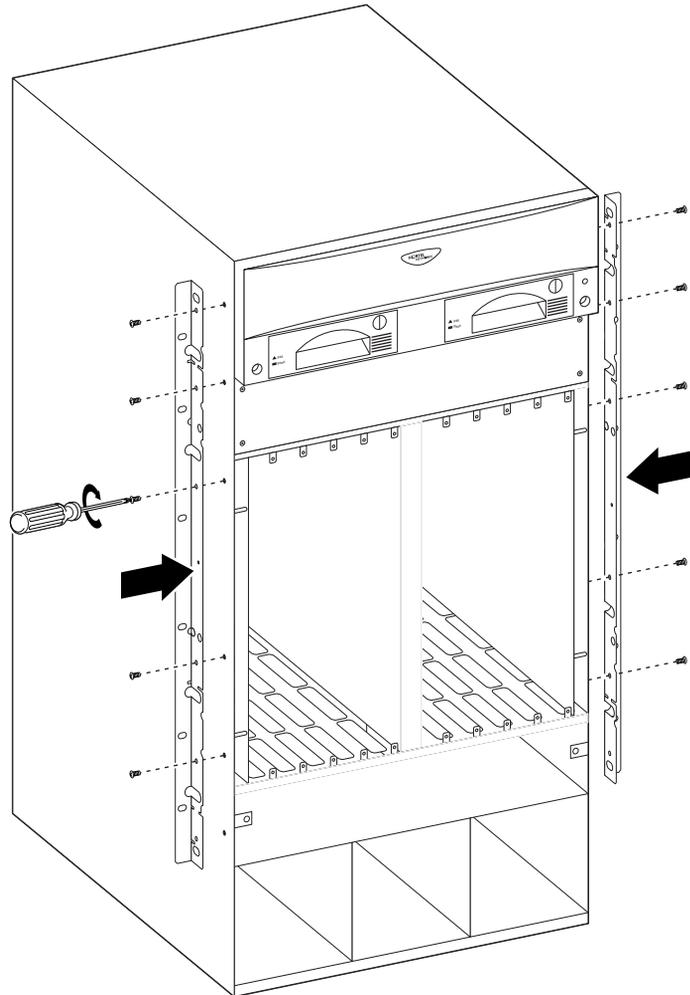

10418FA

- If the holes in the rack's vertical supports require clipnuts, insert a clipnut in 12 locations.

- 8 Lift the 8010co chassis onto the installation shelf.



Warning: It requires three people to lift the 8010co chassis. You must remove the interface modules and power supplies before lifting

- 9 Holding the 8010co chassis in position, align the flanged end of the chassis mounting rail with six holes on each side of the vertical rack support.
- 10 Make sure that the hole pairs on either side of the vertical support match horizontally.
- 11 Tighten each clipnut screw with a Phillips screwdriver.



Note: After the 8010co chassis is secured in the rack, you can remove the installation shelf.

Installing the cable management brackets

The cable management brackets keep groups of cables fastened and out of the way, but accessible for maintenance.


To install the top cable management bracket:

- 1 Align the mounting retainers on the inside of the top cable management bracket with the holes on the front of the chassis ([Figure 35 on page 68](#)).
- 2 Push the sides of the top cable management bracket in place.
- 3 Insert and tighten the 8 screws using a Phillips screwdriver to secure the top cable management bracket to the chassis ([Figure 35 on page 68](#)).

To install the two side cable management brackets:

- 1 Align the slots on the side bracket with the rods in the chassis ([Figure 35 on page 68](#)).
- 2 Push the bracket into place.

Figure 35 Installing cable management brackets

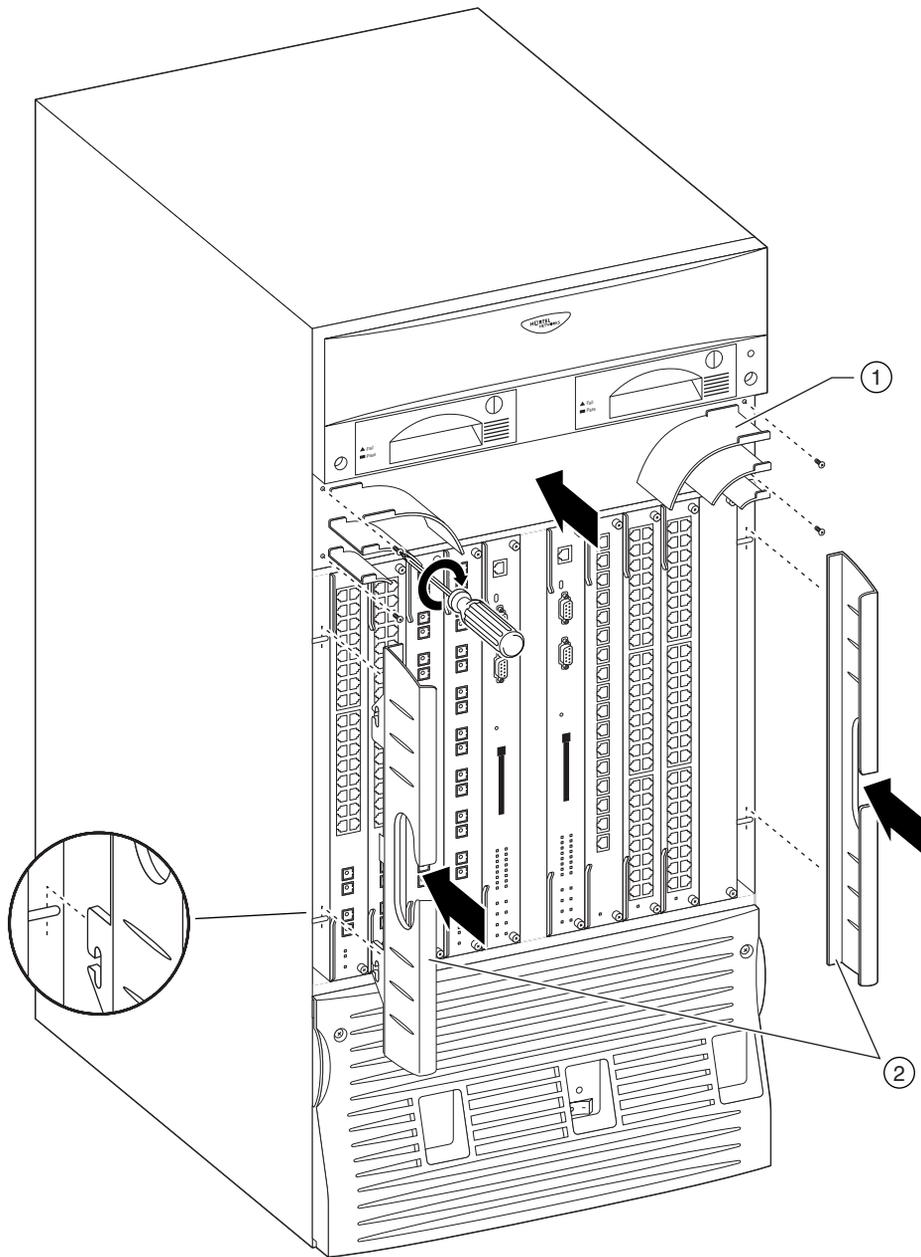


- 1 = Top cable management bracket
- 2 = Side cable management brackets (x2)

10217FB

Grounding the 8010co chassis

Before you connect power cables or network cables to your switch, Nortel Networks recommends that you ground the 8010co chassis. [Figure 36](#) shows the location of the ground studs on the 8010co chassis rear panel.

Figure 36 Location of 8010co chassis ground studs

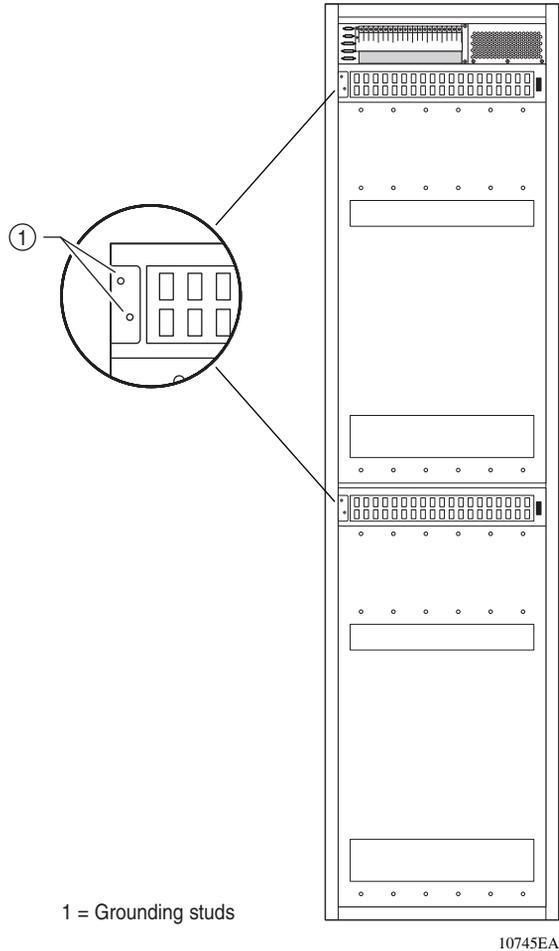

To attach a ground to one of the chassis grounding studs, you need the following:

- One single-hole cable lug that fits over one of the grounding studs
- Nut and a locking washer for the grounding stud.
- 6-AWG grounding wire that is long enough to connect to the ground point.
- 7/16-inch hex wrench to fasten the hardware in the correct order.


[Figure 37 on page 71](#) shows an example of how to ground two 8010co chassis and a BIP. For this example, each chassis is configured with three 8004DC power supplies.



Note: Your rack-grounding strip may look different or may be in a different location than the one shown in the following example.

[Table 11 on page 72](#) describes the reference items shown in [Figure 37 on page 71](#).

Figure 37 Chassis and 8004DC power supply grounding example

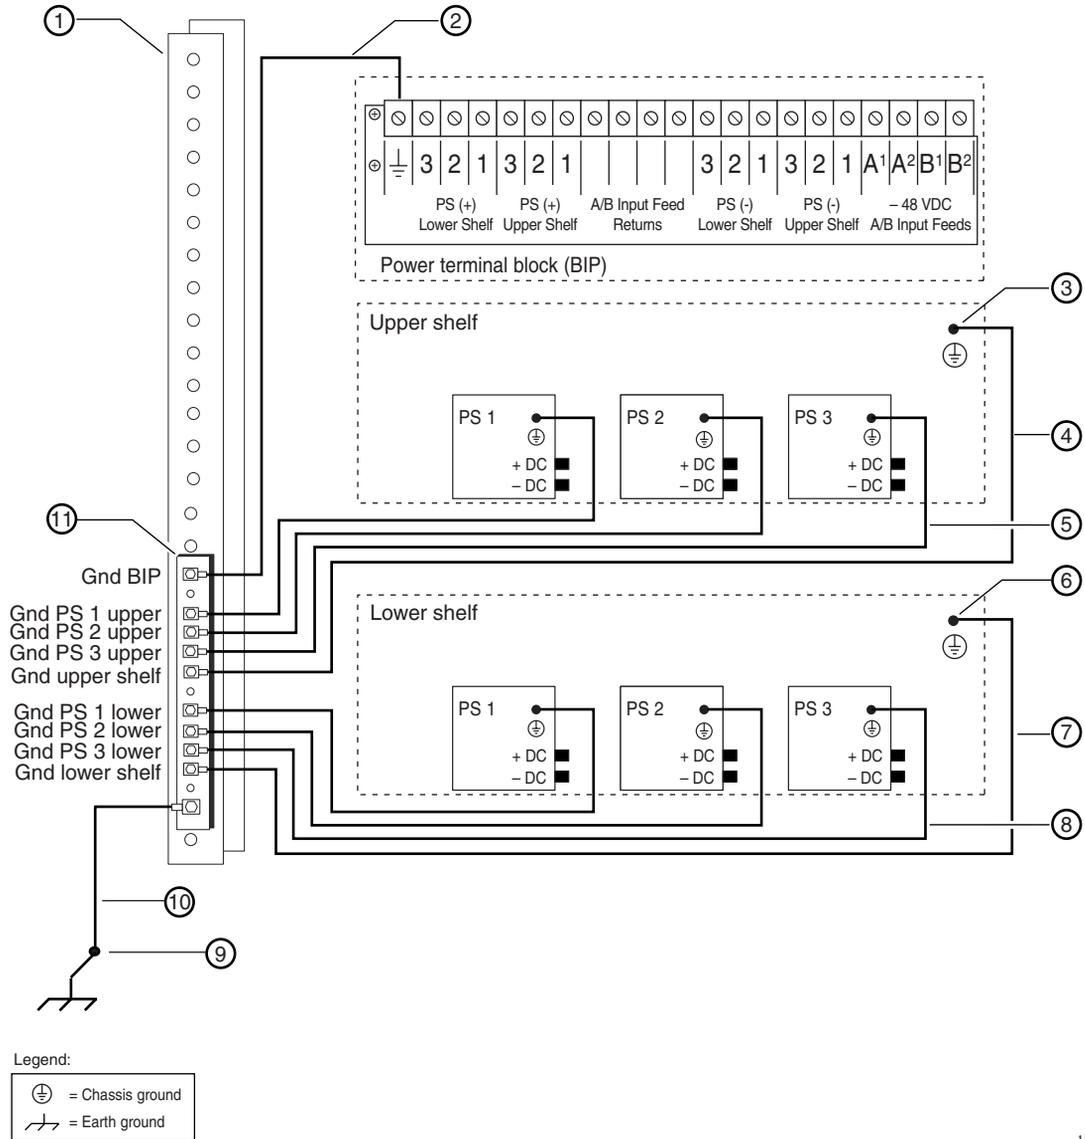


10761EA

Table 11 Item description for chassis and 8004DC power supply grounding

Item	Description
1	Cabinet frame or equipment rack
2	AWG#6 ground lead (provided with BIP)
3	Upper shelf chassis ground stud.
4	Upper shelf ground lead (not provided).
5	Upper shelf power supply ground leads x 3. (Provided with BIP option)
6	Lower shelf chassis ground stud
7	Lower shelf ground lead (not provided)
8	Lower shelf power supply ground leads x 3. (Provided with BIP option)
9	Single point ground system
10	Awg #6 ground lead (not provided). Customer provides lead to ground cabinet frame or equipment rack.
11	Rack ground strip (example only). Design and location of this item determined by customer

[Figure 38 on page 73](#) shows an example of how to ground two 8010co chassis. For this example, each chassis is configured with three AC power supplies. [Table 12 on page 74](#) describes the reference items shown in [Figure 38 on page 73](#).

Figure 38 Chassis and AC power supply grounding example

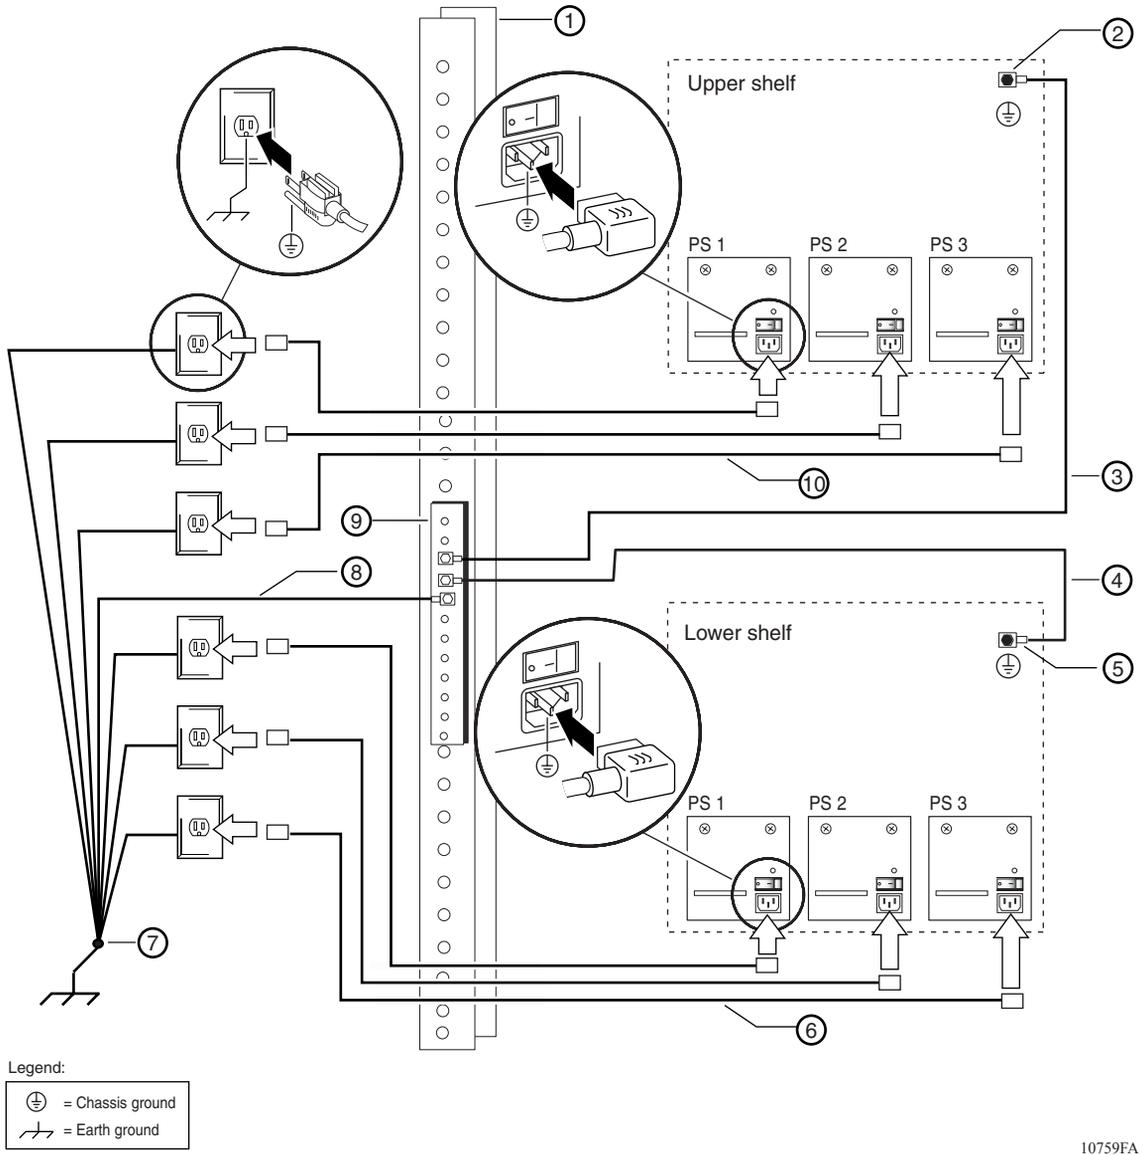

10759FA

Table 12 Item description for chassis and AC power supply grounding

Item	Description
1	Cabinet frame or equipment rack
2	Upper shelf chassis ground stud
3	Upper shelf ground leads (not provided)
4	Lower shelf chassis ground stud
5	Upper shelf ground leads (not provided)
6	AC equipment ground (ACEG) leads within individual lower shelf cords (x 3)
7	Single-point ground system
8	Awg #6 ground lead (not provided). Customer provides lead to ground cabinet frame or equipment rack
9	Rack ground strip (example only). Design and location of this item determined by customer
10	AC equipment ground (ACEG) leads within individual upper shelf cords (x 3)

Connecting the ground cables to the rack grounding strip

To connect the chassis ground cables to the rack grounding strip:

- 1 Locate the shelf grounding point on the rack. This grounding point could be a grounding strip at the back base, top, or side of the rack.




Note: Figure 39 shows an example of a rack grounding strip. Your rack grounding strip may look different than the one shown in this example.

- 2 Attach the lug ends of the chassis ground cables to the rack grounding strip (Figure 39).

Use a 7/16-inch hex wrench to fasten the hardware in the correct order.

Figure 39 Rack grounding strip example

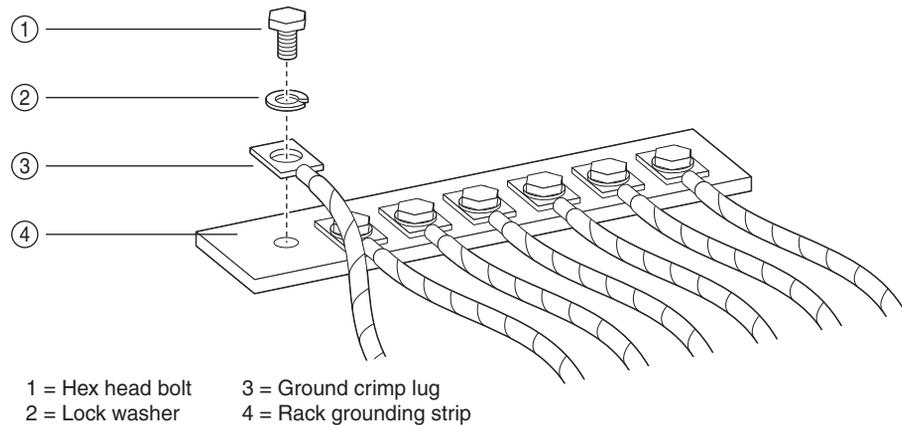

10433FA

Chapter 4

Operating the Passport 8000 Series switch

This chapter describes some of the routine tasks of operating the Passport 8000 Series switch and provides troubleshooting information. It includes the following topics:

Topic	Page
Turning the Passport 8000 Series switch on and off	78
Verifying a successful installation	81
Configuring the chassis to operate in default, M, or R mode	82
Resetting the Passport 8000 Series switch	82
Removing removable flash memory cards	85
Protecting memory card files	86
Replacing an air filter (8010co chassis only)	87
Troubleshooting	90

Turning the Passport 8000 Series switch on and off

If the Passport 8000 Series chassis has one or more DC power supplies, go to the next section, “[Turning DC power supplies on and off](#).” If the Passport 8000 Series Chassis has one or more AC power supplies, go to “[Turning AC power supplies on and off](#)” on page 80.


Turning DC power supplies on and off

To turn on a Passport 8000 Series switch with a DC power source:

- 1 If you are turning on a 8010co chassis with a DC power source and the chassis is connected to the optional breaker interface panel, make sure that the circuit breakers on the BIP are in the on position.
- 2 Turn the power switch on each DC power supply to the on position ([Figure 40 on page 79](#)). Do not remove the bezel to turn the switch on. You can access the switch with the bezel on. Do not operate the 8010co chassis with only one power supply.



Note: Due to the N + 1 power system architecture, if your chassis contains two or three power supplies, Nortel Networks recommends that you turn on the power supplies simultaneously. If you wait longer to turn on the second power supply, one of the power supply(s) could shut off within 7 seconds. To correct this condition, turn off the power supplies for a short period of time, and then turn on the power supplies again simultaneously.

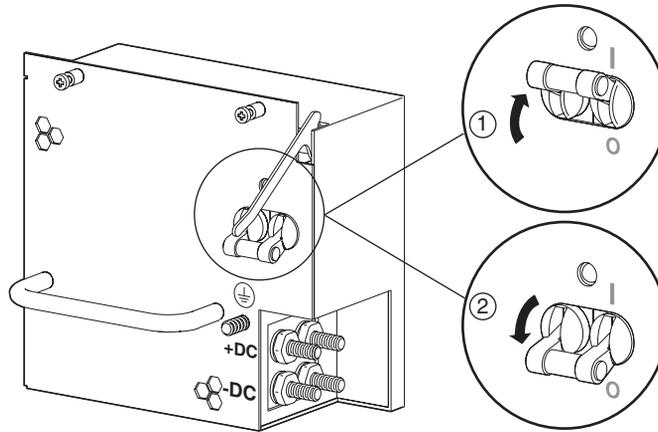Figure 40 DC power supply power switch

1 = On
2 = Off

10298FA

- 3 Verify that the power output LED for each power supply lights green.
- 4 Verify that the power supply status LEDs and the fan LED on the 8691SF or 8692SF CPU modules light green.
- 5 Verify that air is flowing from the cooling fans out through the back of the 8010co chassis.



Note: The fan tray red fail LED may light briefly while the fans are powering to operational speed.

After you turn on the Passport 8000 Series switch, each module automatically initiates a diagnostic test to verify proper module function (see [“Verifying a successful installation” on page 81](#)).

If the power supply LED remains off, or if you cannot feel air flow from the 8010co chassis vents, do the following:

- 1 Turn the power switch on each power supply to the off position.
- 2 If the installed chassis is the 8010co chassis and it is connected to the optional breaker interface panel, make sure that the circuit breakers on the BIP are in the off position.
- 3 Wait 1 minute.

- 4 If the installed chassis is the 8010co chassis and it is connected to the optional breaker interface panel, turn the circuit breakers on the BIP to the on position.
- 5 Turn the power switch on each power supply to the on position.

If the problem persists, contact the Nortel Networks Technical Solutions Center.

To turn off a Passport 8000 Series switch with a DC power source:

- 1 Turn the power switch on each power supply to the off position (see [Figure 40 on page 79](#)).
- 2 If the installed chassis is the 8010co chassis and it is connected to the optional breaker interface panel, make sure that the circuit breakers on the BIP are in the off position.

Turning AC power supplies on and off

To turn on a Passport 8000 Series switch with an AC power supply:

- 1 Verify that the AC power cords are connected to AC power outlets.
- 2 Turn the power switch on each AC power supply to the on position. Do not operate the 8010co chassis with only one power supply.



Note: Due to the N + 1 power system architecture, if your chassis contains two or three power supplies, Nortel Networks recommends that you turn on the power supplies simultaneously. If you wait longer to turn on the second power supply, one of the power supply(s) could shut off within 7 seconds. To correct this condition, turn off the power supplies for a short period of time, and then turn on the power supplies again simultaneously.

- 3 Verify that the power LED on each power supply lights green.
- 4 Verify that the power supply status LEDs and the fan LED on the 8691SF or 8692SF CPU modules light green.

- 5 Verify that air is flowing from the cooling fans out through the vents of the chassis.



Note: The fan tray red fail LED may light briefly while the fans are powering to operational speed.

After you turn on the Passport 8000 Series switch, each module automatically initiates a diagnostic test to verify proper module function (see [“Verifying a successful installation” on page 81](#)).

If the power supply LED remains off, or if you cannot feel air flow from the chassis vents, turn the AC power supplies off, wait 1 minute, and then turn them on again. If the problem persists, contact the Nortel Networks Technical Solutions Center.

Verifying a successful installation

In a normal power-up sequence, the LEDs light as follows:

- 1 When power is applied to the Passport 8000 Series switch, the green LED on each power supply and fan tray turns on, and the Online LED for each module lights amber.
- 2 Each module initiates a self-test, during which the port and module LEDs display various patterns to indicate the progress of the self-test.
- 3 Upon successful completion of the self-test (within 2 or 3 minutes after power is applied for a fully loaded chassis), the module Online LED transitions from amber to green.
- 4 After one minute of operation, the fan tray Pass LED lights steady green.

If the LEDs on the modules light in this sequence, your installation is successful. Contact your network administrator to verify that the Passport 8000 Series switch is now connected to the network.

If the LEDs do not light in this sequence, contact your local Nortel Networks Technical Solutions Center.

Configuring the chassis to operate in default, M, or R mode

The Passport 8600 system has three hardware operating modes:

- Default mode (32,000 table entries) supports up to 32,000 hardware records. This mode supports all modules.
- M mode (128,000 table entries) supports up to 128,000 hardware records. This mode supports M- and R-modules only.
- R mode supports up to:
 - 256,000 IP routes
 - 64,000 MAC entries
 - 32,000 ARP entries

This mode supports R-modules only.

For information on using Device Manager or the CLI to configure the modes, see *Managing Platform Operations*.

Resetting the Passport 8000 Series switch

You can use the Reset button on the following switch fabric CPUs to reboot the Passport 8000 Series switch hardware without cycling power:


- 8691SF
- 8692SF



Note: Depressing the Reset button causes a cold restart.

Figure 41 shows the location of the Reset button.

Figure 41 Reset button

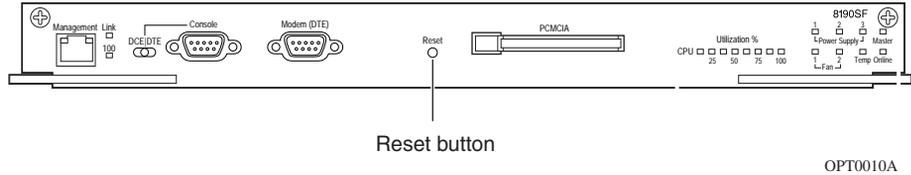

OPT0010A

Installing removable flash memory cards

To install a removable flash memory card in a 8691SF CPU Module, or 8692SF CPU Module:

- 1 Position the card with the label facing to the left and the insert arrow pointing toward the card receptacle (Figure 42 on page 84 and Figure 43 on page 84).

Figure 42 Inserting a removable flash memory card: 8010co chassis


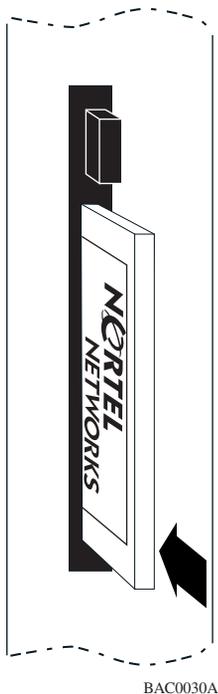


Figure 43 Inserting a removable flash memory card: 8010, 8006, and 8003 chassis

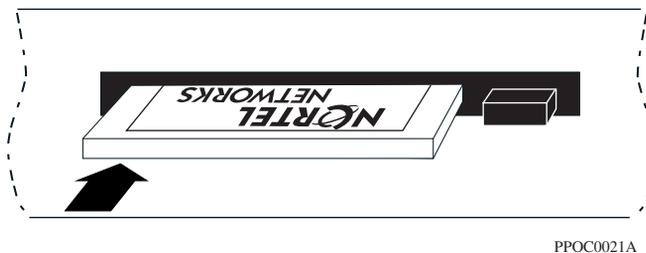

- 2 Insert the card into the card receptacle.
- 3 Gently push the card in until it fits snugly in place.


Removing removable flash memory cards

To remove removable flash memory cards from the 8691SF CPU Module, or the 8692SF CPU Module:

- 1 Press the eject button above the memory card receptacle on the 8691SF CPU Module, or the 8692SF CPU Module ([Figure 44](#) and [Figure 45 on page 86.](#))


The card pops out slightly.

Figure 44 Removing a removable flash memory card: 8010co chassis

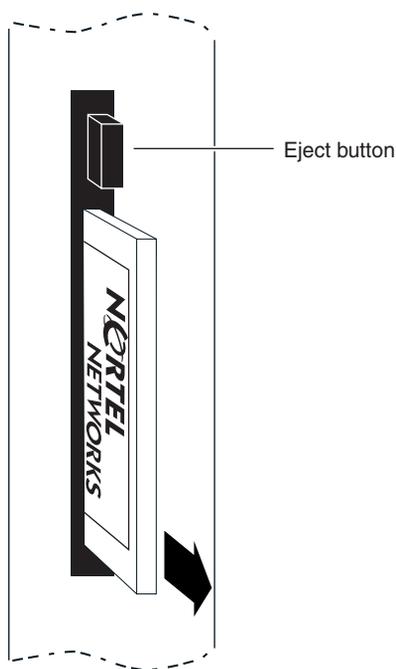

BAC0031A

Figure 45 Removing a removable flash memory card: 8010, 8006, 8003 chassis

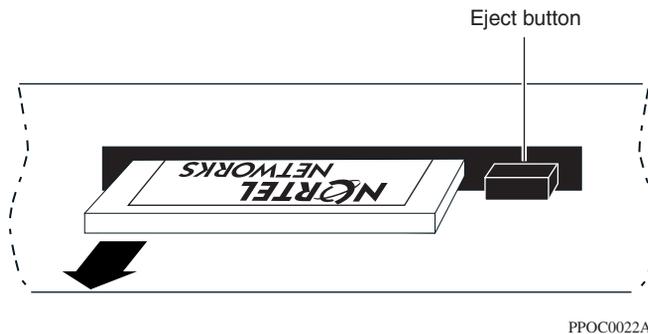

- 2 Pull the flash memory card out of the card receptacle.

Protecting memory card files

Nortel Networks ships each memory card with its read-write protect switch in the unprotected position. After you successfully load the configuration file and save your configuration, you may want to write-protect the memory card for backup purposes.



Note: You typically do not operate a Passport 8000 Series switch with a write-protected memory card. You should make a copy of your configuration on another memory card, write-protect that card, and store it in a safe place. If you do not have a second memory card you can copy your configuration to a TFTP or FTP server.

To change memory card protection:

- 1 Remove the memory card from the 8000 Series chassis.
 - a Press the eject button above the memory card receptacle (see [Figure 44 on page 85](#)).


- b Pull the card out of the card receptacle.



Caution: You must remove the card from the Passport 8000 Series chassis before changing the read-write protection. Failure to remove the card may result in improper write protection.

- 2 Locate the read-write protect switch on the edge opposite the arrow on the memory card (Figure 46).

Figure 46 Memory card read-write protect switch

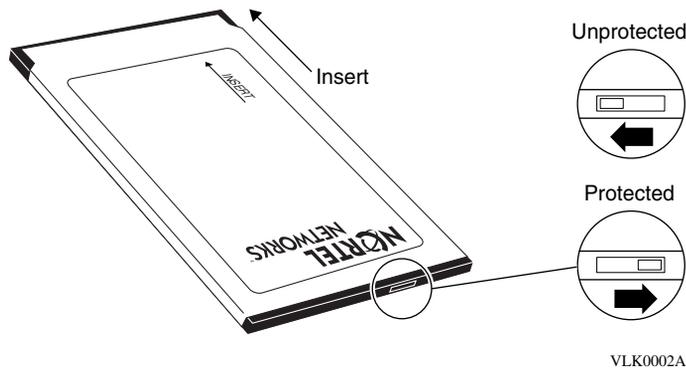

- 3 Adjust the read-write protect switch.
- 4 Reinsert the memory card into the card receptacle (see Figure 42 on page 84).
 - a Position the card with the label facing to the left and the insert arrow pointing toward the card receptacle.
 - b Insert the card into the card receptacle.
 - c Gently push the card in until it fits snugly in place.

Replacing an air filter (8010co chassis only)

To maintain proper operation of the 8010co chassis, you must periodically replace the air filter in the chassis. How often you need to replace the air filter depends on the conditions of cleanliness at the installation site. Replacement air filters (part number 312194-A) are available from Nortel Networks. To order, contact the Nortel Networks Technical Solutions Center.

The air filter complies with the following standards:

- Telcordia (formerly Bellcore)
- GR-63-CORE
- GR-78-CORE
- UL 94 HF-1 flame safety

Table 13 lists the air filter physical specifications.

Table 13 8010co air filter physical specifications

Parameter	Specifications
Part number	312194-A
Height	1.09 cm (0.43 in.)
Width	43.68 cm (17.20 in.)
Depth	46.27 cm (18.22 in.)

Nortel Networks recommends that you replace the air filter every three months. After you install the first 8010co chassis at your site, inspect the air filter monthly until you can establish an average period of replacement.

If you install a second 8010co chassis in the same equipment rack, the effect of the total airflow on the filters changes. Inspect the air filters frequently: the average period of replacement for the lower air filter can differ from that of the upper air filter because of its proximity to the floor. You may want to replace both filters according to the shortest average.


Removing and inserting an air filter (8010co chassis only)

Replace an air filter in the 8010co chassis while the switch continues to operate. To minimize the amount of time that the switch operates without an air filter, have the replacement filter ready to install before you remove the old one.

- 1 Open the container of the new air filter.
- 2 Remove the bottom front bezel of the 8010co chassis. For instructions, see the instructions for removing the bottom front bezel of the 8010co chassis in your power supply document.

- 3 Remove the installed air filter from its housing and set it aside.
If dust is visible on it, move it to another area to prevent dust re-contamination.
- 4 Hold the new filter by its short sides with the airflow indicator pointing up and align it with the filter housing (Figure 47).
- 5 Slide the new filter gently into the housing.
- 6 Reinstall the bottom front bezel.

Figure 47 Inserting an air filter into the 8010co chassis

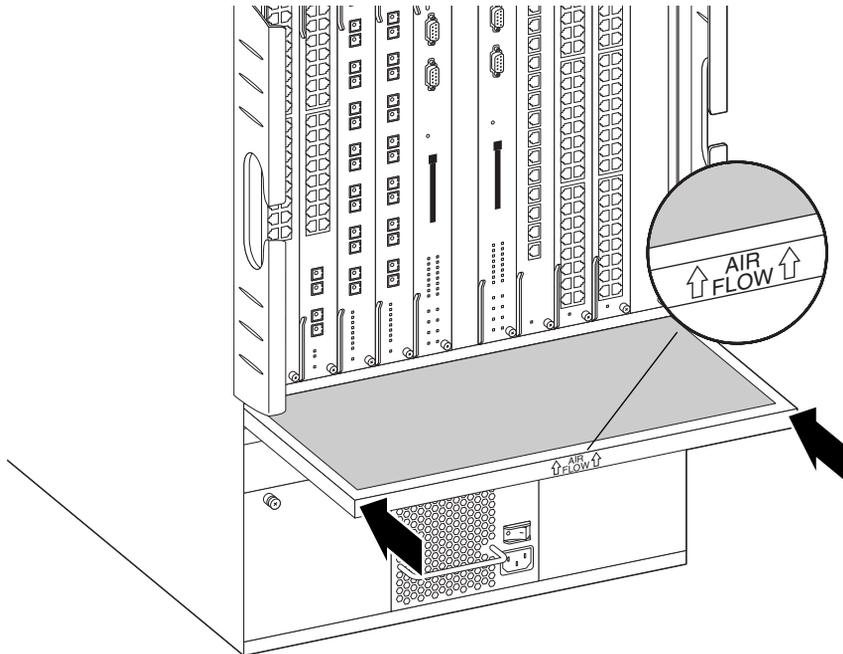

10282FB

Troubleshooting

The following sections provide troubleshooting information for some of the more common problems that you may encounter with the Passport 8000 Series switch.

Topic	Page
LED indications of problems	90
Apparent module failure	91
Failure to get a login prompt from the Console port	92
Cable connection problems	93

LED indications of problems

[Table 14](#) lists possible problems indicated by the LEDs on the switch modules and suggests corrective action.

Table 14 LED problem indicators

Symptom	Probable cause	Corrective action
Green AC power supply LEDs are off.	The switch is not receiving AC power or the power supply has failed.	Verify that each AC power cord is fastened securely at both ends and that power is available at each AC power outlet. Plug in a device such as a lamp to ensure that the power outlet is operational. Verify that each power supply is turned on.
The Link/Activity LED for a connected port is off or does not blink (and you believe that traffic is present).	The switch is experiencing a port connection problem, or the switch's link partner is not auto-negotiating properly.	Verify that the cable connections to the link partner are correct. Verify port configuration parameters for both ends of the connection. Move the cable to another port to see whether the problem occurs on the new port.
The Link/Activity LED blinks continuously.	There may be a high traffic load or possible packet broadcast storm.	Verify port configuration parameters for both ends of the connection.
The Online LED is steady amber for longer than 3 minutes.	Software incompatibility exists, or the module cannot communicate with the master module over the backplane.	Use the <code>show log</code> command to check the system log for indications of communication problems. Use the <code>boot</code> command to download a new software image.

Table 14 LED problem indicators (continued)

Symptom	Probable cause	Corrective action
The Master LED on a module in slot 1 or slot 2 is amber.	The module has detected a system clock generation failure on its own circuitry.	Replace the module; make sure that it is in the correct slot. Note: This LED has significance only for the module in slot 1 or slot 2 that provides the clock function for the switch.
The Fault LED is blinking amber.	A chassis failure has been detected.	From the console management station, use the <code>show log</code> command to check the system log for information about hardware failures. Check the fan tray in the Passport 8000 Series chassis to make sure both fans are running. Check the switch power supplies; one may have stopped functioning. The module may have failed to read the MAC address from the chassis backplane. If this is the case, arrange to replace the chassis.
The Fault LED is steady amber.	The module failed its power-on self-test. A diagnostic or hardware failure has been detected.	Replace the module.
No LEDs are lit.	A hardware failure has been detected.	Turn the switch power off and then turn it on again.

Apparent module failure

If a module failure occurs, check for possible backplane connection problems. Make sure that the module is correctly seated in the backplane connector and that the retaining screws are securely tightened.

If a module fails during module initialization and the replacement module is the same module type, in rare cases the new module may not initialize.

To work around this issue, follow the steps in either work around 1 or 2.

Module failure work around 1

- 1 Remove the faulty module.
- 2 Insert a module type that is different from the module type removed in Step 1 and wait for this replacement module to initialize.

- 3 Remove the module inserted in Step 2.
- 4 Insert a new module model in the same slot as the faulty module resided. This new module model must be identical to the module model removed in Step 1.

Module failure work around 2


- 1 Remove the faulty module.
- 2 Insert a new module.
- 3 Reboot the chassis.

If the module still fails to operate, contact the Nortel Networks Technical Solutions Center for assistance.

Failure to get a login prompt from the Console port

If you connect a terminal to the Console port of the 8691SF CPU Module, or 8692SF CPU Module and you fail to get a login prompt, the port may have an incorrect DCE/DTE setting. Try moving the DCE/DTE switch from its current setting to the other position ([Figure 48](#)).

Figure 48 DCE/DTE switch

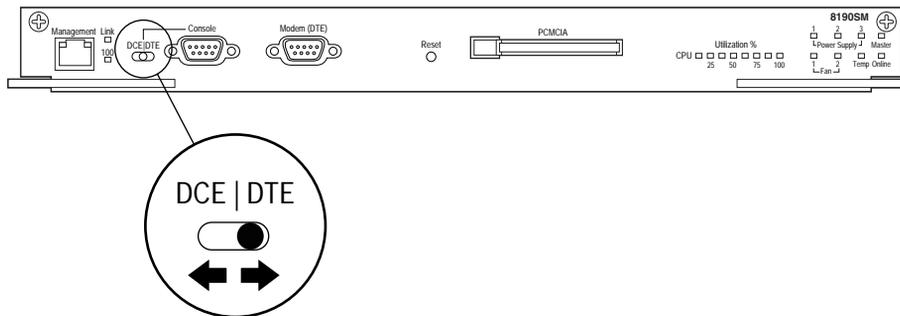

10456EA

Cable connection problems

Port connection problems can usually be traced to a poor cable connection or to an improper connection of the port cables at either end of the link. To remedy such problems, make sure that the cable connections are secure and that the cables are connected to the correct ports at both ends of the link.

10BASE-T cables

Cabling for 10BASE-T networks can consist of two-pair Category 3, 4, or 5 unshielded twisted pair (UTP) wiring. However, to prepare for future upgrades to Fast Ethernet, Nortel Networks strongly recommends that you use all Category 5 cable in your network.

Ethernet 10BASE-T network installations use cables consisting of two pairs of twisted pair wires—one pair to send data and one to receive data. These wires must connect to another 10BASE-T station that has the sending pair attached to its receiving pair and vice versa. If the two nodes are wired alike, they both attempt to send data out on the same RJ-45 pins. In such a case, a straight-through cable would not work. However, a crossover cable would operate normally.

The 8648TXE, 8648TXM, and 8632TXE modules are designed to have Ethernet network interface cards (NICs) connect directly to their RJ-45 ports using straight-through cables. NIC's port types are MDI. However, if a 8648TXE, 8648TXM, or 8632TXE module must connect to a hub or another switch that follows usual conventions, a crossover cable is required because the port types are MDI-X. You only need crossover cables when connecting cables to devices that have the same port type.

100BASE-T and 1000BASE-T cables

The 100 Mb/s ports and 1 Gb/s ports are designed to operate using Category 5 UTP cabling only. Category 5 UTP cable is a two-pair cable certified to handle up to 100 Mb/s bandwidth. To minimize crosstalk noise, maintain the twist ratio of the cable up to the point of termination; untwist at any termination should not exceed 0.5 in. (1.27 cm).

GBIC cables

Cables for the GBICs vary depending on the specific GBIC type. For information about the cable requirements for GBICs, see *Installing SFP and XFP Transceivers and GBICs (318034-C)*.

Appendix A

Technical specifications for the Passport 8000 Series Chassis

This appendix lists the specifications for the Passport 8000 Series Chassis and includes the following topics:

This appendix includes the following topics:

Topic	Page
Model 8003AC power supply	96
Model 8004AC power supply	97
Model 8005AC power supply	98
Model 8004DC power supply	99
Model 8005DC power supply	100
Passport 8600 component input power	101
Input power consumption example: 8010 chassis	102
Input power consumption example: 8006 chassis	104
8010co chassis	107
8010 chassis	109
8006 chassis	112
8003 chassis	115

Model 8003AC power supply

This section provides power ratings for the 8003AC power supply and includes the following topics:

- [AC input power specifications](#)
- [DC output power specifications](#)

AC input power specifications

Parameter	Specifications
Input voltage:	100-240 VAC
Input current:	9 A
Frequency:	50-60 Hz
Input VA:	778 VA
Input power consumption:	770 W
Heat dissipation (thermal/output):	920 Btu/hr
Hold-up time:	20 ms

DC output power specifications

Parameter	Specifications
Output power (maximum):	500 W
Individual power ratings: NOTE: 12 V power includes fan power	3.3 VDC @ 120 A 12 VDC @ 40 A

Model 8004AC power supply

This section provides power ratings for the 8004AC power supply and includes the following topics:

- [AC input power specifications](#)
- [DC output power specifications](#)

AC input power specifications

Parameter	Specifications (100-240 VAC input voltage)
Input current:	12 - 6 A
Frequency range:	50-60 Hz
Input VA:	1320 VA
Input power consumption:	1308 W
Heat dissipation (thermal/output):	1564 Btu/hr
Hold-up time:	20 ms

DC output power specifications

Parameter	Specifications
Output power (maximum):	850 W (110-240VAC) 780 W (100-109 VAC)
Individual power ratings: NOTE: 12V power includes fan power	3.3 VDC @ 150 A 12 VDC @ 50 A

Model 8005AC power supply

This section provides power ratings for the 8005AC power supply and includes the following topics:

- [AC input power specifications](#)
- [DC output power specifications](#)

AC input power specifications

Parameter	Specifications (100-120 VAC input voltage)	Specifications (200-240 VAC input voltage)
Input current:	16 A	9.5 A
Frequency range:	50-60 Hz	50-60 Hz
Input VA:	1600 VA	1846 VA
Input power consumption:	1584 W	1828 W
Heat dissipation (thermal/output):	1515 Btu/hr	1250 Btu/hr
Hold-up time:	20 ms	20 ms

DC output power specifications

Parameter	Specifications (100-120 VAC input voltage)	Specifications (200-240 VAC input voltage)
Output power (maximum):	1140 W (1050 W + 90 W fans)	1462 W (1372 W + 90 W fans)
Modules:	3.3 VDC @ 150 A 12 VDC @ 72 A	3.3 VDC @ 150 A 12 VDC @ 72 A
Fans:	12 VDC @ 7.5 A/24 A peak	12 VDC @ 7.5 A/24 A peak

Model 8004DC power supply

This section provides power ratings for the 8004DC power supply and includes the following topics:

- [DC input power specifications](#)
- [DC output power specifications](#)

DC input power specifications

Parameter	Specifications
Input voltage	-48 VDC
Input current:	29 A
Input VA:	1.4 kVA
Input power consumption:	1392 W
Heat dissipation (thermal/output):	1850 Btu/hr

DC output power specifications

Parameter	Specifications
Output power (maximum):	850 W
Individual power ratings:	3.3 VDC @ 150 A 12 VDC @ 65 A
NOTE: 12V power includes fan power	

Model 8005DC power supply

This section provides power ratings for the 8005DC power supply and includes the following topics:

- [DC input power specifications](#)
- [DC output power specifications](#)

DC input power specifications

Parameter	Specifications
Input voltage:	-48 VDC
Input current (nominal):	42 A
Input VA	1.95 kVA
Input power consumption:	1950 W
Heat dissipation (thermal/output):	1666 Btu/hr

DC output power specifications

Parameter	Specifications
Output power (maximum):	1462 W (1372 W + 90 W fans)
Modules:	3.3 VDC @ 150 A 12 VDC @ 72 A
Fans:	12 VDC @ 7.5 A/24 A peak

Passport 8600 component input power

Table 15 provides input power specifications for Passport 8600 components.

Table 15 Passport 8600 components input power

Component	Total input power (watts)	3.3 V power (watts)	12 V power (watts)
8608GTE/ 8608GTM	140	75	65
8608SXE	115	85	30
8616GTE	131	66	65
8616SXE	150	85	65
8624FXE	86	66	20
8630GBR	180	60	120
8648GTR	164	74	90
8648GTX	105	85	20
8660SDM	141	66	75
8672ATMM	96	66	30
8683XLR	168	78	90
8692SF	85	45	40
Fan tray assemblies			
8003 fan tray assembly	16 W steady state 36 W peak for 1 sec.	NA	16 W steady state 36 W peak for 1 sec.
8006 fan tray assembly	33 W steady state 72 W peak for 1 sec.	NA	33 W steady state 72 W peak for 1 sec.
8010 fan tray assembly	30 W steady state 40 W peak for 1 sec.	NA	30 W steady state 40 W peak for 1 sec.
8010co fan tray assembly	90 /144 W peak for 5 seconds	NA	90 /144 W peak for 5 seconds

Input power consumption example: 8010 chassis

Table 16 shows the total module input power consumption for a sample 8010 chassis configuration.

Table 16 Input power consumption sample configuration: 8010 chassis

Slot	Module	Total input power (watts)	3.3 V power (watts)	12 V power (watts)
1	8648GTR	164	74	90
2	8683XLR	168	78	90
3	8630GBR	180	60	120
4	8630GBR	180	60	120
5	8692SF	85	45	40
6	8692SF	85	45	40
7	8648GTR	164	74	90
8	8630GBR	180	60	120
9	8630GBR	180	60	120
10	8683XLR	168	78	90
Fan tray assembly		30	NA	30
Fan tray assembly		30	NA	30
Total input power for all installed components:		1614	634	980

In the configuration shown in Table 16, the combined total of the modules and fan tray input power consumption equals 1614 W.

Do not exceed either an individual voltage source or the combined power rating.

8004AC power supply example

Table 17 shows at 200-240 VAC, you would need two 8004AC power supplies to support the configuration shown in Table 16. The third 8004AC power supply provides redundancy.

Table 17 8004AC power supply example at 200-240VAC

Parameter	Specifications
Output power (maximum)	850 W
Individual 3.3 VDC power rating	508 W (3.385 V x 150 A)
Individual 12 VDC power rating	600 W (12 V x 50 A)

8004DC power supply example

Table 18 shows that you would need two 8004DC power supplies to support the configuration shown in Table 16. The third 8004DC power supply provides redundancy.

Table 18 8004DC power supply example

Parameter	Specifications
Output power (maximum)	850 W
Individual 3.3 VDC power rating	508 W (3.385 V x 150 A)
Individual 12 VDC power rating	780 W (12 V x 65 A)

Input power consumption example: 8006 chassis

Table 19 shows the total module input power-consumption for a sample 8006 chassis configuration.

Table 19 Input power-consumption sample configuration: 8006 chassis

Slot	Module	Total input power (watts)	3.3 V power (watts)	12 V power (watts)
1	8648GTR	164	74	90
2	8683XLR	168	78	90
3	8630GBR	180	60	120
4	8630GBR	180	60	120
5	8692SF	85	45	40
6	8692SF	85	45	40
Fan tray assembly		33	NA	33
Total input power for all installed components:		895	362	533

In the configuration show in Table 19, the combined total of the modules and fan tray input power consumption equals 895 W.

Do not exceed either an individual voltage source or the combined power rating.

8005AC power supply example

Table 20 shows at 100-120 VAC, you would need one 8005AC power supply to support the configuration shown in Table 19. The second 8005AC power supply provides redundancy.

Table 20 8005AC power supply example at 100-120VAC

Parameter	Specifications
Output power (maximum)	1140 W
Individual 3.3 VDC power rating	508 W (3.385 V x 150 A)
Individual 12 VDC power rating	864 W (12 V x 72 A)

Table 21 shows at 200-240 VAC, you would need one 8005AC power supply to support the configuration shown in Table 19. The second 8005AC power supply provides redundancy.

Table 21 8005AC power supply example at 200-240VAC

Parameter	Specifications
Output power (maximum)	1462 W
Individual 3.3 VDC power rating	508 W (3.385 V x 150 A)
Individual 12 VDC power rating	864 W (12 V x 72 A)

8005DC power supply example

Table 22 shows that you would need one 8005DC power supply to support the configuration shown in Table 19. The second 8005DC power supply provides redundancy.

Table 22 8005DC power supply example

Parameter	Specifications
Output power (maximum)	1462 W
Individual 3.3 VDC power rating	508 W (3.385 V x 150 A)
Individual 12 VDC power rating	780 W (12 V x 65 A)



Note: The 8001AC and the 8002DC power supplies are discontinued. The 8004AC or 8005AC power supply replaces the 8001AC power supply. The 8004DC or 8005DC power supply replaces the 8002DC power supply.

For information on the 8001AC power supply or the 8002DC power supply, see the Passport 8600 Release 3.3 documentation.



Note: The 8001AC and 8002DC power supplies have not been tested with Passport 8600 modules released since Passport 8600 Release 3.7. Therefore, Nortel Networks recommends that you use the 8004 or 8005 power supply with these modules.

8010co chassis

This section provides physical, environmental, and electrical specifications for the 8010co Chassis and includes the following topics:

- [“Physical specifications,”](#) next
- [“Network Equipment Building Standard”](#) on page 107
- [“Environmental specifications”](#) on page 108
- [“Maximum airflow”](#) on page 108
- [“International regulatory requirements”](#) on page 108

Physical specifications

The following physical specifications apply to the 8010co chassis:

Parameter	Specification
Height:	35 in. (88.9 cm)
Rack units (RUs)	20
Width:	19 in (48.26 cm)
Depth:	23.7 in. (60.19 cm)
Weight:	
Empty:	127 lbs (57.6kg)
Including the following components: cable management brackets, power supply filler panels, power supply bezel, fan trays, module filler panels.	191 lbs (86.63kg)
Fully loaded:	315 lbs (142.88 kg)

Network Equipment Building Standard

The 8010co chassis complies with Network Equipment Building Standard (NEBS) Level 3 as specified in SR3580.

Environmental specifications

The following environmental specifications apply to the 8010co chassis:

Parameter	Specification
Operating temperature:	-5° to 55° C (23° to 131° F)
Storage temperature:	-40° to 70° C (-40° to 158° F)
Operating humidity:	90%
Storage humidity:	92.5%
Operating altitude:	13,123 ft. at 35° C and 45° C 6,000 ft. at 55° C -200 ft. at 55° C
Storage altitude:	40,000 ft

Maximum airflow

The maximum airflow specification for the 8010co chassis is 330 linear ft/min.

International regulatory requirements

The 8010co chassis conforms to the following international regulatory requirements:

- [“Electromagnetic emissions,”](#) next
- [“Electromagnetic immunity”](#) on page 109
- [“Safety agency certification”](#) on page 109

Electromagnetic emissions

The 8010co chassis conforms to the following electromagnetic emissions standards:

Parameter	Specification
Global basis for certification:	CISPR 22-1997 Class A
US:	FCC CFR47 Part 15, Subpart B, Class A

Parameter (continued)	Specification (continued)
Canada:	ICES-003, Issue-2, Class A
Europe:	EN 55022-1998 Class A; EN 61000-3-2/A14, EN 61000-3-3 (CE Marking)
Australia/New Zealand:	AS/NZS 3548:1995, Class A
Japan:	VCCI-V3/97.04, Class A

Electromagnetic immunity

The 8010co chassis conforms to the following electromagnetic immunity standards:

Parameter	Specification
Global basis for certification:	CISPR 24:1997
Europe:	EN 55024:1998

Safety agency certification

The 8010co chassis conforms to the following safety agency standards:

Parameter	Specification
Global basis for certification:	IEC 60950 current edition with all CB member deviations
US:	UL60950
Canada:	CSA 22.2 No. 60950
Europe:	EN60950 (CE Marking)
Australia/New Zealand:	AS/NZS 3260

8010 chassis

This section provides physical, environmental, and electrical specifications for the 8010 chassis and includes the following topics:

- [“Physical specifications,”](#) next
- [“Environmental specifications”](#) on page 110
- [“International regulatory requirements”](#) on page 111

Physical specifications

The following physical specifications apply to the 8010 chassis:

Parameter	Specification
Height:	22.9 in. (58.2 cm)
Width:	17.5 in. (44.5 cm)
Depth:	19.9 in. (50.5 cm)
Weight (empty):	85 lb (39 kg)
Weight (fully loaded):	225 lb (102 kg)
Cooling system:	
Fan trays:	2 per chassis
Fans:	8 per fan tray
Thermal sensors:	1 per fan tray

Environmental specifications

The following environmental specifications apply to the 8010 chassis:

Parameter	Specification
Operating temperature:	0° C to 40° C (32° F to 104° F)
Storage temperature:	-25° C to 70° C (-13° F to 158° F)
Operating humidity:	85% maximum relative humidity, noncondensing
Storage humidity:	95% maximum relative humidity, noncondensing
Operating altitude:	3048 m (10,000 ft) maximum
Storage altitude:	3048 m (10,000 ft) maximum
Free fall/drop:	ISO 4180-s, NSTA 1A
Vibration:	IEC 68-2-6/34
Shock/bump:	IEC 68-2-27-29

International regulatory requirements

The 8010 chassis conforms to the following international regulatory requirements:

- [“Electromagnetic emissions,”](#) next
- [“Electromagnetic immunity”](#) on page 111
- [“Safety agency certification”](#) on page 112

Electromagnetic emissions

The 8010 chassis conforms to the following electromagnetic emissions standards:

Parameter	Specification
Global basis for certification:	CISPR 22-1997 Class A
US:	FCC CFR47 Part 15, Subpart B, Class A
Canada:	ICES-003, Issue-2, Class A
Europe:	EN 55022-1998 Class A; EN 61000-3-2/A14, EN 61000-3-3 (CE Marking)
Australia/New Zealand:	AS/NZS 3548:1995, Class A
Japan:	VCCI-V3/97.04, Class A
Taiwan:	CNS 13438, Class A

Electromagnetic immunity

The 8010 chassis conforms to the following electromagnetic immunity standards:

Parameter	Specification
Global basis for certification:	CISPR 24:1997
Europe:	EN 55024:1998

Safety agency certification

The 8010 chassis conforms to the following safety agency standards:

Parameter	Specification
Global basis for certification:	IEC 60950 current edition with all CB member deviations
US:	UL60950
Canada:	CSA 22.2 No. 60950
Europe:	EN60950 (CE Marking)
Australia/New Zealand:	AS/NZS 3260
Mexico:	NOM-019-SCFI-1998

8006 chassis

This section provides physical, environmental, and electrical specifications for the 8006 Chassis and includes the following topics:

- [“Physical specifications,”](#) next
- [“Environmental specifications”](#) on page 113
- [“International regulatory requirements”](#) on page 113

Physical specifications

The following physical specifications apply to the 8006 chassis:

Parameter	Specification
Height:	15.8 in. (40.1 cm)
Width:	17.5 in. (44.5 cm)
Depth:	19.9 in. (50.5 cm)
Weight (empty):	49 lb (22 kg)
Weight (fully loaded):	140 lb (63 kg)
Cooling system:	
Fan tray:	1 per chassis

Parameter (continued)	Specification (continued) (continued)
Fans:	6 per fan tray
Thermal sensors:	1 per fan tray

Environmental specifications

The following environmental specifications apply to the 8006 chassis:

Parameter	Specification
Operating temperature:	0° C to 40° C (32° F to 104° F)
Storage temperature:	-25° C to 70° C (-13° F to 158° F)
Operating humidity:	85% maximum relative humidity, noncondensing
Storage humidity:	95% maximum relative humidity, noncondensing
Operating altitude:	3048 m (10,000 ft) maximum
Storage altitude:	3048 m (10,000 ft) maximum
Free fall/drop:	ISO 4180-s, NISTA 1A
Vibration:	IEC 68-2-6/34
Shock/bump:	IEC 68-2-27-29

International regulatory requirements

The 8006 chassis conforms to the following international regulatory requirements:

- [“Electromagnetic emissions,”](#) next
- [“Electromagnetic immunity”](#) on page 114
- [“Safety agency certification”](#) on page 114

Electromagnetic emissions

The 8006 chassis conforms to the following electromagnetic emissions standards:

Parameter	Specification
Global basis for certification:	CISPR 22-1997 Class A
US:	FCC CFR47 Part 15, Subpart B, Class A

Parameter (continued)	Specification (continued)
Canada:	ICES-003, Issue-2, Class A
Europe:	EN 55022-1998 Class A; EN 61000-3-2/A14, EN 61000-3-3 (CE Marking)
Australia/New Zealand:	AS/NZS 3548:1995, Class A
Japan:	VCCI-V3/97.04, Class A
Taiwan:	CNS 13438, Class A

Electromagnetic immunity

The 8006 chassis conforms to the following electromagnetic immunity standards:

Parameter	Specification
Global basis for certification:	CISPR 24:1997
Europe:	EN 55024:1998

Safety agency certification

The 8006 chassis conforms to the following safety agency standards:

Parameter	Specification
Global basis for certification:	IEC 60950 current edition with all CB member deviations
US:	UL60950
Canada:	CSA 22.2 No. 60950
Europe:	EN60950 (CE Marking)
Australia/New Zealand:	AS/NZS 3260
Mexico:	NOM-019-SCFI-1998

8003 chassis

This section provides physical, environmental, and electrical specifications for the 8003 Chassis and includes the following topics:

- [“Physical specifications,”](#) next
- [“Environmental specifications”](#) on page 116
- [“International regulatory requirements”](#) on page 116

Physical specifications

The following physical specifications apply to the 8003 chassis:

Parameter	Specification
Height:	10.5 in. (26.7 cm)
Width:	18.5 in. (47.0 cm)
Depth:	19.9 in. (50.5 cm)
Weight (empty):	40 lb (18 kg)
Weight (fully loaded):	110 lb (50 kg)
Cooling system:	
Fan tray:	1 per chassis
Fans:	3 per fan tray
Thermal sensors:	1 per fan tray
Noise:	61 dBa maximum

Environmental specifications

The following environmental specifications apply to the 8003 chassis:

Parameter	Specification
Operating temperature:	0° C to 40° C (32° F to 104° F)
Storage temperature:	-25° C to 70° C (-13° F to 158° F)
Operating humidity:	85% maximum relative humidity, noncondensing
Storage humidity:	95% maximum relative humidity, noncondensing
Operating altitude:	3024 m (10,000 ft) maximum
Storage altitude:	3024 m (10,000 ft) maximum
Free fall/drop:	ISO 4180-s, NSTA 1A
Vibration:	IEC 68-2-6/34
Shock/bump:	IEC 68-2-27-29

International regulatory requirements

The 8003 chassis conforms to the following international regulatory requirements:

- [“Electromagnetic emissions,”](#) next
- [“Electromagnetic immunity”](#) on page 117
- [“Safety agency certification”](#) on page 117

Electromagnetic emissions

The 8003 chassis conforms to the following electromagnetic emissions standards:

Parameter	Specification
Global basis for certification:	CISPR 22-1997 Class A
US:	FCC CFR47 Part 15, Subpart B, Class A
Canada:	ICES-003, Issue-2, Class A
Europe:	EN 55022-1998 Class A; EN 61000-3-2/A14, EN 61000-3-3 (CE Marking)
Australia/New Zealand:	AS/NZS 3548:1995, Class A
Japan:	VCCI-V3/97.04, Class A
Taiwan:	CNS 13438, Class A

Electromagnetic immunity

The 8003 chassis conforms to the following electromagnetic immunity standards:

Parameter	Specification
Global basis for certification:	CISPR 24:1997
Europe:	EN 55024:1998

Safety agency certification

The 8003 chassis conforms to the following safety agency standards:

Parameter	Specification
Global basis for certification:	IEC 60950 current edition with all CB member deviations
US:	UL60950
Canada:	CSA 22.2 No. 60950
Europe:	EN60950 (CE Marking)
Australia/New Zealand:	AS/NZS 3260
Mexico:	NOM-019-SCFI-1998

Index

C

cable

- Category 5 93
- crossover 93
- straight-through 93
- troubleshooting 93

cables

- ground cables, connecting to rack 75
- ordering 40, 56

chassis

- components, described 24, 26, 29, 31
- installing
 - 8003 35
 - 8006 35
 - 8010 35
 - 8010co 53
- mounting in a 19-inch rack 61
- mounting in a Hendry rack 64
- operating 77
- resetting 82
- technical specifications 95
- verifying a successful installation 81

conventions, text 20

crossover cable 93

customer support 21

D

DTE/DCE switch

- changing setting of 92

E

electrical specifications 41, 57

environmental specifications 41, 58

equipment rack, specifications 40

F

failure to display login prompt 92

flash memory card

- changing read-write protection 86
- installing 83
- removing 85

H

hardware

- requirements 40
- shipped with the 8010, 8006, 8003 chassis 36
- shipped with the 8010co chassis 54

heat dissipation, ensuring 40, 57

I

installation

- flash memory card 83
- preparing for 35, 53

L

LEDs

- power supplies 90
- problem indications 90

login prompt, failure to display 92

M

memory cards

- changing read-write protection 86

removing 85

P

port connections, troubleshooting 93

power specifications 41, 57

power-up sequence 81

product support 21

publications

hard copy 20

R

removing

flash memory card 85

option memory card 85

S

shipment contents, verifying 36, 54

site requirements 40, 57

software incompatibility 90

space requirements 40, 57

specifications, technical

electrical 41, 57

environmental 41, 58

space 40, 57

straight-through cable 93

support, Nortel Networks 21

system log 91

T

technical publications 20

technical support 21

text conventions 20

troubleshooting

cables 93

LED indications 90

power-up sequence 81

V

voltage specifications 41, 57