

Part No. 316341-B Rev 01
May 2006

4655 Great America Parkway
Santa Clara, CA 95054

Installing and Using Device Manager

Passport 8000 Series Software Release 3.7



NORTEL
NETWORKS™

Copyright © 2006 Nortel Networks. All rights reserved.

The information in this document is subject to change without notice. The statements, configurations, technical data, and recommendations in this document are believed to be accurate and reliable, but are presented without express or implied warranty. Users must take full responsibility for their applications of any products specified in this document. The information in this document is proprietary to Nortel Networks Inc.

The software described in this document is furnished under a license agreement and may be used only in accordance with the terms of that license. The software license agreement is included in this document.

Trademarks

Nortel Networks, the Nortel Networks logo, the Globemark, Unified Networks, and PASSPORT are trademarks of Nortel Networks.

Microsoft, Windows, and Windows NT are trademarks of Microsoft Corporation.

Adobe and Acrobat Reader are trademarks of Adobe Systems Incorporated.

UNIX is a trademark of X/Open Company Limited.

The asterisk after a name denotes a trademarked item.

Restricted rights legend

Use, duplication, or disclosure by the United States Government is subject to restrictions as set forth in subparagraph (c)(1)(ii) of the Rights in Technical Data and Computer Software clause at DFARS 252.227-7013.

Notwithstanding any other license agreement that may pertain to, or accompany the delivery of, this computer software, the rights of the United States Government regarding its use, reproduction, and disclosure are as set forth in the Commercial Computer Software-Restricted Rights clause at FAR 52.227-19.

Statement of conditions

In the interest of improving internal design, operational function, and/or reliability, Nortel Networks Inc. reserves the right to make changes to the products described in this document without notice.

Nortel Networks Inc. does not assume any liability that may occur due to the use or application of the product(s) or circuit layout(s) described herein.

Portions of the code in this software product may be Copyright © 1988, Regents of the University of California. All rights reserved. Redistribution and use in source and binary forms of such portions are permitted, provided that the above copyright notice and this paragraph are duplicated in all such forms and that any documentation, advertising materials, and other materials related to such distribution and use acknowledge that such portions of the software were developed by the University of California, Berkeley. The name of the University may not be used to endorse or promote products derived from such portions of the software without specific prior written permission.

SUCH PORTIONS OF THE SOFTWARE ARE PROVIDED "AS IS" AND WITHOUT ANY EXPRESS OR IMPLIED WARRANTIES, INCLUDING, WITHOUT LIMITATION, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

In addition, the program and information contained herein are licensed only pursuant to a license agreement that contains restrictions on use and disclosure (that may incorporate by reference certain limitations and notices imposed by third parties).

Nortel Networks Inc. software license agreement

This Software License Agreement (“License Agreement”) is between you, the end-user (“Customer”) and Nortel Networks Corporation and its subsidiaries and affiliates (“Nortel Networks”). PLEASE READ THE FOLLOWING CAREFULLY. YOU MUST ACCEPT THESE LICENSE TERMS IN ORDER TO DOWNLOAD AND/OR USE THE SOFTWARE. USE OF THE SOFTWARE CONSTITUTES YOUR ACCEPTANCE OF THIS LICENSE AGREEMENT. If you do not accept these terms and conditions, return the Software, unused and in the original shipping container, within 30 days of purchase to obtain a credit for the full purchase price.

“Software” is owned or licensed by Nortel Networks, its parent or one of its subsidiaries or affiliates, and is copyrighted and licensed, not sold. Software consists of machine-readable instructions, its components, data, audio-visual content (such as images, text, recordings or pictures) and related licensed materials including all whole or partial copies. Nortel Networks grants you a license to use the Software only in the country where you acquired the Software. You obtain no rights other than those granted to you under this License Agreement. You are responsible for the selection of the Software and for the installation of, use of, and results obtained from the Software.

1. Licensed Use of Software. Nortel Networks grants Customer a nonexclusive license to use a copy of the Software on only one machine at any one time or to the extent of the activation or authorized usage level, whichever is applicable. To the extent Software is furnished for use with designated hardware or Customer furnished equipment (“CFE”), Customer is granted a nonexclusive license to use Software only on such hardware or CFE, as applicable. Software contains trade secrets and Customer agrees to treat Software as confidential information using the same care and discretion Customer uses with its own similar information that it does not wish to disclose, publish or disseminate. Customer will ensure that anyone who uses the Software does so only in compliance with the terms of this Agreement. Customer shall not a) use, copy, modify, transfer or distribute the Software except as expressly authorized; b) reverse assemble, reverse compile, reverse engineer or otherwise translate the Software; c) create derivative works or modifications unless expressly authorized; or d) sublicense, rent or lease the Software. Licensors of intellectual property to Nortel Networks are beneficiaries of this provision. Upon termination or breach of the license by Customer or in the event designated hardware or CFE is no longer in use, Customer will promptly return the Software to Nortel Networks or certify its destruction. Nortel Networks may audit by remote polling or other reasonable means to determine Customer’s Software activation or usage levels. If suppliers of third party software included in Software require Nortel Networks to include additional or different terms, Customer agrees to abide by such terms provided by Nortel Networks with respect to such third party software.

2. Warranty. Except as may be otherwise expressly agreed to in writing between Nortel Networks and Customer, Software is provided “AS IS” without any warranties (conditions) of any kind. NORTEL NETWORKS DISCLAIMS ALL WARRANTIES (CONDITIONS) FOR THE SOFTWARE, EITHER EXPRESS OR IMPLIED, INCLUDING, BUT NOT LIMITED TO THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE AND ANY WARRANTY OF NON-INFRINGEMENT. Nortel Networks is not obligated to provide support of any kind for the Software. Some jurisdictions do not allow exclusion of implied warranties, and, in such event, the above exclusions may not apply.

3. Limitation of Remedies. IN NO EVENT SHALL NORTEL NETWORKS OR ITS AGENTS OR SUPPLIERS BE LIABLE FOR ANY OF THE FOLLOWING: a) DAMAGES BASED ON ANY THIRD PARTY CLAIM; b) LOSS OF, OR DAMAGE TO, CUSTOMER’S RECORDS, FILES OR DATA; OR c) DIRECT, INDIRECT, SPECIAL, INCIDENTAL, PUNITIVE, OR CONSEQUENTIAL DAMAGES (INCLUDING LOST PROFITS OR SAVINGS), WHETHER IN CONTRACT, TORT OR OTHERWISE (INCLUDING NEGLIGENCE) ARISING OUT OF YOUR USE OF THE SOFTWARE, EVEN IF NORTEL NETWORKS, ITS AGENTS OR SUPPLIERS HAVE BEEN ADVISED OF THEIR POSSIBILITY. The forgoing limitations of remedies also apply to any developer and/or supplier of the Software. Such developer and/or supplier is an intended beneficiary of this Section. Some jurisdictions do not allow these limitations or exclusions and, in such event, they may not apply.

4. General

- a. If Customer is the United States Government, the following paragraph shall apply: All Nortel Networks Software available under this License Agreement is commercial computer software and commercial computer software documentation and, in the event Software is licensed for or on behalf of the United States

Government, the respective rights to the software and software documentation are governed by Nortel Networks standard commercial license in accordance with U.S. Federal Regulations at 48 C.F.R. Sections 12.212 (for non-DoD entities) and 48 C.F.R. 227.7202 (for DoD entities).

- b. Customer may terminate the license at any time. Nortel Networks may terminate the license if Customer fails to comply with the terms and conditions of this license. In either event, upon termination, Customer must either return the Software to Nortel Networks or certify its destruction.
- c. Customer is responsible for payment of any taxes, including personal property taxes, resulting from Customer's use of the Software. Customer agrees to comply with all applicable laws including all applicable export and import laws and regulations.
- d. Neither party may bring an action, regardless of form, more than two years after the cause of the action arose.
- e. The terms and conditions of this License Agreement form the complete and exclusive agreement between Customer and Nortel Networks.
- f. This License Agreement is governed by the laws of the country in which Customer acquires the Software. If the Software is acquired in the United States, then this License Agreement is governed by the laws of the state of New York.

Revision history

May 2006

Q01373177: Change in documentation: Removed step 5— On the CD-ROM drive, locate the \Windows\Device Manager subdirectory (“[Installing JDM on Windows from the CD](#)” on page 25).

Q01373211: Change in documentation: Added step 7—In the Run dialog box, click OK (“[Installing JDM on Windows from the CD](#)” on page 25).

Q01377650: Change in documentation: Added procedure to uninstall Device Manager (“[Uninstalling Device Manager on Windows](#)” on page 21).

Contents

Preface	13
Before you begin	14
Text conventions	15
Hard-copy technical manuals	17
How to get help	18
Chapter 1	
Installing Device Manager software	19
JDM installation notes	20
Uninstalling Device Manager on Windows	21
Installing Device Manager on Windows	23
Windows minimum requirements	24
Installing JDM on Windows from the CD	25
Installing JDM in a Windows environment from the Web	31
Installing Device Manager on UNIX	32
Installing JDM in a Unix environment	33
Installing JDM on Solaris from the CD	34
Installing JDM on HP-UX from the CD	35
Installing JDM on UNIX from the Web	36
Executing the JDM installation software on UNIX	37
Chapter 2	
Starting Device Manager	43
Starting Device Manager using Windows and UNIX	44
Replicating editable fields in Device Manager	45
Setting the Device Manager properties	46
Opening a device	48
Opening a device using the Open Last option	51

Chapter 3	
Understanding the Device Manager window	53
Using the menu bar	54
Using the toolbar	56
Using the Device view	58
Selecting objects	59
Interpreting the status of LEDs and ports	61
Using shortcut menus	62
Using the status bar	65
Using Device Manager dialog boxes	66
Using the buttons in Device Manager dialog boxes	67
Editing objects	68
Online help	69
Chapter 4	
Managing the system	71
Working with files	72
Copying files	73
Checking flash memory use	75
Viewing file names on the Flash	76
Viewing file names on the PCMCIA	77
Using the trap log	78
Appendix A	
Troubleshooting Device Manager	81
Login prompt fails to appear from the Console port	82
Switch fails to open in Device Manager	83
Exception error displayed while launching Java application launcher	85
Example in a Windows environment:	86
Example in a Solaris environment:	87
Index	89

Figures

Figure 1	Uninstall Java Device Manager dialog box	21
Figure 2	Uninstall Java Device Manager dialog box (Uninstall complete)i	22
Figure 3	Introduction dialog box	25
Figure 4	License Agreement dialog box	26
Figure 5	Choose Install Set dialog box	26
Figure 6	Choose Install Folder dialog box	27
Figure 7	Choose Shortcut Folder dialog box	28
Figure 8	Pre-installation Summary dialog box	28
Figure 9	Installing Java Device Manager dialog box	29
Figure 10	Install Complete dialog box	30
Figure 11	InstallAnywhere Introduction dialog box	37
Figure 12	License Agreement dialog box	38
Figure 13	Choose Install Set dialog box	38
Figure 14	Choose Install Folder dialog box	39
Figure 15	Pre-installation Summary dialog box	40
Figure 16	Installing Java Device Manager dialog box	41
Figure 17	Install Complete dialog box	41
Figure 18	Abbreviated Device Manager window	44
Figure 19	Properties dialog box	46
Figure 20	Open Device dialog box	48
Figure 21	Device Manager window showing an 8000 Series switch	49
Figure 22	Parts of the Device Manager window	53
Figure 23	Menu bar	54
Figure 24	Objects in an 8000 Series switch device view	59
Figure 25	Chassis shortcut menu	62
Figure 26	Port shortcut menus	63
Figure 27	Card shortcut menu (I/O module)	64
Figure 28	Parameter selection menu	66
Figure 29	Copy File dialog box	73

10 Figures

Figure 30	Device Info tab	75
Figure 31	Flash Files tab	76
Figure 32	PCMCIA Files tab	77
Figure 33	Trap Log dialog box	78
Figure 34	DCE/DTE switch	82

Tables

Table 1	Properties dialog box fields	47
Table 2	Open Device dialog box fields	49
Table 3	Device Manager menu bar description	54
Table 4	Toolbar buttons	56
Table 5	Device Manager port color codes	61
Table 6	Chassis shortcut menu options	62
Table 7	Port shortcut menu options	63
Table 8	Device Manager buttons	67
Table 9	Help file locations	69

Preface

Device Manager is a graphical user interface (GUI) used to configure and manage Passport* 8000 Series switches. You install it on a management station in the network.

This guide describes how to install and start the Device Manager software on a Windows* or UNIX* platform. It also describes some common startup problems and how to troubleshoot them.

Before you begin

This guide is intended for network administrators with the following background:

- Basic knowledge of networks, Ethernet bridging, and IP and IPX routing
- Familiarity with networking concepts and terminology
- Basic knowledge of network topologies
- Experience with windowing systems or graphical user interfaces (GUIs)

Text conventions

This guide uses the following text conventions:

angle brackets (< >) Indicate that you choose the text to enter based on the description inside the brackets. The description may list the exact text choices or may indicate the type of information needed. Do not type the brackets when entering the command.

Example: If the command syntax is:

```
config cli more <true | false>, you enter either:
```

```
config cli more true or config cli more false.
```

If the command syntax is:

```
config cli timeout <seconds>, you might enter:
```

```
config cli timeout 30
```

to specify a timeout interval of 30 seconds.

bold Courier text

Indicates command names and options and text that you need to enter.

Example: Enter **show ip {alerts | routes}**.

braces ({})

Indicate required elements in syntax descriptions where there is more than one option. You must choose only one of the options. Do not type the braces when entering the command.

Example: If the command syntax is

```
show ip {alerts | routes}, you must enter either show ip alerts or show ip routes, but not both.
```

brackets ([])

Indicate optional elements in syntax descriptions. Do not type the brackets when entering the command.

Example: If the command syntax is

```
show ports info config [<ports>], you can enter either:
```

```
show ports info config <ports> or
```

```
show ports info config.
```

ellipsis points (. . .)	Indicate that you repeat the last element of the command as needed. Example: If the command syntax is <code>ethernet/2/1 [<parameter> <value>] . . .</code> , you enter <code>ethernet/2/1</code> and as many parameter-value pairs as needed.
<i>italic text</i>	Indicates new terms, book titles, and variables in command syntax descriptions. Where a variable is two or more words, the words are connected by a hyphen. Example: If the command syntax is <code>config bootconfig master <cpu-slot></code> , <code>cpu-slot</code> is one variable, and you substitute one value for it.
plain Courier text	Indicates command syntax and system output, for example, prompts and system messages. Example: <code>8600# show cli</code>
separator (>)	Shows menu paths. Example: <code>Edit > Chassis</code> identifies the Chassis option on the Edit menu.
vertical line ()	Separates choices for command keywords and arguments. Enter only one of the choices. Do not type the vertical line when entering the command. Example: If the command syntax is <code>show ip {alerts routes}</code> , you enter either: <code>show ip alerts</code> or <code>show ip routes</code> , but not both.

Hard-copy technical manuals

You can print selected technical manuals and release notes free, directly from the Internet. Go to the www.nortelnetworks.com/documentation URL. Find the product for which you need documentation. Then locate the specific category and model or version for your hardware or software product. Use Adobe* Acrobat Reader* to open the manuals and release notes, search for the sections you need, and print them on most standard printers. Go to Adobe Systems at the www.adobe.com URL to download a free copy of the Adobe Acrobat Reader.

You can purchase printed books and documentation sets from Vervante. To order printed documentation, go to Vervante at the www.vervante.com/nortel URL.

How to get help

If you purchased a service contract for your Nortel Networks product from a distributor or authorized reseller, contact the technical support staff for that distributor or reseller, for assistance.

If you purchased a Nortel Networks service program, contact Nortel Networks Technical Support. To obtain contact information online, go to the www.nortelnetworks.com/cgi-bin/comments/comments.cgi URL, then click on Technical Support.

From the Technical Support page, you can open a Customer Service Request online or find the telephone number for the nearest Technical Solutions Center. If you are not connected to the Internet, you can call 1-800-4NORTEL (1-800-466-7835) to learn the telephone number for the nearest Technical Solutions Center.

An Express Routing Code (ERC) is available for many Nortel Networks products and services. When you use an ERC, your call is routed to a technical support person who specializes in supporting that product or service. To locate an ERC for your product or service, go to the <http://www.nortelnetworks.com/help/contact/erc/index.html> URL.

Chapter 1

Installing Device Manager software

Device Manager (JDM) is an SNMP-based graphical user interface (GUI) tool designed to manage single devices. To use Device Manager (also referred to in this manual as Device Manager), you must have network connectivity to a management station running JDM in one of the supported environments.

The Device Manager software is provided on the software CD as a self-extracting executable file. Device Manager is also available from the Nortel Networks Web site. This chapter provides instructions for installing the Device Manager software in a Windows* or UNIX* environment.

In Passport 8000 Series Switch Software Release 3.7, the Java Runtime Environment (JRE) is bundled with the Device Manager software and therefore, does not require a separate installation.

This chapter includes the following topics:

Topic	Page
JDM installation notes	20
Uninstalling Device Manager on Windows	21
Installing Device Manager on Windows	23
Installing Device Manager on UNIX	32

JDM installation notes

The following installation notes apply to both Windows and UNIX:

- If you have other Nortel Networks switches in your network, and are running earlier versions of Device Manager software, you must install the newest version of Device Manager in order to access the switches running the latest software.
- Prior to upgrading Device Manager, either uninstall your previous version of the Device Manager software (see [“Uninstalling Device Manager on Windows” on page 21](#)), or install the new software to a different directory. (You can have multiple versions of Device Manager stored on your PC or UNIX machine, provided that each version is stored in a separate directory).

In a windows environment, a dm.ini file is created in the JDM install directory to save those IP addresses visited in JDM. In a Unix environment, a ~/.jdm/dm.ini file is created to save those IP addresses visited in JDM. A JDM unistall operation does not remove this file. If you wish, you can move or copy these files from a previous version of JDM to a new JDM installation.

Uninstalling Device Manager on Windows

To uninstall your previous version of the Device Manager software:

- 1 Save your work.
- 2 Exit the Device Manager that you plan to uninstall.
- 3 Click **Start > Programs > Nortel > Java Device Manager > Uninstall DM**.

The Uninstall Java Device Manager dialog box appears (Figure 1).

Figure 1 Uninstall Java Device Manager dialog box



- 4 Click **Uninstall**.

The Uninstall Device Manager proceeds and the Uninstall Java Device Manager dialog box appears with the message, “All items were completely uninstalled” (Figure 2 on page 22).

Figure 2 Uninstall Java Device Manager dialog box (Uninstall complete)i



5 Click **Done**.

Installing Device Manager on Windows

This section includes the following topics:

Topic	Page
Windows minimum requirements	24
Installing JDM on Windows from the CD	25
Installing JDM in a Windows environment from the Web	31

Windows minimum requirements

The minimum system requirements for installing Device Manager on Microsoft* Windows NT*, Windows 95, Windows 98, Windows 2000, and Windows XP are:

- 350 MHz or higher Pentium processor
- 256 MB DRAM
- 300 MB space on hard drive
- Download Time: Windows XP - 5 min; Solaris - 10 min
- Installation Time: Windows XP - 17 min; Solaris - 5 min

Installing JDM on Windows from the CD


- 1 Close all programs.
- 2 Insert the software CD into your CD-ROM drive.
- 3 From the Windows Start menu, choose Run.

The Run dialog box opens.

- 4 Use Browse to navigate to the drive where the CD-ROM is located.
- 5 Double-click the *jdm_xxxx.exe* file.
- 6 In the Run dialog box, click OK.


An install screen opens, followed by a Nortel dialog box. Then, the Introduction dialog box appears (Figure 3).

Figure 3 Introduction dialog box

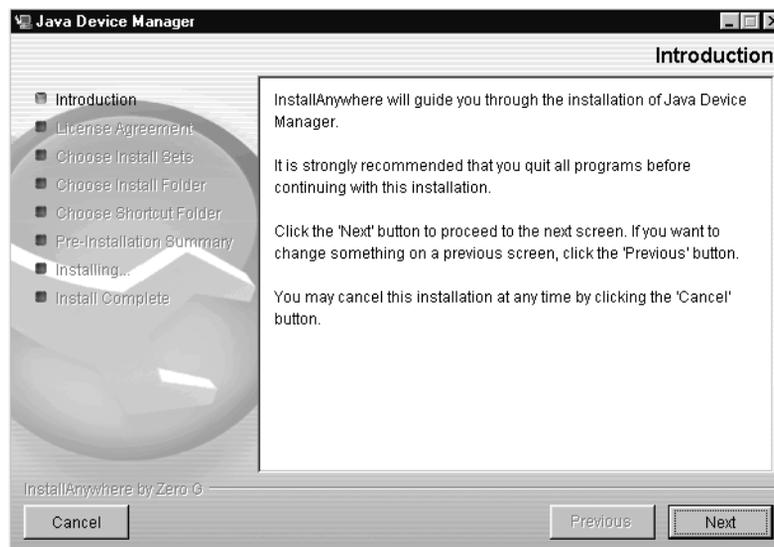

- 7 Click Next to continue the installation process.


The License Agreement dialog box opens (Figure 4 on page 26).

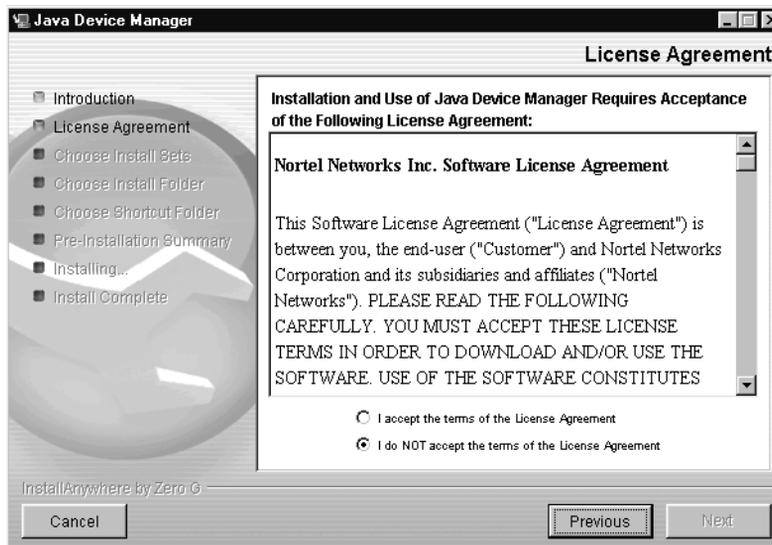Figure 4 License Agreement dialog box

8 Click I accept the terms of the license agreement as shown in [Figure 4](#).

9 Click Next.

The Choose Install Set dialog box opens ([Figure 5](#)).

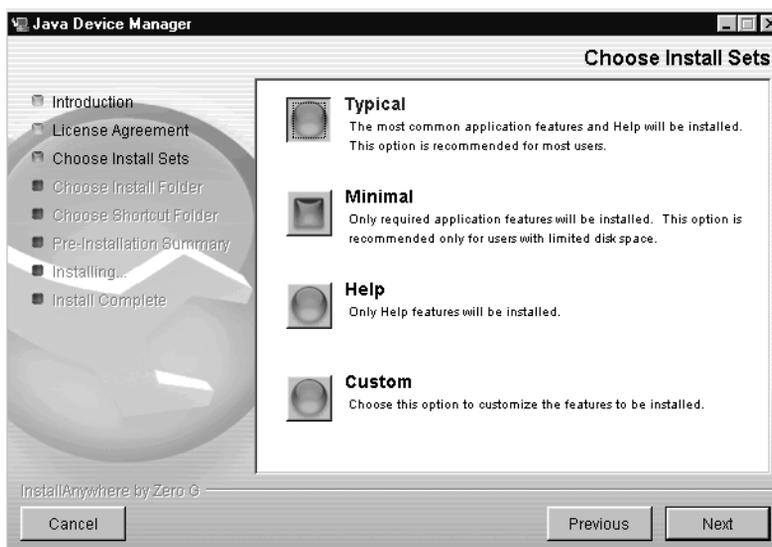
Figure 5 Choose Install Set dialog box

10 Do *one* of the following:


- Select Typical installation to install the common set features, as well as online help.
- Select Minimal installation to select minimal features to install (recommended for those with limited disk space)
- Select Help to install only the online help.
- Select Custom installation to customize the features prior to installation.

11 Click Next.

The Choose Install Folder dialog box opens (Figure 6).

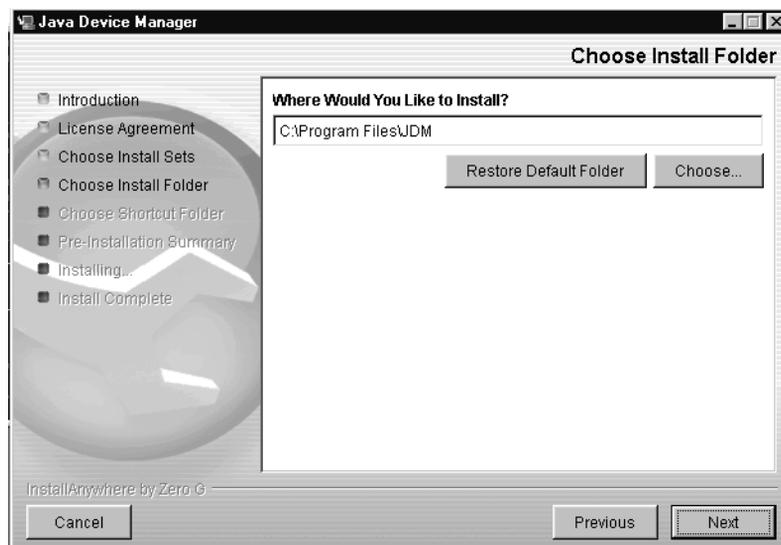Figure 6 Choose Install Folder dialog box**12** Click Restore Default Folder or click Choose to select the storage path.**13** Click Next.

The Choose Shortcut Folder dialog box opens (Figure 7 on page 28).

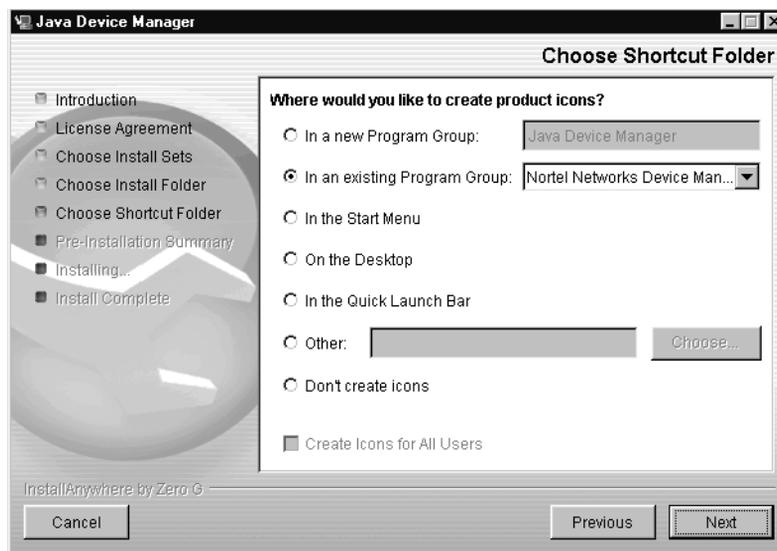Figure 7 Choose Shortcut Folder dialog box

14 Select a shortcut path, if desired.

15 Click Next.


The Pre-Installation Summary dialog box opens (Figure 7).

Figure 8 Pre-installation Summary dialog box

- 16 Verify the folder, shortcut, and disk space required to install the software. Use the Previous button to return to the appropriate dialog box to make changes.
- 17 Click Install.

The installation process begins (Figure 9).

Figure 9 Installing Java Device Manager dialog box

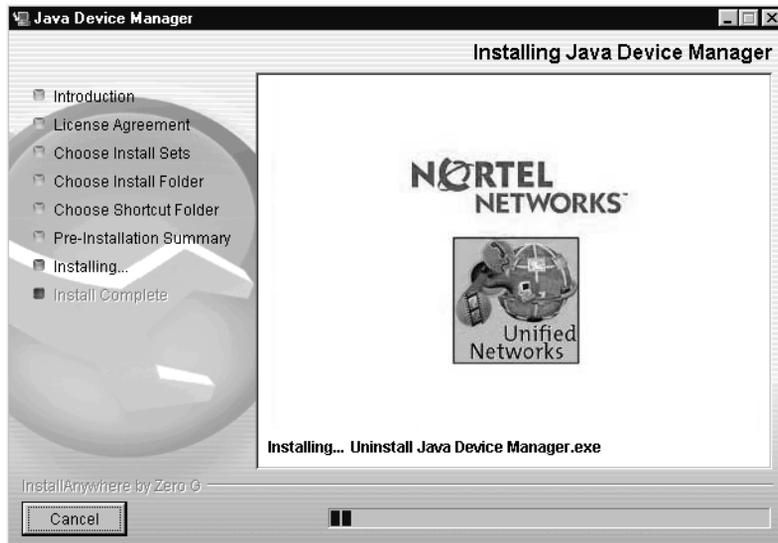

When the installation is complete, the Install Complete dialog box opens (Figure 10 on page 30).

Figure 10 Install Complete dialog box



18 Click Done to exit the installation.

Device Manager is now completely installed on your machine. For instructions on starting the Device Manager software, see [Chapter 2, “Starting Device Manager,”](#) on page 43.

Installing JDM in a Windows environment from the Web

To obtain the Device Manager software from the Nortel Networks Web site:

- 1 Go to the following URL:
`http://www.nortelnetworks.com/support`
- 2 Click on the product for which you want JDM.
A page opens that displays all versions of that product line.
- 3 Click Software under the specific product you are working with.
The software page opens.
- 4 Click the Java Device Manager version you want.
The Software Detail Information page opens.
- 5 Click JDM for PC (95/98/NT/2000/XP)
A File Download dialog box opens that asks you to either run this program from its current location or to download the Device Manager software to your system.
- 6 Choose the directory to which you want to download the software. The software download is a self-extracting .exe file.



Note: In the file name, *xxxx* represents the current version of the Device Manager software.

- 7 Close all programs.
- 8 Navigate to the directory on your system where you downloaded the Device Manager Software.
- 9 Double-click the `jdm_xxxx.exe` file.
An install screen opens, followed by a Nortel dialog box. Then, the Introduction dialog box appears. Go to [Figure 3 on page 25](#) and complete steps 7 through 18.

Installing Device Manager on UNIX



Note: Java Device Manager installation procedures are now standardized across all platforms. In addition, the required Java Runtime Environment (JRE) (version 1.4.1) is now part of the JDM installation package and does not require a separate installation. The bundled JRE will be used with this JDM only and should not affect other JAVA applications on the same system. Please note for Solaris and HP-UX, certain OS patches are required for JDM/JRE to function properly. Please consult SUN or HP to install the appropriate OS patches before launching JDM.

This section includes the following topics:

Topic	Page
Installing JDM in a Unix environment	33
Installing JDM on Solaris from the CD	34
Installing JDM on UNIX from the Web	36
Executing the JDM installation software on UNIX	37

Installing JDM in a Unix environment

The minimum system requirements for installing Device Manager in a UNIX SPARC* workstation running the Sun* Solaris* 2.7.x (or higher) operating system are as follows:

- 4 MB available in a temporary directory
- 300 MB free in the directory where you want to install the Device Manager software
- 128 MB DRAM

The minimum system requirements for installing Device Manager on an HP* workstation running the HP-UX* 11.x or above operating system are as follows:

- 4 MB available in a temporary directory
- 300 MB free in the directory where you want to install the Device Manager software
- 128 MB DRAM

Installing the Device Manager software in a UNIX environment includes:

- 1** Uninstalling the previous version of Device Manager
- 2** Installing the Device Manager software.

Installing JDM on Solaris from the CD

To install the Device Manager software to a Solaris environment from the CD:

- 1 Navigate to the Solaris/JDM subdirectory on the software CD.
- 2 Refer to steps 4 to 14 in [“Executing the JDM installation software on UNIX” on page 37](#) for the remaining instructions on how to install the Device Manager software in a UNIX (Solaris or HP-UX) environment.

Installing JDM on HP-UX from the CD



Note: The CD that supports the 5.6.2 version of Java Device Manager is in ISO9660 format and does not support Rock Ridge extensions. On a HP-UX CD ROM system you may see all of the directories and files in uppercase followed by a revision number. For example, you may see the executable as “jdm_xxxx_hpux_pa-risc.sh” where xxxx is the release version, and the file name is case sensitive.

To install the Device Manager software to a HP-UX environment from the CD follow these steps with the exact syntax:

- 1 Navigate to the HP-UX/JDM subdirectory on the software CD.
- 2 Refer to steps 4 to 14 in [“Executing the JDM installation software on UNIX” on page 37](#) for the remaining instructions on how to install the Device Manager software in a UNIX (Solaris or HP-UX) environment.

Installing JDM on UNIX from the Web

To install the Device Manager software to a UNIX (Solaris or HP-UX) environment from the Web:

- 1 Go to the following URL:
`http://www.nortelnetworks.com/support`
- 2 Click on the product for which you want JDM.
A page opens that displays all versions of that product line.
- 3 Click Software under the specific product you are working with.
The software page opens.
- 4 Click the Java Device Manager version you want.
The Software Detail Information page opens.
- 5 Click JDM for Unix-Solaris, HP-UX.
A File Download dialog box opens that asks you to either run this program from its current location or to download the Device Manager software to your system.
- 6 Choose a directory to which you want to download the software.
- 7 See [“Executing the JDM installation software on UNIX” on page 37](#) for the remaining instructions on how to install the Device Manager software in a UNIX (Solaris or HP-UX) environment.

Note: After you launch Device Manager on a Solaris workstation, if several warning messages are displayed, do the following two things:

- Add the following to your `.cshrc` file:

```
setenv XKEYSYMDB $HOME/ .XKeysymDB
```
- Make sure there is a `.XKeysymbDB` file in your home directory.

Executing the JDM installation software on UNIX

To execute the JDM installation software in a UNIX environment:


- 1 Close all programs.
- 2 Navigate to the directory on your system where you loaded the Device Manager software.
- 3 For the Solaris environment, make the file executable by entering:


```
chmod a+x dm_xxxx_solaris_sparc.sh
```

 For the HP-UX environment, make the file executable by entering:



```
chmod a+x jdm_xxxx_hpux_pa-risc.sh
```
- 4 For the Solaris environment, run the `dm_xxxx_solaris_sparc.sh` file.
For the HP-UX environment, run the `jdm_xxxx_hpux_pa-risc.sh` file.
An install screen, followed by a Nortel dialog box opens. Then, the Introduction dialog box appears (Figure 11).

Figure 11 InstallAnywhere Introduction dialog box

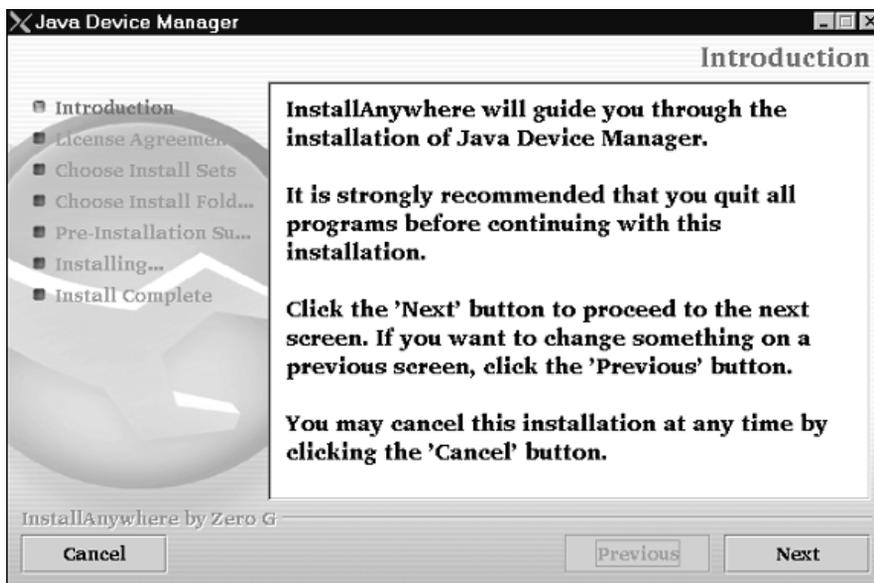

- 5 Click Next to continue the installation process.


The License Agreement dialog box opens (Figure 12 on page 38).

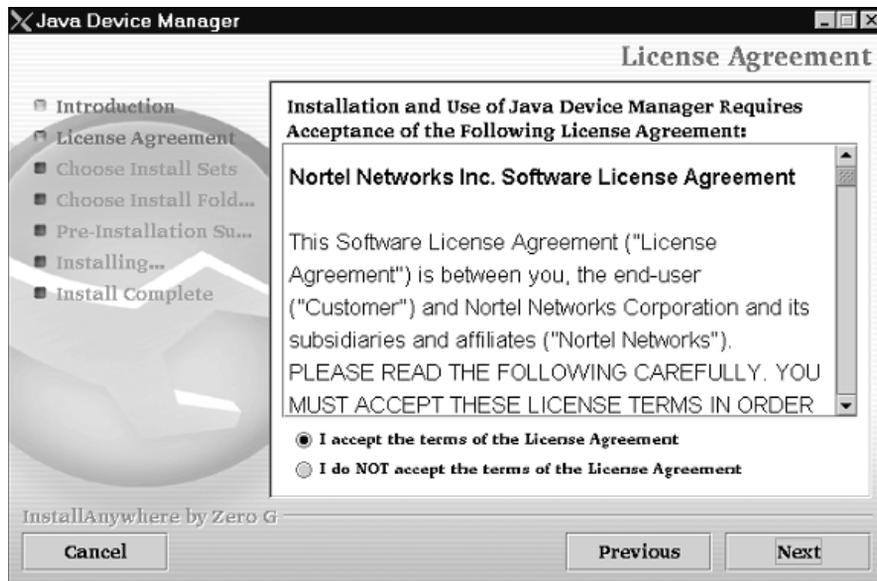Figure 12 License Agreement dialog box

6 Click I accept the terms of the license agreement as shown in [Figure 12](#).

7 Click Next.


The Choose Install Set dialog box opens ([Figure 13](#)).

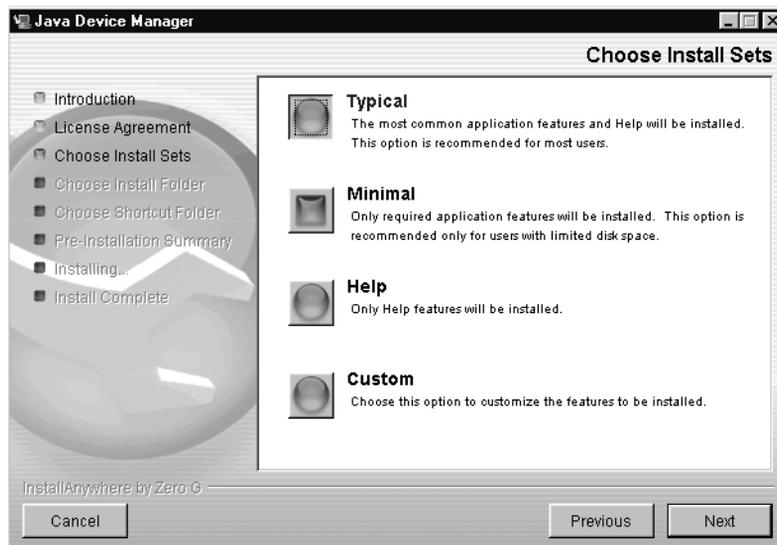Figure 13 Choose Install Set dialog box

- 8 Do *one* of the following:
 - Select Typical installation to install the common set features, as well as online help.
 - Select Minimal installation to select minimal features to install (recommended for those with limited disk space).
 - Select Help to install only the online help.
 - Select Custom installation to customize the features prior to installation.
- 9 Click Next.

The Choose Install Folder dialog box opens (Figure 14).


Figure 14 Choose Install Folder dialog box

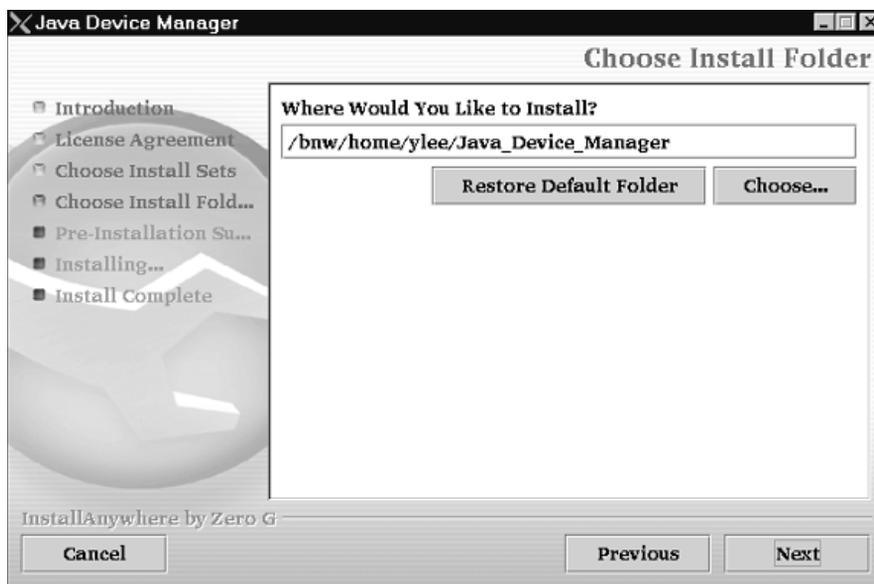

- 10 Click Restore Default Folder or click Choose to select the storage path.
- 11 Click Next.

The Pre-Installation Summary dialog box opens (Figure 15 on page 40).

Figure 15 Pre-installation Summary dialog box

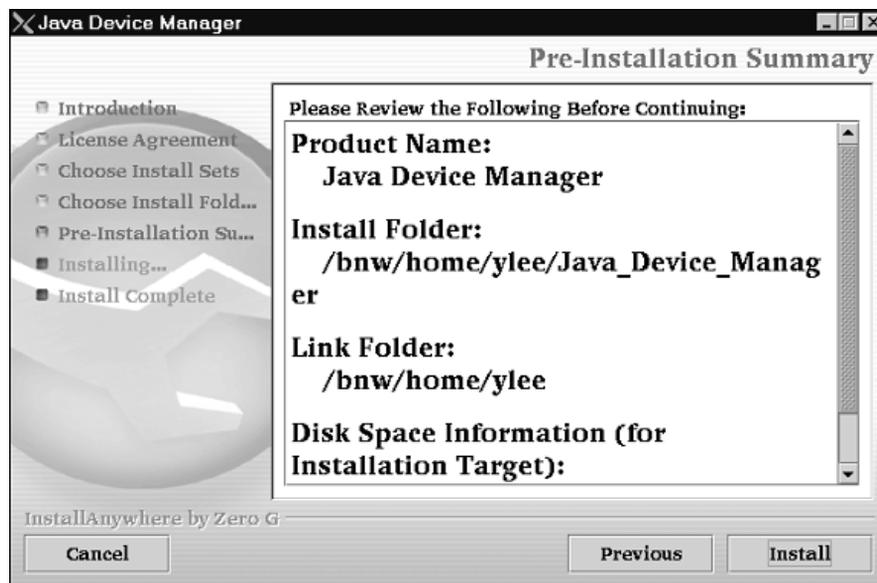

12 Verify the folder and disk space required to install the software. Use the Previous button to return to the appropriate dialog box to make changes.

13 Click Install.

The installation process begins ([Figure 16 on page 41](#)).

Figure 16 Installing Java Device Manager dialog box

When the installation is complete, the Install Complete dialog box opens (Figure 17).

Figure 17 Install Complete dialog box

14 Click Done to exit the installation.

Device Manager is now completely installed on your machine.

Chapter 2

Starting Device Manager

This chapter describes the basic procedures for starting the Device Manager software, which includes the following topics:

Topic	Page
Starting Device Manager using Windows and UNIX	44
Setting the Device Manager properties	46
Opening a device	48



Note: Before you can manage a switch using Device Manager, you must set an IP address for the switch using the CLI (see Getting Started for instructions).

Starting Device Manager using Windows and UNIX

To start Device Manager:

→ Do one of the following:

- In the Windows* environment, from the Windows Start menu, choose Programs > Java Device Manager > DM.
- In a UNIX* environment, verify that the Device Manager installation directory is in your search path; then type:

JDM

An abbreviated Device Manager window opens, as shown in [Figure 18](#).



Note: On startup, Device Manager performs a DNS lookup for the machine on which it is running. If the DNS lookup is slow or fails, a timeout message appears.

Figure 18 Abbreviated Device Manager window



Replicating editable fields in Device Manager

You can replicate all editable table cells by doing the following:

- 1** Single-click the cell.

The cell will highlight. (Note: A double-click makes the cell editor available. The cell editor includes directly updating the value, opening an option item list or opening a dialog. If required, update the cell prior to highlighting it to be copied.)

- 2** Click the Copy icon.
- 3** Highlight the cell(s) in which you want the data copied.
- 4** Click the Paste icon.

The content in the first cell is replicated into the highlighted cell(s).

- 5** Click Apply to set the change or click the Arrow icon to reset the change.

Setting the Device Manager properties

Device Manager uses the Simple Network Management Protocol (SNMP) to configure and manage 8000 Series switches. You can use the Device Manager Properties dialog box to configure important communication parameters such as the polling interval, timeout, and retry count. You can set these parameters at any time before or after you open a device.

To set the Device Manager properties:

- 1 From the initial Device Manager window menu bar, choose Device > Properties.

The Device Manager Properties dialog box (Figure 19) opens.

- 2 Select properties you want to change and set their values.
- 3 Click OK.

Figure 19 Properties dialog box

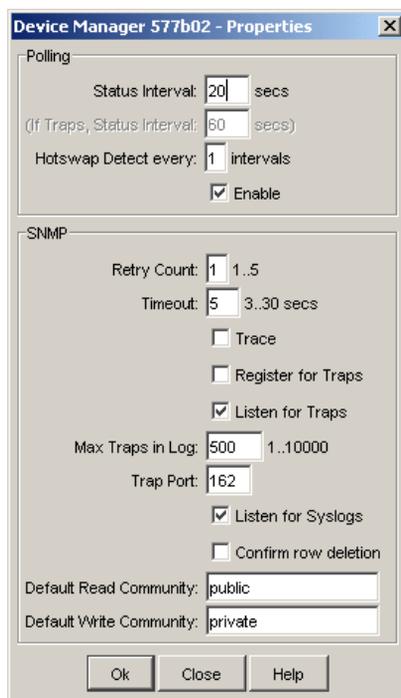


Table 1 describes the Properties dialog box fields.

Table 1 Properties dialog box fields

Field	Description
Status Interval	Interval at which statistics and status information are gathered (default is 20 seconds).
(IfTraps, Status Interval)	If the Register for Traps box is checked, interval, in seconds, at which statistics and status information are gathered.
Hotswap Detect every	Enter a number for the number of intervals at which Device Manager will check for module hot swaps.
Enable	If checked, Device Manager will poll the switch according to the settings listed above the Enable box.
Retry Count	If Device Manager cannot transmit polling information at startup, the number of times Device Manager retransmits polling information.
Timeout	Length of each retry of each polling waiting period. When accessing the device through a slow link, you may want to increase the timeout interval and then change the Retransmission Strategy to superlinear.
Trace	If checked, you have the ability to perform trace routes.
Register for Traps	If checked, Device Manager will register a trap.
Listen for Traps	If checked, Device Manager will listen for a trap.
Max Traps in Log	The specified number of traps that may exist in the trap log. The default is 500.
Trap Port	The number of the port that trap messages will be captured on. The default is 162.
Listen for Syslogs	If checked, Device Manager will listen for syslogs.
Confirm row deletion	If checked, Device Manager will send a message when a system table row was deleted.
Default Read Community	Displays the default Read Community type. You can edit this field by highlighting the current value and typing over it.
Default Write Community	Displays the default Write Community type. You can edit this field by highlighting the current value and typing over it.

Opening a device

Opening a device displays the device view, a picture of the device. Before you can display the device view, you must enter community strings that determine the access level granted to the device.

To open a device:

- 1 From the abbreviated Device Manager window menu bar, choose Device > Open. Or, from the Device Manager toolbar, click the open device button.



The Open Device dialog box opens (Figure 20).

Figure 20 Open Device dialog box



- 2 Identify the device by typing the DNS name or IP address of the device in the Device Name field.
- 3 Type the proper community strings in the Read Community and Write Community fields.



Note: To gain read/write/all access to a device in Device Manager, you must enter the read/write/all community string for both the Read Community and Write Community strings.

- 4 Click Ping to check if the switch is reachable, or Telnet to initiate a Telnet session.
- 5 Click Open.

Device Manager automatically determines what version of software the selected device is running. The Device Manager window opens, showing a picture of the device (Figure 21) that represents the physical features of the device.



Note: For information about connecting to the switch using SNMPv3, refer to *Configuring and Managing Security*.

Figure 21 Device Manager window showing an 8000 Series switch

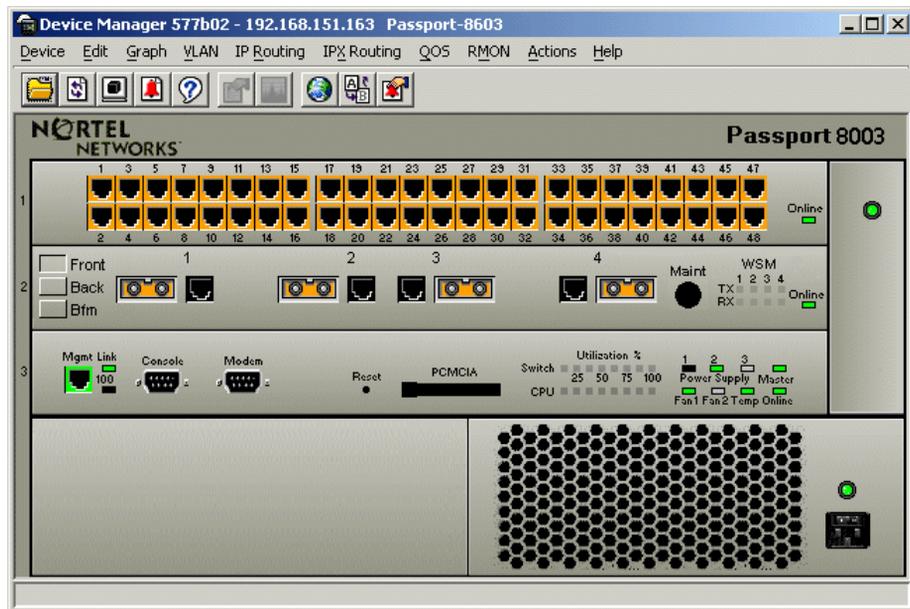


Table 2 describes the Open Device dialog box fields.

Table 2 Open Device dialog box fields

Field	Description
Device Name	Identifies the DNS name or IP address of the device.
Read Community	Indicates the length of the read community password string.
Write Community	Indicates the length of the write community password string.

Table 2 Open Device dialog box fields (continued)

Field	Description
v3 Enabled	Enables (checked) or disables (not checked) SNMP version 3.
User Name	Indicates the user's security name. If v3 Enabled is checked, this name appears in the Edit > SnmpV3 tables.
Authentication Protocol	Indicates the selected authentication protocol: NONE, MD5 or SHA-96.
Authentication Password	Indicates the length of the authentication password string.
Privacy Protocol	Indicates the selected privacy protocol: NONE or DES.
Privacy Password	Indicates the length of the privacy password string.

Opening a device using the Open Last option

You can use Device Manager's Open Last option to view and/or select from a list of available devices.

To open a previously opened device:

- 1** From the abbreviated Device Manager window menu bar, choose Device > Open Last.

A pull-down menu appears, listing the devices that were previously opened. The open last list displays up to 144 devices at a time. Additional devices may be viewed by selecting Device List 2, Device List 3, and so forth. Devices opened with SNMP v3 is not recorded in the Open List list.

- 2** Choose the IP address/system name of the device that you want to open. The Open Device dialog box for that device opens.

To delete devices from the Open Last Device List, choose Device > Open Last > Edit. The Devices dialog box opens. Highlight the device that you want to remove from the list and click Delete.

If you are not able to open a device in Device Manager, see [“Switch fails to open in Device Manager” on page 83](#), for information about how to troubleshoot the problem.

Chapter 3


Understanding the Device Manager window

The Device Manager window has the following four parts (Figure 22):

- Menu bar
- Tool bar
- Device view
- Status bar

Figure 22 displays the parts of the Device Manager Window.

Figure 22 Parts of the Device Manager window

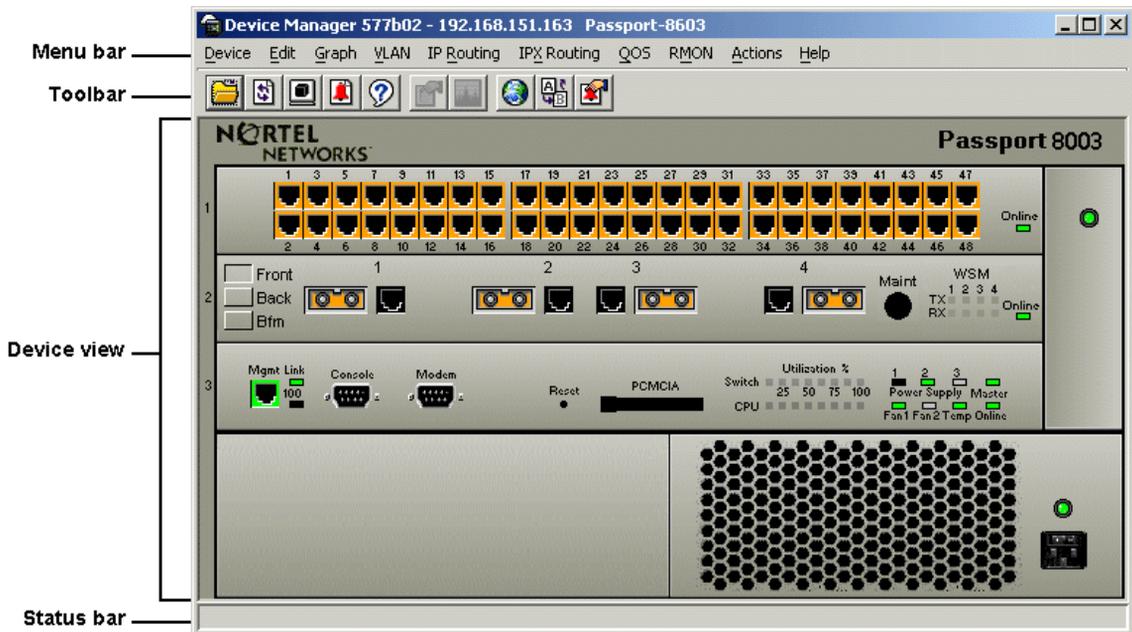

Using the menu bar

The menu bar on the Device Manager window ([Figure 23](#)) provides menus with commands that let you monitor a device.

Figure 23 Menu bar



[Table 3](#) describes the menu bar fields.

Table 3 Device Manager menu bar description

Menu	Description
Device	The Device menu lets you open a device, refresh the device view, and set polling and SNMP properties. This menu also allows you to open and view the Trap Log, SysLog, and Log. It also allows you to Telnet to currently opened device.
Edit	The Edit menu lets you view parameters for the chassis or for selected objects. The object can be a card, fan, MDA, port, power supply or any other object. This menu also lets you set security parameters, run diagnostic tests, and select all objects in the device. This menu also include FileSystem, NTP, SNMP v3 related configurations. ATM menu is useful only if the chassis contains ATM card.
Graph	The Graph menu lets you view Device Manager statistics and produce graphs of the chassis or port statistics.
VLAN	The VLAN menu lets you view information about VLANs, spanning tree groups (STGs), MultiLink Trunks/LACP, MAC Learning, SMLT, SVLAN, and Global MAC Filtering.
IP Routing	The IP Routing menu lets you set up IP routing functions for the switch, including OSPF, RIP, VRRP, Multicast, IGMP, DVMRP, DHCP, BGP, RSMLT, PIM, PGM, UDP forwarding, filters, and policies.
IPX Routing	The IPX Routing menu lets you set up IPX routing functions, including RIP, SAP, RSMLT, and policies.
QOS	The QOS menu lets you set up and view QoS filters and profiles.
RMON	The RMON menu lets you set up RMON alarms and view the alarm log and history log. This menu also allows you to enable or disable RMON history or statistics on all ports.

Table 3 Device Manager menu bar description

Menu	Description
Actions	The Actions menu provides quick access to selected actions without going through other menus and submenus. Use this menu to open the Web management interface, to save runtime configurations, to save boot configurations, or to get PCAP file.
Help	The Help menu lets you view online Help topics for Device Manager. This menu also provides a legend for the port colors in the device view.



Note: All WSM related menus are activated only when chassis contains WSM card, and the WSM card is selected.

Using the toolbar

The toolbar buttons provide quick access to commonly used commands and some additional actions (Table 4).

Table 4 Toolbar buttons

Button	Name	Description	Menu equivalent
	Open Device	Opens a device.	Device > Open
	Refresh Device Status	Refreshes the device view information.	Device > Refresh Status
	Telnet	Opens a Telnet session.	Device > Telnet
	Trap Log	Opens the trap log.	Device > Trap Log
	Help	Opens online Help in a Web browser window.	Help > Device Manager Basics>Passport and BayStack Families
	Edit Selected	Displays configuration data windows for the selected chassis object.	Edit > Chassis Edit > Card Edit > Fan Edit > MDA Edit > Mgmt Port Edit > Port Edit > Power Supply Edit > Serial Port
	Graph Selected	Opens statistics and graphing windows.	Graph > Chassis Graph > Port
	Open Device's Home Page	Opens the Web management interface home page.	Actions > Open Home Page

Table 4 Toolbar buttons (continued)

	Save Runtime Config	Saves the current run-time configuration.	Actions > Save Runtime Config
	Alarm Manager	Opens the RMON Alarm Manager window.	Rmon > Alarm Manager

Using the Device view


The device view allows you to determine at a glance the operating status of the various modules and ports in your hardware configuration. You can also use the device view to perform management tasks on specific objects.

Selecting objects

In the device view (Figure 24), you can select the following types of objects:

- The entire chassis
- A card (module) or multiple cards
- A port or multiple ports
- A power supply
- A fan
- An MDA
- A management port
- A serial port

Figure 24 Objects in an 8000 Series switch device view

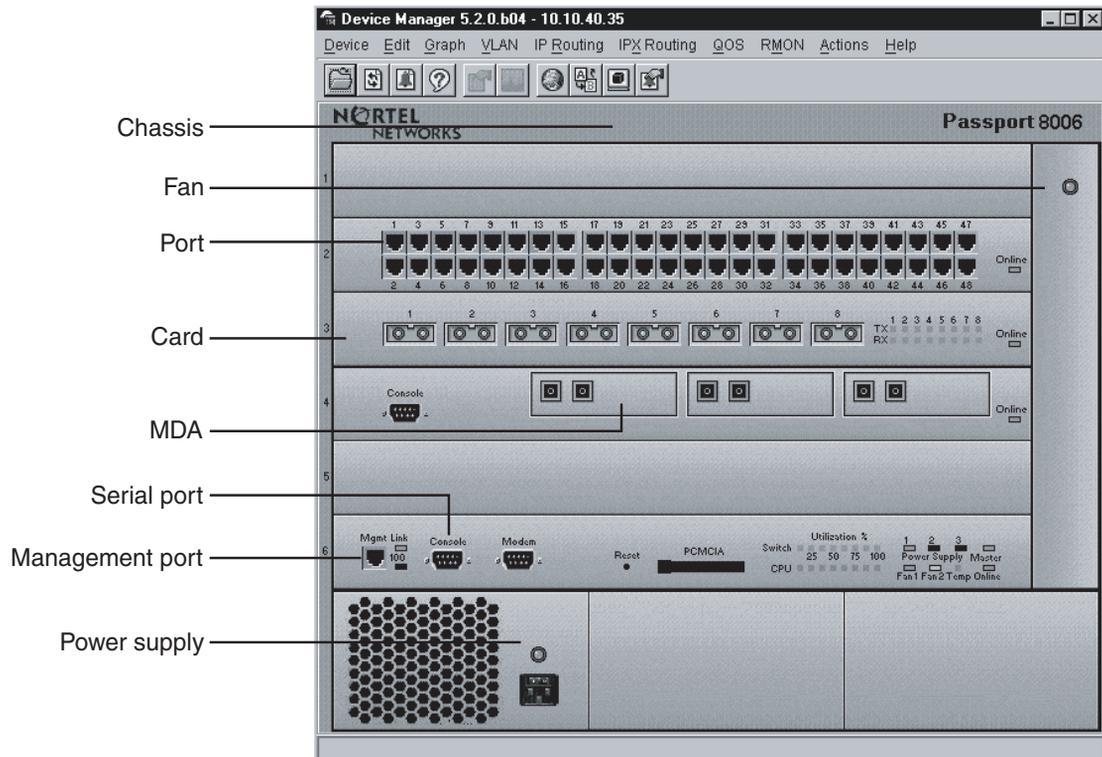

OPT0002A

To select a single object, click the edge of the object. The object is outlined in yellow, indicating that it is selected. Subsequent activities in Device Manager refer to the selected object.

To select multiple objects of the same type (such as ports or modules), use *one* of the following actions:

- For a block of contiguous ports or modules, drag to select the group of objects.
- or
- For multiple ports or modules anywhere in the switch chassis, [Ctrl]-click the objects anywhere in the device view.

The general rule for selecting multiple physical objects (fans, power supplies, MDAs, modules, ports, etc.) is that the selected objects must belong to the same category/family or have some kind of parent/child relationship. For example, when a 10/100TX port is the base of all ports, and a 10/100TX port is selected first, then all other port can also be selected.

However, if a different type of port is selected first, for example a Gig port on a Passport 8632TXE module, and then you attempt to select a port under a different category, for example, an 8672ATM port or a 8683POS port, etc., Device Manager will not allow you to select that port. To work around this issue in the example provided, you would first select the 10/100TX port (the most common basic port), and then select other type of ports (for example, a Gig port).

Interpreting the status of LEDs and ports

The conventions on the device view are similar to the actual switch appearance. Module LEDs are in one of three states: on, off, or blinking. For a full description of what each state means, refer to the documentation that came with the module.

The ports on the device view are color coded to provide at-a-glance port status. [Table 5](#) shows the status assigned to each color.

Table 5 Device Manager port color codes

Color	Description
Green	Port is up and operating.
Red	Port has been manually disabled.
Orange	Port has no link.
Light Blue	Port is in standby mode.
Dark Blue	Port is being tested.
Grey	Port is not reachable by Device Manager.
Pink	Port has a loopback connector connected to it.

In addition, the Help menu provides a legend that identifies the port colors and their meanings.

Using shortcut menus

Objects in the device view such as the chassis, ports, and cards have shortcut menus. These menus provide a faster path for editing objects and applying changes; however, you can access the same options through the menu bar or the toolbar.

To display the chassis shortcut menu (Figure 25), select the chassis and right click.

Figure 25 Chassis shortcut menu

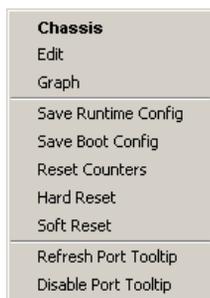
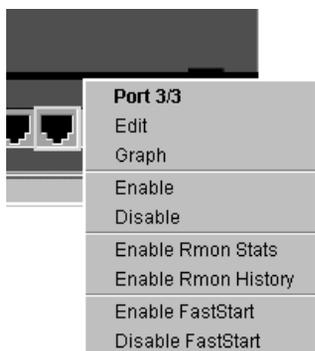


Table 6 describes the chassis shortcut menu options.

Table 6 Chassis shortcut menu options

Option	Description
Edit	Edit chassis parameters.
Graph	Graph chassis statistics.
Save Runtime Config	Save any changes made as a run-time configuration.
Save Boot Config	Save any changes made as a boot configuration.
Reset Counters	Reset all the statistics counters for the switch.
Hard Reset	Perform a hard reset of the switch.
Soft Reset	Perform a soft reset of the switch.
Refresh Port Tooltip	Refresh the port tooltip data of the switch. The port tooltip data contains: Slot/Port, PortName, and PortOperSpeed.
Disable Port Tooltip	Disable the port tooltip function of the switch.

To display the port shortcut menu (Figure 26), select one or more ports and right click.

Figure 26 Port shortcut menus

[Table 7](#) describes the I/O port shortcut menu options.


Table 7 Port shortcut menu options

Option	Description
Edit	Display edit port menu.
Graph	Graph port statistics.
Graph POS	Displays on POS ports only.
Enable	Administratively bring a port up.
Disable	Administratively shut down a port.
Enable Rmon Stats	Enable Rmon statistics logging on this port or ports. Does not display on ATM or POS ports.
Enable Rmon History	Enable Rmon history logging on this port or ports. This field does not display on ATM or POS ports.
Enable FastStart	Enable FastStart spanning tree operation on this port or ports. This field does not display on ATM ports.
Disable FastStart	Disable FastStart spanning tree operation on this port or ports. This field does not display on ATM ports.

The card shortcut menu provides a quick way to view the card's parameters. When the selected card is an I/O module, you can click on the Edit option on the shortcut menu to open the Edit Card dialog box.

To display the card shortcut menu ([Figure 27](#)), select a card and right click.

Figure 27 Card shortcut menu (I/O module)

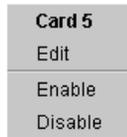

[Figure 27](#) is an example, this popup menu is context sensitive base on the what kind of card is selected.

Using the status bar

At the bottom of the Device Manager window is the status bar. This area displays error and informational messages from the software application. These messages are not related to the device being managed.

Using Device Manager dialog boxes

Many Device Manager dialog boxes contain editable fields that allow you to enter parameter values, and many of the parameters have predetermined possible values. For example, a port may be set to be enabled or disabled. Other parameter values are ranges of user-determined values. For example, the value for a system contact will be a name you enter in the SysContact field.


Editable fields in Device Manager dialog boxes are displayed in white.

To change the value in a field:

- 1 Click the field.

The possible choices for that parameter are displayed ([Figure 28](#)).

Figure 28 Parameter selection menu

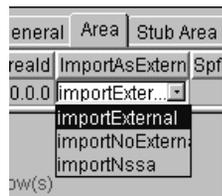

- 2 Click a new value from the list.
- 3 Click Apply.

For fields that do not have preset values, click the field and type the value.

When you enter values for IP addresses, MAC addresses, or time, follow these guidelines:

- Enter an IP address in decimal format:
`<xxx> . <xxx> . <xxx> . <xxx>`
- Enter a MAC address in hexadecimal format:
`xx : xx : xx : xx : xx : xx`
- Time is a value based on the delta from the switch boot-up time.

Using the buttons in Device Manager dialog boxes

Table 8 describes buttons that appear in Device Manager dialog boxes and tabs. Not all buttons appear in all dialog boxes.

Table 8 Device Manager buttons

Button	Description
Apply	Applies the changes you have entered in fields on a tab or dialog box. The button is grayed out until you change a parameter. Changes are displayed as bold text or numbers.
Insert	Opens a dialog box to create a new entry for a table; then from the dialog box, inserts the new entry in the table.
Delete	Deletes a selected entry.
Refresh	Refreshes the information in the window. Every time you click on Refresh, new information is polled from the switch and displayed.
Close	Closes the tab or dialog box and disregards any changes you have made to fields.
Help	Opens context-sensitive online Help.
Resize Columns	Resizes table columns to fit the data in them.
Stop	Stops the current action (polling).
Copy	Will copy selected items to your computer's memory clipboard.
Paste	Will paste the contents of your computer's clipboard.
Reset changes	Resets any configuration values you have changed back to their original value.
Export data	Allows you to copy data to external media.
Print Table	Prints the contents of any table that is displayed.
Graph	Graphs selected data.
Export (on Graph dialog boxes)	Saves the current table in ASCII format in a file you specify. The table contains tabs, that allows you to import this file into a text editor or spreadsheet for further analysis.
Print (on Graph dialog boxes)	Prints the current table.

Editing objects

You can edit objects and values from Device Manager in the following ways:

- Select an object; from the Device Manager toolbar, click Edit Selected. The edit dialog box opens for that object.
- From the shortcut menu for a chassis, card, port, or any other object, choose Edit. The edit dialog box opens for that object.
- Double-click an object. The edit dialog box opens for that object.
- From the Device Manager menu bar, choose Edit > Selected All. Then choose an object type from the list.

When you change values in a field, you can see fields that have been changed but not applied. Click Apply to apply the changes to the device.

Most tabs and dialog boxes contain a Refresh button. After you apply changes to fields, click Refresh to display the new information in the tab or dialog box. In Windows and UNIX environments, the changed value is displayed in **bold**.



Note: To make changes in the running configuration, click Apply. Changes are not applied to Device Manager until you click Apply. To make the changes permanent, from the Device Manager menu bar, click Actions > Save Runtime Config.

Online help

Online help in Device Manager is context-sensitive. You use a Web browser to display online help. The Web browser should launch automatically when you click help. To display online help correctly, Nortel Networks recommends using the following Web browsers:

- Microsoft Internet Explorer 5.0 or later
- Netscape Navigator 4.7 or later

In a Unix environment, for Device Manager (or Optivity Switch Manager) to launch a Netscape browser properly, the shell in which Device Manager was launched must have a Netscape browser in its path.

In a Solaris environment, Device Manager may not open a Netscape window when you click a Help button. To work around this issue, first launch Netscape manually; then the Help system properly opens in the Netscape browser window.

The Help menu may behave erratically after you view the “About Device Manager” selection. If the edge of the Help menu extends beyond the device view window, you may not be able to select Legend using the cursor. The workaround for this problem is to use the arrow keys to select from this menu, or to widen the device view window, so that the Help menu is displayed in entirety on top of the device view.

If, for some reason, the Web browser does not launch, the location of the Help files are the default install directories listed in [Table 9](#).

Table 9 Help file locations

Help files	Default path
Device Manager	<i>jdm installed directory/help/pp8k_basics/dmhelp.html</i>
Device specific help	<i>jdm installed directory/help/platform/version/help.html, where platform/version is the platform/version of current device. For example, for passport v370 release, the platform is “accelar2k” and version is “v370”.</i>

Chapter 4

Managing the system

This chapter describes how to manage the switch system using the Device Manager software, and includes the following topics:

Topic	Page
Working with files	72
Using the trap log	78

Working with files

The File System tabs allow you to copy files and to verify the files currently stored in onboard flash memory and on an installed PCMCIA card. These tabs allow you to perform the following tasks:

- Copy a file
- Check the amount of memory used and the number of files stored in onboard flash memory and an installed PCMCIA card
- Verify the name, size, and storage date of each file present in onboard flash memory and PCMCIA memory


Copying files

To copy a file:

- 1 From the menu bar, choose Edit > File System.

The File System dialog box opens with the Copy File tab displayed (Figure 29).

Figure 29 Copy File dialog box

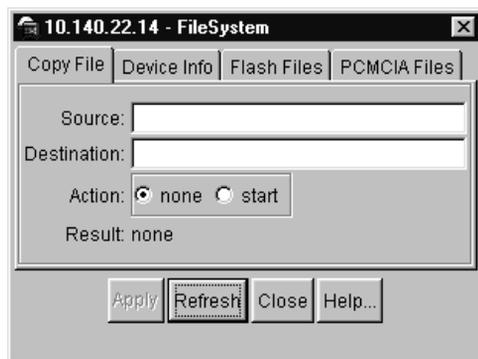

- 2 In the Source text box, specify the file to be copied in one of these forms:
 - /flash/filename
 - /pcmcia/filename
 - ipaddress:/home/user/filename
- 3 In the Destination text box, specify the location where you intend the file to be copied in one of these forms:
 - /flash/filename
 - /pcmcia/filename
 - ipaddress:/home/user/filename

For example, to copy a configuration file to a remote TFTP server, the Destination text box might read:

10.10.40.20:/home/joe/config.cfg

and the Source text box might read:

/flash/config.cfg

- 4 In the Action field, click start.

- 5 Click Apply to start copying the files.

The results of the action appears in the Result field.

Checking flash memory use

To check use of the flash memory in the switch:


- 1 From the menu bar, choose Edit > File System.

The File System dialog box opens with the Copy File tab displayed.

- 2 Click the Device Info tab.

The Device Info tab opens (Figure 30).

Figure 30 Device Info tab

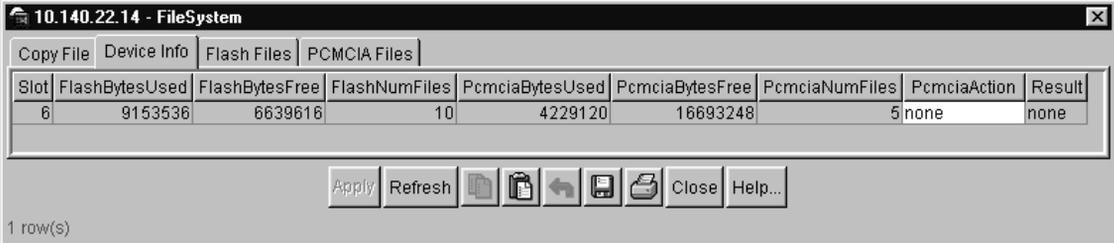

Slot	FlashBytesUsed	FlashBytesFree	FlashNumFiles	PcmciaBytesUsed	PcmciaBytesFree	PcmciaNumFiles	PcmciaAction	Result
6	9153536	6639616	10	4229120	16693248	5	none	none

The Device Info tab shows the amount of memory used and available for both onboard flash memory and an installed PCMCIA card, as well as the number of files in each location. The Action field allows you to reset the PCMCIA card.

Viewing file names on the Flash


To view the names and sizes of switch files:

- 1 From the menu bar, choose Edit > File System.

The File System dialog box opens with the Copy File tab displayed.

- 2 Click the Flash Files tab (Figure 31).

Figure 31 Flash Files tab

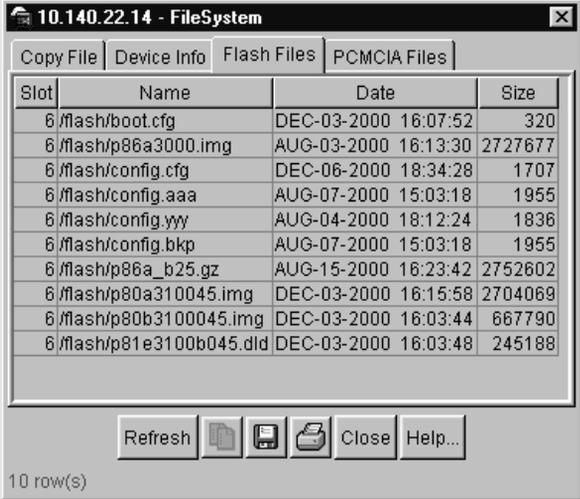

Slot	Name	Date	Size
6	/flash/boot.cfg	DEC-03-2000 16:07:52	320
6	/flash/p86a3000.img	AUG-03-2000 16:13:30	2727677
6	/flash/config.cfg	DEC-06-2000 18:34:28	1707
6	/flash/config.aaa	AUG-07-2000 15:03:18	1955
6	/flash/config.yyy	AUG-04-2000 18:12:24	1836
6	/flash/config.bkp	AUG-07-2000 15:03:18	1955
6	/flash/p86a_b25.gz	AUG-15-2000 16:23:42	2752602
6	/flash/p80a310045.img	DEC-03-2000 16:15:58	2704069
6	/flash/p80b310045.img	DEC-03-2000 16:03:44	667790
6	/flash/p81e3100b045.dld	DEC-03-2000 16:03:48	245188

These tabs list the name, modification date, and size of each switch file in the onboard flash memory. The slot number indicates the chassis location of the referenced CPU/switch fabric module.

Viewing file names on the PCMCIA

To view the names and sizes of switch files:

- 1 From the menu bar, choose Edit > File System.

The File System dialog box opens with the Copy File tab displayed.

- 2 Click the PCMCIA Files tab (Figure 32).

Figure 32 PCMCIA Files tab

Slot	Name	Date	Size
6	/pcmcia/p86a_b23.gz	JUN-25-2000 03:13:58	2750010
6	/pcmcia/p80b1212.gz	JUN-25-2000 03:15:28	666265
6	/pcmcia/syslog.txt	DEC-03-2000 16:31:10	81182
6	/pcmcia/p80b10024.gz	AUG-09-2000 16:05:22	666636
6	/pcmcia/config.cfg	AUG-09-2000 16:05:34	1522

These tabs list the name, modification date, and size of each switch file in the PCMCIA card. The slot number indicates the chassis location of the referenced CPU/switch fabric module.

Using the trap log

You can configure an 8000 Series switch to send out SNMP generic traps. When Device Manager is running, any traps received are recorded in the trap log. You set the maximum number of entries in the trap log using the Properties dialog box. (See [“Setting the Device Manager properties” on page 46](#)). The default number of trap log entries is 500.

To view the trap log:

→ Do one of the following:


- On the toolbar, click the Trap Log button.



- From the menu bar, choose Device > Trap Log.

The Trap Log dialog box opens ([Figure 33](#)).

Figure 33 Trap Log dialog box

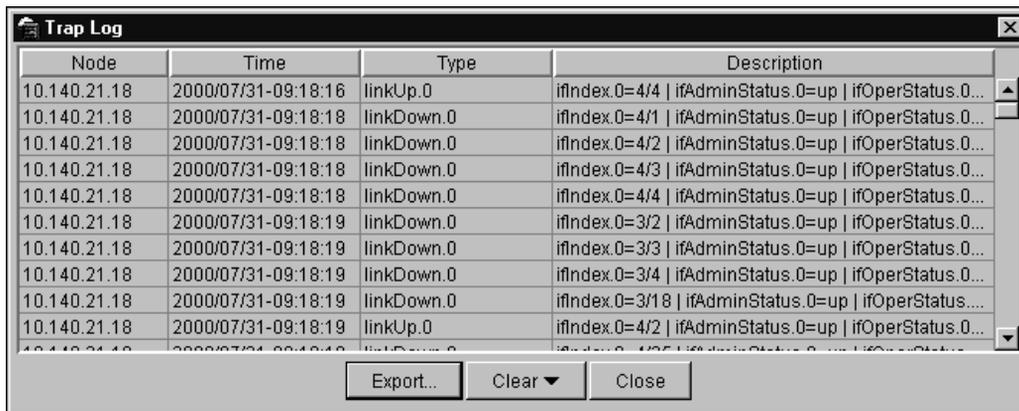



Note: When you operate Device Manager from a UNIX platform, you must be logged in as root in order to receive traps.

On Windows platform, only the first JDM application can open trap log.

On UNIX platform, only the root user can open trap log.

By default, traps are sent in SNMP V2c format. However, if you are using an older network management system (NMS), one that supports only SNMP V1 traps (HP OpenView), you can select that the traps be sent in V1 format.

In this release, the register for traps option is not valid. When enabled, It will not register the PC in the switch's trap receiver table. Create entries in the Edit->SnmpV3->Target Table and Edit->SnmpV3->Notify Table to get traps from the switch.

Appendix A

Troubleshooting Device Manager


This appendix contains information about problems that may occur while you are operating the switch, and includes the following topics:

Topic	Page
Login prompt fails to appear from the Console port	82
Switch fails to open in Device Manager	83
Exception error displayed while launching Java application launcher	85

Login prompt fails to appear from the Console port

If you have connected a terminal to the Console port and fail to get a login prompt, the port may have an incorrect DCE/DTE setting. Try moving the DCE/DTE switch from its current setting to the other position ([Figure 34](#)).

Figure 34 DCE/DTE switch

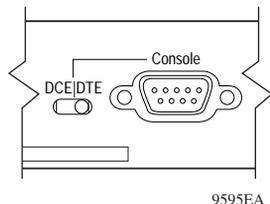

If the console screen still fails to show a prompt, use Device Manager to check the port settings.

To check the Console port settings:

- 1** In the Device View, select the Console port.
- 2** From the Device Manager menu bar, choose Edit > Port.
- 3** Check to see that the port settings are:
 - 9600 baud
 - 8 data bits
 - 1 stop bit
 - No parity

If necessary, change the port settings to match those in this list.

Switch fails to open in Device Manager

If a switch does not open, Device Manager displays a timeout message. Timeouts can occur in slower networks and indicate that you need to increase your retransmission retries and timeout interval. For information about setting these values, refer to [“Setting the Device Manager properties” on page 46](#).

If increasing the retransmission retries and timeout interval does not solve the problem, in the Open Device dialog box, make sure that you entered the correct read and write community information. For instructions on entering community strings, see [“Opening a device” on page 48](#).

If the switch cannot be reached through IP (the management station cannot communicate with the switch), verify the following:

- Is the switch connected to the network?
- Is the switch turned on?
- Does the switch have an incorrect IP address?
- Is the incorrect IP address specified in the Open Device field in Device Manager?
- Is the network misconfigured?

If you are using SNMPv3, verify the following:

- Is the encryption module correctly loaded on the switch?
- Is the user login and password correct?
- Is the authentication protocol and password correct?
- Is the privacy protocol and password correct?

Exception error displayed while launching Java application launcher

Device Manager uses the default settings of the Java application launcher when it is launched. These default fits most operations, but in large configurations you may need to increase the default heap size setting in the Java application launcher from 64MB to 128MB (-Xmx128m) to avoid display issues or error messages, for example,

```
java.lang.OutOfMemoryError.
```

Example in a Windows environment:

- a** Close Device Manager.
- b** Change the shortcut as follows:

```
"C:\Program Files\JavaSoft\JRE\1.3.1\bin\javaw.exe" -Xmx128m  
-cp  
dm_40.jar;1k_40.jar;2k_40.jar;om8k_40.jar;bs_40.jar;falcon_4  
0.jar;jcch art450k.jar;sfc.jar  
com.baynetworks.fswitch.dm.DM.
```

Example in a Solaris environment:

- a** Close Device Manager.
- b** Change the shortcut as follows:

```
$java_cmd -Xmx128m -cp  
1k_40.jar:2k_40.jar:om8k_40.jar:bs_40.jar:falcon_40.jar:jcch  
art450K.jar  
:sfc.jar:dm_40.jar com.baynetworks.fswitch.dm.DM $*.
```

Index

A

Action field 73, 75
Actions menu 55
Alarm Manager button 57
angle brackets in command syntax 15
Apply button 67

B

braces in command syntax 15
brackets in command syntax 15
Browse Device's Home Page button 56
buttons
 task 67
 toolbar 56
 using Device Manager 67

C

card, selecting 60
chassis, selecting 60
Close button 67
color-coded ports 61
community strings
 default 49
Confirm row deletion 47
Console port, checking settings 82
conventions
 text 15
Copy File tab 73
customer support 18

D

DCE/DTE switch 82
Delete button 67
Destination field 73
device
 opening 48, 51
 viewing 58
 window parts 53
Device Info tab 75
Device Manager
 help files 69
 installing on UNIX 33
 installing on Windows 24
 menu bar descriptions 54
 requirements 19
 setting poll interval 47
 setting properties 46
 starting 44
 toolbar buttons 56
 uninstalling on Windows 21
Device Manager window 44
dialog boxes, using Device Manger 66

E

Edit Component button 56
Edit menu 54
Export data button 67

F

failure of switch to open in Device Manager 83
failure to get a login prompt 82

file names
 viewing 76, 77
files, copying 73
flash memory, checking 75

G

Graph button 67
Graph menu 54
Graph Selected button 56

H

Help button 56, 67
Help menu 55
Help, Device Manager 69
Hotswap Detect 47

I

Insert button 67
IP address
 incorrect 83
IP Routing menu 54
IPX Routing menu 54

L

LEDs, interpreting 61
login prompt, failure to get 82

M

menus. See individual menu names
module, selecting 60

O

objects
 editing 68
 selecting 60
online help 69

Open Device button 56
Open Device dialog box 48

P

PCMCIA Files tab 77
polling waiting period 47
ports
 color-coded 61
 selecting 60
Print Table button 67
product support 18
Properties dialog box 46
publications
 hard copy 17

Q

QOS menu 54

R

Read Community, SNMP 48
Read-Write-All access 48
Refresh button 67
Refresh Display button 56
Register for Traps 47
requirements
 Device Manager 19
 UNIX installation of Device Manager 33
 Windows installation of Device Manager 24
Reset changes button 67
Resize Columns button 67
retransmission retries 83
Retry Count 47
RMON, menu 54
run-time configuration, saving 57

S

- SaveRun-Time Config button 57
- shortcut menus, using 62
- slot, selecting 60
- software installation
 - UNIX 33
 - Windows 24
- Source field 73
- status bar, Device Manager 65
- Status Poll Interval 47
- Stop button 67
- support, Nortel Networks 18
- switch fails to open in Device Manager 83

T

- technical publications 17
- technical support 18
- Telnet
 - button 56
 - session 56
- text conventions 15
- Timeout 47
- timeout interval 83
- timeout messages 83
- toolbar buttons 56
- toolbar, Device Manager 56
- trace routes, enabling 47
- trap log 78
- Trap Log button 56
- Trap Log dialog box 78
- traps
 - designating a port 47
 - max number in log 47
 - registering for 47
- troubleshooting
 - login prompt failure 82
 - switch does not open 83

U

- Uninstalling
 - Device Manager on Windows 21
- UNIX
 - installing Device Manager 33
 - receiving traps 79

V

- vertical line in command syntax 16
- VLAN menu 54

W

- Web interface, opening 56
- Windows
 - installing Device Manager 24
- Write Community, SNMP 48

