

**2200A DATA CONTROL UNIT
(NETWORK CONTROLLER)
TEST PROCEDURES
"DATAPHONE® II" SERVICE**

	CONTENTS	PAGE	
1.	GENERAL	1	1.03 The NC continuously monitors the operational condition of the data sets connected to the control channel.
2.	INSTALLATION TEST	1	1.04 It should be kept in mind that the DATAPHONE® II service provides central-site network control. DATAPHONE II service provides continuous system monitoring and a continuous indication of the status of all the data sets and quality of the transmission facilities. These features change the installation and maintenance testing philosophy from that of other data systems.
3.	MAINTENANCE	2	1.05 The DATAPHONE II service provides extensive diagnostics that can rapidly identify the nature of a failure. These features provide a means for specific troubleshooting should the need arise. The maintenance part contains flowcharts that are the recommended approach.
	Booting Procedure	2	1.06 The technician will first attempt to correct NC problems by rebooting and/or changing the replaceable items, namely; the circuit packs, power supply, tape drive unit, and tape cartridge.
	Power-Down Procedure	3	
	Power-Up Procedure	3	
	Fuse Replacement Procedure	3	
	Tape Drive Unit Replacement Procedure	3	
	66A2 Mounting Replacement Procedure	3	
	Power Supply Troubleshooting	4	
	Booting Problem	4	
	Port Problem	4	
4.	REFERENCES	5	2. INSTALLATION TEST
1.	GENERAL		2.01 The NC should be tested to determine if it is operating properly after installation.
1.01	This section contains information concerning procedures to be used when testing the network controller (NC), also referred to as 2200A-L1 data control unit (DCU).		2.02 Execute several nondisruptive tests or commands on local data sets in the control channel network. Some examples of tests or commands that may be used are: EIA status (eia), identity (id). Refer to Section 592-102-100 for description, operation, and result indication of these tests. Refer to Table A or B to determine whether a test or command is disruptive or nondisruptive.
1.02	Whenever this section is reissued the reason for reissue will be contained in this paragraph.		

NOTICE

Not for use or disclosure outside the
Bell System except under written agreement

3. MAINTENANCE

3.01 No routine maintenance is required. When investigating a trouble report or installation problem refer to Fig. 1 as a troubleshooting guide and to Fig. 2 for power supply troubleshooting guide.

Booting Procedure

3.02 During trouble report or installation follow the procedure below for booting NC:

STEP	ACTION	VERIFICATION
1	Ensure the ON LINE/OFF LINE switch is in OFF LINE. Insert the system program 100A data cartridge into the KS-21447,L10 minirecorder.	
2	Place the ON LINE/OFF LINE switch to ON LINE. Depress and hold BOOT and momentarily depress and release RESET. Release BOOT.	<p data-bbox="685 493 1139 542">TAPE STATUS red and green LEDs light. CONTROLLER STATUS and LED lights.</p> <p data-bbox="685 568 1139 763">TAPE STATUS changes to GREEN. TAPE IN MOTION and UNIT SELECT LEDs light. ON LINE LED lights. On the DATASPEED® 40/2 terminal screen first SYSTEM TEST and then LOADING and the software versions are displayed. As the system program is read from the 100A data cartridge into memory (and after a short delay) the following occurs:</p> <ul data-bbox="660 789 1139 1136" style="list-style-type: none"><li data-bbox="660 789 1139 837">● The audible tone on the terminal is heard at intervals<li data-bbox="660 863 1139 935">● The cursor beam on the terminal display moves across the screen in steps at the same interval as the audible tones<li data-bbox="660 961 1139 1010">● The TAPE IN MOTION and UNIT SELECT LEDs flash in intervals as the files are read.<li data-bbox="660 1036 1139 1136">● CONTROLLER STATUS and TAPE STATUS green LEDs light. The terminal displays accessing tape—WAIT then Network Controller and software version information.

3.03 During trouble report or installation problem to power up or power down the NC, follow the procedure below:

Power-Down Procedure

1. Turn the ON LINE/OFF LINE switch in OFF LINE position.
2. Wait for TAPE IN MOTION LED to go off.
3. Remove the system program 100A data cartridge from the KS-21447,L10 minirecorder.
4. Unplug NC power cord from 115 Vac source.

Power-Up Procedure

CAUTION: Make sure 100A data cartridge is not inserted into the KS-21447,L10 minirecorder.

1. Plug NC power cord into a 115 Vac source.
2. Insert the system program 100A data cartridge into the KS-21447,L10 minirecorder.
3. Turn the ON LINE/OFF LINE switch in ON LINE position.
4. Execute boot procedure.

3.04 During trouble report or installation if fuse is blown, follow the procedure below:

Fuse Replacement Procedure

1. Execute power-down procedure.
2. Locate and replace blown fuse. (Use of a multimeter is recommended to check for a blown fuse.) Fuses F1, F2, F3, F4, F5, F6, F7 and F8 are located on the rear of the 291A power unit inside the fuse holders. Refer to Fig. 3 for location of the fuses.

Caution: When checking fuses and voltage test points, avoid probes touching adjacent contacts or shorting out test points.

3. Execute power-up procedure.

3.05 Refer to Table C for the code, rating, and circuit protected by the fuses F1 through F8.

Tape Drive Unit Replacement Procedure

3.06 During trouble report or installation if tape drive unit needs replacement follow the procedure below:

1. Follow power-down procedure.
2. Remove plugs P5 and P6 (Fig. 3) from rear of tape drive unit.
3. Remove tape drive unit retaining screws (Fig. 3).
4. Slide out tape drive unit.
5. Remove tape drive unit mounting brackets.
6. Mount the new tape drive unit on the mounting bracket.
7. Slide tape drive unit into the NC.
8. Replace tape drive unit retaining screws.
9. Connect P5 and P6 connectors at the rear of tape drive unit.
10. Follow power-up procedure.

66A2 Mounting Replacement Procedure

3.07 During trouble report or installation if 66A2 mounting needs replacement follow the procedure below:

1. Follow power-down procedure.
2. Remove NC circuit packs (Fig. 3).
3. Remove 291A power unit.
4. Remove tape drive unit.
5. Remove 66A2 mounting.
6. Replace 66A2 mounting.

7. Install tape drive unit, 291A power unit and NC circuit packs.

CAUTION: *Ensure NC circuit packs are firmly seated on the sockets.*

8. Follow power-up procedure.

Power Supply Troubleshooting

3.08 When a power problem is suspected refer to Fig. 2 for the troubleshooting sequence. Figure 3 shows the location of the fuse holder and connectors and Fig. 4 shows the location of the voltage terminal strip on the NC necessary for power supply troubleshooting.

Booting Problem

3.09 When a booting or operational problem is encountered, refer to the following figures:

Note: Ensure that all connectors are correctly installed and properly seated.

Fig. 5—Display Reads BOOT ERROR 01, BOOT ERROR 02, BOOT ERROR 06, BOOT ERROR 08, BOOT ERROR 0B, BOOT ERROR 0F or BOOT ERROR 14

Fig. 6—Display Reads BOOT ERROR 10, BOOT ERROR 16 or BOOT ERROR 21

Fig. 7—Display Reads BOOT ERROR 13

Fig. 8—Display Reads BOOT ERROR 17, BOOT ERROR 18, BOOT ERROR 1E, BOOT ERROR 1F or BOOT ERROR 20

Fig. 9—Display Reads WU1 RAM ERROR or WU1 ROM ERROR

Fig. 10—Display Reads WU4 ACCESS DENIED

Fig. 11—Display Reads WU4 SHARE MEMORY ERROR

Fig. 12—Display Reads WU4 TAPE CONTROLLER ERROR

Fig. 13—Display Reads TRAP XXXX

Fig. 14—Display Reads SYSTEM TEST,...SYSTEM TEST

Port Problem

3.10 When a fault symptom has been isolated to a particular port on the NC, refer to the following flowcharts as an aid in correcting the problem:

Fig. 15—Control Channel Out (CCO) Port Problem

Fig. 16—Local Terminal (LT) Port Problem

Fig. 17—Printer (PTR) Port Problem

Fig. 18—Remote Terminal (RT) Port Problem

Fig. 19—Telephone Company (TELCO) Port Problem

Fig. 20—Network (NET) Port Problem

Fig. 21—One-Number Dialer (OND) Problem

4. REFERENCES

4.01 Additional information concerning the NC is contained in the following Bell System Practices:

SECTION	TITLE	SECTION	TITLE
		592-040-520	Private Line Data Sets 2024, 2048, and 2096—Test Procedures—Stand Alone-Multiple—DATAPHONE® II Service
501-165-101	Station Dial—43A	592-101-500	2100A Data Control Unit (Diagnostic Console)—Test Procedures—DATAPHONE® II Service
501-165-110	Station Dial—53A		
574-500-500	43 Basic KSR Teleprinter—Testing		
582-200-502	Teletypewriter Compatible DATASPEED® 40/2—Testing and Troubleshooting	592-102-100	2200A Data Control Unit (Network Controller)—Description and Operation—DATAPHONE® II Service
592-031-500	Data Set 202T Transmitter-Receiver—Test Procedures	592-102-200	2200A Data Control Unit—(Network Controller)—Installation and Connections—DATAPHONE® II Service
592-039-500	Data Set 212AR-L1A/2A—Test Procedures		
592-040-120	Private Line Data Sets 2024, 2048, and 2096—Description and Operation—Stand Alone-Multiple DATAPHONE® II Service		
592-040-220	Private Line Data Sets 2024, 2048, and 2096—Installation and Connections—Stand Alone-Multiple DATAPHONE® II Service		

TABLE A

NETWORK CONTROLLER'S DATA SET TEST AND COMMAND MENU

TEST/COMMAND NAME	SELECTION DISPLAY	DISRUPTIVE/ NONDISRUPTIVE
Display options	(dsop)	Nondisruptive
Display poll list	(dspl)	
EIA status	(eia)	
Identity	(id)	
Receive signal level	(rsl)	
Receive signal quality	(rsq)	
Report terminal power	(rtp)	
Signal profile	(sp)	
Abort test	(abt)	Disruptive
Automatic network test	(auto)	
2096 Change mux	(chmx)	
Change options	(chop)	
Change poll list	(chpl)	
Circuit loss - inbound	(cli)	
Circuit loss - outbound	(clo)	
Disable/enable	(dsab)	
Digital test	(dt)	
End-to-end block error test	(ee)	
Loopback	(lpbk)	
Make busy	(mb)	
Modem test	(mt)	
Standby facility	(sf)	
Service line	(sl)	
Send tone	(st)	

TABLE B

NETWORK CONTROLLER'S OPERATING COMMAND MENU

COMMAND NAME	SELECTION DISPLAY	DISRUPTIVE/ NONDISRUPTIVE
Directory modem profile	(drmp)	Nondisruptive
Display date and time	(dsdt)	
Display fault log	(dsfl)	
Display modem profile	(dsmp)	
Display NC identity	(dsncid)	
Display NC options	(dsncop)	
Display NC poll list	(dsncpl)	
Display network faults	(dsnf)	
Display network status	(dsns)	
Display queue	(dsq)	
NC remote DCD commands	(ncre)	
Restore display heading	(rdh)	
Auto trouble report control	(atr)	Disruptive
Auto trouble report file	(atrf)	
Backup modem profile	(bump)	
Change data and time	(chdt)	
Change modem profile	(chmp)	
Change NC identity	(chncid)	
Change NC options	(chncop)	
Change NC poll list	(chncpl)	
Clear network faults	(clnf)	
Delete delayed selection	(dlds)	
Fault reporting	(fr)	
NC operating mode	(ncom)	
Password commands	(pw)	

TABLE C
FUSE DESCRIPTION

Designation	Code	Rating	Protected Circuit
F1	WECO 24F	5 amp	-48 Vdc Output
F2	WECO 24C	2 amp	Input to +5 Vdc
F3	WECO 24E	0.5 amp	Input to +12 Vdc
F4	WECO 24E	0.5 amp	Input to -5 Vdc
F5	Bussman 3AG, 8A	8 amp	+5 Vdc Output
F6	WECO 24E	0.5 amp	Input to +9 Vdc
F7	WECO 24G	1.3 amp	+12 Vdc Output
F8	Bussman 3AG, 4A	4 amp	115 Vac Input

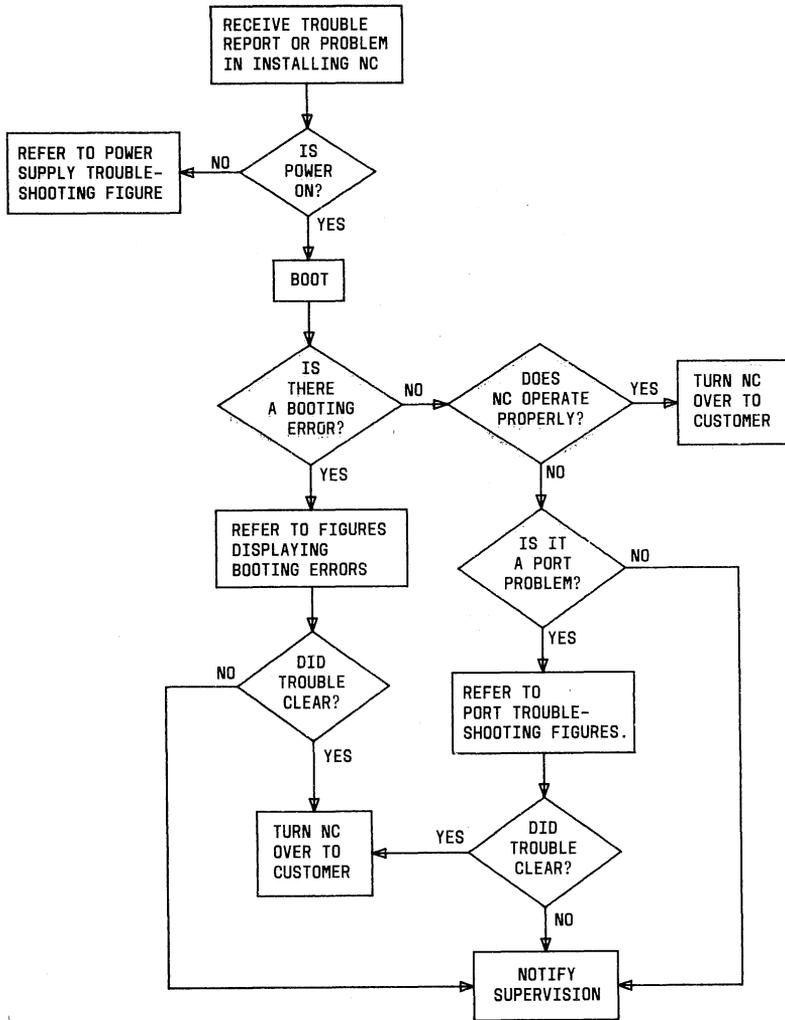


Fig. 1—Troubleshooting Guide

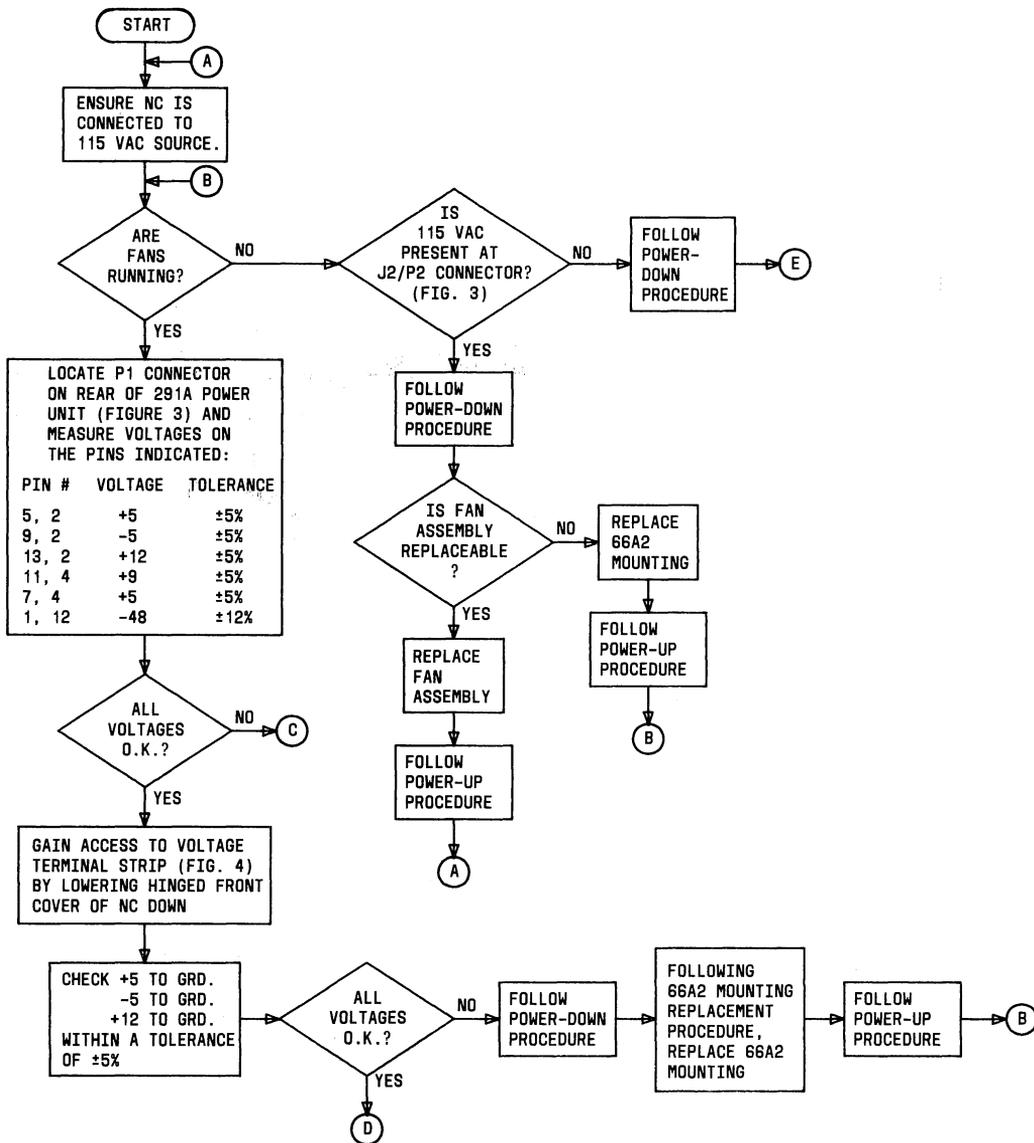


Fig. 2—Power Supply Troubleshooting (Sheet 1 of 2)

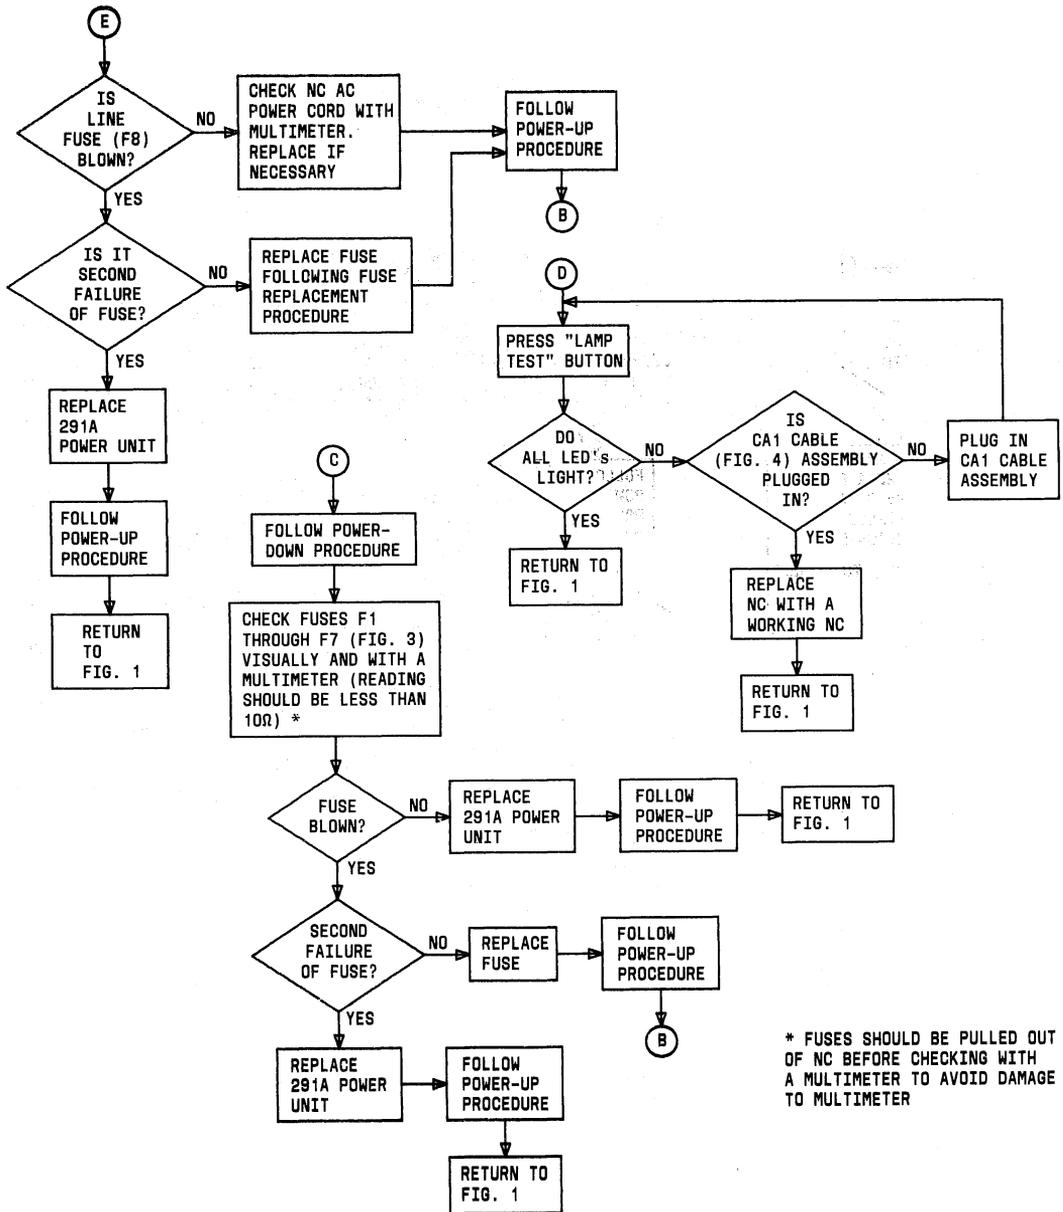


Fig. 2—Power Supply Troubleshooting (Sheet 2 of 2)

F1, F2, F3, F4, F6, F7
(LOCATED BEHIND CLEAR
LUCITE COVER ON
291A POWER UNIT)

FUSE LAYOUT	
	F4
	F1
	F2
F3	F6
	F7

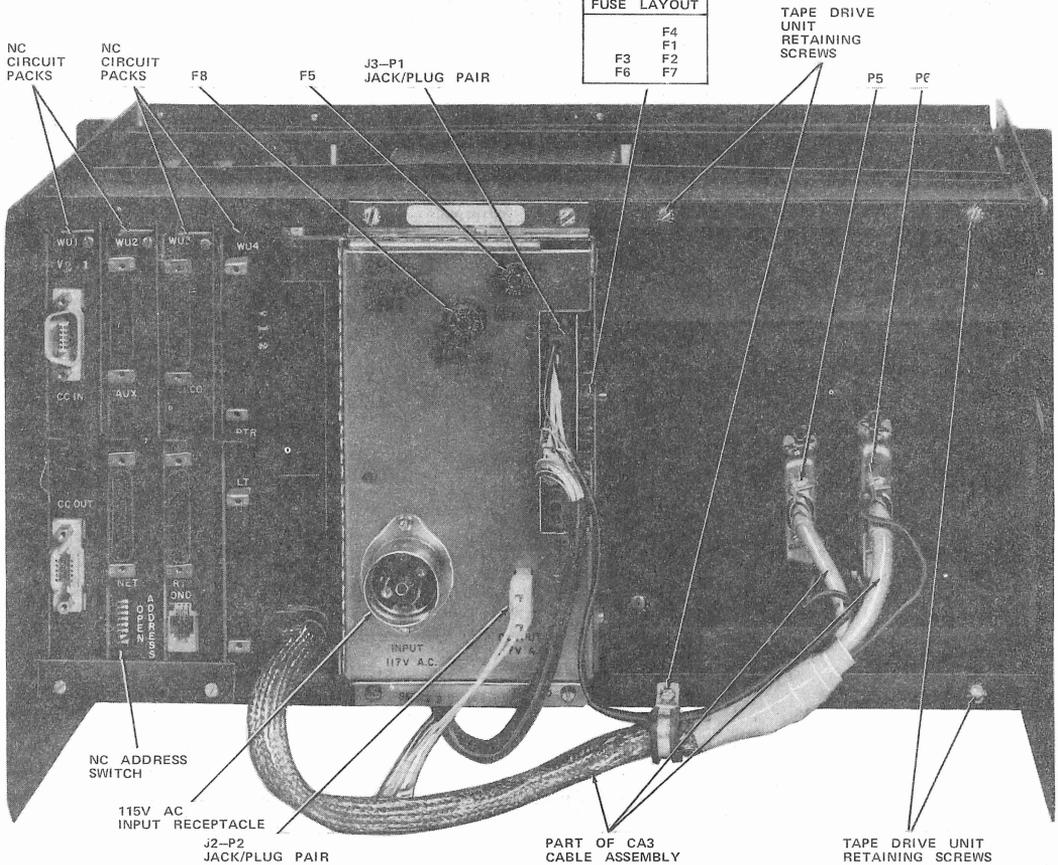


Fig. 3—NC Rear View Showing Fuses, Jack/Plugs, and NC Address Switch

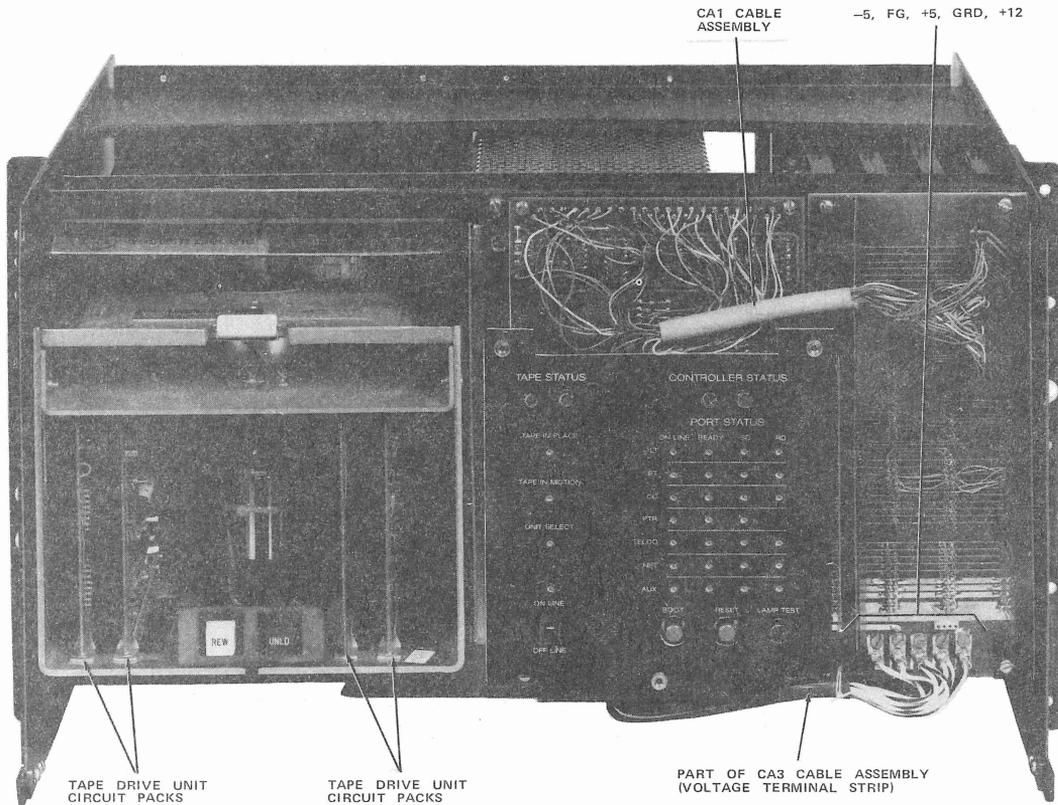


Fig. 4—NC Front View (Cover Partly Removed) Showing CA1 and CA3 (Voltage Terminal Strip) Cable Assembly

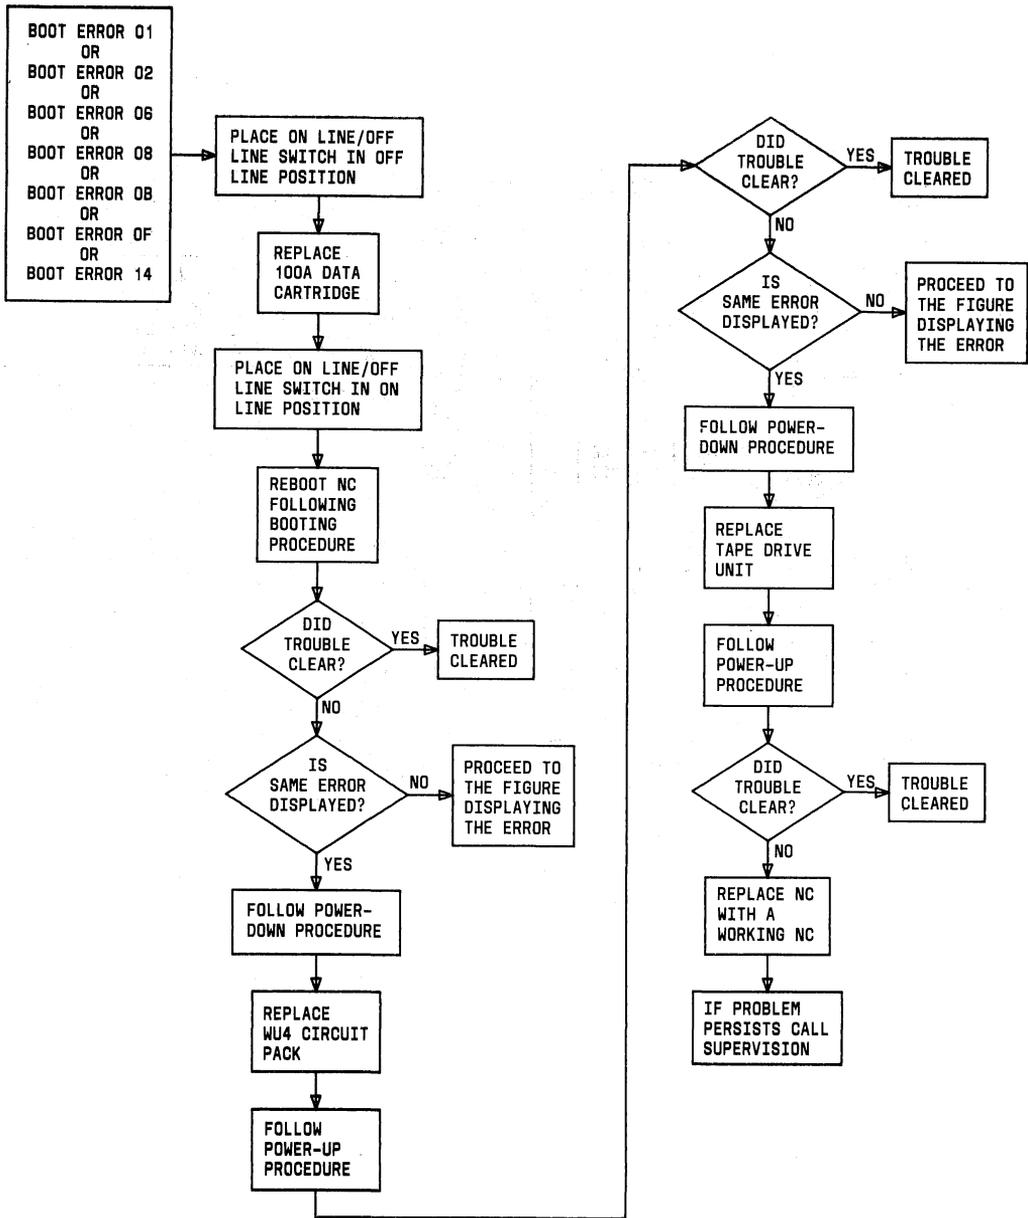


Fig. 5—Display Reads BOOT ERROR 01, BOOT ERROR 02, BOOT ERROR 06, BOOT ERROR 08, BOOT ERROR 0B, BOOT ERROR 0F, or BOOT ERROR 14

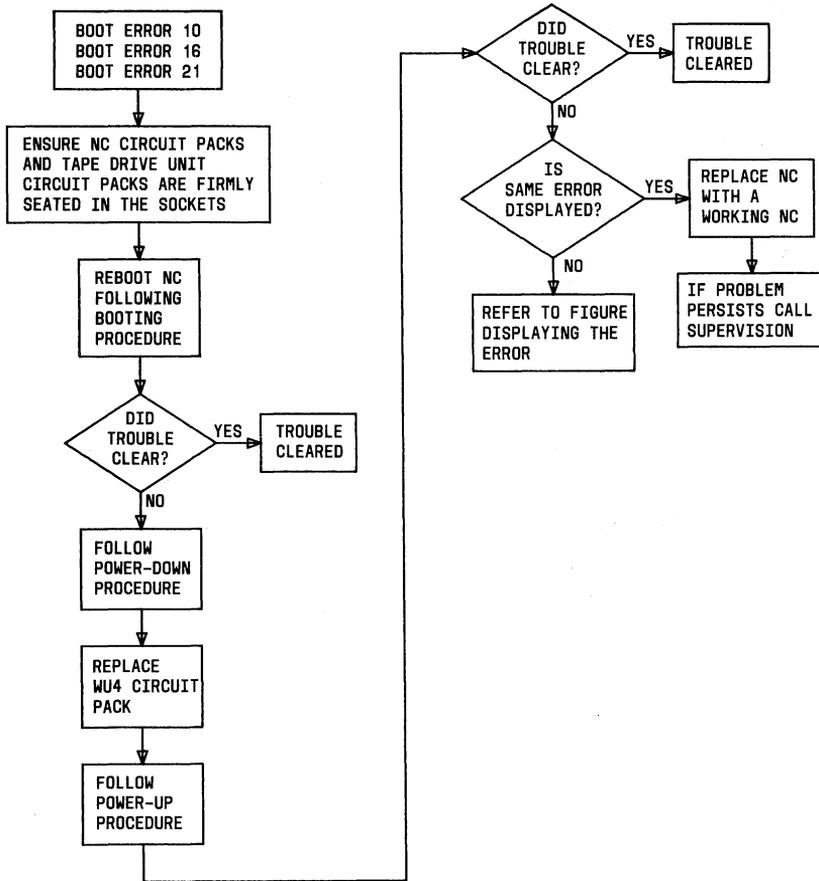


Fig. 6—Display Reads BOOT ERROR 10, BOOT ERROR 16, or BOOT ERROR 21

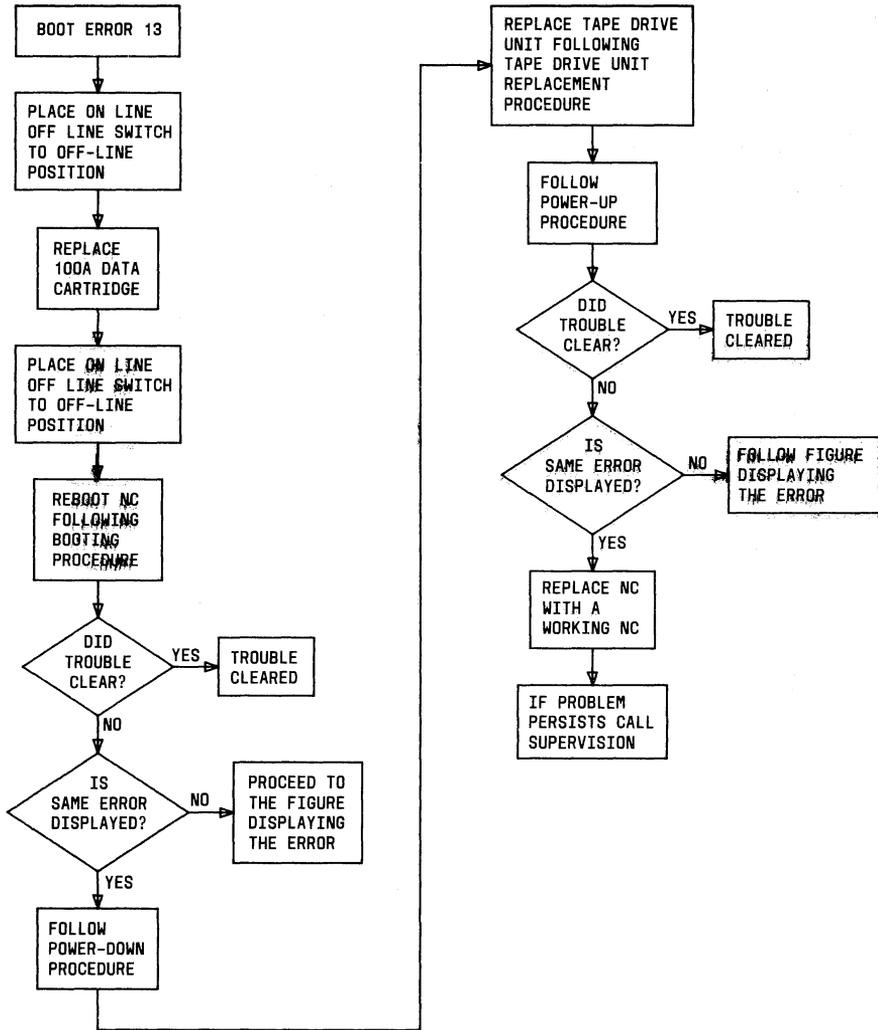


Fig. 7—Display Reads BOOT ERROR 13

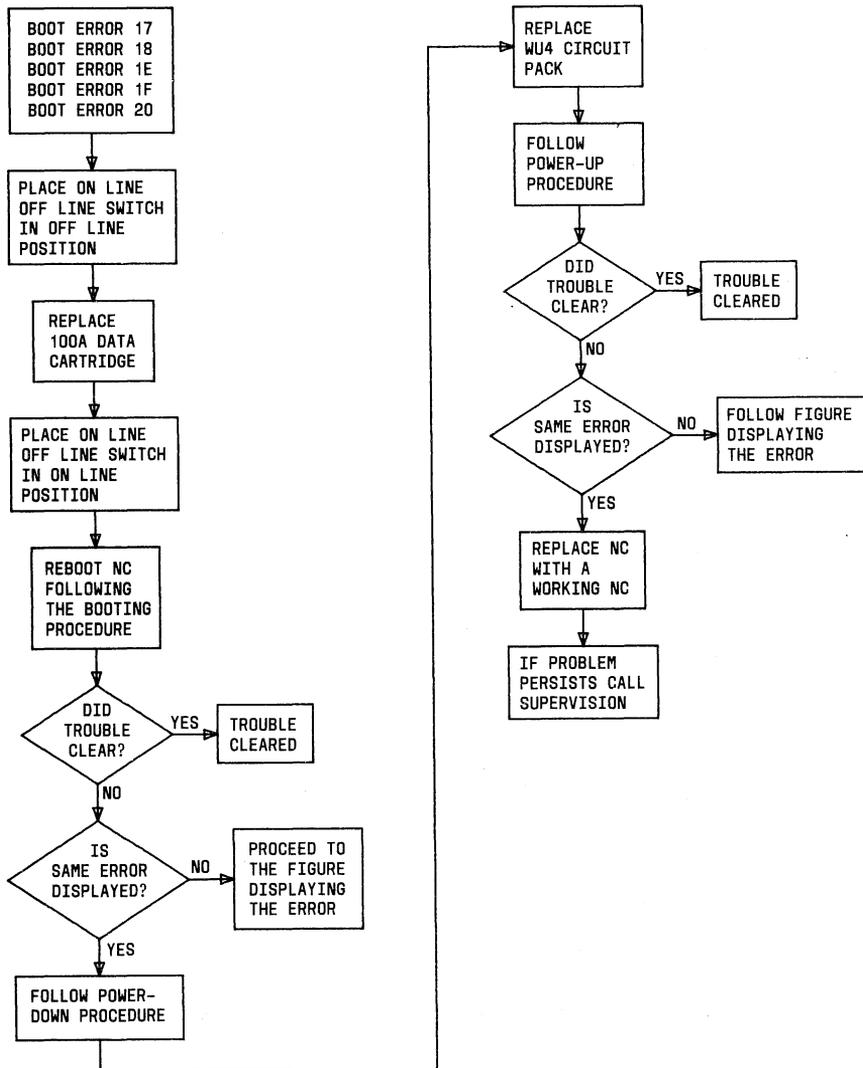


Fig. 8—Display Reads BOOT ERROR 17, BOOT ERROR 18, BOOT ERROR 1E, BOOT ERROR 1F, or BOOT ERROR 20

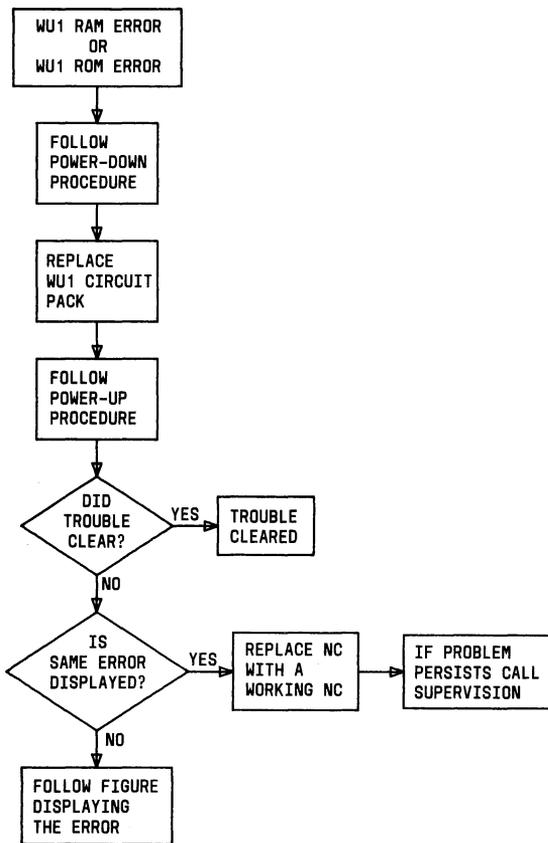


Fig. 9—Display Reads WU1 RAM ERROR or WU1 ROM ERROR

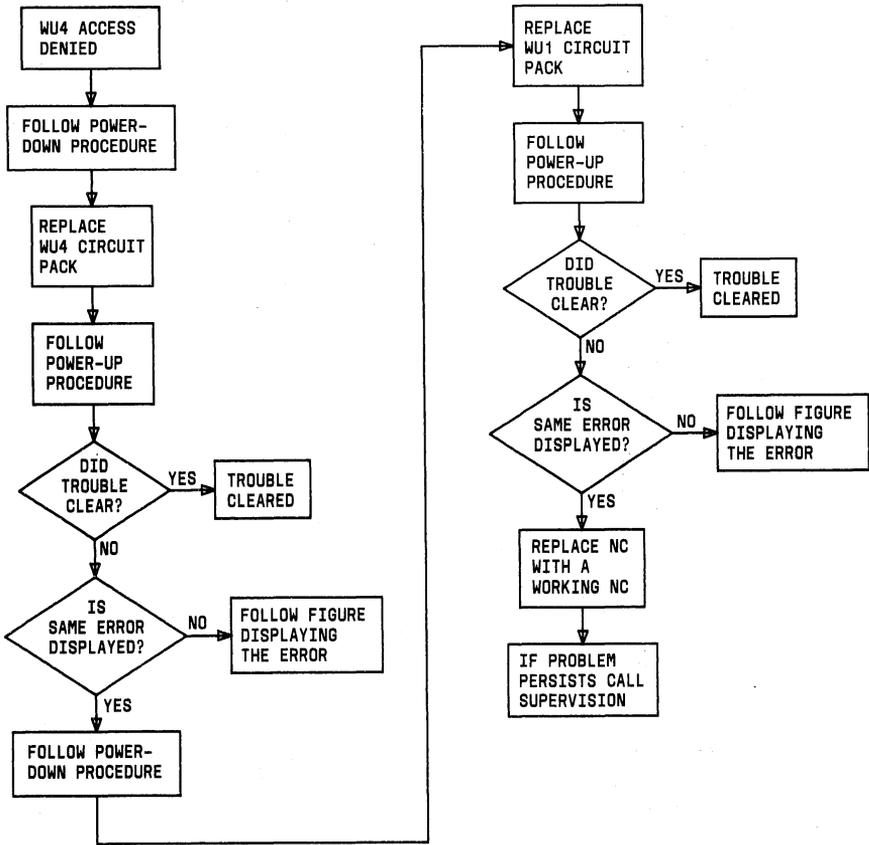


Fig. 10—Display Reads WU4 ACCESS DENIED

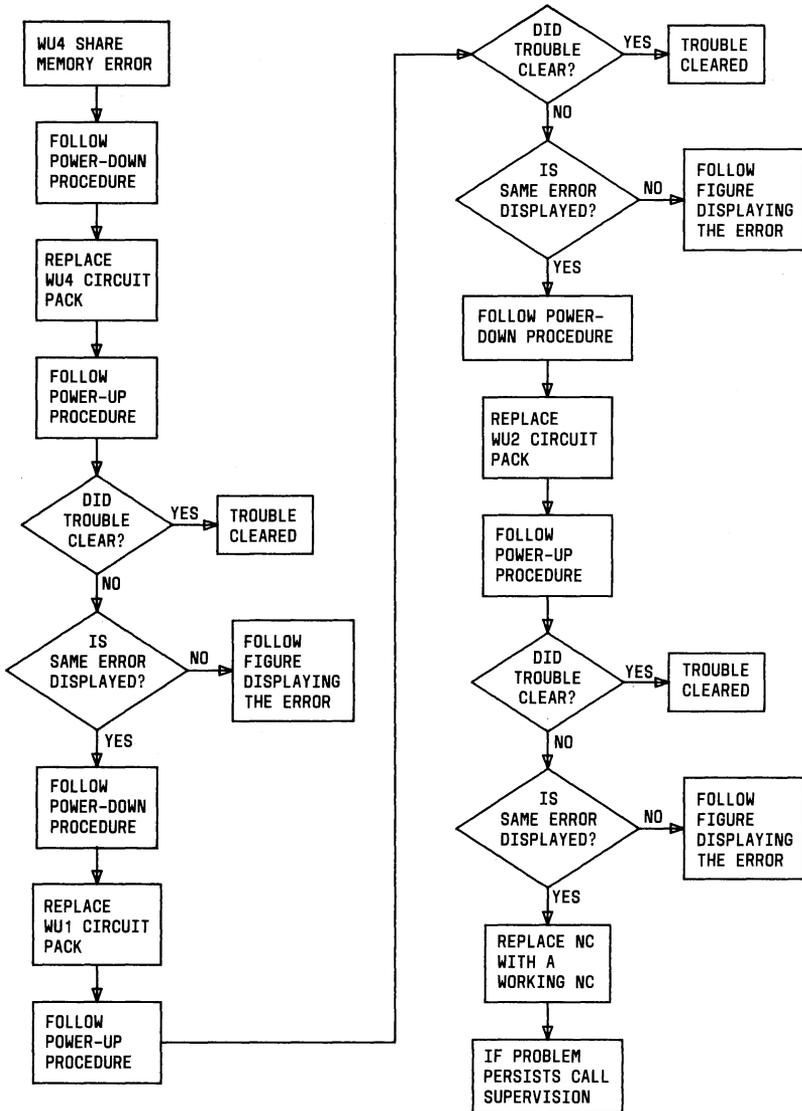


Fig. 11—Display Reads WU4 SHARE MEMORY ERROR


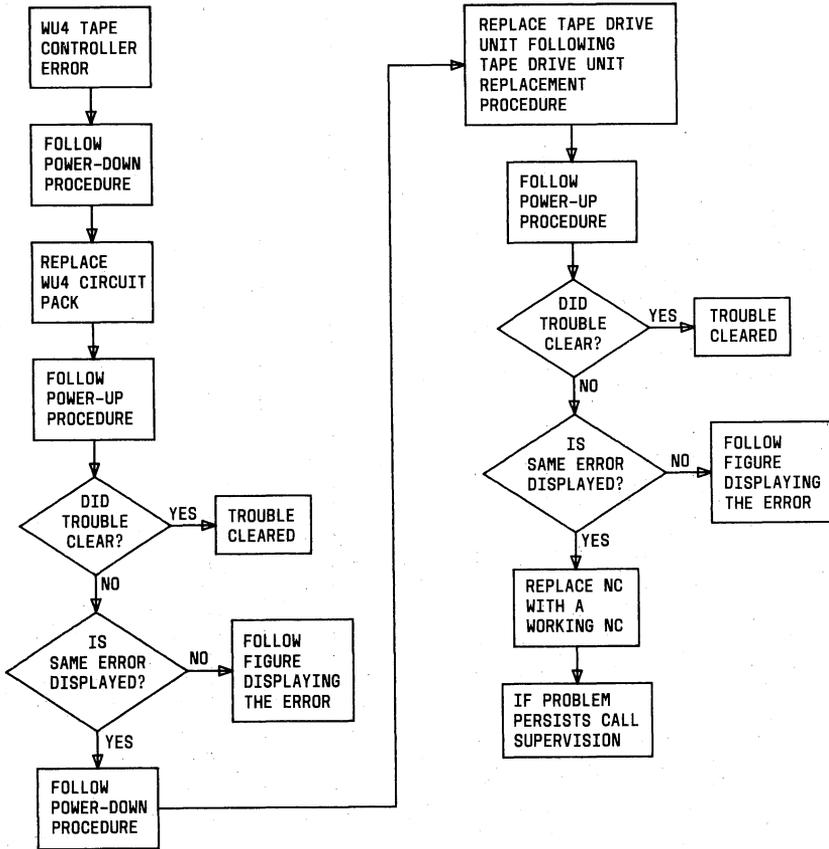


Fig. 12—Display Reads WU4 TAPE CONTROLLER ERROR

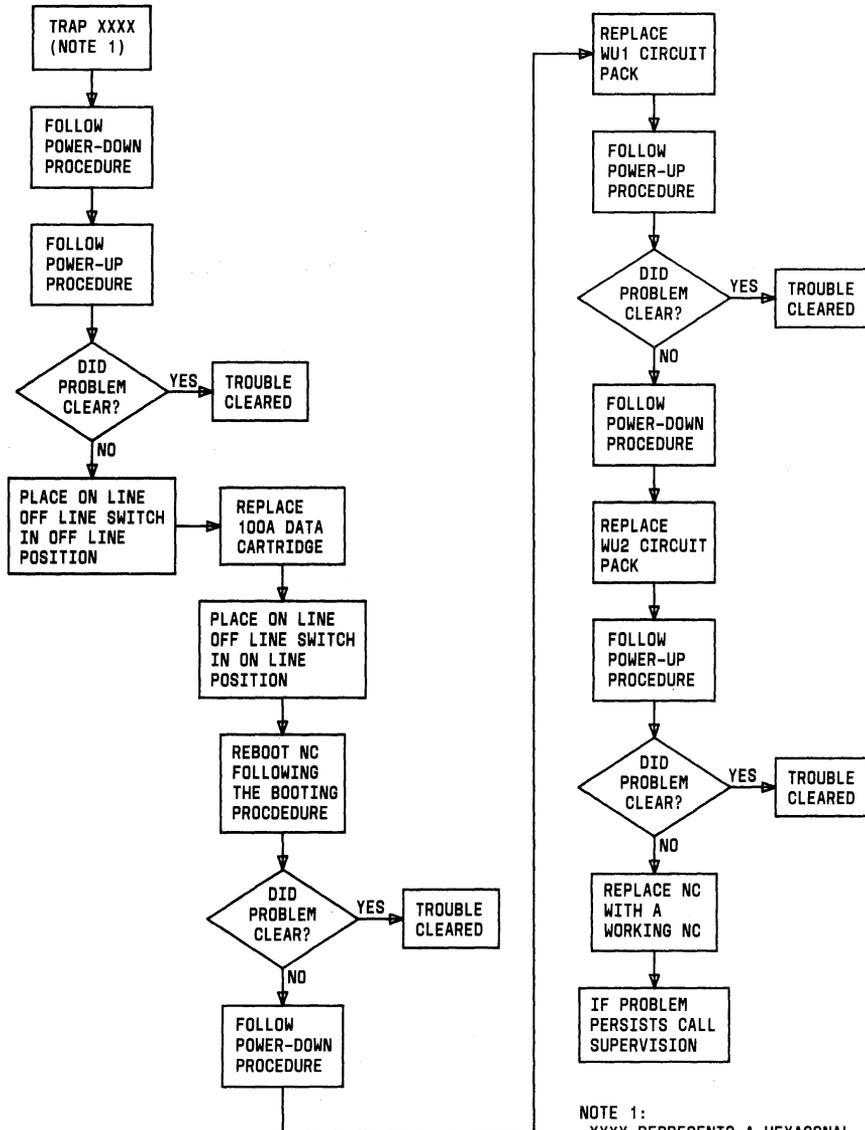

NOTE 1:
XXXX REPRESENTS A HEXAGONAL
ADDRESS NOT PERTINENT TO
THIS FLOWCHART

Fig. 13—Display Reads TRAP XXXX

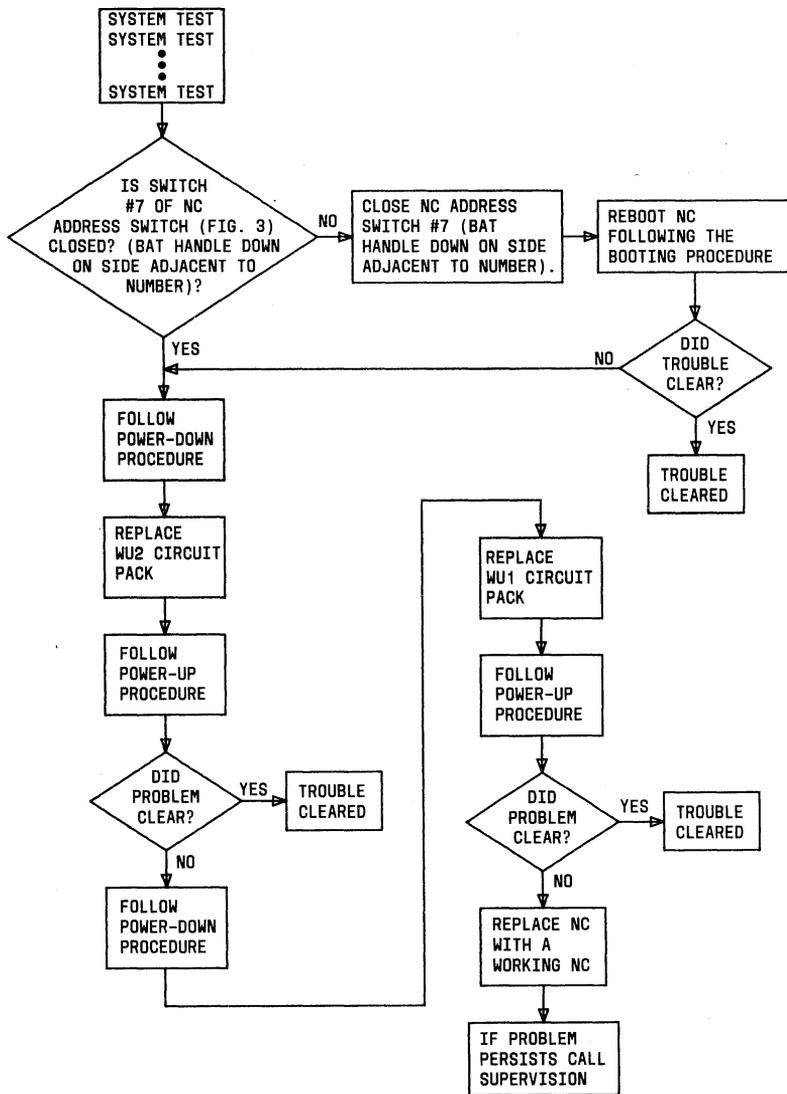


Fig. 14—Display Reads SYSTEMS TEST

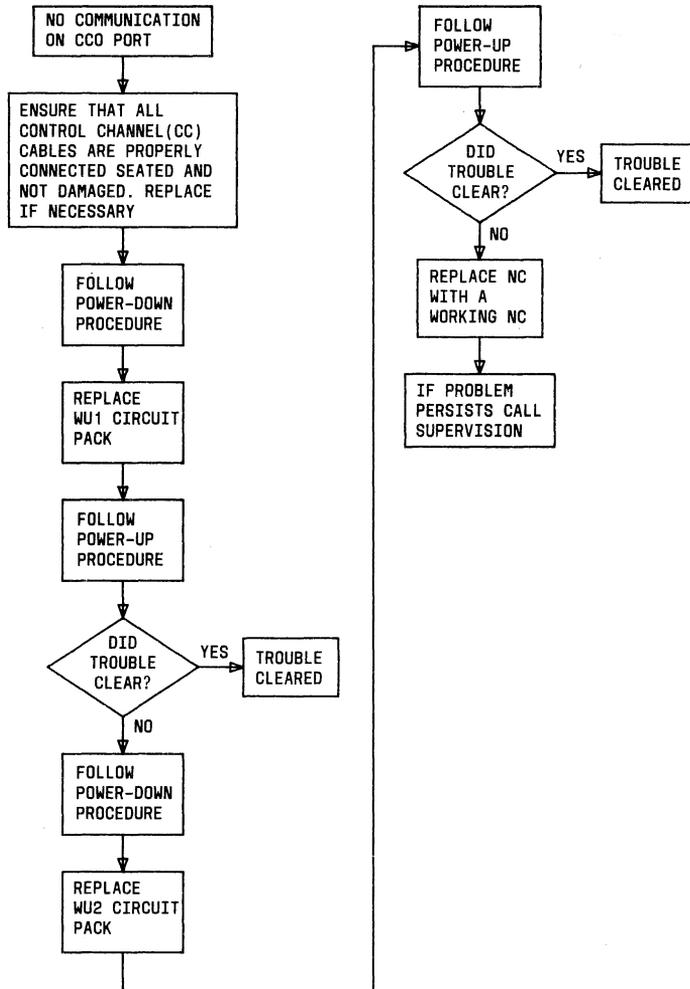


Fig. 15—Control Channel Out (CCO) Port Problem

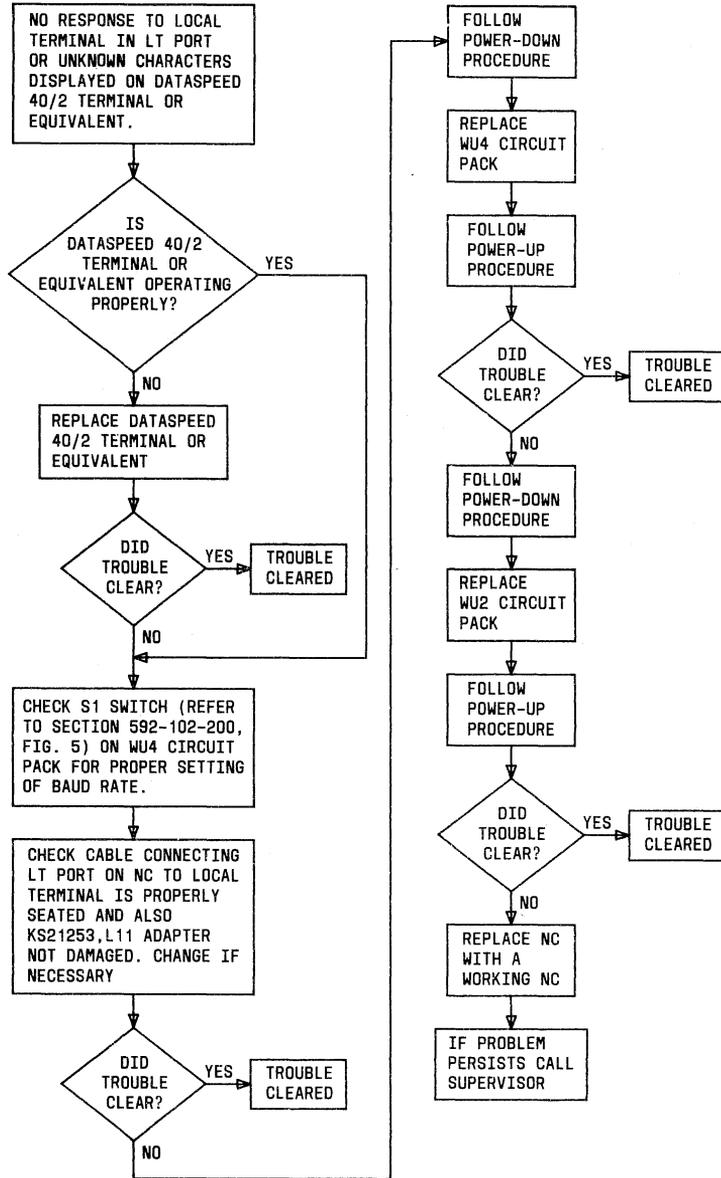


Fig. 16—Local Terminal (LT) Port Problem

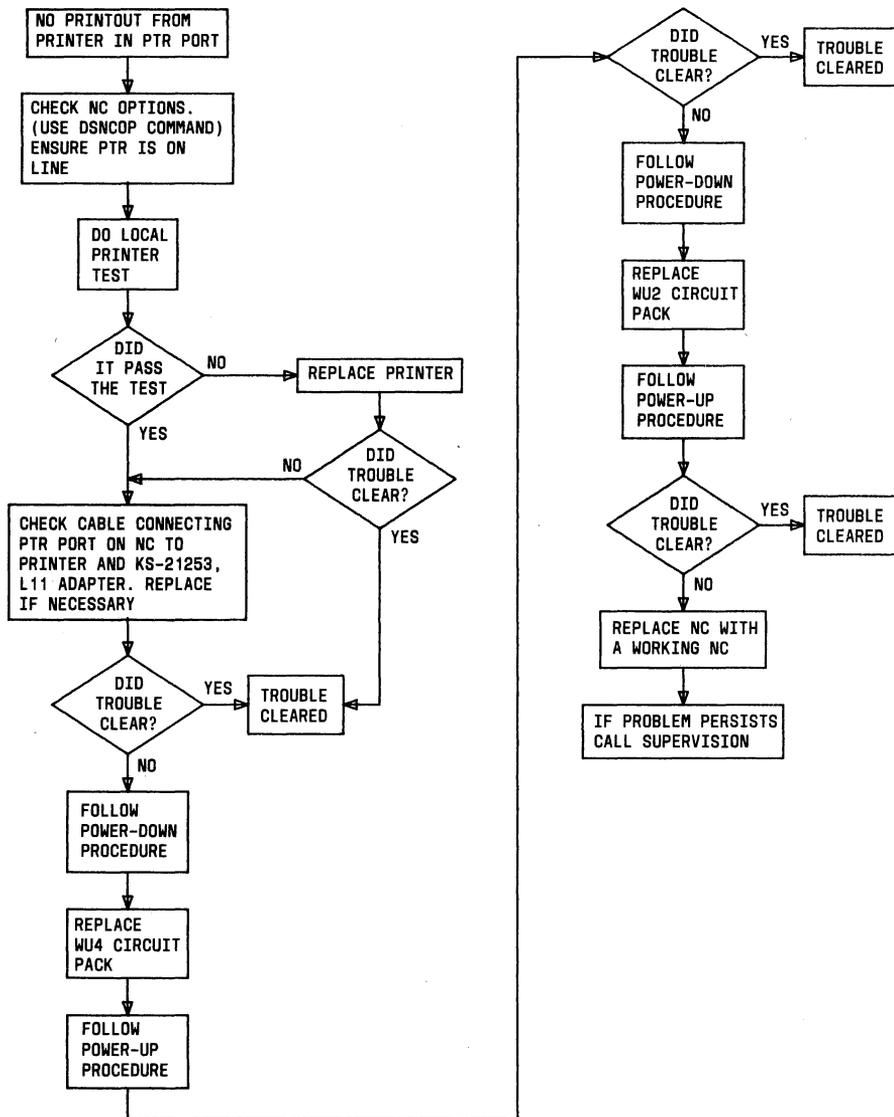


Fig. 17—Printer (PTR) Port Problem

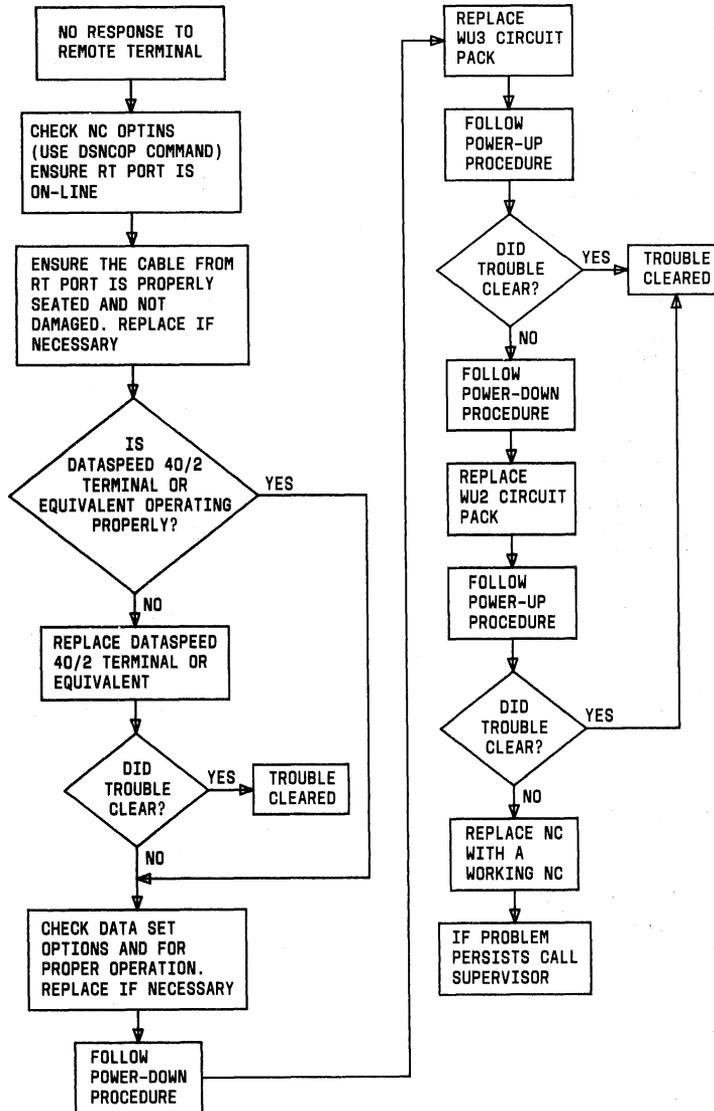


Fig. 18—Remote Terminal (RT) Port Problem

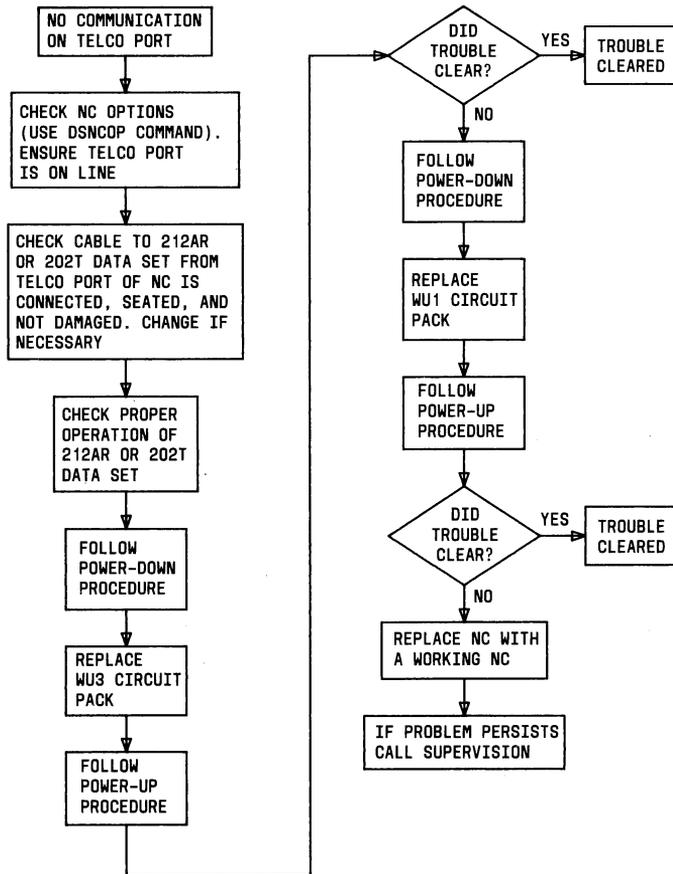


Fig. 19—Telephone Company (TELCO) Port Problem

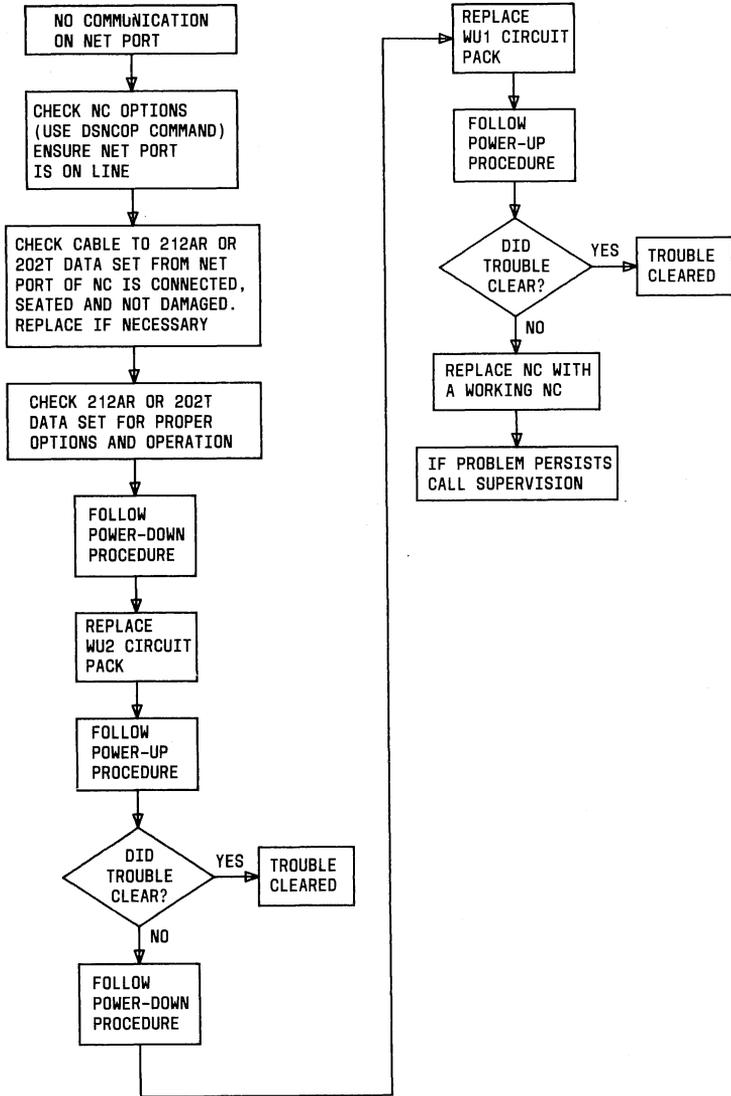


Fig. 20—Network (NET) Port Problem

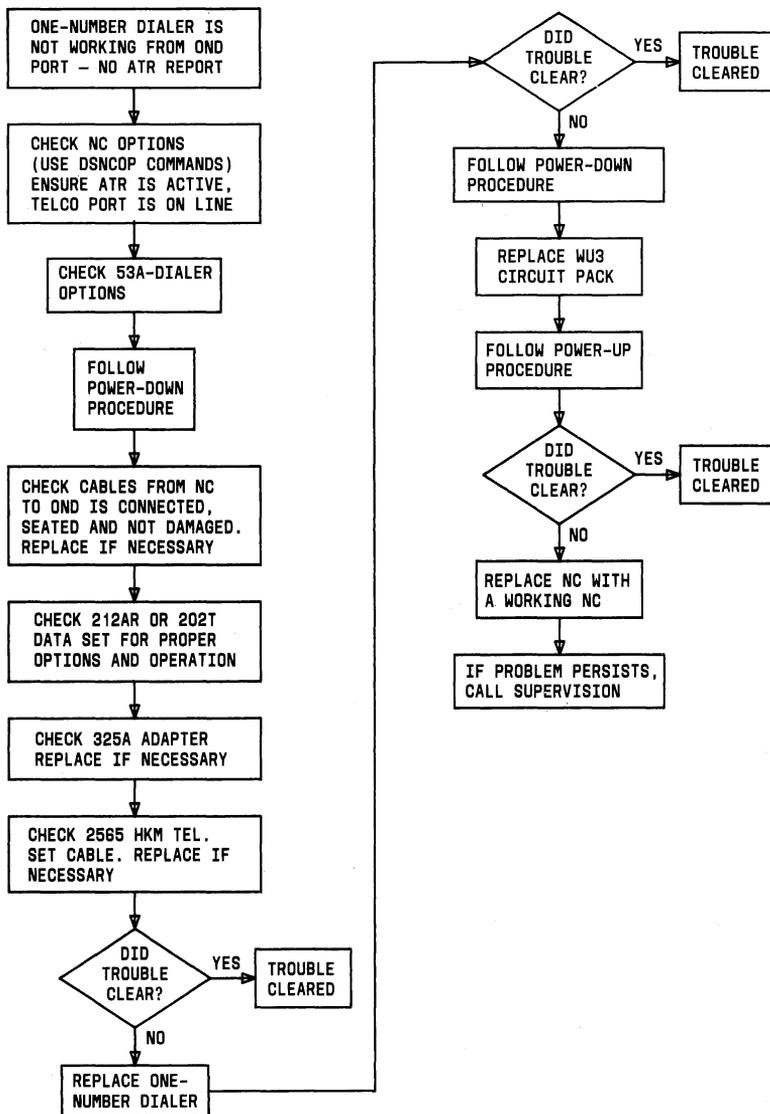


Fig. 21—One-Number Dialer (OND) Problem