

>THIS IS **THE WAY**

>THIS IS **NORTEL**

Nortel Multiservice Switch 7400/15000/20000

Common Configuration Procedures

NN10600-550

Document status: Standard
Document issue: 7.2S2
Document date: April 2006
Product release: PCR7.2 and up
Job function: Installation and Commissioning
Type: NTP
Language type: U.S. English

Copyright © 2006 Nortel.
All Rights Reserved.

NORTEL, the globemark design, and the NORTEL corporate logo are trademarks of Nortel.



Contents

What's new	10
Secure shell (ssh) on Nortel Multiservice Switch 15000 and 20000	10
Basic node setup	11
Setting up node security	13
Configuring node identification	14
Configuring general service parameters	17
Configuring node basics	18
Performing node maintenance	19
Network and node time configuration	21
Configuring a network time server	23
Synchronizing automatically with a network time server	24
Synchronizing manually with a network time server	26
Configuring the time zone offset	28
Verifying the time configuration on the node	30
Network clock synchronization configuration	31
Configuring an external timing source	35
Configuring NS	37
Configuring the clocking source for the ports	39
Configuring SSM NCS	40
Removing a NCS reference or setting a node to free-run	42
Removing SSM NCS	43
Configuring SETS ports	44
Configuring NS for SETS	45
Configuring NS SSM for SETS	47
Software, applications, and features additions and updates	48
Adding and configuring applications	49
Removing and replacing specific applications and patches	50
Removing and replacing all applications and patches	52
Activating the AVL configuration changes	54
Changing the patch list	56



Common processor card procedures **57**

- Comparing the card type of a mounted card and its configured slot 59
- Configuring a new processor card 60
- Configuring a port to use an SFP optical module 62
- Configuring the fan alarm to recur 65
- Decommissioning an FP 66
- Displaying information about daughter cards on a Multiservice Switch 7400 processor card 67
- Displaying the memory capacity of a processor card 68
- Displaying the status of an installed SFP optical module 69
- Locking a function processor 72
- Locking a port 74
- Preparing an active FP for being replaced 76
- Displaying the status of a processor card 78
- Re-enabling an LP 79
- Reinitializing a processor card 80
- Removing from service a failed FP 82
- Removing from service a standby electrical FP 84
- Removing from service an optical FP configured with LAPS 86
- Removing from service an unspared FP 90
- Returning an FP to service 92
- Switching between active and standby processor cards 95
- Switching SONET line protection to the mate FP 96
- Temporarily disabling an LP 98
- Unlocking a function processor 99
- Unlocking a port 100

Control processor procedures **102**

- Disabling and enabling hot standby for CP switchover 104
- Locking external timing ports 105
- Unlocking external timing ports 106
- Configuring CP equipment sparing 107
- Changing the CP equipment protection mode 109
- Adding a spare CP to a single-CP node 111
- Removing a spare CP 113
- Replacing a CP in a single-CP node 115
- Replacing a CP using a donor node and backup 117
- Reconfiguring a donor CP 119
- Replacing a CP using a donor node only 121
- Replacing a CP using a backup only 123
- Replacing a CP without a donor node or backup 125
- Replacing a CP in a two-CP node 126
- Upgrading a CP2 to a CP3 in a single-CP node 128
- Upgrading a CP2 to a CP3 in a two-CP node 129



Downgrading a CP3 to a CP2	132
Upgrading from CP (NTNQ01AA) to CP with BITS and SETS (NTNQ03BA)	133
Upgrading from CP with BITS (NTNQ03AA) to CP with BITS and SETS (NTNQ03BA)	134
Control processor OAM Ethernet port configuration	135
Configuring the CP OAM Ethernet port	136
Enabling CP switchover for a CP OAM Ethernet port failure	141
Disabling CP switchover for a CP OAM Ethernet port failure	142
Changing the statistics gathered from the CP OAM Ethernet port	143
Configuring the line speed of the OAM Ethernet port on a CP3 control processor	144
Changing the mode of the OAM Ethernet port on a CP3 control processor	145
Logical processor, port, and channel configuration	146
Adding a channel to a port	148
Adding an LP and linking it to an LPT	150
Adding an LPT	153
Adding an Sts component to a port with the FP is operating with a single path	155
Adding an Sts component to a port when the FP is operating with multiple paths	156
Canceling a scheduled change between active and standby function processors	158
Changing the LPT used by an LP	159
Configuring ports on an LP	160
Adding the NPU service bundle	162
Configuring the software features of an LPT	164
Customizing port attributes	166
Deleting an LP	167
Deleting BITS ports on Multiservice Switch 7400	168
Deleting SETS ports on Multiservice Switch 7400	169
Scheduling a change between active and standby function processors	170
Multiservice Switch 7400 bus maintenance	171
Locking and unlocking a bus	172
Enabling and disabling automatic bus clock testing	173
Interpreting the bus clock source status	174
Verifying which buses are in service	176
Multiservice Switch 15000 or Multiservice Switch 20000 fabric card configuration	177
Locking a fabric card	178
Unlocking a fabric card	179
Displaying the operating mode of fabrics	180
Displaying the status of a fabric card	181
Displaying the configuration or capacity of a fabric card	182
Multiservice Switch file system maintenance	183
Synchronizing disks	184
Displaying information about the file system	185



Determining file system capacity	186
Changing the volume name of a disk	187
Formatting a disk	189

Multiservice Switch electrical interface equipment protection configuration 191

Configuring one-for-n equipment protection for electrical interfaces	192
--	-----

Multiservice Switch 7400 optical interface line and equipment protection configuration 195

Configuring line protection for Multiservice Switch 7400 optical interfaces	197
Configuring line and equipment protection for Multiservice Switch 7400 optical interfaces	199
Locking the protection line on Multiservice Switch 7400 nodes	201
Switching between the working and protection lines on Multiservice Switch 7400 nodes	202
Clearing a switch request on Multiservice Switch 7400 nodes	203

Multiservice Switch 15000 and 20000 optical interface line and equipment protection configuration 204

Configuring line and equipment protection for Multiservice Switch 15000 and Multiservice Switch 20000 optical interfaces	206
Configuring line protection for optical interfaces on Multiservice Switch 15000 and Multiservice Switch 20000 nodes	210
Converting from a non-protected FP to a protected FP with LAPS on Multiservice Switch 15000 and Multiservice Switch 20000 nodes	212
Converting from single-FP to dual-FP protection	214
Configuring Y-protection for dual FPs in a Multiservice Switch 15000 and Multiservice Switch 20000 nodes	216
Locking the protection line on Multiservice Switch 15000 and Multiservice Switch 20000 nodes	220
Switching between the working and protection line on Multiservice Switch 15000 and Multiservice Switch 20000 nodes	221
Clearing switch requests on Multiservice Switch 15000 and Multiservice Switch 20000 nodes	222

Hitless activation of critical attributes configuration 223

Enabling the hitless activation mode	226
Invoking a hitless critical attribute activation	227
Invoking a non-disruptive activation	230
Verifying the provisioned card status	231
Verifying the logical processor status	232
Verifying the electrical functional processor status in a 1:1 sparing configuration	234
Verifying the logical processor status in a 1+1 FP sparing configuration	235
Monitoring a hitless critical attribute activation	236
Disabling the hitless activation mode	237



Maintenance monitor configuration	238
Loading maintenance monitor software	240
Configuring maintenance monitor	241
Starting maintenance monitor	243
Stopping maintenance monitor	244
Maintenance monitor configuration supporting information	245
Multiservice Switch configuration concepts	246
Multiservice Switch system overview	247
Understanding CP equipment sparing	247
CP standby states	249
Considerations for adding a spare CP to a single-CP node	251
Automatic CP switchover in cold standby mode	252
Requirements for a CP switchover in cold standby mode	252
Automatic CP switchover in hot standby mode	252
Timeout for a subsequent CP switchover	254
Requirements for a CP switchover in hot standby mode	254
Effects of a CP switchover	255
CP switchover operator commands	257
Understanding equipment protection for Multiservice Switch electrical interfaces	257
One-for-one equipment sparing	258
One-for-n equipment sparing	259
Immediate switchover to spare for one-for-n sparing	260
Switching from the spare FP back to the main FP	260
Manual FP switchover	260
Understanding line and equipment protection for Multiservice Switch 15000 and Multiservice Switch 20000 optical interfaces	261
Requirements for configuring line and equipment protection for Multiservice Switch 15000 and Multiservice Switch 20000 optical interfaces	263
Nodal requirements for converting line and equipment protection	264
Working line on Multiservice Switch 15000 and Multiservice Switch 20000 optical interfaces	265
Protection line on Multiservice Switch 15000 and Multiservice Switch 20000 optical interfaces	265
Revertive and non-revertive switching on Multiservice Switch 15000 and Multiservice Switch 20000 optical interfaces	265
Unidirectional and bidirectional mode on Multiservice Switch 15000 and Multiservice Switch 20000 optical interfaces	265
Understanding line protection for Multiservice Switch 7400 optical interfaces	266
Working line on Multiservice Switch 7400 optical interfaces	267
Protection line on Multiservice Switch 7400 optical interfaces	267
Revertive and non-revertive switching on Multiservice Switch 7400 optical interfaces	268
Unidirectional and bidirectional mode on Multiservice Switch 7400 optical interfaces	268



- Understanding Multiservice Switch 15000 and Multiservice Switch 20000 support of G.841 Annex B 268
- Understanding logical processors, ports, and channels 269
 - Ports and channels 271
 - Applications and features on LPs 271
 - Mixing spared and unspared applications and features on Multiservice Switch 15000 and Multiservice Switch 20000 LPs 272
 - Logical processor types 272
 - Logical processor configuration 274
 - Locking and disabling LPs 275
- Understanding NCS 276
 - Understanding basic clocking 277
 - Understanding synchronization 278
 - Understanding NCS for Multiservice Switch 280
 - Example of external clock source configuration 292
- Understanding NCS for SETS 295
- Understanding network time and date configuration 296
 - Operating the whole network using reference time 297
 - Operating the whole network in a single time zone 297
 - Operating each node in its own time zone 297
- Understanding Multiservice Switch control processors and function processors 298
 - Multiservice Switch processor overview 298
 - Processor card instances 300
 - Understanding processor card configuration 300
 - Considerations for locking processor cards 301
 - Considerations for reinitializing a processor card 303
 - Considerations for replacing function processors 303
 - Daughter cards on Multiservice Switch 7400 processor cards 307
 - Processor card sparing 307
 - Hot standby for CP switchover 308
- Understanding Multiservice Switch software 308
 - Software structure 310
 - Components 311
 - Application versions 312
 - Patches 312
- Understanding the control processor OAM Ethernet port 313
 - OAM Ethernet port sparing 314
 - OAM Ethernet port tests 315
 - OAM Ethernet port statistics 315
- Understanding the fabric card 316
 - Single- and dual-fabric mode 317
 - Fabric ports 318
 - Fabric card firmware 318
 - Fabric card operation on Multiservice Switch 15000 and Multiservice Switch 20000



- nodes 319
 - Fabric card configuration 319
 - Configuring the fabric card component 320
- Understanding the Multiservice Switch 7400 bus 320
 - Single- and dual-bus mode 321
 - Bus taps 321
 - Clock source 322
- Understanding the Multiservice Switch file system 322
 - File system information 323
 - Disk synchronization 323
 - Different-sized disks 324
 - File system restrictions 324
 - Disk full conditions 325
- Understanding Y-protection for dual FPs 326
 - The operation of Y-protection 326
 - Equipment protection for dual FPs with Y-protection 327
 - Software migration between dual FPs with Y-protection 328
 - Card configuration for Y-protection 328
 - Hardware specifications of the Y-splitter cables 328
- Understanding hitless services 328
 - Types of services 328
 - Critical components and attributes 333
 - Hitless activation of critical attributes 337
 - Failure modes for hitless activation of critical attributes 338
 - Supported critical attributes for hitless activation 338

Procedure conventions

341

- Operational mode 341
- Provisioning mode 342
- Activating configuration changes 342



What's new

The following feature was added to this document:

- [Secure shell \(ssh\) on Nortel Multiservice Switch 15000 and 20000 \(page 10\)](#)

Other changes made to this document include the following:

- Updated the sections [Control processor OAM Ethernet port configuration \(page 135\)](#) and [Understanding the control processor OAM Ethernet port \(page 313\)](#) to include a reference to NN10600-601 *Nortel Multiservice Switch 7400/15000/20000 Security Management*.
- Updated [Locking a function processor \(page 72\)](#) with changes to the procedure for locking an FP.
- Updated [Replacing a CP in a two-CP node \(page 126\)](#) with information about the standby card.
- Updated [Configuring the CP OAM Ethernet port \(page 136\)](#) with additional support information.

Attention: To ensure that you are using the most current version of an NTP, check the current NTP list in NN10600-000 *Nortel Multiservice Switch 7400/15000/20000 What's New*.

Secure shell (ssh) on Nortel Multiservice Switch 15000 and 20000

The following section was updated for this feature:

- [Effects of a CP switchover \(page 255\)](#)



Basic node setup

After the StartUp utility has been run, set up the Nortel Multiservice Switch node so that it can support the specific services and features of your network.

- [Prerequisites to basic node setup \(page 11\)](#)
- [Basic node setup flow \(page 11\)](#)
- [Task navigation \(page 12\)](#)

Prerequisites to basic node setup


- The node is operational and able to connect to the network as described in NN10600-271 *Nortel Multiservice Switch 7400/15000/20000 Network Management Connectivity*.
- If you are unfamiliar with the basic components of the node, see [Multiservice Switch system overview \(page 247\)](#).

Basic node setup flow

This task flow shows you the sequence of procedures you perform to set up your node. To link to any procedure, go to [Task navigation \(page 12\)](#).



Basic node setup task flow

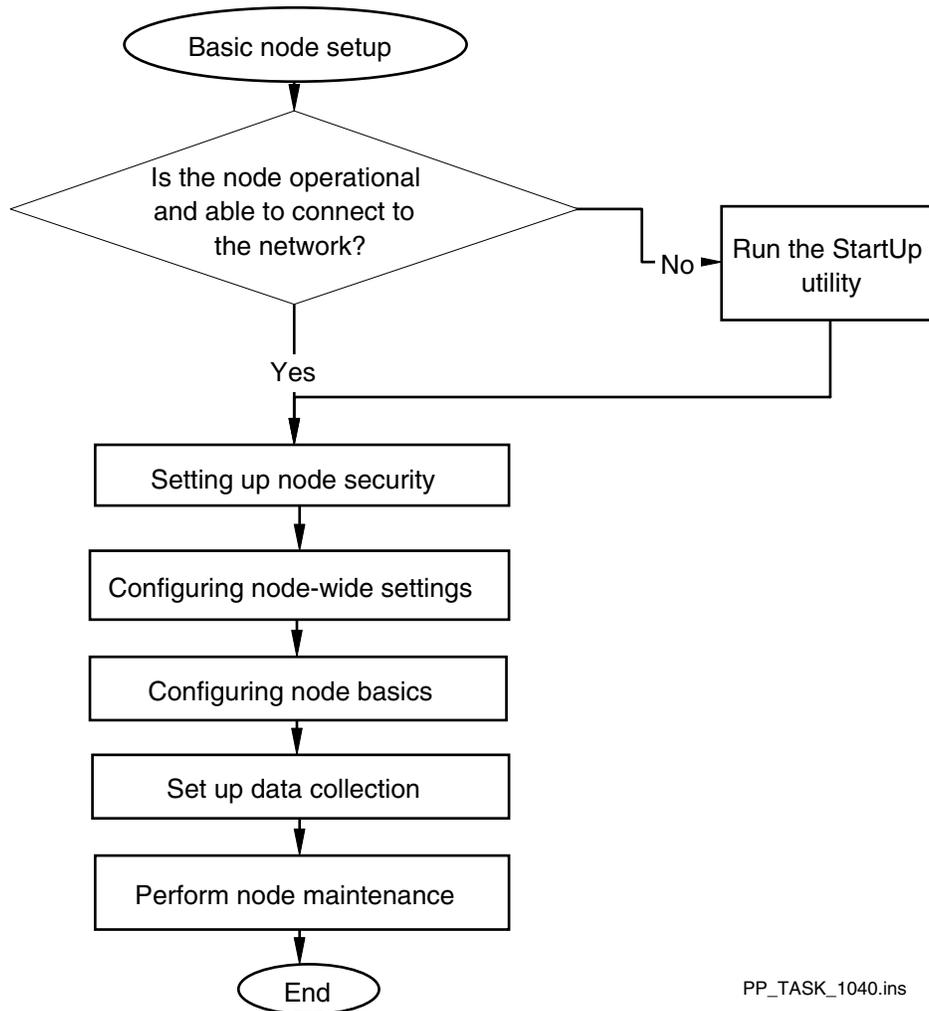

PP_TASK_1040.ins

Task navigation

- Run the StartUp utility. See NN10600-271 *Nortel Multiservice Switch 7400/15000/20000 Network Management Connectivity*.
- [Setting up node security \(page 13\)](#)
- [Configuring node identification \(page 14\)](#)
- [Configuring general service parameters \(page 17\)](#)
- [Configuring node basics \(page 18\)](#)
- Set up data collection. See NN10600-561 *Nortel Multiservice Switch 7400/15000/20000 Data Management*.
- [Performing node maintenance \(page 19\)](#)



Setting up node security

Configure the node security to ensure that all users have the necessary access privileges, and to prevent unauthorized control of the node.

For more information on Nortel Multiservice Switch security, see NN10400-605 *Nortel Multiservice Data Manager Network Security Fundamentals*.



CAUTION

Configure user IDs immediately

The first configuring task must be to configure at least one user ID with system administration impact. If you do not configure a user ID, your node has no security. Anyone can access the node without a user ID and password.



Configuring node identification

Configure node identification using the *nodeName*, *nodeId*, and *regionId* attributes of the *ModuleData* component. Every Nortel Multiservice Switch node must be identified on the network.

Prerequisites

- Do the following procedure in provisioning mode. For more information, see [Procedure conventions \(page 341\)](#).
- The *nodeId*, *nodeName*, and *nameId* can be set using the Multiservice Switch StartUp software. Before performing this procedure, verify that the node has not already been identified. For more information, see NN10600-271 *Nortel Multiservice Switch 7400/15000/20000 Network Management Connectivity*.

Procedure steps

Step	Action
1	Set the node identifier: <code>set Mod nodeId <nodeid></code>
2	Set the node name: <code>set Mod nodeName <name></code>
3	Set the region identifier: <code>set Mod regionId <regionId></code>
4	Set the network administration (nams) identifier: <code>set Mod namsId <namsId></code>

--End--




Variable definitions

Variable	Value
<name>	<p>A 12-character ASCII string that is unique to every Multiservice Switch node in a network. The default is <i>noname</i>.</p> <p>Only the following set of characters is permitted in the node name:</p> <ul style="list-style-type: none">• uppercase and lowercase alphanumeric characters• period (.)• underscore (_) <p>For example, LA_12 is valid and LA\$%12 is invalid.</p> <p>The <i>nodeName</i> attribute is a unique name given to each node in order to distinguish it from other nodes in the network. The <i>nodeName</i> attribute is used by the Nortel Multiservice Data Manager.</p>
<nodeid>	<p>Any number between 1 and 4095. The node identifier must be unique for each Multiservice Switch node.</p> <p>The <i>nodeId</i> attribute is a number that uniquely identifies the node component instance in the Multiservice Switch network. The system uses the node identifier for routing control and in some data packets sent to other nodes in the network. Routing protocol packets indicate the node identifiers for all other nodes in the network.</p>
<regionId>	<p>Any number between 0 and 126.</p> <p>The <i>regionId</i> attribute identifies the nodes that belong to a topology region within a network. Neighbor nodes exchange region identifier values to determine whether or not they belong to the same topology region.</p>
<namsId>	<p>Any number between 256 and 49151. It must be unique across the entire network of Multiservice Switch nodes supporting the transport of DPN traffic as well as all DPN resource modules (RMs) and access modules (AMs) in the network.</p> <p>The <i>namsId</i> attribute holds the network administration (Nams) identifier, which identifies nodes that support DPN traffic.</p>



Procedure job aid

Node identification component hierarchy

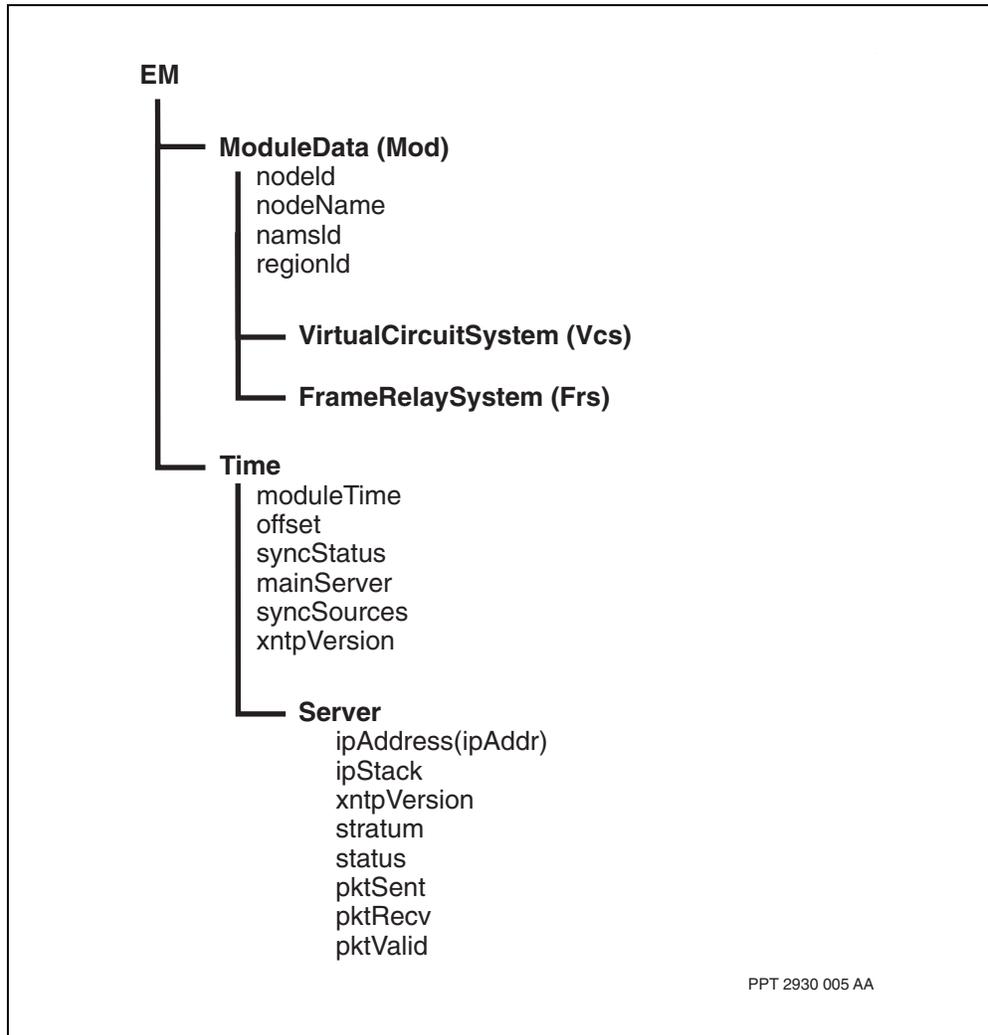



Configuring general service parameters

Configure general service parameters using two components, *VirtualCircuitSystem* and *FrameRelaySystem*, to define the general characteristics of virtual circuits and the frame relay service. The figure [Node identification component hierarchy \(page 16\)](#) illustrates these components.

Nortel Multiservice Switch StartUp utility sets the attributes existing under these components with default values. You have the option to customize the attributes to suit the requirements of the network. Many of the attributes must have the same values across a Multiservice Switch subnet so that the Multiservice Switch nodes can communicate with each other. If you do decide to change values, do so with extreme caution. Call Nortel Networks for assistance if necessary.



CAUTION

Risk of data loss

Changing the node-wide attributes of the *VirtualCircuitSystem* and *FrameRelaySystem* components can cause the node to become isolated from other nodes in the network. This node isolation can cause data loss.



Configuring node basics

Configure node basics to specify

- the processor cards and their ports
- the Nortel Multiservice Switch trunks that connect the node to other nodes
- a network management interface

Procedure steps

Step	Action
1	Configure the cards and ports. See Common processor card procedures (page 57) .
2	Configure the Multiservice Switch trunks. See NN10600-420 <i>Nortel Multiservice Switch 7400/15000/20000 Operations: Trunking</i> for details.
3	Configure the IP interface over virtual circuit (IPIVC) or the IP interface over frame relay (IPIFR) for network management connections. See NN10600-271 <i>Nortel Multiservice Switch 7400/15000/20000 Network Management Connectivity</i> for details.

--End--



Performing node maintenance

Perform node maintenance regularly to maintain the performance of your Nortel Multiservice Switch nodes. The following tables indicate when to perform the activities:

- [Regularly scheduled node activities \(page 19\)](#)
- [Regularly scheduled hardware activities \(page 19\)](#)

Regularly scheduled node activities

Frequency of activity	Activity	Where to find procedure
Daily	Time-of-day accounting	NN10600-560 <i>Nortel Multiservice Switch 7400/15000/20000 Accounting</i>
	Sending node accounting data to a billing host	NN10600-560 <i>Nortel Multiservice Switch 7400/15000/20000 Accounting</i>
Weekly	Checking synchronization	Synchronizing disks (page 184)
	Checking spooling	NN10600-561 <i>Nortel Multiservice Switch 7400/15000/20000 Data Management</i>
	Backing up service data	241-6001-023 <i>Nortel Multiservice Data Manager Configuration Tools</i>
Monthly	Cleaning up software files	NN10600-270 <i>Nortel Multiservice Switch 7400/15000/20000 Software Installation</i>
	Cleaning up configuration files	The <i>tidy Prov</i> command in NN10600-050 <i>Nortel Multiservice Switch 7400/15000/20000 Command Reference</i>
	If you have automatic bus clock source testing disabled, perform a manual bus clock source test. Attention: This activity applies to Multiservice Switch 7400 nodes only.	NN10600-520 <i>Nortel Multiservice Switch 7400/15000/20000 Fault and Performance Management: Troubleshooting</i>

Regularly scheduled hardware activities

Frequency of activity	Activity	Where to find procedure
Daily	No daily activities needed	
Weekly	No weekly activities needed	
(1 of 2)		



Regularly scheduled hardware activities (continued)

Frequency of activity	Activity	Where to find procedure
Monthly	Changing the air filter	NN10600-130 <i>Nortel Multiservice Switch 15000/20000 Hardware Installation, Maintenance, and Upgrade</i> or NN10600-175 <i>Nortel Multiservice Switch 7400 Hardware Installation, Maintenance, and Upgrade</i>
	Fabric card test Attention: This activity applies to Multiservice Switch 15000 and Multiservice Switch 20000 nodes only.	Displaying the configuration or capacity of a fabric card (page 182)
	Bus test Attention: This activity applies to Multiservice Switch 7400 nodes only.	Navigation (page 171)
	Card test	NN10600-520 <i>Nortel Multiservice Switch 7400/15000/20000 Fault and Performance Management: Troubleshooting</i>
	Port test	NN10600-520 <i>Nortel Multiservice Switch 7400/15000/20000 Fault and Performance Management: Troubleshooting</i>
	Disk test	NN10600-520 <i>Nortel Multiservice Switch 7400/15000/20000 Fault and Performance Management: Troubleshooting</i>
(2 of 2)		



Network and node time configuration

Configure network and node time to add the network time servers, set network time, and configure a time zone offset.

- [Prerequisites to network and node time configuration \(page 21\)](#)
- [Network and node time configuration flow \(page 21\)](#)
- [Task navigation \(page 22\)](#)

Prerequisites to network and node time configuration


- See [Understanding network time and date configuration \(page 296\)](#) for additional information about this task.
- You must have a network time protocol (NTP) server configured on a Nortel Multiservice Data Manager workstation or third party network management device. See 241-6001-303 *Nortel Multiservice Data Manager Administration* for additional information.

Network and node time configuration flow

This task flow shows you the sequence of procedures you perform to network and node time configuration. To link to any procedure, go to [Task navigation \(page 22\)](#).



Network and node time configuration task flow

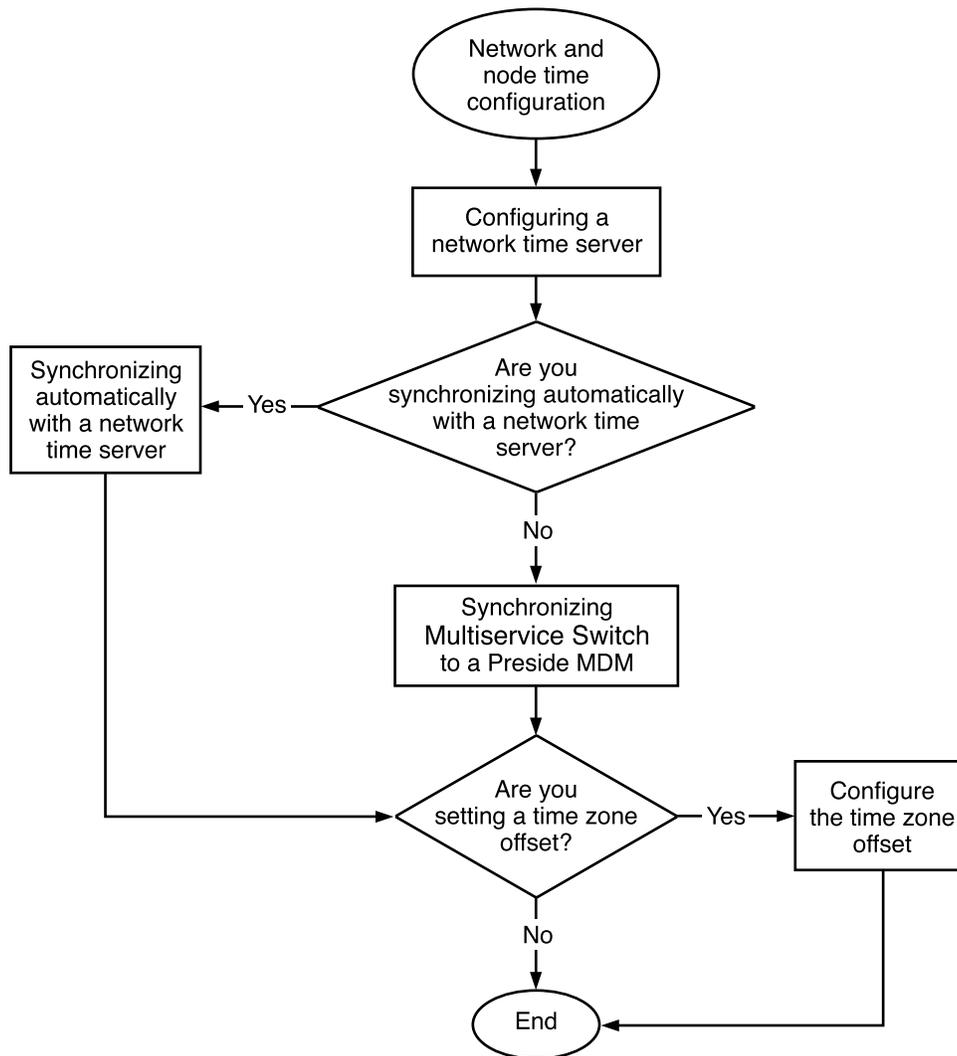

MSS 3418 002 AA

Task navigation

- [Configuring a network time server \(page 23\)](#)
- [Synchronizing automatically with a network time server \(page 24\)](#)
- [Synchronizing manually with a network time server \(page 26\)](#)
- [Configuring the time zone offset \(page 28\)](#)
- [Verifying the time configuration on the node \(page 30\)](#)



Configuring a network time server

Configure a network time server to add a time server to the Nortel Multiservice Switch node. You can add up to 10 servers on a Multiservice Switch node.

Prerequisites

- Do the following procedure in provisioning mode. For more information, see [Provisioning mode \(page 342\)](#).

Procedure steps

Step	Action
1	Add a <i>Server</i> component for each network time server: add Time Server/<n>
2	Check, activate and confirm the provisioning changes, see Activating configuration changes (page 342) .

--End--

Variable definitions

Variable	Value
<n>	The instance of the <i>Server</i> component. You can configure up to 10 <i>Server</i> components (1–10) on a Multiservice Switch node.



Synchronizing automatically with a network time server

Follow this procedure to automatically synchronize a Nortel Multiservice Switch node with up to 10 management devices, which are acting as network time servers.

An management device can be any workstation running either:

- Nortel Multiservice Data Manager with public network time protocol (NTP)
- another management system running public NTP.

In case a network time server is not specified, the Multiservice Switch system automatically attempts to synchronize with any Multiservice Data Manager workstation it can reach using its IP interface over frame relay (IPIFR) or its IP interface over virtual circuit (IPIVC). If time servers are deleted when the Multiservice Switch node is up and running, the system does not synchronize with a Multiservice Data Manager workstation. For example, automatic synchronization works at startup if no time servers are specified.

The node gets the network time from the network management interface system (NMIS) notification of a new fast management information protocol (FMIP) session. In this case, the system decides with which, and how many management devices (maximum 10), the node will synchronize. Multiservice Data Manager connectivity, IPIFR, and IPIVC are explained in detail in NN10600-271 *Nortel Multiservice Switch 7400/15000/20000 Network Management Connectivity*.

Attention: As soon as you configure a *Server* component, Multiservice Switch software disables the automatic synchronization capability.

Prerequisites

- See RFC 1305, *Network Time Protocol (Version 3)* for more information on public NTP.

Procedure steps

Step	Action
1	Specify the IP address of the network time server: <code>set Time Server/<n> ipAddress <address></code>
2	Select the IP routing stack for time server connectivity: <code>set Time Server/<n> ipStack <type></code>



--End--

Variable definitions

Variable	Value
<address>	The IP address of the management device that you want to use as a time server to the node.
<type>	Either ipiFrIpiVc (for frame relay/X.25 connectivity to a time server management device) or Vrlp (for IP virtual router connectivity to a time server management device). The time servers must connect to the node via the same connection type (for example, all using vrIP or all using ipiFrIpiVc). Mixed connections are not supported.



Synchronizing manually with a network time server

Follow this procedure to manually synchronize your Nortel Multiservice Switch node with any management device that is running public NTP software. A Multiservice Switch node may be synchronized with up to 10 management devices. A management devices can be any workstation running either Nortel Multiservice Data Manager, or some other management system. All management devices must synchronize with a common reference time.

The management device used for manual synchronization can be any workstation running management software with public NTP (such as Multiservice Data Manager or third party). Multiservice Switch XNTP software allows you to specify with which, and how many MDs (maximum 10) the node will synchronize. This flexibility means that you can choose management devices in both WAN and LAN networks.

Connectivity to management devices running public NTP can be through IPIFR/IPIVC, or IP, over link layer protocols such as frame relay, X.25, asynchronous transfer mode (ATM), Ethernet, and point-to-point protocol (PPP).

Prerequisites



CAUTION

Risk of confusion in the interpretation of accounting records and alarm time stamps

Nortel Networks recommends that you synchronize all nodes in a network from a reliable time reference.

When set manually, the node time is not initially precisely the same on all network nodes and also eventually drifts out of synchronization due to the different precision of the local clocks on each node.

This eventually results in alarms and accounting records not reporting an accurate time stamp.

- If there is a difference of more than 1000 seconds between the network time server management device and the node, synchronization does not occur.
- Multiservice Data Manager must be synchronized to a time source before a the node is synchronized. See 241-6001-303 *Nortel Multiservice Data Manager Administration*.
- If the node is powered off for more than 24 hours, perform the following procedure in provisioning mode. For information on working in provisioning mode, see [Provisioning mode \(page 342\)](#).



Procedure steps

Step	Action
1	Stop the time synchronization on the node. Lock all the provisioned time server components for each provisioned server: <code>lock Time Server/<n></code>
2	Verify that the node time has changed to unsynchronized: <code>d Time syncStatus</code>
3	On the node, make sure that the time offset is set to 0. Configure the node time so that it is set to UTC and as close as possible to the Multiservice Data Manager workstation UTC time: (less than 1000 seconds of UTC): <code>display time moduleTime</code> <code>set time offset 0</code> <code>set time moduleTime <yyyy-mm-dd> <hh:mm:ss></code>
4	On the node, restart synchronization by unlocking the time server components: <code>unlock Time Server/<n></code>
5	Monitor the progress by checking the syncStatus attribute: <code>d Time syncStatus</code>

--End--

Variable definitions

Variable	Value
<hh>:<mm>:<ss>	The hour, minute, and second.
<n>	The instance value of the time server.
<yyyy>-<mm>-<dd>	The year, month, and day.



Configuring the time zone offset

Configure the time zone offset to set the manually offset the time from UTC.

When the node synchronizes with a management device acting as a network time server, Multiservice Switch XNTP sets the node time to the network time (reference time), which is UTC. This happens whether synchronization is done automatically or manually. You can account for different time zones by setting the difference from UTC using the *offset* attribute. The *offset* attribute is a writable operational attribute under the *Time* component.

The time zone offset value ranges from -720 to 900 minutes, which represents a range from -12 hours to +15 hours. A time offset between 0 and 900 minutes (+15 hours) represents a time ahead of UTC (or east of the prime meridian). A time offset value between 0 and -720 minutes (-12 hours) represents a time behind UTC (or west of the prime meridian).

Prerequisites



CAUTION

Risk of confusion in the interpretation of accounting records and alarm time stamps

Nortel Networks recommends that you set the time zone offset to the same value for every node in the same network.

If nodes in the same network have different time zone offsets and two alarms on different nodes are generated at the exact same time, they have different time stamps. This can result in difficulties when correlating time between the two Multiservice Switch nodes.

Procedure steps

Step	Action
------	--------

- | | |
|---|--|
| 1 | Set the <i>offset</i> attribute of the <i>Time</i> component to the number of minutes difference (before or after) between the local node time and the network time. The node must be synchronized before setting the time offset. |
|---|--|

```
set Time offset <offset value>
```

--End--



Variable definitions

Variable	Value
<offset value>	is the value of the <i>offset</i> attribute.



Verifying the time configuration on the node

Verify the time configuration on the node to ensure that you have correctly configured module and network time on your node.

Prerequisites

- Do the following procedure in operational mode. For more information, see [Operational mode \(page 341\)](#).

Procedure steps

Step	Action
1	Display the operational attributes of the <i>Time</i> component: display Time A number of attributes display, including the current module time, timezone offsets, synchronization status, and time server sources.
2	Display the provisionable attributes of the configured time servers: display -p Time Server/*
3	Display the operational attributes of the configured time servers: display Time Server/*
4	Display the operational attributes of a particular time server: display Time Server/<n>
5	Display the current time on the node: display Time moduleTime The current time on the node displays in the form yyyy-mm-dd hh:mm:ss.

--End--

Variable definitions

Variable	Value
<n>	The instance value of the <i>Server</i> component.



Network clock synchronization configuration

Configure network clock synchronization (NCS) to provide the clock rates for connected ports so that they operate in synchronization. This prevents data loss or data retransmission for synchronous services.

- [Prerequisites to network clock synchronization configuration \(page 31\)](#)
- [Network clock synchronization configuration flow \(page 31\)](#)
- [Task navigation \(page 34\)](#)

Prerequisites to network clock synchronization configuration


- See [Understanding NCS \(page 276\)](#) for additional information.

Network clock synchronization configuration flow

This task flow shows you the sequence of procedures you perform to configure network clock synchronization. To link to any procedure go to [Task navigation \(page 34\)](#).




Network clock synchronization configuration task flow

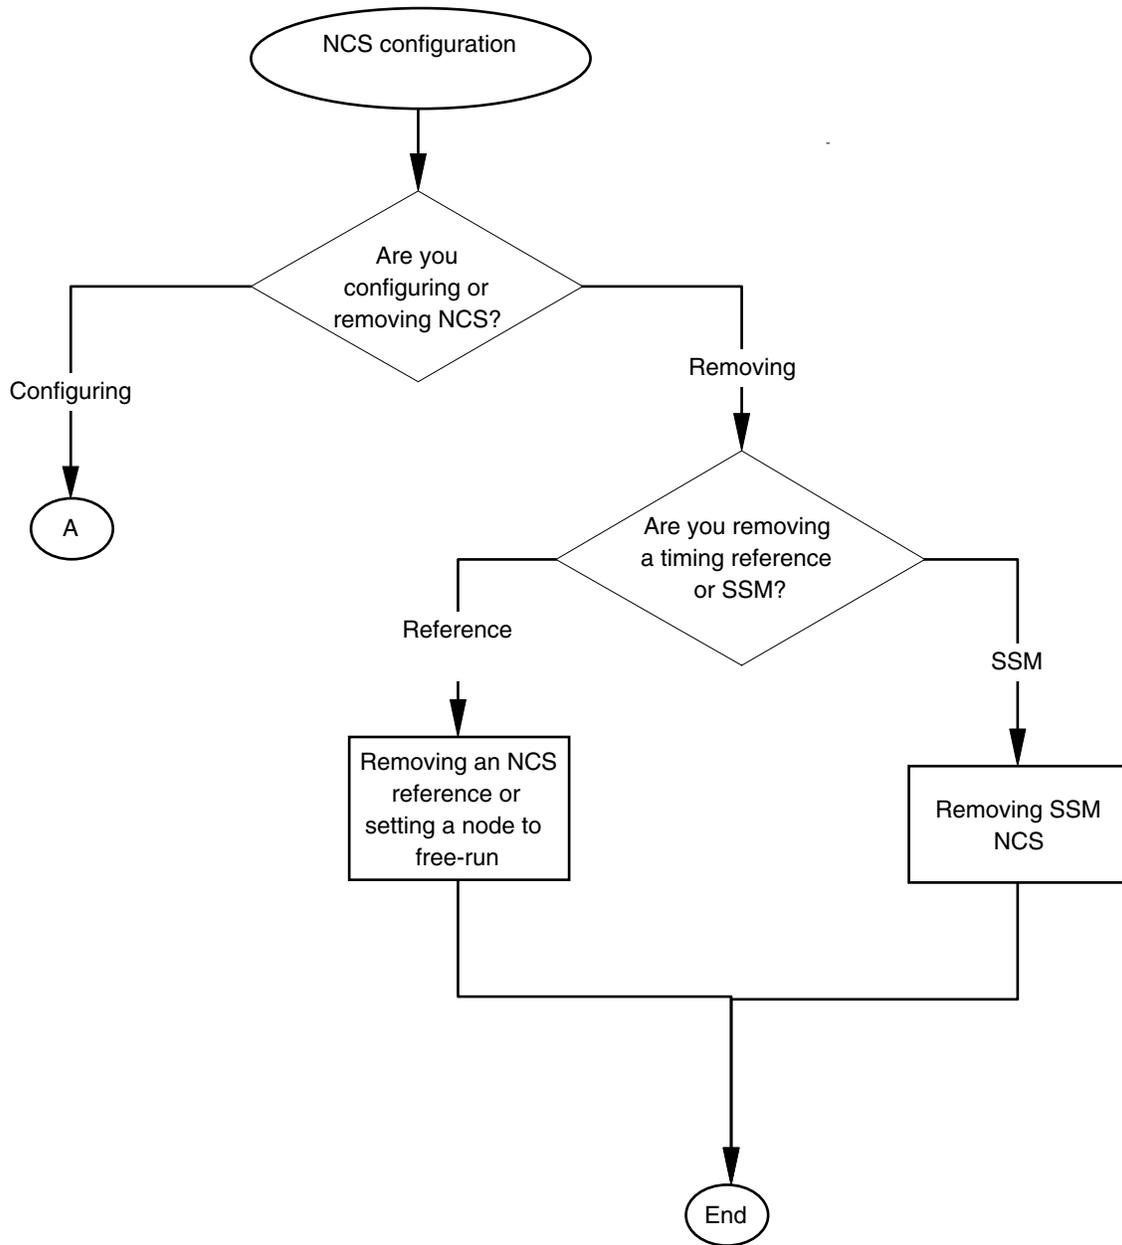

MSS_4002_029_AA



Network clock synchronization configuration task flow (continued)

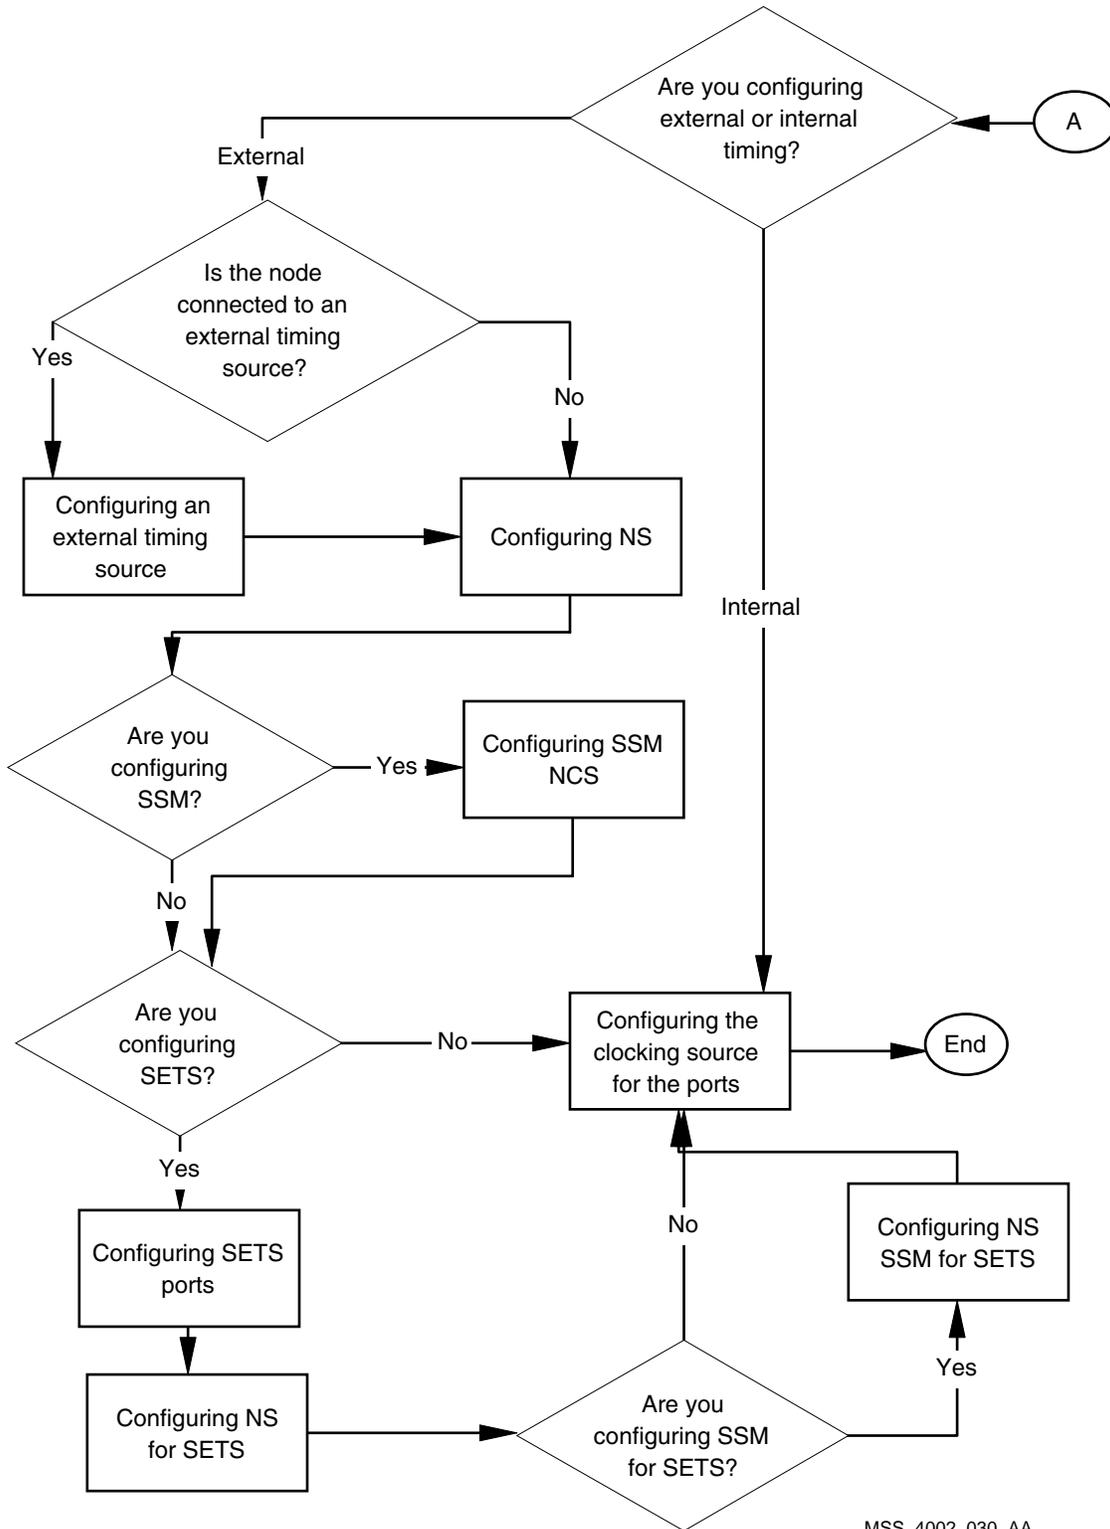

MSS_4002_030_AA



Task navigation

- [Configuring an external timing source \(page 35\)](#)
- [Configuring NS \(page 37\)](#)
- [Configuring SSM NCS \(page 40\)](#)
- [Configuring the clocking source for the ports \(page 39\)](#)
- [Removing a NCS reference or setting a node to free-run \(page 42\)](#)
- [Removing SSM NCS \(page 43\)](#)
- [Configuring SETS ports \(page 44\)](#)
- [Configuring NS for SETS \(page 45\)](#)
- [Configuring NS SSM for SETS \(page 47\)](#)



Configuring an external timing source

Configure an external timing source to enable a node to use an external clocking sources as a timing reference. Do this procedure on nodes connected directly to an external timing source, for example, a stratum-1 clock.

Prerequisites

- Do the following procedure in provisioning mode. For more information, see [Provisioning mode \(page 342\)](#).
- For information about the Nortel Multiservice Switch 7400 node BITS termination panel, see NN10600-170 *Nortel Multiservice Switch 7400 Hardware Description*. FOR information about the Multiservice Switch 15000 or Multiservice Switch 20000 node Alarm/BITS module, see NN10600-120 *Nortel Multiservice Switch 15000/20000 Hardware Description*.

Procedure steps

Step	Action
1	<p>Determine what kind of signal is expected:</p> <pre>display Shelf Card/0 cardType</pre> <p>For Multiservice Switch 15000 and Multiservice Switch 20000 nodes, if the control processor is of type <i>CPeD</i>, the signal is from a DS1 line. If the control processor is of type <i>CPeE</i>, the signal is from an E1 line.</p> <p>For Multiservice Switch 7400 nodes, if the control processor is of type CP, the external timing port can be provisioned to be either E1 or DS1.</p>
2	<p>Add the external timing feature to the feature list (FL) of the CP:</p> <pre>set Sw Lpt/cp featureList externalTiming</pre>
3	<p>Activate and confirm the provisioning changes, see Activating configuration changes (page 342).</p>
4	<p>Define one or both external timing ports to receive the signal.</p> <p>If the signal is from a DS1 line, enter:</p> <pre>add lp/<x> EDS1/0</pre> <pre>add lp/<x> EDS1/1</pre> <p>If the signal is from an E1 line, enter:</p> <pre>add lp/<x> EE1/0</pre> <pre>add lp/<x> EE1/1</pre>
5	<p>If the signal is from a DS1 line, set the configurable attributes:</p> <pre>set lp/<x> EDS1/<y> lineType/<linetype></pre>



- 6 To enable 2MHz analog BITS termination on an EE1 port, change the default setting of RxSynchClk:

```
set lp/<x> EE1/<y> RxSynchClk squareWave
```

--End--

Variable definitions

Variable	Value
<linetype>	<i>d4 or esf</i>
<x>	The instance of the Lp.



Configuring NS

Configure NS to add network synchronization and set clocking references.

Prerequisites

- Do the following procedure in provisioning mode. For more information, see [Provisioning mode \(page 342\)](#).
- If there are no references where the node can receive a timing signal, do not configure any references. This forces the node clocking to run in free-run mode.
- The individual ports of an optical interface card configured for automatic protection switching (APS) can each serve independently as a reference source. However, the pair of them as defined by the *Aps* component instance cannot be used as a single reference source.

Procedure steps

Step	Action
1	Create the network synchronization component: add networkSynchronization
2	Define up to three sources of the timing signal: set networkSynchronization <reference_type> <path>
3	Define the criteria that a timing reference must meet for the signal to be a usable timing reference: set networkSynchronization useableReferences <useRef_value>
4	Set the amount of time the <i>NetworkSynchronization</i> component waits before using a port as a timing reference after it has been cleared of its degraded or disabled status: set networkSynchronization reversionDelay <revDel_value>

--End--




Variable definitions

Variable	Value
<path>	The logical port to be used as a timing reference.
<reference_type>	The type of network synchronization reference. Up to three sources can be defined using the components <i>primaryReference</i> , <i>secondaryReference</i> , and <i>tertiaryReference</i> .
<revDel_value>	The value of the <i>reversionDelay</i> attribute. Can have the value manual or the number of minutes, between 0 and 120, can be set. The default is 0 minutes.
<useRef_value>	The value of the <i>useableReferences</i> attribute. Can have the value enabled, default value, or notDegraded.

Procedure job aid

NS component hierarchy

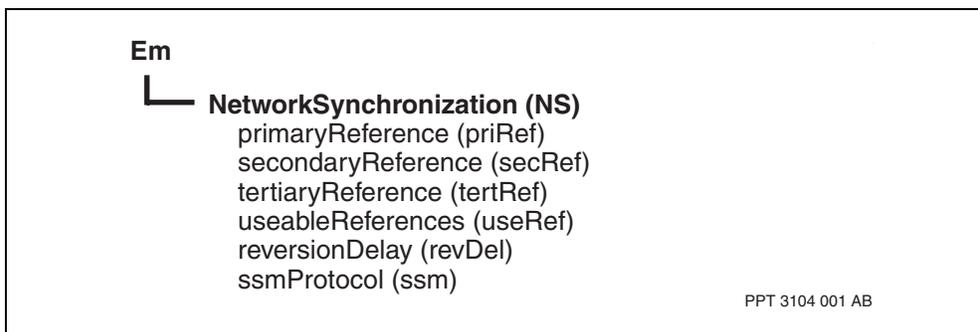



Configuring the clocking source for the ports

Configure the clocking source for the ports so that the necessary clocking source is used to synchronize the transmission of data.

Prerequisites

- Do the following procedure in provisioning mode. For more information, see [Provisioning mode \(page 342\)](#).
- If you are using an external timing source, Nortel Networks recommends that the *clockingSource* for all ports be set to module.
- If you are using a V.11 or V.35 FP, see [Clocking for V.11 and V.35 FPs \(page 290\)](#) for additional information.
- See NN10600-060 *Nortel Multiservice Switch 7400/15000/20000 Component Reference* for LP port types and *clockingSource* values.

Procedure steps

Step	Action
1	Set all ports of the LP to synchronize with the necessary timing source: set lp/<x> <port_type>/<y> clockingSource <clockingSource_type>
2	Repeat step 1 for all ports on the LP.
3	For ports on a V.11 or V.35 FP set the <i>linkMode</i> attribute. set lp/<x> x21/<y> linkMode <linkMode_value> set lp/<x> V35/<y> linkMode <linkMode_value>
--End--	

Variable definitions

Variable	Value
<clockingSource_type>	The value for the type of clocking source used for synchronizing the transmit clock.
<linkMode_value>	The value of the x21 or V35 port <i>linkMode</i> . <i>It can be set to either dte or dce.</i>
<port_type>	The type of port.
<x>	The instance of the Lp.
<y>	The instance of the port.



Configuring SSM NCS

Configuring synchronization status messages (SSM) network clock synchronization to allow the NCS system to choose the best clock signal based on the quality level of the SSM, making it available to all ports on the node that have module timing.

Prerequisites

- Do the following procedure in provisioning mode. For more information, see [Provisioning mode \(page 342\)](#).

Procedure steps

Step	Action
1	<p>Set the <i>ssmProtocol</i> value to <i>enabledMigration</i>. This is an intermediate step to allow the S1 Bytes associated with the active timing references to be propagated to adjacent nodes in the network without invoking any SSM clock source selection functionality. This is a recommended step when migrating your NCS network to use SSM.</p> <pre>set networkSynchronization ssmProtocol enabledMigration</pre>
2	<p>Activate and confirm the provisioning changes, see Activating configuration changes (page 342).</p>
3	<p>Prior to enabling SSM, display the current S1 Bytes being received and transmitted on the provisioned timing references to determine what SSM clock source selections will occur when SSM is enabled. If one or more standby timing references in the network will be selected when SSM is enabled, it is important to understand what other clock source selection changes may occur as a result. This step will help predict these changes. For example, on a SONET, the command syntax would be:</p> <pre>display -o lp/<x> sonet/<y> s1Rx display -o lp/<x> sonet/<y> s1Tx</pre>
4	<p>Optionally, set the <i>s1RxDefault</i> attribute. This attribute specifies the default S1 Bytes reported by the port when the received S1 Byte is 0 (quality unknown). The default value is applied until a non-zero S1 byte is reported.</p> <pre>set lp/<x> sonet/<y> s1RxDefault <default></pre>

Attention: This attribute needs to be configured only if the equipment at the remote end of the port does not support SSM transmission

5	<p>Activate SSM functionality (setting the value of the <i>ssmProtocol</i> attribute to either <i>enabledRevertive</i> or <i>enabledNonRevertive</i> enables SSM functionality on the node).</p> <pre>set networkSynchronization ssmProtocol <value></pre>
---	--



- 6 For E1 ports, set the *ssmE1SaNumber* attribute to specify the San used by the network for SSM signalling.

```
set lp/<x> e1/<e1_value> ssmE1SaNumber <san_value>
```

- 7 Optionally, if using E1BITS timing on a node, you can set the quality level normally assigned with the BITS timing reference as follows:

```
set lp/<x> ee1/<ee1_value> ssmRxDefault <quality_value>
```

- 8 Optionally, if using DS1BITS timing on a node, you can set the quality level normally assigned with the BITS timing reference as follows:

```
set lp/<x> eds1/<eds1_value> ssmRxDefault <quality_value>
```

--End--

Variable definitions

Variable	Value
<default>	The provisioned value of the s1RxDefault attribute. It can be set to any value from 0 to 15, or it can be set to none.
<e1_value>	The instance value of the e1 component.
<eds1_value>	The instance value of the eds1 component.
<ee1_value>	The instance value of the ee1 component.
<quality_value>	The provisioned value of the ssmRxDefault attribute. For a summary of acceptable quality level values, refer to SONET/SDH quality level (QL) mapping table (page 290) .
<san_value>	The provisioned value of the ssmE1SaNumber attribute. The default value of none disables SSM signalling on the specified E1 port.
<value>	The provisioned value of the ssmProtocol attribute. It can be set to one of four possible values: disabled, enabledRevertive, enabledNonRevertive, enabledMigration.
<x>	The instance of the Lp.
<y>	The instance of the SONET port.



Removing a NCS reference or setting a node to free-run

Remove a NCS reference to remove a previously configured reference. When the attribute parameter is omitted, the reference is set to nil (no reference).

Prerequisites

- Do the following procedure in provisioning mode. For more information, see [Provisioning mode \(page 342\)](#).

Procedure steps

Step	Action
1	Set the particular attribute without identifying a new reference. set NetworkSync <reference_type>
2	Repeat for all references that you would like to remove.

--End--

Variable definitions

Variable	Value
<reference_type>	One of the <i>primaryReference</i> , <i>secondaryReference</i> , or <i>tertiaryReference</i> attribute.



Removing SSM NCS

Remove SSM NCS to disable the SSM functionality on the port or node.

Prerequisites

- Do the following procedure in provisioning mode. For more information, see [Provisioning mode \(page 342\)](#).

Procedure steps

Step	Action
1	To disable SSM functionality on a particular port, set the port Tx and Rx override attributes to 0. <pre>set lp/<x> sonet/<y> s1RxOverride 0 set lp/<x> sonet/<y> s1TxOverride 0</pre>
2	To disable SSM functionality on an entire node, set the <i>ssmProtocol</i> attribute to disabled. <pre>set networkSynchronization ssmProtocol disabled</pre>
--End--	

Variable definitions

Variable	Value
<x>	The instance value of the LP.
<y>	The instance of the port.



Configuring SETS ports

Configure SETS ports to use enable synchronous equipment timing source (SETS).

Prerequisites

- Add the *externalTiming* feature to the *CPfeatureList* attribute.

Procedure steps


Step	Action
1	Add a SETS port: <code>add lp/0 SETS/<m></code>
2	Set the transmit mode: <code>set lp/0 SETS/<m> TxSynchClk <transmit_mode></code>
3	Set the encoding bits for SSM transmission: <code>set lp/0 SETS/<m> ssmE1SaNumber <ssm_bits></code>
--End--	

Variable definitions

Variable	Value
<m>	The SETS port, which can be 0 or 1.
<transmit_mode>	The transmit mode, which can be e1Signal or squareWave.
<ssm_bits>	The value of the SSM transmission encoding bits, which can be 4, 5, 6, 7, 8, or none.

Procedure job aid

SETS ports component hierarchy

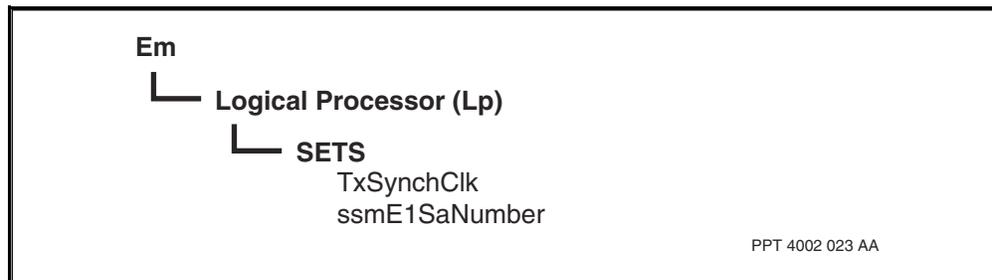



Configuring NS for SETS

Configure network synchronization and set clocking references for SETS.

Attention: Without the termination panel, only E1 120-ohm (balanced) BITS connectivity is supported on the CP with BITS and SETS.

Procedure steps

Step	Action
1	Define up to three sources of the timing signal: <code>set networkSynchronization <reference_type> <path></code>
2	Define the squelch timer: <code>set networkSynchronization setsSquelchTimer <timer></code>
3	Set the termination panel attribute to reflect whether the termination panel is used in the configuration. <code>set networkSynchronization termPanel <termPanel></code>

--End--




Variable definitions

Variable	Value
<path>	<p>is the logical port to be used as a timing reference. The possible values for SETS sources are <i>nsSelect</i>, <i>bitsA</i>, <i>bitsB</i>, <i>nsProcessed</i>, and <i>none</i>.</p> <p>When you choose the <i>nsSelect</i> option, the SETS reference is the same as the clock reference selected by the <i>NS</i> component. The following SETS configurations are not recommended because they may result in excessive phase transients during SETS reference switching due to LOS/LOF/AIS on the SETS active reference:</p> <ul style="list-style-type: none"> setsPrimaryReference = nsSelect, setsSecondaryReference = bitsA, primaryReference = lp/0 EE1/0 setsPrimaryReference = nsSelect, setsSecondaryReference = bitsB, primaryReference = lp/01 EE1/1 <p>The excessive transient occurs only if <i>nsSelect</i> is the active reference, <i>bitsA</i> (or <i>bitsB</i>) is the standby reference, and lp/0 EE1/0 (or lp/0 EE1/1) is the <i>NS</i> active reference.</p>
<reference_type>	is the type of network synchronization reference. Up to three sources can be defined using the components <i>setsprimaryReference</i> , <i>setssecondaryReference</i> , and <i>setstertiaryReference</i> .
<termPanel>	specifies if the termination panel is used in the configuration. Use <i>yes</i> if it is used and <i>no</i> if it is not used.
<timer>	specifies how long after a node becomes enabled (due to a reset or CP switchover) before starting the SETS source selection. This is to ensure a stable SETS output source. The value range from 0 to 12 (in minutes).

Procedure job aid

NS for SETS component hierarchy

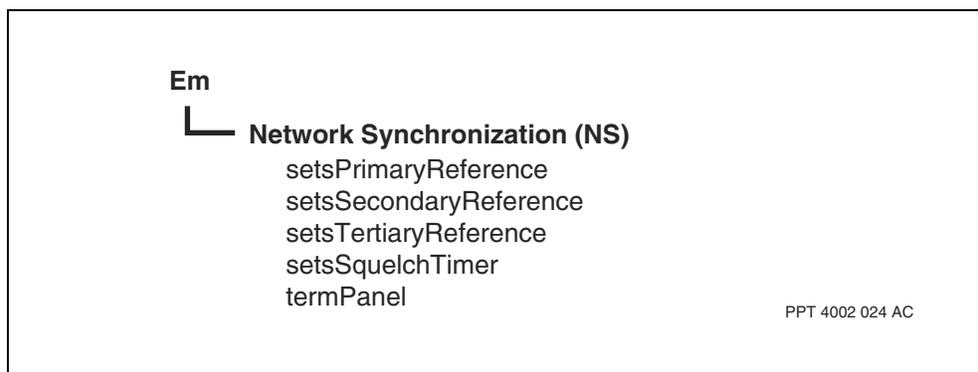



Configuring NS SSM for SETS

Configure synchronization status messages (SSM) network clock synchronization for SETS to allow the NCS system to choose the best clock signal based on the quality level of the SSM, making it available to all ports on the node that have module timingnetwork synchronization and set clocking references for SETS.

Procedure steps


Step	Action
1	Define SETS source selection based on SSM protocol: set networkSynchronization setsSSMProtocol <value>
--End--	

Variable definitions

Variable	Value
<value>	The provisioned value of the ssmProtocol attribute, which can be set to disabled, enabledRevertive, or enabledNonRevertive.

Procedure job aid

NS SSM for SETS component hierarchy

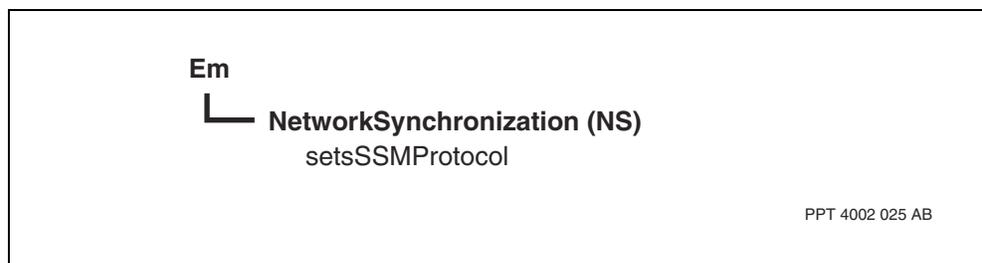



Software, applications, and features additions and updates

Add and configure software, or update a software version or patch lists to allow Nortel Multiservice Switch nodes to support the services required by your network.

- [Prerequisites to software, applications, and features additions and updates \(page 48\)](#)
- [Navigation \(page 48\)](#)

Prerequisites to software, applications, and features additions and updates

- If you are unfamiliar with Multiservice Switch software concepts, see [Understanding Multiservice Switch software \(page 308\)](#).

Navigation

- [Adding and configuring applications \(page 49\)](#)
- [Removing and replacing specific applications and patches \(page 50\)](#)
- [Removing and replacing all applications and patches \(page 52\)](#)
- [Activating the AVL configuration changes \(page 54\)](#)
- [Changing the patch list \(page 56\)](#)



Adding and configuring applications

Add and configure the applications required by the network on the Nortel Multiservice Switch node.

You can add certain applications only after the associated feature has been included in the feature list of a logical processor type (LPT). See [Configuring the software features of an LPT \(page 164\)](#).

Prerequisites

- Before you can add and configure applications, you must have previously installed Multiservice Switch software by running StartUp. As part of the software installation, StartUp will add default applications and the software installer will download the release software to the node. You can then add and configure applications. For instructions on running StartUp, see NN10600-271 *Nortel Multiservice Switch 7400/15000/20000 Network Management Connectivity*.
- Perform the following steps in provisioning mode. For more information, see [Provisioning mode \(page 342\)](#).

Procedure steps

Step	Action
1	Determine what applications have already been added to the node: <code>list</code>
2	Add a new application: <code>add <application></code>
3	Refer to the specific service guides for additional information about configuring applications.
4	Verify that you added the application correctly: <code>list</code>
5	Complete the configuration changes. See Activating configuration changes (page 342) .

--End--

Variable definitions

Variable	Value
<application>	The application that you want to add.



Removing and replacing specific applications and patches

Indicate the specific applications and patches that you want to remove from the application version list (AVL) or patch list. You can then specify recently downloaded applications and patches that you want added to the AVL or patch list.

Prerequisites

- Keep a copy of the committed provisioning file that was running before you updated the AVL until you confirm that the new software functions properly. To revert to the old version of the software, you need this file. See NN10600-270 *Nortel Multiservice Switch 7400/15000/20000 Software Installation*.
- Do the following procedure in provisioning mode. For more information, see [Provisioning mode \(page 342\)](#).

Procedure steps

Step	Action
1	Display the current AVL: display Software AvList
2	Display the current patch list: display Software PatchList
3	Delete the unwanted software applications in the AVL: set Software AvList ~<avName> To list multiple applications, precede each application with a tilde (~) and separate each of them with a space.
4	Add the new software applications to the AVL: set Software AvList <avName> To list multiple applications, separate each of them with a space.
5	Remove unwanted patches from the patch list: set Software PatchList ~<patch>
6	Check the configuration changes and activate the new AVL. See Activating the AVL configuration changes (page 54) .
7	Verify the changes to the AVL: display Software AvList
8	Verify the changes to the patch list: display Software PatchList



--End--

Variable definitions

Variable	Value
<avName>	The application version that you want to delete.
<patch>	The name of the unwanted patch. To remove multiple patches, precede each patch name with a tilde (~) and separate each of them with a space.



Removing and replacing all applications and patches

If required, remove and replace all applications and patches.

To replace all the application versions and patches with new versions in a single command, use an exclamation mark. The exclamation mark tells the system to delete all the applications or patches in the AVL or patch list.

Prerequisites

- Do the following procedure in provisioning mode. For more information, see [Provisioning mode \(page 342\)](#).

Procedure steps

Step	Action
1	Display the current AVL: <code>display Software AvList</code>
2	Display the current patch list: <code>display Software PatchList</code>
3	Remove all the applications in the AVL and replace them with new applications: <code>set Software AvList ! <avName></code> To list multiple application versions, separate each of them with a space.
4	Remove all the patches in the patch list and replace them with new patches: <code>set Software PatchList ! <patch></code> To list multiple patches, separate each of them with a space.
5	Check the configuration changes and activate the new AVL. See the procedure Activating the AVL configuration changes (page 54) .
6	Verify the changes to the AVL: <code>display Software AvList</code>
7	Verify the changes to the patch list: <code>display Software PatchList</code>

--End--



Variable definitions

Variable	Value
<avName>	The application version that you want to add.
<patch>	The patch that you want to add.



Activating the AVL configuration changes

Once you have updated the feature list, activate the AVL configuration changes.

If you are only applying a patch to an application version, you do not have to modify the AVL, only the patch list. For more information, see [Changing the patch list \(page 56\)](#).

Prerequisites

- When you update the AVL to perform a software upgrade, you have to verify the configuration twice using the *check Prov* command. First, you must verify the configuration before you can activate it using the old software version, then after activation using the new software version. You need a second *check Prov* to ensure that the node configuration is based on the software and component model that you want to run as configuration might have changed since the first *check Prov* was done, or a view migration might have introduced new components. See NN10600-270 *Nortel Multiservice Switch 7400/15000/20000 Software Installation* for more information.
- When you update the AVL you also must ensure that the patch list is still valid. In general, a new application version incorporates the changes in the preceding patches, making them obsolete. For more information on specific application versions and patches, see *Nortel Multiservice Switch Release Notes*.
- Do the following procedure in provisioning mode. For more information, see [Provisioning mode \(page 342\)](#).

Procedure steps

Step	Action
1	Do a semantic check on the configuration changes to the AVL in the edit view: check Prov A message is displayed indicating whether or not processor reboots will occur when the new provisioning data is activated.
2	Activate the changes to the AVL: activate Prov

Attention: If the standby CP resets during the software activation, continue the standard software activation sequence on the active CP. Allow both CPs to load the new software and perform the remaining steps on the active CP.



- 3 Enter provisioning mode again:
start Prov
- 4 Confirm that the new configuration is still valid following the reboot:
confirm Prov
- 5 In edit view, verify that the new configuration is valid now that the new application versions are running:
check Prov
- 6 After running tests on the new software to ensure that it works properly, commit and save the current view:
commit -file(<name>) prov
- 7 Verify that the committed view is now running:
display ProvisioningSystem committedFileName
display ProvisioningSystem currentViewFileName
Verify that the committed file name and the current view file name are the same.

--End--

Variable definitions

Variable	Value
<name>	The name you want to give the committed view.



Changing the patch list

After you download a new patch to an application version, you must enable it by adding it to the patch list. Nortel Multiservice Switch nodes do not use a patch until it is on the patch list of the current view.

Prerequisites

- You cannot put a patch on the patch list unless its associated application version is on the AVL. See [Application versions \(page 312\)](#). Some patches can require other patches to also be on the patch list. Certain combinations of patches do not work together. For more information on patches, see [Patches \(page 312\)](#). See *Nortel Multiservice Switch Release Notes* for the restrictions on particular patches.
- Do the following procedure in provisioning mode. For more information, see [Provisioning mode \(page 342\)](#).

Procedure steps

Step	Action
1	Display the current patch list: display Software PatchList
2	Specify the patches that you want to enable: set Software PatchList <list>
3	Display the new patch list to verify that you have properly defined it: display Software PatchList
4	Complete the configuration changes. See Activating configuration changes (page 342) .
--End--	

Variable definitions

Variable	Value
<list>	A list of patches. The patch names in the list must be separated by a space. To remove a particular patch from the patch list, precede it with a tilde (~) character. To replace all of the patches on the list with new patches, begin the list with an exclamation mark (!) followed by a space.



Common processor card procedures

Use these common processor card procedures to perform maintenance or troubleshooting activities.

- [Prerequisites to common processor card procedures \(page 57\)](#)
- [Navigation \(page 57\)](#)

Prerequisites to common processor card procedures

For conceptual information supporting the procedures listed in this section, see [Understanding Multiservice Switch control processors and function processors \(page 298\)](#).

Navigation

- [Comparing the card type of a mounted card and its configured slot \(page 59\)](#)
- [Configuring a new processor card \(page 60\)](#)
- [Configuring a port to use an SFP optical module \(page 62\)](#)
- [Configuring the fan alarm to recur \(page 65\)](#)
- [Decommissioning an FP \(page 66\)](#)
- [Displaying information about daughter cards on a Multiservice Switch 7400 processor card \(page 67\)](#)
- [Displaying the memory capacity of a processor card \(page 68\)](#)
- [Displaying the status of a processor card \(page 78\)](#)
- [Displaying the status of an installed SFP optical module \(page 69\)](#)
- [Locking a function processor \(page 72\)](#)
- [Locking a port \(page 74\)](#)
- [Preparing an active FP for being replaced \(page 76\)](#)
- [Re-enabling an LP \(page 79\)](#)
- [Removing from service a failed FP \(page 82\)](#)
- [Removing from service a standby electrical FP \(page 84\)](#)



- [Removing from service an optical FP configured with LAPS \(page 86\)](#)
- [Removing from service an unspared FP \(page 90\)](#)
- [Reinitializing a processor card \(page 80\)](#)
- [Returning an FP to service \(page 92\)](#)
- [Switching between active and standby processor cards \(page 95\)](#)
- [Switching SONET line protection to the mate FP \(page 96\)](#)
- [Temporarily disabling an LP \(page 98\)](#)
- [Unlocking a function processor \(page 99\)](#)
- [Unlocking a port \(page 100\)](#)



Comparing the card type of a mounted card and its configured slot

Make sure the card mounted in a slot matches the type of card configured for that slot in the system software.

Prerequisites

- Perform the following procedure in operational mode. For more information, see [Operational mode \(page 341\)](#).

Procedure steps

Step	Action
1	Display the card type of the card inserted in a particular slot: display Shelf Card/<m> insertedcardType
2	Display the type of card configured for the slot. display Shelf Card/<m> cardType If the configured card type does not match the inserted card type, the processor card does not start and its status LED turns solid amber.
3	Look up the minimum software load for the card type of the product engineering code (PEC) of the mounted card in NN10600-551 <i>Nortel Multiservice Switch 7400/15000/20000 FP Configuration Reference</i> to ensure that the vintage of the card is compatible with the vintage of the software. If they are not compatible, decide whether to upgrade the software for the node (a migration) or to replace the FP with a compatible card.

--End--

Variable definitions

Variable	Value
<m>	The slot number of the processor card.



Configuring a new processor card

Configure a new processor card by specifying the type of card mounted in a slot on the shelf and, if part of a one-for-n sparing configuration, where the card connects to the sparing panel.

Prerequisites

- Install all required hardware. See NN10600-175 *Nortel Multiservice Switch 7400 Hardware Installation, Maintenance, and Upgrade* or NN10600-130 *Nortel Multiservice Switch 15000/20000 Hardware Installation, Maintenance, and Upgrade*. FPs do not have to be physically mounted; however, you must know the slot number where the FP is installed before you can configure it.
- Configure the required LP and logical processor types (LPT). See [Logical processor, port, and channel configuration \(page 146\)](#).
- Perform the following procedure in provisioning mode. For more information, see [Provisioning mode \(page 342\)](#).

Procedure steps

Step	Action
1	Add a new <i>Card</i> component instance to represent the processor card: add Shelf Card/<m> If the <i>Card</i> component instance already exists, you can skip this step.
2	Set the type of the new processor card: set Shelf Card/<m> cardType <cardtype>
3	If you are using the processor card as part of a one-for-n sparing configuration, configure where the processor card connects to the sparing panel: set Shelf Card/<m> sparingConnection <connector> For more information on sparing, see Configuring one-for-n equipment protection for electrical interfaces (page 192) .

--End--



Variable definitions

Variable	Value
<cardtype>	is the type of the processor card. For information on the type associated with a particular processor card, see Processor card instances (page 300) or NN10600-551 <i>Nortel Multiservice Switch 7400/15000/20000 FP Configuration Reference</i> .
<connector>	<p>is the connector on the sparing panel. The default value is notApplicable. If the processor card is the spare card, use the value <i>spare</i>. If the processor card is the main card on a Multiservice Switch 7400 series node, use one of these values: <i>mainA</i>, <i>mainB</i>, <i>mainC</i>, or <i>mainD</i>. If the processor card is the main card on a Multiservice Switch 15000 or Multiservice Switch 20000 node, or an MSA32 FP or MSA8 FP of a Multiservice Switch 7400 node, use one of these values: <i>mainA</i>, <i>mainB</i>, <i>mainC</i>, <i>mainD</i>, <i>mainE</i>, or <i>mainF</i>.</p> <p>If the processor card is to be part of a one-for-one (1:1) sparing configuration using a one-for-one sparing panel, leave the attribute <i>sparingConnection</i> set to the default value notApplicable.</p>
<m>	is the slot number of the processor card. Multiservice Switch nodes number their slots starting at zero.



Configuring a port to use an SFP optical module

Configure a function processor (FP) port to use a small form-factor pluggable (SFP) optical transceiver module that is plugged into an optical module socket (port) on the faceplate.

Prerequisites

- When configuring the card, component *OpticalModule* is automatically added. The default is none. You must match the software port configuration to the type of inserted SFP module so that the port can operate.
- The port must be locked. For information on locking a port, see NN10600-050 *Nortel Multiservice Switch 7400/15000/20000 Command Reference*.
- When re-configuring the SFP module type for a port, change only the *OpticalModule* type.
- The description of what an SFP module is, the listed types of available SFPs, and the specific FPs that use them are identified in the chapter on processor cards in NN10600-120 *Nortel Multiservice Switch 15000/20000 Hardware Description*.
- When configuring an FP with cardtype 16pOC3PosAtm (NTHW44) to use Y-protection on a port, the only supported type of SFP module is *OC3Smlr*. The SFP modules with PEC NTTP02CD must be connected when this configuration is being entered. Since the NTHW44 supports more than one version of SFP module, you must ensure the appropriate ones are plugged into the ports that are to use Y-protection. The custom Y-splitter cables should already be made but not connected while the configuration occurs.
- You can display the operational status of a port by doing the procedure [Displaying the status of an installed SFP optical module \(page 69\)](#).
- Other FP configuration information is included in NN10600-551 *Nortel Multiservice Switch 7400/15000/20000 FP Configuration Reference*.

Procedure steps

Step	Action
------	--------

- | | |
|---|--|
| 1 | <p>Add the port.</p> <p>For a 4pGe FP (NTHW49), enter:</p> <pre>add Lp/<m> Ethernet/<p></pre> <p>For a 4pMRPosAtm (NTHW46) or 16pOC3PosAtm FP (NTHW44 or NTHW48), enter:</p> <pre>add Lp/<m> Sdh/<n></pre> |
|---|--|



or

add Lp/<m> Sonet/<n>

2 Set the type of SFP optical module.

For a 4pGe FP (NTHW49), enter:

set Lp/<m> Ethernet/<p> OpticalModule type <type>

For a 4pMRPosAtm (NTHW46) or 16pOC3PosAtm FP (NTHW44), enter:

set Lp/<m> Sdh/<n> OpticalModule type <type>

or

set Lp/<m> Sonet/<n> OpticalModule type <type>

--End--




Variable definitions

Variable	Value
<m>	The instance value for the logical processor (LP).
<n>	The instance value for the port.
<p>	The instance value for the Ethernet port.
<type>	One of the following types of optical module: <ul style="list-style-type: none"> • <i>OC3MmSr</i>, <i>OC3SmIr</i>, or <i>OC3SmLr</i> for an NTHW44 port • <i>OC3SmIr</i> for an NTHW44 port with an NTTP02CD when configuring the port for Y-protection • <i>OC12SmIr</i>, <i>OC12SmLr</i>, <i>OC48SmLr</i>, <i>OC48SmLr2</i>, or <i>OC48SmIr</i> for an NTHW46 port • <i>LX</i> or <i>SX</i> for an NTHW49 port • <i>none</i> for an FP that does not have SFP module sockets (ports) on its faceplate

Procedure job aid

SFP optical module component hierarchy

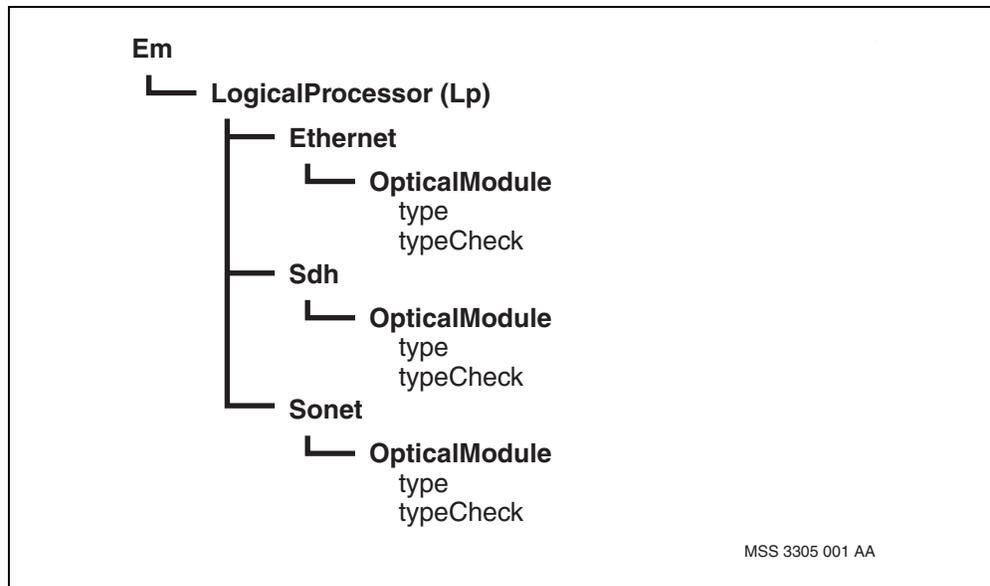



Configuring the fan alarm to recur

Configure the fan failure alarm 7012 0051 to recur every 8 hours when the alarm condition is not fixed within the interval.

Prerequisites

- Perform the following procedure in provisioning mode. For more information, see [Provisioning mode \(page 342\)](#).
- The attribute *repeatFanAlarm* is set to on or off by default depending on your software package.
- The 8-hour interval is fixed.

Procedure steps

Step	Action
1	Determine what the attribute for repeating the fan failure alarm is set at. query Shelf repeatFanAlarm
2	Set the attribute <i>repeatFanAlarm</i> to enable the fan alarm to recur. set Shelf repeatFanAlarm ON If you are using the CAS interface, use the command display Shelf repeatFanAlarm ON

--End--



Decommissioning an FP

Decommission an FP by removing it from a shelf slot and nullifying or changing that slot's configuration (provisioning) in preparation to install a blank processor card.

Prerequisites

- Perform the following procedure in provisioning mode. For more information, see [Provisioning mode \(page 342\)](#).
- Whether or not another card type is being deployed in the slot, nullify the existing software configuration by setting its attributes back to the defaults.

Procedure steps

Step	Action
1	Set the <i>cardtype</i> attribute to none. set Shelf Card/<m> cardType none
2	If the FP was configured as a spare card, delete the spare card for the LP. set Lp/<n> spareCard !
3	If the FP was configured as a main card, delete the LP and all associated services as described in the procedure Deleting an LP (page 167) .
4	Activate configuration changes. See Activating configuration changes (page 342) .

--End--

Variable definitions

Variable	Value
<m>	The slot number of the processor card you want to decommission. Nortel Multiservice Switch nodes number their slots starting at zero.
<n>	The number of the LP.



Displaying information about daughter cards on a Multiservice Switch 7400 processor card

Display information about daughter cards on a Nortel Multiservice Switch 7400 processor card to determine daughter card attributes such as type, memory size, and product equipment code.

Prerequisites

- Perform the following procedure in operational mode. For more information, see [Operational mode \(page 341\)](#).

Procedure steps

Step	Action
1	List all processor cards that have daughter cards: list Shelf Card/* DaughterCard/* The system displays a list of all daughter cards on all processor cards.
2	Display information about the daughter cards on a particular processor card: display Shelf Card/<m> DaughterCard/*
--End--	

Variable definitions

Variable	Value
<m>	The slot number of the processor card.



Displaying the memory capacity of a processor card

Display the memory capacity of a processor card to determine how much memory a processor card is using. When you set up sparing between CPs, both CPs must have the same amount of memory and disk space.

Procedure steps

Step	Action
------	--------

1	Display the memory capacity and utilization of a processor card. display Shelf Card/<m> capacity, utilization
---	---

--End--

Variable definitions

Variable	Value
<m>	The slot number of the processor card.



Displaying the status of an installed SFP optical module

Display the status of a mounted small-form pluggable (SFP) optical transceiver module to determine if it matches the software port configuration, and to confirm its operational status.

Prerequisites

- You need an optical FP that is configured to use an SFP optical module.
 - The 4-port MR POS and ATM (NTHW46) and 16-port OC-3/STM-1 POS and ATM (NTHW44) cards must have the component *sonet* or *sdh* configured.
 - The 4-port Gigabit Ethernet card (NTHW49) must have the component *ethernet* configured.
- Identify the PEC versions of all SFP modules that are available for the specific FP in NN10600-120 *Nortel Multiservice Switch 15000/20000 Hardware Description*.
- Whenever an FP that uses SFP modules is inserted into a slot, the ports (sockets) of its SFP module must be matched to the socket by following the procedure [Configuring a port to use an SFP optical module \(page 62\)](#).
- To get any status about an SFP module, it must be plugged into the socket on the FP faceplate. When an SFP is plugged into a powered FP, it is automatically tested for its ability to operate.
- Alarm 7011 5480 is generated to indicate the installed SFP module is not operating because:
 - it fails diagnostics after insertion
 - it mismatches the software configuration of the SFP module for the port
 - it is not an approved type or vendor
- When removing an SFP module, its port must be locked in software, as described in NN10600-550 *Nortel Multiservice Switch 7400/15000/20000 Common Configuration Procedures*. The status of the SFP is still provided when the port is locked.
- For information about the commands used in the following procedure, see NN10600-050 *Nortel Multiservice Switch 7400/15000/20000 Command Reference*.
- Perform the procedure steps in operational mode.

Procedure steps

Step	Action
------	--------



- 1 Display the status of the installed version of the SFP module for a port by entering one of the following:
display lp/<lp> ethernet/<e> OpticalModule
display lp/<lp> sdh/<s> OpticalModule
display lp/<lp> sonet/<s> OpticalModule
- 2 Ensure that the *insertedType* matches the capability of the PEC version that is labelled on the SFP module.
 - *OC3MmSr*, *OC3Smlr*, or *OC3SmLr* for an NTHW44
 - *OC12Smlr*, *OC12SmLr*, *OC48SmLr*, *OC48SmLr2*, or *OC48Smlr* for an NTHW46
 - *LX* or *SX* for an NTHW49
 - *none* for an FP that does not have SFP module sockets (ports) on its faceplate

When *insertedType* indicates *none* (the default), it means the card has not been configured, or the card does not have SFP module sockets.
- 3 When the *insertedType* indicates *typeMismatch*, either change the software configuration to match the installed module or use an appropriate module. You can query what type of SFP module is configured for the port by entering one of the following:
display -provisioned lp/<lp> ethernet/<e> OpticalModule
display -provisioned lp/<lp> sdh/<s> OpticalModule
display -provisioned lp/<lp> sonet/<s> OpticalModule
The configured type is one of the SFP modules in [step 2](#).
- 4 When *failureCause* indicates *internalError*, check for alarm 7011 5480. Do the remedial action of the alarm or replace the SFP module to restore signal throughput.
- 5 When *failureCause* indicates *absentOm*, install the SFP module so that an operational state can be indicated.
- 6 When *failureCause* indicates *unsupportedOm*, install an SFP module that is approved by Nortel Networks.
- 7 Confirm normal operation of the SFP module by observing these in the response:
 - *adminstate* = *unlocked*, which applies to the component *OpticalModule*; an SFP module can be enabled but not sending signals through because the port itself is locked
 - *operationalState* = *enabled*
 - *usageState* = *active* or *idle*
 - *insertedType* = one of the following:
none for the default for an FP without SFP module sockets



LX for the 1000BASE-LX for single-mode intermediate reach
SX for the 1000BASE-SX for multimode short reach
OC3MmSr for the multimode short reach
OC3SmIr for the single-mode intermediate reach
OC3SmLr for the single-mode long reach
OC12SmIr for the single-mode intermediate reach
OC12SmLr for the single-mode long reach
OC48SmLr for single-mode long reach
OC48SmLr2 for single-mode long reach (up to 80Km)
OC48SmIr for single-mode intermediate reach

- failureCause = noFailure

--End--

Variable definitions

Variable	Value
<lp>	The number of the logical processor for the card.
<s>	The number of the SONET or SDH port on the card. Use an asterisk (*) to display all the ports on a card.
<e>	The number of the Ethernet port on the card. Use an asterisk (*) to display all the ports on a card.



Locking a function processor

Lock a function processor (FP) to remove it from service.

Prerequisites

	<p>CAUTION Risk of service interruption for a LAPS configuration Other than up to 50 milliseconds of lost traffic due to a switchover in a line automatic protection switching (LAPS) dual-FP configuration, a service outage is possible if the command <i>switch laps</i> is not used to switch activity while the spare card is locked. For example, you might enter the command <i>lock</i> on a port on the active card while the spare card or port is locked. A service outage will occur because both the active and spare ports are locked. The command <i>switch laps</i> checks whether the spare is in-service and available before attempting the switchover. When the port or card is not available, this command prevents the switchover.</p>
--	--

- To ensure that the FP shuts down correctly, the associated LP must be unlocked when you lock the card.
- Review the information in [Considerations for locking processor cards \(page 301\)](#).
- Perform the following procedure in operational mode. For more information, see [Operational mode \(page 341\)](#).

Procedure steps

Step	Action
	<p>CAUTION Risk of service loss Forcing an active (in-service) FP into the locked state causes the FP to drop the traffic on the FP, depending on how equipment protection is configured for that FP. If the FP is unspared, all traffic is dropped. If the FP is a spared optical card, up to 50 milliseconds of traffic can be lost. If the FP is a spared electrical card, up to 100 milliseconds of traffic can be lost.</p>



	CAUTION
	Risk of shelf reset
	If you are locking an FP to remove it from the shelf, you must use the following command: lock -force Shelf Card/<m> If you do not use this command, the Multiservice Switch 7400/15000/20000 can reset when you remove the FP from the shelf.

1 Lock the FP using one of the following commands:

lock -force Shelf Card/<m>

or

lock Shelf Card/<m>

--End--

Variable definitions

Variable	Value
<m>	The slot number of the processor card.



Locking a port

Lock a port during maintenance procedures to remove it from service. Locking a port prevents the port from running the software defined in its logical processor.

Prerequisites

	<p>CAUTION</p> <p>Risk of service interruption for a LAPS configuration</p> <p>Other than up to 50 milliseconds of lost traffic due to a switchover in a line automatic protection switching (LAPS) dual-FP configuration, a service outage is possible if the command <i>switch laps</i> is not used to switch activity while the spare card is locked. For example, you might enter the command <i>lock</i> on a port on the active card while the spare card or port is locked. A service outage will occur because both the active and spare ports are locked. The command <i>switch laps</i> checks whether the spare is in-service and available before attempting the switchover. When the port or card is not available, this command prevents the switchover.</p>
--	--

- If you are unfamiliar with lock command concepts, see NN10600-050 *Nortel Multiservice Switch 7400/15000/20000 Command Reference*.
- Perform the following procedure in operational mode. For more information, see [Operational mode \(page 341\)](#).

Procedure steps

Step	Action
1	Lock the port using one of the following commands: <pre>lock Lp/<n> <port>/<p></pre> or <pre>lock -force Lp/<n> <port>/<p></pre>
--End--	

Variable definitions

Variable	Value
<n>	The instance number of the logical processor linked to the port.
(1 of 2)	



Variable	Value
<p>	The port number.
<port>	The port type.
(2 of 2)	



Preparing an active FP for being replaced

Prepare an active FP for being replaced as part of an upgrade, downgrade, or redeployment.

Prerequisites

- If you are unfamiliar with removing and replacing FPs, see [Considerations for replacing function processors \(page 303\)](#).
- For more information on the commands that are used in the following procedure, see NN10600-050 *Nortel Multiservice Switch 7400/15000/20000 Command Reference*.
- Perform the following procedure in operational mode. For more information, see [Operational mode \(page 341\)](#).

Procedure steps

Step	Action
1	<p>If the card was configured for LAPS, ensure that LAPS is not degraded. (For an electrical FP, skip this step.)</p> <p>display laps/* osiState</p> <p>Under <i>osiAvail</i>, determine if any LAPS has a status of <i>degraded</i>. If so, you must determine the cause of the degradation. For example, if the mate port is out of service, an active port can be degraded because it cannot be switched over to an out-of-service port. You must fix any degraded laps on either card before proceeding with this procedure.</p>
2	<p>Check all software alarms that are active on the node housing the FP being replaced. All alarms are described in NN10600-500 <i>Nortel Multiservice Switch 6400/7400/15000/20000 Alarms Reference</i>.</p> <p>For a spared FP, address the remedial action of any alarm indicating that the standby or mate FP is not available to take over the traffic of the active FP.</p> <p>For an unspared FP, consider the status of the far end and address the worst problem first.</p>
3	<p>If your site records indicate that the network was configured to back up the traffic of an unspared FP, removing the FP from service may cause the network to reroute far-end traffic away from the FP. For example, the configuration can have an intra-network card as opposed to an access card or have a node connected to two nodes to split services. PNNI links may have been set up to do this. If your site records indicate that one or more PNNI links pass through the FP, busy or lock each of those links at the far end.</p>
4	<p>Verify that the former standby card is now carrying traffic (is in service).</p> <p>display Shelf Card/* sps</p> <p>Record the slot number of the in-service LP.</p>



- 5 Remove the traffic from the active card to the standby card and block the system's access to the standby card.

lock -force Shelf Card/<m>

Whenever a card is locked, the alarm 7012 0100 is generated. Whenever a standby card is locked, the alarm 7054 0105 is generated.

Whether the card ports are configured as *unidirectional* or *bidirectional*, or as a *revertive* or *non-revertive* mode, the command *lock* handles all associated connections at the far end. For information about these attributes, refer to [Configuring line and equipment protection for Multiservice Switch 15000 and Multiservice Switch 20000 optical interfaces \(page 206\)](#).

- 6 Observe the status LED on the faceplate of the standby FP. When the switchover completes successfully, its LED cycles to solid green.

If the LED is other than solid green, the switchover did not occur. Contact your next level of support to determine your next step.

- 7 Verify that the former standby card is now carrying traffic (is in service).

display Shelf Card/* sps

Record the slot number of the in-service LP.

- 8 Observe the traffic on the active card to ensure it is flowing. Use appropriate test equipment to monitor the cell counts.

- 9 If the switchover did not occur, abort this procedure and refer to NN10600-520 *Nortel Multiservice Switch 7400/15000/20000 Fault and Performance Management: Troubleshooting* for diagnosing FPs.

- For FP fiber optic cards, if the active and standby LEDs on the faceplates do not swap within 50 milliseconds, the switchover may not occur.
- For FP cards with electrical interfaces (such as DS3s, E3s, or E1s), if the active and standby LEDs on the faceplates do not swap within 100 milliseconds, the switchover will not occur. Ensure also that the LED on the sparing panel faceplate for the Spare card is lit to indicate active traffic.

--End--

Variable definitions

Variable	Value
<m>	The slot number of the active card. For information about the command <i>lock</i> , see NN10600-050 <i>Nortel Multiservice Switch 7400/15000/20000 Command Reference</i> .



Displaying the status of a processor card

Display the status of a processor card whenever you want to display operational attributes such as *failureCause*, *sparingConnectionStatus*, or *currentLP*.

Prerequisites

- Perform the following procedure in operational mode. For more information, see [Operational mode \(page 341\)](#).

Procedure steps

Step	Action
1	Display the status of a particular processor card: <code>display Shelf Card/<m></code>
--End--	

Variable definitions

Variable	Value
<m>	The slot number of the processor card.



Re-enabling an LP

Re-enable an LP by using the unlock command if you have disabled an LP using the lock command.

Prerequisites

- Perform the following procedure in operational mode. For more information, see [Operational mode \(page 341\)](#).

Procedure steps

Step	Action
1	Unlock the LP: unlock lp/<n> After you unlock an LP, the LED status display light on its main processor card quickly pulses red while the software loads. Once the software is loaded, the processor card becomes enabled.
--End--	

Variable definitions

Variable	Value
<n>	The number of the LP.



Reinitializing a processor card

Reinitialize a processor card during maintenance or troubleshooting activities by resetting or restarting the card.

Prerequisites

	<p>CAUTION Risk of data loss</p> <p>When you reset or restart a processor card, it is temporarily unable to provide service. During the time that the processor card is restarting, data can be lost.</p>
---	---

	<p>CAUTION Risk of losing stable SVC connections</p> <p>When you reset or restart a processor card, a loss of switched virtual circuit (SVC) connections may occur. Although stable SVC calls should remain active in a redundant processor configuration, exercise caution when issuing this command.</p>
---	--

- Review the information in [Considerations for reinitializing a processor card \(page 303\)](#) if you are unfamiliar with reinitializing processor cards.
- Perform the following procedure in operational mode. For more information, see [Operational mode \(page 341\)](#).

Procedure steps

Step	Action
1	For a complete reinitialization, use the reset command: <code>reset Shelf Card/<m></code>
2	For a faster reinitialization, use the restart command: <code>restart Shelf Card/<m></code>
3	If you want to reset all the processor cards, use the reset command to reset the shelf: <code>reset Shelf</code>

--End--



Variable definitions

Variable	Value
<m>	The slot number of the processor card.



Removing from service a failed FP

Confirm a function processor (FP) has already been automatically removed from service by the system due to a failure, and lock it to prevent the software from trying to use it when a replacement FP is inserted. This applies to any FP.

Prerequisites

- If you are unfamiliar with removing FPs from service, see [Considerations for replacing function processors \(page 303\)](#).
- Perform the following procedure in operational mode. For more information, see [Operational mode \(page 341\)](#).

Procedure steps

Step	Action
1	Confirm the card is out of service. display Shelf Card/<m> If the <i>operationalState</i> indicates <i>disabled</i> , the card is out-of-service.
2	Lock the out-of-service card to prevent the system from trying to use it when the replacement is inserted. Refer to Locking a function processor (page 72) .
3	Return immediately to NN10600-130 <i>Nortel Multiservice Switch 15000/20000 Hardware Installation, Maintenance, and Upgrade</i> to replace the out-of-service FP.
4	When the system automatically removes a card from service. Examine the test results to determine why the card was removed from service by the system. Query commands of FP test results are described in NN10600-520 <i>Nortel Multiservice Switch 7400/15000/20000 Fault and Performance Management: Troubleshooting</i> .

--End--



Variable definitions

Variable	Value
<m>	<p>The slot number of the standby card determined in this procedure. For information about the command <i>lock</i>, see NN10600-050 <i>Nortel Multiservice Switch 7400/15000/20000 Command Reference</i>.</p> <p>Whenever a card is locked, the alarm 7012 0100 is generated. Whenever a standby card is locked, the alarm 7054 0105 is generated. The alarms are described in NN10600-500 <i>Nortel Multiservice Switch 6400/7400/15000/20000 Alarms Reference</i>.</p>



Removing from service a standby electrical FP

Remove from service a standby electrical function processor (FP) such as DS1, DS3, E1, or E3 before you remove the FP from a shelf.

Prerequisites

- If you are unfamiliar with removing FPs from service, see [Considerations for replacing function processors \(page 303\)](#).
- Perform the following procedure in operational mode. For more information, see [Operational mode \(page 341\)](#).

Procedure steps

Step	Action
1	Identify and record the software level or PCR that is running in the node containing the standby FP. You will need it to label the PCR onto the faceplate of the card. <code>display software avl</code>
<hr/> Attention: The response indicates the configured (provisioned) software that is running through the node, not the software that might be loaded on the inactive CP. When removing a card for re-deployment or repair, it is important to know what version of software was running on it. <hr/>	
2	Block the standby card and ports from being put into service. <code>lock -force Shelf Card/<m></code>
3	If you are doing this procedure to replace an FP, return immediately to NN10600-130 <i>Nortel Multiservice Switch 15000/20000 Hardware Installation, Maintenance, and Upgrade</i> .

--End--



Variable definitions

Variable	Value
<m>	<p>The slot number of the standby card determined in this procedure. For information about the command <i>lock</i>, see NN10600-050 <i>Nortel Multiservice Switch 7400/15000/20000 Command Reference</i>.</p> <p>Whenever a card is locked, the alarm 7012 0100 is generated. Whenever a standby card is locked, the alarm 7054 0105 is generated. The alarms are described in NN10600-500 <i>Nortel Multiservice Switch 6400/7400/15000/20000 Alarms Reference</i>.</p>



Removing from service an optical FP configured with LAPS

Remove from service an optical function processor (FP) that is configured for line automatic protection switching (LAPS) in a Nortel Multiservice Switch 15000 or Multiservice Switch 20000 node before removing the card.

Prerequisites

- If you are unfamiliar with removing FPs from service, see [Considerations for replacing function processors \(page 303\)](#).
- Identify from your site records whether any private network-to-network (PNNI) links pass through either of the FP pair. The procedure will indicate when to remove the PNNI links from service.
- An FP that supports only intra-card LAPS (single-FP LAPS) has port-to-port sparing on the same card. For this configuration, follow the procedure [Removing from service an unspared FP \(page 90\)](#).
- Perform the following procedure in operational mode. For more information, see [Operational mode \(page 341\)](#).

Procedure steps

Step	Action
1	Identify and record the software level or PCR that is running in the node containing the FP. You will need it to label the PCR onto the faceplate of the card. display software avl
Attention: The response indicates the configured (provisioned) software that is running through the node, not the software that might be loaded on the inactive CP. When removing a card for re-deployment or repair, it is important to know what version of software was running on it.	
2	Verify that the card supports LAPS. display -p laps/* If the card was configured for LAPS, the response will indicate a status of the working and protection lines for the card pair you plan to work on.
3	For dual-FP LAPS, there can be ports providing service (active) on both cards so there is no card with a standby status. Identify which card was originally designated as the standby card by entering the command: display Shelf Card/* sps The value under <i>Card</i> in the response is the slot number. Under <i>osiStby</i> , the value <i>serv</i> means that the card is active while <i>hot</i> means that the card is the hot standby.



- 4 Identify which SONET lines are providing service (as opposed to being on hot standby).

display laps/* nearendrxactiveline

The lines with status *working* are providing service while the lines with *protec* are on hot standby. When *nearEndRequest* indicates

- *signalFailure* it usually means a cable has been cut
- *signalDegrade* it usually means a bit error
- *forcedSwitch* it means a manual switchover was invoked and the mate port is not available

- 5 Ensure that LAPS is not degraded.

display laps/* osiState

Under *osiAvail*, determine if any LAPS has a status of *degraded*. If so, you must determine the cause of the degradation and fix it on the card before continuing this procedure. Record all port numbers that are degraded then refer to the NN10600-520 *Nortel Multiservice Switch 7400/15000/20000 Fault and Performance Management: Troubleshooting* to do the task for determining FP problems with the procedure on determining the cause of degraded LAPS. Return to this procedure when the degradations are fixed.



CAUTION

Risk of service interruption from a degraded LAPS

You must determine the cause of each degraded LAPS port because a switchover to one means it can remain out of service longer than 50 milliseconds.

- 6 When removing the card from service for an upgrade or a redeployment (as opposed to a failure), ensure that traffic is running on the mate FP, using [step 7](#) through [step 8](#). If traffic is not running on the mate before the removal, it is unlikely traffic will run on the replacement FP after the return to service.

- 7 Verify that the services are unlocked and enabled and that there are no unexpected alarms.

d <service>/*

- 8 Verify that all connections are up and passing traffic and that there are no signalling alarms.

d -o -c <service>/* <connection>/*

For example:

d -o -c atmif/* vcc/*

d -o -c fruni/* dlci/*

- 9 Check all software alarms that are active on the node housing the FP being replaced. Address the remedial action of any alarm involving equipment or software for the FP being replaced.



- 10 Prepare the far-end ports for the near-end ports being removed from service. This step applies to any FP.
- 11 If your site records indicate that you have at least one PNNI link passing through the FP to be removed from service, you must first busy or lock the PNNI link at the far end to remove it from service. At the facility level of operation, as opposed to the service level, move the PNNI traffic off the target FP to its mate by following the procedure [Switching SONET line protection to the mate FP \(page 96\)](#).



CAUTION
Risk of service interruption for a LAPS configuration

Other than up to 50 milliseconds of lost traffic due to a switchover in a line automatic protection switching (LAPS) dual-FP configuration, a service outage is possible if the command *switch laps* is not used to switch activity while the spare card is locked. For example, you might enter the command *lock* on a port on the active card while the spare card or port is locked. A service outage will occur because both the active and spare ports are locked. The command *switch laps* checks whether the spare is in-service and available before attempting the switchover. When the port or card is not available, this command prevents the switchover.

- 12 Remove any traffic from the ports on the near-end target card to the mate card and block the target card and ports from being put into service.

lock -force Shelf Card/<m>

When the dual-FP LAPS configuration involves 16-port OC-3/STM-1 cards, you must use the command *lock -force* on the card instead of the command *switch laps*. Otherwise the completion of the switchover can take days or be indefinite.

Whether the card ports are configured as *unidirectional* or *bidirectional*, or as a *revertive* or *non-revertive* mode, the command *lock* handles all associated connections. For information about these attributes, refer to [Configuring line and equipment protection for Multiservice Switch 15000 and Multiservice Switch 20000 optical interfaces \(page 206\)](#).
- 13 Observe the traffic on the active card to ensure it is flowing. Use appropriate test equipment to monitor the cell counts.
- 14 If the switchover did not occur, abort this procedure and refer to NN10600-520 *Nortel Multiservice Switch 7400/15000/20000 Fault and Performance Management: Troubleshooting* for diagnosing FPs. For FP fiber optic cards with LAPS, if the active (target) and standby (mate) LEDs on the faceplates do not swap within 50 milliseconds, the switchover may not occur.

--End--



Variable definitions

Variable	Value
<connection>	The type of connection for a particular service. For example, vcc for atm or dci for FrUni.
<m>	<p>The slot number of the standby card configured in this procedure. For information about the command <i>lock</i>, see NN10600-050 <i>Nortel Multiservice Switch 7400/15000/20000 Command Reference</i>.</p> <p>Whenever a card is locked, the alarm 7012 0100 is generated. Whenever a standby card is locked, the alarm 7054 0105 is generated. The alarms are described in NN10600-500 <i>Nortel Multiservice Switch 6400/7400/15000/20000 Alarms Reference</i>.</p>
<service>	The service running on a particular card. For example, atmif or FrUni.



Removing from service an unspared FP

Remove an unspared (unprotected) function processor (FP) from service before removing the FP from the shelf.

Prerequisites

- If you are unfamiliar with removing FPs from service, see [Considerations for replacing function processors \(page 303\)](#).
- Identify from your site records whether any private network-to-network (PNNI) links pass through the FP. The procedure will indicate when to remove the PNNI links from service.
- Perform the following procedure in operational mode. For more information, see [Operational mode \(page 341\)](#).

Procedure steps

Step	Action
1	<p>Identify and record the software level or PCR that is running in the node that has the standby FP.</p> <pre>display software avl</pre> <p>The response indicates the configured (provisioned) software that is running through the node, not the software that might be loaded on the inactive CP. When removing a card for re-deployment or repair, it is important to know what version of software was running on it. Label the PCR onto the faceplate.</p>
2	<p>Typically, when an unspared FP is removed from service, all traffic to that FP is dropped.</p>

	<p>CAUTION Risk of service interruption</p> <p>When an unspared card is removed from service either manually or automatically by the system (for example, by the command <i>lock</i>), all traffic to the card is dropped. If you must remove an in-service card from service, ensure that you do it during a period of lowest traffic for that card, and you do not delay inserting the replacement card.</p>
---	--

- 3 Check all software alarms that are active on the node housing the FP being replaced. Address the remedial action of any alarm indicating that the standby or mate FP is not available to take over the traffic of the active FP.
- If your site records indicate that the network was configured to back-up the traffic of an unspared FP, removing the FP from service may cause the network to reroute far-end traffic away from the FP. For example, the configuration can have an intra-network card as opposed to an access card or have a node connected to two nodes to split services. PNNI links may



have been set up to do this. If your site records indicate that one or more PNNI links pass through the FP, busy or lock each of those links at the far end.

- 4 Prevent a node reset by entering the command:

lock -force Shelf Card/<m>

Whenever a card is locked, the alarm 7012 0100 is generated. Whenever a standby card is locked, the alarm 7054 0105 is generated. The alarms are described in NN10600-500 *Nortel Multiservice Switch 6400/7400/15000/20000 Alarms Reference*.

For a VSP3 card, do not lock the gigabit Ethernet ports.

- 5 If you are doing this procedure to replace an FP, return immediately to NN10600-130 *Nortel Multiservice Switch 15000/20000 Hardware Installation, Maintenance, and Upgrade* to replace the out-of-service FP.

If you are doing this procedure to test an FP, return immediately to NN10600-520 *Nortel Multiservice Switch 7400/15000/20000 Fault and Performance Management: Troubleshooting*.

--End--

Variable definitions

Variable	Value
<m>	The slot number of the card. For information about the command <i>lock</i> , see NN10600-050 <i>Nortel Multiservice Switch 7400/15000/20000 Command Reference</i> .



Returning an FP to service

After inserting the replacement FP into its slot, return the FP to service.

Prerequisites

- If you are unfamiliar with removing FPs from service, see [Considerations for replacing function processors \(page 303\)](#).
- Monitor for alarms generated against the equipment that the FP connects to. While the replaced FP is returning to service, alarms generated for linked equipment can help indicate the progressive operation of the replaced FP, and the status of connected equipment. All alarms are described in *NN10600-500 Nortel Multiservice Switch 6400/7400/15000/20000 Alarms Reference*.
- Perform the following procedure in operational mode. For more information, see [Operational mode \(page 341\)](#).

Procedure steps

Step	Action
1	Verify that the replacement FP is appropriate for the software configuration of the slot by doing the procedure Comparing the card type of a mounted card and its configured slot (page 59) .
2	<p>While the replacement FP is inserted and out of service, test each port according to the type of FP as described in <i>NN10600-520 Nortel Multiservice Switch 7400/15000/20000 Fault and Performance Management: Troubleshooting</i>. This is optional.</p> <p>If the replacement card is a 4-port DS3, see also <i>NN10600-130 Nortel Multiservice Switch 15000/20000 Hardware Installation, Maintenance, and Upgrade</i> about changing the FP configuration for a replacement card.</p>
3	As required, return to service any equipment that is involved in the port connection up to the far-end termination. If the equipment is other than Nortel Multiservice Switch equipment, it will also have to be unlocked. Since the FP is still locked, Multiservice Switch system and far-end alarms will still be generated.
4	<p>After port testing passes, unlock the FP so that it can return to service.</p> <p>unlock Shelf Card/<m></p> <p>Whenever a card is unlocked, the alarm 7012 0100 is generated. Whenever a standby card is unlocked, the alarm 7054 0105 is generated.</p> <p>Wait until the cycling of the LEDs ends at fast flashing green. If the LED stays solid red after loading is attempted, the card is an incompatible vintage or was previously loaded with software that is incompatible with the current software running on the node. Use a compatible card. If the LED is other</p>



than green, see NN10600-120 *Nortel Multiservice Switch 15000/20000 Hardware Description*, the section describing the status LEDs of an FP.

- 5 If the FP was re-configured identify if the type of FP, or any of the changed services, requires an FP reset.

- 6 A switchback to make the newly replaced card the active card again is optional for optical FPs and electrical FPs in one-for-one equipment protection. A switchback is necessary for an electrical FP that is configured in one-for-n equipment protection because the FP designated as the Spare must be the standby card for all the cards in the same equipment protection group.

If the attribute *revertive* is enabled, the FP that was originally configured as the active card will automatically be made active again (unless it already is) after the minimum 5-minute timeout. A longer timeout is user-defined. Switchback behavior depends on the type of card.

Otherwise, to make the replaced Main card active again, do the procedure [Switching between active and standby processor cards \(page 95\)](#).

- 7 Test the card according to its type as described in NN10600-520 *Nortel Multiservice Switch 7400/15000/20000 Fault and Performance Management: Troubleshooting*.

For a VSP3 card, if its gigabit Ethernet ports were cabled, the ports are not to be locked in software and the card can be tested only while in-service. The first Ethernet port to return to service becomes the active port if both ports were configured to spare each other.

- 8 Ensure that the spared services on the FP are up and running. For a spared fiber optic card, check that LAPS is not degraded.

```
display Shelf Card/* sps
```

For an unspared card, check that the status of the logical processor (LP) is working.

```
display lp/<n>
```

Verify that the services are unlocked and enabled and that there are no unexpected alarms.

```
d <service>/*
```

Verify that all connections are up and passing traffic and that there are no signalling alarms.

```
d -o -c <service>/* <connection>/*
```

For example:

```
d -o -c atmif/* vcc/*
```

```
d -o -c fruni/* dlci/*
```

- 9 If so configured, ensure that LAPS on the FP is operating normally.

```
display laps/*
```



- 10 If so configured, ensure that the SONET and SDH ports on the FP are operating normally.

display lp/* son/*

display lp/* sdh/*

Confirm that the port associated with the fixed line is operating.

- 11 Check for alarms indicating a problem with the newly replaced FP. If you detect unexpected alarms indicating:

- at least one disabled LAPS line
- an STS alarm on an optical card
- a port alarm on an electrical card

Contact your next level of Nortel Networks technical support to determine your course of action.

- 12 While the FP is returning to service, verify that:

- the Tx and Rx connections continue to increase
- there are no cell mis-insertions
- PVC connections are OK
- SVC and SPVC connections are OK

Otherwise, contact your next level of Nortel Networks technical support.

- 13 Determine if alarms have been generated for any equipment that is linked to the Nortel Multiservice Switch node housing the replaced FP. Alarms for linked nodes provide more status information about the operation of the replaced.

- 14 Return to service any disabled non-Multiservice Switch far-end equipment and verify in-service throughput. This includes unlocking or returning to service any PNNI links that were removed from service.

- 15 Soak the card according to your site requirements.

--End--

Variable definitions

Variable	Value
<m>	The slot number of the processor card.
<n>	The number of the LP. Note the LP number of the in-service card.



Switching between active and standby processor cards

Change between the active and standby processor cards in a sparing configuration using the *switchover Lp* command.

Prerequisites

	<p>CAUTION Risk of service loss A CP switchover can result in loss of service. See Understanding CP equipment sparing (page 247) for more information.</p> <p>If the FP is a spared optical card, up to 50 milliseconds of hot spared services can be lost. If the FP is a hot spared electrical card, up to 100 milliseconds of hot spared services can be lost. Hot sparing applies only to the Multiservice Switch 15000 and the Multiservice Switch 20000.</p>
--	--

- You can also schedule a switchover for a later time and cancel a scheduled switchover. You cannot schedule a switchover for the CP, that is, Lp/0.
- Perform the following procedure in operational mode. For more information, see [Operational mode \(page 341\)](#).

Procedure steps

Step	Action
1	<p>Immediately change from the active to the standby processor card:</p> <p>switchover Lp/<n></p> <p>A switchover of Lp/0 causes a temporary loss of connectivity until the other CP becomes active.</p>
--End--	

Variable definitions

Variable	Value
<n>	The number of the LP.



Switching SONET line protection to the mate FP

Change SONET line protection to the mate FP to remove traffic on the active SONET line (working or protection) away from the FP you want to replace. You must complete this procedure before locking the SONET ports on the FP to be replaced to ensure there is no impact to services. This is a facility-level procedure as opposed to a service-level procedure.

Prerequisites

- This procedure applies only to the Nortel Multiservice Switch 15000 or a Multiservice Switch 20000. You cannot do optical card switchovers on a Multiservice Switch 7400.
- The sparing arrangement must provide an FP card which is the mate for the FP to be replaced. These are pairs of cards in adjacent slots (that is, slots 2 and 3, slots 4 and 5, slots 6 and 7) up to and including slots 14 and 15.
- Refer to the Network Specification Book to determine which SONET ports are configured on the FP to be replaced.

Procedure steps

Step	Action
1	Display all instances of LAPS currently operating on the node: display -p laps/* Record all of the LAPS instances operating on the FP to be replaced.
2	Determine if there are active SONET lines operating on the FP to be replaced: display laps/<m> nearEndRxActiveLine Record the LAPS instances displayed under <i>neRxLine</i> .
3	Remove the active SONET lines from the LP to be replaced, to the <i>hotStandby</i> LP. If the active SONET line is the protection line on the FP to be replaced: switch -protectionToWorking Laps/<m> If the active SONET line is the protection line on the FP to be replaced: switch -workingToProtection Laps/<m>

--End--



Variable definitions

Variable	Value
<m>	The number of the LAPS instance on the FP to be replaced.
<n>	The number of the LP associated with the FP to be replaced.
<o>	The number of the SONET ports configured on the LP to be replaced.
<p>	The number of the SONET ports configured on the LP located on the far-end Nortel Multiservice Switch node.



Temporarily disabling an LP

Disable an LP using the lock command to prevent it from running the software configuration defined in its LPT. Since a locked LP cannot run its software, it is disabled.

Prerequisites

- If you are unfamiliar with the concepts relating to locking LPs, see [Locking and disabling LPs \(page 275\)](#) for information.
- Perform the following procedure in operational mode. For more information, see [Operational mode \(page 341\)](#).

Procedure steps

Step	Action
1	Lock the LP using one of the following commands: <code>lock Lp/<n></code> <code>lock -force Lp/<n></code>
--End--	

Variable definitions

Variable	Value
<n>	The number of the LP. You cannot lock Lp/0 (the CP).



Unlocking a function processor

Unlock a function processor (FP) using the *unlock* command if you have locked the card by using the *lock* command or the *lock* command with the *force* option.

After you unlock an FP in a Nortel Multiservice Switch 7400 node, it loads and starts running its logical processor (if defined). After you unlock an FP in a Multiservice Switch 15000 or Multiservice Switch 20000 node, it restarts its logical processor (if defined).

Prerequisites

Perform the following procedure in operational mode. For more information, see [Operational mode \(page 341\)](#).

Procedure steps

Step	Action
1	Unlock the FP. <code>unlock Shelf Card/<m></code>

--End--

Variable definitions

Variable	Value
<m>	The slot number of the processor card.



Unlocking a port

Unlock a port after you have completed maintenance procedures to return it to service. Unlocking a port allows the port to run the software defined in its logical processor.

Prerequisites

- If you are unfamiliar with lock command concepts, see NN10600-050 *Nortel Multiservice Switch 7400/15000/20000 Command Reference*.
- Perform the following procedure in operational mode. For more information, see [Operational mode \(page 341\)](#).

Procedure steps

Step	Action
1	Restore service to the port: <code>unlock Lp/<n> <port>/<p></code>

--End--




Variable definitions

Variable	Value
<n>	The instance number of the logical processor linked to the port.
<p>	The port number.
<port>	The port type.

Procedure job aid

Port test components and attributes

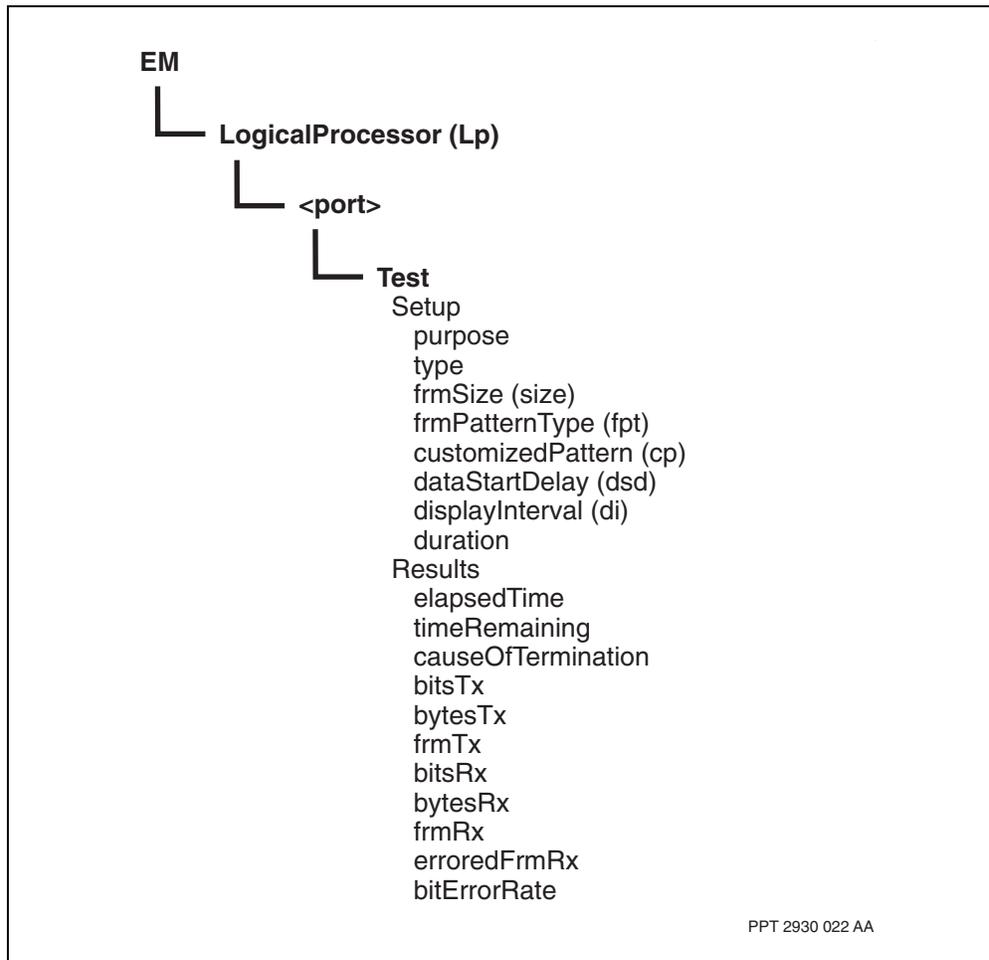



Control processor procedures

Based on your network or nodal requirements, specific control processors configurations may be required. For procedures common to both control and function processors, see [Common processor card procedures \(page 57\)](#).

- [Prerequisites to control processor procedures \(page 102\)](#)
- [Navigation \(page 102\)](#)

Prerequisites to control processor procedures

- The procedures in this section assume that the control processor are configured using the procedures in [Common processor card procedures \(page 57\)](#).

Navigation

- [Disabling and enabling hot standby for CP switchover \(page 104\)](#)
- [Locking external timing ports \(page 105\)](#)
- [Unlocking external timing ports \(page 106\)](#)
- [Configuring CP equipment sparing \(page 107\)](#)
- [Changing the CP equipment protection mode \(page 109\)](#)
- [Adding a spare CP to a single-CP node \(page 111\)](#)
- [Removing a spare CP \(page 113\)](#)
- [Replacing a CP in a single-CP node \(page 115\)](#)
- [Replacing a CP using a donor node and backup \(page 117\)](#)
- [Reconfiguring a donor CP \(page 119\)](#)
- [Replacing a CP using a donor node only \(page 121\)](#)
- [Replacing a CP using a backup only \(page 123\)](#)
- [Replacing a CP without a donor node or backup \(page 125\)](#)
- [Replacing a CP in a two-CP node \(page 126\)](#)
- [Upgrading a CP2 to a CP3 in a single-CP node \(page 128\)](#)
- [Upgrading a CP2 to a CP3 in a two-CP node \(page 129\)](#)



- [Upgrading from CP \(NTNQ01AA\) to CP with BITS and SETS \(NTNQ03BA\) \(page 133\)](#)
- [Upgrading from CP with BITS \(NTNQ03AA\) to CP with BITS and SETS \(NTNQ03BA\) \(page 134\)](#)
- [Downgrading a CP3 to a CP2 \(page 132\)](#)

If you want to upgrade, downgrade, add, or replace a Nortel Multiservice Switch 7400 CP, see the following task flows NN10600-175 *Nortel Multiservice Switch 7400 Hardware Installation, Maintenance, and Upgrade*:

- To upgrade from a CP (NTNQ01) to a CP-with-BITS (NTNQ03) to introduce external timing capability, or downgrade if you no longer want to use a BITS source as a reference for network synchronization, see “Control processor upgrade.”
- To add a second CP to a Nortel Multiservice Switch 7440 node, see “Control processor addition.”
- To replace a failed CP, see “Failed control processor replacement.”



Disabling and enabling hot standby for CP switchover

Use hot standby for CP switchover to allow FPs running services that support it to continue operating without interruption during a CP switchover. By default, hot standby for CP switchover is enabled. When hot standby for CP switchover is disabled, cold standby for CP switchover is still available.

The standards from the Open Standards Interface (OSI) group use different terminology when referring to standby modes. When you display the *standbyStatus* attribute for the CP LP (Lp/0), it reports *notSet* for both standby modes.

Prerequisites

- Hot standby for CP switchover does not support the removal of the active CP. Removing the active CP causes unexpected behavior on the bus of a Nortel Multiservice Switch 7400 node, or the fabric of Multiservice Switch 15000 and Multiservice Switch 20000 nodes. It can cause all processor cards to reset.
- Do the following procedure in provisioning mode. For more information, see [Provisioning mode \(page 342\)](#).

Procedure steps

Step	Action
1	<p>If you want to enable hot standby for a CP switchover, delete the noHitlessCpSwitch feature:</p> <pre>set Sw Lpt/CP featureList ~noHitlessCpSwitch</pre> <p>When the noHitlessCpSwitch feature is not on the feature list of the CP LPT, hot standby for a CP switchover is enabled.</p>
2	<p>If you want to disable hot standby for CP switchover, add the noHitlessCpSwitch feature:</p> <pre>set Sw Lpt/CP featureList noHitlessCpSwitch</pre> <p>When the noHitlessCpSwitch feature is on the feature list of the CP LPT, hot standby for CP switchover is disabled.</p>

--End--



Locking external timing ports

Lock external timing ports to cause the system to change to the standby timing reference.

Prerequisites

- Do the following procedure in operational mode. For more information, see [Operational mode \(page 341\)](#).

Procedure steps

Step	Action
1	Find out which external timing ports are in use. <code>display lp/0 *</code>
2	Lock the external timing ports. <code>lock lp/0 <external_port>/0</code> <code>lock lp/0 <external_port>/1</code>

--End--

Variable definitions

Variable	Value
<external_port>	EDS1 (for DS1 lines) or EE1 (for E1 lines).



Unlocking external timing ports

Unlock external timing ports to enable the system to use the BITS source for network synchronization.

Prerequisites

- Replacing a BITS termination panel does not require a shelf reset. Network synchronization will return to the BITS source automatically, if it is provisioned as the reference source.
- Do the following procedure in operational mode. For more information, see [Operational mode \(page 341\)](#).

Procedure steps

Step	Action
1	Find out which external timing ports are in use. <code>display lp/0 *</code>
2	Unlock the external timing ports. <code>unlock lp/0 <external_port>/0</code> <code>unlock lp/0 <external_port>/1</code>

--End--

Variable definitions

Variable	Value
<external_port>	EDS1 (for DS1 lines) or EE1 (for E1 lines).



Configuring CP equipment sparing

Set up sparing between processor cards to ensure that in the event of a CP failure, a backup card is available to support node operations. Configure a spare CP manually if one was not previously configured using the StartUp utility.

Prerequisites

- In you are unfamiliar with CP sparing concepts, see [Understanding CP equipment sparing \(page 247\)](#).
- For Nortel Multiservice Switch 15000 and Multiservice Switch 20000 nodes, the main CP is in slot 0, while the spare CP is in slot 1. Ensure the main CP and the spare CP are of the same type by verifying that the first 6 characters of their product engineering codes (PECs) are identical. As well, the amount of memory and disk space must be the same.

Procedure steps

Step	Action
1	Verify that you have a second CP in your node. display Shelf Card/* insertedCardType If you do not have a second CP, ask the hardware installer to install one and see Adding a spare CP to a single-CP node (page 111) for information on how to configure it.
2	Specify the main CP. set LogicalProcessor/0 mainCard Shelf Card/<m>
3	Specify the spare CP. set LogicalProcessor/0 spareCard Shelf Card/<n>
4	Verify that you have correctly configured CP equipment sparing. display LogicalProcessor/0
5	Activate the configuration changes. See Activating configuration changes (page 342) .
6	Synchronize the new standby disk with the active disk. synchronize FileSystem When the synchronization is complete, an alarm appears to indicate that the file system is now synchronized.

--End--



Variable definitions

Variable	Value
<m>	The slot number of the main card. Multiservice Switch nodes numbers its slots starting at 0. The main CP is in slot 0.
<n>	The slot number of the spare card. Multiservice Switch nodes number their slots starting at 0. The main CP is always in slot 0. In Multiservice Switch 15000 and Multiservice Switch 20000 nodes, the spare CP is in slot 1. In a Multiservice Switch 7400 node, the spare CP is in the last slot of the shelf.



Changing the CP equipment protection mode

Change the CP equipment protection mode to enable hot CP switchover (CPSO) capabilities. When CP equipment protection is enabled (hot), CP based services can provide warm or hot CP switchover capabilities. Hot CP equipment protection also allows a CP switchover to the current view.

Prerequisites

- If you are unfamiliar with CP sparing concepts, see [Understanding CP equipment sparing \(page 247\)](#).
- If hot CP standby is enabled (hot), then the *maxNumberJournalFiles* attribute in *ProvisioningSystem* must be enabled by setting it to a value other than none. See the following note for additional information on support of CPSO and hitless software migration (HSM) by the *maxNumberJournalFiles* attribute of the *Prov* component.

Attention: The *maxNumberJournalFiles* attribute specifies the maximum number of journal files that can be saved. A value of none specifies that journaling is disabled, while any other value specifies that journaling is enabled. The *Shelf cpEquipmentProtection* attribute must be set to cold when the *maxNumberJournalFiles* attribute is set to none.

The value of the *maxNumberJournalFiles* attribute must be greater than the value of the *Prov currentJournal operational* attribute. If it is not, the resulting impact is that journal log file saving becomes operationally disabled. A critical alarm with index 7000 0037 is also raised against the *Prov* component. A Commit Prov command would need to be entered to re-enable journaling.

The operator may want to set the *maxNumberJournalFiles* attribute to be less than the default value of 2000 in order to force a *Commit Prov* command to be entered more frequently. If a switch reset to the committed view occurs, the *Restore Prov* command may take less time to complete in this case, since there are fewer journal log files to load and activate.

- The standby CP will restart when the *cpEquipmentProtection* attribute is changed from cold to hot and hot to cold.
- Do this procedure in [Provisioning mode \(page 342\)](#).

Procedure steps

Step	Action
1	Modify the CP equipment protection mode. set Shelf cpEquipmentProtection <cpEquipmentProtection>



Attention: Setting the attribute *cpEquipmentProtection* to a value of *Hot* may require the command *commit prov* to be entered. The command *commit prov* commits the view during a hitless software migration to get the spare CP to a hot standby state. For hitless software migration procedures, see NN10600-272 *Nortel Multiservice Switch 7400/15000/20000 Upgrading Software*.

- 2 Complete the configuration changes. See [Activating configuration changes \(page 342\)](#).
-

--End--

Variable definitions

Variable	Value
<cpEquipmentProtection>	Hot (CP equipment protection is enabled) or cold (CP equipment protection is disabled).



Adding a spare CP to a single-CP node

You must configure a spare CP only if you are installing a second CP on a node that has only a single CP. Once you have configured the spare CP, you do not need to reconfigure it to replace the spare CP. For information on replacing a CP, see [Replacing a CP in a two-CP node \(page 126\)](#).

If you no longer want to use a spare CP, you must physically remove the spare CP, then delete its configuration. See [Removing a spare CP \(page 113\)](#) for more information.

Prerequisites

- If you are unfamiliar with CP sparing in a single-CP node, see [Considerations for adding a spare CP to a single-CP node \(page 251\)](#).
- Do the following procedure in provisioning mode. For more information, see [Provisioning mode \(page 342\)](#).

Procedure steps

Step	Action
1	Show which cards are currently configured. display Shelf Card/*
2	If the card does not already exist, add it to the shelf. add Shelf Card/<m>
3	Specify CP as the type of processor card. set Shelf Card/<m> cardType <c>
4	Set the <i>spareCard</i> attribute. set Lp/0 spareCard Shelf Card/<m>
5	Complete the configuration changes. See Activating configuration changes (page 342) .
6	Insert a new CP in the spare CP slot. Multiservice Switch 15000 and Multiservice Switch 20000 nodes designate slot 1 for the spare CP. In Multiservice Switch 7400 nodes, the spare CP is located in the last slot of the shelf. See NN10600-130 <i>Nortel Multiservice Switch 15000/20000 Hardware Installation, Maintenance, and Upgrade</i> or NN10600-175 <i>Nortel Multiservice Switch 7400 Hardware Installation, Maintenance, and Upgrade</i> for information on physically installing a CP.
7	After the second CP starts (its status LED is flashing green), verify that the disks on both CPs are available. list Fs Disk/*



Two instances of the *Disk* component appear, one for each CP.

- 8 Synchronize the new standby disk with the active disk.

synchronize Fs

When the synchronization is complete, an alarm indicates that the file system is now synchronized.

--End--

Variable definitions

Variable	Value
<C>	The card type (<i>CP</i> , <i>CPeD</i> , or <i>CPeE</i>).
<m>	The slot number of the spare CP. Multiservice Switch 15000 and Multiservice Switch 20000 nodes designate slot 1 for the spare CP. In Multiservice Switch 7400 nodes, the spare CP is located in the last slot of the shelf.



Removing a spare CP

Remove a spare CP to disable CP redundancy. When you remove a spare CP to disable CP redundancy, you must also delete its configuration.

Prerequisites

- Do the following procedure in operational mode. For more information, see [Operational mode \(page 341\)](#).

Procedure steps

Step	Action
1	Determine which CP is currently active. display Lp/0 mainCardStatus, spareCardStatus If the <i>mainCardStatus</i> attribute has a value of <i>active</i> , the main CP is active. If the <i>spareCardStatus</i> attribute has a value of <i>active</i> , the spare CP is active.
2	If the spare CP is active, change the CPs so that the main CP is active. switchover Lp/0
<hr/> Attention: A switchover of LP/0 causes a temporary loss of connectivity until the other CP becomes active. <hr/>	
3	Remove the spare CP. See NN10600-130 <i>Nortel Multiservice Switch 15000/20000 Hardware Installation, Maintenance, and Upgrade</i> or NN10600-130 <i>Nortel Multiservice Switch 15000/20000 Hardware Installation, Maintenance, and Upgrade</i> for information on removing a CP.
4	Enter provisioning mode. start Prov
5	Remove the spare configuration. set Lp/0 spareCard !
6	Remove the card configuration. set Shelf Card/<m> cardType none
7	Complete the configuration changes. For more information see Activating configuration changes (page 342) .

--End--



Variable definitions

Variable	Value
<m>	The slot number of the spare CP. Multiservice Switch 15000 and Multiservice Switch 20000 nodes designate slot 1 for the spare CP. In Multiservice Switch 7400 nodes, the spare CP is located in the last slot of the shelf.



Replacing a CP in a single-CP node

A Nortel Multiservice Switch node with a single CP has no backup in the event of a failure of the CP. A CP failure interrupts all services on the node. You must replace the failed CP immediately.

Procedure steps

Step	Action
1	<p>Re-establish connection to the network (and Nortel Multiservice Data Manager, if available).</p> <p>The quickest way to re-establish connection to the network is to take the standby CP from a donor node. A donor node is a two-CP node within the same Nortel Multiservice Switch group as defined in Multiservice Data Manager. See 241-6001-023 <i>Nortel Multiservice Data Manager Configuration Tools</i> for more information on Multiservice Switch groups.</p> <p>If a donor node is not available, you must follow the startup procedures described in NN10600-271 <i>Nortel Multiservice Switch 7400/15000/20000 Network Management Connectivity</i>, to re-establish a connection to the network.</p>
2	<p>Reinstall the software.</p> <p>If you have a Multiservice Data Manager backup of the node, you can use it to reinstall the software. Multiservice Data Manager also performs backups of journal log files that will enable you to restore the node to its current view. If you do not have a backup, you must reinstall software for the node using the procedures described in NN10600-270 <i>Nortel Multiservice Switch 7400/15000/20000 Software Installation</i>.</p>
3	<p>Reconfigure the node.</p> <p>If you have a Multiservice Data Manager backup of the node, you can use it to configure the node. If you do not have a backup, you must manually reconfigure the node.</p>

--End--

Procedure job aid

How you replace the CP depends on whether you have a recent Multiservice Data Manager backup of the node, and whether you have a donor node available in the network. The following sections explain how to replace a CP for each of the backup and donor node combinations:

- [Replacing a CP using a donor node and backup \(page 117\)](#)
- [Replacing a CP using a donor node only \(page 121\)](#)
- [Replacing a CP using a backup only \(page 123\)](#)



- [Replacing a CP without a donor node or backup \(page 125\)](#)



Replacing a CP using a donor node and backup

Replace a CP using a donor node and a backup to quickly re-establish a connection to the network from the failed node. Do this by taking the spare CP from the donor node and inserting it into the node with the failed CP. Once connected to the network, you can restore the software and configuration using the Nortel Multiservice Data Manager backup.

Prerequisites

- For information on physically replacing a CP, see either NN10600-175 *Nortel Multiservice Switch 7400 Hardware Installation, Maintenance, and Upgrade* or NN10600-130 *Nortel Multiservice Switch 15000/20000 Hardware Installation, Maintenance, and Upgrade*.
- Do the following procedure in operational mode. For more information, see [Operational mode \(page 341\)](#).

Procedure steps

Step	Action
1	If necessary, force the main CP on the donor node to become the active CP. switchover Lp/0
Attention: A switchover of LP/0 causes a temporary loss of connectivity until the other CP becomes active.	
2	Remove the spare CP from the shelf of the donor node. You will install this CP on the failed node after you have configured a new spare CP on the donor node.
3	Insert a new CP into the spare slot of the donor node. For Nortel Multiservice Switch 15000 and Multiservice Switch 20000 nodes use slot 1 for the spare CP. In Multiservice Switch 7400 nodes, the spare CP is located in the last slot of the shelf. Nortel Networks recommends that the new spare CP have the same size disk as the main CP.
4	Synchronize the new standby disk with the active disk on the donor node. synchronize Fs This step can take several hours, depending on the amount of data stored on the active disk and the difference between the two disks.
5	Remove the failed CP from the shelf of the failed node.
6	Install the CP you removed from the donor node into the main slot (slot 0) of the failed node.



- 7 When the CP comes up (LED is lit solid green), clean up the disk. Remove any unnecessary files including unused software, unused provisioning files, and the spooling files stored in the /spooled/closed directory. For information on removing files, see the following:
 - tidy Prov, tidy Sw, remove Sw Av, and remove Fs commands in NN10600-050 *Nortel Multiservice Switch 7400/15000/20000 Command Reference*
 - NN10600-270 *Nortel Multiservice Switch 7400/15000/20000 Software Installation*

- 8 Change the node name, node ID, and the addresses of the IPIVC interface, the IPIFR interface, or the OAM Ethernet port to the values of the failed node. This step allows you to restore your connection to the network and Multiservice Data Manager.

For information on changing the node name and ID, see [Configuring node identification \(page 14\)](#). For information on changing the address of IPIVC or IPIFR, see NN10600-271 *Nortel Multiservice Switch 7400/15000/20000 Network Management Connectivity*.

- 9 Restore the files from the last Multiservice Data Manager backup. See 241-6001-023 *Nortel Multiservice Data Manager Configuration Tools* for procedures on file restore.

- 10 Activate the provisioning view that was running when the last backup to Multiservice Data Manager was made:
reloadCp -file(<view>) Ip/0

If the provisioning view changed since the last Multiservice Data Manager backup, you must manually reconfigure the changes.

--End--

Variable definitions

Variable	Value
<view>	The name of the provisioning view.



Reconfiguring a donor CP

Reconfigure a donor CP to establish network management connectivity and identify the node as a unique node in the network.

Prerequisites

- Do the following procedure in operational mode. For more information, see [Operational mode \(page 341\)](#).

Procedure steps

Step	Action
1	<p>Synchronize the new standby disk with the active disk on the donor node.</p> <p>synchronize Fs</p> <p>This step can take several hours, depending on the amount of data stored on the active disk and the difference between the two disks.</p>
2	<p>Remove the failed CP from slot in the failed node.</p>
3	<p>Install the CP you removed from the donor node into the main slot (slot 0) of the failed node.</p>
4	<p>When the CP comes up (LED is lit solid green), clean up the disk. Remove any unnecessary files including unused software, unused provisioning files, and the spooling files stored in the /spooled/closed directory. For information on removing files, see the following:</p> <ul style="list-style-type: none">• tidy Prov, tidy Sw, remove Sw Av, and remove Fs commands in <i>NN10600-050 Nortel Multiservice Switch 7400/15000/20000 Command Reference</i>• <i>NN10600-270 Nortel Multiservice Switch 7400/15000/20000 Software Installation</i>
5	<p>Change the node name, node ID, and the addresses of the IPIVC interface, the IPIFR interface, or the OAM Ethernet port to the values of the failed node. This step allows you to restore your connection to the network and Nortel Multiservice Data Manager workstation.</p> <p>For information on changing the node name and ID, see Configuring node identification (page 14). For information on changing the address of IPIVC or IPIFR, see <i>NN10600-271 Nortel Multiservice Switch 7400/15000/20000 Network Management Connectivity</i>.</p>
6	<p>Restore the files from the last Multiservice Data Manager backup. See <i>241-6001-023 Nortel Multiservice Data Manager Configuration Tools</i> for procedures on file restore.</p>
7	<p>Activate the provisioning view that was running when the last backup to Multiservice Data Manager was made.</p> <p>reloadCp -file(<view>) Ip/0</p>



If the provisioning view changed since the last Multiservice Data Manager backup, you must manually reconfigure the changes.

--End--

Variable definitions

Variable	Value
<view>	The name of the provisioning view.



Replacing a CP using a donor node only

Replace a CP using a donor node only by taking the spare CP from the donor node and inserting it into the node with the failed CP. The spare CP allows you to quickly re-establish a connection to the network on the failed node. Once connected to the network, you must manually reinstall the software and reconfigure the node.

Prerequisites

- For information on physically replacing a CP, see either NN10600-175 *Nortel Multiservice Switch 7400 Hardware Installation, Maintenance, and Upgrade* or NN10600-130 *Nortel Multiservice Switch 15000/20000 Hardware Installation, Maintenance, and Upgrade*.
- Do the following procedure in operational mode. For more information, see [Operational mode \(page 341\)](#).

Procedure steps

Step	Action
1	If necessary, force the main CP on the donor node to become the active CP. switchover Lp/0
Attention: A switchover of LP/0 causes a temporary loss of connectivity until the other CP becomes active.	
2	Remove the spare CP from the shelf of the donor node. You will install this CP on the failed node after you have configured a new spare CP on the donor node.
3	Insert a new CP into the spare slot of the donor node. For Multiservice Switch 15000 and Multiservice Switch 20000 nodes the spare CP resides in slot 1. For Multiservice Switch 7400 nodes, the spare CP resides in the last slot of the shelf. Nortel Networks recommends that the new spare CP have the same size disk as the main CP.
4	Synchronize the new standby disk with the active disk on the donor node. synchronize Fs This step can take several hours, depending on the amount of data stored on the active disk and the difference between the two disks.
5	Remove the failed CP from the slot in the failed node.
6	Install the CP you removed from the donor node into the main slot (slot 0) of the failed node.



- 7 When the CP comes up (LED is lit solid green), clean up the disk. Remove any unnecessary files including unused software, unused provisioning files, and the spooling files stored in the /spooled/closed directory. For information on removing files, see the following:
 - tidy Prov, tidy Sw, remove Sw Av, and remove Fs commands in NN10600-050 *Nortel Multiservice Switch 7400/15000/20000 Command Reference*
 - NN10600-270 *Nortel Multiservice Switch 7400/15000/20000 Software Installation*

- 8 Change the node name, node ID, and the addresses of the IPIVC interface, the IPIFR interface or the OAM Ethernet port to the values of the failed node. This step allows you to restore your connection to the network and Multiservice Data Manager.

For information on changing the node name and ID, see [Configuring node identification \(page 14\)](#). For information on changing the address of IPIVC or IPIFR, see NN10600-271 *Nortel Multiservice Switch 7400/15000/20000 Network Management Connectivity*.

- 9 Install the application versions (AVs) for the node using the procedures described in NN10600-270 *Nortel Multiservice Switch 7400/15000/20000 Software Installation*.

- 10 Manually reconfigure the node.

--End--



Replacing a CP using a backup only

Replace a CP using a backup only by replacing the failed CP with a new CP. Then, re-establish connection to the network using the StartUp procedures. After the new CP is connected to the network, you can restore the software and configuration using the Nortel Multiservice Data Manager backup.

Prerequisites

- For information on physically replacing a CP, see either NN10600-175 *Nortel Multiservice Switch 7400 Hardware Installation, Maintenance, and Upgrade* or NN10600-130 *Nortel Multiservice Switch 15000/20000 Hardware Installation, Maintenance, and Upgrade*.
- Do the following procedure in operational mode. For more information, see [Operational mode \(page 341\)](#).

Procedure steps

Step	Action
1	Obtain a new CP.
2	Remove the failed CP from the slot in the failed node.
3	Insert the new CP into the main slot (slot 0) of the failed node.
4	Re-establish the connection to the network using the startup procedures in NN10600-271 <i>Nortel Multiservice Switch 7400/15000/20000 Network Management Connectivity</i> .
5	Clean up the file system of the new CP. Remove any unnecessary files including unused software, unused provisioning files, and the spooling files stored in the /spooled/closed directory. For information on removing files, see the following: <ul style="list-style-type: none">• tidy Prov, tidy Sw, remove Sw Av, and remove Fs commands in NN10600-050 <i>Nortel Multiservice Switch 7400/15000/20000 Command Reference</i>• NN10600-270 <i>Nortel Multiservice Switch 7400/15000/20000 Software Installation</i>
6	Restore the files from the last Multiservice Data Manager backup. See 241-6001-023 <i>Nortel Multiservice Data Manager Configuration Tools</i> for procedures on file restore.
7	Activate the provisioning view that was running when the last backup to Multiservice Data Manager was made. reloadCp -file(<view>) Lp/0 If the provisioning view changed since the last Multiservice Data Manager backup, you must manually reconfigure the changes.



--End--

Variable definitions

Variable	Value
<view>	The name of the provisioning view.



Replacing a CP without a donor node or backup

Replace a CP without a donor node or backup by replacing the failed CP with a new CP. You must then re-establish connection to the network using the startup procedures. After the new CP is connected to the network, you must manually reinstall the software and reconfigure the node.

Prerequisites

- For information on physically replacing a CP, see either NN10600-175 *Nortel Multiservice Switch 7400 Hardware Installation, Maintenance, and Upgrade* or NN10600-130 *Nortel Multiservice Switch 15000/20000 Hardware Installation, Maintenance, and Upgrade*.
- Do the following procedure in operational mode. For more information, see [Operational mode \(page 341\)](#).

Procedure steps

Step	Action
1	Obtain a new CP.
2	Remove the failed CP from the slot in the failed node.
3	Insert the new CP into the main slot (slot 0) in the failed node.
4	Re-establish the connection to the network using the startup procedures described in NN10600-271 <i>Nortel Multiservice Switch 7400/15000/20000 Network Management Connectivity</i> .
5	Clean up the file system of the new CP. Remove any unnecessary files including unused software, unused provisioning files, and the spooling files stored in the /spooled/closed directory. For information on removing files, see the following: <ul style="list-style-type: none">• tidy Prov, tidy Sw, remove Sw Av, and remove Fs commands in NN10600-050 <i>Nortel Multiservice Switch 7400/15000/20000 Command Reference</i>• NN10600-270 <i>Nortel Multiservice Switch 7400/15000/20000 Software Installation</i>
6	Reinstall the application versions (AVs) for the node using the procedures described in NN10600-270 <i>Nortel Multiservice Switch 7400/15000/20000 Software Installation</i> .
7	Manually reconfigure the node.

--End--



Replacing a CP in a two-CP node

Replace a CP in a two-CP node to replace a failed CP or upgrade a CP without interrupting service on the node. In a two-CP node, you can remove the standby CP (not the active CP) without interrupting service on the node, provided the appropriate software commands are entered in coordination with removing the CP from the shelf.

Prerequisites

- In the unlikely event that both CPs fail simultaneously or the standby CP is unavailable to take over the traffic of the active CP, follow the procedures in [Replacing a CP in a single-CP node \(page 115\)](#).
- Do the following procedure in operational mode. For more information, see [Operational mode \(page 341\)](#).

Procedure steps

Step	Action
1	If necessary, force the CP you want to remove to become the standby CP.

Attention: A switchover of LP/0 causes a temporary loss of connectivity until the other CP becomes active.

- switchover Lp/0**
- 2 Lock the standby CP in order to remove it without losing traffic.
- lock -force Shelf Card/<m>**
- 3 Have someone be ready at the CP to continue with the physical removal and insertion procedures. The CP can be removed when the *availabilityStatus* is offLine and the CP LED indicates solid red. See NN10600-130 *Nortel Multiservice Switch 15000/20000 Hardware Installation, Maintenance, and Upgrade* or NN10600-175 *Nortel Multiservice Switch 7400 Hardware Installation, Maintenance, and Upgrade*, for information on removing a CP.
- 4 When the replacement CP is inserted into the slot, you can unlock the CP. As a result, the new CP starts loading the software.
- unlock Shelf Card/<m>**
- 5 After the new CP starts loading software (its status LED is fast flashing green), verify that the disks on both CPs are available.
- list Fs Disk/***
- Two instances of the *Disk* component appear, one for each CP.



Attention: If the new CP has the same volume name as the active CP, the new standby disk is automatically synchronized with the active disk. Disk synchronization can take a long time (up to an hour or more). When synchronization is complete, an alarm indicates that the file system is now synchronized.

- 6 If the new standby disk did not automatically synchronize with the active disk, manually synchronize the two disks:

synchronize Fs

This command can take a long time to execute (up to an hour or more). When synchronization is complete, an alarm indicates that the file system is now synchronized.

- 7 Leave the standby CP as available (not active). It is not necessary to restore it to active status because the system functions normally regardless which one is currently active.

--End--

Variable definitions

Variable	Value
<m>	The slot number of the new processor card.



Upgrading a CP2 to a CP3 in a single-CP node

CP3 control processors are used only in Nortel Multiservice Switch 15000 and Multiservice Switch 20000 nodes.

Before upgrading a CP2 to a CP3, ensure that the node is operating with software that supports the CP3. Refer to the table on minimum CP software requirements in NN10600-120 *Nortel Multiservice Switch 15000/20000 Hardware Description*.

The CP3 requires PowerPC applications. Before downloading the software to run on the CP3, ensure that the *processorTargets* attribute of the *Software Download* component is set to *i960 ppc*.

See *Nortel Multiservice Switch Release Notes* to see which software vintage supports the CP3, or the table of minimum CP software vintages in NN10600-120 *Nortel Multiservice Switch 15000/20000 Hardware Description*. See NN10600-270 *Nortel Multiservice Switch 7400/15000/20000 Software Installation* to verify the following:

- the vintage of the software that the node is currently using
- whether the application version list (AVL) of the node contains application versions that support PowerPC (ppc) applications

Also, you can reduce the time required to upgrade to a CP3 by doing the following:

- turn off data collection, to minimize file system activity
- minimize the accounting data on the disk
- keep only the minimum number of software versions on the disk



CAUTION

Upgrading a CP2 to a CP3 has the same service impact as replacing a CP2. Some new call connections may not be set up during CP switchover.

To upgrade a CP2 to a CP3, follow the same procedures as in [Replacing a CP in a single-CP node \(page 115\)](#) except that the new CP is a CP3.



Upgrading a CP2 to a CP3 in a two-CP node

Upgrade a CP2 to a CP3 to enhance your Nortel Multiservice Switch 15000 or Multiservice Switch 20000 node with CP3 capabilities. In a two-CP node, you repeat the procedure twice; once for each CP in the node.

CP3 control processors are used only in Multiservice Switch 15000 and Multiservice Switch 20000 nodes.

Attention: A two-CP node should operate with a CP3 and a CP2 only during the upgrade procedure. Normal operation requires that a two-CP node operates with two identical CPs, either two CP3s or two CP2s.



CAUTION

Upgrading a CP2 to a CP3 has the same service impact as replacing a CP2. Some new call connections may not be set up during CP switchover.

Prerequisites

- Before upgrading a CP2 to a CP3, ensure that the node is operating with software that supports the CP3.
- The CP3 requires PowerPC applications. Before downloading the software to run on the CP3, ensure that the *processorTargets* attribute of the *Software Download* component is set to *i960 ppc*.
- You can reduce the time required to upgrade to a CP3 by turning off data collection, minimizing the accounting data on the disk, and keeping only the minimum number of software versions on the disk.
- Before migrating a Multiservice Switch 15000 platform from a CP2 processor to a CP3, ensure there is enough available space on the CP2, see [Determining file system capacity \(page 186\)](#). If there is not enough available space, the CP2 may not be able to synchronize its disk with the CP3 when trying to revert to CP2 after a CP3 switchover.
- See [Timeout for a subsequent CP switchover \(page 254\)](#) for information about performing CP switchover and disconnecting the Ethernet cable on the CP.
- Do the following procedure in operational mode. For more information, see [Operational mode \(page 341\)](#).
- See the *Nortel Multiservice Switch Release Notes* to see which software vintage supports the CP3.
- See NN10600-270 *Nortel Multiservice Switch 7400/15000/20000 Software Installation* to verify the following:



- the vintage of the software that the node is currently using
- whether the AVL of the node contains application versions that support PowerPC (ppc) applications
- the current and committed provisioning views are the same

Procedure steps

Step	Action
1	Verify which CP is providing service. display Lp/0 activeCard, spareCardStatus
2	If you are using OamEnet, verify the status of the active and spare CPs. display Lp/0 oamenet/0 active, standby
3	If necessary, force the CP you want to upgrade to become the standby CP. switchover Lp/0
4	If the current standby CP is the one to be replaced then lock the card. lock -force shelf card/<x>
5	Upgrade the CP hardware, see the task “CP upgrade” in NN10600-130 <i>Nortel Multiservice Switch 15000/20000 Hardware Installation, Maintenance, and Upgrade</i> . Log on to the local operator terminal if you want to observe the boot process of the new CP.
6	After the new CP3 finishes initialization, the status LED is slowly flashing red, unlock the card: unlock shelf card/<x>
7	Verify that the disks on both CPs are available. list Fs Disk/* If the new CP3 has the same volume name as the active CP, the new standby disk is automatically synchronized with the active disk. Disk synchronization can take up to an hour or more. When synchronization is complete, an alarm indicates that the file is now synchronized.
8	If the new standby disk did not automatically synchronize with the active disk, manually synchronize the two disks. synchronize Fs You can check on the progress of the synchronization by entering. d Fs synchstatus d Fs synchprogres



- 9 Once the file system is synchronized and the new CP3 is available, force the remaining CP2 to become the standby CP.

switchover **Lp/0**

Attention: A switchover of Lp/0 causes a temporary loss of connectivity until the other CP becomes active.

- 10 Repeat [step 1](#) to [step 9](#) for the remaining CP2.

- 11 Once the file system is synchronized, change the control back to the starting configuration, making CP0 the active processor.

switchover **Lp/0**

--End--

Variable definitions

Variable	Value
<X>	The slot number of the inactive processor card, either 0 or 1.



Downgrading a CP3 to a CP2

Before downgrading a CP3 to a CP2, ensure the following:

- The node is operating with software that supports the CP2.

The CP2 requires i960 applications. Before downloading the software to run on the CP2, ensure that the *processorTargets* attribute of the *Software Download* component is set to *i960 ppc*.

See NN10600-270 *Nortel Multiservice Switch 7400/15000/20000 Software Installation* to verify whether the AVL of the node contains application versions that support i960 applications.

- The file system of the node fits on the CP2 hard disk.

The hard disk of a CP3 has a greater capacity than that of a CP2. See [Determining file system capacity \(page 186\)](#) to ensure you have enough space to synchronize a CP3 to a CP2.

To downgrade a CP3 to a CP2, follow the same procedure in [Upgrading a CP2 to a CP3 in a single-CP node \(page 128\)](#). In this case, the node is currently using CP3s and the new CPs are CP2s.



Upgrading from CP (NTNQ01AA) to CP with BITS and SETS (NTNQ03BA)

Upgrade to CP with BITS and SETS (NTNQ03BA) to enhance your Nortel Multiservice Switch 7400 node with synchronous equipment timing source (SETS) capabilities.

Prerequisites

- There should be no BITS or SETS features configured.
- Active and standby CPs are CP NTNQ01AA.
- Do the following procedure in operational mode. For more information, see [Operational mode \(page 341\)](#).
- For PEC code description of the termination panels and cables see NN10600-170 *Nortel Multiservice Switch 7400 Hardware Description*.

Procedure steps

Step	Action
1	Follow existing CP replacement procedure as per NTPs to replace both active and standby CPs with the new CPs NTNQ03BA. See Upgrading a CP2 to a CP3 in a single-CP node (page 128)
2	Install the termination panel and cable and make the necessary BITS and SETS connections between the CPs and the termination panel.
3	Install the new termination panel and cables and make the necessary connections between the new standby CP and the termination panel.
4	Unlock the standby card and disk.
5	Issue the following command and wait for the new standby CP to become synchronized. synch Fs

--End--



Upgrading from CP with BITS (NTNQ03AA) to CP with BITS and SETS (NTNQ03BA)

Upgrade to CP with BITS and SETS (NTNQ03BA) to enhance your Nortel Multiservice Switch 7400 node with synchronous equipment timing source (SETS) capabilities.

Prerequisites

- There should be no BITS or SETS features configured.
- Active and standby CPs are CP NTNQ03AA.
- Do the following procedure in operational mode. For more information, see [Operational mode \(page 341\)](#).
- For PEC code description of the termination panels and cables see NN10600-170 *Nortel Multiservice Switch 7400 Hardware Description*.

Procedure steps

Step	Action
1	Lock the standby disk. Lock the standby card.
2	Remove the standby card and replace with the new CP (NTNQ03BA).
3	Install the new termination panel and cables and make the necessary connections between the new standby CP and the termination panel.
4	Unlock the standby card and disk.
5	Issue the following command and wait for the new standby CP to become synchronized.
	synch Fs

--End--



Control processor OAM Ethernet port configuration

Configure the CP OAM Ethernet port on each control processor (CP) to manage Nortel Multiservice Switch 7400/15000/20000 nodes connected to the management network. The nodes can be connected to the management network locally or remotely.

- [Prerequisites to CP OAM Ethernet port configuration \(page 135\)](#)
- [Navigation \(page 135\)](#)

Prerequisites to CP OAM Ethernet port configuration

- If you are unfamiliar with CP OAM ethernet concepts, see [Understanding the control processor OAM Ethernet port \(page 313\)](#).

Navigation

- [Configuring the CP OAM Ethernet port \(page 136\)](#)
- [Enabling CP switchover for a CP OAM Ethernet port failure \(page 141\)](#)
- [Disabling CP switchover for a CP OAM Ethernet port failure \(page 142\)](#)
- [Changing the statistics gathered from the CP OAM Ethernet port \(page 143\)](#)
- [Configuring the line speed of the OAM Ethernet port on a CP3 control processor \(page 144\)](#)
- [Changing the mode of the OAM Ethernet port on a CP3 control processor \(page 145\)](#)
- For information on configuring IP security (IPSec) for OAM traffic, see NN10600-271 *Nortel Multiservice Switch 7400/15000/20000 Network Management Connectivity* and NN10600-601 *Nortel Multiservice Switch 7400/15000/20000 Security Management*.



Configuring the CP OAM Ethernet port

Configure the CP OAM Ethernet port if it was not configured when the StartUp utility was run. The port is usually configured by StartUp if you select the OAM Ethernet method of Multiservice Data Manager connectivity.

Attention: The CP OAM Ethernet port supports static routes and open shortest path first (OSPF) passive interface. The CP OAM Ethernet port does not support any other routing protocols or any other shortest path first (OPSF) configurations. Configure the CP OAM Ethernet port with static routes or as an open shortest path first (OSPF) passive interface.

Attention: The *DiscardRouteEntry* subcomponent of the *Static* component identifies destination networks and nodes that do not receive packets through this service. The system discards packets addressed to these destinations immediately. No notification is sent to the sending host that the Nortel Multiservice Switch system has discarded the packets. There is one *DiscardRouteEntry* subcomponent for each route that you want to restrict. For more information on the *Ip Static DiscardRouteEntry* component, see NN10600-800 *Nortel Multiservice Switch 7400/15000/20000 IP Technology Fundamentals*.

Prerequisites

- If you are unfamiliar with CP OAM Ethernet port configuration, see [Understanding the control processor OAM Ethernet port \(page 313\)](#).
- Do the following procedure in provisioning mode. For more information, see [Provisioning mode \(page 342\)](#).

Procedure steps

Step	Action
------	--------

- | | |
|---|---|
| 1 | Add the <i>oamEnet</i> and <i>ip</i> features to the feature list of the CP.
set Software Lpt/CP featureList oamEnet ip |
|---|---|
-

Attention: The *oamEnet* and *ip* features must be part of the software application version list (AVL). For more information on adding features to the AVL, see [Software, applications, and features additions and updates \(page 48\)](#).

- | | |
|---|--|
| 2 | Add the <i>OamEthernet</i> component to the logical processor for the CP.
add LogicalProcessor/0 oamEnet/0 |
|---|--|
-



- 3 If you want to gather and report extended statistics, enable the *extendedStatistics* attribute.
- ```
set LogicalProcessor/0 oamEnet/0 extendedStatistics
enabled
```

---

**Attention:** This attribute has a default value of *disabled*.

---

- 4 Create a LAN media application. Adding this component automatically creates a *Framer* subcomponent.
- ```
add LanApplication/0
```
- 5 Associate the LAN media application with the OAM Ethernet port.
- ```
set LanApplication/0 Framer interfaceName
LogicalProcessor/0 oamEnet/0
```
- 6 Optionally, disable the *switchoverOnFailure* attribute to ensure that the OAM Ethernet port does not change to the port on the spare CP when the test process detects a hardware or link failure.
- ```
set LogicalProcessor/0 oamEnet/0 switchoverOnFailure
disabled
```
- This attribute has a default value of *enabled*.
- 7 Add a management virtual router (attribute *Vr managementAccess* is enabled) if one doesn't already exist. By default, the first virtual router (VR) you create on a node is the management VR:
- ```
add Vr/0
```
- 8 Specify where the virtual router resides.
- ```
set Vr/0 vrp lp/0
```
- 9 Enable IP on the virtual router.
- ```
add Vr/0 Ip
```
- 10 Add a protocol port to the virtual router.
- ```
add Vr/0 ProtocolPort/oam0
```
- 11 Associate the LAN media application with the protocol port.
- ```
set LanApplication/0 linkToProtocolPort
Vr/0 ProtocolPort/oam0
```
- 12 Enable IP on the protocol port.
- ```
add Vr/0 ProtocolPort/oam0 IpPort
```
- 13 Add a logical IP interface under the *IpPort*
- ```
add Vr/0 ProtocolPort/oam0 IpPort IpLogicalInterface/
<IPaddress>
```
- 14 Provision a network mask for the protocol port.



- set Vr/0 ProtocolPort/oam0 IpPort IpLogicalInterface/ <IPaddress> netmask <netmaskaddress>**

15 Provision a broadcast address for the protocol port.

**set Vr/0 ProtocolPort/oam0 IpPort IpLogicalInterface/ <IPaddress> broadcastAddress <broadcastaddress>**
- 16 Verify the configuration of the OAM Ethernet port.

**display Software Lpt/CP featureList**

**display LogicalProcessor/0 oamEnet/0**

**display LanApplication/0 Framers interfaceName**

**display Vr/0 ProtocolPort/oam0 IpPort**
- 17 Add a *Static* component as a subcomponent of the *Ip* component.

**add Vr/0 Ip Static**
- 18 Add static route(s), for routing to the management workstation, to the route table. The *RouteEntry* component can specify one management host or a subnetwork/network containing multiple management workstations/hosts.

**add Vr/0 Ip Static RouteEntry/ <ipAddress2>, <destmask>, <tos>**
- 19 Provision a *NextHop* component for each defined static route. The *NextHop\_ipAddress* parameter must denote a locally attached host.

**add Vr/0 Ip Static RouteEntry/ <ipAddress2>, <destmask>, <tos> nextHop/ <nextHop\_ipAddress>**
- 20 Set the metric for the route (optional).

**set Vr/0 Ip Static RouteEntry/ <ipAddress>, <destmask>, <tos> nextHop/ <nextHop\_ipAddress> metric <cost>**

--End--

### Variable definitions

| Variable           | Value                                                                                                                      |
|--------------------|----------------------------------------------------------------------------------------------------------------------------|
| <broadcastaddress> | The broadcast address.                                                                                                     |
| <cost>             | A relative metric value (ranges from -1 to +65535) assigned to the static route—the assigned cost judges route preference. |
| (1 of 2)           |                                                                                                                            |




| Variable            | Value                                                                                                                                                                                                                                                                                                                                                                                                                                            |
|---------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <destmask>          | <p>The subnetwork mask used with the IP address.</p> <p>If &lt;ipAddress&gt; specifies a host, provision &lt;destmask&gt; as 255.255.255.255. Also, provision locally attached hosts as <i>Arp HostEntry</i> components instead of a <i>Static</i> component entry.</p> <p>For more information on the <i>IP Static RouteEntry</i> component, see NN10600-800 <i>Nortel Multiservice Switch 7400/15000/20000 IP Technology Fundamentals</i>.</p> |
| <IPaddress>         | The IP address of the OAM Ethernet port.                                                                                                                                                                                                                                                                                                                                                                                                         |
| <ipAddress2>        | The IP address of the remote management workstation (can refer either to a specific node or to a network).                                                                                                                                                                                                                                                                                                                                       |
| <netmaskaddress>    | The netmask address.                                                                                                                                                                                                                                                                                                                                                                                                                             |
| <nextHop_ipAddress> | The IP address of the next router in the path to the destination. Since this is a specific node and cannot be a network, there is no subnetwork mask.                                                                                                                                                                                                                                                                                            |
| <tos>               | The type of service (currently, only the default value of 0 is supported).                                                                                                                                                                                                                                                                                                                                                                       |
| (2 of 2)            |                                                                                                                                                                                                                                                                                                                                                                                                                                                  |



## Procedure job aid

### Configuring the CP OAM Ethernet port component hierarchy

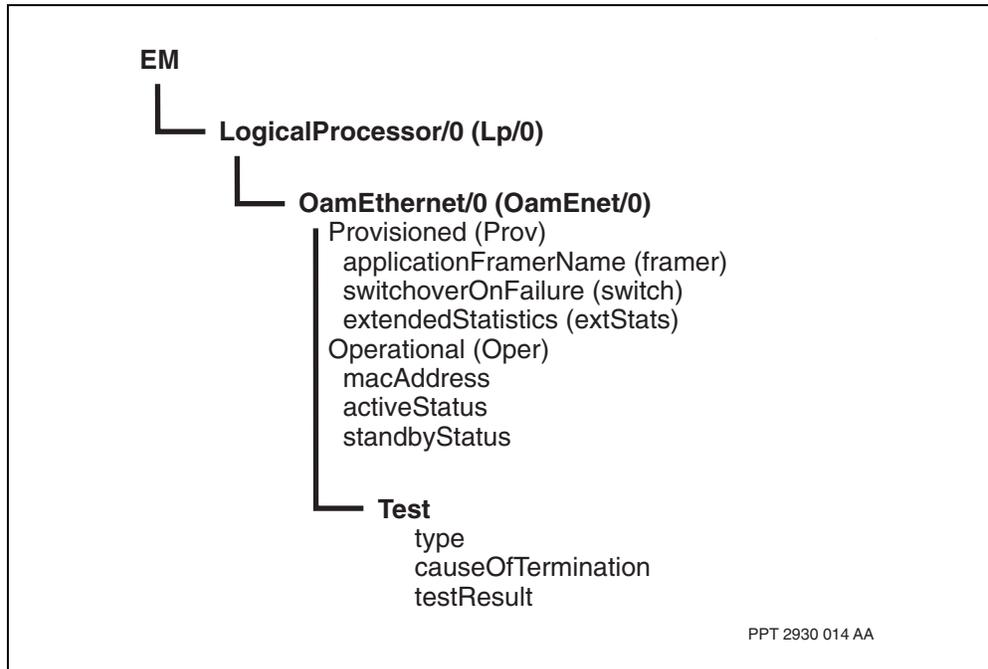

PPT 2930 014 AA



## Enabling CP switchover for a CP OAM Ethernet port failure

Enable CP switchover for a CP OAM Ethernet port failure if you want the system to use the spare CP if it detects a port or link failure on the CP OAM Ethernet port.

### Prerequisites

- If you are unfamiliar with CP OAM Ethernet port concepts, see [Understanding the control processor OAM Ethernet port \(page 313\)](#).
- Do the following procedure in provisioning mode. For more information, see [Provisioning mode \(page 342\)](#).

### Procedure steps

---

| Step | Action                                                                                                                      |
|------|-----------------------------------------------------------------------------------------------------------------------------|
| 1    | Display the current switchover behavior of the port.<br><code>display Lp/0 oamEnet/0 switchoverOnFailure</code>             |
| 2    | Set the switchoverOnFailure attribute to the required value.<br><code>set Lp/0 oamEnet/0 switchoverOnFailure enabled</code> |

---

--End--

---



## Disabling CP switchover for a CP OAM Ethernet port failure

Disable CP switchover for a CP OAM Ethernet port failure if you want the system to use the spare CP if it detects a port or link failure on the CP OAM Ethernet port.

### Prerequisites

- If you are unfamiliar with CP OAM Ethernet port concepts, see [Understanding the control processor OAM Ethernet port \(page 313\)](#).
- Do the following procedure in provisioning mode. For more information, see [Provisioning mode \(page 342\)](#).

### Procedure steps

---

| Step | Action                                                                                                          |
|------|-----------------------------------------------------------------------------------------------------------------|
| 1    | Display the current switchover behavior of the port.<br><code>display Lp/0 oamEnet/0 switchoverOnFailure</code> |
| 2    | Disable the switchoverOnFailure attribute.<br><code>set Lp/0 oamEnet/0 switchoverOnFailure disabled</code>      |

---

--End--

---



---

## Changing the statistics gathered from the CP OAM Ethernet port

Change the statistics gathered from the CP OAM Ethernet port by specifying whether the system gathers extended statistics.

### Prerequisites

- If you are unfamiliar with CP OAM Ethernet port, see [Understanding the control processor OAM Ethernet port \(page 313\)](#).
- Do the following procedure in provisioning mode. For more information, see [Provisioning mode \(page 342\)](#).

### Procedure steps

---

| Step | Action |
|------|--------|
|------|--------|

---

- |   |                                                                                                                                 |
|---|---------------------------------------------------------------------------------------------------------------------------------|
| 1 | Set the extendedStatistics attribute to the required value.<br><code>set Lp/0 oamEnet/0 extendedStatistics &lt;value&gt;</code> |
|---|---------------------------------------------------------------------------------------------------------------------------------|
- 

--End--

---

### Variable definitions

| Variable | Value                                                |
|----------|------------------------------------------------------|
| <value>  | <i>Enabled or disabled. The default is disabled.</i> |
|          |                                                      |



## Configuring the line speed of the OAM Ethernet port on a CP3 control processor

Configure the line speed of the OAM Ethernet port on a CP3 control processor to match the requirements of the far end.

### Prerequisites

- If you are unfamiliar with CP OAM Ethernet port concepts, see [Understanding the control processor OAM Ethernet port \(page 313\)](#).
- Do the following procedure in provisioning mode. For more information, see [Provisioning mode \(page 342\)](#).

### Procedure steps

| Step    | Action                                                                                                        |
|---------|---------------------------------------------------------------------------------------------------------------|
| 1       | Set the lineSpeed attribute to the required value.<br><code>set lp/0 oamEnet/0 lineSpeed &lt;value&gt;</code> |
| --End-- |                                                                                                               |

### Variable definitions

| Variable | Value                                                                                                                                                                                                                                                                                                                       |
|----------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <value>  | <i>AutoConfig</i> , <i>tenMeg</i> , or <i>hundredMeg</i> . The default is <i>autoConfig</i> .<br><b>Attention:</b> When set to <i>autoConfig</i> , the CP3 automatically sets the line speed to match the requirements of the far-end hub. The actual line speed can be obtained from the <i>actualLineSpeed</i> attribute. |
|          |                                                                                                                                                                                                                                                                                                                             |



## Changing the mode of the OAM Ethernet port on a CP3 control processor

Change the mode of the OAM Ethernet port on a CP3 control processor to specify whether the port operates in half or full duplex mode.

### Prerequisites

- If you are unfamiliar with CP OAM Ethernet port concepts, see [Understanding the control processor OAM Ethernet port \(page 313\)](#).
- Do the following procedure in provisioning mode. For more information, see [Provisioning mode \(page 342\)](#).

### Procedure steps

| Step    | Action                                                                                                          |
|---------|-----------------------------------------------------------------------------------------------------------------|
| 1       | Set the duplexMode attribute to the required value.<br><code>set Ip/0 oamEnet/0 duplexMode &lt;value&gt;</code> |
| --End-- |                                                                                                                 |

### Variable definitions

| Variable | Value                                                                                                                                                                                                                                                                                                 |
|----------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <value>  | <i>AutoConfig, half, or full.</i> The default is <i>autoConfig</i> .<br><b>Attention:</b> When set to <i>autoConfig</i> , the CP3 automatically sets the duplex mode to match the requirements of the far end hub. The actual duplex mode can be obtained from the <i>actualDuplexMode</i> attribute. |



---

# Logical processor, port, and channel configuration

---

Define or modify the link between logical processors and the ports and channels on processors cards. The link between these entities determines how services are supported on each Nortel Multiservice Switch node.

- [Prerequisites to logical processor, port, and channel configuration \(page 146\)](#)
- [Navigation \(page 146\)](#)

## Prerequisites to logical processor, port, and channel configuration

- If you are unfamiliar with the concepts associated with logical processors (LPs), ports, and channels, see [Understanding logical processors, ports, and channels \(page 269\)](#).
- When alarm 7011 5480 is generated while configuring an LP or port on an installed FP, especially involving an ethernet, sonet, or sdh port in the following tasks, you must address the remedial action before continuing the configuration.

## Navigation

- [Adding a channel to a port \(page 148\)](#)
- [Adding an LP and linking it to an LPT \(page 150\)](#)
- [Adding an LPT \(page 153\)](#)
- [Adding an Sts component to a port with the FP is operating with a single path \(page 155\)](#)
- [Adding an Sts component to a port when the FP is operating with multiple paths \(page 156\)](#)
- [Changing the LPT used by an LP \(page 159\)](#)
- [Configuring ports on an LP \(page 160\)](#)
- [Adding the NPU service bundle \(page 162\)](#)
- [Configuring the software features of an LPT \(page 164\)](#)



- [Customizing port attributes \(page 166\)](#)
- [Deleting an LP \(page 167\)](#)
- [Deleting BITS ports on Multiservice Switch 7400 \(page 168\)](#)
- [Deleting SETS ports on Multiservice Switch 7400 \(page 169\)](#)
- [Scheduling a change between active and standby function processors \(page 170\)](#)



## Adding a channel to a port

Add channels to FPs that provide port channelization. Nortel Multiservice Switch software automatically adds channel 0 when you add a port.

---

**Attention:** This procedure does not apply to the OC-48/STM-16 ATM with APS FP. See instead the procedure [Adding an Sts component to a port with the FP is operating with a single path \(page 155\)](#) or [Adding an Sts component to a port when the FP is operating with multiple paths \(page 156\)](#).

---

### Prerequisites

- To determine whether an FP supports channelization, see appropriate list of configuration parameters in NN10600-551 *Nortel Multiservice Switch 7400/15000/20000 FP Configuration Reference*.
- Do the following procedure in provisioning mode. For more information, see [Provisioning mode \(page 342\)](#).

### Procedure steps

---

| Step | Action                                                                                                                                                                                                                   |
|------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1    | Add a <i>Channel</i> component to the port.<br><b>add lp/&lt;n&gt; &lt;port&gt;/&lt;p&gt; Chan/&lt;r&gt;</b><br>System software automatically adds channel 0 when you add a port.                                        |
| 2    | Assign timeslots to the <i>Channel</i> component.<br><b>set lp/&lt;n&gt; &lt;port&gt;/&lt;p&gt; Chan/&lt;r&gt; timeslots &lt;t&gt;</b>                                                                                   |
| 3    | If the port type requires that a data rate be assigned to timeslots, assign a rate for the timeslots within each channel.<br><b>set lp/&lt;n&gt; &lt;port&gt;/&lt;p&gt; Chan/&lt;r&gt; timeslotDataRate &lt;rate&gt;</b> |
| 4    | Repeat this procedure for each channel.                                                                                                                                                                                  |
| 5    | Verify the configuration of the channels.<br><b>display LogicalProcessor/* &lt;port&gt;/* &lt;c&gt;/*</b>                                                                                                                |

---

--End--

---



### Variable definitions

| Variable | Value                                                                                                                                       |
|----------|---------------------------------------------------------------------------------------------------------------------------------------------|
| <c>      | The channel type for the port.                                                                                                              |
| <n>      | The LP number.                                                                                                                              |
| <p>      | The port number.                                                                                                                            |
| <port>   | The port type.                                                                                                                              |
| <r>      | The channel number. See NN10600-551 <i>Nortel Multiservice Switch 7400/15000/20000 FP Configuration Reference</i> for valid values for <r>. |
| <rate>   | The timeslot data rate.                                                                                                                     |
| <t>      | The list of timeslots.                                                                                                                      |
|          |                                                                                                                                             |



## Adding an LP and linking it to an LPT

Add an LP to define the software, sparing, and port configurations of processor cards. You must associate an LPT, which is a list of software features, with every LP.

### Prerequisites

- Do the following procedure in provisioning mode. For more information, see [Provisioning mode \(page 342\)](#).

### Procedure steps

---

| Step | Action                                                                                                                                                                                                                           |
|------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1    | Display existing LPTs and their features to determine if any are suitable.<br><b>display Sw Lpt/* featureList</b><br>If a suitable LPT does not exist, create one using the procedure <a href="#">Adding an LPT (page 153)</a> . |
| 2    | Add a <i>LogicalProcessor (Lp)</i> component.<br><b>add Lp/&lt;n&gt;</b>                                                                                                                                                         |
| 3    | Link the LP to an LPT:<br><b>set Lp/&lt;n&gt; logicalProcessorType Sw Lpt/&lt;lpt_name&gt;</b>                                                                                                                                   |
| 4    | Set the main card for the LP.<br><b>set Lp/&lt;n&gt; mainCard Shelf Card/&lt;m&gt;</b>                                                                                                                                           |
| 5    | If necessary, set the spare card for the LP.<br><b>set Lp/&lt;n&gt; spareCard Shelf Card/&lt;m&gt;</b>                                                                                                                           |
| 6    | If you are configuring a one-for-n sparing configuration, repeat <a href="#">step 2</a> to <a href="#">step 5</a> for each FP in the sparing configuration.                                                                      |

---

--End--

---



## Variable definitions

| Variable   | Value                                                                                         |
|------------|-----------------------------------------------------------------------------------------------|
| <lpt_name> | The name of the LPT you want to use.                                                          |
| <m>        | The slot number of the main card. Multiservice Switch nodes number their slots starting at 0. |
| <n>        | The number of the LP, from 1 through 15. The system reserves 0 for the CP.                    |

## Procedure job aid

Use the following sparing guidelines when creating a new LP:

- In a one-for-n sparing configuration for Multiservice Switch 15000 and Multiservice Switch 20000 nodes, you can configure up to six LPs with the same spare card. For Multiservice Switch 7400 nodes, you can configure up to four LPs with the same spare card. To support this configuration, you must connect the processor cards to a sparing panel. You must also configure the sparing connection. For information on the hardware requirements of one-for-n sparing, see NN10600-130 *Nortel Multiservice Switch 15000/20000 Hardware Installation, Maintenance, and Upgrade* or NN10600-175 *Nortel Multiservice Switch 7400 Hardware Installation, Maintenance, and Upgrade*. For information on configuring the sparing connection, see [Configuring one-for-n equipment protection for electrical interfaces \(page 192\)](#).
- For Multiservice Switch 15000 and Multiservice Switch 20000 nodes, CPs on *Lp/0* can only reference the cards in slots 0 and 1. The card in slot 0 must be configured as the main card. The card in slot 1 must be configured as the spare card.
- For Multiservice Switch 7400 series nodes, CPs on *Lp/0* can only reference the cards in the first and last slots of the node. The card in the first slot must be configured as the main card. The card in the last slot must be configured as the spare card. For example in a 16-slot node, the main card must be *Card/0* and the spare must be *Card/15*.
- *Lp/0* must be spared to ensure redundancy of Multiservice Data Manager workstation connectivity when it is connected through the Ethernet port of the CP.
- No two LPs can reference the same processor card as main.
- The main and spare processor cards of an LP must be of identical card types with the same number of ports.
- Before setting up sparing between processor cards, check the PECs of the active and spare cards. For CPs, all eight digits of the PECs must match. For FPs, the first six digits (four letters and two numbers) must match.



**Attention:** Some Nortel Multiservice Switch 7400 node processor cards have equivalent PECs. Except where noted, processor cards with equivalent PECs can be used as spares for each other. See NN10600-170 *Nortel Multiservice Switch 7400 Hardware Description* for a list of equivalent PECs.

---

- For the sparing of MSA32 DS1 FPs, there are 1-slot and 2-slot cards with different PECs that can spare each other. For the sparing of MSA32 E1 FPs, there are 1-slot and 2-slot cards with different PECs that can spare each other. For example, the same sparing configuration can contain 1-slot and 2-slot FPs with or without the optical ports. The combinations of cards are identified in the FP descriptions in NN10600-170 *Nortel Multiservice Switch 7400 Hardware Description*.
- For MSA32 FP sparing, electrical interfaces are protected inter-card (electrical sparing protection) while optical interfaces are protected intra-card (APS line protection). Regardless of either PEC or card type:
  - DS1 FPs can only spare other DS1 FPs and only for electrical interfaces
  - E1 FPs can only spare other E1 FPs and only for electrical interfaces
- DS1 and E1 MSA8 FPs can only spare other DS1 and E1 MSA8 FPs of the same kind. Sparing MSA8 FPs with MSA32 FPs is not supported.

For information on creating an LPT, see [Adding an LPT \(page 153\)](#). For more information on sparing, see [Understanding equipment protection for Multiservice Switch electrical interfaces \(page 257\)](#).

Once you have the software and sparing configured, you can configure the ports on the processor card by adding port subcomponents to the *LogicalProcessor* component. For information on configuring ports, see [Configuring ports on an LP \(page 160\)](#).



## Adding an LPT

Add an LPT to define a group of software features you can assign to an LP. You can only use features that are part of a software application version (AV) currently available on the node. You can assign more than one feature to an LPT.

### Prerequisites



#### CAUTION

##### Risk of processor memory fragmentation

Processor memory can become fragmented as software features are added and deleted through configuration and activation cycles. To ensure optimal use of FP memory, always specify the features in order of priority, with the first feature being the feature that you want the best performance. Otherwise, once a certain level of fragmentation has occurred, it might not be possible to load new software. In the worst case, FPs may reset.

- Exactly which combinations of features you can use depends on the type of the processor card you intend to associate with the LPT (through the LP). For a list of supported feature combinations, see *Nortel Multiservice Switch Release Notes*.
- Do the following procedure in provisioning mode. For more information, see [Provisioning mode \(page 342\)](#).

### Procedure steps

| Step | Action                                                                                                                                                                                                                                                                                              |
|------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1    | Add a new <i>LogicalProcessorType</i> ( <i>Lpt</i> ) component.<br><b>add Sw Lpt /&lt;lpt_name&gt;</b>                                                                                                                                                                                              |
| 2    | Define the feature list.<br><b>set Sw Lpt /&lt;lpt_name&gt; featureList &lt;features&gt;</b><br>You can display all features available on your node using the following command:<br><b>list Sw Av / * Feature / *</b><br>The feature names are the instance values of the <i>Feature</i> component. |

--End--



### Variable definitions

| Variable   | Value                                                                                                                                                                                                   |
|------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <lpt_name> | A name for the LPT. The name can contain up to 25 alphanumeric characters. The system converts the name to all uppercase letters.                                                                       |
| <features> | A list of the features of the LPT, separated by spaces.<br>Make sure you specify the features in order of priority. Make the first feature on the list the one for which you want the best performance. |
|            |                                                                                                                                                                                                         |



## Adding an *Sts* component to a port with the FP is operating with a single path

Add an *Sts* component to a channelized optical FP. When you have configured the whole port to operate with a single path, only one *Sts* component is allowed. This procedure concatenates all the available bandwidth of the port into one path.

### Prerequisites

- See NN10600-551 *Nortel Multiservice Switch 7400/15000/20000 FP Configuration Reference* for the appropriate values for the *Sts* component and the concatenation level.

### Procedure steps

| Step    | Action                                                                                                                         |
|---------|--------------------------------------------------------------------------------------------------------------------------------|
| 1       | Add the <i>Sts</i> component.<br><br><code>add Lp/&lt;n&gt; &lt;port&gt;/&lt;p&gt; &lt;path&gt;/0</code>                       |
| 2       | Set the concatenation level.<br><br><code>set Lp/&lt;n&gt; &lt;port&gt;/&lt;p&gt; &lt;path&gt;/0 concatNumber &lt;c&gt;</code> |
| --End-- |                                                                                                                                |

### Variable definitions

| Variable | Value                    |
|----------|--------------------------|
| <c>      | The concatenation level. |
| <n>      | The LP number.           |
| <p>      | The port number.         |
| <path>   | The path type.           |
| <port>   | The port type.           |



---

## Adding an *Sts* component to a port when the FP is operating with multiple paths

When you configure a port to operate with multiple paths, each *Sts* component represents a bundle of STS timeslots. You need to assign these timeslots in contiguous groups.

For example, for the OC-48/STM-16 ATM FP with APS, you need to add the first *Sts* component with a value 0 and set its concatenation level. Then you add the second *Sts* component with a value of 12 and set its concatenation level.

### Prerequisites

- See NN10600-551 *Nortel Multiservice Switch 7400/15000/20000 FP Configuration Reference* for the maximum number of *Sts* components you can define. You do not need to define all the available *Sts* components on a port if they are not all needed.
- See NN10600-551 *Nortel Multiservice Switch 7400/15000/20000 FP Configuration Reference* for the appropriate values for the *Sts* component and for the concatenation level.

---

**Attention:** If you use incorrect *concatNumber* values or *Sts* component instances, your provisioning view is rejected with errors when you try to activate it.

---

### Procedure steps

---

| Step | Action                                                                                                                       |
|------|------------------------------------------------------------------------------------------------------------------------------|
| 1    | Add an <i>Sts</i> component:<br><b>add Lp/&lt;n&gt; &lt;port&gt;/&lt;p&gt; &lt;path&gt;/&lt;r&gt;</b>                        |
| 2    | Set the concatenation level:<br><b>set Lp/&lt;n&gt; &lt;port&gt;/&lt;p&gt; &lt;path&gt;/&lt;r&gt; concatNumber &lt;c&gt;</b> |
| 3    | For each <i>Sts</i> component you want to add, perform the preceding two steps.                                              |
| 4    | If desired, define the ATM interface application components associated with the <i>Sts</i> components you have just defined. |

---

--End--

---



### Variable definitions

| Variable | Value                              |
|----------|------------------------------------|
| <c>      | The concatenation level.           |
| <n>      | The LP number.                     |
| <r>      | The <i>Sts</i> component instance. |
| <p>      | The port number.                   |
| <path>   | The path type.                     |
| <port>   | The port type.                     |
|          |                                    |



---

## Canceling a scheduled change between active and standby function processors

Cancel a scheduled change between active and standby function processors (FPs) if you no longer need to have the system perform the change at a designated time.

### Prerequisites

- Do the following procedure in operational mode. For more information, see [Operational mode \(page 341\)](#).

### Procedure steps

---

| Step | Action                                                                                                                                |
|------|---------------------------------------------------------------------------------------------------------------------------------------|
| 1    | To cancel a scheduled switchover, use the switchover Lp command with the cancel option:<br><br><b>switchover -cancel Lp/&lt;n&gt;</b> |

---

--End--

---

### Variable definitions

| Variable | Value                 |
|----------|-----------------------|
| <n>      | The number of the LP. |
|          |                       |



## Changing the LPT used by an LP

Change the software running on an LP by changing its LPT. The LPT defines the software features of the LP. For more information, see [Configuring the software features of an LPT \(page 164\)](#).

### Prerequisites

- Do the following procedure in provisioning mode. For more information, see [Provisioning mode \(page 342\)](#).

### Procedure steps

| Step | Action                                                                                                                                                                                                                           |
|------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1    | Display existing LPTs and their features to determine if any are suitable.<br><b>display Sw Lpt/* featureList</b><br>If a suitable LPT does not exist, create one using the procedure <a href="#">Adding an LPT (page 153)</a> . |
| 2    | Set the LPT for the LP.<br><b>set Lp/&lt;n&gt; logicalProcessorType Sw Lpt/&lt;lpt_name&gt;</b>                                                                                                                                  |

--End--

### Variable definitions

| Variable   | Value                                |
|------------|--------------------------------------|
| <lpt_name> | The name of the LPT you want to use. |
| <n>        | The number of the LP.                |



## Configuring ports on an LP

For each LP, you must configure the ports that exist on the processor card. See NN10600-551 *Nortel Multiservice Switch 7400/15000/20000 FP Configuration Reference* for specific types and the number of ports, including tributary ports, that can be configured.

You can spare a maximum of four ports on an 8-port DS1/E1 IMA card using a single termination panel. The configured ports must be in the range of 0 to 3 or 4 to 7. If you do not connect a sparing panel when a port has been configured, the FP poll for the missing connection and causes a “click” in the panel serving the other bank of ports.

*Sts* and *Vc4* components are not automatically created when you add a port, so you need to add them separately. See the procedure [Adding an \*Sts\* component to a port with the FP is operating with a single path \(page 155\)](#) or [Adding an \*Sts\* component to a port when the FP is operating with multiple paths \(page 156\)](#).

If this is a channelized FP that supports more than one channel, add additional channels using the procedure [Adding a channel to a port \(page 148\)](#).

If it is not a channelized FP, set provisionable attributes using the procedure [Customizing port attributes \(page 166\)](#).

### Prerequisites

- Do the following procedure in provisioning mode. For more information, see [Provisioning mode \(page 342\)](#).
- See NN10600-551 *Nortel Multiservice Switch 7400/15000/20000 FP Configuration Reference* for valid values for the procedure variables.

### Procedure steps

| Step | Action                                                                                                                                                                                            |
|------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1    | Review the possible port types for the FP.<br><br><b>help lp</b><br><br>The listed subcomponents are the possible port types.                                                                     |
| 2    | Add a port that is appropriate for the type of interface required.<br><br><b>add lp/&lt;n&gt; &lt;port&gt;/&lt;p&gt;</b>                                                                          |
| 3    | If the FP supports tributary ports beneath the port you added in <a href="#">step 2</a> , add a tributary port.<br><br><b>add lp/&lt;n&gt; &lt;port&gt;/&lt;p&gt; &lt;trib_port&gt;/&lt;q&gt;</b> |



4 Repeat this procedure for each port.

---

--End--

---

### Variable definitions

| Variable    | Value                      |
|-------------|----------------------------|
| <n>         | The LP number.             |
| <p>         | The port number.           |
| <port>      | The port type.             |
| <q>         | The tributary port number. |
| <trib_port> | The tributary port type.   |
|             |                            |



## Adding the NPU service bundle

Add the network processing unit (NPU) service bundle for the 16-port OC-3/STM-1 POS ATM function processor to allow the NPU to support a predefined set of application services.

### Prerequisites

- Do the following procedure in provisioning mode. For more information, see [Provisioning mode \(page 342\)](#).
- Ensure that the *shelf card cardType* attribute is 16pOC3PosAtm. For more information, see [Configuring a new processor card \(page 60\)](#)
- Add a logical processor (LP). For more information, see [Adding an LP and linking it to an LPT \(page 150\)](#).
- The features you specify in the *sw lpt featureList* attribute must be supported by the service bundle that you choose in step 3. See [NPU service bundles available for the 16-port OC-3/STM-1 POS ATM FP \(page 163\)](#) for a list of features.
- For conceptual information regarding NPU service bundle, see NN10600-551 *Nortel Multiservice Switch 7400/15000/20000 FP Configuration Reference*.

### Procedure steps

| Step | Action                                                                                        |
|------|-----------------------------------------------------------------------------------------------|
| 1    | Add the NPU subcomponent to LP.<br><b>add lp/&lt;n&gt; npu</b>                                |
| 2    | Choose a service bundle.<br><b>set lp/&lt;n&gt; npu serviceBundleName &lt;bundle_name&gt;</b> |
| 3    | Define the feature list.<br><b>set sw lpt featureList &lt;list_of_features&gt;</b>            |

--End--



### Variable definitions

| Variable           | Value                                                                                                                                                                                                                                                                                                                                                                                                           |
|--------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <n>                | The LP number.                                                                                                                                                                                                                                                                                                                                                                                                  |
| <bundle_name>      | The service bundle name. For MPLS, set it to <i>mplsAtmlp</i> . For PorsTrunk, set it to <i>PorsAtmlp</i> .                                                                                                                                                                                                                                                                                                     |
| <list_of_features> | List of names of features required to support the MPLS service or the PorsTrunk service. For more information about configuring MPLS, see NN10600-445 <i>Nortel Multiservice Switch 7400/15000/20000 Operations: Multiprotocol Label Switching</i> . For more information about configuring PORS, see NN10600-435 <i>Nortel Multiservice Switch 7400/15000/20000 Operations: Path-Oriented Routing System</i> . |

### Procedure job aid

#### NPU service bundles available for the 16-port OC-3/STM-1 POS ATM FP

| Service bundle name | Features in Sw Lpt featureList                                                                      |                                                                   |
|---------------------|-----------------------------------------------------------------------------------------------------|-------------------------------------------------------------------|
|                     | included                                                                                            | excluded                                                          |
| mplsAtmlp           | atmCore<br>ip<br>atmTrunks<br><br>All Mpls related features:<br>mplsLdp<br>mplsRsvpTe<br>rfc2547bis | porsTrunks                                                        |
| porsAtmlp           | atmCore<br>ip<br>atmTrunks<br>porsTrunk                                                             | All MPLS related features:<br>mplsLdp<br>mplsRsvpTe<br>rfc2547bis |



## Configuring the software features of an LPT

Add or delete software features from an LPT by changing its *featureList* attribute.

### Prerequisites

|                                                                                   |                                                                                                                                                                                                                                                                                           |
|-----------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | <p><b>CAUTION</b></p> <p><b>Deleting a feature from an in-use LPT</b></p> <p>If you delete a feature from an in-use LPT (referenced by an LP), the active processor card and the standby processor card reset. If no other in-use LPT contains the feature, the whole node can reset.</p> |
|-----------------------------------------------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

- For Nortel Multiservice Switch 15000 and Multiservice Switch 20000 nodes, applications and features fall into three categories: hot standby, warm standby, and cold standby. See [Understanding hitless services \(page 328\)](#) for definitions. Do not create an LPT that mixes cold standby applications or features with hot standby or a warm standby applications or features. A single cold standby application or feature in an LPT changes all other applications and features into cold standby.
- When changing the *featureList* attribute, make sure you specify the features in order of priority. Make the first feature listed the feature that you want the best performance.
- For more information on removing features, see the section [Deleting an LP \(page 167\)](#).
- Do the following procedure in provisioning mode. For more information, see [Provisioning mode \(page 342\)](#).

### Procedure steps

| Step | Action                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
|------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1    | <p>Add or delete features from the feature list of the LPT.</p> <pre><b>set Sw Lpt/&lt;lpt_name&gt; featureList &lt;featurechanges&gt;</b></pre> <p>Make sure your modified feature list specifies the features in order of priority. Make the first feature on the list the one for which you want the best performance.</p> <p>To delete a feature, put a tilde (~) before the feature name. For example, to delete the atmTrunks feature, use the following in &lt;featurechanges&gt;:</p> <pre><b>~atmTrunks</b></pre> <p>To add a feature, include the feature name on the list. To add the atmTrunks feature, use the following in &lt;featurechanges&gt;:</p> <pre><b>atmTrunks</b></pre> |



To clear the feature list and replace it with a new list, use an exclamation point (!) as the first element in the list. For example, to clear the current feature list and replace it with the atmTrunks feature, use the following list of changes:

```
! atmTrunks
```

**2** Verify that the changes are successful.

```
display Sw Lpt/<lpt_name> featureList
```

---

**--End--**

---

### Variable definitions

| Variable         | Value                                                        |
|------------------|--------------------------------------------------------------|
| <featurechanges> | A list of feature changes separated by spaces.               |
| <lpt_name>       | The name of the LPT for which you are changing the features. |
|                  |                                                              |



## Customizing port attributes

If required, you can customize any of the attributes associated with a port.

### Prerequisites

- For more information on attribute values, use the help command for the port type or refer to NN10600-060 *Nortel Multiservice Switch 7400/15000/20000 Component Reference*.
- Do the following procedure in provisioning mode. For more information, see [Provisioning mode \(page 342\)](#).

### Procedure steps

| Step    | Action                                                                                                                                                                              |
|---------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1       | Set the value of the port attribute.<br><br><code>set LogicalProcessor/&lt;n&gt; &lt;port&gt;/&lt;p&gt; [&lt;subcomponents&gt;]<br/>&lt;attribute&gt; &lt;attributevalue&gt;</code> |
| --End-- |                                                                                                                                                                                     |

### Variable definitions

| Variable         | Value                                                                                                                                 |
|------------------|---------------------------------------------------------------------------------------------------------------------------------------|
| <attribute>      | The name of the attribute.                                                                                                            |
| <attributevalue> | The value for the attribute.                                                                                                          |
| <n>              | The LP number.                                                                                                                        |
| <p>              | The port number.                                                                                                                      |
| <port>           | The port type.                                                                                                                        |
| <subcomponents>  | Represents any subcomponents (such as tributary ports or channels) that have provisionable attributes. This is an optional parameter. |



## Deleting an LP

Delete an LP by deleting its *LogicalProcessor (Lp)* component. When you delete an *Lp* component, you also delete all its subcomponents.

### Prerequisites

- You must also delete services that were associated with the deleted *Lp* component. To delete all associated services simultaneously, use the clear -rf prov command. Alternatively, you can delete every associated service individually using the delete command.
- If you delete an LP and are left with a processor card with no LP assigned to it, that processor card does not load when you activate your configuration changes.
- If you delete the last LP running a particular software feature, the CP resets when you activate your configuration changes. This situation occurs when the deleted LP uses an LPT that is not used by any other LP and contains a feature not contained by any other currently used LP:
- Do the following procedure in provisioning mode. For more information, see [Provisioning mode \(page 342\)](#).
- If you have deleted the LP of an active card, the semantic check indicates that the card will reset when you activate the configuration changes. If you have deleted the last LP running a particular software feature, the semantic check also indicates that the CP will reset when you activate the configuration.

### Procedure steps

| Step    | Action                                                                                                                                         |
|---------|------------------------------------------------------------------------------------------------------------------------------------------------|
| 1       | Delete the LP component and all of its subcomponents.<br><br><code>delete lp/&lt;n&gt;</code><br><br>The number of components deleted appears. |
| --End-- |                                                                                                                                                |

### Variable definitions

| Variable | Value                                    |
|----------|------------------------------------------|
| <n>      | The number of the LP you want to delete. |
|          |                                          |



## Deleting BITS ports on Multiservice Switch 7400

Delete a BITS port on a Nortel Multiservice Switch 7400 node if you will no longer use a BITS source as a reference for network synchronization or if you are removing a CP with BITS and replacing it with a regular CP.

### Prerequisites

- Do the following procedure in provisioning mode. For more information, see [Provisioning mode \(page 342\)](#).

### Procedure steps

| Step | Action                                                                                                                                                                                                            |
|------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1    | Delete the BITS ports.<br><br>This command deletes the external timing component and all its subcomponents. The number of components deleted appears.<br><br><b>delete lp/0 &lt;BITS_port&gt;EE1/&lt;port&gt;</b> |
| 2    | Complete the configuration changes. See <a href="#">Activating configuration changes (page 342)</a> .                                                                                                             |

--End--

### Variable definitions

| Variable    | Value                                       |
|-------------|---------------------------------------------|
| <BITS_port> | EDS1 (for DS1 lines) or EE1 (for E1 lines). |
| <port>      | 0 or 1.                                     |



---

## Deleting SETS ports on Multiservice Switch 7400

Delete a SETS port on a Nortel Multiservice Switch 7400 node if you will no longer use a SETS source as a reference for network synchronization or if you are removing a CP with BITS and SETS and replacing it with a regular CP.

### Procedure steps

---

| Step | Action                                                                                                                                                                                            |
|------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1    | Delete the SETS ports.<br><br>This command deletes the external timing component and all its subcomponents. The number of components deleted appears.<br><br><b>delete lp/0 SETS/&lt;port&gt;</b> |
| 2    | Complete the configuration changes. See <a href="#">Activating configuration changes (page 342)</a> .                                                                                             |

---

--End--

---

### Variable definitions

| Variable | Value   |
|----------|---------|
| <port>   | 0 or 1. |
|          |         |



## Scheduling a change between active and standby function processors

Schedule a change from the active to the standby function processors (FPs) in a sparing configuration if you want to move traffic to the standby FP at a designated time. You cannot schedule a switchover for the CP, that is, *Lp/0*.

### Prerequisites

- Do the following procedure in operational mode. For more information, see [Operational mode \(page 341\)](#).

### Procedure steps

| Step    | Action                                                                                                                                               |
|---------|------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1       | Schedule a switchover for a specific time.<br><code>switchover -time(&lt;yyyy&gt;--&lt;mm&gt;--&lt;dd&gt; &lt;hh&gt;:&lt;mn&gt;) Lp/&lt;n&gt;</code> |
| --End-- |                                                                                                                                                      |

### Variable definitions

| Variable | Value                 |
|----------|-----------------------|
| <dd>     | The two-digit day.    |
| <hh>     | The two-digit hour.   |
| <mm>     | The two-digit month.  |
| <mn>     | The two-digit minute. |
| <n>      | The number of the LP. |
| <yyyy>   | The four-digit year.  |



---

# Multiservice Switch 7400 bus maintenance

---

Maintain the two 800 Mbit/s buses to enable proper communication between the processor cards on each Nortel Multiservice Switch 7400 node.

## Prerequisites to Multiservice Switch 7400 bus maintenance

- If you are unfamiliar with the concepts relating to the Nortel Multiservice Switch 7400 bus, see [Understanding the Multiservice Switch 7400 bus \(page 320\)](#).

## Navigation

- [Locking and unlocking a bus \(page 172\)](#)
- [Enabling and disabling automatic bus clock testing \(page 173\)](#)
- [Interpreting the bus clock source status \(page 174\)](#)
- [Verifying which buses are in service \(page 176\)](#)



## Locking and unlocking a bus

Lock a bus to temporarily prevent it from carrying data. When you perform bus tests you must lock the bus. After testing, you must unlock the bus.

### Prerequisites

- For information on testing a bus, see NN10600-520 *Nortel Multiservice Switch 7400/15000/20000 Fault and Performance Management: Troubleshooting*.
- Do the following procedure in operational mode. For more information, see [Operational mode \(page 341\)](#).
- Ensure the other bus is unlocked and enabled. You can lock a bus only if the other bus is unlocked and enabled.

### Procedure steps

| Step    | Action                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
|---------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|         | <div style="border: 1px solid black; padding: 10px;">  <p><b>CAUTION</b><br/><b>Risk of data loss</b></p> <p>To reduce the risk of data loss, do not lock a bus during peak periods of traffic. Bus system capacity is reduced by half when a bus is locked, potentially causing minimal data loss due to congestion. If problems occur on the enabled bus, card crashes can also occur.</p> </div> |
| 2       | Lock the bus.<br><br><code>lock Shelf Bus/&lt;n&gt;</code>                                                                                                                                                                                                                                                                                                                                                                                                                            |
| 3       | While the bus is locked, perform any necessary testing.                                                                                                                                                                                                                                                                                                                                                                                                                               |
| 4       | Unlock the bus.<br><br><code>unlock Shelf Bus/&lt;n&gt;</code>                                                                                                                                                                                                                                                                                                                                                                                                                        |
| --End-- |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       |

### Variable definitions

| Variable | Value   |
|----------|---------|
| <n>      | x or y. |
|          |         |



## Enabling and disabling automatic bus clock testing

The automatic bus clock source test can cause minor data loss. You can enable and disable the automatic testing. By default, automatic bus clock source testing is disabled.

### Prerequisites

- If you disable automatic testing, you should manually test the bus clock source at least once a month. See NN10600-520 *Nortel Multiservice Switch 7400/15000/20000 Fault and Performance Management: Troubleshooting*.
- Do the following procedure in provisioning mode. For more information, see [Provisioning mode \(page 342\)](#).

### Procedure steps

---

| Step | Action                                                                                                                                                |
|------|-------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1    | To enable automatic testing, set the <i>automaticBusClockTest</i> attribute to enabled.<br><br><b>set Shelf Test automaticBusClockTest enabled</b>    |
| 2    | To disable automatic testing, set the <i>automaticBusClockTest</i> attribute to disabled.<br><br><b>set shelf test automaticBusClockTest disabled</b> |

---

--End--

---



## Interpreting the bus clock source status

When a Nortel Multiservice Switch 7400 node is performing automatic bus clock source testing, you can determine the status of the bus clock source by displaying the *clockSourceStatus* attribute. This attribute also shows the status of the bus clock source after a manual test.

### Prerequisites

- Do the following procedure in operational mode. For more information, see [Operational mode \(page 341\)](#).

### Procedure steps

---

| Step | Action                                                                                                                 |
|------|------------------------------------------------------------------------------------------------------------------------|
| 1    | Display the status of the bus clock source.<br><br><b>display Shelf Bus/* clockSourceStatus</b>                        |
| 2    | Use the table <a href="#">Interpreting bus clock source status (page 175)</a> to interpret the value of the attribute. |

---

--End--

---



## Procedure job aid

### Interpreting bus clock source status

| Test result    | Explanation                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |
|----------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| ok             | All operational cards can receive signals from the clock source. No remedial action is necessary.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| failed         | <p>At least one operational card is unable to receive signals from the clock source. This condition causes an alarm.</p> <p>Replace the hardware item that is most likely to have failed (see below) and rerun the bus test. Repeat until you correct the problem.</p> <p>The following are the most likely points of failure, in order, if a clock source fails for only one card:</p> <ul style="list-style-type: none"><li>• card that failed test</li><li>• card containing the clock source</li><li>• backplane</li></ul> <p>The following are the most likely points of failure, in order, if a clock source fails for multiple cards:</p> <ul style="list-style-type: none"><li>• card containing the clock source</li><li>• cards that failed test</li><li>• backplane</li></ul> <p>The card at the opposite end of the shelf from the active CP provides the alternate clock source. If the slot is empty, no alternate clock source is available.</p> |
| unknown        | The status of the clock source is not known. This is the normal clock source status when the automatic bus clock source testing is disabled. To determine the status of the clock source, manually run the bus clock source test. See NN10600-520 <i>Nortel Multiservice Switch 7400/15000/20000 Fault and Performance Management: Troubleshooting</i> .                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                        |
| testInProgress | The clock source is currently being tested. The new test runs after the current test is complete.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               |
| notApplicable  | The LP associated with the alternate clock source is down or not configured.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
|                |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |



## Verifying which buses are in service

To determine which buses are in service, view the operating mode of the backplane by typing the following command in operational mode. For information on working in operational mode, see [Operational mode \(page 341\)](#).

```
display Shelf backplaneOperatingMode
```

The backplaneOperatingMode attribute is displayed with one of the following values:

- dualBus—both buses are in service
- singleBusX—bus X is in service but bus Y is out of service
- singleBusY—bus Y is in service but bus X is out of service



---

# Multiservice Switch 15000 or Multiservice Switch 20000 fabric card configuration

---

Configure or display the attributes associated with Nortel Multiservice Switch 15000 or Multiservice Switch 20000 fabric cards as part of installing or maintaining these elements of system hardware.

- [Prerequisites to Multiservice Switch 15000 or Multiservice Switch 20000 fabric card configuration \(page 177\)](#)
- [Navigation \(page 177\)](#)

## Prerequisites to Multiservice Switch 15000 or Multiservice Switch 20000 fabric card configuration

- If you are unfamiliar with the concepts associated with Nortel Multiservice Switch fabric cards, see [Understanding the fabric card \(page 316\)](#).

## Navigation

- [Locking a fabric card \(page 178\)](#)
- [Unlocking a fabric card \(page 179\)](#)
- [Displaying the operating mode of fabrics \(page 180\)](#)
- [Displaying the status of a fabric card \(page 181\)](#)
- [Displaying the configuration or capacity of a fabric card \(page 182\)](#)



## Locking a fabric card

Lock a fabric card to deflect new traffic, or move existing traffic from the fabric to its mate. The system takes the fabric out of service without locking it when a fabric fault is detected.

### Prerequisites

- Do the following procedure in operational mode. For more information, see [Operational mode \(page 341\)](#).

### Procedure steps

| Step           | Action                                                                                                                                                                                                                                                                                                        |
|----------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1              | Check the status of the fabric cards to ensure that the mate can accommodate taking over all traffic on the node. You cannot lock a fabric card unless its mates is unlocked and enabled with LED status solid green.<br><br><b>display Shelf fabricCard/*</b>                                                |
| 2              | Lock the fabric card.<br><br><b>lock Shelf fabricCard/&lt;n&gt;</b><br><br>When the fabric card is locked, alarm 0000 1000 is generated. Record whether the upper or the lower fabric card was locked.<br><br>When locking the fabric card fails, alarm 7002 0013 is generated with a reason for the failure. |
| <b>--End--</b> |                                                                                                                                                                                                                                                                                                               |

### Variable definitions

| Variable | Value                                                                                                                        |
|----------|------------------------------------------------------------------------------------------------------------------------------|
| <n>      | x (for the fabric card in the upper position of the node) or y (for the fabric card in the lower position of the same node). |
|          |                                                                                                                              |



## Unlocking a fabric card

Unlock a fabric card to return it to service. Load-balancing between the fabric cards recurs by having the formerly transferred traffic-in-progress moved back to the recently returned to service mate fabric card.

The unlock command works on the card mounted in the fabric slot, even if you replace the locked card with a new one.

### Prerequisites

- Do the following procedure in operational mode. For more information, see [Operational mode \(page 341\)](#).

### Procedure steps

| Step    | Action                                                                    |
|---------|---------------------------------------------------------------------------|
| 1       | Unlock the fabric card.<br><code>unlock Shelf fabricCard/&lt;n&gt;</code> |
| --End-- |                                                                           |

### Variable definitions

| Variable | Value   |
|----------|---------|
| <n>      | x or y. |
|          |         |



## Displaying the operating mode of fabrics

Display the operating mode of the fabric cards to determine if both fabric cards are in service (dual-fabric mode) or only one fabric card is in service (single-fabric mode).

### Prerequisites

- Do the following procedure in operational mode. For more information, see [Operational mode \(page 341\)](#).

### Procedure steps

---

| Step | Action                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
|------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1    | <p>Determine which fabric cards are in service.</p> <p><b>display Shelf backplaneOperatingMode</b></p> <p>The <i>backplaneOperatingMode</i> attribute appears with one of the following values:</p> <ul style="list-style-type: none"><li>• dualFabric—both fabric cards are in service and their LEDs are solid green</li><li>• dualFabricDegraded—both fabric cards are in service but have at least one disabled <i>fabricPort</i> on an FP; both LEDs are solid green</li><li>• singleFabricX—fabric card x is in service, but fabric card y is out of service and its LED is red</li><li>• singleFabricY—fabric card y is in service, but fabric card x is out of service and its LED is red</li></ul> <p>The reasons for a fabric card or fabric port being out of service are indicated in the 7002 series of alarms.</p> |

---

**Attention:** If the reset button under the handle of a Multiservice Switch 20000 fabric card is not fully engaged, the fabric card remains out of service and shows a solid red LED.

---

--End--

---



## Displaying the status of a fabric card

Use the attributes of the *FabricCard* component to view information on the status of a fabric card.

### Prerequisites

- Do the following procedure in operational mode. For more information, see [Operational mode \(page 341\)](#).

### Procedure steps

| Step    | Action                                                                                                                                                                                                                                                                                                                                                                                                                         |
|---------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1       | <p>Display the status of a particular fabric card.</p> <p><b>display Shelf fabricCard/&lt;n&gt;</b></p> <p>The PEC of the card is given and a list of operational attributes of the <i>FabricCard</i> component appears. See the figure <a href="#">Fabric components and attributes (page 317)</a>.</p> <p>The fabric is communicating with the switch (in-service) when the value of <i>operationalState</i> is enabled.</p> |
| --End-- |                                                                                                                                                                                                                                                                                                                                                                                                                                |

### Variable definitions

| Variable | Value   |
|----------|---------|
| <n>      | x or y. |
|          |         |



## Displaying the configuration or capacity of a fabric card

Use the attribute *slotConfiguration* of the *Shelf* component to view the configuration or capacity of the fabric card after it is installed, powered up, and loaded. The configuration identifies the type of node as a Nortel Multiservice Switch 15000 or Multiservice Switch 20000.

---

**Attention:** For the initial release of Multiservice Switch 20000, the fabric card is the 70 G version with PEC NTPN02, but the node backplane is designed to accommodate other capacities.

---

### Prerequisites

- Do the following procedure in operational mode. For more information, see [Operational mode \(page 341\)](#).

### Procedure steps

---

| Step | Action |
|------|--------|
|------|--------|

---

- |   |                                                             |
|---|-------------------------------------------------------------|
| 1 | Display the slot configuration of a particular fabric card. |
|---|-------------------------------------------------------------|

**display Shelf slotConfiguration**

One of the following configurations is displayed:

- 40G for a Multiservice Switch 15000 node
- 70G for a Multiservice Switch 20000 node

---

--End--

---



---

# Multiservice Switch file system maintenance

---

Maintain the Nortel Multiservice Switch file system so that software, configuration files, and data generated by the node are stored properly.

- [Prerequisites to Multiservice Switch file system maintenance \(page 183\)](#)
- [Navigation \(page 183\)](#)

## Prerequisites to Multiservice Switch file system maintenance

- If you are unfamiliar with Nortel Multiservice Switch file system concepts, see [Understanding the Multiservice Switch file system \(page 322\)](#).

## Navigation

- [Synchronizing disks \(page 184\)](#)
- [Displaying information about the file system \(page 185\)](#)
- [Determining file system capacity \(page 186\)](#)
- [Changing the volume name of a disk \(page 187\)](#)
- [Formatting a disk \(page 189\)](#)



## Synchronizing disks

Synchronize disks so that both the active and standby CPs in a node have identical content.

Depending on the amount of stored data on the active disk and the difference between the two disks, the synchronization can take several hours.

### Prerequisites

- Do the following procedure in operational mode. For more information, see [Operational mode \(page 341\)](#).

### Procedure steps

---

| Step | Action                                          |
|------|-------------------------------------------------|
| 1    | Synchronize the disks.<br><b>synchronize Fs</b> |

---

--End--

---



---

## Displaying information about the file system

Display operational attributes of the file system to determine the status, usage, and available space for the file system as a whole, and on individual disks.

Displayed information about the file system includes the volume name, synchronization status, capacity, free space, and usage percentage.

Displayed information about the disks of the file system includes the volume name, capacity, and free space on the disk. The instance number of the *Disk* component corresponds to the slot number of the CP that holds the disk.

---

**Attention:** If there are different numbers of bad blocks on the disks in a dual-disk system, the reported free space can differ on the two disks.

---

### Prerequisites

- Do the following procedure in operational mode. For information on working in operational mode, see [Operational mode \(page 341\)](#).

### Procedure steps

---

| Step | Action |
|------|--------|
|------|--------|

---

|   |                                            |
|---|--------------------------------------------|
| 1 | Display information about the file system. |
|---|--------------------------------------------|

```
display Fs
```

|   |                                                         |
|---|---------------------------------------------------------|
| 2 | Display information about the disks of the file system. |
|---|---------------------------------------------------------|

```
display Fs Disk/*
```

---

--End--

---



## Determining file system capacity

Determine file system capacity to ensure that a CP3 to CP2 synchronization can occur without failure.

### Prerequisites

- Do the following procedure in operational mode. For more information, see [Operational mode \(page 341\)](#).

### Procedure steps

| Step    | Action                                                                                                                                                                                                                                                                                                                    |
|---------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1       | Display information about the file system on the CP2 and CP3 using the procedure <a href="#">Displaying information about the file system (page 185)</a> .                                                                                                                                                                |
| 2       | Subtract the amount of free space from the capacity to determine the amount of space available on the CP3 disk:<br><br><b>freeSpace - capacity = &lt;amount_of_data&gt;</b><br><br>If the <amount_of_data> exceeds the value of the <i>capacity</i> attribute for the CP2, the synchronization from CP3 to CP2 will fail. |
| --End-- |                                                                                                                                                                                                                                                                                                                           |

### Variable definitions

| Variable         | Value                                  |
|------------------|----------------------------------------|
| <amount_of_data> | The amount of space available on a CP. |
|                  |                                        |



## Changing the volume name of a disk

Change the volume name of a disk by setting its *volumeName* attribute. The disks on the active and standby CPs must have the same volume name in order for the Nortel Multiservice Switch system to automatically synchronize them.

### Prerequisites

- Do the following procedure in operational mode. For more information, see [Operational mode \(page 341\)](#).

### Procedure steps

| Step | Action |
|------|--------|
|------|--------|



#### CAUTION

##### Locking the file system

Minimize the time you spend in lock Fs. Locking the file system results in a condition where configuration activity can fail, downloading can fail, and spooling can stop if the disk remains in this state too long.

- 3 If you are changing the volume name of the active CP disk, lock the file system.

```
lock Fs
```

- 4 Lock the disk whose volume name you want to change.

```
lock Fs Disk/<n>
```

- 5 Set the volume names on the disk.

```
set Fs Disk/<n> volumeName <volumename>
```

- 6 Unlock the disk.

```
unlock Fs Disk/<n>
```

- 7 If you previously locked the file system, unlock it.

```
unlock Fs
```

--End--



### Variable definitions

| Variable     | Value                                                                                                 |
|--------------|-------------------------------------------------------------------------------------------------------|
| <n>          | The number of the disk. The disk number corresponds to the slot number of the CP that holds the disk. |
| <volumename> | The new volume name of the disk (up to 11 characters).                                                |
|              |                                                                                                       |



## Formatting a disk

Format a disk to erase all files and directories and reset the volume name of the disk. To support synchronization between different-sized disks, Nortel Multiservice Switch systems can format a disk to a size smaller than its physical capacity.

### Prerequisites

- Do the following procedure in operational mode. For more information, see [Operational mode \(page 341\)](#).

### Procedure steps

| Step | Action |
|------|--------|
|------|--------|



#### CAUTION

**Never format the disk on the active CP. Loss of important files can result from using the format command.**

If your node has only one CP, do not format its disk. Only format a disk if you have two CPs and one of them is in standby mode.

If you need to format the disk on the active CP and you have a two-CP node, first use the switchover command to make the active CP the standby. Once it has become the standby CP, you can format its disk.

- 1 Lock the disk on the standby CP.  
**lock Fs Disk/<n>**
- 2 Format the disk on the standby CP to its maximum size.  
**format -volumename(<volumename>) Fs Disk/<n>**  
If you want to format the disk to a smaller size to maintain backward compatibility with older equipment, use the **-backward** option.  
**format -volumename(<volumename>) -backward Fs Disk/<n>**
- 3 Do a disk Read test to exclude all bad disk media in the file system. Due to the above format, the bad disk medium information is lost and needs to be re-established.
- 4 Set test type.  
**set Fs disk/<n> test type diskRead**
- 5 Start the test.  
**start Fs disk/<n> test**
- 6 Wait for its completion.



- 7 Fix the file system due to the possible bad media found.  
**set Fs disk/<n> test type filesystemCheck**  
**start fs disk/<n> test**
- 8 Wait for its completion.
- 9 Unlock the disk.  
**unlock Fs Disk/<n>**
- 10 Synchronize the file system.  
**synchronize Fs**  
The synchronization can take several hours depending on the amount of data on the active disk.

---

--End--

---

### Variable definitions

| Variable     | Value                                                                                                                       |
|--------------|-----------------------------------------------------------------------------------------------------------------------------|
| <n>          | The slot number of the standby CP.                                                                                          |
| <volumename> | The volume name of the disk. If you do not specify a volume name, the system uses the first 11 characters of the node name. |
|              |                                                                                                                             |



---

# Multiservice Switch electrical interface equipment protection configuration

---

Configure electrical function processor (FP) equipment sparing so that the spare card can take over in case the main card fails. This type of equipment sparing uses a single LP to define both the main and spare FP.

- [Prerequisites to Multiservice Switch electrical interface equipment protection configuration \(page 191\)](#)
- [Configuring one-for-n equipment protection for electrical interfaces \(page 192\)](#)

## Prerequisites to Multiservice Switch electrical interface equipment protection configuration

- If you are unfamiliar with the concepts associated with electrical equipment sparing in Nortel Multiservice Switch networks, see [Understanding equipment protection for Multiservice Switch electrical interfaces \(page 257\)](#).



## Configuring one-for-n equipment protection for electrical interfaces

Configure one-for-n equipment protection for Nortel Multiservice Switch device electrical interfaces. The configuration settings for equipment protection are different for electrical interfaces that are one-for-one (1:1) or one-for-n (1:n) where n is not 1.

### Procedure steps

| Step | Action                                                                                                                                                                                                                                                                                                                           |
|------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1    | Configure the sparing panel connection to specify the main card.<br><b>set Shelf Card/&lt;m&gt; sparingConnection &lt;connector&gt;</b>                                                                                                                                                                                          |
| 2    | Configure the sparing panel connection to specify the spare card. For a one-for-one configuration:<br><b>set Shelf Card/&lt;n&gt; sparingConnection notApplicable</b><br>For a one-for-n configuration:<br><b>set Shelf Card/&lt;n&gt; sparingConnection spare</b>                                                               |
| 3    | For the LP to be spared, set the attribute <i>spareCard</i> to point to the spare FP.<br><b>set LogicalProcessor/&lt;x&gt; spareCard Shelf Card/&lt;n&gt;</b>                                                                                                                                                                    |
| 4    | Verify that you have correctly configured the equipment sparing.<br><b>display Shelf Card/* sparingConnection</b>                                                                                                                                                                                                                |
| 5    | Confirm that the status of <i>sparingConnection</i> is appropriate for your one-for-one (1:1) or one-for-n (1:n) configuration as described in NN10600-060 <i>Nortel Multiservice Switch 7400/15000/20000 Component Reference</i> .<br><b>display LogicalProcessor/* mainCard</b><br><b>display LogicalProcessor/* spareCard</b> |
| 6    | To configure the sparing behavior so that an immediate switchover will occur if the main FP fails, set the attribute <i>oneForNSparingBehavior</i> to <i>immediateSwitchOver</i> .<br><b>set Lp/n oneForNSparingBehavior immediateSwitchOver</b>                                                                                 |

**Attention:** This step is optional. The default setting for the attribute is *delayedSwitchOver*.

7 Complete the configuration changes. See [Activating configuration changes \(page 342\)](#).

--End--



### Variable definitions


| Variable    | Value                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
|-------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <connector> | <p>is the connector on the sparing panel. The default value is <i>notApplicable</i>. If the processor card is the spare card, use the value <i>spare</i>. If the processor card is the main card on a Multiservice Switch 7400 series nodes, use one of these values: <i>mainA</i>, <i>mainB</i>, <i>mainC</i>, or <i>mainD</i>. If the processor card is the main card on a Multiservice Switch 15000 or Multiservice Switch 20000 node, or an MSA32 FP or MSA8 FP of a Multiservice Switch 7400, use one of these values: <i>mainA</i>, <i>mainB</i>, <i>mainC</i>, <i>mainD</i>, <i>mainE</i>, or <i>mainF</i>.</p> <p><b>Attention:</b> If the processor card is to be part of a one-for-one (1:1) sparing configuration, using a one-for-one sparing panel, leave the attribute <i>sparingConnection</i> set to the default value <i>notApplicable</i>.</p> |
| <m>         | is the slot number of the main card, or a new processor card that you intend to use as a main card.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |
| <n>         | is the slot number of the spare card.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            |
| <x>         | is the instance value of the LP.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                 |

### Procedure job aid

For Nortel Multiservice Switch 15000 and Multiservice Switch 20000 nodes, use the figure [FP cable connections on a one-for-six sparing panel \(page 194\)](#) and the table [Locations on the sparing panel and corresponding connector values \(page 194\)](#) to determine the value of <connector> that corresponds to the physical location of the connector on the sparing panel. For example, the connector in the upper right-hand corner of the sparing panel, as shown in the figure [FP cable connections on a one-for-six sparing panel \(page 194\)](#), is labeled FP4 and as such corresponds to a value of *mainD* in the table [Locations on the sparing panel and corresponding connector values \(page 194\)](#).



**FP cable connections on a one-for-six sparing panel**

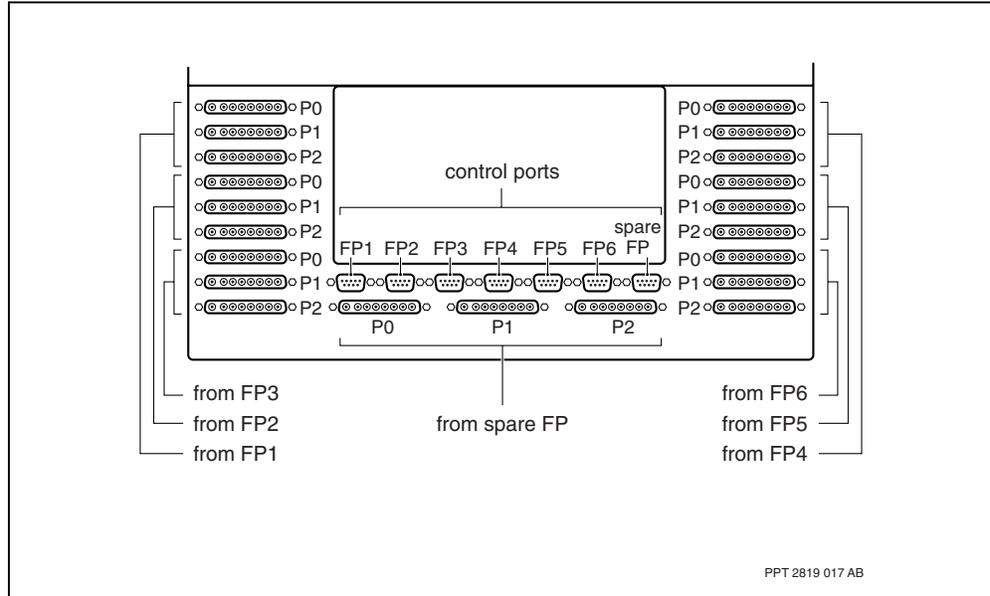

In the table [Locations on the sparing panel and corresponding connector values \(page 194\)](#), FPn corresponds to the location of FP connectors as shown in [FP cable connections on a one-for-six sparing panel \(page 194\)](#). Determine the value of <connector> by mapping the corresponding location on the sparing panel.

**Locations on the sparing panel and corresponding connector values**

| Sparing panel connector | <connector> value                                                                                                                              |
|-------------------------|------------------------------------------------------------------------------------------------------------------------------------------------|
| FP1                     | mainA                                                                                                                                          |
| FP2                     | mainB                                                                                                                                          |
| FP3                     | mainC                                                                                                                                          |
| FP4                     | mainD                                                                                                                                          |
| FP5                     | mainE (only applies to Multiservice Switch 15000 and Multiservice Switch 20000 nodes, or Multiservice Switch 7400 nodes MSA32 FPs or MSA8 FPs) |
| FP6                     | mainF (only applies to Multiservice Switch 15000 and Multiservice Switch 20000 nodes, or Multiservice Switch 7400 nodes MSA32 FPs or MSA8 FPs) |



---

# Multiservice Switch 7400 optical interface line and equipment protection configuration

---

Set up line automatic protection switching (line APS) to enable a form of SONET line sparing on optical FPs. Under line APS, two lines are defined: working and protection. While both lines carry the user payload, only one is deemed active at any time. The active line is the line where the receiving end takes its data.

Set up 1+1 inter-card line protection and equipment protection for an STM-1 optical channelized CES/ATM/IMA (2pSTM1Ch) FP on a Nortel Multiservice Switch 7400. With 1+1 protection, one line is used to receive the incoming traffic and both working and standby lines are used to transmit the outgoing traffic. With the introduction of the 2pSTM1Ch FP, the Multiservice Switch 7400 now supports the *Laps* component, along with *Aps*.

## Prerequisites to Multiservice Switch 7400 optical interface line and equipment protection configuration

- If you are unfamiliar with line protection for Nortel Multiservice Switch 7400 nodes, see [Understanding line protection for Multiservice Switch 7400 optical interfaces \(page 266\)](#)
- You are aware of the configuration considerations pertaining to line and equipment protection on two mated 2pSTM1Ch FPs as outlined in the 2 port STM-1 optical channelized CES/ATM/IMA FP configuration considerations section in NN10600-551 *Nortel Multiservice Switch 7400/15000/20000 FP Configuration Reference*.

## Navigation

- [Configuring line protection for Multiservice Switch 7400 optical interfaces \(page 197\)](#)
- [Configuring line and equipment protection for Multiservice Switch 7400 optical interfaces \(page 199\)](#)
- [Locking the protection line on Multiservice Switch 7400 nodes \(page 201\)](#)



- [Switching between the working and protection lines on Multiservice Switch 7400 nodes \(page 202\)](#)
- [Clearing a switch request on Multiservice Switch 7400 nodes \(page 203\)](#)



## Configuring line protection for Multiservice Switch 7400 optical interfaces

Configure line automatic protection switching (Line APS) to protect SONET or SDH ports on Nortel Multiservice Switch 7400 optical cards.

---

**Attention:** You cannot connect an optical interface on one Multiservice Switch 7400 node that uses the *Aps* component, to an optical interface on another Multiservice Switch 7400 node that does not use the *Aps* component.

---

### Prerequisites

- The logical processor type (LPT) associated with these ports must have Line APS in its feature list.
- See NN10600-551 *Nortel Multiservice Switch 7400/15000/20000 FP Configuration Reference* for information on port numbers for APS protection pairs.

### Procedure steps

---

| Step | Action                                                                                                                                                                                                                                                                                                                                                                                                                |
|------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1    | Configure the line APS feature.<br><b>set sw lpt/aps featurelist aps</b>                                                                                                                                                                                                                                                                                                                                              |
| 2    | Link the logical processor (LP) to the line APS application.<br><b>set sw lp/&lt;n&gt; lpt sw lpt/aps</b>                                                                                                                                                                                                                                                                                                             |
| 3    | Add the <i>AutomaticProtectionSwitching</i> component.<br><b>add aps/&lt;a&gt;</b>                                                                                                                                                                                                                                                                                                                                    |
| 4    | Link the <i>AutomaticProtectionSwitching</i> component to the ports on the LP.<br><b>set aps/&lt;a&gt; workingLine lp/&lt;n&gt; &lt;port&gt;/&lt;p&gt; Path/0</b><br><b>set aps/&lt;a&gt; protectionLine lp/&lt;n&gt; &lt;port&gt;/&lt;q&gt; Path/0</b>                                                                                                                                                               |
| 5    | If the line terminating equipment at both the near and far ends should determine the receiving interface, change the protection mode to bidirectional.<br><b>set aps/&lt;a&gt; mode bidirectional</b><br><br>Bidirectional mode must be configured at both ends. The default setting is unidirectional. This means that the line terminating equipment at each end determines which interface it receives traffic on. |
| 6    | If you want Line APS to revert automatically from the protection to the working line once a failure has cleared, change the scheme to revertive.<br><b>set aps/&lt;a&gt; revertive yes</b>                                                                                                                                                                                                                            |

---



The default setting is non-revertive. This means that after a failure has cleared, the protection line stays active until the operator issues a switchover command.

- 7 Verify your configuration of the *AutomaticProtectionSwitching* component.  
**display aps /<a>**
- 8 Check, activate and confirm the provisioning changes, see [Activating configuration changes \(page 342\)](#).

---

--End--

---

### Variable definitions

| Variable | Value                                                                                                               |
|----------|---------------------------------------------------------------------------------------------------------------------|
| <laps>   | is the LAPS identifying number.                                                                                     |
| <n>      | is the instance of the LP linked to the line APS application. At this point, lp/<n> is configured as the main card. |
| <p>      | is the LP number of the main card.                                                                                  |
| <port>   | is the port type, either <i>Sonet</i> or <i>Sdh</i> .                                                               |
| <q>      | is the LP number of the standby card.                                                                               |
|          |                                                                                                                     |



## Configuring line and equipment protection for Multiservice Switch 7400 optical interfaces

Configure Multiplex Section Protection (MSP) to protect SDH ports on Nortel Multiservice Switch 7400STM-1 optical channelized CES/ATM/IMA (2pSTM1Ch) FPs.

### Prerequisites

- The logical processor type (LPT) associated with the SDH ports must have the *Laps* component in its feature list.
- When you add *Aps* in the feature list, you have to first activate *prov* then add *Laps*.

### Procedure steps

| Step | Action                                                                                                                                                                                                                                                                                                                                                            |
|------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1    | <p>Add an SDH port to the protected <i>LogicalProcessor (Lp)</i> components for the main and standby 2pSTM1Ch FPs.</p> <pre>add lp/&lt;p&gt; sdh/&lt;sdh&gt;</pre> <pre>add lp/&lt;q&gt; sdh/&lt;sdh&gt;</pre> <p>The <i>OpticalModule</i> component is added automatically under the <i>Sdh</i> component if <i>cardType</i> has been specified as 2pSTM1Ch.</p> |
| 2    | <p>Set the type of SFP optical module (<i>om</i>) for each port on both cards.</p> <pre>set lp/&lt;p&gt; sdh/&lt;sdh&gt; om type &lt;m&gt;</pre> <pre>set lp/&lt;q&gt; sdh/&lt;sdh&gt; om type &lt;m&gt;</pre>                                                                                                                                                    |
| 3    | <p>Add the <i>Laps</i> component.</p> <pre>add laps/&lt;laps&gt;</pre> <p>The <i>CrossConnect (Xc)</i> component is created automatically when the <i>Laps</i> component is added.</p>                                                                                                                                                                            |
| 4    | <p>Set the working and protection lines.</p> <pre>set laps/&lt;laps&gt; workingLine lp/&lt;p&gt; sdh/&lt;sdh&gt;</pre> <pre>set laps/&lt;laps&gt; protectionLine lp/&lt;q&gt; sdh/&lt;sdh&gt;</pre>                                                                                                                                                               |
| 5    | <p>Add the high order path component (<i>Vc4</i>).</p> <pre>add laps/&lt;laps&gt; vc4/&lt;vc4&gt;</pre>                                                                                                                                                                                                                                                           |
| 6    | <p>Add the low order path component (<i>Vc12</i>) and tributaries.</p> <pre>add laps/&lt;laps&gt; vc4/&lt;vc4&gt; vc12/&lt;k,1,m&gt;</pre> <p>When the <i>Vc12</i> component is added, the <i>E1</i> component and the <i>Chan</i> component with all timeslots, except timeslot 16, are automatically</p>                                                        |



added. On the 2pSTM1Ch, the timeslots are put under *Chan/0* for all supported services.

- 7 Add the *AtmCell* component if the *Chan/0* on the 2pSTM1Ch is used for ATM or IMA services

**add Laps/<laps> vc4/<vc4> vc12/<k,l,m> E1 Chan/0 AtmCell**

- 8 Check, activate, and confirm the provisioning.

**check Prov**

**activate Prov**

**confirm Prov**

**--End--**

### Variable definitions

| Variable | Value                                                                                                                                                                      |
|----------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <k,l,m>  | is the <i>Vc12</i> component path value where k=1-3, l=1-7, m=1-3, ATMIF cannot be used on E1 57 to 62 or k=3, l=2 to 7 and m=3 in <i>Vc12/k,l,m</i>                       |
| <laps>   | is the <i>Laps</i> identifying number.                                                                                                                                     |
| <m>      | is type of optical module used for this port. The possible values are:<br>OC3SmLr (Long Haul: SDH STM1 L-1.1 compliant)<br>OC3SmIrr (Short Haul: SDH STM1 S-1.1 compliant) |
| <n>      | is the instance of the LP linked to the line APS application. At this point, lp/<n> is configured as the main card.                                                        |
| <p>      | is the LP number of the main card.                                                                                                                                         |
| <port>   | is the port type, either <i>Sonet</i> or <i>Sdh</i> .                                                                                                                      |
| <q>      | is the LP number of the standby card.                                                                                                                                      |
| <sdh>    | is the SDH identifying number.                                                                                                                                             |
| <vc4>    | is the number of the <i>Vc4</i> component. There is only one <i>Vc4</i> per STM-1                                                                                          |



## Locking the protection line on Multiservice Switch 7400 nodes

Lock the protection line on Nortel Multiservice Switch 7400 nodes to prevent the APS or MSP system from using the protection line as the active line.

There are several commands the operator can use to set the active line. The *protectionLockout* verb prevents the protection line from being used as the active channel. If the protection line is active when *protectionLockout* is issued, the working line becomes active.

### Procedure steps

---

| Step | Action                                                                                 |
|------|----------------------------------------------------------------------------------------|
| 1    | Lock out the protection line for APS.<br><code>protectionLockout Aps/&lt;n&gt;</code>  |
| 2    | Lock out the protection line for MSP.<br><code>protectionLockout Laps/&lt;n&gt;</code> |

---

--End--

---

### Variable definitions

| Variable | Value                                                       |
|----------|-------------------------------------------------------------|
| <n>      | is the instance of the <i>Aps</i> or <i>Laps</i> component. |
|          |                                                             |



## Switching between the working and protection lines on Multiservice Switch 7400 nodes

Change between the working and protection lines on Nortel Multiservice Switch 7400 nodes to manually override the APS or MSP system and specify which line the system uses as the active line.

You can issue the switch command when the *Aps* or *Laps* component is locked or unlocked.

### Prerequisites

- The *switch* verb is used to effect a change on the active line. The *-force* option is used to invoke the changeover with the higher priority *nearEndRequest* value of *forcedSwitch*. When *-force* is not used as an option, the *nearEndRequest* value is the lower priority *manualSwitch*.
- The working and protection lines should be synchronized with the same timing source to make sure there is no service impact during equipment or line switchovers.

### Procedure steps

| Step    | Action                                                                                                                                                                                                            |
|---------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1       | Enter one of the following commands to change the working and protection lines for APS.<br><br><pre>switch [-force] -protectionToWorking Aps/&lt;n&gt; switch [-force] -workingToProtection Aps/&lt;n&gt;</pre>   |
| 2       | Enter one of the following commands to change the working and protection lines for MSP.<br><br><pre>switch [-force] -protectionToWorking Laps/&lt;n&gt; switch [-force] -workingToProtection Laps/&lt;n&gt;</pre> |
| --End-- |                                                                                                                                                                                                                   |

### Variable definitions

| Variable | Value                                                       |
|----------|-------------------------------------------------------------|
| <n>      | is the instance of the <i>Aps</i> or <i>Laps</i> component. |
|          |                                                             |



## Clearing a switch request on Multiservice Switch 7400 nodes

Clear a switch request on Nortel Multiservice Switch 7400 node to allow the APS or MSP system to automatically select the active line. Using the *clear* command clears the following *nearEndRequest* values:

- lockoutOfProtection
- forcedSwitch
- manualSwitch

### Procedure steps

---

| Step | Action |
|------|--------|
|------|--------|

---

|   |                                 |
|---|---------------------------------|
| 1 | Clear a switch request for APS. |
|---|---------------------------------|

**clear Aps/<n>**

|   |                                 |
|---|---------------------------------|
| 2 | Clear a switch request for MSP. |
|---|---------------------------------|

**clear Laps/<n>**

---

--End--

---

### Variable definitions

| Variable | Value                                                       |
|----------|-------------------------------------------------------------|
| <n>      | is the instance of the <i>Aps</i> or <i>Laps</i> component. |
|          |                                                             |



---

# Multiservice Switch 15000 and 20000 optical interface line and equipment protection configuration

---

Configure or modify line automatic protection switching (line APS or LAPS) on Nortel Multiservice Switch 15000 and Multiservice Switch 20000 nodes to extend the line APS functionality available from Multiservice Switch 7400 series nodes.

- [Prerequisites to Multiservice Switch 15000 and Multiservice Switch 20000 optical interface line and equipment protection configuration \(page 204\)](#)
- [Navigation \(page 204\)](#)

## Prerequisites to Multiservice Switch 15000 and Multiservice Switch 20000 optical interface line and equipment protection configuration

- If you are unfamiliar with the concepts associated with line and equipment protection or optical interfaces, see [Understanding line and equipment protection for Multiservice Switch 15000 and Multiservice Switch 20000 optical interfaces \(page 261\)](#).

## Navigation

- [Configuring line and equipment protection for Multiservice Switch 15000 and Multiservice Switch 20000 optical interfaces \(page 206\)](#)
- [Configuring line protection for optical interfaces on Multiservice Switch 15000 and Multiservice Switch 20000 nodes \(page 210\)](#)
- [Converting from a non-protected FP to a protected FP with LAPS on Multiservice Switch 15000 and Multiservice Switch 20000 nodes \(page 212\)](#)
- [Converting from single-FP to dual-FP protection \(page 214\)](#)
- [Configuring Y-protection for dual FPs in a Multiservice Switch 15000 and Multiservice Switch 20000 nodes \(page 216\)](#)



- [Locking the protection line on Multiservice Switch 15000 and Multiservice Switch 20000 nodes \(page 220\)](#)
- [Switching between the working and protection line on Multiservice Switch 15000 and Multiservice Switch 20000 nodes \(page 221\)](#)
- [Clearing switch requests on Multiservice Switch 15000 and Multiservice Switch 20000 nodes \(page 222\)](#)



## Configuring line and equipment protection for Multiservice Switch 15000 and Multiservice Switch 20000 optical interfaces

Configure line automatic protection switching (line APS or LAPS) to protect against line failures on Nortel Multiservice Switch 15000 and Multiservice Switch 20000 optical cards. By configuring the working and protection ports of line APS on different LPs, equipment protection is also enabled in addition to line protection.

### Prerequisites

- The node must meet the requirements listed in [Requirements for configuring line and equipment protection for Multiservice Switch 15000 and Multiservice Switch 20000 optical interfaces \(page 263\)](#)
- You cannot connect an optical interface on a Multiservice Switch 15000 or Multiservice Switch 20000 node that uses the *Laps* component, to an optical interface on another Multiservice Switch 15000 or Multiservice Switch 20000 node that does not use the *Laps* component, or to any third party optical interface that does not support line APS.
- When the dual-FP configuration involves the 16-port OC-3/STM-1 POS and ATM cards (16pOC3PosAtm or NTHW44), the Y-protection capability supports LAPS for dual FPs at the near end while LAPS is unsupported at the far end interface (Multiservice Switch node or non-Multiservice Switch node). Refer to the procedure [Configuring Y-protection for dual FPs in a Multiservice Switch 15000 and Multiservice Switch 20000 nodes \(page 216\)](#).
- You can use the *LineAutomaticProtectionSwitching* component in an equipment sparing configuration to provide both line and equipment protection at the same time.
- See NN10600-551 *Nortel Multiservice Switch 7400/15000/20000 FP Configuration Reference* at each description of a card type for limitations about choosing slots and port numbers for LAPS protection pairs.
- The logical processor type (LPT) associated with these ports must have APS in its feature list.
- The software logical processor type (SW LPT) of the logical processor (LP) must be the same for the working line and the protection line attributes.
- The attributes for the working and the protection lines:
  - cannot be empty
  - must have the same card types
  - for FPs that use small-form pluggable (SFP) optical modules, must have the same type and vintage of optical module



- When linked to the LAPS component, SDH or SONET components must have the same instance and cannot have provisioned subcomponents.
- Only a single *vc4* or *sts* component may be provisioned under the LAPS component. See NN10600-551 *Nortel Multiservice Switch 7400/15000/20000 FP Configuration Reference* at the configuration considerations of each card type for the way LAPS handles this per type of optical FP.

## Procedure steps

| Step | Action |
|------|--------|
|------|--------|



### CAUTION

#### Risk of loss of service by interface attribute mismatch

Special care should be taken when connecting an optical interface on one Multiservice Switch 15000 or Multiservice Switch 20000 node using the *Laps* component for equipment protection, to another optical interface on another Multiservice Switch 15000 or Multiservice Switch 20000 node that does not. You can make such a connection when both Multiservice Switch nodes are connected through an optical transport device, such as a Nortel OC-48 TransportNode or a third party device.

A mismatch can occur between the interface attributes set through the *Laps* component of the first Multiservice Switch node and the equivalent interface attribute set through the port components of the LP of the second Multiservice Switch node. In particular, the default value of the *alarmActDelay* attribute is 2000 when set through a *Laps* component, but only 500 when set through a port component. This can cause loss of service between both nodes when an equipment protection switchover occurs on the node using the *Laps* component.

To avoid loss of service, ensure the interface attributes set through the port component match the equivalent interface attributes set through the *Laps* component. For example, the *alarmActDelay* attribute of each node should be set to 2000.

1 Add the *Laps* component.

```
add Laps/<a>
```

2 Add the path component, either *Sts* for Sonet or *Vc4* for Sdh.

```
add Laps/<a> <path>/<o>
```

When configuring G.841 Annex B on either the 16-port OC-3/STM-1 ATM or 16-port OC-3/STM-1 POS and ATM FP, only SDH components are supported.

3 Add the *AtmIf* component.



- Add AtmIf/<c>**
- 4 Link the *Laps* component to the ports on the LP.
- ```
set AtmIf/<c> interfacename Laps/<a> <path>/<o>
set Laps/<a> workingLine Lp/<m> <port>/<p>
set Laps/<a> protectionLine Lp/<n> <port>/<p>
```
- 5 If the near and far end line terminating equipment must negotiate to determine the line to receive the payload from, change the *mode* attribute to bidirectional.
- ```
set Laps/<a> mode bidirectional
```
- Bidirectional mode must be configured at both ends. The default setting is unidirectional. This means that the line terminating equipment at each end determines independently where to receive the payload.
- When configuring G.841 Annex B on either the 16-port OC-3/STM-1 ATM or 16-port OC-3/STM-1 POS and ATM FP, mode must be set to bidirectional.
- 6 If you want line APS to revert automatically from the protection to the working line once a failure has cleared, set *revertive* to yes.
- ```
set Laps/<a> revertive yes
```
- The default setting is nonrevertive. This means that after a failure has cleared, the protection line stays active until the operator issues a switchover command.
- When configuring G.841 Annex B on either the 16-port OC-3/STM-1 ATM or 16-port OC-3/STM-1 POS and ATM FP, revertive must be set to no. For these FPs, the only time traffic is reverted back to the working line is if the protection line experiences a failure.
- 7 If you want to configure G.841 Annex B on either the 16-port OC-3/STM-1 ATM or 16-port OC-3/STM-1 POS and ATM FP, set the protocol attribute accordingly.
- ```
set Laps/<a> protocol g841AnnexB
display Laps/<a>
```
- 8 Complete the configuration changes. See [Activating configuration changes \(page 342\)](#).

---

--End--

---



### Variable definitions

| Variable                                                                                                                                                                                                                      | Value                                                                                                    |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------|
| <a>                                                                                                                                                                                                                           | The instance number of the <i>Laps</i> component. The <i>Laps</i> instance must be between 0 and 15999.  |
| <c>                                                                                                                                                                                                                           | The instance number of the <i>Atmlf</i> component. The <i>Atmlf</i> instance must be between 1 and 4095. |
| <m>                                                                                                                                                                                                                           | The LP number of the working line.*                                                                      |
| <n>                                                                                                                                                                                                                           | The LP number of the protection line.*                                                                   |
| <o>                                                                                                                                                                                                                           | The path number.                                                                                         |
| <p>                                                                                                                                                                                                                           | The port number on the LP. It must be the same on both the working line and the protection line.         |
| <path>                                                                                                                                                                                                                        | <i>Sts</i> or <i>Vc4</i> .                                                                               |
| <port>                                                                                                                                                                                                                        | <i>Sonet</i> or <i>Sdh</i> .                                                                             |
| * For the 16-port OC-3/STM-1 ATM and 16-port OC-3/STM-1 POS and ATM FPs, only inter-card LAPS is supported and therefore two identical cardtypes must be positioned in adjacent slots in order for LAPS to function properly. |                                                                                                          |



## Configuring line protection for optical interfaces on Multiservice Switch 15000 and Multiservice Switch 20000 nodes

Line automatic protection switching (line APS) is configured to protect against line (port) failures on Nortel Multiservice Switch 15000 and Multiservice Switch 20000 optical cards.

### Prerequisites

- The node must meet the requirements listed in [Requirements for configuring line and equipment protection for Multiservice Switch 15000 and Multiservice Switch 20000 optical interfaces \(page 263\)](#).
- When you are configuring the *LineAutomaticProtectionSwitching* component, ensure that the FPs use module timing to synchronize with the CP. If the clocking source is not set to module timing, cell loss and corruption could result in some configurations. Refer to [Network clock synchronization configuration \(page 31\)](#) for more information on clock configuration.
- You can use the *LineAutomaticProtectionSwitching* component in an equipment sparing configuration to provide both line and equipment protection at the same time. For more information on equipment sparing and line sparing, see [Understanding line and equipment protection for Multiservice Switch 15000 and Multiservice Switch 20000 optical interfaces \(page 261\)](#).
- The logical processor type (LPT) associated with these ports must have LAPS in its feature list.
- Y-protection provides equipment protection (EP) and hitless software migration (HSM) that can co-exist with standard LAPS on the same port pairs. Refer to [Configuring Y-protection for dual FPs in a Multiservice Switch 15000 and Multiservice Switch 20000 nodes \(page 216\)](#).
- See NN10600-551 *Nortel Multiservice Switch 7400/15000/20000 FP Configuration Reference* at each description of a card type for limitations about choosing slots and port numbers for LAPS protection pairs.

### Procedure steps

| Step | Action                                                                                                                                                                                                                                          |
|------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1    | Add the <i>LineAutomaticProtectionSwitching</i> component.<br><b>add LineAutomaticProtectionSwitching/&lt;a&gt;</b>                                                                                                                             |
| 2    | Link the <i>LineAutomaticProtectionSwitching</i> component to the ports on the logical processor.<br><b>set LineAutomaticProtectionSwitching/&lt;a&gt; workingLine LogicalProcessor/&lt;n&gt; &lt;port&gt;/&lt;p&gt; &lt;path&gt;/&lt;o&gt;</b> |



**set LineAutomaticProtectionSwitching/<a> protectionLine LogicalProcessor/<n> <port>/<q> <path>/<o>**

- 3 If the line terminating equipment at both the near and far ends should determine the receiving interface, change the protection mode to bidirectional.

**set LineAutomaticProtectionSwitching mode bidirectional**

Bidirectional mode must be provisioned at both ends. The default setting is unidirectional, which means that the line terminating equipment at each end determines which interface it receives traffic on.

- 4 If you want LAPS to revert automatically from the protection to the working line once a failure has cleared, change the revertive attribute to yes.

**set LineAutomaticProtectionSwitching revertive yes**

The default setting is no, which means that after a failure has cleared, the protection line stays active until the operator uses a switchover command.

- 5 Verify your configuration of the *LineAutomaticProtectionSwitching* component.

**display LineAutomaticProtectionSwitching**

- 6 Complete the configuration changes. See [Activating configuration changes \(page 342\)](#).

--End--

### Variable definitions

| Variable | Value                                                                                                                                                                                                                                            |
|----------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <a>      | The instance number of the <i>LineAutomaticProtectionSwitching</i> component.<br><br>For Multiservice Switch 15000 and Multiservice Switch 20000 FPs, the <i>LineAutomaticProtectionSwitching</i> instance can be any value between 0 and 15999. |
| <n>      | The logical processor number. It must be the same for both the working line and the protection line.                                                                                                                                             |
| <p>      | The working port number on the logical processor.                                                                                                                                                                                                |
| <path>   | <i>Sts</i> or <i>Vc4</i> .                                                                                                                                                                                                                       |
| <port>   | <i>Sonet</i> or <i>Sdh</i> .                                                                                                                                                                                                                     |
| <q>      | The protecting port number on the logical processor.                                                                                                                                                                                             |
| <o>      | The path number.                                                                                                                                                                                                                                 |



## Converting from a non-protected FP to a protected FP with LAPS on Multiservice Switch 15000 and Multiservice Switch 20000 nodes

Convert a SONET single FP to a protected FP in a dual-FP line APS (LAPS) configuration.

### Prerequisites



#### CAUTION

#### Risk of loss of service by installing line APS protection

Converting from a non-protected single-FP to a protected dual-FP with line APS causes a traffic outage.

- The configuration of your node must match the requirements listed in [Nodal requirements for converting line and equipment protection \(page 264\)](#)
- If you have configured the *LineAutomaticProtectionSwitching* component, ensure that the FPs use module timing to synchronize with the CP. If the clocking source is not set to module timing, cell loss and corruption could result in some configurations. Refer to [Network clock synchronization configuration \(page 31\)](#) for more information on clock configuration.
- See the FP-specific sections in this guide for information on port numbers for line APS protection pairs.

### Procedure steps

| Step | Action                                                                                                                                   |
|------|------------------------------------------------------------------------------------------------------------------------------------------|
| 1    | Configure the spare FP. See <a href="#">Configuring a new processor card (page 60)</a> .                                                 |
| 2    | Add the ports to the LP. See <a href="#">Configuring ports on an LP (page 160)</a> .                                                     |
| 3    | Add the <i>Laps</i> component.<br><b>add Laps/&lt;a&gt;</b>                                                                              |
| 4    | Add the path component, either <i>Sts</i> for Sonet or <i>Vc4</i> for Sdh.<br><b>add Laps/&lt;a&gt; &lt;path&gt;/&lt;o&gt;</b>           |
| 5    | Add the atmcell component.<br><b>add Laps/&lt;a&gt; &lt;path&gt;/&lt;o&gt; atmcell</b>                                                   |
| 6    | Link the <i>Laps</i> component to the ports on the LP.<br><b>set atmif/&lt;c&gt; interfacename Laps/&lt;a&gt; &lt;path&gt;/&lt;o&gt;</b> |
| 7    | Delete the path from the port.<br><b>Delete Lp/&lt;n&gt; &lt;port&gt;/&lt;p&gt; &lt;path&gt;/0</b>                                       |



8 Link the *Laps* component to the ports on the LP.

```
set Laps/<a> workingLine Lp/<n> <port>/<p>
set Laps/<a> protectionLine Lp/<n> <port>/<q>
```

---

**Attention:** The working line and protection line ports are configured in pairs (for example, port 0 and port 1) and are located on different LPs.

---

---

--End--

---

### Variable definitions

| Variable | Value                                                                                                                                   |
|----------|-----------------------------------------------------------------------------------------------------------------------------------------|
| <a>      | The instance number of the <i>Laps</i> component.                                                                                       |
| <c>      | The <i>atminterface</i> instance. The <i>atmif</i> instance must be between 1 and 4095.                                                 |
| <n>      | The LP number. It must be the same for the working and protection lines.                                                                |
| <o>      | The path number                                                                                                                         |
| <p>      | The port number on the working LP; the working line and protection line ports are configured in pairs (for example, port 0 and port 1). |
| <path>   | <i>Sts</i> or <i>Vc4</i>                                                                                                                |
| <port>   | <i>Sonet</i> or <i>Sdh</i> .                                                                                                            |
| <q>      | The port number on the protection LP.                                                                                                   |



## Converting from single-FP to dual-FP protection

Convert a SONET single-FP line APS to a dual-FP line APS configuration.

### Prerequisites

- The configuration of your node must match the requirements listed in [Nodal requirements for converting line and equipment protection \(page 264\)](#)
- Converting from single-FP line APS to dual-FP line APS causes both FPs to reset.
- See NN10600-551 *Nortel Multiservice Switch 7400/15000/20000 FP Configuration Reference* for information on port numbers for line APS protection pairs.

### Procedure steps

| Step | Action                                                                                                                                                            |
|------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1    | Remove the line APS link from one port.<br><br><code>Remove Laps/&lt;a&gt; protectionLine Lp/&lt;n&gt; &lt;port&gt;/&lt;q&gt; &lt;path&gt;/0</code>               |
| 2    | Replace the line APS link with a link to the other port.<br><br><code>Set Laps/&lt;a&gt; protectionLine Lp/&lt;m&gt; &lt;port&gt;/&lt;p&gt; &lt;path&gt;/0</code> |
| 3    | Complete the configuration. See <a href="#">Activating configuration changes (page 342)</a> .                                                                     |

--End--

### Variable definitions

| Variable | Value                                                                                                                                   |
|----------|-----------------------------------------------------------------------------------------------------------------------------------------|
| <a>      | The instance number of the <i>Laps</i> component.                                                                                       |
| <m>      | The LP number of the working line.                                                                                                      |
| <n>      | The LP number of the protection line.                                                                                                   |
| <p>      | The port number on the working LP; the working line and protection line ports are configured in pairs (for example, port 0 and port 1). |
| <path>   | <i>Sts</i> or <i>Vc4</i>                                                                                                                |

(1 of 2)



| <b>Variable</b> | <b>Value</b>                                                                                                                               |
|-----------------|--------------------------------------------------------------------------------------------------------------------------------------------|
| <port>          | <i>Sonet or Sdh</i>                                                                                                                        |
| <q>             | The port number on the protection LP; the working line and protection line ports are configured in pairs (for example, port 0 and port 1). |
| (2 of 2)        |                                                                                                                                            |



## Configuring Y-protection for dual FPs in a Multiservice Switch 15000 and Multiservice Switch 20000 nodes

Configure Y-protection for some or all ports on dual FPs in a Nortel Multiservice Switch 15000 or Multiservice Switch 20000 node to spare each other or their port pairs when the far-end interface does not support line automatic protection switching (line APS or LAPS).

### Prerequisites

- The cards that are to be configured for Y-protection must be 16-port OC-3/STM-1 POS and ATM FPs with PEC NTHW44 and software name 16pOC3PosAtm. The cards must be installed in adjacent slots with the left one in an even-numbered slot in the range 2 to 14.
- You must configure LAPS for the dual FPs as the start of configuring Y-protection. The SFP modules with PEC NTTP02CD must be installed and the Y-splitter cables must be disconnected before you begin the configuration.
- Decide the port pairs to be configured for LAPS with Y-protection. You must first configure the port pair for LAPS, then alter the configuration to include Y-protection. The procedure includes the steps for the NTHW44 FPs.
- The table [The changes to a LAPS configuration when configuring Y-protection \(page 218\)](#) indicates how components of LAPS are the same or different when Y-protection is configured.
- Ensure that you are familiar with the interactions and operational behavior described in [Understanding Y-protection for dual FPs \(page 326\)](#).

### Procedure steps

| Step | Action                                                                                                                                                                                                                       |
|------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1    | Start provisioning.<br><b>start prov</b>                                                                                                                                                                                     |
| 2    | Add a logical processor type (LPT) and add the <i>aps</i> feature to the LPT.<br><b>add sw lpt/laps f1 aps</b>                                                                                                               |
| 3    | Set the card type of the two NTHW44 FPs.<br><b>set shelf card/&lt;n&gt; cardtype 16pOC3PosAtm</b><br><b>set shelf card/&lt;n+1&gt; cardtype 16pOC3PosAtm</b>                                                                 |
| 4    | Add a logical processor (LP) for each card, and set the main card and LPT.<br><b>add -s lp/&lt;p&gt; main shelf card/&lt;n&gt;, lpt sw lpt/aps</b><br><b>add -s lp/&lt;q&gt; main shelf card/&lt;n+1&gt;, lpt sw lpt/aps</b> |



- 5 Add the SDH components.  
**add lp/<p> sdh/<s>**  
**add lp/<q> sdh/<s>**
- 6 Add a small-form pluggable (SFP) optical module for the NTHW44 cards only if it has not already been done for the cards.  
**add lp/<p> sdh/<s> OpticalModule**  
**add lp/<q> sdh/<s> OpticalModule**
- 7 Set the type of SFP optical module (om) for each port on both cards.  
**set lp/<p> sdh/<s> om type OC3SmIr**  
Repeat for all 31 ports. Use *OC3SmIr* for each port that is to be configured with Y-protection. Use the other types available to the card as described in [Configuring a port to use an SFP optical module \(page 62\)](#).
- 8 Add the *Laps* component and set the working and protection lines.  
**add laps/<a> working lp/<p> sdh/<s>, protection lp/<q> sdh/<s>**
- 9 Add a *vc4* component.  
**add laps/<a> vc4/<v>**
- 10 Set the attribute *protocol* to enable Y-protection. The other attributes will be set automatically to default values that should not be changed by you.  
**set laps/<a> protocol yProtection**
- 11 Check, activate and confirm the provisioning changes, see [Activating configuration changes \(page 342\)](#).
- 12 Add services to the FPs as required.

---

--End--

---



### Variable definitions

| Variable   | Value                                                           |
|------------|-----------------------------------------------------------------|
| <a>        | The LAPS identifying number.                                    |
| <fileName> | The user-defined file name to capture the provisioning entries. |
| <n>        | The slot number of the left FP of the dual FP configuration.    |
| <n+1>      | The slot number of the right FP of the dual FP configuration.   |
| <p>        | The LP number of the main card.                                 |
| <q>        | The LP number of the standby card.                              |

<s> The SDH identifying number.

<v> The number of the vc4 component.

### Procedure job aid

#### The changes to a LAPS configuration when configuring Y-protection

|                       | LAPS attribute         | Description of difference with Y-protection                                                                                                                                      |
|-----------------------|------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| instance              | a pair of spared ports | 0 to 15999                                                                                                                                                                       |
| provisional attribute | workingLine            | links to an SDH or SONET component. It acts as a label of the component to allow switching software to uniquely identify a physical line.                                        |
|                       | protectionLine         | links to the same SDH or SONET component as attribute <i>workingLine</i> . It acts as a label of the component to allow switching software to uniquely identify a physical line. |
|                       | Mode                   | is set to <i>notApplicable</i> by the system.                                                                                                                                    |
|                       | Revertive              | is set to <i>notApplicable</i> by the system.                                                                                                                                    |
|                       | MimicAps               | is set to <i>notApplicable</i> by the system.                                                                                                                                    |
|                       | holdOffTime            | is set to <i>infinite</i> by the system because it does not apply to this feature.                                                                                               |
|                       | waitToRestorePeriod    | is set to <i>infinite</i> by the system because it does not apply to this feature.                                                                                               |
|                       | signalDegradeRatio     | is set to <i>notApplicable</i> .                                                                                                                                                 |

(1 of 2)



**The changes to a LAPS configuration when configuring Y-protection (continued)**

|                          | <b>LAPS attribute</b>                         | <b>Description of difference with Y-protection</b>                                                                                                                                                                                                                                                                                                                                                                                                                                  |
|--------------------------|-----------------------------------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|                          | protocol                                      | <p>can have the following values:</p> <ul style="list-style-type: none"> <li>• <i>g841AnnexB</i> to indicate that optimized one-plus-one bidirectional switching is used as described by ITU-T's G.841 (AnnexB)</li> <li>• <i>standard</i> to indicate that one-plus-one line APS is used as described by Telcordia's GR-253 and ITU-T's G.841.</li> <li>• <i>yProtection</i> to indicate that LAPS is used only for equipment protection and hitless software migration</li> </ul> |
| operational<br>attribute | primarySectionMismatchTime                    | is set to <i>infinite</i> by the system because it does not apply to this feature.                                                                                                                                                                                                                                                                                                                                                                                                  |
|                          | nearEndRequest<br>farEndRequest               | does not appear when yProtection is selected for attribute <i>protocol</i> .                                                                                                                                                                                                                                                                                                                                                                                                        |
|                          | nearEndRequestChannel<br>farEndRequestChannel | does not appear when yProtection is selected for attribute <i>protocol</i> .                                                                                                                                                                                                                                                                                                                                                                                                        |
|                          | sdOnLines                                     | does not appear when yProtection is selected for attribute <i>protocol</i> .                                                                                                                                                                                                                                                                                                                                                                                                        |
|                          | timeUntilRestore                              | does not appear when yProtection is selected for attribute <i>protocol</i> .                                                                                                                                                                                                                                                                                                                                                                                                        |
|                          | protocolFailureAlarm                          | does not appear when yProtection is selected for attribute <i>protocol</i> .                                                                                                                                                                                                                                                                                                                                                                                                        |
|                          | modeMismatchAlarm                             | does not appear when yProtection is selected for attribute <i>protocol</i> .                                                                                                                                                                                                                                                                                                                                                                                                        |
|                          | nearEndRxActiveLine                           | indicates which near-end line is actively receiving data from the far end.                                                                                                                                                                                                                                                                                                                                                                                                          |
|                          | switchovers                                   | applies to <i>g841AnnexB</i> and does not appear when yProtection is selected for attribute <i>protocol</i> .                                                                                                                                                                                                                                                                                                                                                                       |
|                          | primarySection                                | does not appear when yProtection or <i>standard</i> is selected for attribute <i>protocol</i> .                                                                                                                                                                                                                                                                                                                                                                                     |
| operational<br>verbs     | primarySectionMismatchAlarm                   | does not appear when yProtection or <i>standard</i> is selected for attribute <i>protocol</i> .                                                                                                                                                                                                                                                                                                                                                                                     |
|                          | protectionLockout                             | does apply when yProtection is selected for attribute <i>protocol</i> .                                                                                                                                                                                                                                                                                                                                                                                                             |
|                          | switch                                        | does apply when yProtection is selected for attribute <i>protocol</i> .                                                                                                                                                                                                                                                                                                                                                                                                             |
| (2 of 2)                 |                                               |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     |



## Locking the protection line on Multiservice Switch 15000 and Multiservice Switch 20000 nodes

Lock the protection line to prevent the protection line from being used as the active channel. If the protection line is active when *protectionLockout* is issued, the working line becomes active.

### Prerequisites

- The verb *protectionLockout* is not supported for Y-protection.

### Procedure steps

---

| Step | Action |
|------|--------|
|------|--------|

---

|   |                                                                            |
|---|----------------------------------------------------------------------------|
| 1 | Lock the protection line.<br><code>protectionLockout Laps/&lt;n&gt;</code> |
|---|----------------------------------------------------------------------------|

---

--End--

---

### Variable definitions

| Variable | Value                                      |
|----------|--------------------------------------------|
| <n>      | The instance of the <i>Laps</i> component. |
|          |                                            |



## Switching between the working and protection line on Multiservice Switch 15000 and Multiservice Switch 20000 nodes

Use the verb *switch* to cause the service active line to change with its hot standby mate in a working and protection line pair. Use the option *-force* to invoke the changeover with the higher priority *nearEndRequest* value of *forcedSwitch*. When *-force* is not used, the *nearEndRequest* value is the lower priority *manualSwitch*.

### Prerequisites

- You can issue the command *switch* when the *Laps* component is locked or unlocked.
- You must use the option *-force* when the provisioned *protocol* is *g841AnnexB*. The ITU-T G.841 Annex B standard does not support the manual command. This protocol is currently supported only on FPs 16pOC3SmlrAtm (with PEC NTHW24) and 16pOC3PosAtm (with PEC NTHW44).
- The verb *switch* is not supported for Y-protection.

### Procedure steps

| Step    | Action                                                                                                               |
|---------|----------------------------------------------------------------------------------------------------------------------|
| 1       | Change between the working and protection lines.<br><code>switch [-force] -protectionToWorking Laps/&lt;n&gt;</code> |
| --End-- |                                                                                                                      |

### Variable definitions

| Variable | Value                                      |
|----------|--------------------------------------------|
| <n>      | The instance of the <i>Laps</i> component. |



## Clearing switch requests on Multiservice Switch 15000 and Multiservice Switch 20000 nodes

Clear the following *nearEndRequest* values: *lockoutOfProtection*, *forcedSwitch*, or *manualSwitch*.

### Prerequisites

- The verb *clear* is not supported for Y-protection.

### Procedure steps

---

| Step | Action |
|------|--------|
|------|--------|

---

- |   |                                                                                             |
|---|---------------------------------------------------------------------------------------------|
| 1 | Use the command <i>clear</i> to clear switch requests.<br><code>clear Laps/&lt;n&gt;</code> |
|---|---------------------------------------------------------------------------------------------|
- 

--End--

---

### Variable definitions

| Variable | Value                                      |
|----------|--------------------------------------------|
| <n>      | The instance of the <i>Laps</i> component. |
|          |                                            |



---

# Hitless activation of critical attributes configuration

---

Configure hitless activation of critical attributes on the Nortel Multiservice Switch 15000 or Multiservice Switch 20000 to reduce or avoid service disruptions when you change critical attributes.

---

**Attention:** Hitless activation of critical attributes is primarily for Carrier Voice over IP (VoIP) configurations. For more information about hitless critical attribute (HCA) activation for Carrier VoIP configurations, see NN10114-511, *Nortel Multiservice Switch 15000, Media Gateway 15000 and Multiservice Data Manager in Carrier Voice over IP Networks, Configuration Overview, PT-AAL1/UA-AAL1/UA-IP/PT-AAL2*.


---

## Hitless activation of critical attributes configuration procedures

This task flow shows you the sequence of procedures you perform to configure the hitless activation of critical attributes. To link to any procedure, go to [Hitless activation of critical attributes configuration procedure navigation \(page 225\)](#).



**Hitless activation of critical attributes configuration procedures**

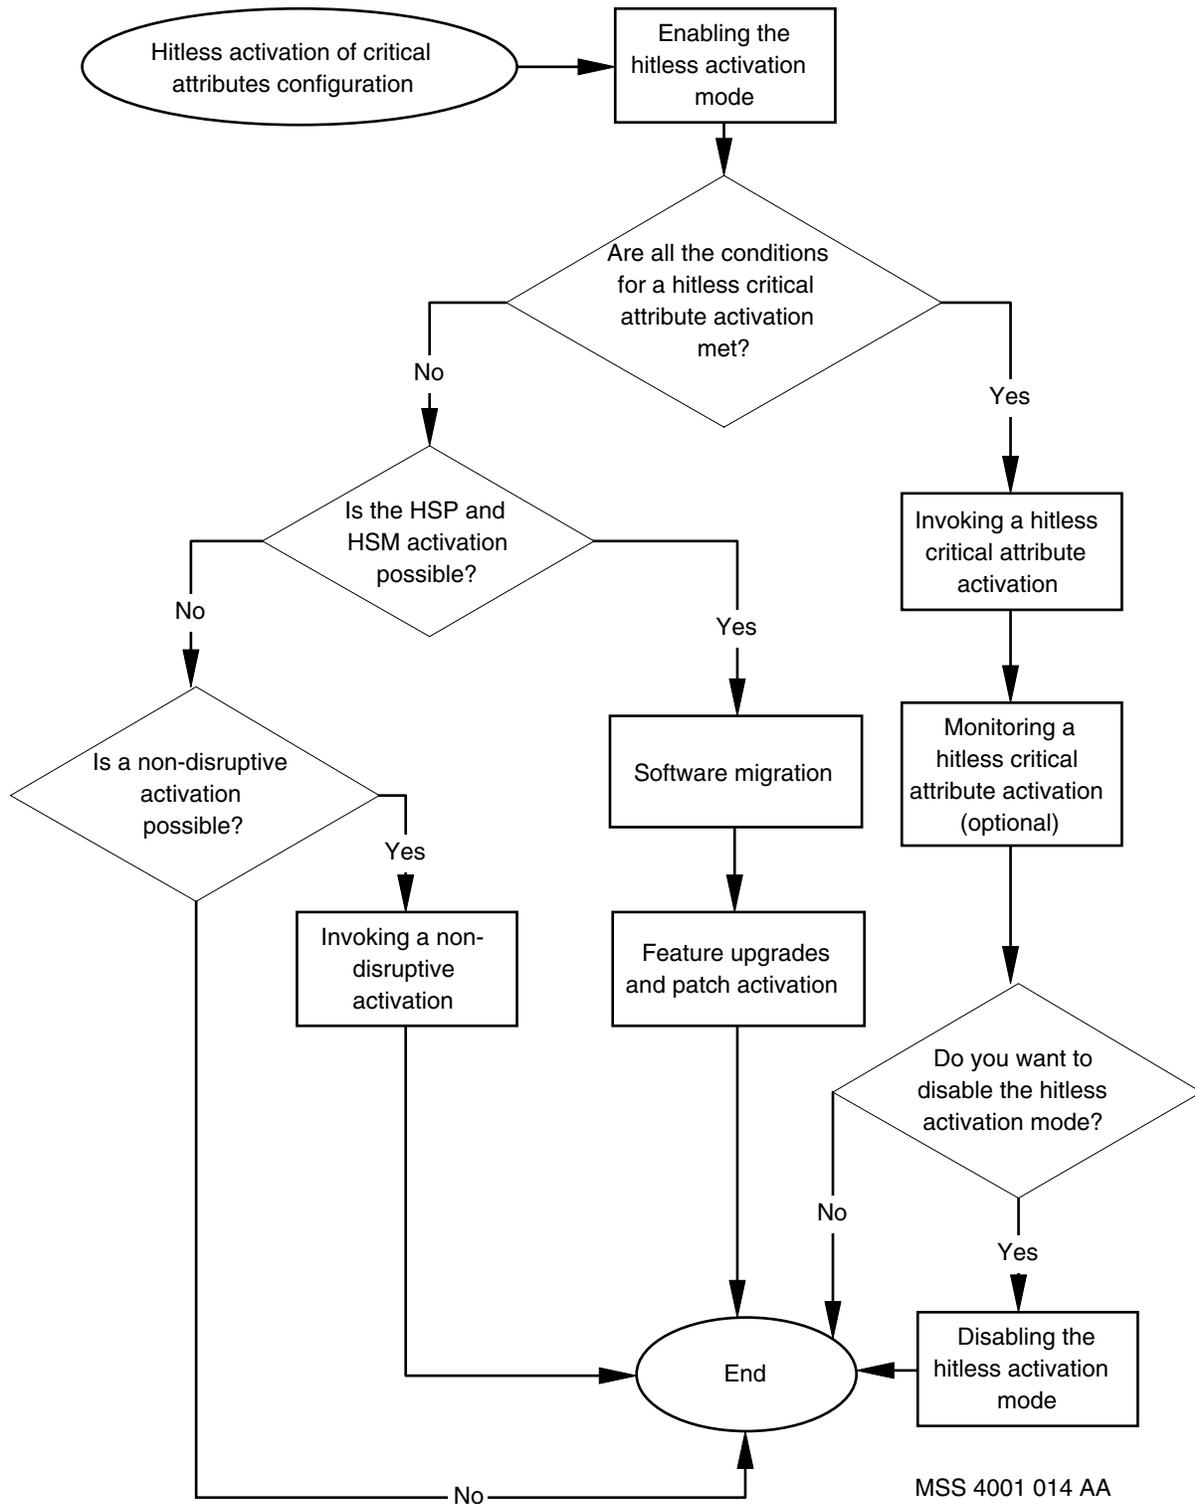

MSS 4001 014 AA



### **Hitless activation of critical attributes configuration procedure navigation**

- [Enabling the hitless activation mode \(page 226\)](#)
- [Invoking a hitless critical attribute activation \(page 227\)](#)
- Software migration. For information about hitless software migration (HSM), refer to NN10600-272 *Nortel Multiservice Switch 7400/15000/20000 Upgrading Software*.
- Feature upgrade and patch activation. For information about hitless software patching (HSP), refer to NN10600-272 *Nortel Multiservice Switch 7400/15000/20000 Upgrading Software*.
- [Invoking a non-disruptive activation \(page 230\)](#)
- [Monitoring a hitless critical attribute activation \(page 236\)](#)
- [Disabling the hitless activation mode \(page 237\)](#)



## Enabling the hitless activation mode

Enable the hitless activation mode to reduce or avoid service disruptions when you change critical attributes.

### Prerequisites

- You must perform this procedure in provisioning mode. For more information, see [Provisioning mode \(page 342\)](#).


### Procedure steps

| Step | Action                                                                                                                                                                                   |
|------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1    | <p>Add the <i>ActivationMode (Am)</i> component.</p> <p><b>add Prov ActivationMode</b></p> <p>The <i>hitlessActivation</i> attribute is added automatically with a value of enabled.</p> |
| 2    | <p>Confirm the configuration changes. For more information, see <a href="#">Activating configuration changes (page 342)</a>.</p>                                                         |

--End--

### Procedure job aid

#### Hitless activation mode component hierarchy

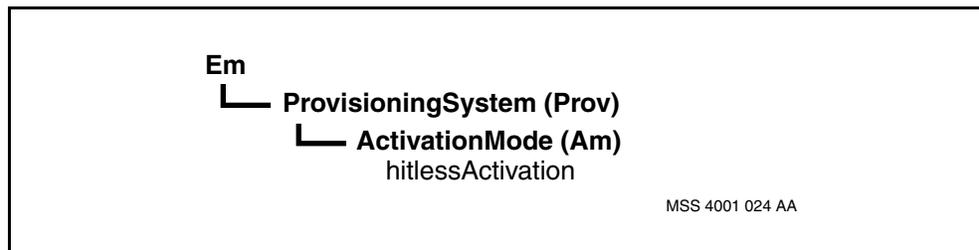



## Invoking a hitless critical attribute activation

Invoke a hitless critical attribute activation when you have changed a critical attribute. For a list of critical attributes that support the hitless critical attribute activation, see [Critical attributes for hitless activation \(page 339\)](#).

### Prerequisites

- You must perform this procedure in provisioning mode. For more information, see [Provisioning mode \(page 342\)](#).
- You must ensure that all the conditions for a hitless critical attribute activation are met. For more information on those conditions, see [Conditions for hitless activation of critical attributes \(page 337\)](#).
- You must ensure that the operational state of the Multiservice Switch is ideal for hitless critical attribute activation. You must complete the following procedures:
  - [Verifying the provisioned card status \(page 231\)](#)
  - [Verifying the logical processor status \(page 232\)](#)
  - [Verifying the electrical functional processor status in a 1:1 sparing configuration \(page 234\)](#)
  - [Verifying the logical processor status in a 1+1 FP sparing configuration \(page 235\)](#)

### Procedure steps

| Step                                                                                                                                                                                                                        | Action                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1                                                                                                                                                                                                                           | <p>Display the <i>editViewAddedComponents (evAdded)</i>, <i>editViewDeletedComponents (evDeleted)</i>, and <i>editViewChangedComponents (evChanged)</i> attributes to ensure that the edit view is equal to the current view.</p> <p><b>display Prov evAdded, evDeleted, evChanged</b></p> <p>If the edit view is equal to the current view, then the attribute values for the displayed attributes are all zero.</p> <p>If the edit view is not equal to the current view, then the attribute values for the one or more displayed attributes are non-zero.</p> |
| <hr/> <p><b>Attention:</b> You can use the copy prov command to make the edit view equal to the current view. However, the provisioning changes in the edit view will be lost when you use the copy prov command.</p> <hr/> |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
| 2                                                                                                                                                                                                                           | <p>Complete the changes to one or more critical attributes. For a list of critical attributes that support the hitless critical attribute activation, see <a href="#">Critical attributes for hitless activation (page 339)</a>.</p>                                                                                                                                                                                                                                                                                                                             |



**3** Check the provisioning changes.

**check Prov**

If the hitless critical attribute activation can occur, the Multiservice Switch displays:

Upon activation a Hitless Critical Attribute Activation will occur.

If the hitless critical attribute activation cannot occur, the Multiservice Switch displays:

Hitless Critical Attribute Activation cannot occur.

Reason(s):

Component/Process/Critical Attributes modified:

<you see details about the component, process, or critical attributes here>

The 'hitlessActivation' attribute under the 'ProvisioningSystem ActivationMode' component must be set to 'disabled' prior to performing service disruptive modifications.

|  |                                                                                                                                                                                                                                                                                    |
|--|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | <p><b>CAUTION</b><br/><b>Risk of service outage</b><br/>If the value of the <i>hitlessActivation</i> attribute is set to disabled, operators can make provisioning changes to critical attributes that can result in service outages when the critical attribute is activated.</p> |
|--|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

**4** Activate the provisioning changes.

**activate Prov**

The Multiservice Switch displays which LPs will take part in the hitless critical attribute activation:

The following LPs will participate in hitless critical activation:

<list of LPs>

**5** Confirm the provisioning changes.

**confirm Prov**

**6** Exit the provisioning mode.

**end Prov**

---

--End--


---



---

## Procedure job aid

### Hitless critical attribute activation component hierarchy

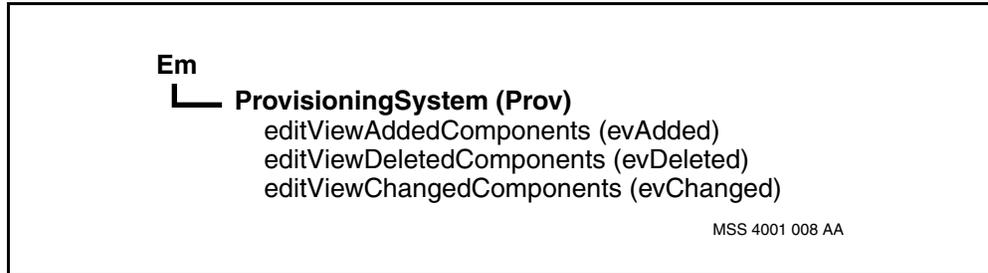

MSS 4001 008 AA



## Invoking a non-disruptive activation

Invoke a non-disruptive activation after completing provisioning changes that are not service disruptive.

### Prerequisites

- You must perform this procedure in provisioning mode. For more information, see [Provisioning mode \(page 342\)](#).

### Procedure steps

| Step                                                                                                                                                                                                                                                                                                                                                                                                                            | Action                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1                                                                                                                                                                                                                                                                                                                                                                                                                               | Complete the required provisioning changes.                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |
| 2                                                                                                                                                                                                                                                                                                                                                                                                                               | <p>Confirm the configuration changes. For more information, see <a href="#">Activating configuration changes (page 342)</a>.</p> <p>If the provisioning changes that you completed in <a href="#">step 1</a> are not service disruptive, the Multiservice Switch displays:</p> <p>Upon activation a non-service disruptive activation will occur.</p> <p>If the provisioning changes that you completed in <a href="#">step 1</a> are service disruptive, the Multiservice Switch displays:</p> <p>Non-disruptive Activation cannot occur. Reason(s):<br/>Component/Process/Critical Attributes modified:</p> <p>&lt;you see details about the component, process, or critical attributes here&gt;</p> <p>The 'hitlessActivation' attribute under the 'ProvisioningSystem ActivationMode' component must be set to 'disabled' prior to performing service disruptive modifications.</p> |
| <div style="border: 1px solid black; padding: 5px;"><p><b>CAUTION</b><br/><b>Risk of service outage</b><br/>If the value of the <i>hitlessActivation</i> attribute is set to disabled, operators can make provisioning changes to critical attributes that can result in service outages when the critical attribute is activated.</p></div> |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |
| 3                                                                                                                                                                                                                                                                                                                                                                                                                               | Confirm the configuration changes. For more information, see <a href="#">Activating configuration changes (page 342)</a> .                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |

--End--



## Verifying the provisioned card status

Verify the provisioned card status before invoking the hitless critical attribute activation to ensure that the cards are operational.

### Prerequisites


- You must perform this procedure in operational mode. For more information, see [Operational mode \(page 341\)](#).

### Procedure steps

| Step    | Action                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      |
|---------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1       | <p>Verify that all provisioned cards involved in the hitless critical attribute activation are operational. If the value of the <i>operationalState</i> attribute is disabled, the card is not operational.</p> <p><b>display Shelf Card/&lt;shelf_card&gt; osiState</b></p> <p>If the response indicates that any card is disabled and this card is configured as a 1:1 or 1+1 FP sparing, then the services associated with this card will incur a complete service outage for hitless critical attribute activation.</p> |
| --End-- |                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                             |

### Procedure job aid

#### Provisioned card status component hierarchy

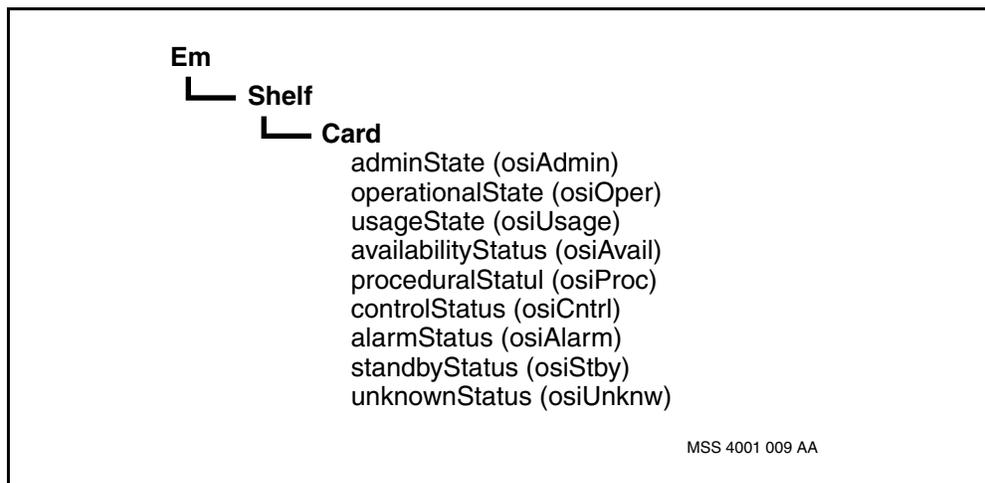



## Verifying the logical processor status

Verify the logical processor (LP) status before invoking the hitless critical attribute activation to ensure that the LPs are operational.

### Prerequisites

- You must perform this procedure in operational mode. For more information, see [Operational mode \(page 341\)](#).
- You must configure the active alarm list. For more information on how to configure the active alarm list, see NN10600-561 *Nortel Multiservice Switch 7400/15000/20000 Data Management*.

### Procedure steps

---

| Step | Action                                                                                                                                                                                                                                                                                                                                                                                                                                                                           |
|------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1    | <p>Verify that LPs involved in the hitless critical attribute activation are operational. If the value of the <i>operationalState</i> attribute is disabled, the card is not operational.</p> <p><b>display Lp/* osiState</b></p> <p>If the response indicates that any card is disabled and this card is configured as a 1:1 or 1+1 FP sparing, then the services associated with this card will incur a complete service outage for hitless critical attribute activation.</p> |
| 2    | <p>Ensure that there are no active alarms.</p> <p><b>display Lp/* Eng ActiveAlarmList</b></p>                                                                                                                                                                                                                                                                                                                                                                                    |

---


--End--

---



## Procedure job aid

### Logical processor status component hierarchy

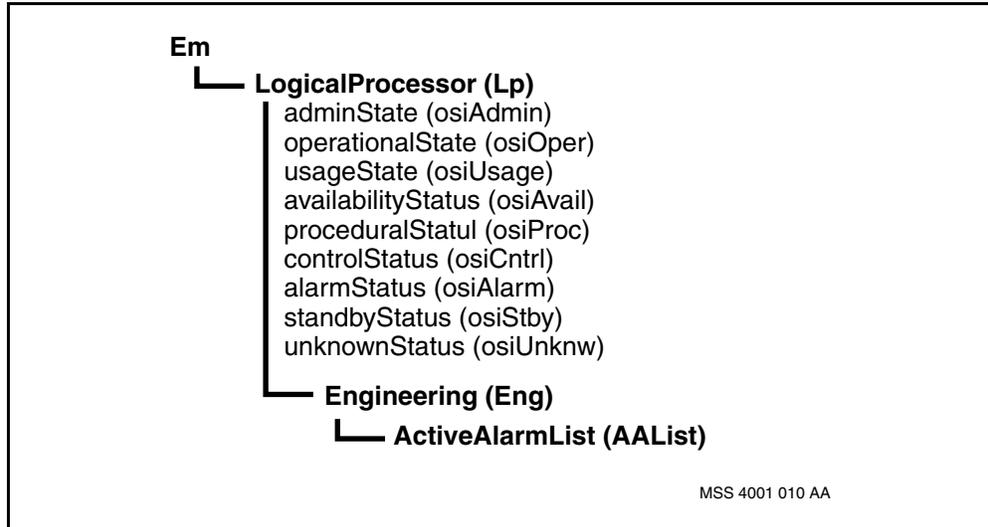

MSS 4001 010 AA



## Verifying the electrical functional processor status in a 1:1 sparing configuration

Verify the electrical functional processor (FP) status in a 1:1 sparing configuration to before invoking the hitless critical attribute activation to ensure that the electrical FPs are operational.

### Prerequisites

- You must perform this procedure in operational mode. For more information, see [Operational mode \(page 341\)](#).


### Procedure steps

| Step | Action                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                |
|------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1    | <p>Verify that the pair of FPs is operational.</p> <p><b>display Lp/&lt;lp&gt; mainCardStatus, spareCardStatus</b></p> <p>If the values for the <i>mainCardStatus</i> and <i>spareCardStatus</i> attributes are available, active or active, available then both FPs in the 1:1 sparing configuration are operational.</p> <p>If the value for the <i>mainCardStatus</i> or <i>spareCardStatus</i> attribute is notAvailable, then the hitless critical attribute activation cannot be completed.</p> |
| 2    | Repeat <a href="#">step 1</a> for each LP involved in the hitless critical attribute activation.                                                                                                                                                                                                                                                                                                                                                                                                      |

--End--

### Procedure job aid

#### Electrical FP status component hierarchy

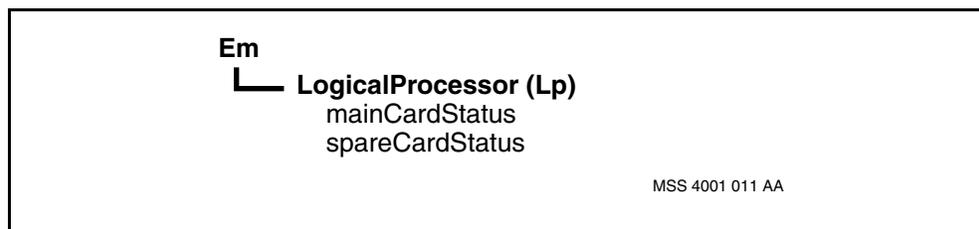



## Verifying the logical processor status in a 1+1 FP sparing configuration

Verify the logical processor (LP) status in a 1+1 FP sparing configuration to ensure that the LPs are operational.

### Prerequisites

- You must perform this procedure in operational mode. For more information, see [Operational mode \(page 341\)](#).


### Procedure steps

| Step | Action                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |
|------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1    | <p>Verify the values of the <i>sparedServices</i> (<i>spServ</i>), <i>operationalState</i> (<i>osiOper</i>), and <i>availabilityStatus</i> (<i>osiAvail</i>) attributes to ensure that both LPs in a 1+1 FP sparing configuration are operational.</p> <p><b>display Shelf Card/&lt;shelf_card&gt; spServ, osiOper, osiAvail</b></p> <p>If the values of the attributes are enabled and empty for each FP, then the FPs in a 1+1 sparing configuration are ready for the hitless critical attribute activation.</p> <p>If the value of the <i>osiOper</i> attribute is disabled or the <i>osiAvail</i> attribute is dependency or degraded, then the hitless critical attribute activation cannot be completed for the LP corresponding to the card.</p> |

--End--

### Procedure job aid

#### LP status component hierarchy

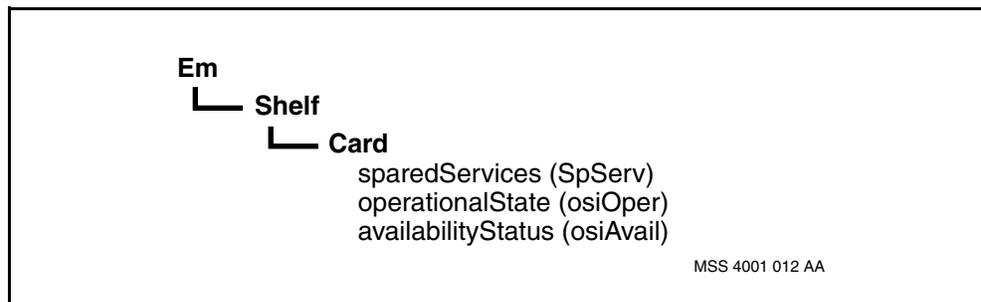



## Monitoring a hitless critical attribute activation

Monitor a hitless critical attribute activation to view the progress and state of this activity.

### Prerequisites

- You must perform this procedure in operational mode. For more information, see [Operational mode \(page 341\)](#).


### Procedure steps

| Step | Action                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                    |
|------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1    | View the state of the hitless critical attribute activation.<br><br><b>display Prov CriticalAttributeActivation</b><br><br>If the OSI state is unlocked, enabled, active, then the hitless critical attribute activation is progressing. If the OSI state is unlocked, disabled, idle, then the hitless critical attribute activation is paused and waiting for operator intervention. If the <i>CriticalAttributeActivation (Caa)</i> component does not exist, then the a hitless critical attribute activation is not being performed. |
| 2    | View the summary progress report of the hitless critical attribute activation.<br><br><b>display Prov ActivityProgress</b>                                                                                                                                                                                                                                                                                                                                                                                                                |
| 3    | View a more detailed progress report of the hitless critical attribute activation.<br><br><b>display Prov Caa cardsBeingActivated, cardsToActivate</b>                                                                                                                                                                                                                                                                                                                                                                                    |

--End--

### Procedure job aid

#### Hitless critical attribute activation monitoring component hierarchy

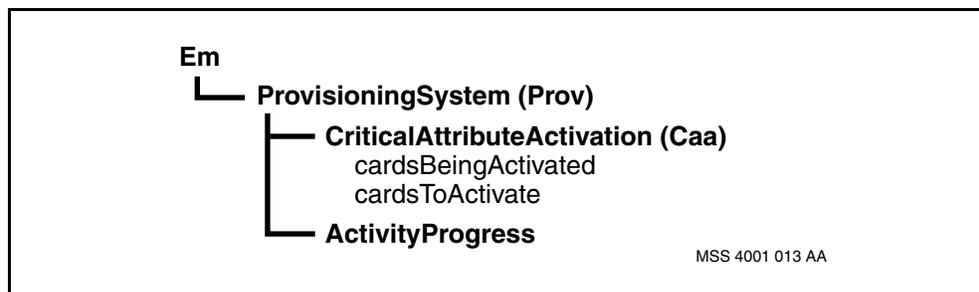



## Disabling the hitless activation mode

Disable the hitless activation mode if you do not want a hitless critical attribute activation.

### Prerequisites

- You must perform this procedure in provisioning mode. For more information, see [Provisioning mode \(page 342\)](#).

### Procedure steps

| Step | Action |
|------|--------|
|------|--------|

|                                                                                   |                                                                                                                                                                                                                                                                                              |
|-----------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | <p><b>CAUTION</b><br/> <b>Risk of service outage</b><br/>         If the value of the <i>hitlessActivation</i> attribute is set to disabled, operators can make provisioning changes to critical attributes that can result in service outages when the critical attribute is activated.</p> |
|-----------------------------------------------------------------------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

- Set the *hitlessActivation* attribute to disabled.

**Attention:** When the value of the *hitlessActivation* attribute is set to disabled, the Multiservice Switch issues a SET alarm. For more information on the alarm, see NN10600-500 *Nortel Multiservice Switch 6400/7400/15000/20000 Alarms Reference*.


```
set Prov ActivationMode hitlessActivation disabled
```

- Confirm the configuration changes. For more information, see [Activating configuration changes \(page 342\)](#).

--End--

### Procedure job aid

#### Hitless activation mode component hierarchy

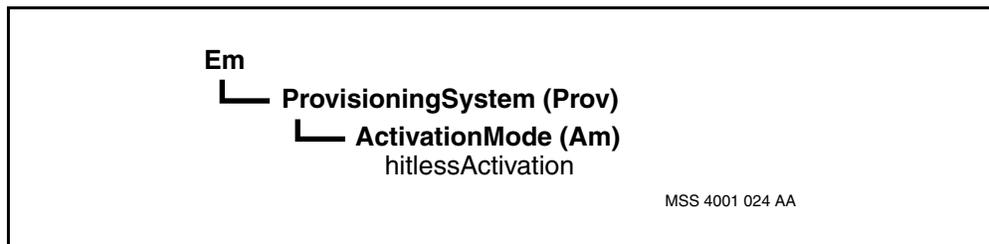



---

## Maintenance monitor configuration

---

Configure maintenance monitor software so that you can add a non-intrusive monitor to the ingress and egress data flow of a single channel on a port on some of the 32-port MSA FPs and the MSA8 FP. Once configured, you can activate the system remotely.


- [Maintenance monitor configuration task flow \(page 238\)](#)
- [Maintenance monitor configuration supporting information \(page 245\)](#)

### **Maintenance monitor configuration task flow**

This task flow shows you the sequence of procedures you perform to configure and activate maintenance monitor software. To link to any procedure, go to [Task navigation \(page 239\)](#).



### Maintenance monitor configuration task flow

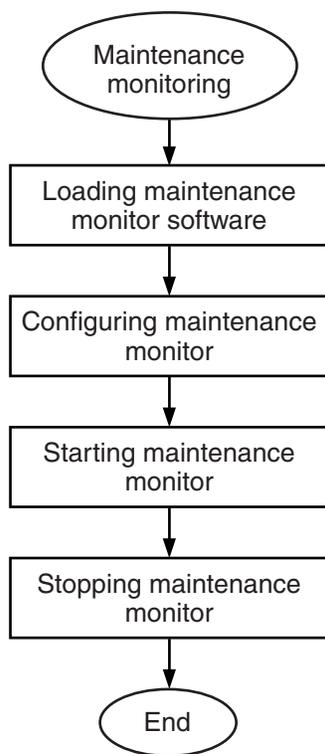

MSS 3613 002 AA

### Task navigation

- [Loading maintenance monitor software \(page 240\)](#)
- [Configuring maintenance monitor \(page 241\)](#)
- [Starting maintenance monitor \(page 243\)](#)
- [Stopping maintenance monitor \(page 244\)](#)



---

## Loading maintenance monitor software

Load maintenance monitor software onto a node to enable an operator to configure the software.

### Prerequisites

- Do the following procedure in provisioning mode. For more information, see [Provisioning mode \(page 342\)](#).

### Procedure steps

---

| Step | Action                                                                                                                                     |
|------|--------------------------------------------------------------------------------------------------------------------------------------------|
| 1    | Activate the software package.<br><code>set sw av1 aal1ces_&lt;version&gt;</code><br><code>set sw av1 atmNetworking_&lt;version&gt;</code> |
| 2    | Define the feature list.<br><code>set sw lpt/&lt;lpt_name&gt; featureList maintMon</code>                                                  |
| 3    | Activate and confirm the provisioning changes, see <a href="#">Activating configuration changes (page 342)</a> .                           |

---

--End--

---

### Variable definitions

| Variable   | Value                                            |
|------------|--------------------------------------------------|
| <lpt_name> | The name of the logical processor type.          |
| <version>  | The version number of the software being loaded. |
|            |                                                  |



---

## Configuring maintenance monitor

Configure maintenance monitor software to enable the system to monitor a specific channel on a 32-port MSA FP or MSA8 FP.

### Prerequisites

- Ensure that the channel you want to monitor is provisioned and operating with either an ATM, AAL1 CES, or frame relay service.
- Set up an ATM virtual channel connection with a nailed-up end point on the port where the remote receiver is connected.
- Do the following procedure in provisioning mode. For more information, see [Provisioning mode \(page 342\)](#).

### Procedure steps

---

| Step | Action                                                                                                                                                                                                                                                                                                                                                              |
|------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1    | Add a <i>MaintenanceMonitorTx</i> component.<br><b>add Mmtx/&lt;n&gt;</b>                                                                                                                                                                                                                                                                                           |
| 2    | Link the <i>MaintenanceMonitorTx</i> component to the LP containing the channel to be monitored.<br><b>set Mmtx/&lt;n&gt; lpName Lp/&lt;lp&gt;</b><br><br>A separate instance of the <i>MaintenanceMonitorTx</i> component is required for each monitored channel. Only one instance of the <i>MaintenanceMonitorTx</i> component can be linked to a particular LP. |
| 3    | Specify the traffic flow of the channel to be monitored.<br><b>set Mmtx/&lt;n&gt; direction &lt;dir&gt;</b>                                                                                                                                                                                                                                                         |
| 4    | Add a <i>NailedUpAdaptationPoint</i> subcomponent to the <i>MaintenanceMonitorTx</i> component.<br><b>add Mmtx/&lt;n&gt; Nap</b>                                                                                                                                                                                                                                    |
| 5    | Link the <i>NailedUpAdaptationPoint</i> subcomponent to the ATM virtual channel connection to the port where the remote receiver is connected.<br><b>add Mmtx/&lt;n&gt; Nap atmConnection AtmIf/&lt;m&gt; Vcc/&lt;vpi&gt;.&lt;vci&gt;<br/>Nep</b>                                                                                                                   |
| 6    | Activate and confirm the provisioning changes, see <a href="#">Activating configuration changes (page 342)</a> .                                                                                                                                                                                                                                                    |

---

--End--

---




### Variable definitions

| Variable  | Value                                                                                                                                                                            |
|-----------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <dir>     | <i>ingress</i> or <i>egress</i> . With <i>ingress</i> , the traffic going into the channel is monitored. With <i>egress</i> , the traffic going out of the channel is monitored. |
| <lp>      | The LP containing the channel you want to monitor.                                                                                                                               |
| <m>       | The ATM interface with the port where the remote receiver is connected.                                                                                                          |
| <n>       | The instance number of the <i>MaintenanceMonitorTX</i> component.                                                                                                                |
| <vpi.vci> | Identifies the virtual channel connection to the port where the remote receiver is connected.                                                                                    |

### Procedure job aid

#### Maintenance monitor component hierarchy

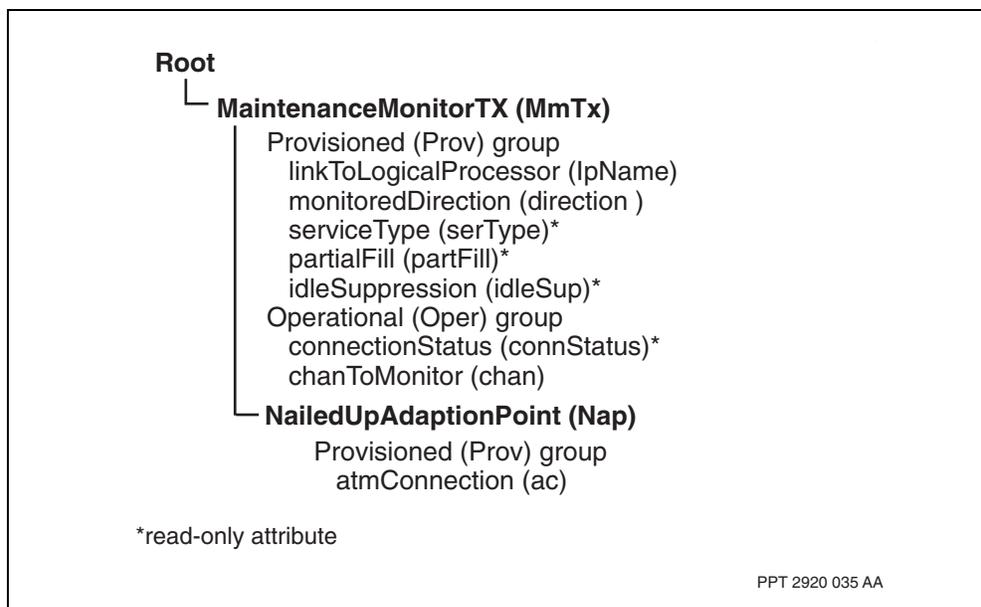



## Starting maintenance monitor

Start the maintenance monitor whenever you want to start monitoring the data on a specific channel.

### Prerequisites

- Do the following procedure in operational mode. For more information, see [Operational mode \(page 341\)](#).

### Procedure steps

| Step    | Action                                                                                                                                                                                               |
|---------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| 1       | Use the <i>chanToMonitor</i> attribute of the maintenance monitor to specify which LP, port and channel to monitor.<br><br><b>set Mmtx/&lt;n&gt; chan Lp/&lt;lp&gt; DS1/&lt;x&gt; Chan/&lt;y&gt;</b> |
| --End-- |                                                                                                                                                                                                      |

### Variable definitions

| Variable | Value                                                                                                                                                                                                                                                                                                     |
|----------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <lp>     | The LP containing the channel you want to monitor. The value must be the same as the one specified in <a href="#">Configuring maintenance monitor (page 241)</a> . The specified channel must be linked by provisioning to an ATM interface, a frame relay interface, or a structured AAL1 CES interface. |
| <n>      | The instance number of the <i>MaintenanceMonitorTX</i> component.                                                                                                                                                                                                                                         |
| <x>      | The instance number of the port containing the channel you want to monitor.                                                                                                                                                                                                                               |
| <y>      | The instance number of the channel you want to monitor.                                                                                                                                                                                                                                                   |



---

## Stopping maintenance monitor

Stop maintenance monitor after you have gathered sufficient data from the channel.

### Prerequisites

- Do the following procedure in operational mode. For more information, see [Operational mode \(page 341\)](#).

### Procedure steps

---

| Step | Action                                                                                                             |
|------|--------------------------------------------------------------------------------------------------------------------|
| 1    | Clear the <i>chanToMonitor</i> attribute of the maintenance monitor.<br><br><code>set Mmtx/&lt;n&gt; chan !</code> |

---

--End--

---

### Variable definitions

| Variable | Value                                                             |
|----------|-------------------------------------------------------------------|
| <n>      | The instance number of the <i>MaintenanceMonitorTX</i> component. |
|          |                                                                   |



## Maintenance monitor configuration supporting information

The maintenance monitor can monitor the following types of channels:

- ATM
- frame relay
- basic structured AAL1 CES

The maintenance monitor software directs the data flow as a basic structured ATM adaptation layer 1 (AAL1) circuit emulation service (CES) by means of an ATM PVC. The output AAL1 CES data stream can be directed to a local port, or to a remote port. The remote port can be located anywhere in the network that supports CES.

The following limitations apply:

- Each FP allows you to monitor only one ingress and one egress channel. The FPs that support monitoring have monitor ports labeled on their faceplates, as shown in the FP and sparing panel descriptions in *NN10600-120 Nortel Multiservice Switch 15000/20000 Hardware Description*.
- The maintenance monitor does not carry DS1 and E1 framing or channel associated signaling (CAS) information.
- Multipoint ATM IMA services cannot be monitored.

The figure [Maintenance monitor component hierarchy \(page 242\)](#) shows the maintenance monitor components and attributes that you can provision.



---

# Multiservice Switch configuration concepts

---

This section contains reference information that supports the procedures in this guide.

## Navigation

- [Multiservice Switch system overview \(page 247\)](#)
- [Understanding CP equipment sparing \(page 247\)](#)
- [Understanding equipment protection for Multiservice Switch electrical interfaces \(page 257\)](#)
- [Understanding line and equipment protection for Multiservice Switch 15000 and Multiservice Switch 20000 optical interfaces \(page 261\)](#)
- [Understanding line protection for Multiservice Switch 7400 optical interfaces \(page 266\)](#)
- [Understanding Multiservice Switch 15000 and Multiservice Switch 20000 support of G.841 Annex B \(page 268\)](#)
- [Understanding logical processors, ports, and channels \(page 269\)](#)
- [Understanding NCS \(page 276\)](#)
- [Understanding network time and date configuration \(page 296\)](#)
- [Understanding Multiservice Switch control processors and function processors \(page 298\)](#)
- [Understanding Multiservice Switch software \(page 308\)](#)
- [Understanding the control processor OAM Ethernet port \(page 313\)](#)
- [Understanding the fabric card \(page 316\)](#)
- [Understanding the Multiservice Switch 7400 bus \(page 320\)](#)
- [Understanding the Multiservice Switch file system \(page 322\)](#)
- [Understanding Y-protection for dual FPs \(page 326\)](#)
- [Understanding hitless services \(page 328\)](#)



## Multiservice Switch system overview

Nortel Multiservice Switch system is capable of running a variety of different communication services. For these services to run properly, you must configure and maintain the basic system.

Every Multiservice Switch node has a shelf, a fabric card or a bus, and multiple processor cards (*Shelf*, *FabricCard* or *Bus*, and *Card* components). The shelf contains slots that hold the processor cards and the fabric card or bus. The bus or fabric card allows the processor cards to communicate with the other processor cards installed in the node.

Multiservice Switch nodes have two types of processor cards: control processors (CP) and function processors (FP). A CP manages the FPs and provides basic system capabilities. An FP provides communication connections and services.

Logical processors (*LogicalProcessor* component) represent the software on a processor card that delivers one or more Multiservice Switch network services or capabilities. A logical processor also represents the ports and the channels of the processor card. Logical processors allow you to map software to processor cards. Logical processors also support the configuration of a spare processor card to take over in case of the failure of the main processor card.

Software and configuration files are stored on the node file system (*FileSystem* component). The file system consists of up to two disks (*Disk* component): one on the main CP and another on the spare CP.

The data collection system (*Collector* component) collects the data generated for troubleshooting, performance tuning, and billing. In most cases, this data is transferred to an external network management system for analysis.

## Understanding CP equipment sparing

Before setting up sparing between processor cards, check the product equipment codes (PECs) of the active and spare cards. For CPs, the first six digits must match and the cards must have the same amount of memory and disk space.

The StartUp utility configures the main CP when you initially set up the node. You can also configure a spare CP using the StartUp utility. For more information, see NN10600-271 *Nortel Multiservice Switch 7400/15000/20000 Network Management Connectivity*. You can also manually configure CP equipment sparing by configuring a spare CP.



**Attention:** When you connect both of the Ethernet ports on a two-CP node through a hub or IP router, the Multiservice Data Manager workstation connectivity is also spared. In order to quickly resume the OAM Ethernet connectivity after the spare CP becomes active, direct hub or IP router sparing is required for both the active and standby CP OAM Ethernet ports.

---

The CP currently running the node is the active CP. The other CP is the standby CP. At any given time, either the main or the spare CP can be the active CP.

A CP switchover occurs when the active CP gives control of the node to the standby CP and the standby CP becomes the newly active CP.

There are two types of CP switchovers: automatic and manual. An automatic CP switchover occurs when the active CP resets or restarts, either due to a hardware problem or an inappropriate operator command. A manual CP switchover occurs as a result of the *switchover lp/0* command. A manual CP switchover allows the active CP to gracefully transfer control of the node to the standby CP.

**Attention:** After an automatic CP switchover, if the formerly active CP recovers, the system does not automatically revert back to the original active CP. You can force the system to revert back to the original active CP by executing a manual CP switchover with the *switchover lp/0* command.

---

For information on the *switchover* command, see NN10600-050 *Nortel Multiservice Switch 7400/15000/20000 Command Reference*.

There are two modes of CP equipment sparing: cold standby and hot standby. In cold standby, all function processors (FP) must restart when the CP switchover occurs. In hot standby, FPs that support this mode of operation continue running uninterrupted when the CP switchover occurs.

**Attention:** OSI standards terminology differs from Nortel Multiservice Switch terms when referring to CP standby modes. When you display the *standbyStatus* attribute for the CP logical processor (Lp/0), Multiservice Switch systems report *providingService* for the active CP and *coldStandby* for the standby CP. In this context, the term *coldStandby* refers to Multiservice Switch 15000 or Multiservice Switch 20000 hitless services and not to CP equipment sparing. The term *coldStandby* appears regardless of whether CP equipment sparing is in cold standby mode or hot standby mode. See [Understanding hitless services \(page 328\)](#) for more details.

---



|  |                                                                                                                                                                                                                                                                                                               |
|--|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
|  | <p><b>CAUTION</b><br/><b>Risk of damage to the CP</b><br/>Do not remove the active CP from the node as a way of simulating active CP failure.</p> <p>To test the behavior of hot standby CP redundancy under CP failure conditions, use the <i>restart lp/0</i> command or the <i>reset lp/0</i> command.</p> |
|--|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

For information on CP sparing, see the following sections:

- [CP standby states \(page 249\)](#)
- [Considerations for adding a spare CP to a single-CP node \(page 251\)](#)
- [Automatic CP switchover in cold standby mode \(page 252\)](#)
- [Requirements for a CP switchover in cold standby mode \(page 252\)](#)
- [Automatic CP switchover in hot standby mode \(page 252\)](#)
- [Timeout for a subsequent CP switchover \(page 254\)](#)
- [Requirements for a CP switchover in hot standby mode \(page 254\)](#)
- [Effects of a CP switchover \(page 255\)](#)
- [CP switchover operator commands \(page 257\)](#)

### CP standby states

There are three CP standby states when CP equipment protection is enabled (hot): steady-state, synchronizing, and manual synchronization.

In steady state, all standby applications have been created, have had their provisioning data delivered, and are ready to take over should a control processor switchover (CPSO) occur. If a CPSO occurs, then the following events will occur:

- Standby applications on this CP will become active.
- CP applications that are cold will have their provisioning data delivered after all standby applications have been notified of the switchover.

---

**Attention:** Activating a configuration change will cause the standby CP to go from steady state to synchronizing state. In addition, applications can also cause the system to go from this state to synchronizing state.

---

There are four main windows in the synchronizing state:

- Provisioning data being delivered to the standby CP applications: If a CPSO occurs in this window, then the standby CP resets and reloads with the committed view. All FPs in the node are reset and the CPSO is



disabled. Note, that this window is only entered if provisioning data is delivered to the standby CP applications. The length of this window is dependant on amount of configuration changes.

- Hot/warm standby CP applications journaling operational state from active CP: Once the activation finishes on the active CP, then any changed warm or hot standby CP applications need to journal their state between the two CPs. If a single application is not ready for switchover, then a CPSO is degraded. Only those applications that are not synchronized are impacted by the CPSO.
- Loading of configuration delta pending confirm: The standby CP is temporarily unsynchronized until the user issues the confirm prov command. This command will trigger the standby CP to load the configuration delta (next state) and the CPSO is degraded.
- Standby CP provisioning system loading configuration delta.: In order to synchronize to the current view configuration, the standby CP provisioning system loads the current view configuration as represented by the committed view and the journal logs. If a CPSO occurs in this window (and all hot applications are ready for switchover), then there is no impact to hot or warm applications. The CPSO is degraded, however, since cold CP applications will not have their provisioning data delivered until after loading has finished.

---

**Attention:** Note that the above windows can overlap, but will typically be quite small, since only the delta configuration needs to be activated, journaled, and loaded.

---

---

**Attention:** With journaling enabled and the *autoConfirm* attribute set to on, the current view is automatically confirmed after the switchover.

---

If the active CP fails after the activation has finished but before the user has confirmed the activation, then the standby CP changes to the just activated view, with the following steps:

- Hot and warm standby CP applications are told to become active.
- The delta configuration (of the last activation) is loaded on the standby CP.
- Cold standby applications are activated.
- The confirm timer is restarted (20 minutes). If the operator does not issue confirm prov within 20 minutes, then the node resets to the committed view.



The manual synchronization state is entered if the standby CP is unable to synchronize to the active CP. There are two cases when this occurs:

- The provisioning system was unable to save a journal log file. In order to synchronize the standby CP to the active CP's current view, the delta between the current and edit view is automatically saved by the provisioning system during the activate prov command. If this save fails, then the activation will still proceed, but the standby CP will be unable to resynchronize itself to the new current view. In such a case the standby CP enters an unsynchronized state, and will revert to its last synchronized view if a CPSO occurs.

If the provisioned configuration of a warm or hot standby CP application is changed while in this state, then a CPSO will result in a node reset. In addition, any FPs that are not running this last journaled view will also be reset on a CPSO.

- The standby CP becomes active after a software migration or a reload activation to a non committed view occurs, but before the first commit is done. These journal logs are based on the committed view, and therefore require the committed view to be initially equal to the current view. In this case, a CPSO causes an outage.

### **Considerations for adding a spare CP to a single-CP node**

- For Nortel Multiservice Switch 15000 and Multiservice Switch 20000 nodes, the spare CP belongs in slot 1.
- For Multiservice Switch 7400 series nodes, the spare CP always goes in the last slot. For example, if you have a 16-slot Multiservice Switch node you must install the spare CP in slot 15.
- For all Multiservice Switch nodes, the slot that normally houses the spare CP can house an FP. In this case, the node has only a single CP operating without a spare.
- When you add a spare CP, make sure all eight digits of the PECs for both CPs match. This ensures that the spare CP has the same amount of memory and disk space as the main CP.
- To add a spare CP to a single-CP node, you must configure the spare CP, install it in the node, and synchronize its disk to the active CP.



**Attention:** A spare CP can provide Nortel Multiservice Data Manager workstation connectivity redundancy, if the workstation is connected through the OAM Ethernet port of the CPs. For information on configuring the Ethernet port, see [Configuring the CP OAM Ethernet port \(page 136\)](#). For information on cabling the Ethernet port, see NN10600-130 *Nortel Multiservice Switch 15000/20000 Hardware Installation, Maintenance, and Upgrade* or NN10600-175 *Nortel Multiservice Switch 7400 Hardware Installation, Maintenance, and Upgrade*.

### Automatic CP switchover in cold standby mode

In cold standby mode, all FPs restart when a CP switchover occurs. During the restart, all service connections on all FPs terminate. When the restart is complete, the FPs re-establish the following connections:

- Routing: PNNI, DPRS, and PORS
- Traffic: PVC and SPVC

### Requirements for a CP switchover in cold standby mode

All the following requirements must be met for a CP switchover to occur in cold standby mode:

- The standby CP is fault-free.
- The file system is synchronized.

### Automatic CP switchover in hot standby mode

When a CP switchover occurs, those FPs configured exclusively with features that support hot standby for CP switchover continue running uninterrupted. If you configure an FP with one or more features that do not support hot standby for CP switchover, it restarts as if it is in cold standby mode.

The table [Applications and features that support hot standby for CP switchover \(page 252\)](#) identifies the features that support hot standby. If an application or feature is not listed in this table, then it does not support hot standby mode.

#### Applications and features that support hot standby for CP switchover

| Application | Feature |
|-------------|---------|
| base        | aps     |
|             | atmCore |
| (1 of 3)    |         |



**Applications and features that support hot standby for CP switchover**

| <b>Application</b> | <b>Feature</b>         |
|--------------------|------------------------|
| atmNetworking      | atmAini                |
|                    | atmEbr                 |
|                    | atmlisp                |
|                    | atmPnni                |
|                    | atmUni                 |
| aal1Ces            | aal1Ces                |
| atmBearerService   | atmBearerService       |
| frameRelay         | frameRelayNni          |
|                    | frameRelayUni          |
|                    | frameRelayUniPvcSvc    |
|                    | mpaNetworkLink         |
| ip                 | ip <sup>1</sup>        |
| mpls               | mplsCrdp <sup>2</sup>  |
| networking         | dpnRouting             |
| pvg                | vgsAtm                 |
|                    | vgsIp                  |
|                    | vgsIpG729              |
| trunks             | atmTrunks              |
|                    | dpnTrunks <sup>3</sup> |
|                    | frDpnTrunks            |
|                    | porsTrunks             |
|                    | unackTrunks            |
| vtds               | bitTransparent         |
|                    | echoCancellor          |
|                    | hdlcTransparent        |
|                    | silenceSuppressor      |
|                    | vtds                   |
|                    | voice                  |
|                    | voiceCompressor        |
| (2 of 3)           |                        |



**Applications and features that support hot standby for CP switchover**

| Application                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                      | Feature                    |
|----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|----------------------------|
| wanDte                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           | atmMpe <sup>1</sup>        |
|                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  | frameRelayDte <sup>1</sup> |
| <sup>1</sup> During a CP switchover, ILS FPs configured with these features reset. The WAN FPs do not reset. However, ILS services on the WAN FPs do reset.<br><sup>2</sup> MPLS service on the FP are interrupted during a CP switchover, but other services on the FP that support hot standby mode are not interrupted.<br><sup>3</sup> The dpnTrunks feature on an FP does not cause that FP to restart on CP switchover, but all DPN trunks restage if a CP switchover occurs. The network routes traffic destined for DPN nodes around this node while DPN trunks restage. |                            |
| (3 of 3)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         |                            |

There is an internal CP timer that can affect an automatic CP switchover. Refer to [Timeout for a subsequent CP switchover \(page 254\)](#).

**Timeout for a subsequent CP switchover**

After an automatic CP switchover, Nortel Multiservice Switch nodes consider that a second automatic CP switchover within 10 minutes to be an indication of a more serious fault. If a second automatic CP switchover occurs within a 10-minute period, the automatic switchover occurs in cold standby mode (all FPs on the node restart). This behavior prevents the node from continually changing from the active to the standby CP because of complications from an automatic CP switchover.

---

**Attention:** Multiservice Switch nodes do not allow you to remove the active CP without first preparing the system. Removing the active CP without due preparation causes unexpected behavior on the bus or fabric and can cause a full node reset.

---

**Requirements for a CP switchover in hot standby mode**

All the following requirements must be met for a CP switchover to occur in hot standby mode:

- The standby CP is fault-free and has loaded the committed provisioning view.
- The software for hot-standby mode is enabled.
- A software upgrade is not in progress.
- More than 10 minutes has elapsed since the completion of the last CP switchover. You can initiate a manual CP switchover with the *switchover lp/0* command within this 10-minute limit. However, after the manual CP switchover, if an automatic CP switchover occurs within 10 minutes, the



switchover occurs in cold standby mode (all FPs on the node restart). Refer to [CP switchover operator commands \(page 257\)](#).

- The file system is synchronized.

If one or more of these requirements are not met, the CP switchover occurs in cold standby mode; that is, all FPs restart.

Even if all the above requirements are satisfied, individual FPs may not continue providing service during a CP switchover in hot standby mode. An FP continues to provide service if all the following requirements are met:

- All features configured on the FP support hot standby mode for CP switchover.
- The configured data loaded on the FP matches that of the newly active CP. For example, if the FP is running uncommitted data and you issue a *switchover -force lp/0* command, an FP restart occurs.
- The newly active CP resynchronizes with the FP within approximately 60 seconds. This is required to ensure routing tables are updated correctly and that routing loops do not occur for more than 60 seconds. If the newly active CP cannot resynchronize with the FP within approximately 60 seconds, the FP resets.

If one or more of these requirements are not met, the FP may restart during a CP switchover in hot standby mode.

### Effects of a CP switchover

For all CP switchovers (in either cold or hot standby mode), the following common effects occur:

- Network management sessions terminate (such as Telnet, ssh, FTP, and FMIP), that is, drop all connections to the active CP. A local network management session on the standby CP does not terminate. However, it is suspended until the CP becomes active.
- Information stored in the edit view is lost unless it was saved on disk.
- Some components that were in the locked state move to the unlocked state. The *fabric card* or *bus* component remains locked if it was locked prior to the switchover.
- The operational attributes of CP-resident components revert to default values.
- All Multiservice Data Manager activities such as provisioning, backup/restore, software download, the FTP connection between Multiservice Data Manager and Nortel Multiservice Switch nodes, and performance viewer sessions terminate.



- If you have connected a Multiservice Data Manager workstation through the OAM Ethernet port of the CPs, connectivity is lost until the standby CP becomes active.
- New ATM connections cannot be established in FPs until the ATM routing system is available after the switchover. The time to wait highly depends on the network topology, but the wait should not exceed 30 seconds in most cases.
- After the CP switchover, new DPRS forwarding tables must be received by the FPs from the active CP within 3 minutes. Otherwise, DPRS-based frame relay (FR) connections will be cleared.
- The following temperature data are maintained from CP to CP after a switchover:
  - the alarm 7012 0051 for a cooling unit fan failure
  - the time at which an alarm 7012 0051 is generated so that the alarm can be generated again if the fan is not replaced within the next 8-hour interval (and provided the attribute *repeatFanAlarm* is set to yes)
  - the fabric temperature so that an increment in it of 3 degrees Celsius (37 Fahrenheit) after a fan failure can trigger alarm 7002 0004

In addition to the previous common effects, for a CP switchover in cold standby the following occurs:

- All traffic is interrupted until the network routes around the failed node.
- All connections established by the Path Oriented Routing System (PORS) involving this node must be rerouted.
- All existing calls that originate or terminate on the node are interrupted.
- No new calls that originate or terminate on the node are possible until the node recovers.

In addition to the previous common effects, for a CP switchover in hot standby the following occurs:

- There are no network disruptions for most CP switchovers in hot standby mode.
- The existing connections will stay up for most CP switchovers in hot standby mode on FPs that fully support hot standby mode. On Multiservice Switch 7400 nodes some minor cell loss may occur.
- Call setup is interrupted for less than 30 seconds for most CP switchovers in hot standby mode.



---

## CP switchover operator commands

Entering the *switchover lp/0* command causes a manual CP switchover. This is the only operator command that causes a CP switchover without interrupting calls in progress.

---

**Attention:** An automatic CP switchover cannot occur for 10 minutes after a manual CP switchover. Refer to [Timeout for a subsequent CP switchover \(page 254\)](#).

---

Entering any of the following commands causes an automatic CP switchover:

- *reset Shelf Card/<activeCP>*
- *reset Lp/0*
- *restart Shelf Card/<activeCP>*
- *restart Lp/0*
- activate Prov (during a software upgrade)
- reload Cp Lp/0 (during a software upgrade)

For more information on these commands, see NN10600-050 *Nortel Multiservice Switch 7400/15000/20000 Command Reference*.

## Understanding equipment protection for Multiservice Switch electrical interfaces

You can configure electrical function processor (FP) equipment sparing by configuring a spare card and wiring the interfaces of the main and spare card through a sparing panel. The spare card can take over in case the main card fails. This type of equipment sparing uses a single LP to define both the main and spare FP.

The card currently providing service is the active card. The other card is the standby card. At any given time, either the main or the spare card can be the active card. If the active card fails, the standby automatically takes over. The change from the active to standby card is called a switchover. The activity of detecting the failure and performing the switchover temporarily disrupts traffic through the node. The degree of disruption depends on the level of standby support provided by the services running on the cards, for example hot, warm, and cold. See [Understanding hitless services \(page 328\)](#).

Different types of FPs support different types of equipment sparing. Some FPs support one-for-one sparing, and some FPs support both one-for-one and one-for-*n* sparing. Some FPs do not support any type of equipment sparing.



For information about the sparing capabilities of a specific FP, see NN10600-551 *Nortel Multiservice Switch 7400/15000/20000 FP Configuration Reference*.

Before setting up sparing between processor cards, check the product equipment codes (PECs) of the active and spare cards. For FPs, the first six digits (four letters and two numbers) must match.

For MSA32 FP sparing, electrical interfaces are protected intercard (electrical sparing protection) while optical interfaces are protected intracard (APS line protection). Regardless of either PEC or card type:

- DS1 FPs can only spare other DS1 FPs and only for electrical interfaces
- E1 FPs can only spare other E1 FPs and only for electrical interfaces

For DS1 and E1 MSA8 FP sparing, MSA8 FPs can only spare other MSA8 FPs of the same type. Sparing between MSA8 FPs and MSA32 FPs is not supported.

---

**Attention:** Some Nortel Multiservice Switch 7400 processor cards have equivalent PECs. See NN10600-170 *Nortel Multiservice Switch 7400 Hardware Description* for a list of equivalent PECs. Except where noted, processor cards with equivalent PECs can be used as spares for each other.

---

For information on installing and connecting FPs, termination panels, and sparing panels, see NN10600-130 *Nortel Multiservice Switch 15000/20000 Hardware Installation, Maintenance, and Upgrade* or NN10600-175 *Nortel Multiservice Switch 7400 Hardware Installation, Maintenance, and Upgrade*.

See these sections about the different types of FP equipment sparing:

- [One-for-one equipment sparing \(page 258\)](#)
- [One-for-n equipment sparing \(page 259\)](#)
- [Switching from the spare FP back to the main FP \(page 260\)](#)

### **One-for-one equipment sparing**

In one-for-one sparing, a single spare FP acts as a backup for a single main FP. Some FPs on Nortel Multiservice Switch series nodes support one-for-one equipment sparing using a one-for-one sparing panel to terminate the cable connections of two FPs. One FP is active while the second FP of the same type operates as a standby in case of failure. Some FPs support one-for-one sparing without using a sparing panel, for example, LAN-based cards.



When an active (main) FP connected to a one-for-one sparing panel fails, all traffic is moved to the standby (spare) FP. When the main FP recovers, it comes up as the new standby. Traffic reverts from the spare FP back to the main FP if the active (spare) FP fails or you issue the switchover command and the recovered (main) FP is running as standby.

In a one-for-one sparing configuration, hot standby services are hitless.

To configure one-for-one electrical interface FP sparing for Multiservice Switch 7400 nodes, see [Configuring a new processor card \(page 60\)](#).

### **One-for-n equipment sparing**

One-for-n equipment sparing enables you to protect multiple main FPs with a single spare FP. All FPs must be of the same type and vintage.

In one-for-n sparing on a Nortel Multiservice Switch 7400 series node, a single FP acts as a backup for up to four main FPs. In one-for-n sparing on Multiservice Switch 15000 and Multiservice Switch 20000 nodes, a single FP acts as a backup for up to six main FPs. In a one-for-n sparing configuration, you must configure  $n$  logical processors (LP) to point to the same spare FP. This includes the FPs connected to any 32-port multi-service access (MSA32) or 8-port multi-service access (MSA8) sparing panel. For information about configuring LPs, see [Navigation \(page 146\)](#).

In a one-for-n sparing configuration, hot standby services are not hitless.

One-for-n equipment sparing requires the use of a separate one-for-n sparing panel. For information about the termination or sparing panels supported by a specific FP, see NN10600-120 *Nortel Multiservice Switch 15000/20000 Hardware Description* or NN10600-170 *Nortel Multiservice Switch 7400 Hardware Description*. For information about installing a sparing panel, see NN10600-130 *Nortel Multiservice Switch 15000/20000 Hardware Installation, Maintenance, and Upgrade* or NN10600-175 *Nortel Multiservice Switch 7400 Hardware Installation, Maintenance, and Upgrade*.

When a main FP connected to a one-for-n sparing panel fails, the control processor (CP) identifies which main FP has failed. The CP then instructs the failed FP to restart and starts a sparing timer. If the main FP does not restart by the time the sparing timer expires, traffic moves to the spare FP.

If the main FP restarts before the sparing timer expires, traffic does not change to the spare. However, if the FP fails again within a specified stability period, traffic immediately moves to the spare FP. The CP then instructs the main FP to come up in standby mode.



If the main FP fails to come up in standby mode after three restarts, the CP places the failed FP into a rejected state. You need to replace the FPs that are in a rejected state.

When the spare FP is in use, all the other main FPs are not protected. If a spare FP fails and recovers while there are many main FP failures, the spare always carries the traffic of the FP with the lowest LP number.

To configure electrical interface FP sparing for Multiservice Switch nodes, see [Multiservice Switch electrical interface equipment protection configuration \(page 191\)](#).

### **Immediate switchover to spare for one-for-n sparing**

By default, the system delays a switchover to the spare FP when an active main FP fails. By changing the setting for the *oneForNSparingBehavior* attribute, you can configure the system to allow an immediate switchover to occur. To configure this behavior see [Multiservice Switch electrical interface equipment protection configuration \(page 191\)](#).

### **Switching from the spare FP back to the main FP**

You can use the *switchover Lp* command to move traffic back to a main FP if you have replaced a failed main FP and a failed main FP has restarted and is in standby mode.

If you have scheduled a switchover from a spare FP back to a main FP and another main FP fails, the CP forces the switchover and spares the failed FP.

For information on performing a switchover, see [Switching between active and standby processor cards \(page 95\)](#). For information on the *switchover* command, see NN10600-050 *Nortel Multiservice Switch 7400/15000/20000 Command Reference*.

### **Manual FP switchover**

Entering any of the following commands causes a manual switchover:

- *switchover Lp/<activeFP>*
- *reset Shelf Card/<activeFP>*
- *reset Lp/<activeFP>*
- *restart Shelf Card/<activeFP>*
- *restart Lp/<activeFP>*
- *lock -force Lp/<activeFP>*
- *lock -force Shelf Card/<activeFP>*



**CAUTION**

**Data loss may occur**

When you reset or restart a processor it is temporarily unable to provide service. During the time the processor is restarting, data can be lost.



**CAUTION**

**Loss of stable SVC connections may occur**

When you reset or restart a processor card, a loss of SVC connections may occur. Although stable SVC calls should remain active in a redundant processor configuration, exercise caution when issuing this command.

For more information on these commands, see NN10600-050 *Nortel Multiservice Switch 7400/15000/20000 Command Reference*.

You cannot perform a manual switchover if

- there is no standby control processor (CP) or the standby CP is not operational
- a software upgrade is in progress

## Understanding line and equipment protection for Multiservice Switch 15000 and Multiservice Switch 20000 optical interfaces

Line automatic protection switching (line APS or LAPS) on Nortel Multiservice Switch 15000 and Multiservice Switch 20000 nodes extend the line APS functionality available from Multiservice Switch 7400 series nodes.

Both single-FP APS and dual-FP APS on Multiservice Switch 15000 and Multiservice Switch 20000 nodes offer:

- revertive and non-revertive switching schemes
- unidirectional and bidirectional operating modes

The defaults are the same as for Multiservice Switch 7400 series nodes. See [Understanding line protection for Multiservice Switch 7400 optical interfaces \(page 266\)](#).

Line APS on Multiservice Switch 15000 and Multiservice Switch 20000 nodes use:

- a logical processor (LP) to define the main port where a service runs
- a second LP to define a spare port where the service runs if the FP containing the main port fails.




- SONET line automatic protection switching (line APS) to link the ports from both LPs

For Multiservice Switch 15000 and Multiservice Switch 20000 nodes, line APS:

- is implemented using the *LineAutomaticProtectionSwitching (Laps)* component
- applies to predetermined pairs of ports on a single FP to provide the same level of functionality as with Multiservice Switch 7400 series nodes. This is called single-FP APS
- can also apply to predetermined pairs of ports on a pair of FPs. This is called dual-FP APS. This configuration specifies both line and equipment protection

The figure [LAPS components and attributes \(page 262\)](#) illustrates the components and attributes of the *Laps* component.

#### LAPS components and attributes

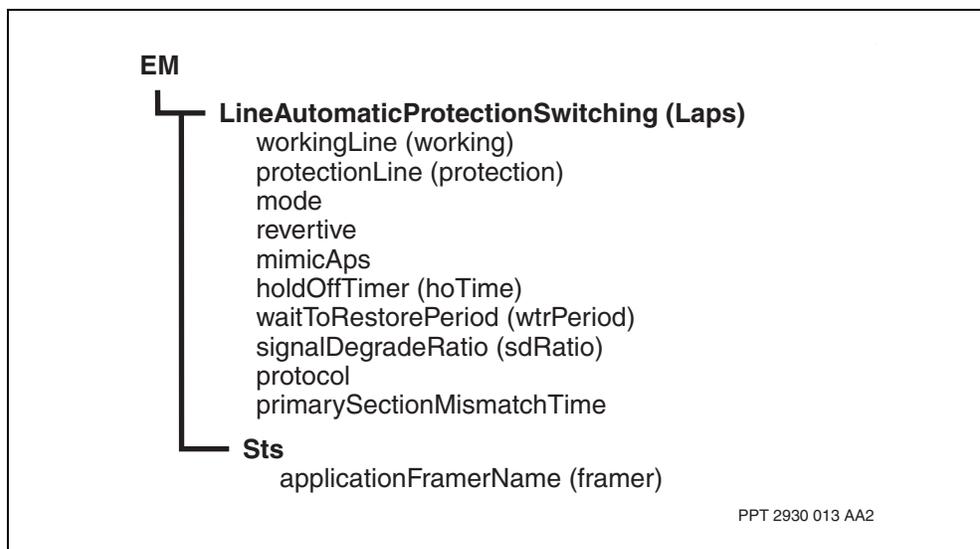

The following sections contain information about line APS for Multiservice Switch 15000 and Multiservice Switch 20000 optical interfaces:

- [Requirements for configuring line and equipment protection for Multiservice Switch 15000 and Multiservice Switch 20000 optical interfaces \(page 263\)](#)
- [Nodal requirements for converting line and equipment protection \(page 264\)](#)
- [Working line on Multiservice Switch 15000 and Multiservice Switch 20000 optical interfaces \(page 265\)](#)



- [Protection line on Multiservice Switch 15000 and Multiservice Switch 20000 optical interfaces \(page 265\)](#)
- [Revertive and non-revertive switching on Multiservice Switch 15000 and Multiservice Switch 20000 optical interfaces \(page 265\)](#)
- [Unidirectional and bidirectional mode on Multiservice Switch 15000 and Multiservice Switch 20000 optical interfaces \(page 265\)](#)

### **Requirements for configuring line and equipment protection for Multiservice Switch 15000 and Multiservice Switch 20000 optical interfaces**

Ensure the following prerequisites exist for line APS and equipment sparing on optical FPs on Multiservice Switch 15000 and Multiservice Switch 20000 nodes:

- The main port that runs the service must have a spare port on a separate FP.
- Both FPs must be in adjacent card slots. One FP must be located in an even-numbered card slot, other than slot 0. The other FP must be located in the next higher odd-numbered card slot. For example, if the one FP is in card slot 4, the other FP must be in card slot 5.
- A port is always paired with its matching port on the other FP. For example, FP4 port 0 is paired with FP5 port 0, while FP4 port 1 is paired with FP5 port 1.
- FPs with spared port-pairs can run other services on their other ports. The other services can be spared, or unspared. The other services can be hitless or not.
- Ensure the first LP of the port on the working line is set up.
- The working and protection lines should be synchronized with the same timing source to make sure there is no service impact during equipment or line switchovers.
- Ensure the second LP of the port on the protection line is set up.

---

**Attention:** Some services are no longer hitless when combined with other services on the same FP. See [Understanding hitless services \(page 328\)](#) for details.

---



**CAUTION**

**Risk of loss of service by improper timing source**

Ports configured for equipment protection/dual FP APS should use the same timing source to make sure there is no service impact during equipment or line switchovers. This can be accomplished by using the module clock as the port's clocking source.

For more information about choosing the location of FPs in Multiservice Switch 15000 and Multiservice Switch 20000 nodes, see NN10600-130 *Nortel Multiservice Switch 15000/20000 Hardware Installation, Maintenance, and Upgrade*.

**Nodal requirements for converting line and equipment protection**

When converting line and equipment protection, the following assumptions about the configuration of the node exist:

- An interface, for example, Atm1f is already implemented and uses single FP.
- The main port that runs the service must have a spare port on a separate FP.
- Both FPs must be in adjacent card slots. One FP must be located in an even-numbered card slot, other than slot 0. The other FP must be located in the next higher odd-numbered card slot. For example, if the one FP is in card slot 4, the other FP must be in card slot 5.
- A port is always paired with its matching port on the other FP. For example, FP4 port 0 is paired with FP5 port 0, while FP4 port 1 is paired with FP5 port 1.
- FPs with spared port-pairs can run other services on their other ports. The other services can be spared, or unspared. The other services can be hitless or not.
- The bidirectional mode applies and can be configured. See [Multiservice Switch 15000 and 20000 optical interface line and equipment protection configuration \(page 204\)](#).
- The revertive mode applies and can be configured. See [Multiservice Switch 15000 and 20000 optical interface line and equipment protection configuration \(page 204\)](#).

For more information about choosing the location of FPs in Nortel Multiservice Switch 15000 and Multiservice Switch 20000 nodes, see NN10600-130 *Nortel Multiservice Switch 15000/20000 Hardware Installation, Maintenance, and Upgrade*.



### **Working line on Multiservice Switch 15000 and Multiservice Switch 20000 optical interfaces**

The *workingLine* attribute of the *Laps* component specifies which line of an APS pair does not carry overhead signals to specify which line passes traffic to the Nortel Multiservice Switch 15000 or Multiservice Switch 20000 fabric card. In single-FP and dual-FP line APS, the working line can be the active line, or the standby line.

For information on how to configure the *workingLine* attribute, see NN10600-551 *Nortel Multiservice Switch 7400/15000/20000 FP Configuration Reference*.

### **Protection line on Multiservice Switch 15000 and Multiservice Switch 20000 optical interfaces**

The *protectionLine* attribute of the *Laps* component specifies which line of an APS pair carries overhead signals to specify which line passes traffic to the Nortel Multiservice Switch 15000 or Multiservice Switch 20000 fabric card. In single-FP and dual-FP line APS, the protection line can be the active line, or the standby line.

For information on how to configure the *protectionLine* attribute, see NN10600-551 *Nortel Multiservice Switch 7400/15000/20000 FP Configuration Reference*.

### **Revertive and non-revertive switching on Multiservice Switch 15000 and Multiservice Switch 20000 optical interfaces**

The *revertive* attribute of the *Laps* component is similar to the *revertive* attribute of the *Aps* component used by Nortel Multiservice Switch 7400 series nodes. See [Revertive and non-revertive switching on Multiservice Switch 7400 optical interfaces \(page 268\)](#) for details.

For information on how to configure the *revertive* attribute, see NN10600-551 *Nortel Multiservice Switch 7400/15000/20000 FP Configuration Reference*.

### **Unidirectional and bidirectional mode on Multiservice Switch 15000 and Multiservice Switch 20000 optical interfaces**

The *mode* attribute of the *Laps* component is similar to the *mode* attribute of the *Aps* component used by Nortel Multiservice Switch 7400 series nodes. See [Unidirectional and bidirectional mode on Multiservice Switch 7400 optical interfaces \(page 268\)](#) for details.

For information on how to configure the mode attribute, see NN10600-551 *Nortel Multiservice Switch 7400/15000/20000 FP Configuration Reference*.



---

## Understanding line protection for Multiservice Switch 7400 optical interfaces

Line automatic protection switching (line APS) is a standards-defined feature enabling a form of SONET line sparing on optical FPs. Under line APS, two lines are defined: working and protection. While both lines carry the user payload, only one is deemed active at any time. The active line is the line where the receiving end takes its data.

When the working line is active, the protection line operates as a backup. Line failure, signal degradation or an operator command can cause the active line to change from working to protection.

Line APS standards define two switching schemes: revertive and non-revertive. Revertive switching causes the active channel to change back to the designated working line when the condition causing the switchover is cleared. Non-revertive switching allows the protection line to remain active until the criteria for a switchover are met and an operator issues a manual switchover. The non-revertive scheme is the default for optical FPs.

A line APS system can operate in either unidirectional mode or bidirectional mode. In unidirectional mode, each end decides independently the line it receives data from. In bidirectional mode, the two ends negotiate to determine the active line. Unidirectional mode is the default.


For Nortel Multiservice Switch 7400 series nodes, line APS:

- is implemented using the *AutomaticProtectionSwitching (Aps)* component
- applies to predetermined pairs of ports on a single FP. This is called single-FP APS.

The figure [APS components and attributes \(page 267\)](#) illustrates the components and attributes of the *Aps* component.



## APS components and attributes

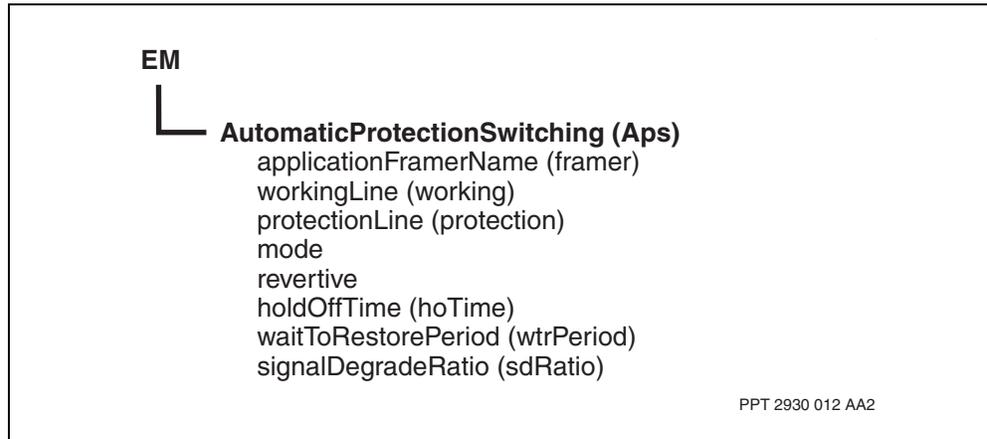

See the following sections for a description of Line APS for Multiservice Switch 7400 optical interfaces:

- [Working line on Multiservice Switch 7400 optical interfaces \(page 267\)](#)
- [Protection line on Multiservice Switch 7400 optical interfaces \(page 267\)](#)
- [Revertive and non-revertive switching on Multiservice Switch 7400 optical interfaces \(page 268\)](#)
- [Unidirectional and bidirectional mode on Multiservice Switch 7400 optical interfaces \(page 268\)](#)

### Working line on Multiservice Switch 7400 optical interfaces

The *workingLine* attribute is used to designate one line as the working line. Like the protection line, the working line always carries a full user payload. The working line can be active, or it can operate as a backup to the protection line.

For information on how to configure the working line, see NN10600-551 *Nortel Multiservice Switch 7400/15000/20000 FP Configuration Reference*.

### Protection line on Multiservice Switch 7400 optical interfaces

The *protectionLine* attribute is used to designate one line as the protection line. Like the working line, the protection line always carries a full user payload. The protection line can be active, or it can operate as a backup to the working line.

For information on how to configure the protection line, see NN10600-551 *Nortel Multiservice Switch 7400/15000/20000 FP Configuration Reference*.



---

## Revertive and non-revertive switching on Multiservice Switch 7400 optical interfaces

The *revertive* attribute defines the switching scheme in use for line APS. There are two switching schemes: revertive and non-revertive. Under revertive switching, the working line resumes being the active line after any condition causing a switchover is cleared, and the time configured in the *waitToRestore* attribute expires. Under non-revertive switching, the protection line remains active until conditions warrant a switchover back to the working line. The default scheme is non-revertive.

For information on how to configure the *revertive* attribute, see NN10600-551 *Nortel Multiservice Switch 7400/15000/20000 FP Configuration Reference*.

## Unidirectional and bidirectional mode on Multiservice Switch 7400 optical interfaces

The *mode* attribute sets the conditions for each end of a connection to determine where it receives the user payload. In unidirectional mode, each end unilaterally decides the line it receives data from. In bidirectional mode, each end confers with the other to decide the line it receives data from. Bidirectional mode must be configured at both ends to be operational. Unidirectional mode is the default.

For information on how to configure the mode attribute, see NN10600-551 *Nortel Multiservice Switch 7400/15000/20000 FP Configuration Reference*.

## Understanding Multiservice Switch 15000 and Multiservice Switch 20000 support of G.841 Annex B

G.841 Annex B is an extension of the existing Multiservice Switch optical protection scheme and is supported on the 16-port OC-3/STM-1 ATM (NTHW21, NTHW24, NTHW31) and 16-port OC-3/STM-1 POS and ATM (NTHW44) FPs. This capability enables Nortel Multiservice Switch to interwork with other G.841 Annex B protected networks. G.841 Annex B offers high speed 1 + 1, bidirectional, non-revertive protection switching on provisioned SDH optical interfaces.

The following standard LAPS rules apply:

- support of APS protocols on the same cardtype pair
- ports linked to the APS group must be provisioned on two FPs of the same cardtype. These FPs must be in adjacent slots in the shelf, with the slot number of the card in the lower slot being an even number and in the range of 2-14.
- protected ports must share the same physical port number
- unspared ports can co-exist on the same FP with either or both APS protocols



- provides same level of protection for a single line failure
- makes use of two lines: working line and protection line
- existing semantic checks are supported

The main differences introduced by G.841 Annex B are listed below:

- introduction of primary and secondary section concept. The primary section refers to the line which is carrying traffic when no request is present. The secondary section provides protection in case of failure of the primary section. The primary and secondary sections designations are dynamic and will change during the course of protection switching.
- supported for ATM services only
- only non-revertive, bi-directional behavior is supported
- requests are only valid on the primary section. Requests on the secondary section are ignored.
- a switchover will only occur when a request is received by the primary section from the far end
- the manual switch command is not supported; a forced switch is required.
- only SDH ports can be linked to a LAPS component with the protocol set to *g841AnnexB*


For information on how to configure G.841 Annex B on supported cards, see [Configuring line and equipment protection for Multiservice Switch 15000 and Multiservice Switch 20000 optical interfaces \(page 206\)](#).

## Understanding logical processors, ports, and channels

An LP represents the software on a processor card that delivers one or more Nortel Multiservice Switch services or capabilities. An LP also represents the ports and the channels of the processor card. Because the LP is a logical entity, you can map it to any processor card to suit the Multiservice Switch system configuration. The figure [LP components and attributes \(page 270\)](#) illustrates the components and attributes that define an LP.



## LP components and attributes

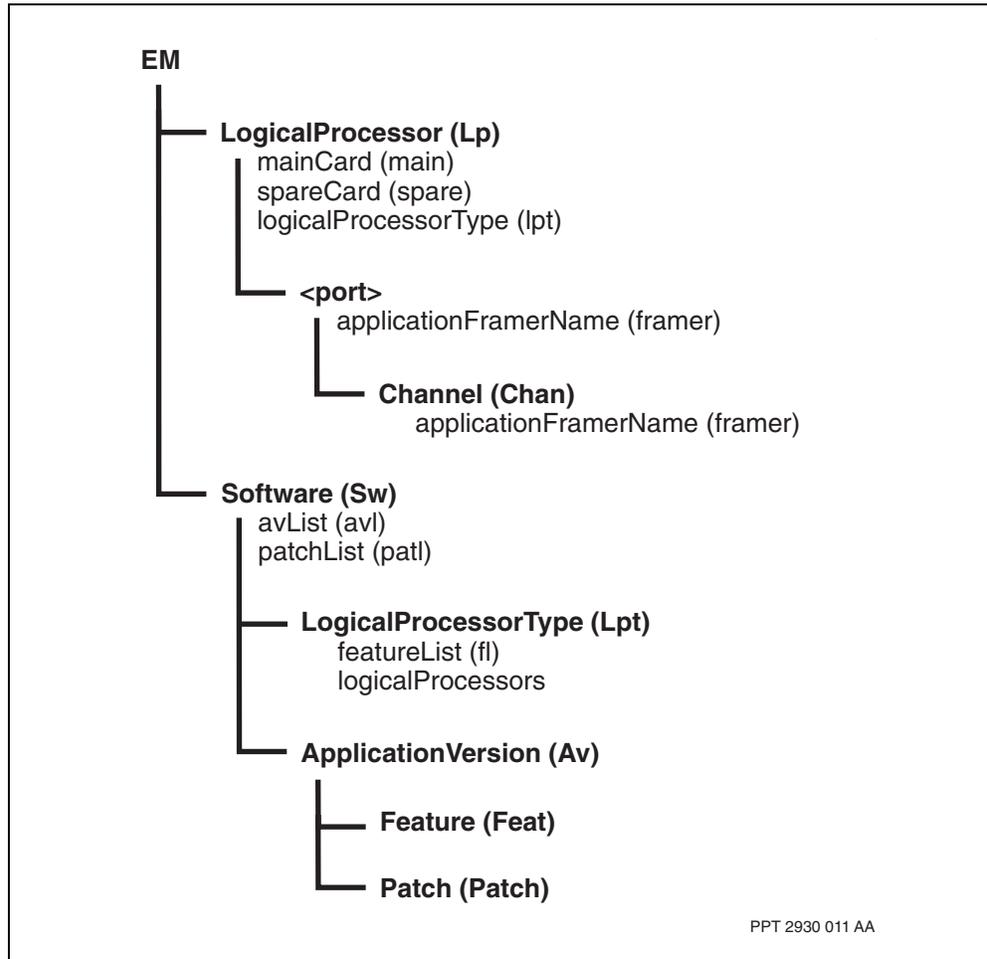

Function processor and control processor sparing uses LPs to define the processor software and configuration regardless of whether the main or spare processor is currently active.

For more information on LPs, see the following sections:

- [Ports and channels \(page 271\)](#)
- [Applications and features on LPs \(page 271\)](#)
- [Mixing spared and unspared applications and features on Multiservice Switch 15000 and Multiservice Switch 20000 LPs \(page 272\)](#)
- [Logical processor types \(page 272\)](#)
- [Logical processor configuration \(page 274\)](#)
- [Locking and disabling LPs \(page 275\)](#)



## Ports and channels

For each LP, you must configure the ports that exist on the processor card. Subcomponents of the *LogicalProcessor* (Lp) component represent the ports and have a name that corresponds to the port type. For example, *DS1* components represent DS1 ports. The number of ports you define (instances of the port component) must correspond to the actual number of ports on the processor card.

For example, if you create an LP for a V.35 processor card, you add eight *V35* subcomponents (numbered 0 to 7) to the *Lp* component to represent each of the eight ports on the processor card.

Some processor cards can also have channels on their ports. If you are configuring an LP for a channelized port, you have to add *Channel* subcomponents to the *port* component. For example, on a DS1C card you can add between 1 and 24 *Channel* components (numbered 0 to 23) under each of its four DS1 *port* components (numbered 0 to 4).

After you define the ports and channels of an LP, you can link them to the service that you want to run on that port or channel. You create the link by setting the *applicationFramerName* (*framer*) attribute of the port or channel to the *Framer* component for the service.

For example, if you want to run an unacknowledged Multiservice Switch trunk (instance number 4) on a V35 port, you set the *applicationFramerName* attribute of the port as follows:

**Trunk/4 UnAcked Framer**

## Applications and features on LPs

Nortel Multiservice Switch software is divided into applications. Each application contains the software necessary to provide a particular type of service. The trunks application, for example, contains the software for all the variations of trunks you can run on Multiservice Switch systems.

Each application has a version number appended to its name. For example, if the trunks application is version AA01, its application version is *trunks\_AA001*. The *ApplicationVersion* (*Av*) component, which is a subcomponent of *Software* (*Sw*), indicates each application version that is currently available on the node.

Applications are further divided into features. Features contain the software necessary to provide a particular service. For example, the trunks application has a number of features, one for each type of Multiservice Switch trunk:

- *dpnTrunks*
- *unackTrunks*



- porsTrunks
- frDpnTrunks
- atmTrunks

The *Feature (Feat)* component, which is a subcomponent of each *ApplicationVersion* component, indicates the features that are available in each application version.

### **Mixing spared and unspared applications and features on Multiservice Switch 15000 and Multiservice Switch 20000 LPs**

Line and equipment protection offers the flexibility of defining an LP with some applications and features that are spared and other applications and features that are unspared. For example, you can configure an LP to define four optical ports, as follows:

- the first port is the working line of a spared interface that uses dual-FP line automatic protection switching (line APS). Its protection line is defined through another LP.
- the second port is an unspared interface
- the third port is the working line of an spared SONET interface that uses single-FP line APS. Its protection line is defined as the fourth port of this LP.

In the preceding example, the four SONET ports are used by three different application instances. One application instance uses the first SONET port (and a second port defined through another LP). A second application instance uses the second SONET port. A third application instance uses the third and fourth SONET ports. Of the three application instances, two are spared and one is unspared.

The equipment protection sparing status of a port depends on the service applications and features that are linked to the LP and are using that port. Applications and features fall into three categories: hot standby, warm standby, and cold standby. See [Understanding hitless services \(page 328\)](#) for details.

### **Logical processor types**

When you define an LP, you specify a set of features to run on the processor card using a logical processor type (LPT). An LPT is a group of features that you can assign to one or more LPs. Since more than one LP can be running the same software, you can assign a single LPT to many LPs.

You create a new LPT by adding a *LogicalProcessorType (Lpt)* subcomponent to the *Software (Sw)* component. You then set the *featureList (fl)* attribute to contain a list of the features in the LPT.



To assign an LPT to a particular LP, you must set the *logicalProcessorType* (*lpt*) attribute of the *Lp* component to the name of the LPT. For example, to assign the LPT named CP to Lp/0, you set its *lpt* attribute as follows:


**Software Lpt/CP**

**Attention:** Do not define LPTs that mix cold standby applications or features with hot standby or a warm standby applications or features. A single cold standby application or feature in an LPT changes all other applications and features into cold standby. See [Understanding hitless services \(page 328\)](#) for details. Warm standby applications and features can co-exist with hot standby applications and instances in an LPT.

The read-only *logicalProcessors* attribute of the *Lpt* component shows which LPs are using the LPT.

The figure [Relationship between LPTs, LPs, and processor cards in Multiservice Switch 15000 or Multiservice Switch 20000 nodes \(page 273\)](#) illustrates the relationship between LPTs, LPs, and processor cards.

**Relationship between LPTs, LPs, and processor cards in Multiservice Switch 15000 or Multiservice Switch 20000 nodes**

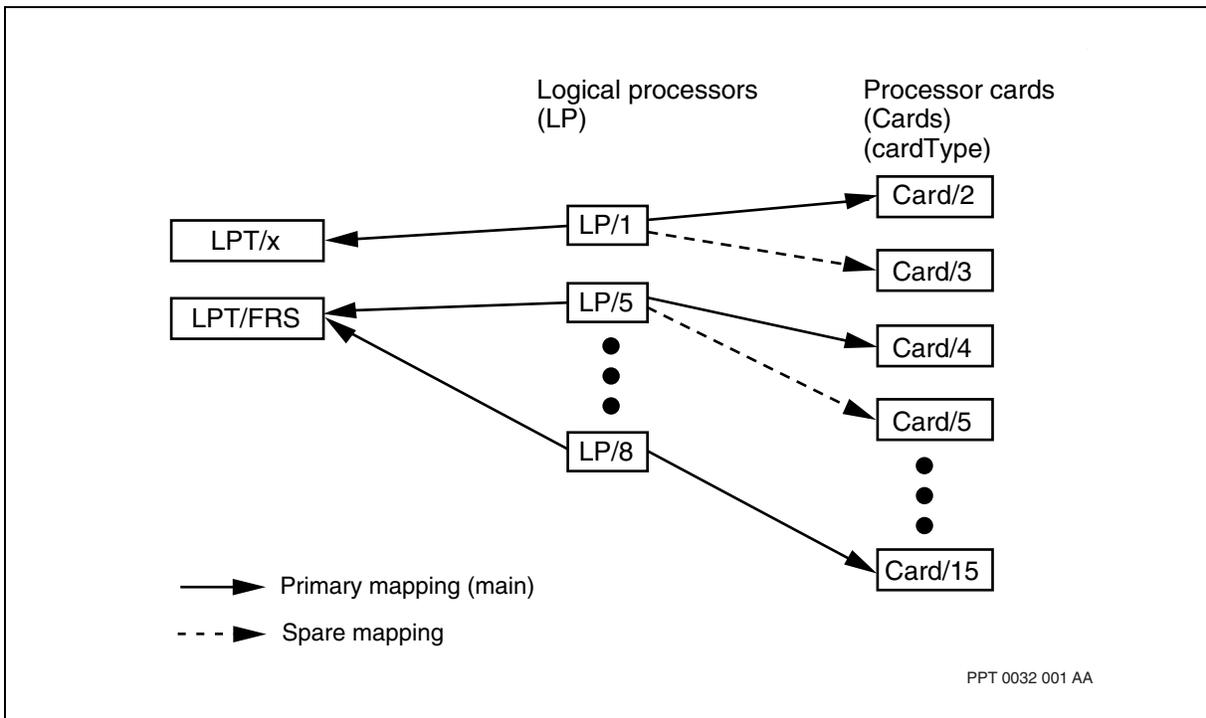



In the example, Lpt/FRS contains the software features required to run the frame relay service. Since this LPT maps to both Lp/5 and Lp/8, these two LPs can provide frame relay services. Processor cards 4 and 15 are main cards for LPs 5 and 8, respectively. Processor card 5 is a spare card for Lp/5 and runs the software and services defined for Lp/5 if processor card 4 fails.

A Nortel Multiservice Switch 15000 or Multiservice Switch 20000 processor card has two types of memory for storing software features: normal and shared. Normal memory is used for processor code and data. Shared memory is used for data traffic. When you define the feature list of an LPT, you do not need to list the features in any particular order.

### **Logical processor configuration**

Nortel Multiservice Switch software does not link to a processor card directly. Rather, it links to a logical entity called an LP. Each LP represents the software that delivers Multiservice Switch services or capabilities. You can associate an LP with one or more processor cards.

When you associate an LP with more than one processor card, you have processor card sparing. In a sparing configuration, one processor card is the main and the other is the spare. Typically, the main processor card is active and provides the services and capabilities of the LP. The spare card is in standby mode, waiting to take over in case the main card fails.

If the main card fails, the Multiservice Switch node performs an automatic switchover. During a switchover, the standby processor card becomes active and the active processor card comes up as standby. You can manually change from the active and standby processor cards using the switchover command.


Multiservice Switch nodes support one-for-one sparing, where one processor card serves as a standby for a single processor card. Multiservice Switch nodes also support one-for-n sparing. For one-for-n sparing for Multiservice Switch 7400 nodes, one processor card acts as a standby for up to four processor cards. For one-for-n sparing for Nortel Multiservice Switch 15000 and Multiservice Switch 20000 nodes, one processor card acts as a standby for up to six processor cards. Both types of sparing require specific hardware configurations. For information on the hardware requirements of sparing, see NN10600-130 *Nortel Multiservice Switch 15000/20000 Hardware Installation, Maintenance, and Upgrade* or NN10600-175 *Nortel Multiservice Switch 7400 Hardware Installation, Maintenance, and Upgrade*.

An LPT defines the software associated with an LP. An LPT is a group of software features that you can assign to many LPs.

The figure [Sample relationship between LPTs, LPs, and processor cards \(page 275\)](#) illustrates a one-for-n sparing configuration of LPTs, LPs, and processor cards.



**Sample relationship between LPTs, LPs, and processor cards**

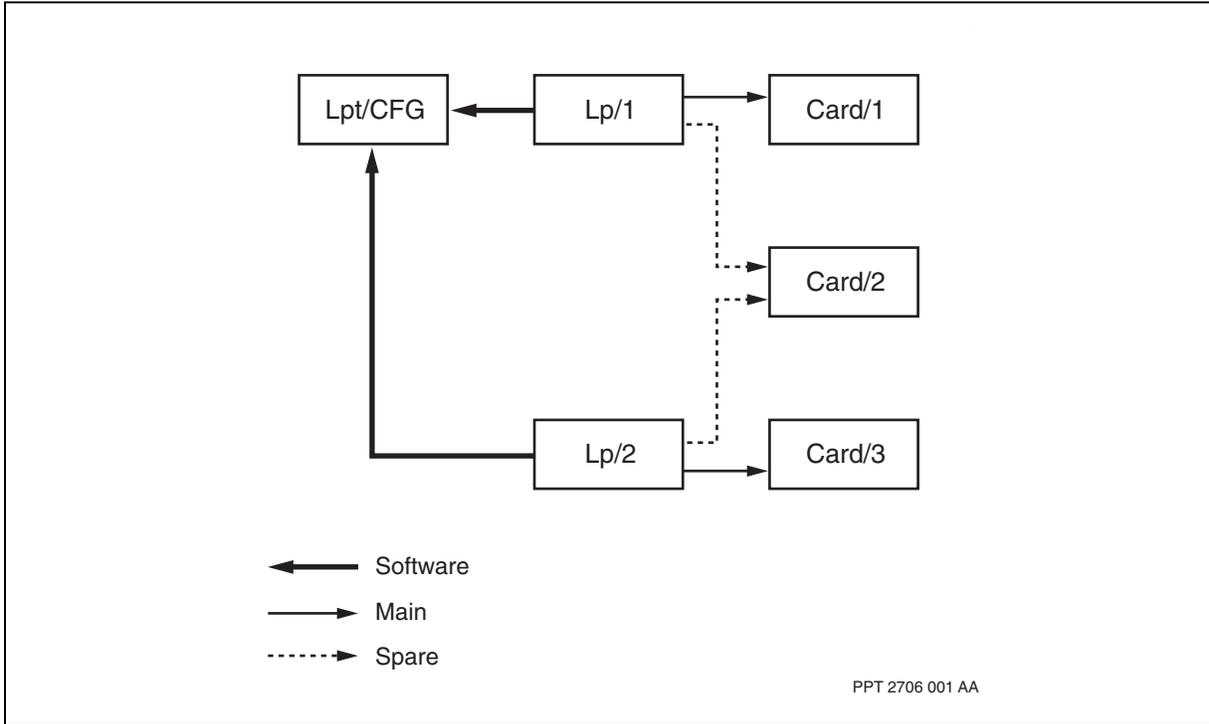

The LPs 1 and 2 both share the same LPT. LP 1 has processor card 1 as its main card and processor card 2 as its spare card. LP 2 has processor card 3 as its main card and processor card 2 as its spare card. If either card 1 or 3 fails, card 2 takes over. For this configuration to work, you must correctly connect the processor cards to a sparing panel and configure the sparing connection. For information on configuring the sparing connection, see [Configuring a new processor card \(page 60\)](#).

**Locking and disabling LPs**

When you lock a running LP, the LP moves into the shutting down state. The LP stays in the shutting down state until some condition causes it to stop running (an operator command or an error). Once the LP stops running, it moves to the locked state.

You can immediately disable (skipping the shutting down state) an LP using the force option of the lock command. When you use the force option, the LP immediately restarts and the LP moves into the locked state. If you are unfamiliar with lock command concepts, see *NN10600-050 Nortel Multiservice Switch 7400/15000/20000 Command Reference*.

When an LP is locked, the LED status display on its main processor card is slow-pulsing red.



## Understanding NCS

Network clock synchronization (NCS) provides the clock rates for connected ports so that they operate in synchronization. NCS prevents data loss or data retransmission for synchronous services.

A node can be made a slave by configuring a choice of physical ports where the stratum-3 can derive its clock. If no references are configured in the *NS* component, the node runs as a master (with the stratum-3 free-running at its centre frequency).

---

**Attention:** If all of the configured references of the *NS* component in the slave node are out of service, the stratum-3 is free-running in hold-over mode.


---

The physical ports can be made to synchronize with a clocking source (using the port attribute *clockingSource*). For example, the *clockingSource* can be set to *module*, *local*, or *line*. The value *module* means that the stratum-3 clock of the CP generates the port's transmit clock. The value *local* means the FP uses its own crystal oscillator as a reference. The value *line* means the clock signal received from the port generates the transmit clock. For more information on clocking, see [Understanding basic clocking \(page 277\)](#).

The figure [Components and attributes used for NCS \(page 277\)](#) shows the configurable software and logical hardware components and attributes for NCS. The term *reference* indicates a reference for the CP. The reference receives the network clock signal from another node and passes it to the CP (to use as a reference).



### Components and attributes used for NCS

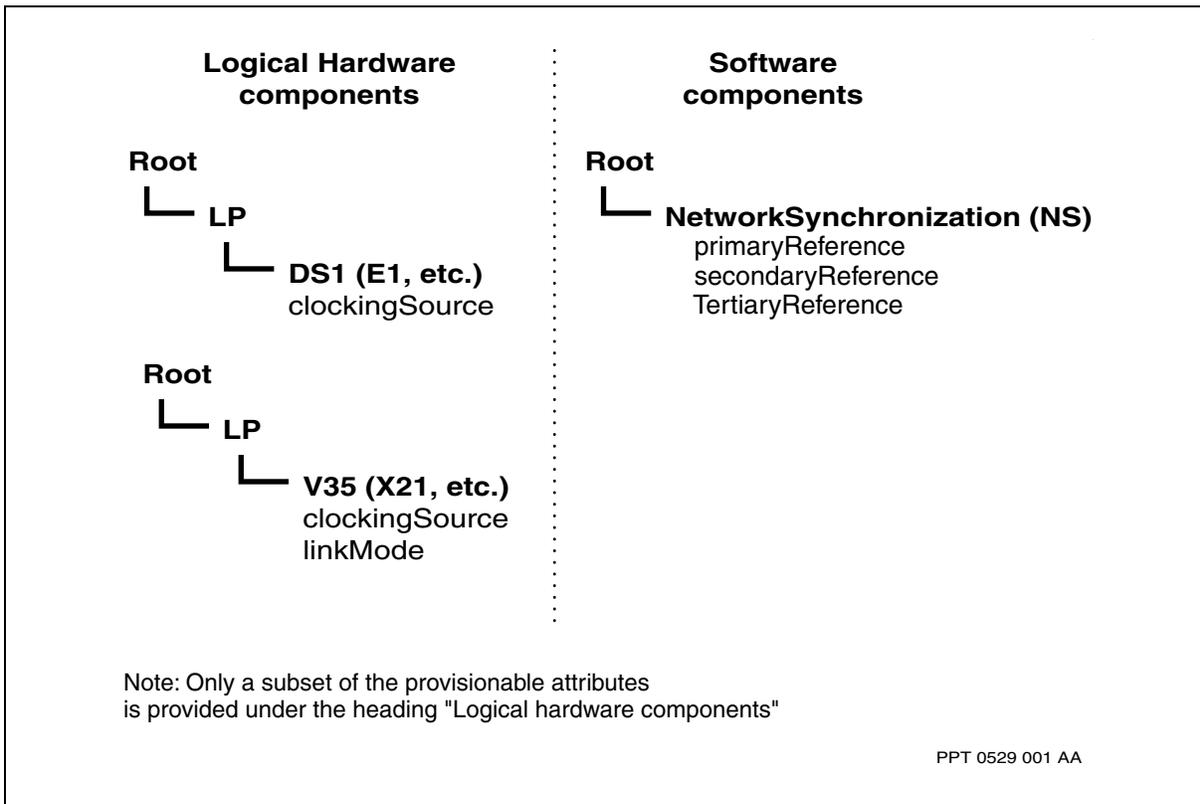

### Understanding basic clocking

The figure [Data flow in a network \(page 278\)](#) shows the flow of data from node A to node B, then to node C. If the transmit clock at node A is faster than the one at node B, node B receives data faster than it can send it. Eventually, the buffer at node B overflows.

Similarly, if the transmit clock at node A is slower than the one at node B, the buffer at node B underruns. This is because the transmission rate of node B is greater than the rate it receives data.

Buffer overflow and underrun result in either data loss or data retransmission. In the case of overflow, data is lost. In the case of underrun, the last transmitted data is usually repeated. Therefore, providing a synchronized network is critical for synchronous services.


---

**Attention:** NCS errors are not the only cause of underruns and overflows. Traffic congestion can cause the same result.

---



## Data flow in a network

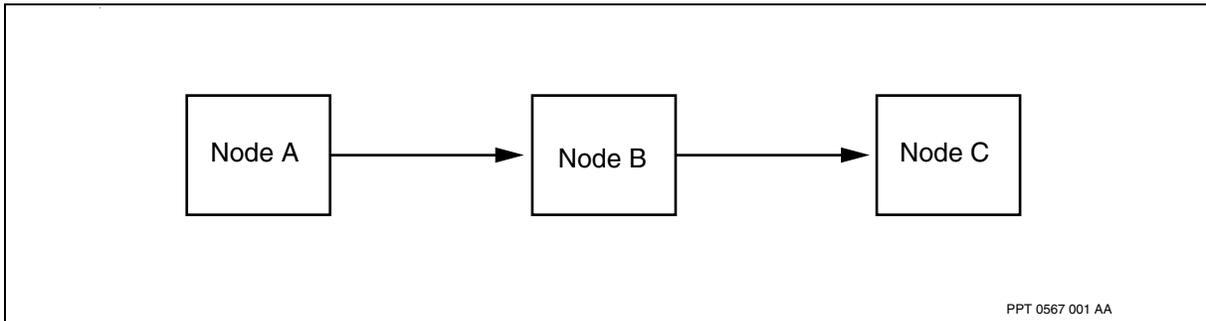

## Understanding synchronization

The figure [Hierarchical clock synchronization network \(page 279\)](#) shows an example of a hierarchical clock synchronization network. In the hierarchical synchronization method, a frequency reference is transmitted from one node to another node. Nodal clocks supply a synchronization reference to specific nodes, each of which can in turn supply a reference to other nodes.

For added reliability, the synchronization network usually consists of primary and secondary (backup) reference facilities. When primary reference fails (for instance, when a port is disabled or a Nortel Multiservice Switch trunk connection fails), a node can change to its secondary reference. A tertiary reference can also be configured on a node.


The synchronization network is divided into levels called *stratum*. Nodes in each stratum are characterized by a standard level of clock accuracy and stability. See the figure [ANSI \(T1.101\) stratum levels \(page 280\)](#) for a partial list of stratum level characteristics. Stratum 1 provides the highest level of clock accuracy and stability and is typically implemented using a cesium (atomic) clock.

When an external stratum 1 or 2 clocking source is used, the CP oscillator will vibrate at that level of accuracy and distribute the clock to the ports of the FPs. When no external clocking source is configured, Multiservice Switch modules conform to the stratum 3 standard which has an accuracy of  $4.6 \times 10^{-6}$ , for a DS1. This translates to 1.544 Mhz +/-7 Hz). In addition, stratum 2 and 3 nodes (which includes Multiservice Switch nodes) must be equipped with a stable internal clock that can bridge reference interruptions (holdover). See the table [ANSI \(T1.101\) stratum levels \(page 280\)](#) for additional information about stratum levels.

Additional information about free-run frequencies and free-run accuracies for FPs, see [Free-run frequency and accuracy of FPs \(page 280\)](#).



**Hierarchical clock synchronization network**

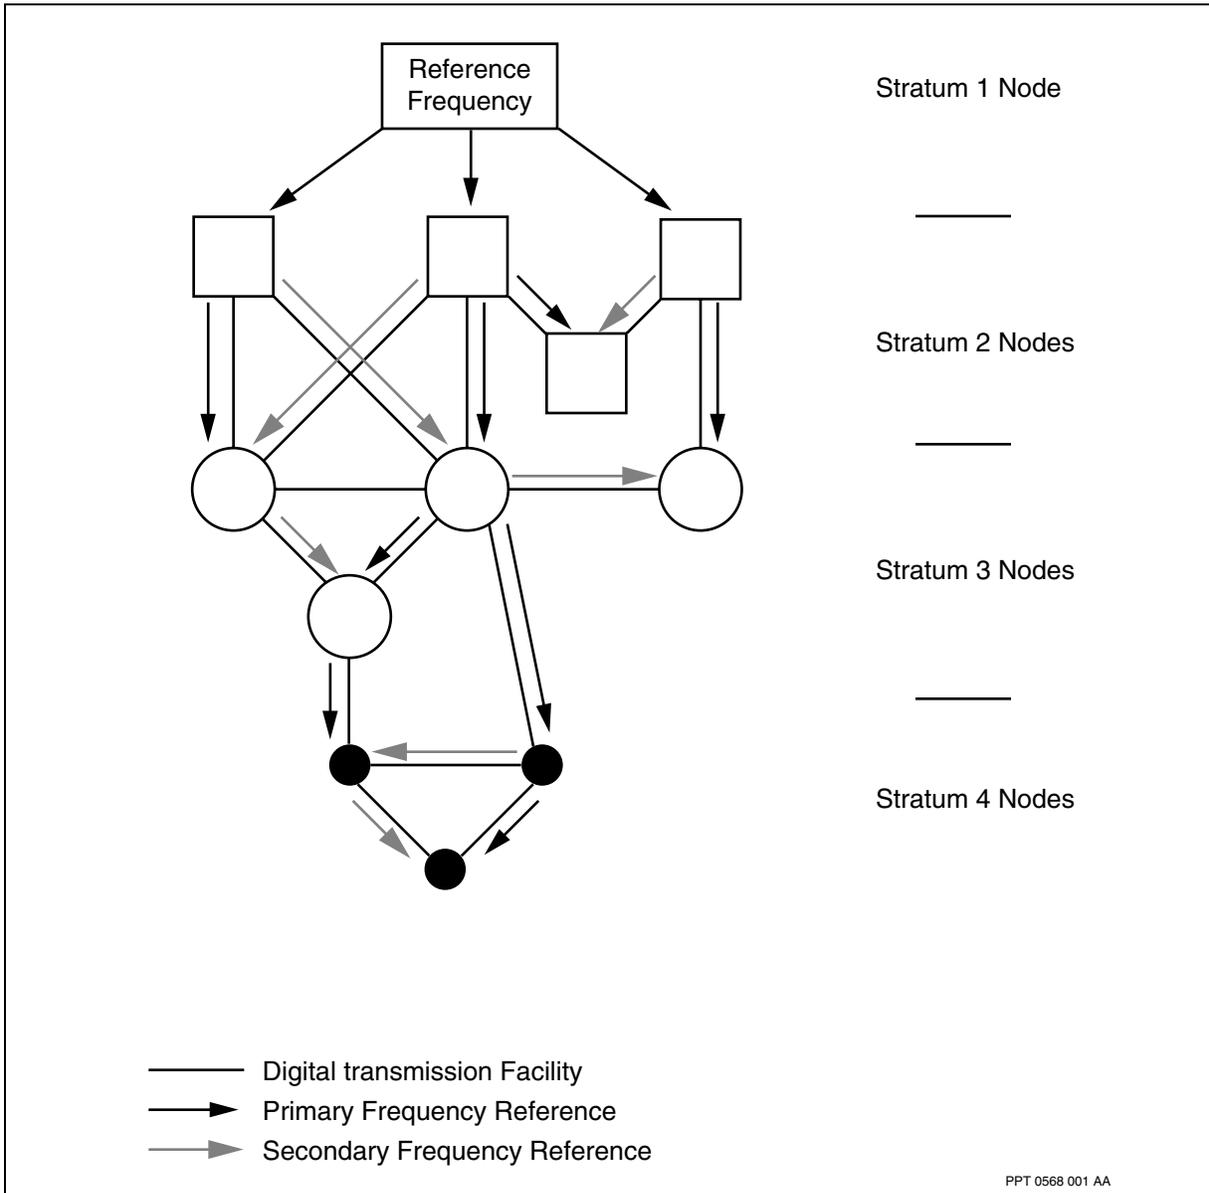



**ANSI (T1.101) stratum levels**

| Specification      | Stratum 1             | Stratum 2                   | Stratum 3                                                                 | Stratum 4            |
|--------------------|-----------------------|-----------------------------|---------------------------------------------------------------------------|----------------------|
| Accuracy           | $1.0 \times 10^{-11}$ | $1.6 \times 10^{-8}$        | $4.6 \times 10^{-6}$                                                      | $3.2 \times 10^{-5}$ |
| Holdover stability | N/A                   | $1 \times 10^{-10}$ per day | must be less than or equal to 255 DS1 slips in first 24 hours of holdover | Not required         |

**Free-run frequency and accuracy of FPs**

| FP or FP type                                       | Free-run frequency | Free-run accuracy |
|-----------------------------------------------------|--------------------|-------------------|
| 16-port OC-3/STM-1                                  | 155.52 MHz         | +/- 50 ppm        |
| 4-port MR POS and ATM (with OC-12/STM-4 line rate)  | 622 MHz            | +/- 20 ppm        |
| 4-port MR POS and ATM (with OC-48/STM-16 line rate) | 2.488 GHz          | +/- 20 ppm        |
| 4-port gigabit Ethernet                             | 1250 MHz           | +/- 100 ppm       |
| DS1 MSA with OC-3 ports                             | 155.52 MHz         | +/-20 ppm         |
| DS3                                                 | 44.736 MHz         | +/-20 ppm         |
| E1 MSA with STM-1 ports                             | 155.52 MHz         | +/- 20 ppm        |
| E3                                                  | 34.368 MHz         | +/- 20 ppm        |
| OC-3/STM-1                                          | 155.52 MHz         | +/-20 ppm         |
| OC-12/STM-4                                         | 622 MHz            | +/- 20 ppm        |
| OC-48/STM-16                                        | 2.488 GHz          | +/-4.3 ppm        |

**Understanding NCS for Multiservice Switch**


NCS needs to be running on Nortel Multiservice Switch nodes to ensure the nodes are operating at a synchronized clock rate. NCS synchronizes the clocking of nodes to a single master clock signal. NCS provides an identical clock to interfaces across the network such that the clock rate of data entering and leaving is the same. For this reason, a Multiservice Switch module can join a stratum synchronized network.




Synchronization minimizes frame slips and data loss for bit-transparent data applications. The figures [Network synchronization component and provisionable attribute \(page 281\)](#) and [Network synchronization component and operational attributes \(page 281\)](#) show the provisionable and operational attributes for the network synchronization component.

Multiservice Switch devices provide the necessary hardware and software to allow a synchronized network to support synchronous services.

#### Network synchronization component and provisionable attribute

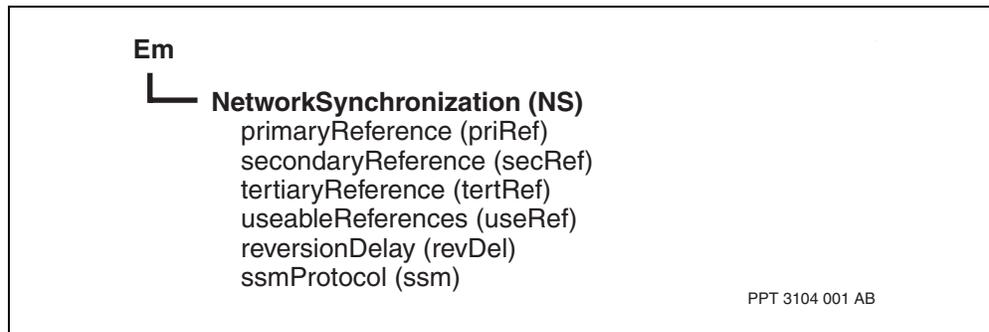

#### Network synchronization component and operational attributes

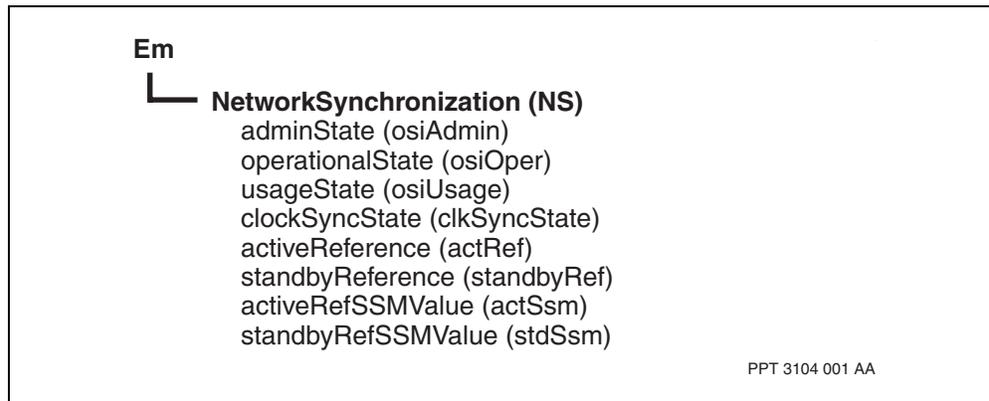

For more information on NCS, see the following sections:

- [Clock distribution \(page 282\)](#)
- [Timing reference signals \(page 283\)](#)
- [Network clock tree \(page 284\)](#)
- [Redundancy in case of failure \(page 286\)](#)
- [NCS requirements and limitations \(page 286\)](#)
- [NCS operating states \(page 287\)](#)
- [Building-integrated timing supply \(page 288\)](#)



- [SSM network clock synchronization \(page 289\)](#)
- [Clocking for V.11 and V.35 FPs \(page 290\)](#)

### **Clock distribution**

The figure [Multiservice Switch module 8 kHz clock distribution \(page 283\)](#) represents a simplified view of the distribution of clocks on a Nortel Multiservice Switch node. Each FP provides a means of extracting an 8 kHz reference clock from its connected external link. The control processors (CP) can choose an extracted clock from a port to be used as a reference for this node. The chosen reference clock signal is relayed across the backplane to the CP.


Multiservice Switch nodes provide a provisionable *NetworkSynchronization (NS)* component for selecting the port or ports to be used as reference sources. Up to 3 ports can be configured as reference sources (primaryReference, secondaryReference, and tertiaryReference).

If the clocking source for networking synchronization comes from line timing, set the clocking source for all ports, including the port used as the reference, to module. As the figure [Multiservice Switch module 8 kHz clock distribution \(page 283\)](#) shows, the *clockingSource* attribute selects an outgoing clock source unrelated to the incoming clock.

For more information on timing reference signals, see [Timing reference signals \(page 283\)](#).



### Multiservice Switch module 8 kHz clock distribution

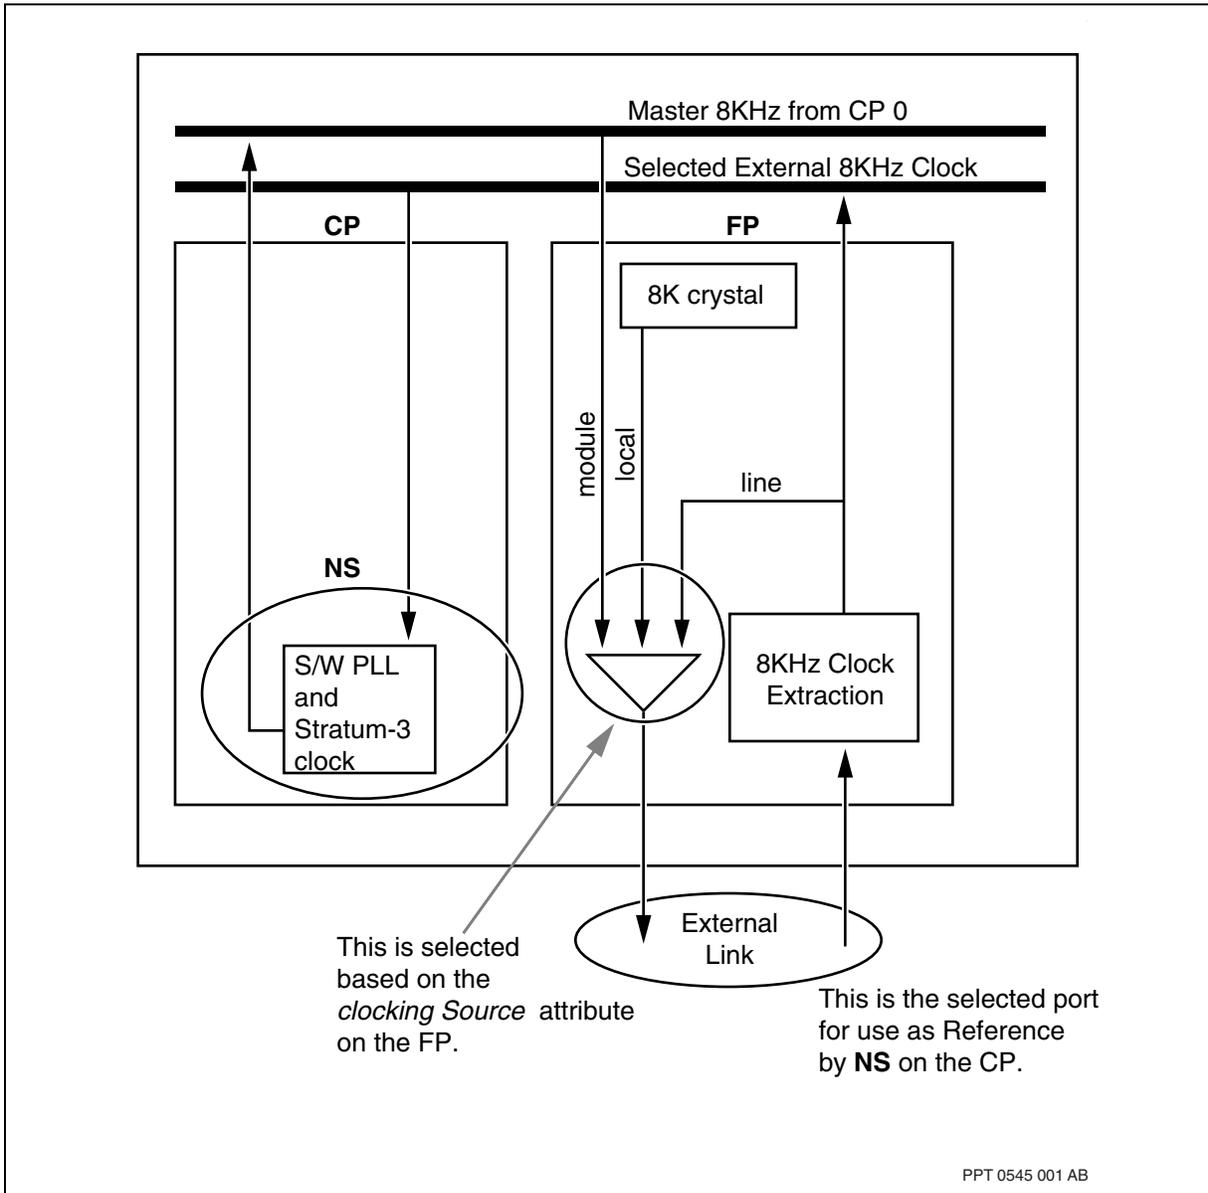

### Timing reference signals

Nortel Multiservice Switch nodes can obtain a clock signal from the following sources:

- line timing, where the reference signal is extracted from an incoming traffic-carrying signal. The clock signal can come from a node on the Multiservice Switch network that you designate as *master*. Alternatively, you can use a clocking signal from another source (for example, a source outside the Multiservice Switch network). Any external source used must be at least as accurate as a stratum-3 clock.



- external timing, where the reference signal is provided by a non-traffic carrying link that uses an E1 or DS1 signal. The source of the link is a highly accurate and very reliable building-integrated timing supply/synchronization supply unit (BITS/SSU). The BITS/SSU derives its timing from a stratum-1 source, for example an atomic clock or global positioning system (GPS) receiver.
- internal timing, where the internal oscillator of the CP provides the signal

---

**Attention:** Multiservice Switch nodes support a combination of timing modes (internal and external).

---

### Network clock tree

You configure NCS in a Nortel Multiservice Switch network by creating a network clock synchronization hierarchy, also known as a network clock tree. The object of configuring your network with NCS is to force a number of nodes to use a clocking signal that conforms to one master clock. When you create a clock synchronization hierarchy, one clock is designated as master. Adjoining nodes in the network synchronize with the clock signal from that master node. Nodes farther from the master synchronize to the signal of the nearest configured node.

For networks not carrying time-sensitive traffic, it is possible to have one core Multiservice Switch node running in free-run with all other network nodes synchronized with it. In this situation, the Stratum-3 clock is the synchronization source, but the same clock is used everywhere in the networks. In this configuration, the core nodes acting as the master clock source.

To create a network clock tree, do the following:

- configure the clocking signal from one node port as the master signal to which all other node ports conform. Alternatively, configure the node to receive a clocking signal from an external source. For example, a stratum-1, stratum-2, or stratum-3 signal outside the Multiservice Switch network can be the external source.
- configure the nodes neighboring the master to synchronize with the clocking signal from the master node
- configure each node in the network to synchronize with the NCS clocking signal of the nearest NCS-configured node.




The figure [Network using NCS \(page 285\)](#) shows a network using NCS. The master signal is taken from a BaseOne port. Each successive node synchronizes with the signal of the last, from BaseSix node in turn back to the master. For example, BaseSix synchronizes with BaseFive, which in turn synchronizes with BaseThree, which synchronizes with the master, BaseOne.

BaseTwo is configured to obtain an alternate clock signal from BaseThree. If BaseOne fails, BaseThree reverts to free-running status and generates the master clock signal for the network.

Similarly, if both BaseOne and BaseThree fail, BaseTwo assumes free-running status and supplies the master signal for the network.

### Network using NCS

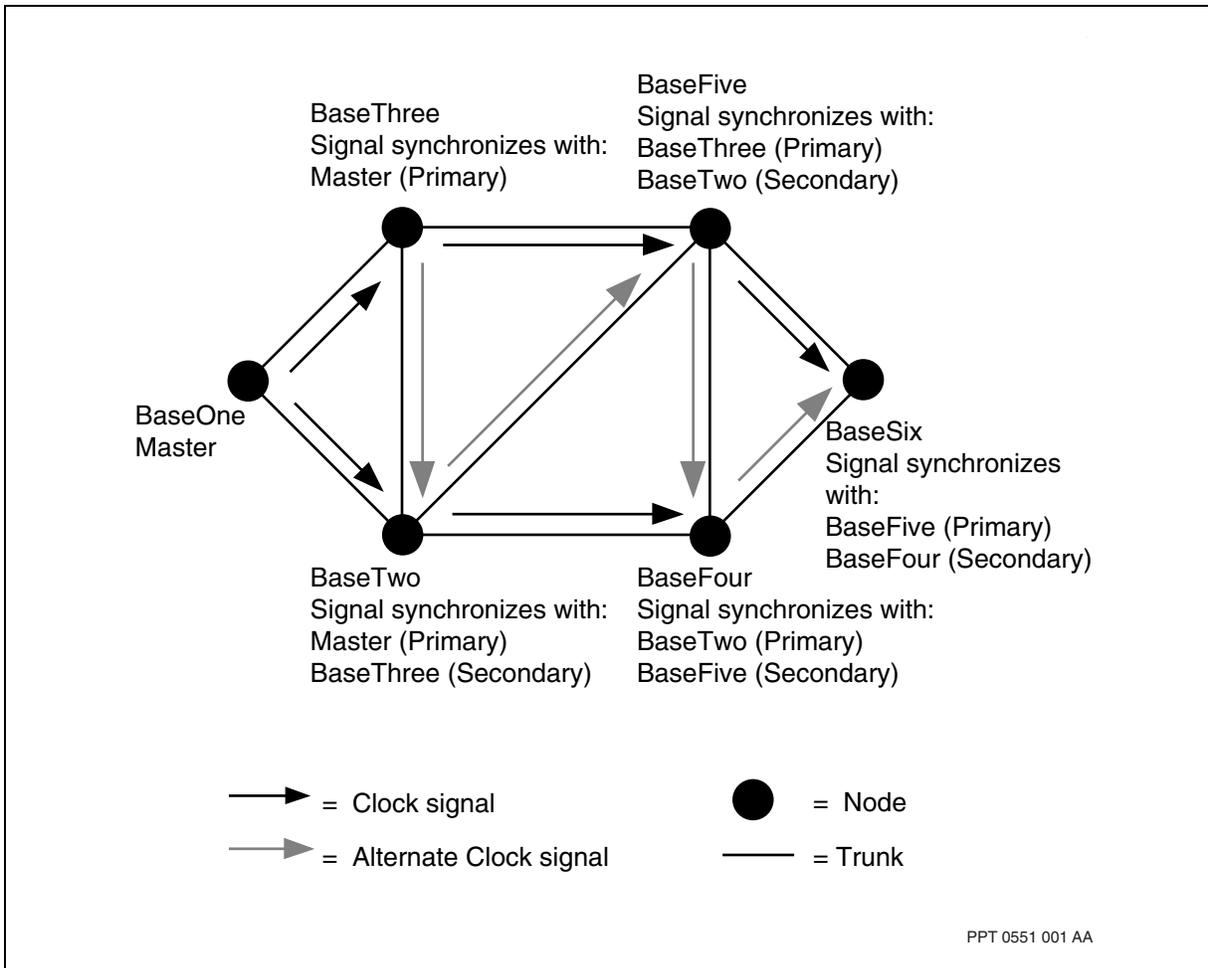



### Redundancy in case of failure

You can specify up to three sources for a clocking signal. These sources are referred to as primary, secondary, and tertiary, and are used as first, second, and third choices, respectively, for the clocking signal.

The clocking signal source is altered under any of the following conditions:

- the *activeReference* port (supplying the reference clock to the module) determines that its connection to the network or external source is bad. For example, there can be a loss of signal or loss of frame.
- the *activeReference* port goes to the locked state as a result of operator commands
- a DS1 or E1 *activeReference* port on the FP is configured to have a local clock source
- the configured *primaryReference* becomes enabled or a new *primaryReference* is configured
- the logical processor (LP) that the *activeReference* port is on becomes disabled

When a clocking signal becomes degraded, the source will continue to be used if the *useableReferences* attribute is set to enabled, the default value. If the *useableReferences* attribute is set to notDegraded, either a failure or signal degradation will result in an automatic clock source switchover.

When a clocking source is cleared from a disabled or degraded state the *NetworkSynchronization* component will revert to that source based on the value of the *reversionDelay* attribute. Before reverting, the *NetworkSynchronization* component will either wait a configured amount of time or a revert command must be issued if the attribute is set to manual. The revert command can be issued with the -force option.

---

**Attention:** The reversion enhancement functionality based on *useableReferences* and *reversionDelay* attributes is not supported on every functional processor that supports network clock synchronization. See NN10600-551 *Nortel Multiservice Switch 7400/15000/20000 FP Configuration Reference* to determine which card is supported.

---

### NCS requirements and limitations

When engineering NCS, consider the following items:

- a node must synchronize to a reference of equal or better quality (a stratum-3 or better clock source)
- a node must synchronize to the highest quality clock supplied by a directly-connected node



- choose references so that a synchronization loop is never formed (nodes synchronizing to each other with no reference to the master signal)
- choose references with the greatest availability. Factors that contribute to availability include:
  - historical record (stability)
  - present activity
  - facility length
  - physical medium (twisted pair, coaxial cable, radio, or satellite link)
  - number of repeaters
- choose a minimum of active and standby references within the same physical medium. (For example on the V.35 FP of Nortel Multiservice Switch 7400 nodes, four ports are cabled into one physical high-density cable. Select no more than one reference in this cable.)
- individual ports of an optical interface card configured for APS can each serve independently as a reference source. However, pairs of ports cannot be used as a single reference source. Pairs of ports for APS are defined by the *Aps* component instance for Multiservice Switch 7400 series nodes or the *Laps* component instance for Multiservice Switch 15000 and Multiservice Switch 20000 nodes.
- DS1, E1, V.35, X.21, E3, and DS3 are valid port components
- when configuring NCS through a V.35 FP on a Multiservice Switch 7400 node, the data circuit terminating equipment (DCE) end must be the reference source that provides the clocking signal to the remote data terminal equipment (DTE) end

---

**Attention:** APS does not support the local source clocking.

---

### NCS operating states

The *NetworkSynchronization* (NS) component has the following three operating states:

- free run: when the NS component is in the free run state, either no reference was configured or none of the configured references are valid. If no reference was configured for NCS, the clock runs at its center frequency (as a master clock). If however, one or more references were configured, but none of the configured references are valid, the clock free runs in hold-over mode. Hold-over mode means that the stratum-3 clock on the CP continues to operate at its last adjusted frequency and does not update its frequency.



- synchronizing: When the NS component is in the synchronizing state, the stratum-3 clock on the CP is trying to synchronize its frequency to a valid configured reference. This state lasts approximately 1 to 2 minutes, provided the reference is stable and of good quality. If the configured reference is not stable, the NS component can remain in the synchronizing state for more than 2 minutes. If the NS component remains in the synchronizing state for more than fifteen minutes, the node generates an alarm. The alarm indicates that the quality of the configured reference is questionable. When the configured reference is not stable or of good quality, the stratum-3 clock on the CP operates in hold-over mode.

The NS component can also be in the synchronizing state when a port becomes disabled or a Nortel Multiservice Switch trunk goes down. Under these circumstances, the NS component automatically initiates a change from the primary reference to the secondary or tertiary reference.

- synchronized: when the NS component is in the synchronized state, the clock is phase-locked to the configured reference. This is the normal mode of operation. As long as the NS component remains in this state, a net phase deviation of no more than 50 microseconds (with respect to the reference) is ensured. If a reference is lost when the NS component is in the synchronized state and no other reference was configured, the stratum-3 clock on the CP runs in hold-over mode. The clock runs at the last adjusted frequency made before the failure.

### **Building-integrated timing supply**

An external synchronization interface requires a timing reference signal that ultimately has its origin outside the Nortel Multiservice Switch network. This means that at least one node is connected to a timing source, such as BITS.

The BITS concept stipulates that all digital equipment in a physical structure must receive timing from the same master clock. This master clock produces a stratum-3 or better reference signal.


The implementation of BITS has the following advantages:

- the designation of a master timing supply for each structure simplifies and enhances the reliability of the timing distribution. The BITS concept minimizes the number of synchronization links entering a building, since each piece of equipment no longer has its own external timing source.
- since BITS provides a large number of signals for distribution, a single high-quality reference timing source can be shared among many services within an office
- the BITS is location-dependent, not service-dependent. This makes record keeping for provisioning and maintenance purposes easy when new digital services are introduced.



The figure [BITS components and attributes \(page 289\)](#) illustrates the components and attributes of external timing ports. Even though the ports are physically located on the alarm/BITS card (for Multiservice Switch 15000 and Multiservice Switch 20000 nodes) and on the CP (optional for Multiservice Switch 7400 series nodes), the ports are logically configured as a subcomponent of the LP.

### BITS components and attributes

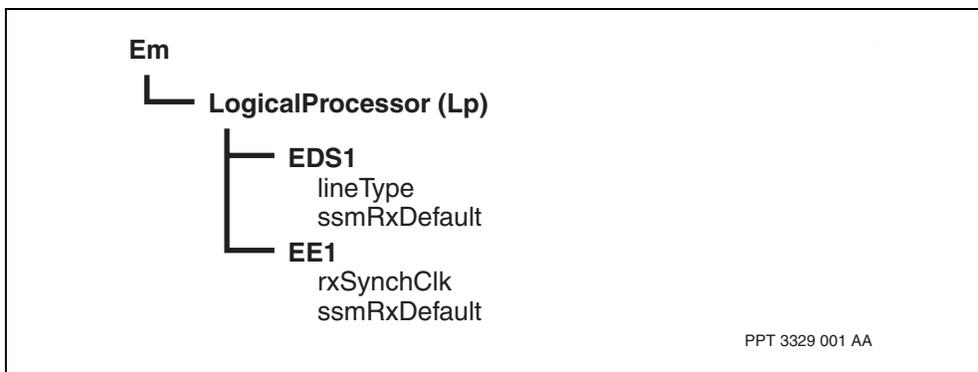

### SSM network clock synchronization

Synchronization status messages (SSM), defined as S1 Bytes in the SONET, SDH, DS1, and E1 overhead with the NCS system, provide an automatic method of choosing the best clock source in a network. The provisionable attribute *ssmProtocol* under the *NS* component determines if SSM functionality is enabled. When SSM is enabled, the NCS system chooses the best clock signal based on the quality level of the SSM, making it available to all ports on all nodes configured with module timing. The use of SSM helps prevent timing loops and improves reliability of timing distribution.

---

**Attention:** SSM are not transmitted on the BITS interface.

---

Since the SONET and SDH S1 byte definitions have different values for the equivalent clock quality level, a mapping table assists in determining the best clocking source available. The *NS* component makes switching decisions based on the Quality Level (QL), as seen in the table [SONET/SDH quality level \(QL\) mapping table \(page 290\)](#). In cases where the quality level on a port is not provided, a value of “Quality Unknown” is used.



**SONET/SDH quality level (QL) mapping table**

| Rx S1 Mapping to QL |                            |    |                | QL                         | QL Mapping to Tx S1 |                    |                            |  |                |                            |
|---------------------|----------------------------|----|----------------|----------------------------|---------------------|--------------------|----------------------------|--|----------------|----------------------------|
| SONET/ DS1 acronym  | S1 Byte (binary / decimal) |    | SDH/E1 acronym | S1 Byte (binary / decimal) | QL                  | SONET/ DS1 acronym | S1 Byte (binary / decimal) |  | SDH/E1 acronym | S1 Byte (binary / decimal) |
|                     |                            |    | STU            | 0000 0                     | 0                   | STU                | 0000 0                     |  | STU            | 0000 0                     |
| PRS or ST1          | 0001                       | 1  | PRC            | 0010 2                     | 1                   | PRS or ST1         | 0001 1                     |  | PRC            | 0010 2                     |
| STU                 | 0000                       | 0  |                |                            | 2                   | STU                | 0000 0                     |  | STU            | 0000 0                     |
| ST2                 | 0111                       | 7  | SSUT           | 0100 4                     | 3                   | ST2                | 0111 7                     |  | SSUT           | 0100 4                     |
| TNC                 | 0100                       | 4  |                |                            | 4                   | TNC                | 0100 4                     |  | SSUL           | 1000 8                     |
| ST3E                | 1101                       | 13 |                |                            | 5                   | ST3E               | 1101 13                    |  | SSUL           | 1000 8                     |
| ST3                 | 1010                       | 10 | SSUL           | 1000 8                     | 6                   | ST3                | 1010 10                    |  | SSUL           | 1000 8                     |
| SMC                 | 1100                       | 12 | SEC            | 1011 11                    | 7                   | SMC                | 1100 12                    |  | SEC            | 1011 11                    |
| ST4                 | N/A                        |    |                |                            | 8                   | ST4/ SMC           | 1100 12                    |  | SEC            | 1011 11                    |
| PNO or RES          | 1110                       | 14 |                | 1110 14                    | 15                  | DNU                | 1111 15                    |  | DUS            | 1111 15                    |
| DUS                 | 1111                       | 15 | DNU            | 1111 15                    | 15                  | DNU                | 1111 15                    |  | DUS            | 1111 15                    |

A QL of 1 is the highest quality level and a QL of 0 or 15 is the lowest level.

Refer to [Configuring SSM NCS \(page 40\)](#) for details on configuring SSM functionality.


**Clocking for V.11 and V.35 FPs**

You must be careful when setting the *clockingSource* and *linkmode* attributes for nodes that contain V11/V35 FPs. The figure [Example of a V11/V35 two-node network \(page 291\)](#) shows a V11/V35 two-node network that contains Node A and Node B. If you want to set up Node A as the master clock source with the clock signal of Node B synchronized to the clock signal of Node A, the following points must be addressed.

- to designate Node A as the master end, set the *linkmode* attribute for Node A to *dce*
- to designate Node B as the slave end, set the *linkmode* attribute for Node B to *dte*



**Example of a V11/V35 two-node network**

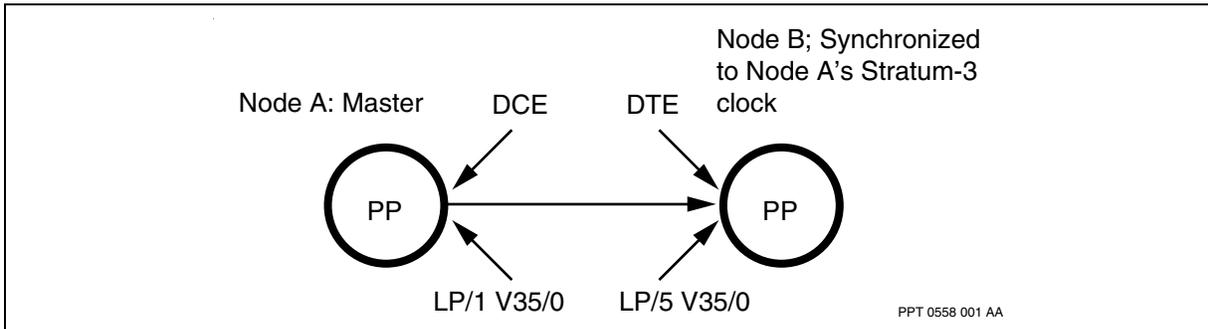

Because the *clockingSource* attribute is used to select an outgoing clock source and is not related to the incoming clock, set the *clockingSource* attribute for Node A to *module*. Because Node B is not used for external clocking, its *clockingSource* attribute does not have to be set.

**Attention:** When setting the *linkmode* attribute, you must be aware of the physical termination of the individual V11/V35 FP on the node. If there is a mismatch between the type of hardware connection and the *linkmode* setting, the hardware connection overrides the *linkmode* setting. As a result, the configured setting for the *linkmode* attribute is not recognized. To avoid this problem, ensure that the configured setting for the *linkmode* attribute matches the physical termination of the FP.

The output ports of an individual V11/V35 FP are grouped into two separate connections. Ports 0 through 3 represent one connection and ports 4 through 7 represent another connection. Each of these connections can be set to either *dte* or *dce* depending on its physical connection. For connections that are physically connected as *dce* and have ports with *linkmode* set as *dce*, you must set the *clockingsource* attribute to the same value for all ports of that connection. This can be *module*, *local*, or *line*. For example, if the first connection (ports 0 through 3) is connected as *dce* and the *linkmode* attributes for these ports are set to *dce*, the value set for the *clockingsource* attribute for ports 0 through 3 must all be the same. This is not applicable if the connection is set to *dte*.

Set the *linkMode* attribute to *dte*. The link mode is set when you configure your hardware. The hardware setup is shown by the operational attribute, *actualLinkMode*. Setting the *linkmode* attribute does not override the hardware configuration.

The incoming clock must be a multiple of 56 kbit/s or 64 kbit/s ranging from 56 kbit/s to 2048 kbit/s.



The *linkMode* attribute must be set to *dce*. The actual link mode is set when you configure your hardware. The hardware setup is shown by the *actualLinkMode* attribute (operational attribute).

---

**Attention:** If one port is selected with a *clockingSource* of module, all other *dce* ports on that LP must select module for their *clockingSource*.

---

### Example of external clock source configuration

In this example, the objective is to set up the stratum-3 clock on Node A to synchronize with an external clock source. The external clock source must be stratum-3 or higher. Node A becomes the clock source for the rest of the Nortel Multiservice Switch network. Node B synchronizes to the clock on Node A, as shown in figure [Example of a two-node network \(page 294\)](#).

#### Configure Node A:

- 1 Enter prov mode on Node A:

```
start Prov
```

- 2 Add the *NetworkSync* component:

```
add NetworkSync
```

The *NetworkSync* component does not need an instance value.

- 3 Display the attributes of the *NetworkSync* component:

```
d ns
```

The system displays:

```
NS
primaryReference =
secondaryReference =
tertiaryReference =
```

---

**Attention:** If there is not an external reference for the node to slave from, do not configure any references. This forces the node's clocking to free run.

---

- 4 Select the source for the reference clock for the module. Typically the *secondaryReference* and the *tertiaryReference* attributes are also set at this point:

```
set NetworkSync primaryReference lp/2 ds1/0
```

- 5 Set the transmit clock port lp/2 ds1/0 (logical processor instance 2, ds1 port instance 0) to synchronize with the Node A stratum-3 clock. To do this, use the module value for the *clockingSource* attribute:



```
set lp/2 ds1/0 clockingSource module
```

---

**Attention:** This *clockingSource* attribute can be set to *line*, but it is good practice to always set it to *module*.

---

The clocking source for this module and the rest of the Multiservice Switch network slaving from this module are now synchronized to the external equipment.

- 6 Set port lp/1 ds1/0 (this is the Multiservice Switch trunk to Node B) to synchronize with the Node A stratum-3 clock:

```
set lp/1 ds1/0 clockingSource module
```

---

**Attention:** The *clockingSource* attribute of this port must be set to *module*. If it is set to *line* or *local*, Node B clocking is isolated from Node A.

---

The clocking used by this port is now synchronized with the Node A stratum-3 clock. See the figure [Example: results of Node A commands \(page 294\)](#).

```
check Prov
activate Prov
confirm Prov
commit Prov
```

## Configure Node B:

- 1 Enter the prov mode on Node B:

```
start Prov
```

- 2 Add the NS component. It does not need an instance value:

```
add NetworkSync
```

At this point you can use the *display* command to display the component.

- 3 Set the NS component to reference lp/5 ds1/0 (logical processor instance 5, ds1 port instance 0):

```
set NetworkSync primaryReference lp/5 ds1/0
```

If this is a larger network you set secondary and perhaps tertiary references at this point. These back up the primary reference in case of network problems.

- 4 Though the *clockingSource* attribute does not have to be changed from its default, it is good practice to always set it to *module*:

```
set lp/5 ds1/0 clockingSource module
```



See the figure [Example: results of Node B command](#) (page 294).

- 5 Verify the configuration changes, activate the edit view, confirm that the activation was successful, and commit the provisioning changes:


```

check Prov
activate Prov
confirm Prov
commit Prov


```

### Procedure job aid


#### Example of a two-node network

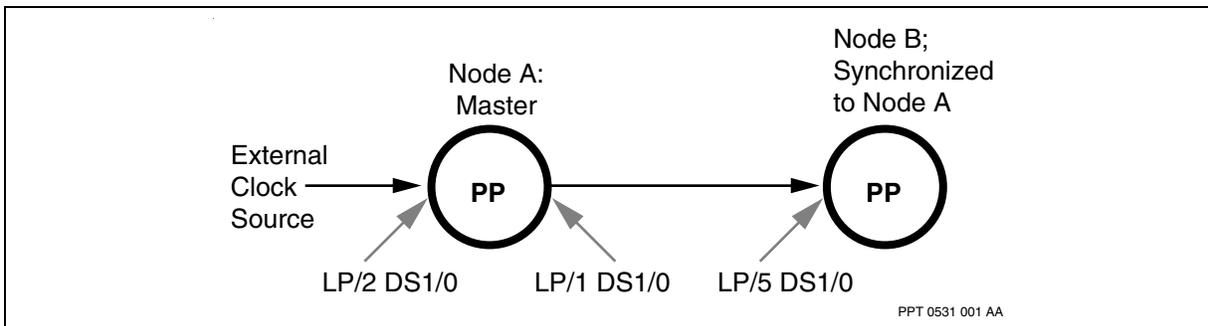

#### Example: results of Node A commands

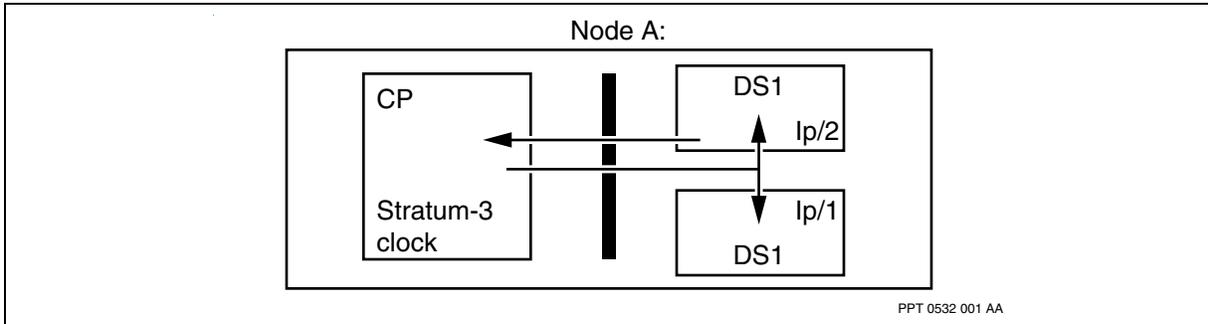

#### Example: results of Node B command

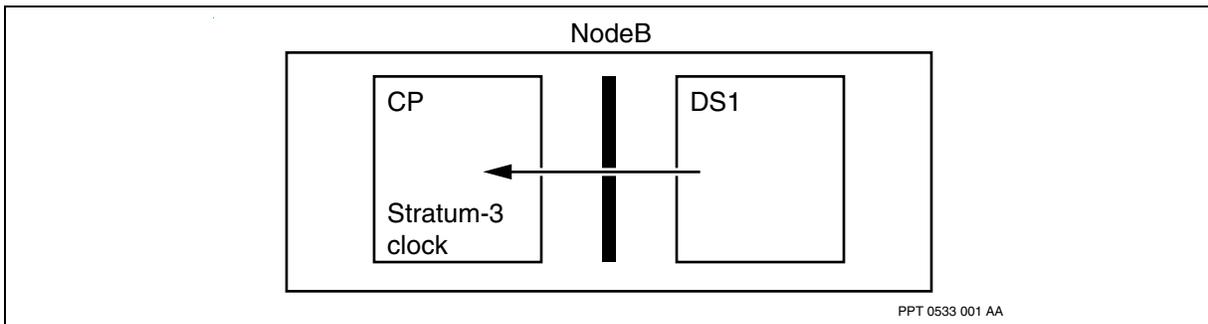




## Understanding NCS for SETS

These are the characteristics of the SETS port:

- SETS ports are configurable as E1 or 2.048MHz analog
- SETS ports can be connected to a termination panel or directly without the termination panel
- SETS ports can be configured to transmit SSM signalling.
- Each CP (active and spare) has its own SETS ports - only one is active at a given time
- SETS ports can be activated/deactivated through OAM command
- Operational status of the SETS ports can be monitored from OAM interface
- Alarm is generated when the SETS port fails
- SETS ports are protected from voltage and current surges on the CP faceplate
- SETS ports can be configured to have multiple sources, namely a primary, secondary, and tertiary source
- Any of the primary, secondary, or tertiary sources for the SETS output can be configured to be the unprocessed BITS-A, BITS-B, NS active reference (unprocessed) or NS PLL output (processed)
- The SETS function will squelch the SETS output if no valid source is available (meaning sending DNU for E1 and no output for analog mode)

### Components and attributes used for NCS for SETS

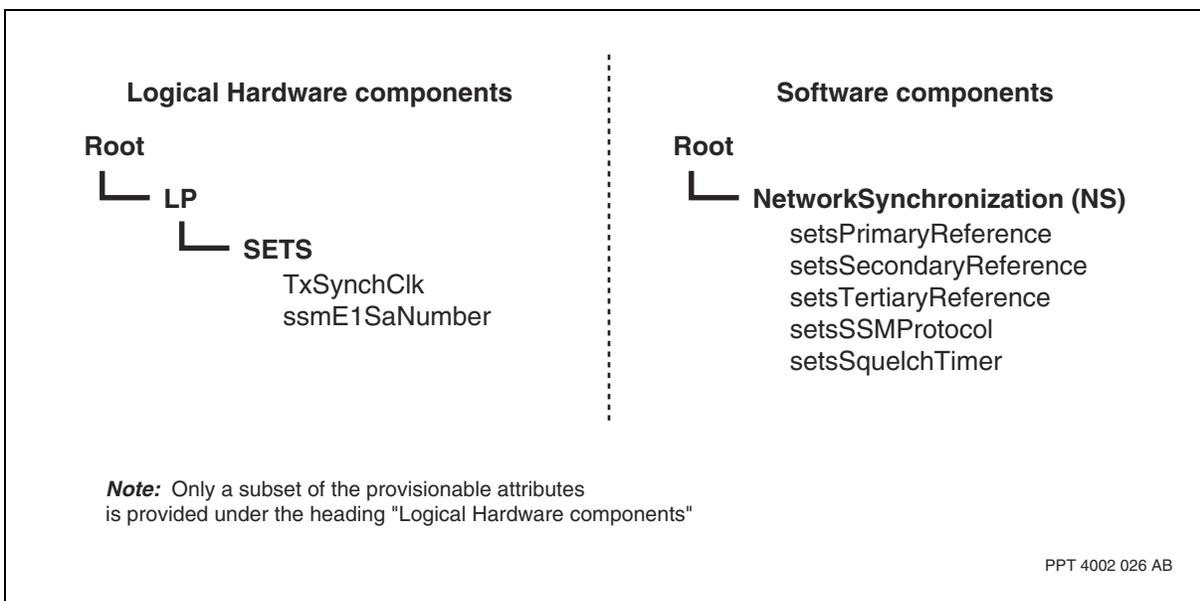



## Understanding network time and date configuration

The *Time* and *Server* components provide access to management devices (MD) acting as network time servers. Nortel Multiservice Switch XNTP is the software feature that Multiservice Switch nodes use to control network time synchronization. The XNTP protocol relays time server data between nodes and management device (MD) time servers using the user datagram protocol (UDP) over IP. These MDs can reside in the LAN or WAN environments, or both.

There are three types of time to consider when configuring the time on a Multiservice Switch node:

- reference time
- network time
- module time

The reference time is the date and time that is the official reference around the world. The universally accepted reference time is Coordinated Universal Time (UTC) which, in general, is equivalent to Greenwich Mean Time (GMT).

The network time is the date and time that is common across the whole network. This is the date and time to which all nodes in the network synchronize internally. Nortel Networks recommends that you use UTC for the network time. The network time is controlled by one or more time servers.

The module time is the time on a particular Multiservice Switch node. In most cases, you synchronize the module time on a node to the network time on a time server. You then adjust for time zone differences using a time zone offset. The system uses the module time for time stamps in alarms, accounting records, and other time-stamped data.



### CAUTION

#### **Risk of confusion in the interpretation of alarm and accounting record time stamps**

Nortel Networks recommends that your network be synchronized to a reliable time server running reference time. Failure to do so can result in difficulties when correlating time between multiple Multiservice Switch nodes.

The following sections contain conceptual information about managing date and time of day in a Multiservice Switch network. As well, the following sections contain procedures for configuring date and time on a Multiservice Switch node. There are three main approaches to configuring time in the network:

- [Operating the whole network using reference time \(page 297\)](#)



- [Operating the whole network in a single time zone \(page 297\)](#)
- [Operating each node in its own time zone \(page 297\)](#)

### **Operating the whole network using reference time**

This approach is recommended by Nortel Networks. It guarantees there is no confusion with the date and time presented in alarms, accounting records, and other time-stamped data. All such data generated by the network has the same, consistent time stamp based on UTC.

With this approach, a time offset of zero is configured on each node in the Nortel Multiservice Switch network. As well, the whole network is synchronized to a common time reference. When the whole network is on reference time, the reference time is used as network time as well as module time.

### **Operating the whole network in a single time zone**

This approach can be used by networks where all nodes are within the same time zone. This approach can also be used by networks that are operated as if all nodes are in the same time zone. All alarm, accounting records, and other time-stamped data has the same, consistent time stamp based on a single time zone.

With this approach, a non-zero time offset representing a specific time zone is selected to be used for the whole network. The selected time offset is configured on each node in the Nortel Multiservice Switch network.

As well, the whole network is synchronized to a common time reference. When the whole network is offset to a single time zone, the offset time is used as network time as well as module time.

Although the reference time (UTC) is used to synchronize all nodes in the network, each node displays time using the selected, common time offset. In this manner, the date and time reported by all nodes in the network is the same.

### **Operating each node in its own time zone**

This approach can be used by networks that require that each node in the network display the time based on the time zone where the node resides. All alarm, accounting record, and other time-stamped data has a time stamp that corresponds to the time on the node it is coming from.

With this approach, a different time offset is configured on each node in the Nortel Multiservice Switch network. However, the whole network is still synchronized to a common time reference.



Although the reference time (UTC) is used to synchronize all nodes in the network, each node displays time using its own time offset, based on the time zone where the node resides. In this manner, the date and time reported by all nodes in the network can be different.



**CAUTION**

**Risk of confusion in the interpretation of alarm and accounting record time stamps**

Nortel Networks recommends that nodes not be operated each with its own time offset as there is a risk of confusion in the time stamp of alarms and accounting records.

For example, two nodes in different time zones generate a different time stamp for accounting records produced on both nodes at the exact same time.

## Understanding Multiservice Switch control processors and function processors

The following section explain the basic concepts of configuring control and function processors:

- [Multiservice Switch processor overview \(page 298\)](#)
- [Processor card instances \(page 300\)](#)
- [Considerations for locking processor cards \(page 301\)](#)
- [Considerations for reinitializing a processor card \(page 303\)](#)
- [Considerations for replacing function processors \(page 303\)](#)
- [Understanding processor card configuration \(page 300\)](#)
- [Daughter cards on Multiservice Switch 7400 processor cards \(page 307\)](#)
- [Processor card sparing \(page 307\)](#)
- [Hot standby for CP switchover \(page 308\)](#)

### Multiservice Switch processor overview

Nortel Multiservice Switch nodes have two types of processor cards: control processors (CP) and function processors (FP). CPs manage the FPs in the node and provide basic system capabilities.

CPs control the timing for:

- the fabric card or bus
- file storage
- data collection
- command processing



- interfaces for management devices

Multiservice Switch 15000 and Multiservice Switch 20000 nodes have two types of CPs: CP2 and CP3. CP2 offers a lower-cost option, while CP3 offers increased processing power and connection space.

Multiservice Switch 7400 nodes support two types of CPs: the base model CP and CP with building integrated timing supply (BITS). The CP with BITS has a port on the faceplate for direct input of two external timing sources.

For information about the CP Operation, Administration and Maintenance (OAM) Ethernet port, see [Control processor OAM Ethernet port configuration \(page 135\)](#).

Because a CP is critical to the whole node, you often use two CPs to provide redundancy. If the active CP fails, the node automatically moves traffic to the standby CP. If you enable this feature, FPs with applications that support hot standby for CP switchover continue running uninterrupted during the switchover from active to standby CP. For more information see [Understanding CP equipment sparing \(page 247\)](#).

FPs provide communication connections and services. FPs support:


- physical interface connections to subscriber lines and network trunks
- software that performs real-time functions associated with the forwarding and routing of frames

Multiservice Switch nodes support a number of FPs that can run a variety of different communication services, including frame relay, Asynchronous Transfer Mode (ATM), Ethernet, and voice services, depending on the type of node you have.

The figure [Processor card components and attributes \(page 300\)](#) shows the components and attributes for a processor card. For more information on the types of processor cards, see [Processor card instances \(page 300\)](#).



### Processor card components and attributes

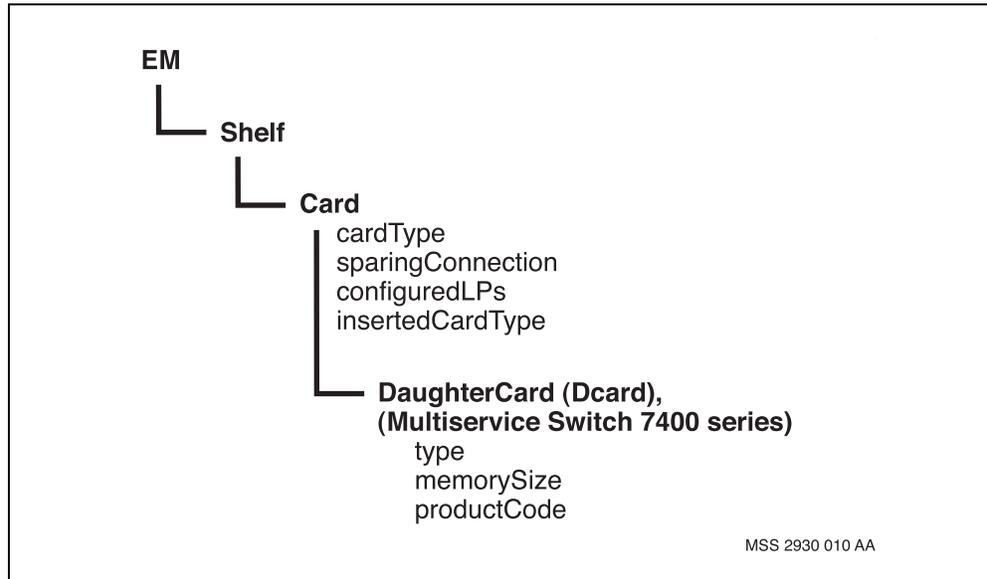

### Processor card instances

An instance of the *Card* component represents each processor card. The instance number corresponds to the slot where the card is inserted. Slots are numbered from left to right, starting at 0. For example, *Card/2* represents an FP inserted in the third slot from the left.

You must configure the type of the card you are inserting in the slot by setting the *cardType* attribute. The CP on Multiservice Switch 7400 series nodes have a card type of *CP*. The CP on Multiservice Switch 15000 and Multiservice Switch 20000 nodes have a card type of *CPeD* or *CPeE*, depending on whether it supports DS1 or E1 Building-Integrated Timing Supply (BITS) timing. FPs can be of various types depending on the function of the card. If the card that is actually inserted in the slot (as indicated by the *insertedCardType* attribute) does not match the configured card type, the processor card does not start and its status LED turns solid amber.

Some FPs on the Multiservice Switch 7400 series nodes contain daughter cards, which are specialized cards attached to the FP. If an FP has daughter cards, *DaughterCard* subcomponents appear under the *Card* component for the FP. The instance number, that is automatically set by the node, indicates the location of the daughter card. The attributes of the component give information about the type, memory size, and product equipment code (PEC) of the daughter card.

### Understanding processor card configuration

Instances of the *Card* component (a subcomponent of *Shelf*) represent each processor card. The instance number corresponds to the number of the slot where the card is inserted. Slot numbers start at 0. Nortel Multiservice Switch



nodes reserve slot 0 for the main CP. Multiservice Switch 15000 and Multiservice Switch 20000 nodes designate slot 1 for the spare CP. The Multiservice Switch 7400 series nodes designate the last slot of the for the spare CP.

---

**Attention:** Some Multiservice Switch 7400 processor cards are dual slot. The procedure for configuring a dual-slot processor is the same as configuring a single-slot processor.

---

Logical processors (LP) represent the software configuration that runs on processor cards. When you spare processor cards, more than one processor card can run the software configuration defined in the LP. There are two ways you can use LPs to implement processor card equipment sparing. The first method uses a single LP. For example, see [Multiservice Switch electrical interface equipment protection configuration \(page 191\)](#). The second method uses two LPs. For example, see [Multiservice Switch 7400 optical interface line and equipment protection configuration \(page 195\)](#).

### Considerations for locking processor cards

Processor cards are locked during a number of maintenance activities. Since locking a card will have an effect on the traffic normally carried on that card, the following considerations should be followed:

- Before locking an FP in software, ensure that you are aware of the consequences to the far end of the connection.
- Before locking the target FP of a protected (spared) pair, determine the status of its mate card using the appropriate procedure in [Common processor card procedures \(page 57\)](#).
  - If the status of the card is other than in-service, see “Status LEDs of a CP or FP” for the meaning of the possible LEDs and see NN10600-520 *Nortel Multiservice Switch 7400/15000/20000 Fault and Performance Management: Troubleshooting* for suggested procedures for placing the FP in the appropriate state.
- In a dual-FP inter-card LAPS configuration, manually forcing a switchover causes the mate port to keep the traffic. If the mate port is out of service and the switchover is forced, any traffic on the active port is lost. To prevent loss of traffic from a card replacement that is not due to card failure, you may first have to replace the card that has the most failed ports. When the statuses of a dual-FP LAPS configuration are queried in software, that is the time to decide which card of the pair is to be replaced first.
- If you are locking a Multiservice Switch 15000 or Multiservice Switch 20000 FP to prepare it for removal, the procedures in [Common processor card procedures \(page 57\)](#) indicate when to use the command



in order to minimize the impacts that locking or force locking has on services.

All function processors (FPs) should be locked in software prior to removing it from a slot, especially an FP that is configured for equipment protection.

Locking an FP

- removes it from service and prevents the node from establishing new connections on that card
- prevents it from running the software configuration defined in its logical processor (LP)

If the FP is currently running an LP, locking the FP puts the card into the shutting down state. The FP stays in the shutting down state until the LP stops running. An LP stops running when you lock it or when some condition causes it to restart (an operator command or an error). After the LP stops running, the FP moves to the locked state.

If you are running certain configured services on the FP, the LP will never stop running, in which case you need to use the *-force* option to lock the card. The *-force* option bypasses intermediate states and immediately moves the FP to the locked state. For spared optical FPs, the *-force* option can cause up to 50 ms of traffic to be dropped. For spared electrical FPs, the *-force* option can cause up to 100 ms or more of traffic to be dropped depending on the type of sparing panel. The amount of dropped traffic also depends on what the card is, what it is configured for, and how much traffic is in progress.

The person who will replace the card and the software operator who locks the card must coordinate their efforts to ensure that the FP is locked in software before physically removing the card. If you remove a standby FP before it is locked, the active FP can try to move its traffic over to it, but will not be able to. All traffic on the active FP can be lost.

You can move an FP immediately into the locked state (skipping the shutting down state) using the *force* option of the *lock* command.

For Multiservice Switch 7400 series nodes, when you lock an FP using the *force* option, the LP immediately restarts and the card moves into the locked state. For Multiservice Switch 15000 and Multiservice Switch 20000 nodes, when you lock an FP using the *force* option, the card moves immediately into the locked state. The LP restarts only when you restart the card.

If you lock an FP that has a defined spare card (is configured for equipment protection), the LP changes to the standby card. For Multiservice Switch 7400 series nodes, when an FP is locked, its LED status light is slow-pulsing green. For Multiservice Switch 15000 and Multiservice Switch 20000 nodes, when an FP is locked, its LED status light is solid red.



**Attention:** With line automatic protection switching (LAPS), the status LEDs on the faceplates of paired FPs do not indicate which one is active or standby. For example, both can have solid green LEDs. Before replacing a card that has been configured for LAPS, the standby card must be identified by software commands. The software query must occur very close to the actual time of card removal to minimize the system's opportunity to automatically change cards.

---

When an FP is configured for equipment protection, locking the standby FP means preventing the standby FP from receiving traffic or being used as a backup. Locking is usually done to the standby FP. When you wish to replace an active FP, for example, for an upgrade or re-deployment, you must consider forcing a manual switchover in software so that the standby FP takes over the active FP's traffic and the two FPs swap activity. Swapping activity means the standby becomes the active FP, and the active FP becomes the standby.

The maximum switchover time is 50 milliseconds in the case of optical interfaces and 100 milliseconds for electrical interfaces. After a switchover completes, an in-service standby FP shows a fast-flashing green status LED on its faceplate and it can be locked.

Unlocking an FP causes it to restart, that is, triggers software activities to return the FP to service.

### **Considerations for reinitializing a processor card**

Nortel Multiservice Switch nodes provide two methods for reinitializing a processor card: resetting and restarting. When you reset a processor card:

- 1 its hardware resets
- 2 it runs self tests
- 3 it reloads the software defined in its LP

When you restart a processor card, its hardware resets but it does not clear the loaded software out of memory. The processor card reinitializes the software in memory, but it does not reload the software from the file system. This behavior generally makes restarting a processor card faster than resetting the card.

If you reset or restart a spared processor card, a switchover to the standby processor card occurs. When you reset a CP, it loads the committed view. You can only restart a CP if it is currently running the committed view.

### **Considerations for replacing function processors**

You must remove an FP from service before you can physically remove the card from the slot.



Locking an FP is the prescribed method of removing it from service because it prevents the node from establishing new connections on that card. You must ensure that an FP is locked before you physically remove it from the slot. If you remove an FP before it is locked, all services and connections supported by that FP are lost and system alarms are generated. Removing the card from service without locking it means some services will not automatically return to service with the card.

If the FP is spared, traffic is diverted to the spare FP when the active FP is locked. Before locking an FP, you should visually inspect the spare FP to verify that the LED is showing a fast flashing green signal, indicating that it is in standby mode and ready to be put into service. If any other signal is displayed, the FP is not in standby mode and the switchover will fail. If other LED patterns are displayed, see NN10600-520 *Nortel Multiservice Switch 7400/15000/20000 Fault and Performance Management: Troubleshooting* for an explanation of these LED patterns and suggested procedures for placing the FP in the appropriate state.

Before removing an FP from service, the following points should be considered:

- When an FP has been removed from service by the system, an unspared FP is not providing service and a standby FP is not available for a backup. Minimize the impact of an out-of-service FP by doing the procedure as soon as possible. An out-of-service FP shows a solid red LED and alarm 7012 100 is generated.
- Check for other alarms to determine if other equipment is causing the FP to be out-of-service. Address the remedial action when the system allows it. All alarms are described in NN10600-500 *Nortel Multiservice Switch 6400/7400/15000/20000 Alarms Reference*.
- When you were upgrading, downgrading, or redeploying an FP when the failed FP was discovered, you must fix the failed FP first. Otherwise follow one of the other procedures in [Common processor card procedures \(page 57\)](#).
- Identify from your site records whether any private network-to-network (PNNI) links pass through the failed FP. These links may not automatically return to service when the FP is replaced, and may need to be reconfigured or manually unlocked.
- When a standby FP is removed from service by you or the system, the system cannot use it as a backup, that is, the system cannot automatically drop traffic by changing from an active card to an unavailable card. Unless the FP has already been removed from service by the system, minimize the risk of not having a backup by doing the procedure during the period of lowest traffic for that FP. An out-of-service FP shows a solid red LED.



- During the removal from service, monitor alarms generated for equipment that is involved in the connection paths of the FP being replaced. Address the remedial action when the system allows it. All alarms are described in NN10600-500 *Nortel Multiservice Switch 6400/7400/15000/20000 Alarms Reference*.

When removing an optical FP configured with LAPS:

- Dual-FP LAPS is also referred to as inter-card LAPS. Single-FP LAPS is also referred to as intra-card LAPS.
- When you are upgrading, downgrading, or redeploying a card that is configured for paired card protection through LAPS, always plan to move the traffic from one FP (the target) to its mate. Then removing the target FP from service minimizes the affects on traffic.
- After a port or FP is removed from service by you or the system, an attempted switchover causes the traffic to be lost because the port or card is not available. To prevent the loss, the port must be manually locked in the software. If the active card or port fails while the mate is out of service, traffic on the active card or port is lost.
- Unless the FP has already been removed from service by the system, minimize the risk of not having a backup by doing the procedure during the period of lowest traffic for that FP. An out-of-service FP shows a solid red LED.
- Identify from your site records whether the optical card to be removed from service has been configured for line automatic protection switching (LAPS). Only some optical Nortel Multiservice Switch 15000 and Multiservice Switch 20000 FPs support LAPS. The NN10600-551 *Nortel Multiservice Switch 7400/15000/20000 FP Configuration Reference* identifies whether an FP supports LAPS, but does not indicate whether it was actually configured to use the capability.
- Each FP of a protected pair that supports inter-card LAPS (dual-FP LAPS) can have ports providing service (the equivalent of active) or on hot standby (the equivalent of inactive or standby). The LED status of both cards is solid green, indicating both are active even if all ports on one card are on hot standby. In this case, the following procedure temporarily removes one of the cards from service by moving traffic to its mate.
- During the removal from service, monitor alarms generated for equipment that is involved in the connection paths of the FP being replaced. Address the remedial action when the system allows it.

When removing an unspared FP:

- Check for alarms generated against the equipment the FP connects to. At the time you are about to remove the unspared FP from service, use the alarm data to determine which equipment should be fixed first in order to



minimize the extent of removing the unspared card from service. The alarms are described in NN10600-500 *Nortel Multiservice Switch 6400/7400/15000/20000 Alarms Reference*.

- When an unspared FP is removed from service by you or the system, the traffic on the card is dropped. Unless the FP has already been removed from service by the system, minimize the out-of-service impact by doing the procedure during the period of lowest traffic for that FP. An out-of-service FP shows a solid red LED.
- Before removing an unspared FP from service, decide how to minimize the impact on traffic at the far end of the FP. If the unspared FP is in service or partially in service (its LED is solid green), locking it before removal causes an impact on traffic from the far end connection. The extent of traffic loss for traffic in progress and for subsequent incoming traffic depends on how much traffic is occurring and is likely to occur for the duration of the replacement and how the far-end equipment and software is set up for redundancy at your network level of system engineering. If the far end is a Multiservice Switch node, the system takes care of the connections according to the way the cards are configured.
- Identify from your site records if the optical card to be removed from service has been configured for line automatic protection switching (LAPS) between pairs of ports on the same card. Only some optical Multiservice Switch 15000 and Multiservice Switch 20000 FPs support intra-LAPS. The NN10600-551 *Nortel Multiservice Switch 7400/15000/20000 FP Configuration Reference* identifies whether an FP supports LAPS, but does not indicate whether it was actually configured to use the capability. When an unspared card with intra-LAPS is removed from service, the traffic on the port pair is dropped.
- Plan how to replace an unspared FP quickly and safely to minimize how long the FP's traffic links will be out of service.
- Although an unspared FP can have been removed from service by the system, you must always ensure that the card has been removed from service and lock it in software before physically removing it from the slot. Otherwise, the replacement card may not fully return to service, or inserting the card can cause the node to reset.

When preparing an active card for replacement:

- In a dual-FP LAPS configuration, the mate card must be prepared for being replaced if it is part of an FP upgrade (rather than a failure). The sooner the mate card is prepared for being replaced (becomes the target card), the fewer active connections will be established on that card.
- With electrical FPs, preparing a spared active FP for being replaced means ensuring that the standby FP is ready to accommodate the traffic of the active FP with minimal impact on traffic. When the standby card has already undergone a replacement and has been confirmed to be in-



service, this is an opportune time to replace the active mate. Before physically replacing an active mate, its traffic must be moved to its standby mate so that the mate becomes the active and the active becomes the standby.

- If the FP is unspared, removing it from service drops traffic. The only preparation for an active unspared FP is to choose a period of lowest traffic before removing it from service. If your network was configured to back up the traffic of an unspared FP, removing the FP from service may cause the network to reroute far-end traffic away from the FP. For example, the configuration can have an intra-network card as opposed to an access card, have a node connected to two nodes to split services, or have PNNI links. Your site records should indicate whatever setup the network has.

### Daughter cards on Multiservice Switch 7400 processor cards

Some processor cards supported by Nortel Multiservice Switch 7400 series nodes have daughter cards that provide specialized functions. The *DaughterCard* subcomponent of the *Card* component represents the daughter cards present on a processor card. The instance value is automatically set, and indicates the location of the daughter card. The attributes of the component indicate the type, memory size, and product equipment code of the daughter card.

### Processor card sparing

Before setting up sparing between processor cards, you must check the product PECs of the active and spare cards. For CPs, all eight digits of the PECs must match. For FPs, generally, the first six digits (four letters and two numbers) must match.

For MSA32 FP and MSA8 FP sparing, electrical interfaces are protected using inter-card sparing (electrical sparing protection) while optical interfaces are protected using intra-card sparing (APS line protection).

For the sparing of MSA32 DS1 FPs, there are 1-slot and 2-slot cards with different PECs that can spare each other. For the sparing of MSA32 E1 FPs, there are 1-slot and 2-slot cards with different PECs that can spare each other. For example, the same sparing configuration can contain 1-slot and 2-slot FPs with or without the optical ports. The combinations of cards are identified in the FP descriptions in NN10600-170 *Nortel Multiservice Switch 7400 Hardware Description*.

For any FP sparing configuration, regardless of either PEC or card type:

- DS1 FPs can only spare other DS1 FPs and only for electrical interfaces
- E1 FPs can only spare other E1 FPs and only for electrical interfaces
- all FPs in a sparing configuration must have the same number of ports



- OC-n optical FPs can only spare other OC-n FPs where n is the same for both (for example, an OC-3 FP cannot spare an OC-12)
- Sparing between MSA8 FPs and MSA32 FPs is not supported

---

**Attention:** Some Multiservice Switch 15000 or Multiservice Switch 20000 processor cards have equivalent PECs. Except where noted, processor cards with equivalent PECs can be used as spares for each other. Contact your local Nortel Networks sales representative (account prime) to identify which FPs have equivalent PECs.

---

For FPs, protection switching is available in case the card or signal fails. For more information, see the following sections:

- [Multiservice Switch electrical interface equipment protection configuration \(page 191\)](#)
- [Multiservice Switch 7400 optical interface line and equipment protection configuration \(page 195\)](#)
- [Multiservice Switch 15000 and 20000 optical interface line and equipment protection configuration \(page 204\)](#)

Y-protection is a method of providing equipment protection (EP) and hitless software migration (HSM) that enables paired 16-port OC-3/STM-1 POS and ATM FPs (16pOC3PosAtm or NTHW44) to spare each other when the far-end interface does not support line automatic protection switching (line APS or LAPS). For the description of what Y-protection is and what it does for equipment protection, see [Understanding Y-protection for dual FPs \(page 326\)](#).

### Hot standby for CP switchover

Hot standby for CP switchover allows FPs running services that support it to continue operating without interruption during a CP switchover.

By default, hot standby for CP switchover is enabled. You can disable it by including the *noHitlessCpSwitch* feature in the feature list of the CP LPT. When hot standby for CP switchover is disabled, cold standby for CP switchover is still available.

See also [Effects of a CP switchover \(page 255\)](#).

## Understanding Multiservice Switch software

The software load (known as the PCR) operates these Nortel Multiservice Switch devices:

- Multiservice Switch 7400 series




- Multiservice Switch 15000
- Multiservice Switch 15000 VSS
- Multiservice Switch 20000

The same load supports each of these nodes to provide functionality and services. Each node uses the portion of software that applies to it, and supports most of the available functionality and services. The new or changed functionality or services is directly associated with a version of the PCR, 4.1 for example.

Multiservice Switch software consists of applications. Each application provides certain types of software functionality called features. An application can also have one or more patches that enhance or correct some of its functionality. Multiservice Switch software is managed using components and attributes. The figure [Software components and attributes \(page 309\)](#) illustrates the components and attributes for managing Multiservice Switch software.

#### Software components and attributes

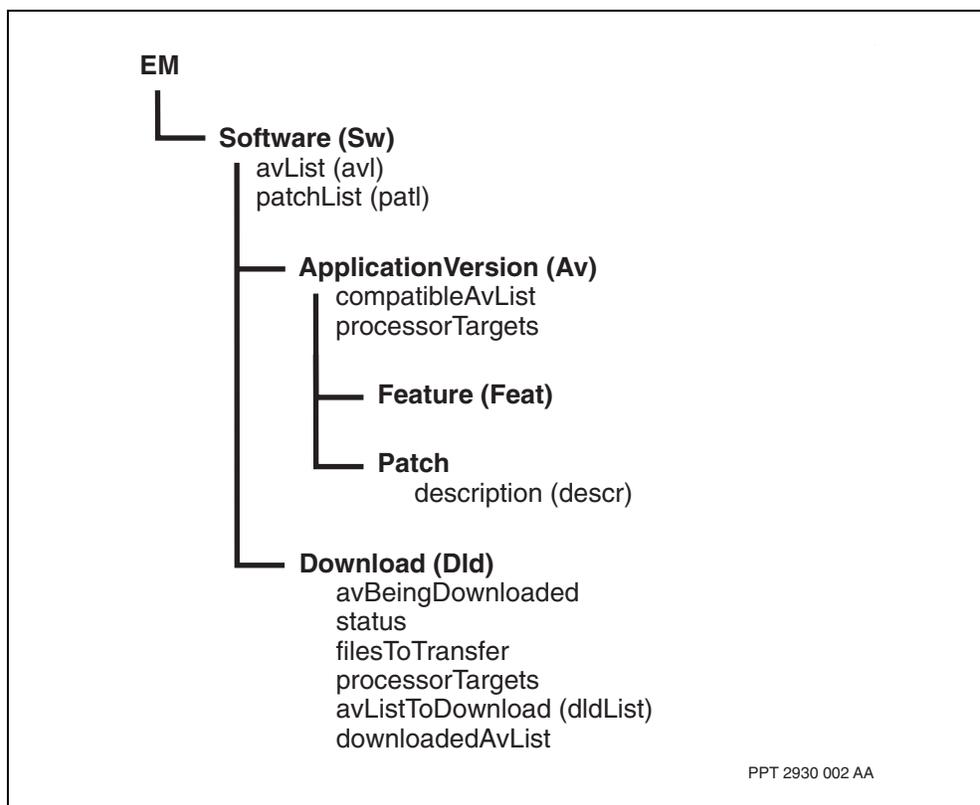



Instances of the *ApplicationVersion* component represent the software applications currently available on your node (stored on its file system). Instances of the *Feature* component represent the functionality of these applications. You can download new software applications to your node from a software distribution site (SDS) using the *Download* component of the node. For more information about downloading software applications from an SDS, see NN10600-270 *Nortel Multiservice Switch 7400/15000/20000 Software Installation*.

A Multiservice Switch node can have many applications available, however it only uses the ones you specify on the application version list (AVL). The AVL is represented by the *avList* attribute of the *Software* component. This capability allows you to store new applications or new versions of existing applications on the node for future use. This same capability applies to patches on an application version (AV), which you specify using the *patchList* attribute of the *Software* component.

For more information, see the following:

- [Software structure \(page 310\)](#)
- [Components \(page 311\)](#)
- [Application versions \(page 312\)](#)
- [Patches \(page 312\)](#)

For instructions on downloading software applications from an SDS and setting the application version list, see NN10600-270 *Nortel Multiservice Switch 7400/15000/20000 Software Installation*.

In most cases, Multiservice Switch software is backward compatible. New software can load provisioning files and interpret provisioning views created using a previous version of the software. Consult Nortel Multiservice Switch Release Notes for exceptions. For information on views and upgraded software, see NN10600-270 *Nortel Multiservice Switch 7400/15000/20000 Software Installation*.

## Software structure

Nortel Multiservice Switch software has four major classes:

- base
- trunking
- networking
- access services

The figure [Multiservice Switch software structure \(page 311\)](#) illustrates these four software classes and their relationship to one another.




The base system provides the functions that support the access services. Its functions include software management, command processing, provisioning, node management, port management, file storage, data collection, and network management interfaces.

Trunking software provides the capabilities for interconnecting Multiservice Switch nodes. It also allows for the interconnection of Multiservice Switch nodes and DPN-100 modules.

Networking software provides capabilities for forwarding a packet of information from its source to its destination. Networking software includes routing and traffic management functions.

The access services run on the base system and provide the telecommunication capabilities of Multiservice Switch nodes. In general, Multiservice Switch network access services include frame relay, asynchronous transfer mode (ATM), Internet protocol (IP), and voice.

### Multiservice Switch software structure

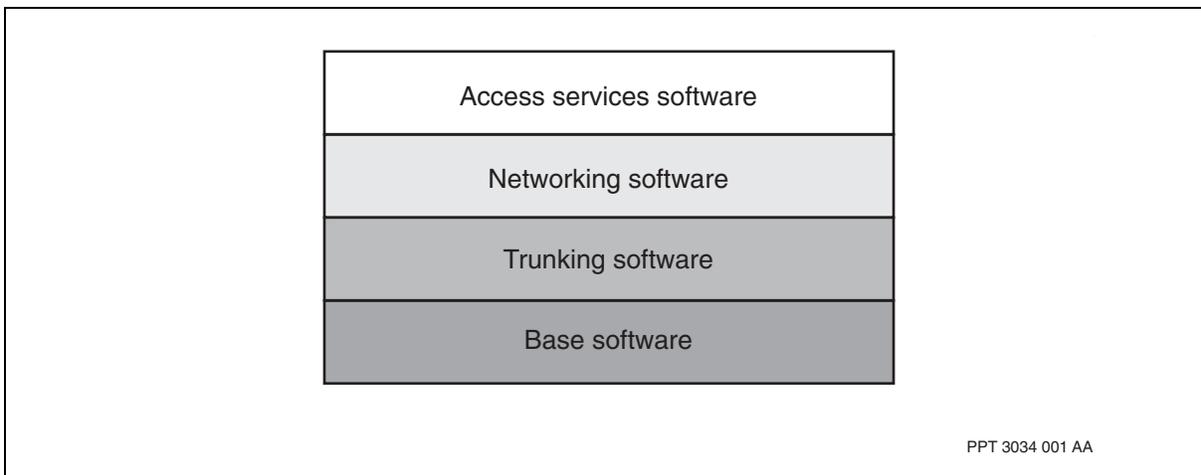

### Components

The main interface to Multiservice Switch nodes is by way of components. Components represent the hardware, software, and services on a node. If you want to modify the configuration of the node, you change the attribute values of its components. You can do this directly by typing commands in the text interface, or indirectly using a graphical network management tool. In either case, you are manipulating node components.

For detailed information on components, see NN10600-060 *Nortel Multiservice Switch 7400/15000/20000 Component Reference*. For information on using commands to manipulate components, see NN10600-050 *Nortel Multiservice Switch 7400/15000/20000 Command Reference*.



## Application versions

A particular version of an application is called an application version (AV). An application version number identifies each AV. The version number consists of two letters followed by two numbers. The most recent version of an application has the highest letter pair (with AA being the lowest) and the highest number pair (with 00 being the lowest). For example, AV numbers for a specific application can be: AA01, AA02, and AB01, where AA01 is the oldest version and AB01 is the newest.

The application version list (AVL) specifies the selected version for each application to run on a node. You set the AVL using the *avList* attribute of the *Software* component.

A processor card can have one of two types of processors: i960 or PowerPC. A particular AV can support one or both of these processor types. When you define your AVL, make sure that your AV supports the processor types on your node. The *processorTarget* attribute of the *ApplicationVersion* component indicates which processors an AV supports. If the AV does not support the processor types on your node, you can download the AV, specifying the appropriate processor types.

---

**Attention:** The PowerPC (ppc) processor type is not supported on nodes with a 256-Mbyte disk on their control processors (CP).

---

## Patches

A patch is a temporary enhancement or correction to the functionality of an application version. Patches allow for a number of small changes to be made to an application until the next version of the application is available. In general, a new application version incorporates all the changes in functionality made in the preceding patches.

Each patch has a unique name. The patch name starts with the application name, followed by a four-digit patch number (that starts at 0000). The patch name ends with a single letter (starting at A) that indicates the version of the patch. A patch is always associated with an application version. The number and version of a patch start at 0000 and A for each application version.

For example, you have a patch named base0000B, that is associated with application version base\_AQ0123A. The patch modifies the behavior of the base application provided by the base\_AQ0123A application version. It is the first patch (0000) released for that application version, but is the second version (B) of that patch.



You can determine the enhancement or correction provided by a particular patch by displaying the *description* attribute of the *Patch* component. This attribute provides a short description of the patch. For more information on a particular patch, see Nortel Multiservice Switch Release Notes.

The patch list allows you to specify which patches you want to run on the Multiservice Switch node. You specify the patches using the *patchList* attribute of the *Software* component.

## Understanding the control processor OAM Ethernet port

The OAM Ethernet port on each control processor (CP) allows you to manage Nortel Multiservice Switch nodes connected to the management network. Multiservice Switch nodes can be connected locally or remotely.

When nodes are directly connected to the management network, they use local network management connectivity. Local connectivity can be achieved by connecting the Ethernet port on the management device as follows:

- directly to the physical Ethernet port on the CP
- indirectly through an Ethernet LAN to the physical Ethernet port on the CP
- indirectly through an Ethernet LAN and any number of Internet Protocol (IP) routers, one of which is connected to the physical Ethernet port on the CP

You can use local network management connectivity to manage nodes.

Remote network management connectivity uses the capability of a node to route IP traffic to extend the reach of the management network. In remote connectivity, a node that is locally connected to the management network routes management traffic to other Multiservice Switch nodes. In this scenario, many Multiservice Switch nodes are controlled by the management network, but only one has local connectivity.

In remote connectivity, the management traffic can be routed over any WAN or LAN media that connect the nodes, including the following:

- Ethernet
- Asynchronous Transfer Mode multi-protocol encapsulation (ATM-MPE)
- frame relay data terminal equipment (DTE)

---

**Attention:** Multiservice Switch 15000 and Multiservice Switch 20000 CP3 Ethernet ports only support remote connectivity using ATM-MPE media.

---



For more information on the CP OAM Ethernet port, see the following sections:

- [OAM Ethernet port sparing \(page 314\)](#)
- [OAM Ethernet port tests \(page 315\)](#)
- [OAM Ethernet port statistics \(page 315\)](#)

For procedures on configuring and maintaining the OAM Ethernet port, see [Control processor OAM Ethernet port configuration \(page 135\)](#).

For information on IP security (IPSec) for OAM traffic, see NN10600-271 *Nortel Multiservice Switch 7400/15000/20000 Network Management Connectivity* and NN10600-601 *Nortel Multiservice Switch 7400/15000/20000 Security Management*.

### **OAM Ethernet port sparing**

During a control processor card (CP) switchover, OAM ethernet connectivity is temporarily lost. A spared CP configuration provides Ethernet redundancy by having both the active and standby OAM Ethernet ports connected to a hub or an IP router. The outage time can vary based on the associated hardware configuration. If both OAM Ethernet ports are connected to a broadcast style hub, no additional action is required. If both OAM Ethernet ports are connected to an IP router, the outage time is a result of the external equipment issuing an ARP request to determine the new interface. If the setup requires a direct connection to an IP router, lower the ARP refresh timer value to decrease the time to recognize and initialize the new interface and resume OAM Ethernet connectivity.

The Ethernet ports on the main and spare CPs are spared at the media access control (MAC) and IP addressing level. When both these Ethernet ports are connected to a hub or an IP router, only the Ethernet port of the main CP is visible to the hub. The connection to the port on the spare CP appears to have nothing at the end of it.

When the main CP fails or a CP switchover is initiated, the OAM port of the main CP is disabled. This results in a loss of connectivity until the spare CP becomes active. Once the spare becomes active, its OAM port becomes enabled. All connection-oriented management applications must re-establish their connections.

There are two conditions related to the failure of the OAM Ethernet port that cause a CP switchover:

- a port test fails during the initialization of the hardware device when the CP first starts up



- a time domain reflectometry test fails following an absence of traffic on the link for a period of at least 25 seconds

If either of these two error conditions occurs, a CP switchover should occur. However in order to avoid impacting the service-providing applications on the FP, there are some scenarios where such port failures do not cause a CP switchover. The operational attributes of the *oamEnet* component allow the CP to correctly decide when a switchover is appropriate and when it is not.

The exception scenarios are

- an unsynchronized file system
- an unloaded provisioning database (i.e., CIT) on the standby CP
- a failed oamEnet port on the standby CP
- an FP running an uncommitted provisioning view
- a software upgrade in progress

As soon as the exception scenario clears and if the oamEnet port failure still exists, then the CP switchover occurs.

### OAM Ethernet port tests

There are two categories of OAM port tests:

- port device tests that verify the controller device and its driver configuration
- link tests that verify the physical link between the CP Ethernet port and the Ethernet management network

The port device tests are initiated automatically prior to enabling the OAM port functionality. You can also initiate them manually through the *Test* subcomponent. The tests report a pass or fail.

---

**Attention:** The OAM Ethernet port tests are not supported on CP3 on Multiservice Switch 15000 and Multiservice Switch 20000 nodes.

---

### OAM Ethernet port statistics

The OAM Ethernet port supports two modes of statistics gathering:

- the primary statistics are reported to all management interfaces and cannot be turned off. They include:
  - alignment errors
  - frameTooShort
  - fcsErrors



- numberOfRxCollisions
- ackOfResourcesDiscards
- overrunErrors

These statistics require little software or storage to gather and display.

- the extended statistics can be turned on or off. They include
  - singleCollisionFrames
  - multipleCollisionFrames
  - deferredTransmissions
  - lateCollisions
  - excessiveCollisions
  - carrierSenseErrors
  - clearToSendSignalLoss

These statistics require some software processing to gather and display. Doing so can have an adverse effect on the performance of the node.

## Understanding the fabric card

Each Nortel Multiservice Switch 15000 and Multiservice Switch 20000 node has two redundant fabric cards, which are the switching matrix that enables communication between the processor cards on the node. Each fabric card is connected to 16 processor cards in the node through 16 card ports. The fabric cards also provide:

- the capability to reset a processor card (CPs and FPs) or a fabric card
- processor card availability functionality
- clocking to the two secondary control buses (SCB) on the backplane where they connect both fabric cards to all the processor cards

Either fabric card can handle the communication requirements of a fully provisioned node. At start-up, the node shares the communication load across both operational fabric cards. In the event of a fabric card removal from service by the system for a fault or manually for a replacement or an upgrade, there is no degradation of performance or throughput as one fabric card takes over all traffic in progress. Connection switching between fabric cards is performed by each individual function processor (FP) and control processor (CP). That is, the decision to move traffic from a card port to one fabric card over to a port on the mate fabric card is decided by the FP and CP, not the fabric cards.

Two instances of the *FabricCard* component, x and y, represent the fabric cards. The x is the fabriccard in the upper physical position, while y is the lower mate. The figure [Fabric components and attributes \(page 317\)](#) illustrates the components and attributes of the fabric cards.




For more information on the fabric cards, see the following sections:

- [Single- and dual-fabric mode \(page 317\)](#)
- [Fabric ports \(page 318\)](#)
- [Fabric card firmware \(page 318\)](#)
- [Fabric card operation on Multiservice Switch 15000 and Multiservice Switch 20000 nodes \(page 319\)](#)
- [Fabric card configuration \(page 319\)](#)
- [Configuring the fabric card component \(page 320\)](#)

For procedures on controlling the fabric cards and determining their status, see [Fabric card configuration \(page 319\)](#).

### Fabric components and attributes

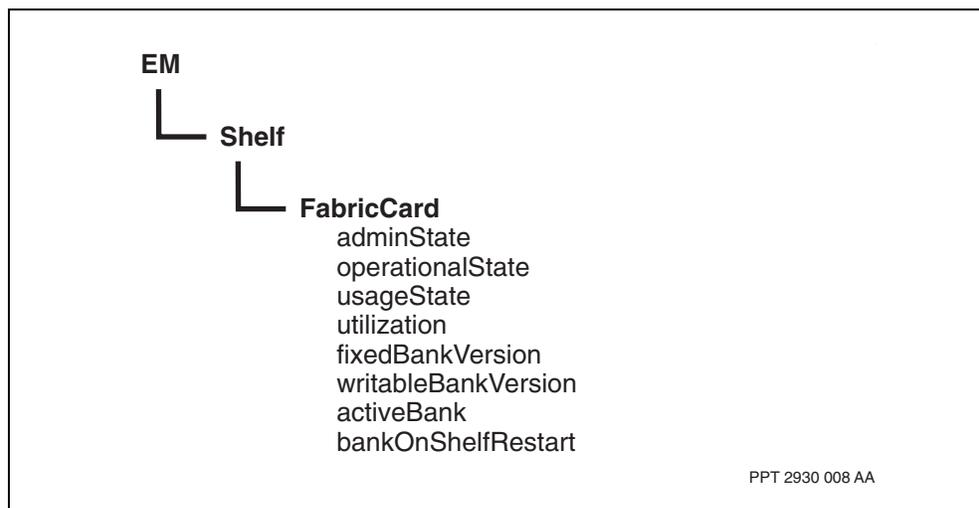

### Single- and dual-fabric mode

When both fabric cards are operational (unlocked, in-service, with LED status solid green, the node is in dual-fabric mode (*backplaneOperatingMode* attribute is *dualFabric*). The fabric cards balance and load-share the transport of processor card cells, giving a bandwidth of 40 Gbit/s for a Nortel Multiservice Switch 15000 node, and 70 Gbit/s for a Multiservice Switch 20000 node.

**Attention:** In cases when both fabric cards may be operational, but at least one fabric port on an FP is disabled, the *backplaneOperatingMode* attribute is *dualFabricDegraded* rather than *dualFabric*.



When one fabric card is handling the traffic of the entire node, the node is in single-fabric mode (*backplaneOperatingMode* attribute is *singleFabricX* or *singleFabricY*) and all processor card cells run on that enabled fabric card. The single fabric card still provides a node bandwidth of 40 Gbit/s for a Multiservice Switch 15000 node and 70 Gbit/s for a Multiservice Switch 20000 node. These nodes automatically alternate between single- and dual-fabric mode depending on the state of the individual fabric cards.

---

**Attention:** If both fabric cards are out of service, the node enters fabric-less mode. In this mode, all cards in the node are disabled. The node automatically resets.

---

### Fabric ports

Each fabric card has 16 ports that interface with the processor cards. Each processor card has two fabric ports that interface with the fabric cards. Each card component has two *fabricPort* subcomponents, one for each fabric port.

The *OsiState* attribute of the *fabricPort* component indicates the status of the user-specified fabric port on a processor card.

### Fabric card firmware

A fabric card has two areas in memory to store firmware. The first area is called the fixed bank and stores a fixed version of firmware installed at the factory. The second area is called the writable bank and can store another version of firmware.

When a fabric card is initially powered up or hot-swapped, the system compares the version of firmware that is on the fabric with the version of firmware that is in the active bank of the running software. A fabric card always has firmware already present either from the factory or from a previous software load. Whenever a fabric card does not operate due to a mismatch of firmware versions, the system generates alarm 7002 0005 (described in NN10600-500 *Nortel Multiservice Switch 6400/7400/15000/20000 Alarms Reference*). To enable the fabric to operate, you must manually load the indicated version of firmware.

Different versions of fabric card firmware are stored as an application version (AV) at the software distribution site (SDS). An operator can download a new version of firmware into a fabric card's writable bank.

---

**Attention:** Do not include the fabric card firmware AV in the software AV list.

---



Fabric card firmware upgrades are not normally needed when the CP and FP's software is upgraded. All Multiservice Switch software is compatible with all fabric card firmware. However, some versions of fabric card firmware contain enhancements and new functionality to increase node efficiency.

For the commands to handle fabric firmware, see NN10600-272 *Nortel Multiservice Switch 7400/15000/20000 Upgrading Software*, the chapter on installing new firmware on a fabric card.

### **Fabric card operation on Multiservice Switch 15000 and Multiservice Switch 20000 nodes**

The system automatically verifies that the fabric is correctly configured and functioning properly. The system uses the following components.

- *Shelf FabricCard/<n> cardPort/<p>*

This component represents a physical port on a fabric card. The fabric card number *n* is *x* for the upper fabric card in the physical slot or *y* for the lower fabric card. The card port number *p* is 0 to 15 for the ports on the FP or CP. This port sends and receives cells to and from the processor cards. Each fabric card has 16 of these subcomponents, one for each processor card in the node.

- *Shelf Card/<m> fabricPort/<q>*

This component represents a physical port on a processor card. The card number *m* is 0 to 15 for the CP or FP. The fabric port *q* is *x* or *y*. The fabric port sends and receives cells to and from the fabric cards. Each processor card has two of these subcomponents, one for each fabric.

These components are added and automatically configured when the fabric cards and processor cards are physically installed and booted up.

### **Fabric card configuration**

Nortel Multiservice Switch 15000 nodes have a fixed fabric card capacity while Multiservice Switch 20000 nodes have configurable fabric card capacities. Configuring the fabric capacity depends on the fabric card that is installed in the node. (For the initial release of the Multiservice Switch 20000 node, the fabric is the 70 Gbits/s version with PEC NTPN02, but the node backplane is designed to accommodate other capacities.)

The fabric card enables the processor cards on Multiservice Switch 15000 and Multiservice Switch 20000 nodes to communicate with each other. There are two fabric cards, each represented by an instance of the *FabricCard* component (*x* and *y*). The *x* denotes the fabric card in the upper physical position in a node, while the *y* denotes the lower mate. When both fabric cards are operational, the node is in dual-fabric mode. When in dual-mode with at least one fabric port disabled, the node is in dual-fabric degraded mode. When one fabric card is disabled, the node is in single-fabric mode.



When a Multiservice Switch 15000 or Multiservice Switch 20000 node detects unrecoverable errors on a fabric card, or all ports on the fabric card fail, it automatically removes that fabric card from service by

- deflecting incoming traffic to the other fabric
- transferring traffic in progress to the other fabric
- when all traffic is transferred, gets removed from service

You can manually remove a fabric card from service using the *lock* command. You can lock a fabric card if both fabric cards are unlocked and enabled, or when the card has been removed from its slot. The fabric card remains locked until you unlock it using the *unlock* command. For example, when a fabric is replaced or upgraded by another card, the new card is still locked until unlocked.

If a CP switchover occurs while a fabric is locked, the fabric card remains locked after the switchover. However, if the node restarts, a locked fabric card becomes unlocked.

### Configuring the fabric card component

Two fabric card instances, *Shelf FabricCard/x* and *Shelf FabricCard/y* are automatically added to the *Shelf* component hierarchy during system initialization. Therefore, manual configuration is not required.

## Understanding the Multiservice Switch 7400 bus

Nortel Multiservice Switch 7400 series nodes have two 800 Mbit/s buses that enable communication between the processor cards installed in the node. The processor cards receive and send cells to each other through the buses.

There are two buses, each represented by an instance of the *Bus* component (x and y). The figure [Bus components and attributes \(page 321\)](#) illustrates the components and attributes of the buses. When both buses are operational, the node is in dual-bus mode. When one bus is disabled, the node is in single-bus mode.


When a Multiservice Switch 7400 node detects errors on a bus, it automatically disables that bus.

You prevent a bus from carrying data using the *lock* command. The bus remains locked until you unlock it using the *unlock* command. You can only lock a bus if both buses are unlocked and enabled. If a control processor (CP) switchover occurs, a locked bus remains locked. However if the node restarts, a locked bus becomes unlocked.



Multiservice Switch 7400 nodes provide automatic testing of the bus clock source. Since the bus clock source test can cause minor data loss, you can disable the automatic testing. If you have disabled the automatic testing, it is a good idea to manually test the bus clock source at least once a month.

### Bus components and attributes

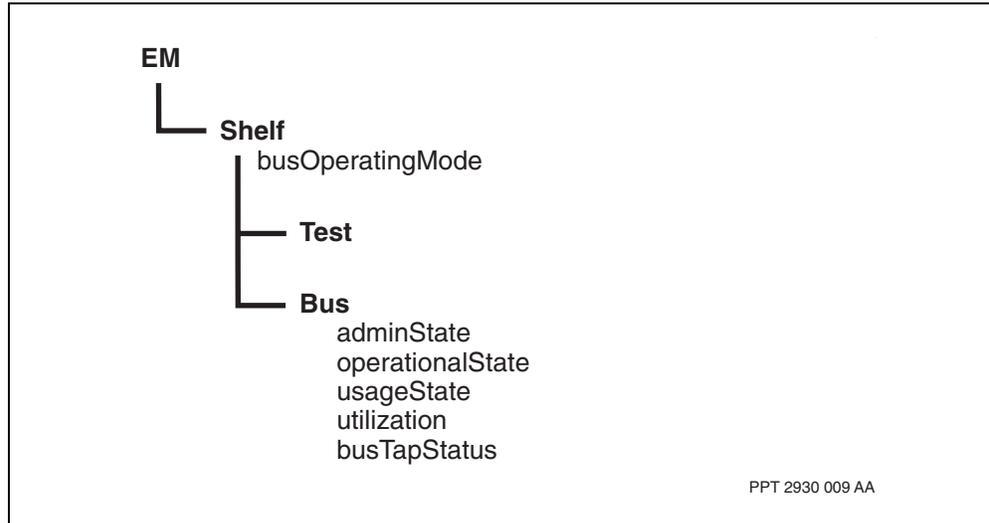

For more information on the buses, see the following sections:

- [Single- and dual-bus mode \(page 321\)](#)
- [Bus taps \(page 321\)](#)
- [Clock source \(page 322\)](#)

### Single- and dual-bus mode

When both buses are operational, the node is in dual-bus mode (*busOperatingMode* attribute is *dualBus*). The buses share the transport of processor card cells, giving a bandwidth of 1.6 Gbits/s. The *utilization* attribute indicates how much of the bus bandwidth is currently in use.

When one bus is disabled, the node is in single-bus mode (*busOperatingMode* attribute is *singleBusX* or *singleBusY*) and all processor card cells run on the enabled bus. The node automatically changes between single- and dual-bus mode depending on the state of the individual buses.

### Bus taps

Each processor card has two bus taps, that provide an interface to the buses. Each card component has two *BusTap* subcomponents, one for each bus tap.

The *busTapStatus* attribute of the *Bus* component indicates the status of each bus tap.



## Clock source

To properly function, the bus needs a clock signal. In most cases, the active CP provides the clock signal for the bus. The alternate clock source is the processor card (either an FP or a CP) in a slot at the opposite end from the active CP. If that slot is empty, no alternate clock source is available. If present, the standby CP is always the alternate clock source.

The alternate clock source only provides the clock signal for the bus if a hardware failure makes it impossible for the active CP to do so. The *clockSource* attribute indicates the current clock source. The *busClockSourceStatus* attribute indicates the status of both the active and alternate clock sources. If the *busClockSourceStatus* attribute has a value of *unknown*, you should run a manual bus clock source test.

The manual bus clock source test is controlled by the *Test* subcomponent of the *Shelf* component. You perform the test using the run Shelf Test command. For a procedure on running the test, see NN10600-520 *Nortel Multiservice Switch 7400/15000/20000 Fault and Performance Management: Troubleshooting*. For information on the run Shelf Test command, see NN10600-050 *Nortel Multiservice Switch 7400/15000/20000 Command Reference*.

## Understanding the Multiservice Switch file system

Nortel Multiservice Switch file system stores the software and configuration files for running the node and the data generated by the node. The file system consists of up to two disks (represented by instances of the *Disk* component), one located on each of the CPs. When you have installed and configured a main and spare CP, the disks on the CPs work together to provide file system redundancy. The figure [File system components and attributes \(page 323\)](#) illustrates the components and attributes that represent the file system.

When the two disks are synchronized, the system dynamically copies the information on the active CP's disk to the standby CP's disk. If the active CP fails and an automatic switchover to the standby CP occurs, information stored on the file system is preserved.


For more information on the file system, see the following sections:

- [File system information \(page 323\)](#)
- [Disk synchronization \(page 323\)](#)
- [Different-sized disks \(page 324\)](#)
- [File system restrictions \(page 324\)](#)
- [Disk full conditions \(page 325\)](#)

For procedures on maintaining the file system, see [Navigation \(page 183\)](#).



## File system components and attributes

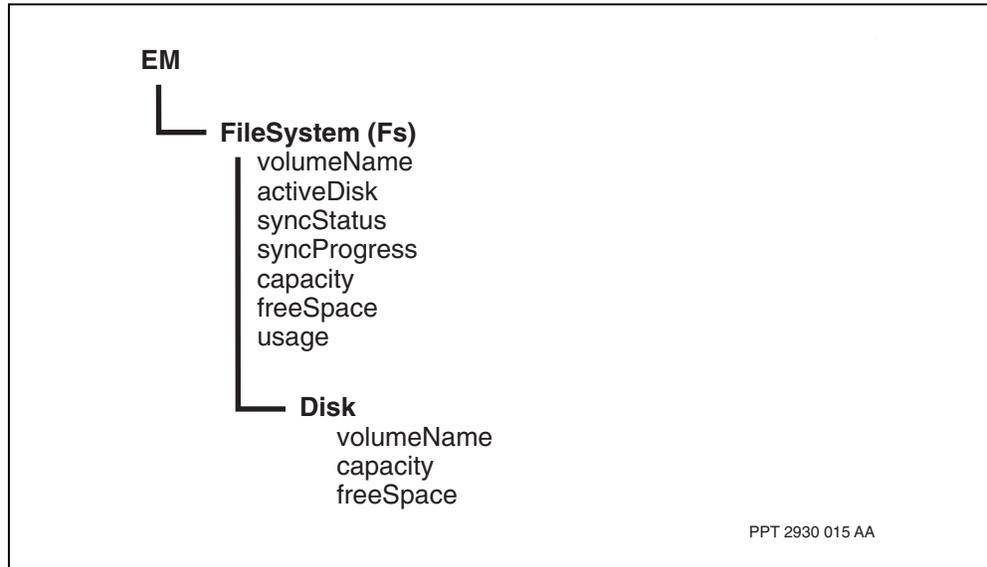

## File system information

The operational attributes of the *FileSystem (Fs)* and *Disk* components provide information about the status, usage, and available disk space of the file system as a whole and on its individual disks.

The *activeDisk* attribute of the *FileSystem (Fs)* component indicates the component name of the disk on the active CP. The instance number of the *Disk* component corresponds to the slot number of the CP containing the disk. For example, the *Disk/0* component represents the disk on the CP in slot 0.

Along with a component instance, each disk also has a name. The *volumeName* attribute of the *Disk* component indicates the name of the individual disk. The *volumeName* attribute of the *FileSystem* component indicates the name of the active disk.

The *capacity* attribute indicates the maximum number of bytes of information that the disk or file system can store. The *freeSpace* attribute indicates the number of bytes currently available. When two different-sized disks are synchronized, the *capacity* and *freeSpace* attributes of the *FileSystem* component report the size of the smaller of the two disks. The *FileSystem* component has a *usage* attribute that indicates the percentage of the file system that is currently in use.

## Disk synchronization

Before the Nortel Multiservice Switch system begins copying modifications made on the active disk to the standby disk, the two disks must be synchronized. The disks are synchronized when they have identical content.



The system automatically attempts to synchronize the disks in the following situations:

- when you insert a standby CP that has an identical disk volume name to that of the active CP
- when you power up a node that contains two CPs with the same disk volume name

If the disks do not have the same volume name, you can manually synchronize the disks. During the synchronization, the system copies the contents of the active disk to the standby disk. If the two disks are completely different and the active disk contains a lot of information, the synchronization process can take several hours. When the synchronization is complete, both disks have the same volume name. The system takes the volume name from the disk on the active CP.

The *syncStatus* attribute indicates whether the disks are synchronized, not synchronized, or in the process of synchronizing. If they are in the process of synchronizing, the *syncProgress* attribute indicates the percent completed.

You can manually initiate the synchronization process using the *synchronize Fs* command. For information on performing a manual synchronization, see [Synchronizing disks \(page 184\)](#). For information on the *synchronize Fs* command, see NN10600-050 *Nortel Multiservice Switch 7400/15000/20000 Command Reference*.

### Different-sized disks

The disks on the main and spare CP can be of different sizes. The file system operates as if the two disks are the size of the smaller disk until the smaller disk is full.

If the smaller disk is full and it is the standby disk, the system cannot copy changes from the active disk to the standby disk. In this case, the file system redundancy is disabled and the system treats the active disk as the only available disk. If the smaller disk is the active disk, then the system cannot write information to the file system because the active disk is full. You must take immediate action to prevent loss of information.

Although you can operate your node with differently sized disks on the main and spare CP, Nortel Networks recommends that the two disks be of the same size whenever possible. If you must operate with different-sized disks, ensure the active disk is always the smaller disk to avoid losing file system redundancy.

### File system restrictions

To perform file system procedures, your user ID must have a minimum impact level of configuration.



The following restrictions apply when working with directories and files:

- The only characters that can appear in a file name are letters, numbers, the dot (.) character, and the underscore (\_) character.
- File names and directory names are case-sensitive.
- If a file or directory name contains a slash (/), it must be enclosed in quotation marks (" ").
- File and directory names cannot be longer than 40 characters.
- File names with their full path cannot be longer than 128 characters.

---

**Attention:** Slashes (/) count as characters, but quotation marks (" ") do not.

---

- Directory names with their full path cannot exceed 125 characters.
- You can have a maximum of 10 directory levels.
- The root directory can have a maximum of 110 items (directories and files).
- When you copy a protected file, the new file is not protected.



**CAUTION**

**Risk of damaging configuration data**

Nortel Multiservice Switch provisioning system looks for saved views according to specific file name formats and file relationships. If you move or rename directories and files using the Multiservice Switch file system commands (or using a non-Multiservice Switch utility or application), you can destroy the integrity of the saved-view database. Affected saved views cannot be recovered unless you have backed them up. Only use the tidy prov command to remove saved views.

**Disk full conditions**

When a disk is 85% full, the system generates a set alarm as a warning. The alarm clears when the disk is at 75% full (or below). When you encounter disk full conditions, spooling of data records stops and the disks on a two-CP node become unsynchronized.

To fix a full disk problem, you must remove any unused software and provisioning files. For information on removing software files, see *NN10600-270 Nortel Multiservice Switch 7400/15000/20000 Software Installation*. For information on removing provisioning files, see the tidy Prov command in *NN10600-050 Nortel Multiservice Switch 7400/15000/20000 Command Reference*. After removing unused files, you must manually




synchronize the disks on a two-CP node using the synchronize command. For more information, see [Synchronizing disks \(page 184\)](#). Spooling of data records restarts automatically when disk goes below 90% full.

## Understanding Y-protection for dual FPs

Y-protection is a method of line protection that enables paired 16-port OC-3/STM-1 POS and ATM FPs (16pOC3PosAtm or NTHW44) to spare each other when the far-end interface does not support line automatic protection switching (line APS or LAPS). By using fiber optical Y-splitter cables between some or all pairs of ports in a dual-FP configuration of NTHW44s and the far-end, traffic from the FPs is spared (backed up) while traffic from the far end is not. Refer to the figure [Y-protection connection between dual FPs and the far end \(page 326\)](#).

### Y-protection connection between dual FPs and the far end

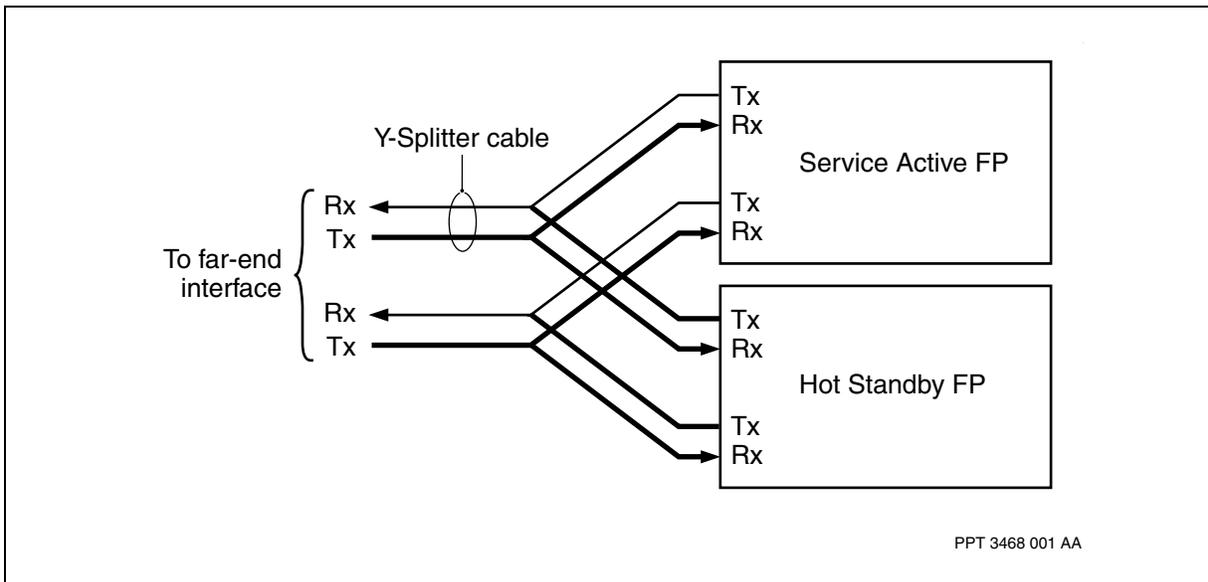

### The operation of Y-protection

The operation of Y-protection between the dual NTHW44 FPs can be with or without LAPS being configured for each split pair of ports. The combinations of protected ports that you can configure on the dual FPs is

- some or all port pairs configured for LAPS
- some or all port pairs configured for either LAPS and Y-protection (LAPS and Y-protection are mutually exclusive for the same port)
- some ports not configured for any protection

Y-protection is configured as an optional extension of configuring LAPS. It depends on LAPS to operate. Like LAPS in a dual-FP configuration, Y-protection provides card-to-card protection. Unlike standard LAPS, the



cards are not both active. Dual FPs with Y-protection have a designated service active FP and a hot standby FP. This means the standby line is always on the hot standby FP and its laser is turned off. The active line is always on the active FP and it does not react to k-byte changes. This accommodates the inherent problems of splitting an optical signal in this configuration.

The FP software controls the lasers of each transmit and receive port such that only the laser of an active port is on. This control ensures that the far end does not get confused by receiving signals from two different sources on the same line. This control also ensures that the laser is not turned on too soon for a reset card that is still waiting for software to be loaded.

Abnormal operation of a Y-protection connection triggers one or more of the following alarms:

- 7011 5279 for detection of a failure condition (for example, loss of signal on the active line due to a cut cable or a failed card)
- 7011 5278 for detection of a degraded condition (for example, a standby line or card is unavailable)
- 7011 5280 for detection of a failure at the far end (for example, the far end receive portion detects a SONET or SDH failure and sends an RDI to the near end)

### **Equipment protection for dual FPs with Y-protection**

Equipment protection for dual NTHW44 FPs that are configured for Y-protection is normal, that is, includes protection from a card failure or a reset. If the far end is a Nortel Multiservice Switch node, then the protection of the connection behaves as it normally would for a LAPS or a non-LAPS configuration.

When a port with Y-protection fails or is locked on the service active FP, the traffic is lost because there is no line switchover. Otherwise, locking or unlocking a card, laps, logical processor (lp), or port is not affected by Y-protection being configured on it. The impact of locking or unlocking is determined by whatever else is configured.

The impact on traffic according to specific manual or system-triggered maintenance actions is described in the table of LAPS component state changes with Y-protection in NN10600-520 *Nortel Multiservice Switch 7400/15000/20000 Fault and Performance Management: Troubleshooting*.



---

## Software migration between dual FPs with Y-protection

Hitless software migration can occur for the dual NTHW44 FPs while some or all of the ports are configured for Y-protection. There is still up to 50 milliseconds of traffic loss during the migration. The significant difference between normal migration and migration while Y-protection is enabled is

- 1 having all of the service active ports already on one card, especially if LAPS is configured for the cards
- 2 controlling the sequence of turning on and off the lasers to facilitate loading software onto the standby card
- 3 moving traffic from the service active card over to the hot standby card
- 4 controlling the lasers to facilitate loading software onto the remaining standby card

## Card configuration for Y-protection

The rules to configure Y-protection on a pair of NTHW44 FPs are the same as configuring inter-card LAPS for the FPs, that is, adjacent slots, the first card in an even slot, and port pairs having the same numbers. To configure the software of Y-protection for a pair of FPs, see [Configuring Y-protection for dual FPs in a Multiservice Switch 15000 and Multiservice Switch 20000 nodes \(page 216\)](#).

## Hardware specifications of the Y-splitter cables

For the Y-splitter cable specifications, see the description of the 16-port OC-3/STM-1 POS and ATM FP in NN10600-120 *Nortel Multiservice Switch 15000/20000 Hardware Description*.

## Understanding hitless services

A service is hitless when the software that provides the service can run uninterrupted, even when the hardware providing the service fails. This is done by having a standby instance of the software running synchronized with the active instance of the software. Standby hardware is required as well.

This section describes the following topics about hitless services:

- [Types of services \(page 328\)](#)
- [Critical components and attributes \(page 333\)](#)

## Types of services

Nortel Multiservice Switch applications and features fall into three categories with respect to equipment protection:

- hot standby
- warm standby
- cold standby



Hot standby applications operate with the standby instance synchronized with the active instance of the software. Hot standby applications and features use equipment protection for electrical function processors (FP) and line and equipment protection for optical FPs to offer hitless services. During an equipment switchover, hot standby applications incur a minimal traffic interruption and established connections stay up. For electrical FPs, a service is considered hitless if the traffic interruption is less than 100 milliseconds. For optical FPs, a service is considered hitless if the traffic interruption is less than 50 milliseconds.

Warm standby applications operate with the standby instance provisioned but not synchronized with the active instance of the software. During an equipment switchover, warm standby applications incur a longer outage of service than hot standby applications, but not as long as cold standby applications. As well, all connections must be re-established.

Cold standby applications operate with a standby instance that is not synchronized with the active instance of the software. During an equipment switchover, cold standby applications incur longer outages than hot standby and warm standby applications and all connections must be reestablished. By definition, cold standby applications cannot offer hitless services.

Warm standby applications can co-exist with hot standby applications and instances on a logical processor (LP). Although you can create a logical processor type (LPT) that mixes cold standby features with hot standby or warm standby features, Nortel Networks does not recommend this action. A single cold standby application or feature in an LP changes all other applications and features to cold standby.

See the tables [Hot standby applications and features \(page 329\)](#) and [Warm standby applications and features \(page 330\)](#) for a list of hot and warm standby applications and features as they apply to hitless services.

**Attention:** Any application or feature that is not listed in these tables is a cold standby application or feature.

### Hot standby applications and features

| Application      | Feature          |
|------------------|------------------|
| atmBearerService | atmBearerService |
| (1 of 2)         |                  |



**Hot standby applications and features (continued)**

| Application                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                           | Feature                                                                               |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------|
| base                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  | aal1Ces<br>for the 4-port OC-3/STM-1Ch TDM/ CES FP (NTHW70)<br><br>aps<br><br>atmCore |
| atmNetworking                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                         | atmlisp<br><br>atmPnni<br><br>atmUni                                                  |
| aal1Ces                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                               | aal1Ces                                                                               |
| pvg                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   | vgsAtm<br><br>vgsAtmDc<br><br>vgsAtmG729<br><br>vgsIp<br><br>vgsIpG729                |
| <p><b>Attention:</b> Applications aal1Ces and pvg support hot equipment protection (HEP) and hitless software migration (HSM) for a 1 + 1 sparing configuration on the Multiservice Switch 15000 Media Gateway node. The HEP and HSM are only supported for voice services processor 2 (VSP2) (NTHW87), voice services processor 3 (VSP3) (NTHW84), or voice services processor 3 with optical TDM interface (VSP3-o) (NTHW77) FP cards, and 4-port OC-3/STM-1Ch TDM/CES FP cards. The 1 + 1 sparing configuration of VSP3-o FP cards requires the VSP3-o FP cards to be in adjacent slots where the lower slot number is an even number. Application pvg is only hitless when used in conjunction with application aal1Ces (but not vice versa).</p> |                                                                                       |
| (2 of 2)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                              |                                                                                       |

**Warm standby applications and features**

| Application | Feature                                                                                                                                                                                                                                                                                                                              |
|-------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| base        | aal1Ces<br>for the 4-port DS3Ch AAL1 CES FP (NTHR91), the 2-port STM-1e channelized CES/ATM/IMA FP (NTNQ91), and the 2-port STM-1 optical channelized CES/ATM/IMA FP (NTNQ96AA),<br><br>imaAtmForum<br>for the 2-port STM-1e channelized CES/ATM/IMA FP (NTNQ91) and the 2-port STM-1 optical channelized CES/ATM/IMA FP (NTNQ96AA). |
| (1 of 3)    |                                                                                                                                                                                                                                                                                                                                      |



**Warm standby applications and features (continued)**

| <b>Application</b> | <b>Feature</b>                                                                                                                                                                |
|--------------------|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| atmNetworking      | atmApi<br>dprsMcsEp<br>dprsMcsEpIntercept<br>porsApi<br>routingGateway                                                                                                        |
| callRedirection    | callRedirection                                                                                                                                                               |
| frameRelay         | frameRelayAtm<br>frameRelayAtmNiwf<br>frameRelayAtmIstdn<br><br>frameRelayNni<br>frameRelayUni<br>frameRelayUniPvcSvc<br>frf5EndPoint<br>frsVirtualFramer<br>frUnilpOptimized |
| huntGroupSystem    | huntGroupSystem                                                                                                                                                               |
| ip                 | ip<br>rfc2547bis                                                                                                                                                              |
| networking         | callServer<br>dprRouting<br>ipiFr                                                                                                                                             |
| (2 of 3)           |                                                                                                                                                                               |



**Warm standby applications and features (continued)**

| Application                                                     | Feature                                                                                                                                                                  |
|-----------------------------------------------------------------|--------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| ServiceTrace                                                    | frameRelayNniTrace<br>frameRelayUniTrace<br>atmUniTrace<br>atmlispTrace<br>atmPnniTrace<br>atmAiniTrace<br>frTraceRcvr<br>x25TraceRcvr<br>frAtmTraceRcvr<br>atmTraceRcvr |
| trunks                                                          | atmTrunks<br>porsTrunks                                                                                                                                                  |
| WanDte                                                          | AtmMpe<br>frameRelayDte                                                                                                                                                  |
|                                                                 | LocalMedia<br>ppp                                                                                                                                                        |
| <b>Attention:</b> LAN applications are considered warm standby. |                                                                                                                                                                          |
| (3 of 3)                                                        |                                                                                                                                                                          |

Hitless services minimize the interruption of cell forwarding only. During an FP switchover, all applications that were running on the FP can lose administrative data even if it is a hot standby or a warm standby application. Specifically, the following types of data are lost:

- unspooled statistics that resided on the failed FP, such as cell counts
- partial accounting records and any accounting records that reside in the memory of the FP before the FP switchover
- the OSI state (A service that is locked before the FP switchover becomes unlocked after the switchover.)

As well, hitless services do not guarantee that there are no service outages. See [Critical components and attributes \(page 333\)](#) for details.



### Critical components and attributes

Service outages can occur when you change the value of some critical attributes. Depending on the component and the critical attribute, the service outage can affect an entire shelf, a pair of FPs, a single ATM interface, a single ATM PVC or non-stable calls (calls in the process of being set up).

See the following tables for a list of critical components and attributes:

- [Shelf critical components and attributes \(page 333\)](#)
- [FP pair critical components and attributes \(page 333\)](#)
- [ATM interface critical components and attributes \(page 334\)](#)
- [ATM PVC critical components and attributes \(page 335\)](#)
- [Non-stable call critical components and attributes \(page 335\)](#)

### Shelf critical components and attributes

| Component                                                                                                                                                                                                     | Attribute                                 |
|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------------------|
| <i>Software (Sw)</i>                                                                                                                                                                                          | <i>avList</i> (see Note)                  |
| <i>LogicalProcessorType (Lpt)</i>                                                                                                                                                                             | <i>featureList</i> (see Note)             |
| <i>Card</i>                                                                                                                                                                                                   | <i>cardType</i> (see Note)                |
| <i>Module (Mod)</i>                                                                                                                                                                                           | all attributes except for <i>regionID</i> |
| <i>Routing DpnAddressPlan (Rtg Dpn)</i>                                                                                                                                                                       | <i>logicalNetworkNumber</i>               |
|                                                                                                                                                                                                               | <i>routingId</i>                          |
|                                                                                                                                                                                                               | <i>moduleId</i>                           |
|                                                                                                                                                                                                               | <i>porsTrunks</i>                         |
|                                                                                                                                                                                                               | <i>unackTrunks</i>                        |
| <b>Attention:</b> These attributes cause a service outage for the entire shelf if the software configuration of the control processor is changed such that the system cannot incrementally load new software. |                                           |
|                                                                                                                                                                                                               |                                           |

### FP pair critical components and attributes

| Component                         | Attribute                     |
|-----------------------------------|-------------------------------|
| <i>Software (Sw)</i>              | <i>avList</i> (see Note)      |
| <i>LogicalProcessorType (Lpt)</i> | <i>featureList</i> (see Note) |
| <i>Card</i>                       | <i>cardType</i> (see Note)    |
| <i>Lp Eng Arc Ov</i>              | all attributes                |
| <i>Lp Eng Arc Cqc Ov</i>          | all attributes                |
| (1 of 2)                          |                               |



**FP pair critical components and attributes (continued)**

| Component                                                                                                                                                                               | Attribute                   |
|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------|
| <i>Lp Eng Arc Apc Ov</i>                                                                                                                                                                | all attributes              |
| <i>Lp Eng Arc Aqm Ov</i>                                                                                                                                                                | all attributes              |
| <i>Lp Eng Arc Fcrc Ov</i>                                                                                                                                                               | all attributes              |
| <i>Lp Eng Arc Fcrc Pqc Ov</i>                                                                                                                                                           | all attributes              |
| <i>Lp Eng Fcrc Pqc Ov</i>                                                                                                                                                               | <i>ipRoutesPoolCapacity</i> |
| <b>Attention:</b> These attributes cause a service outage for the entire shelf if the LP software configuration is changed such that the system cannot incrementally load new software. |                             |
| (2 of 2)                                                                                                                                                                                |                             |

**ATM interface critical components and attributes**

| Component                   | Attribute                                                                                                   |
|-----------------------------|-------------------------------------------------------------------------------------------------------------|
| <i>Lp Sonet</i>             | <i>ifIndex</i>                                                                                              |
| <i>Lp Sonet Sts</i>         | <i>concatNumber</i>                                                                                         |
|                             | <i>ifIndex</i>                                                                                              |
| <i>Laps</i>                 | <i>workingLine</i>                                                                                          |
|                             | <i>protectionLine</i>                                                                                       |
|                             | <i>mimicAps</i>                                                                                             |
| <i>Laps Sts</i>             | <i>concatNumber</i>                                                                                         |
|                             | <i>ifIndex</i>                                                                                              |
| <i>AtmInterface (Atmlf)</i> | <i>interfaceName</i>                                                                                        |
|                             | <i>oamSegmentBoundary</i>                                                                                   |
|                             | <i>maxVpiBits</i>                                                                                           |
|                             | <i>minimumBandwidthGuarantee</i>                                                                            |
|                             | <i>txCellMemory</i>                                                                                         |
| <i>Atmlf Ca</i>             | all attributes except for <i>bandwidthPool</i>                                                              |
| <i>Atmlf Ca Ubr</i>         | all attributes except for <i>maxVpcs</i> , <i>maxVpts</i> , <i>maxVccs</i> , <i>maxCtd</i> , and <i>cdv</i> |
| <i>Atmlf Ca Cbr</i>         | all attributes except <i>maxCtd</i> and <i>cdv</i>                                                          |
| <i>Atmlf Ca RtVbr</i>       | all attributes except <i>maxCtd</i> and <i>cdv</i>                                                          |
| <i>Atmlf Ca NrtVbr</i>      | all attributes except <i>maxCtd</i> and <i>cdv</i>                                                          |
| <i>Atmlf ConnMap Ov</i>     | all attributes                                                                                              |
| (1 of 2)                    |                                                                                                             |



**ATM interface critical components and attributes (continued)**

| <b>Component</b>         | <b>Attribute</b>                         |
|--------------------------|------------------------------------------|
| <i>Atmlf Uni</i>         | <i>version</i>                           |
|                          | <i>side</i>                              |
|                          | <i>interfaceType</i>                     |
| <i>Atmlf Uni Ilmi</i>    | <i>vci</i>                               |
|                          | <i>operatingMode</i>                     |
| <i>Atmlf Uni Sig</i>     | <i>vci</i>                               |
| <i>Atmlf Uni Sig Vcd</i> | all attributes                           |
| <i>Atmlf Pnni Sig</i>    | <i>vci</i>                               |
| <i>Atmlf Pnni Rcc</i>    | <i>vci</i>                               |
|                          | <i>helloHoldDown</i>                     |
|                          | <i>helloInterval</i>                     |
|                          | <i>helloInactivityFactor</i>             |
| <i>Atmlf Ep</i>          | <i>minimumBandwidthGuarentee</i>         |
| <i>Atmlf Vpt Ca Ubr</i>  | all attributes except for <i>maxVccs</i> |
| (2 of 2)                 |                                          |

**ATM PVC critical components and attributes**

| <b>Component</b>        | <b>Attribute</b>           |
|-------------------------|----------------------------|
| <i>Atmlf Vcc Nrp</i>    | all attributes             |
| <i>Atmlf Vcc Vcd</i>    | <i>mCastConnectionType</i> |
| <i>Atmlf Vcc Vcd Tm</i> | all attributes             |
|                         |                            |

**Non-stable call critical components and attributes**

| <b>Component</b>         | <b>Attribute</b>         |
|--------------------------|--------------------------|
| <i>Artg Pnni</i>         | <i>nodeAddressPrefix</i> |
|                          | <i>domain</i>            |
| <i>Artg Pnni CfgNode</i> | <i>nodeId</i>            |
|                          | <i>peerGroupId</i>       |
|                          | <i>restrictTransit</i>   |
|                          |                          |



**IP critical components and attributes**

| <b>Component</b>               | <b>Attribute</b>              |
|--------------------------------|-------------------------------|
| <i>AtmMpe</i>                  | <i>ifIndex</i>                |
|                                | <i>encapType</i>              |
|                                | <i>linkToProtocolPort</i>     |
| <i>AtmMpe Ac</i>               | <i>AtmConnection</i>          |
|                                | <i>ipCos</i>                  |
| <i>La</i>                      | <i>ifIndex</i>                |
|                                | <i>linkToProtocolPort</i>     |
|                                | <i>enetConnection</i>         |
| <i>La Framer</i>               | <i>interfaceName</i>          |
| <i>Vr</i>                      | <i>virtualRouterProcessor</i> |
| <i>Vr Ip Static RouteEntry</i> | <i>staticRemoteRtePrefer</i>  |
| <i>Vr Pp</i>                   | <i>linkToMedia</i>            |
| <i>Vr Pp IpPort</i>            | <i>linkModel</i>              |
|                                | <i>mcastDomain</i>            |
|                                |                               |

**PVG critical components and attributes**

| <b>Component</b>           | <b>Attribute</b>                     |
|----------------------------|--------------------------------------|
| <i>Nsta</i>                | <i>linkToServer</i>                  |
|                            | <i>idlePattern</i>                   |
| <i>Nsta Vgs</i>            | <i>gatewayAtmAddress</i>             |
|                            | <i>hostName</i>                      |
| <i>Nsta Vgs BragS</i>      | <i>tdmLogLaw</i>                     |
|                            | <i>bufferSize</i>                    |
|                            | <i>packetDelayVariationTolerance</i> |
|                            | <i>signalingType</i>                 |
| <i>Nsta Vgs BragS Q921</i> | <i>dChanTimeslot</i>                 |
|                            | <i>side</i>                          |
| <i>Nsta Vgs h248</i>       | <i>mgMid</i>                         |
| <i>Nsta Vgs IpMConn</i>    | <i>ipAddress</i>                     |
|                            | <i>udpPortBase</i>                   |
| (1 of 2)                   |                                      |



**PVG critical components and attributes (continued)**

| Component               | Attribute                            |
|-------------------------|--------------------------------------|
| <i>Nsta Vgs Iua</i>     | <i>asStatus</i>                      |
| <i>Nsta Vgs PktProf</i> | <i>bufferSize</i>                    |
|                         | <i>packetDelayVariationTolerance</i> |
| (2 of 2)                |                                      |

**Hitless activation of critical attributes**

Hitless activation of critical attributes is available on all FPs in a 1:1 and 1+1 sparing configuration with equipment protection enabled.

For more information on how to configure this capability, see [Hitless activation of critical attributes configuration \(page 223\)](#).

**Conditions for hitless activation of critical attributes**

Hitless activation of critical attributes is possible only if all of the following conditions are met. You must ensure that:

- the switch type is a Nortel Multiservice Switch 15000 or Multiservice Switch 20000.
- the *Prov ActivationMode* component is provisioned and the *Prov ActivationMode hitlessActivation* attribute is set to enabled.
- within a provisioning session, only the attributes from the table, [Critical attributes for hitless activation \(page 339\)](#) have been modified. You cannot mix critical attributes with non-critical attributes.
- the attributes being changed support the hitless critical attribute activation. See the table, [Critical attributes for hitless activation \(page 339\)](#).
- the provisioning changes are not causing a control processor (CP) reset. The provisioning changes impact the functional processors (FPs) only.
- all the FPs that have changed critical attributes are either in a 1:1 or 1+1 sparing configuration and support equipment protection.
- there are no LPs added or deleted.
- there are no LP-card mapping changes.
- there are no shelf card types changes.
- there are no software LPT changes.

You can change any number of critical attributes within a single provisioning session. There is no limit to the number of critical attributes changed, as long as all the conditions for hitless activation of critical attributes are met.



### Failure modes for hitless activation of critical attributes

If the hitless activation of critical attributes fails, the following failure modes are possible:

- abort. The operation aborts if the standby FP fails when being delivered the new provisioning information.

---

**Attention:** If the standby FP cannot synchronize all the connections, it will retry for ten minutes before the hitless activation of critical attributes pauses. Please be patient.

---

- pause. The operation pauses when the standby FP cannot synchronize all connections. You can either continue or abort the pause failure mode. If you decide to continue the operation (cont -force pr), you can cause loss of traffic. If you decide to abort (stop pr) the operation, the FP reverts back to the provisioning view before you started the hitless activation of critical attributes.

### Supported critical attributes for hitless activation

The table [Critical attributes for hitless activation \(page 339\)](#) lists the critical attributes that support hitless activation.



**Critical attributes for hitless activation**

| Component                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                  | Attribute                                                                               | Description                                                                                                                                                                                                                                                                                                                           | Support of hitless activation |
|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-----------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------|
| <i>Atmlf CA</i>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                            | all attributes except <i>bandwidthPool</i> (see Attention)                              | The <i>Atmlf CA</i> component defines: <ul style="list-style-type: none"> <li>the number of connections allowed on the interface.</li> <li>the virtual path identifier and virtual channel identifier (VPI/VCI) values available for dynamic assignment to switched virtual circuits and switched virtual paths (SVC/SVP).</li> </ul> | full                          |
| <p><b>Attention:</b> The <i>maxVpcs</i> and <i>maxVccs</i> attributes are used to configure various tables that hold connection data. If one of these attributes is changed to a value smaller than the current number of established connections in that table, a number of connections is dropped after the hitless activation of critical attributes is complete. ATM must ensure that these connections get deleted locally and that the post-functional processor (FP) switchover audit correctly removes these connections on the peer FP cards.</p> |                                                                                         |                                                                                                                                                                                                                                                                                                                                       |                               |
| <i>Atmlf CA Cbr</i><br><i>Atmlf CA RtVbr</i><br><i>Atmlf CA NrtVbr</i>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                     | all attributes except <i>cdv</i> and <i>maxCtd</i>                                      | The ATM service categories define the service that an ATM connection requests or provides.                                                                                                                                                                                                                                            | full                          |
| <i>Atmlf ConnMap</i>                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                       | <i>numVccsForVpiZero</i><br><i>numVccsPerNonZeroVpi</i><br><i>numNonZeroVpisForVccs</i> | The <i>Atmlf ConnMap</i> component is used to view the VCC space supported by the ATM interface.                                                                                                                                                                                                                                      | increase only (see Attention) |
| <p><b>Attention:</b> If you reduce the value of one of these attributes, you can create an orphan connection because ATM networking allocates VPI/VCI in a first-in, first-out (FIFO) manner. The VPI/VCI can be allocated by the far-end network element in the context of SVCs over private network-to-network interface (PNNI).</p>                                                                                                                                                                                                                     |                                                                                         |                                                                                                                                                                                                                                                                                                                                       |                               |
| (1 of 2)                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                                   |                                                                                         |                                                                                                                                                                                                                                                                                                                                       |                               |



**Critical attributes for hitless activation (continued)**

| Component                                            | Attribute                                                                                                                                                                                                     | Description                                                                                                                                                                                                                           | Support of hitless activation |
|------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|---------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|-------------------------------|
| <i>Atmlf Uni Sig Vcd</i>                             | <i>trafficDescType</i><br><i>trafficDescParm</i><br><i>atmServiceCategory</i><br><i>trafficShaping</i><br><i>unshapedTransmitQueueing</i><br><i>usageParameterControl</i><br><i>qosClass</i><br><i>weight</i> | The <i>Atmlf Uni Sig Vcd</i> component contains the provisionable traffic parameters for a control channel.                                                                                                                           | full                          |
| <i>Lp Eng Arc Ov</i>                                 | <i>protectedConnectionPoolCapacity</i>                                                                                                                                                                        | The <i>Lp Eng Arc Ov</i> component is used to configure the usage of ATM-specific resources on an LP running ATM services.                                                                                                            | increase only (see Attention) |
|                                                      | <b>Attention:</b> If you decrease the value the <i>protectedConnectionPoolCapacity</i> attribute, some connections will be terminated.                                                                        |                                                                                                                                                                                                                                       |                               |
|                                                      | <i>txCellMemoryAllocation</i><br><i>rxCellMemoryAllocation</i>                                                                                                                                                |                                                                                                                                                                                                                                       | full                          |
| <i>Lp Eng Arc Apc Ov</i><br><i>Lp Eng Arc Aqm Ov</i> | <i>connectionPoolCapacity</i><br><i>bufferLimitPerEP</i><br><i>highPriorityEpdOffset</i><br><i>lowPriorityEpdOffset</i><br><i>portCongestionPolicy</i>                                                        | The <i>Lp Eng Arc Apc Ov</i> and <i>Lp Eng Arc Aqm Ov</i> components are used to configure the usage of ATM-specific resources for a specific access protocol control (APC) or ATM queue manager (AQM) on an LP running ATM services. | full                          |
| (2 of 2)                                             |                                                                                                                                                                                                               |                                                                                                                                                                                                                                       |                               |



---

## Procedure conventions

---

This document uses the following procedure conventions:

- You can enter commands using full component and attribute names, or you can abbreviate them. The commands used in the procedures contain the full component and attribute names in the first instance. In the second instance, the component and attribute names are abbreviated. For more information on abbreviating component and attribute names, see NN10600-060 *Nortel Multiservice Switch 7400/15000/20000 Component Reference*. All component and attribute names are formatted in italics.
- The introduction of every procedure states whether you must perform the procedure in operational mode or provisioning mode. For more information on these modes, see [Operational mode \(page 341\)](#) or [Provisioning mode \(page 342\)](#).
- When you complete a procedure, you can verify your changes and then activate them as the new node configuration. For more information on completing configuration changes and exiting provisioning mode, see [Activating configuration changes \(page 342\)](#).

### Operational mode

Procedures contained within this document can either be performed in operational mode or provisioning mode. When you initially log into a node, you are in operational mode. Nortel Multiservice Switch systems use the following command prompt when you are in operational mode:

```
#>
```

where:

# is the current command number

In operational mode, you work with operational components and attributes. In operational mode, you can

- list operational components and display operational attributes to determine the current operating parameters for the node
- control the state of parts of the node by locking and unlocking components



- set certain operational attributes and enter commands to perform diagnostic tests

## Provisioning mode

To change from operational mode to provisioning mode, type the following command at the operator prompt:

```
start Prov
```

Only one user can be in provisioning mode at a time. Nortel Multiservice Switch systems use the following command prompt whenever you are in provisioning mode:

```
PROV #>
```

where:

# is the current command number

In provisioning mode, you work with the provisionable components and attributes that contain the current and future configurations of the node. You can add and delete components, and display and set provisionable attributes. For information on completing the configuration changes, exiting provisioning mode, and returning to operational mode see [Activating configuration changes \(page 342\)](#).

For information on operational and provisionable attributes, see NN10600-060 *Nortel Multiservice Switch 7400/15000/20000 Component Reference*.

## Activating configuration changes

Several procedures in this document ask that you complete the configuration changes. When you complete the configuration changes, you are activating the configuration changes, confirming that you want to activate them, and saving the changes. You are instructed to complete the configuration changes only at the end of procedures that you perform in provisioning mode.



### CAUTION

#### Activating a provisioning view can affect service

Activating a provisioning view can result in a CP reload or restart, causing all services on the node to fail. See NN10600-050 *Nortel Multiservice Switch 7400/15000/20000 Command Reference*, for more information.



**CAUTION**

**Risk of service failure**

When you activate the provisioning changes (see [step 3](#)), you have 20 minutes to confirm these changes. If you do not confirm these changes within 20 minutes, the shelf resets and all services on the node fail.

- 1 Verify that the provisioning changes you have made are acceptable.

**check Prov**

Correct any errors and then verify the provisioning changes again.

- 2 If you want to store the provisioning changes in a file, save the provisioning view.

**save -f(<filename>) Prov**

- 3 If you want these changes as well as other changes made in the edit view to take effect immediately, activate, confirm, and commit the provisioning changes.

**activate Prov**

**confirm Prov**

**commit Prov**

- 4 End the provisioning session.

**end Prov**



Nortel Multiservice Switch 7400/15000/20000  
**Common Configuration Procedures**

Copyright © 2006 Nortel.  
All Rights Reserved.

Publication: NN10600-550  
Document status: Standard  
Document issue: 7.2S2  
Document date: April 2006  
Product release: PCR7.2 and up  
Job function: Installation and Commissioning  
Type: NTP  
Language type: U.S. English

NORTEL, the globemark design, and the NORTEL corporate logo are trademarks of Nortel.

