



Integrated Recorded Announcer Fundamentals Avaya Communication Server 1000

7.5
NN43001-560, 05.03
September 2011

Notice

While reasonable efforts have been made to ensure that the information in this document is complete and accurate at the time of printing, Avaya assumes no liability for any errors. Avaya reserves the right to make changes and corrections to the information in this document without the obligation to notify any person or organization of such changes.

Documentation disclaimer

"Documentation" means information published by Avaya in varying mediums which may include product information, operating instructions and performance specifications that Avaya generally makes available to users of its products. Documentation does not include marketing materials. Avaya shall not be responsible for any modifications, additions, or deletions to the original published version of documentation unless such modifications, additions, or deletions were performed by Avaya. End User agrees to indemnify and hold harmless Avaya, Avaya's agents, servants and employees against all claims, lawsuits, demands and judgments arising out of, or in connection with, subsequent modifications, additions or deletions to this documentation, to the extent made by End User.

Link disclaimer

Avaya is not responsible for the contents or reliability of any linked Web sites referenced within this site or documentation provided by Avaya. Avaya is not responsible for the accuracy of any information, statement or content provided on these sites and does not necessarily endorse the products, services, or information described or offered within them. Avaya does not guarantee that these links will work all the time and has no control over the availability of the linked pages.

Warranty

Avaya provides a limited warranty on its Hardware and Software ("Product(s)"). Refer to your sales agreement to establish the terms of the limited warranty. In addition, Avaya's standard warranty language, as well as information regarding support for this Product while under warranty is available to Avaya customers and other parties through the Avaya Support Web site: <http://support.avaya.com>. Please note that if you acquired the Product(s) from an authorized Avaya reseller outside of the United States and Canada, the warranty is provided to you by said Avaya reseller and not by Avaya.

Licenses

THE SOFTWARE LICENSE TERMS AVAILABLE ON THE AVAYA WEBSITE, [HTTP://SUPPORT.AVAYA.COM/LICENSEINFO/](http://support.avaya.com/licenseinfo/) ARE APPLICABLE TO ANYONE WHO DOWNLOADS, USES AND/OR INSTALLS AVAYA SOFTWARE, PURCHASED FROM AVAYA INC., ANY AVAYA AFFILIATE, OR AN AUTHORIZED AVAYA RESELLER (AS APPLICABLE) UNDER A COMMERCIAL AGREEMENT WITH AVAYA OR AN AUTHORIZED AVAYA RESELLER. UNLESS OTHERWISE AGREED TO BY AVAYA IN WRITING, AVAYA DOES NOT EXTEND THIS LICENSE IF THE SOFTWARE WAS OBTAINED FROM ANYONE OTHER THAN AVAYA, AN AVAYA AFFILIATE OR AN AVAYA AUTHORIZED RESELLER; AVAYA RESERVES THE RIGHT TO TAKE LEGAL ACTION AGAINST YOU AND ANYONE ELSE USING OR SELLING THE SOFTWARE WITHOUT A LICENSE. BY INSTALLING, DOWNLOADING OR USING THE SOFTWARE, OR AUTHORIZING OTHERS TO DO SO, YOU, ON BEHALF OF YOURSELF AND THE ENTITY FOR WHOM YOU ARE INSTALLING, DOWNLOADING OR USING THE SOFTWARE (HEREINAFTER REFERRED TO INTERCHANGEABLY AS "YOU" AND "END USER"), AGREE TO THESE TERMS AND CONDITIONS AND CREATE A BINDING CONTRACT BETWEEN YOU AND AVAYA INC. OR THE APPLICABLE AVAYA AFFILIATE ("AVAYA").

Copyright

Except where expressly stated otherwise, no use should be made of materials on this site, the Documentation, Software, or Hardware provided by Avaya. All content on this site, the documentation and the Product provided by Avaya including the selection, arrangement and design of the content is owned either by Avaya or its licensors and is protected by copyright and other intellectual property laws including the sui generis rights relating to the protection of databases. You may not modify, copy, reproduce, republish, upload, post, transmit or distribute in any way any content, in whole or in part, including any code and software unless expressly authorized by Avaya. Unauthorized reproduction, transmission, dissemination, storage, and or use without the express written consent of Avaya can be a criminal, as well as a civil offense under the applicable law.

Third-party components

Certain software programs or portions thereof included in the Product may contain software distributed under third party agreements ("Third Party Components"), which may contain terms that expand or limit rights to use certain portions of the Product ("Third Party Terms"). Information regarding distributed Linux OS source code (for those Products that have distributed the Linux OS source code), and identifying the copyright holders of the Third Party Components and the Third Party Terms that apply to them is available on the Avaya Support Web site: <http://support.avaya.com/Copyright>.

Preventing Toll Fraud

"Toll fraud" is the unauthorized use of your telecommunications system by an unauthorized party (for example, a person who is not a corporate employee, agent, subcontractor, or is not working on your company's behalf). Be aware that there can be a risk of Toll Fraud associated with your system and that, if Toll Fraud occurs, it can result in substantial additional charges for your telecommunications services.

Avaya Toll Fraud Intervention

If you suspect that you are being victimized by Toll Fraud and you need technical assistance or support, call Technical Service Center Toll Fraud Intervention Hotline at +1-800-643-2353 for the United States and Canada. For additional support telephone numbers, see the Avaya Support Web site: <http://support.avaya.com>. Suspected security vulnerabilities with Avaya products should be reported to Avaya by sending mail to: securityalerts@avaya.com.

Trademarks

The trademarks, logos and service marks ("Marks") displayed in this site, the Documentation and Product(s) provided by Avaya are the registered or unregistered Marks of Avaya, its affiliates, or other third parties. Users are not permitted to use such Marks without prior written consent from Avaya or such third party which may own the Mark. Nothing contained in this site, the Documentation and Product(s) should be construed as granting, by implication, estoppel, or otherwise, any license or right in and to the Marks without the express written permission of Avaya or the applicable third party.

Avaya is a registered trademark of Avaya Inc.

All non-Avaya trademarks are the property of their respective owners, and "Linux" is a registered trademark of Linus Torvalds.

Downloading Documentation

For the most current versions of Documentation, see the Avaya Support Web site: <http://support.avaya.com>.

Contact Avaya Support

Avaya provides a telephone number for you to use to report problems or to ask questions about your Product. The support telephone number is 1-800-242-2121 in the United States. For additional support telephone numbers, see the Avaya Web site: <http://support.avaya.com>.

Contents

Chapter 1: New in this release	9
Features.....	9
Revision history.....	9
Chapter 2: Customer service	11
Navigation.....	11
Getting technical documentation.....	11
Getting product training.....	11
Getting help from a distributor or reseller.....	11
Getting technical support from the Avaya Web site.....	12
Chapter 3: Introduction	13
Subject.....	13
Applicable systems.....	13
Intended audience.....	13
Terminology conventions.....	14
Chapter 4: Description	15
Contents.....	15
Introduction.....	16
User interfaces.....	16
Features.....	18
Integrated Recorded Announcer password security.....	23
Integrated Recorded Announcer card technical description.....	24
Media Card.....	29
Integrated Recorded Announcer card channels.....	34
Supported applications.....	35
Integrated Recorded Announcer card design characteristics.....	35
BIOS initialization.....	35
Software security.....	36
Security overview.....	36
Security device.....	36
Security ID.....	37
Keycode.....	37
Chapter 5: Installation and configuration	39
Contents.....	39
Integrated Recorded Announcer card quick installation.....	40
System configuration.....	44
Configuring RAN routes.....	44
Music-On-Hold activation and route configuration.....	48
Configuring the DID route for the TUI.....	49
Configuring the Integrated Recorded Announcer trunks.....	50
Configuring Ethernet for Time and Date Synchronization.....	51
Limited Access Password.....	52
Basic Integrated Recorded Announcer card installation.....	52
Installation overview.....	52
Installing an Integrated Recorded Announcer card.....	52

Installation preparation.....	52
Integrated Recorded Announcer card installation in an IPE shelf.....	53
Connecting a terminal to the Integrated Recorded Announcer card in the IPE module.....	57
Connecting an external audio device.....	58
LAN access installation and setup.....	59
FTP downloads and uploads.....	61
Performing upgrades and replacements.....	63
PC Card backups.....	63
Restoring configuration.....	64
RAN upgrades.....	64
Recording announcements remotely for use on the Integrated Recorded Announcer card.....	66
Foreign language prompt.....	67
Chapter 6: Engineering guidelines.....	69
Contents.....	69
Introduction.....	69
Software requirements.....	70
For users with RAN Broadcast.....	70
For users without RAN Broadcast.....	71
Integrated Recorded Announcer requirements.....	72
Integrated Recorded Announcer card channel capacity options.....	72
Integrated Recorded Announcer card listener capacity options.....	73
Supported RAN modes.....	73
Voice storage capacity.....	74
Power and ground requirements.....	74
External equipment requirements.....	75
Maintenance terminal requirements.....	75
Telephone for OAM access.....	76
External analog sources.....	76
Integrated Recorded Announcer card hardware list.....	77
Ethernet/LAN requirements.....	78
Summary of LAN installation information.....	81
Testing LAN configuration.....	81
Engineering Integrated Recorded Announcer.....	82
Example 1:.....	83
Example 2:.....	83
Example 3:.....	83
Example 4:.....	84
Example 5:.....	85
Example 6:.....	85
Chapter 7: Integrated Recorded Announcer Browser User Interface.....	87
Contents.....	87
Introduction.....	87
Accessing the BUI.....	88
Logging in to the BUI.....	89
Navigating the BUI.....	89
Administration menu.....	90
Pack Administration menu.....	99

Pack Information menu.....	107
File System.....	110
Pack User menu.....	116
Support.....	119
Resetting the BUI.....	121
Logging out of the BUI.....	122
Help on the BUI.....	122
Chapter 8: Text-based User Interface.....	123
Contents.....	123
Introduction.....	124
General procedure for configuring Integrated Recorded Announcer.....	125
Configuring the VT-100 type terminal.....	126
Login window.....	127
Status window.....	128
Main Menu.....	129
Administration menu.....	130
The Announcement Configuration menu.....	131
Convert Announcement File.....	147
Operational Statistics.....	149
Backup Configuration.....	150
Run Batch File.....	151
Restore Configuration.....	152
Pack Administration menu.....	153
File Commands menu.....	155
Delete File.....	157
Rename File.....	158
Move File.....	160
Keycode Entry.....	161
Software Upgrade.....	162
System Information.....	163
Configuration Variables menu.....	164
View Configuration Variables.....	165
Edit Configuration Variables.....	166
Ethernet Configuration.....	168
Time and Date Configuration menu.....	169
Local Time and Date.....	170
System Time and Date Synchronization.....	171
Maintenance and Diagnostics menu.....	173
User Administration menu.....	174
Add/Edit User.....	175
View Users.....	177
Delete User.....	177
Integrated Recorded Announcer card OAM command set.....	178
OAM command summary.....	179
OAM commands.....	182
Announcement commands.....	185
Calendar commands.....	186

Descriptor commands.....	188
Add a descriptor.....	188
Remove a descriptor.....	188
Load descriptors from a file.....	188
Save current descriptors to a file.....	189
Clear current descriptors.....	189
User commands.....	189
Add a user.....	189
Remove a user.....	190
File commands.....	190
List Files.....	190
Copy File.....	190
Move File.....	191
Delete File.....	191
Rename File.....	191
Backup configuration.....	192
Restore configuration.....	192
Software upgrade.....	192
Run Batch File.....	192
Make a directory.....	193
Remove a directory.....	193
Erase a directory.....	193
Copy royalty-free music to the C: drive.....	193
Copy TUI voice prompts to a directory.....	194
Miscellaneous commands.....	194
Set Time and Date.....	194
Set Time of Day.....	194
Set the date.....	194
Configure System Time and Date synchronization.....	195
Display Day and Time.....	195
Show Pack Status.....	195
Show Statistics.....	195
Save Statistics.....	196
Clear Statistics.....	196
Cold reset.....	196
Logoff.....	196
Integrated Recorded Announcer batch file support.....	196
Restrictions.....	197
Batch file example.....	197
Setting up emergency announcements quickly.....	197
Chapter 9: Telephone User Interface.....	199
Contents.....	199
Introduction.....	199
Description.....	200
Restrictions on TUI access.....	201
Using the TUI.....	201
Login.....	201

Navigating the Main Menu.....	202
Recording an announcement.....	202
Assigning an announcement.....	203
Retrieving channel information.....	204
Example of using the TUI.....	205
Voice prompts.....	206
TUI flowcharts.....	208
Login flowchart.....	208
Record menu.....	211
Assignment Menu.....	213
Channel Information menu.....	215
Delete Menu.....	216
Chapter 10: Maintenance.....	217
Contents.....	217
Introduction.....	217
Maintenance overview.....	217
Diagnostic tools.....	218
LED indicators.....	218
Display codes.....	219
Overlay commands.....	219
Integrated Recorded Announcer fault isolation and correction.....	220
Self-test sequence.....	221
Integrated Recorded Announcer fault isolation using the menu system.....	222
Card replacement.....	223
Appendix A: Sound recording, codes, and interfaces.....	225
Contents.....	225
Introduction.....	225
Sound recording configuration.....	225
Integrated Recorded Announcer card hexadecimal codes.....	226
Integrated Recorded Announcer card interface connectors.....	227
Maintenance serial port.....	227
Analog port and pinouts.....	229
I/O panel to modem cable.....	229
Modem setup.....	230
Appendix B: Environmental and electrical regulatory data.....	231
Contents.....	231
Introduction.....	231
Environmental specifications.....	231
Electrical regulatory standards.....	232
Electromagnetic Compatibility (EMC).....	233
Appendix C: NT8D37 cable connections.....	235
Contents.....	235
NT8D37 cable connections.....	235
Tools list.....	237
NT8D81BA cable removal procedure.....	237
NT8D81BA cable installation procedure.....	237
Glossary.....	239

Chapter 1: New in this release

This section describes what's new in this document for Avaya Communication Server 1000 Release 7.5.

Features

There are no updates to the feature descriptions in this document.

Revision history

September 2011	Standard 05.03. This document is up-issued to support the removal of content for outdated features, hardware, and system types.
November 2010	Standard 05.02. This document is up-issued to support Avaya Communication Server 1000 Release 7.5.
June 2010	Standard 04.01. This document is up-issued to support Avaya Communication Server 1000 Release 7.0.
May 2009	Standard 03.01. This document is up-issued to support Communication Server 1000 Release 6.0.
March 2009	Standard 02.02. This document is up-issued to replace the content in section Locating the card slot and Table 15.
December 2007	Standard 02.01. This document is up-issued to support Communication Server 1000 Release 5.5
May 2007	Standard 01.01. This document is issued to support CS 1000 Release 5.0 This document contains information previously contained in the following legacy document, now retired: Integrated Recorded Announcer (553-3001-360). No new content has been added for Communication Server 1000 Release 5.0. All references to Communication Server 1000 Release 4.5 are applicable to Communication Server 1000 Release 5.0.
December 2006	Standard 5.00. This document is up-issued to reflect changes in content:

New in this release

- Explanation of TRK041 messages in Maintenance.
 - IP method added to Time Date Synchronization.
- September 2005 Standard 4.00. This document is up-issued following removal of regulatory data.
- August 2005 Standard 3.00. This document is up-issued to support Communication Server 1000 Release 4.5.
- September 2004 Standard 2.00. This document is up-issued for Communication Server 1000 Release 4.0. Prior to CS 1000 Release 4.0, the title of this document was *Meridian Integrated RAN: Description, Installation, and Operation* (553-3001-112).
- October 2003 Standard 1.00. This document is new for Succession 3.0. It was created to support a restructuring of the Documentation Library. This document contains information previously contained in the following legacy document, now retired: *Meridian Integrated RAN: Description, Installation, and Operation* (553-3001-112).

Chapter 2: Customer service

Visit the Avaya Web site to access the complete range of services and support that Avaya provides. Go to www.avaya.com or go to one of the pages listed in the following sections.

Navigation

- [Getting technical documentation](#) on page 11
- [Getting product training](#) on page 11
- [Getting help from a distributor or reseller](#) on page 11
- [Getting technical support from the Avaya Web site](#) on page 12

Getting technical documentation

To download and print selected technical publications and release notes directly from the Internet, go to www.avaya.com/support.

Getting product training

Ongoing product training is available. For more information or to register, go to www.avaya.com/support. From this Web site, locate the Training link on the left-hand navigation pane.

Getting help from a distributor or reseller

If you purchased a service contract for your Avaya product from a distributor or authorized reseller, contact the technical support staff for that distributor or reseller for assistance.

Getting technical support from the Avaya Web site

The easiest and most effective way to get technical support for Avaya products is from the Avaya Technical Support Web site at www.avaya.com/support.

Chapter 3: Introduction

This chapter provides an overview of how you can control unauthorized access and provide security for the system. It describes the reason for implementing system security and provides recommendations for preventing abuse and damage to the telecommunications facilities.

This document is a global document. Contact your system supplier or your Avaya representative to verify that the hardware and software described are supported in your area.

Subject

This document contains information about systems, components, and features that are compatible with Avaya Communication Server 1000 (Avaya CS 1000) software. For more information on legacy products and releases, click the Documentation link under Support on the Avaya home page: www.avaya.com.

This document describes the implementation of system-wide security features.

Applicable systems

This document applies to the following systems:

- Avaya Communication Server 1000M Single Group (CS 1000M SG)
- Avaya Communication Server 1000M Multi Group (CS 1000M MG)
- Avaya Communication Server 1000E (CS 1000E)

Intended audience

This document is intended for administrators responsible for configuring security features.

Terminology conventions

In this document, the following systems are referred to generically as "system":

- Communication Server 1000M (CS 1000M)
- Communication Server 1000E (CS 1000E)
- Meridian 1

The following systems are referred to generically as "Large System":

- Communication Server 1000M Single Group (CS 1000M SG)
- Communication Server 1000M Multi Group (CS 1000M MG)
- Meridian 1 PBX 61C CP PIV
- Meridian 1 PBX 81C CP PIV

Chapter 4: Description

Contents

This section contains information on the following topics:

[Introduction](#) on page 16

[Integrated Recorded Announcer card design characteristics](#) on page 35

[Integrated Recorded Announcer card channels](#) on page 34

[User interfaces](#) on page 16

[Browser User Interface](#) on page 16

[Text-based User Interface](#) on page 16

[Telephone User Interface](#) on page 17

[User interface multiple-access restrictions](#) on page 18

[Features](#) on page 18

[Calendar assignment feature](#) on page 18

[System time and date synchronization](#) on page 21

[Music-On-Hold option](#) on page 22

[Integrated Recorded Announcer password security](#) on page 23

[Integrated Recorded Announcer card technical description](#) on page 24

[Hardware architecture](#) on page 24

[Faceplate connectors and indicators](#) on page 25

[Integrated Recorded Announcer 50-pin I/O Adaptor \(Audio-adaptor\)](#) on page 27

[CE-MUX Interface](#) on page 28

[Integrated Recorded Announcer card reset and self-test functions](#) on page 29

[Software security](#) on page 36

Introduction

This chapter describes the Avaya Integrated Recorded Announcer, both at a system and card level. It describes the application functions, specifications, applications, and operation.

User interfaces

Browser User Interface

Integrated Recorded Announcer incorporates a standard Browser User Interface (BUI). The Integrated Recorded Announcer BUI is a web server embedded in the Integrated Recorded Announcer card. With the Integrated Recorded Announcer BUI, users can access the Integrated Recorded Announcer card through the LAN, using a standard internet browser. All installation and administration can be performed through the browser. The BUI provides OA&M windows similar to the Text-based User Interface.

The BUI applies to Integrated Recorded Announcer card configured with a valid IP address and connected to a LAN through an Ethernet adaptor. Alternatively, once the IP address has been configured, the BUI can be accessed by direct connection to the Integrated Recorded Announcer card, using a cross-over cable. For equipment and configuration information regarding the Integrated Recorded Announcer BUI, refer to [LAN access installation and setup](#) on page 59.



Note:

The web browser used must support HTML frames.

Refer to [Integrated Recorded Announcer Browser User Interface](#) on page 87 for more information on the BUI.

Text-based User Interface

The Text-based User Interface provides menus and commands so that all necessary Integrated Recorded Announcer OA&M functions can be performed. The software for this is part of the Integrated Recorded Announcer-specific OA&M tool running under VxWorks™. VxWorks software is independent of system software.

There are two ways to use the Text-based User Interface to access all commands and options:

- use the menu system
- enter commands on the command line

To use the Integrated Recorded Announcer Text-based User Interface, access the Integrated Recorded Announcer card through a VT-100 type terminal. The Integrated Recorded Announcer card supports a serial connection between the terminal and the card.

The Integrated Recorded Announcer card also supports Telnet access to the Text-based User Interface over a LAN. The serial interface takes precedence over the Telnet interface. If a user has logged in through the serial interface, no-one can log in through Telnet. If a user has logged in through Telnet, another user can remove the Telnet user by logging in through the serial interface.

 **Note:**

Avaya recommends HyperTerminal™ for PC-based Telnet access.

Refer to [Text-based User Interface](#) on page 123 for more information on the Text-based User Interface.

Telephone User Interface

A Telephone User Interface (TUI) within the Integrated Recorded Announcer application allows the application to be accessed from any telephone. The DTMF telephone can be either internal or external to the system. The TUI uses a series of simple voice menus and prompts for quick modification of announcements and other simple tasks.

 **Note:**

Extensive changes must be handled through the Text-based User Interface or the Browser User Interface (BUI).

The following tasks can be performed through the TUI:

- record new announcements
- play announcements
- assign and unassign announcements to Integrated Recorded Announcer ports
- access the Integrated Recorded Announcer card security ID

The following tasks cannot be performed through the TUI:

- set the Integrated Recorded Announcer card clock
- assign time-of-day restrictions to announcements
- access system configuration functions
- change passwords

The TUI allows a user to log in and issue specific commands using the dialpad of a digital telephone or any standard DTMF telephone. For security, the login requires a valid user name and password, which the administrator supplies. The Integrated Recorded Announcer card does not identify itself until a valid user name and password have been entered.

The TUI reduces the Integrated Recorded Announcer one-to-one ports available for RAN or music from eight to seven. Because there is no messaging between Integrated Recorded Announcer cards, port 7 must be reserved for the TUI on each Integrated Recorded Announcer card that requires this interface. If an Integrated Recorded Announcer card does not require the TUI, all eight ports on the card are available for RAN or music.

Refer to [Telephone User Interface](#) on page 199 for more information on the TUI.

User interface multiple-access restrictions

Multiple users can simultaneously access an Integrated Recorded Announcer card. However, there are restrictions under which simultaneous access can occur. [Table 1: User interface multiple-access restrictions](#) on page 18 shows the various situations in which multiple access can occur.

Table 1: User interface multiple-access restrictions

A user has logged in through the...	Can more than one user simultaneously log in through the... ?			
	Text UI	TUI	BUI	FTP
Text-based User Interface (Text UI)	No	Yes	Yes	Yes
Telephone User Interface (TUI)	Yes	No	Yes	Yes
Browser User Interface (BUI)	Yes	Yes	Yes	Yes
File Transfer Protocol (FTP)	Yes	Yes	Yes	No

Features

Calendar assignment feature

Integrated Recorded Announcer software supports the Calendar assignments used in scheduling announcements. The assignments are made on a daily and monthly basis, regardless of year, using a 366-day calendar.

Calendar assignments

When a Calendar assignment is created, it is assigned a 'weighting' based on how specific the assignment is. Assignments are sorted in the Calendar list according to this weighting. The more specific assignments appear at the top of the list while the least specific assignments appear at the end. Integrated Recorded Announcer searches the Calendar list when making channel assignments. The first entry in the list that matches the current day, time and channel

will be the correct choice. If a match cannot be found in the Calendar list, the search reverts to the assignment lists.

All Calendar assignments consist of the following components:

Channel entry - can be a single channel (for example, 6); a range of channels (for example, 2 – 4); a combination (for example, 0, 2 – 4, 7); or a wildcard, "*" (asterisk), to denote all channels.

 **Note:**

When a wildcard is used, it affects only the channels to which the current user has access. These are the channels that are assigned to the user's channel group.

- Time entry - can be a single time (for example, 9:00); a range of times, (for example, 9:00 – 10:15); or a wildcard, "*" (asterisk), to denote the entire day. A wildcard can also be entered instead of the minutes (for example, 9:*) to indicate the entire hour.

[Table 2: Time entry examples - sorted from most specific to least specific](#) on page 19 provides examples of time entries. The entries are sorted in order of most specific to least specific and indicate the order in which the entries would appear in the Calendar list.

Table 2: Time entry examples - sorted from most specific to least specific

Time entry	Comment
9:00 – 9:30	Range of times (no wildcards allowed)
	 Note: The range '10:00-16:30' is more specific than '10:*' due to the use of the wildcard.
9:*	Entire hour (9:00 to 9:59)
9:00	9:00 until the end of the day (9:00 to 23:59)
* (asterisk)	Entire day (0:00 to 23:59)

- Date entry - can be a single date (for example, 20/2); a range of dates, (for example, 20/2 – 25/2); a single day (for example, MON); or a range of days (for example, MON – WED). A wildcard, "*" (asterisk), can be used instead of the day or the month (for example, 25/* would denote the 25th of each month, and */12 would denote every day in December). A wildcard used alone, "*" (asterisk), denotes every day.

[Table 3: Date entry examples - most specific to least specific](#) on page 19 provides examples of date entries. The entries are sorted in order of most specific to least specific and indicate the order in which the entries would appear in the Calendar list.

Table 3: Date entry examples - most specific to least specific

Date Entry	Comment
20/1	Specific date

Date Entry	Comment
20/1 – 25/1	Range of dates (no wildcards allowed)
1/*	First day of every month
*/1	Every day in January
MON	Every Monday
MON – WED	Every Monday through Wednesday  Note: THUR-MON is also a valid range
* (asterisk)	Every day of the year

 **Note:**

The time and date definitions can be combined as part of a "descriptor". Refer to [Calendar Descriptors](#) on page 20.

- Filename or codec channel – specifies the file to play when the assignment is active or specifies the analog channel (displayed in the drop-down list as "Codec").

Calendar Descriptors

The Calendar Descriptors are a user-friendly way to store frequently used times and dates for Calendar assignments. Each date and time pair is assigned a descriptor name which denotes the period.

For example, to make assignments for the hour a business is closed for lunch, 13:00 to 14:00 Monday through Friday, instead of making the assignment manually, define a calendar descriptor called 'lunch'. The descriptor 'lunch' would have a date entry of 'MON-FRI' and a time entry of either '13:*', or '13:00-14:00'. Assignments would then be made using the descriptor 'lunch'. The 'lunch' descriptor can be redefined at any time, and it takes effect for all assignments using 'lunch'. Use Calendar Descriptors to avoid manually changing each assignment. This eliminates the chance that an assignment might be missed.

[Table 4: Calendar Descriptor examples - most specific to least specific](#) on page 21 shows sample Calendar Descriptors that could be used in making assignments. These descriptors are sorted from the most specific to the least specific and appear in the same order in which they would appear in the list of Calendar assignments.

 **Note:**

Jan_sales_closed has the time defined as "*" (asterisk). This means at all times; however, because of the way the entries are sorted, jan_sales_open is always found during times when the store is open. During the time the store is closed, the search will 'fall through' to the jan_sales_closed assignment.

Table 4: Calendar Descriptor examples - most specific to least specific

Descriptor name	Date	Time	Comment
christmas	25/12	*	Christmas Day
jan_sales_open	1/1-20/1	9:00-17:30	January Sales - Store Open
jan_sales_closed	1/1-20/1	*	January Sales - Store Closed
1st_of_month	1/*	*	First Day of Every Month
weekend	Sat-Sun	*	Weekends
weekday	Mon-Fri	*	Weekdays
morning	*	8:00-10:30	Every Morning
opening_time	*	9:00	Store Opening Time
closing_time	*	17:30	Store Closing Time
always	*	*	Always

Calendar files

The Calendar List is saved as a file called `_ASSIGNS.CAL`. The Calendar Descriptors are saved in a file called `_DESCRIP.CAL`. The Calendar Descriptors file is loaded before the Calendar file so that the descriptors used in the Calendar file can be validated.

Note:

Multiple Calendar List files and Descriptor files can be created, where each file contains a group of calendar assignments or descriptors. These files can be swapped in and out, and transferred to other Integrated Recorded Announcer cards. Refer to [Calendar Operations menu](#) on page 132 and [The Descriptor Operations menu](#) on page 139.

System time and date synchronization

The Integrated Recorded Announcer card can be configured to download the system time and date on bootup. The Integrated Recorded Announcer card remotely logs into the system and starts a terminal session. Once the session has been established, the Integrated Recorded Announcer card accesses and extracts the system time and date by sending the TTAD command. The session is ended and the real-time clock is set accordingly. The IP address of the system is stored in `_CONFIG.DAT`. The use of this feature cancels the OA&M commands `SETDAY`, `SETTIME`, and `SETDATE`.

Refer to [Configuring Ethernet for Time and Date Synchronization](#) on page 51 and [Time and Date Configuration menu](#) on page 169 for instructions on configuring the system time and date synchronization.

 **Note:**

Integrated Recorded Announcer can either synchronize the time and date with the system, or have the time and date configured manually.

Music-On-Hold option

An Integrated Recorded Announcer card can have music routes and trunks programmed to provide MOH service to callers. Integrated Recorded Announcer provides approximately six minutes of prerecorded, royalty-free music on the internal C: drive. This music is in Media Card Compressed Format (MCF) and is preassigned to internal channel 0.

 **Note:**

The music assignment to internal channel 0 can be changed. Also, the royalty-free music file can be deleted if it is not needed.

The Music Broadcast feature allows a maximum of 64 callers to simultaneously listen to music on a single channel.

Internal music

Internal music can be used when a music source is not permanently connected to an Integrated Recorded Announcer card. A technician can use an external music source to record the music onto the Integrated Recorded Announcer card, where it is stored digitally in Flash memory.

External music

A permanent connection is maintained, over the analog input port, between an external music source, such as a CD player or tape recorder, and an Integrated Recorded Announcer card. This port is available on the Integrated Recorded Announcer 50-pin I/O Adaptor (Audio-adaptor). External music is most suitable when the music must be changed frequently.

The analog input is not confined to music. It can be used in many applications, such as a "talking timetable" or advertisements that are changed on a regular basis. It is often used on the larger systems where a piece of audio equipment is dedicated for this purpose.

 **Note:**

The Integrated Recorded Announcer card does not support 600 or 900 Ohm music sources.

Integrated Recorded Announcer password security

Access to the Integrated Recorded Announcer administration menus is password- controlled using the following password levels:

- User
- Administrator
- Distributor
- Super User

These are the restrictions for accessing the Integrated Recorded Announcer:

- User – the lowest restrictions. Users can only access the User level.
- Administrator – the second highest level of restrictions. Administrators can access the User and Administrator levels, and can change passwords for each of those levels.
- Distributor – the third highest of restrictions. Distributors can access User, Administrator and Distributor levels, and can change the passwords for those levels.
- Super User – available for Avaya employees. Super Users can access all levels, including debugging area, and can change passwords for all those levels.

User level

The User password must be 8 to 16 alpha-numeric characters in length. The User default password is "user0000". The general OA&M password allows a User to login to the Integrated Recorded Announcer administration menu. This password level provides unrestricted access to all of the RAN-based, and most of the Integrated Recorded Announcer card level, administration options. The User password does not provide access to any diagnostic procedures.

**Note:**

TUI access to the OA&M functions is at the User level.

Administrator level

The Administrator password must be 8 to 16 alpha-numeric characters in length. The Administrator default password is "admin000". The Administrator level permits the following actions:

- creation of new users
- assignment of passwords
- channel access permissions

Description

- deletion of existing users
- viewing/editing user information.

Individual Users can alter their own passwords. Administrators can alter any user's password and channel-access permissions.

Distributor level

The Distributor level password must be 8 to 16 alpha-numeric characters. The Distributor default password is "**distrib0**". The Distributor level is the next level of access above the Administrator. The Distributor is able to access the base code self-test and diagnostic procedures. This password level provides announcement monitoring for Card-LAN, DS-30X, and 8051 signals.

Super User level

The Super User level allows remote access to the VxWorks shell, in order to perform maintenance and diagnosis of problems in the field.



Note:

The Super User access level is for Avaya employees.

Integrated Recorded Announcer card technical description

The Integrated Recorded Announcer card implements RAN and MOH applications for Avaya Communication Server 1000 and Meridian 1 systems and systems supporting IPE cards.

The Integrated Recorded Announcer card provides faceplate and backplane interfaces, which are used to connect external RAN and music sources and maintenance terminals to the Integrated Recorded Announcer card. This section provides information on the faceplate connectors and indicators, as well as the backplane connections to the Main Distribution Frame (MDF).

Hardware architecture

The Media Card is designed with the Intel IXP1200 Network Processor as its core. The microprocessor interfaces directly to the DRAM array and cache memory and to the rest of the system over PCI and SAI buses over the PCI bus and the buffered SRAM bus.

System interfaces, such as Card-LAN and DS-30X, connect to a dedicated microcontroller. This microcontroller communicates with the core microprocessor over the dual-port RAM.

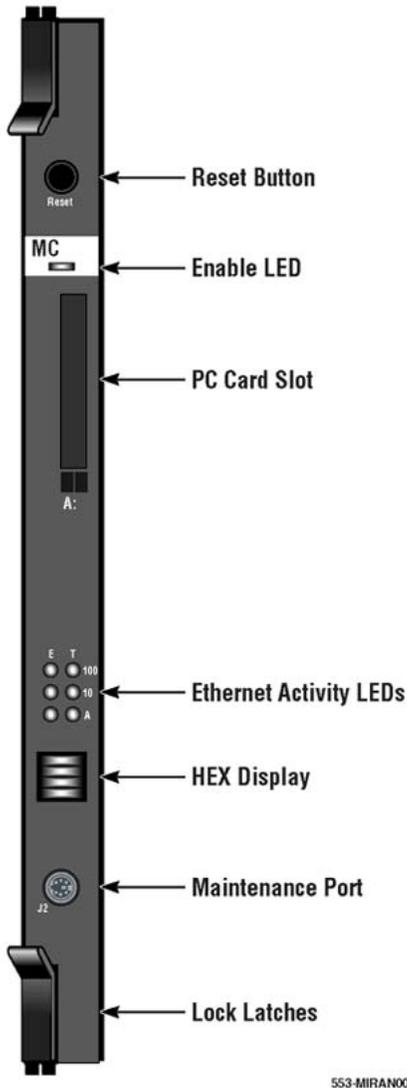


Figure 2: NT0966CA card faceplate

Reset switch

Use the reset switch on the faceplate to manually reset the Integrated Recorded Announcer card.

Status LED

The Integrated Recorded Announcer card faceplate red Enable LED indicates the following:

- the enabled/disabled status of the card
- the self-testing result during power up or card insertion into an operational system

PC Card slot

This slot accepts standard PC Flash Cards, including ATA Flash cards (3 MB to 170 MB).

Avaya supplies PC Card adaptors which allow compact flash cards to be used in this slot.

This slot is used for Media Card software upgrades, backing up announcements, and additional storage.

Ethernet activity LEDs

The Integrated Recorded Announcer card faceplate contains Ethernet activity LEDs for each network.

Hex display

A four-digit, LED-based hexadecimal display provides the following information:

- T:xx – indicates the status of the internal self-test during bootup. See [Table 31: Integrated Recorded Announcer card hexadecimal codes](#) on page 226.
- MRN3 – indicates that the Integrated Recorded Announcer application is running on the card.
- WAIT – indicates that it can take a number of seconds after the insertion of a PC Card before the PC Card is ready for use. During that time, the Hex display generates the message "WAIT". While the WAIT message is displayed, do not remove the PC Card. Once the card is ready for use, the Hex display displays "MRN3". At this stage, the PC Card can be removed. Similarly, after removal of a PC Card, the WAIT message is displayed for approximately one second.



Important:

Do not reinsert a PC Card until the "MRN3" message is displayed

RS-232 Asynchronous Maintenance Port

An 8-pin mini-DIN socket on the faceplate provides access to the RS-232 port. This faceplate port provides access to the Integrated Recorded Announcer card for OA&M purposes. This port is also available through a female DB-9 connector on the Integrated Recorded Announcer 50-pin I/O Adaptor (Audio-adaptor). This should be used to make a permanent terminal connection.

Integrated Recorded Announcer 50-pin I/O Adaptor (Audio-adaptor)

The Integrated Recorded Announcer 50-pin I/O Adaptor (Audio-adaptor) mounts to the I/O panel on the IPE module. It contains the following:

- one RJ-45 connector for connection to the LAN
- one DB-9 female connector for connection to a maintenance terminal (either directly or through a modem)
- one 50-pin connector for connection to the I/O panel on the IPE module

[Figure 3: Integrated Recorded Announcer 50-pin I/O Adaptor \(Audio-adaptor\)](#) on page 28 shows the Integrated Recorded Announcer 50-pin I/O Adaptor (Audio-adaptor).

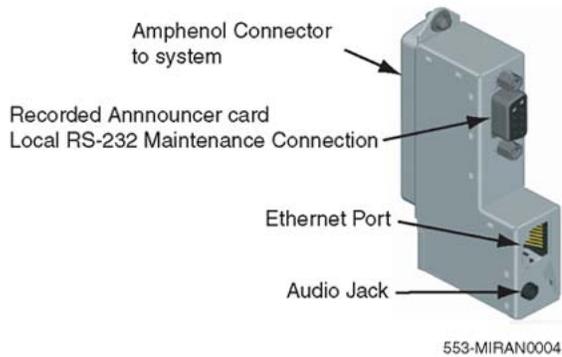


Figure 3: Integrated Recorded Announcer 50-pin I/O Adaptor (Audio-adaptor)

*** Note:**

It is important that the 50-pin connector of the Integrated Recorded Announcer 50-pin I/O Adaptor (Audio-adaptor) be secured to the I/O connector using the mounting screw provided on the top of the 50-pin connector, as well as the fastener on the bottom.

The Integrated Recorded Announcer card provides the following connections through the Integrated Recorded Announcer 50-pin I/O Adaptor (Audio-adaptor):

- Media Card local RS-232 maintenance connection (9-way D-sub connector)
- 10BaseT Ethernet management connection
- audio socket for Music-On-Hold

Maintenance Serial Port

A Maintenance Serial Port is provided on the Integrated Recorded Announcer 50-pin I/O Adaptor (Audio-adaptor) for maintenance functions. A terminal can be permanently connected here. This port is duplicated on the faceplate.

Audio jack

The 3.5 mm audio jack provides access to a single analog input (ANALOG0). Use the audio jack to connect external analog sources, such as a tape recorder or CD player to record to file or to route directly through a trunk emulation port into the system for MOH. Refer to [Figure 3: Integrated Recorded Announcer 50-pin I/O Adaptor \(Audio-adaptor\)](#) on page 28.

Ethernet port

The Integrated Recorded Announcer 50-pin I/O Adaptor (Audio-adaptor) provides one 10BaseT Ethernet management connection.

CE-MUX Interface

The Integrated Recorded Announcer card does not support CE-MUX Interface.

Integrated Recorded Announcer card reset and self-test functions

A reset is executed immediately following a power-on or system-level reset. This procedure initializes the processor before proceeding with the power-on self-test. The Integrated Recorded Announcer card attempts to log the source of each reset condition. This information can later be displayed on the maintenance terminal to help determine the cause of the problem, and the time and date when it occurred.

Hard reset

A hard reset is equivalent to a card insertion or loss of power. It results in a total reset of all hardware elements and a full hardware and software initialization. A hard reset is always followed by a power-up sequence. This process can last up to two minutes.

A hard reset can be initiated by any of the following activities:

- card-level maintenance over the RS-232 port
- through a menu option in BUI
- by the administrator after upgrading Integrated Recorded Announcer software

Diagnostic self-test

The diagnostic self-test tests the installed hardware and does the following:

- determines the integrity of the hardware
- establishes Integrated Recorded Announcer configuration in terms of its processor, RAM capacity, and Flash memory

The Integrated Recorded Announcer card displays any unexpected results on the maintenance port and updates the Flash configuration. It can also indicate self-test results on the Integrated Recorded Announcer card faceplate hex display.

Media Card

Integrated Recorded Announcer provides multi-tasking, voice-processing applications, such as Recorded Announcement (RAN) and Music-On-Hold (MOH). The Integrated Recorded Announcer application is preinstalled on the NT0966 Media Card. This single-slot card is compatible with all supported systems.

The NT0966 Integrated Recorded Announcer card communicates with the system software through trunk signaling messages over the DS-30X link. The Integrated Recorded Announcer card emulates the Enhanced Extended Universal Trunk (EXUT) card. The same overlay programs used to configure the EXUT card, trunk routes, and trunk functions are also used to configure the Integrated Recorded Announcer routes.

A 50-pin I/O Adaptor (Audio-adaptor) connection provides analog access to the card in order to connect external recording equipment (for example, music from an external CD connection).

The Integrated Recorded Announcer card supports three Integrated Recorded Announcer configurations: small, medium, and large. These cards offer two, four, and eight RAN ports respectively. The RAN Broadcast feature allows the multiplexing of the RAN ports.

*** Note:**

In North America, only the Media Cards offering four and eight RAN ports are available. Refer to [Table 5: Integrated Recorded Announcer capacity options](#) on page 34.

Integrated Recorded Announcer supports PC Cards. These cards:

- expand Integrated Recorded Announcer announcement storage memory
- back up announcements from Integrated Recorded Announcer to the PC Card

Integrated Recorded Announcer provides 20 to 24 minutes of internal announcement storage capacity in a basic Integrated Recorded Announcer configuration. If 20 to 24 minutes of announcement storage capacity is sufficient, a Flash memory card is not required to expand the storage capacity.

The Integrated Recorded Announcer card connects to a maintenance terminal for text-based operation, administration, and maintenance (OA&M) over an RS-232 port.

The Integrated Recorded Announcer card can also connect to the maintenance terminal through Telnet over a 10BaseT LAN connection to perform text-based OA&M. The Integrated Recorded Announcer card's internal web server can also be used to perform a web-based OA&M.

*** Note:**

A LAN connection is necessary for Telnet access, web-based OA&M, and downloading files using FTP.


Integrated Recorded Announcer also supports a Telephone User Interface (TUI). A DTMF telephone can be used to do the following:

- record new announcements
- swap existing announcements in and out of service

To use the TUI, configure port 7 as a Direct Inward Dial (DID) port dedicated to telephone access.

The Integrated Recorded Announcer card connects to an external music source over an analog I/O port using the 50-pin I/O Adaptor (Audio-adaptor). This port can also be used to input music from a music source (for example, a tape recorder or a CD player).

[Figure 4: Integrated Recorded Announcer card interface structure in the system \(without a LAN connection\)](#) on page 31 illustrates the connection of a maintenance terminal to the Integrated Recorded Announcer card. The connection of an external music source is also shown.

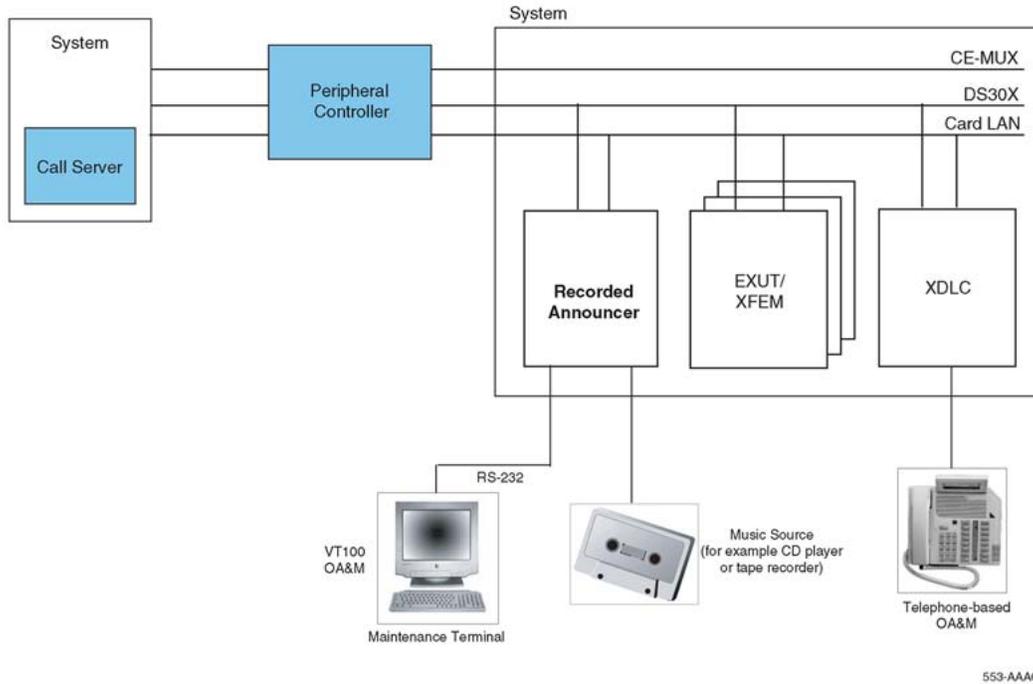

553-AAA0871

Figure 4: Integrated Recorded Announcer card interface structure in the system (without a LAN connection)

[Figure 5: Integrated Recorded Announcer card interface structure in the system \(using a LAN connection\)](#) on page 32 illustrates the connection of a 10BaseT Ethernet connection to the Integrated Recorded Announcer card. The connection of an external music source is also shown.

Description

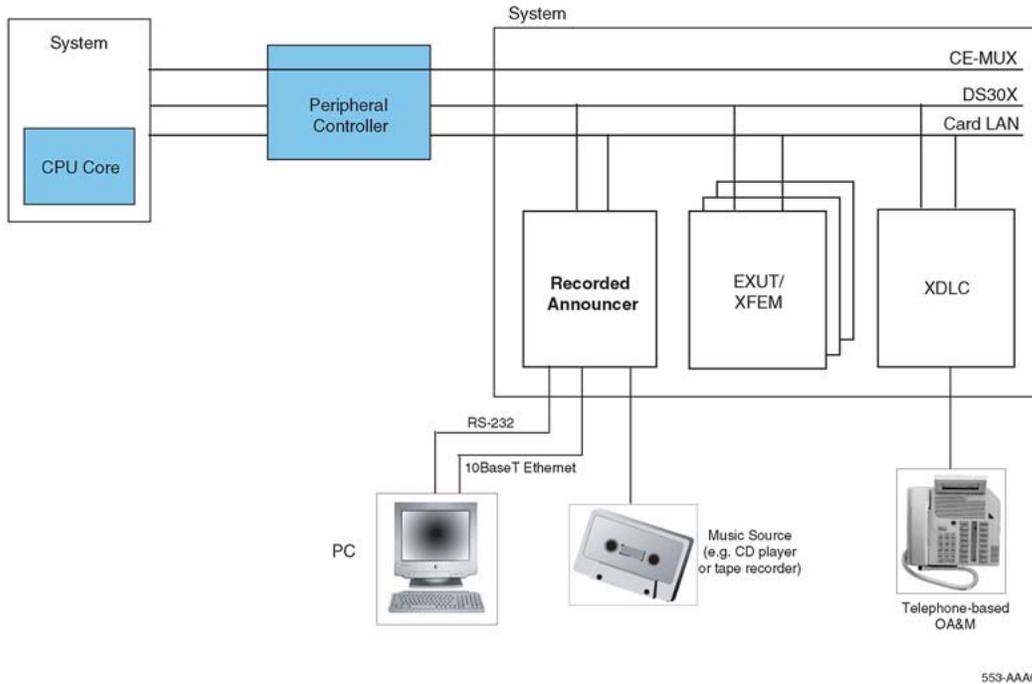


Figure 5: Integrated Recorded Announcer card interface structure in the system (using a LAN connection)

*** Note:**

For details on Installation and Configuration of LAN connectivity, refer to [LAN access installation and setup](#) on page 59 and [Ethernet/LAN requirements](#) on page 78.

[Figure 6: Integrated Recorded Announcer card connected to modem](#) on page 33 illustrates the connection of a modem to the Integrated Recorded Announcer card.

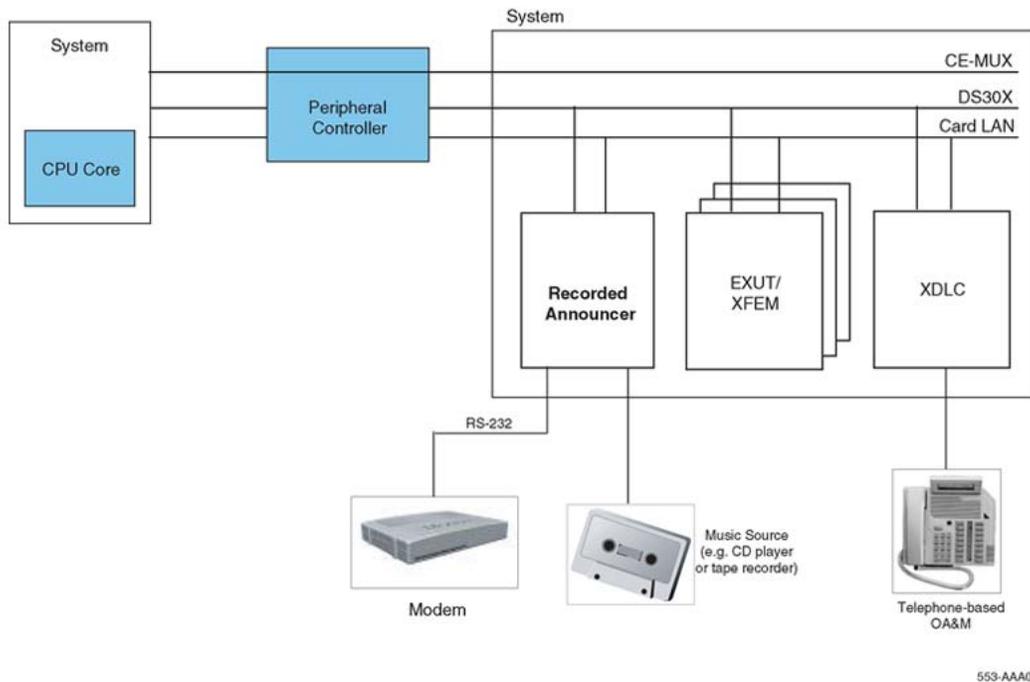


Figure 6: Integrated Recorded Announcer card connected to modem

The Integrated Recorded Announcer card provides the following flexibility:

- easily expandable, industry-standard architecture (small, medium, and large configuration, controlled by keycode)
- a set of both standard and proprietary interfaces
- compatibility with all systems that support IPE cards
- embedded real-time operating system
- simplicity to RAN and MOH applications (no external devices or cables)
- versatile storage capacity features that provide for:
 - recording storage capacity of 20 to 24 minutes on the base Integrated Recorded Announcer configuration
 - unlimited different announcements for each channel, per day, changeable on a time-of-day and day-of-year basis
 - an option to add extra storage space with a PC Card (approximately two minutes of recording time for each MB of extended memory)
 - maximum of eight internal one-to-one RAN or MOH ports/channels, which support continuous and start/stop RAN mode (up to seven ports/channels, if one is used for telephone-based OA&M access)
- a versatile set of recording features that include the following:
 - different announcements programmed to play at different times of day and different days of the year

- FTP downloading of voice and music files over the LAN
- swapping of "in-service" and "in-reserve" announcements using a DTMF telephone
- announcement backup and restore capability
- transfer of existing announcements to the Integrated Recorded Announcer card
- new announcements recorded over a telephone or from common plug-in audio equipment (for example, CD players and cassette players)
- password-protected RAN recording from any DTMF telephone using a simple voice menu interface
- connection of one external analog (music) source for recording

Integrated Recorded Announcer card channels

One-to-one recording ports/channel on the Integrated Recorded Announcer card emulates the Enhanced Extended Universal Trunk (EXUT) card.



Note:

Each Integrated Recorded Announcer capacity option consists of the NT0966CA Media Card, the NTDK57 Security Device, and a keycode.

[Table 5: Integrated Recorded Announcer capacity options](#) on page 34 shows the Integrated Recorded Announcer capacity options. For each capacity option in [Table 5: Integrated Recorded Announcer capacity options](#) on page 34, port 7 on the card can be configured for telephone-based OA&M.

Table 5: Integrated Recorded Announcer capacity options

Integrated Recorded Announcer capacity option	No. of one-to-one ports/channels (North America)	No. of one-to-one ports/channels (International)
Small	Not applicable	2 (See Note 1)
Medium	4 (See Note 1)	4 (See Note 1)
Large	8	8



Note:

Also includes port 7 for the Telephone User Interface (TUI)



Note:

Integrated Recorded Announcer does not support multi-cross connect ports.

Supported applications

Integrated Recorded Announcer supports the following applications:

- First RAN
- Second RAN
- Intercept treatment
- Music-On-Hold
- Automatic Wake-up

Integrated Recorded Announcer card design characteristics

The Media Card supports voice processing by providing connectivity to the Avaya CS 1000 and Meridian 1 systems, voice storage capacity, and access to an OA&M facility.

The Media Card with the Integrated Recorded Announcer application:

- is based on the Media Card platform, which uses an Intel IXP-1200 Network Processor
- uses standard interface buses (PCI, ISA, and PCMCIA)
- accesses all 32 DS-30X voice/signaling time slots
- provides one RS-232 Maintenance Serial Port (through the faceplate 8-pin Mini-DIN connector and the Integrated Recorded Announcer 50-pin I/O Adaptor (Audio-adaptor))
- supports connection to the LAN through an Ethernet adaptor

BIOS initialization

This process initializes the base hardware, using configuration information stored in Flash. The BIOS layer provides initialization and device drivers.

The BIOS layer initializes the hardware and boots the operating system, using the low-level reset, self-test, and BIOS initialization.

Software security

To provide security for the RAN and music applications as well as to prevent unlawful product usage, the Integrated Recorded Announcer card uses a security device and keycode security approach.

Security overview

A security device and keycode mechanism is necessary to protect against unlawful Integrated Recorded Announcer feature usage, because industry-standard PC Cards are used as the software medium on the Integrated Recorded Announcer card. All upgrades of either channel capacity or application software are restricted to a given Integrated Recorded Announcer card and are accurately tracked to allow for satisfactory handling of field repairs and incremental upgrades.

Security is required for port/channel capacity upgrades. Security is not required for the following upgrades:

- customer recorded prompts
- back up and restore operations
- application patching/bug fix

Security device

This button-sized device has a unique laser-etched code that cannot be overwritten. In addition, it contains 1 kbit/s of PROM to:

- identify the button as part of a product
- provide an eight-digit security ID

The logo side of the security device shows the eight-digit security ID. The security device must be installed with the eight-digit inscription facing away from the card.

 **Note:**

If the security device is properly installed, the logo, with the eight-digit inscription underneath, is visible.

Security ID

The security ID is the number that the customer must query from the Integrated Recorded Announcer card maintenance port prior to ordering an upgrade. The Security ID is read from the security device and is unique for each Integrated Recorded Announcer card.

The security ID number can be found:

- at the top left-hand corner of the terminal-based OA&M menu or window
- by using a command on the telephone set-based OA&M access
- on an adhesive label in the box
- on the shipping paperwork
- on the BUI System Information window
- etched on the security device

Keycode

Avaya provides the customer with a keycode that enables the customer to install any desired upgrade. The keycode is entered over a terminal using the local maintenance port on the Integrated Recorded Announcer card or using the BUI. The keycode consists of three sets of eight digits and must match the Security ID on the Integrated Recorded Announcer card.

The Integrated Recorded Announcer card comes from the factory equipped with a keycode. Upgrade keycodes can be purchased to enable more ports. Spare and repaired Integrated Recorded Announcer card are not equipped with a keycode nor with the security device. For the Integrated Recorded Announcer card to operate correctly, the keycode must be installed.

Description

Chapter 5: Installation and configuration

Contents

This section contains information on the following topics:

- [Integrated Recorded Announcer card quick installation](#) on page 40
- [System configuration](#) on page 44
 - [Configuring RAN routes](#) on page 44
 - [Music-On-Hold activation and route configuration](#) on page 48
 - [Configuring the DID route for the TUI](#) on page 49
 - [Configuring the Integrated Recorded Announcer trunks](#) on page 50
 - [Configuring Ethernet for Time and Date Synchronization](#) on page 51
 - [Limited Access Password](#) on page 52
- [Basic Integrated Recorded Announcer card installation](#) on page 52
 - [Installation overview](#) on page 52
 - [Installing an Integrated Recorded Announcer card](#) on page 52
 - [Installation preparation](#) on page 52
 - [Integrated Recorded Announcer card installation in an IPE shelf](#) on page 53
 - [Connecting an external audio device](#) on page 58
- [LAN access installation and setup](#) on page 59
 - [FTP downloads and uploads](#) on page 61
- [Performing upgrades and replacements](#) on page 63
 - [PC Card backups](#) on page 63
 - [Restoring configuration](#) on page 64
 - [RAN upgrades](#) on page 64
- [Recording announcements remotely for use on the Integrated Recorded Announcer card](#) on page 66
 - [Foreign language prompt](#) on page 67

Integrated Recorded Announcer card quick installation

To quickly install and configure the Integrated Recorded Announcer card, follow the steps in [Installing the Integrated Recorded Announcer card using quick installation procedure](#) on page 40.

Installing the Integrated Recorded Announcer card using quick installation procedure

1. Log into the system.

Program a DID route and configure a DID trunk on the Integrated Recorded Announcer card unit 7. Use the TN for the loop, shelf, and card slot into which the Integrated Recorded Announcer card is plugged. For example, if the Integrated Recorded Announcer card was installed in 20 0 0, then provision 20 0 0 7 as the DID unit to allow local telephone access for the recording of RAN announcements.

2. Program RAN and Music routes and trunks for the remaining channels. For example, program channel 0 as a Music trunk and channel 1 as a RAN trunk.

 **Note:**

The Integrated Recorded Announcer card comes with royalty-free music preassigned to channel 0 and set to play 'always'. Therefore, Avaya recommends that channel 0 be configured as a Music route. However, this assignment can be removed and any other announcement or music file assigned in its place.

When using Avaya Communication Server 1000 software, refer to the RAN Broadcast feature in *Avaya Features and Services Fundamentals, NN43001-106*. For Integrated Recorded Announcer configured with RAN Broadcast, use Route Type "MLVL" (RTYP = MLVL in LD 16).

3. Request an IP address, subnet mask, and gateway from the system administrator.

 **Note:**

This step is only necessary if the Integrated Recorded Announcer card is connecting to the LAN.

4. Insert the security device onto the Integrated Recorded Announcer card. Install the security device with the logo and eight-digit inscription facing away from the board.

 **Note:**

The security device can be correctly inserted in only one position.

5. Connect the 50-pin female connector on the Integrated Recorded Announcer card Audio-adaptor to the I/O panel.

6. Connect the RJ-45 connector to the LAN hub. Use an RJ-45 coupler and the additional RJ-45 cable, if necessary.
7. Connect a VT-100 terminal to the Integrated Recorded Announcer card 50-pin I/O Adaptor (Audio-adaptor) using a standard serial cable (NTAG81GA is available as an accessory from Avaya).

Alternatively, the NTAG81CA cable (also available as an accessory) can be used to connect a terminal to the 8-pin faceplate connector.

8. Configure the terminal in VT-100 mode at:
 - 9600 baud
 - 8 data bits
 - 1 stop bit
 - no parity
9. Insert the Integrated Recorded Announcer card into an unequipped card slot and watch the terminal window for bootup commands to appear. This requires approximately 90 seconds.



Caution:

Damage to Equipment

Before installing an Integrated Recorded Announcer card into a card slot, ensure that no cross-connect wires from the Integrated Recorded Announcer card or another product remain attached to this slot. Cross-connect wires that carry a ringing voltage can damage the Integrated Recorded Announcer card.

10. At the logon window of the Text-based User Interface, ensure that the cursor is in the 'User Name:' field. Then, log on by doing the following:
 - a. If the Integrated Recorded Announcer card is being booted for the very first time, the card boots in BOOTP mode. If a BOOTP server is not being used, the card continues to search for a BOOTP server on the network, thereby stalling the boot process.

At this point, if not using a BOOTP server, enter the key sequence +++ (plus symbols) in order to force booting to continue. Once booted, change the IP method to either disabled or static (see [Enabling the LAN capabilities](#) on page 59 and [Configuring the IP address, subnet mask, Gateway, and IP method](#) on page 60). Once the IP method is changed to disabled or static, subsequent boots of the card do not look for a BOOTP server.
 - b. If the Integrated Recorded Announcer card is booted and the session is just starting, or if an 'access denied' message is received, press the `Shift` key and the tilde key (`~`) to refresh the window.
 - c. Type in the user name (`admin`), and press the 'down' arrow.
 - d. Type in the administrator default password (`admin000`), and press the 'down' arrow again.

- e. Press <CR> at the 'Login' prompt.

 **Note:**

If the logon is unsuccessful, an 'Access denied' message appears. The logon procedure can be repeated up to three times. If an 'Access denied' response appears for a third time, the Integrated Recorded Announcer card locks users out for 20 minutes.

11. At the Main Menu:

- a. Select **2**, "Pack Administration".
- b. Select **2**, "Keycode Entry".

 **Note:**

The keycodes are on a label that accompanies the security device. Remove this keycode label and attach it to the Integrated Recorded Announcer card faceplate.

- c. Between the brackets, type in the 24-character keycode with a space between each set of eight characters.
- d. Select **Execute** to execute the keycode. Wait for a keycode validation response 'Keycode validated'.
- e. Select **Exit** to return to the Pack Administration menu.

 **Note:**

If LAN access is not needed for the Integrated Recorded Announcer card, log out after entering the keycode.

12. At the Pack Administration menu:

- a. Select **5**, "Ethernet Configuration".
- b. At the Ethernet Configuration window, enter the new IP address, subnet mask, gateway, and IP method of the Integrated Recorded Announcer card, obtained from the network administrator.

 **Note:**

The IP method can either be 'bootp' or 'static'. To disable the IP connection, but keep Integrated Recorded Announcer working, set the IP method to 'disabled'. 'bootp' is similar to Dynamic Host Configuration Protocol (DHCP).

- c. Select **Set** to set the LAN configuration parameters.
- d. Select **Exit** to return to the Pack Administration window.
- e. Log out of the Text-based User Interface by selecting **9** from the menu window until the Main Menu window appears.

13. Reboot the Integrated Recorded Announcer card by pressing the reset switch on the front of the pack.

This causes the keycode to take effect. Wait for the card to reboot and the Login window to come up on the maintenance terminal. This takes approximately 90 seconds.

14. Use a local DTMF telephone to dial the DID access code for Integrated Recorded Announcer card unit 7.

 **Note:**

The local DTMF telephone must have an 'unrestricted' Class of Service (CLS = UNR) in LD 11.

- a. At the voice prompt, press "#" (octothorpe) to establish the call.
- b. Enter the user name '**user**' = 8737 followed by "*" (asterisk).
- c. At the next voice prompt, enter the password **user0000** followed by "*" (asterisk).
- d. At the main menu, press 5 to access the Record menu.
- e. Press 5 again to begin recording a RAN announcement.
- f. When recording is done, press 3 to stop the recording.
- g. Press 1 to save the announcement. Because Integrated Recorded Announcer writes the recording to memory, it can take 30 seconds or longer for Integrated Recorded Announcer to respond that it has saved the announcement.



Caution:

Loss of Data

After pressing 1 to save the announcement, do not hang up. Wait for Integrated Recorded Announcer to state that it has saved the announcement and tagged the announcement with an announcement identifier. For example: 'Announcement has been saved as announcement 1'.

15. Log in to the Text-based User Interface through the maintenance terminal as before. Or, if the Integrated Recorded Announcer card is connected to the LAN, the Integrated Recorded Announcer Browser User Interface (BUI) can be accessed by pointing a web browser to the IP address of the Integrated Recorded Announcer card. To assign an announcement to an Integrated Recorded Announcer channel, do the following:
 - a. At the Main Menu, select **1** "MIRAN Administration...".
 - b. At the MIRAN Administration menu, select **1** "Announcement Configuration...".
 - c. At the Announcement Configuration menu, select **1** "Calendar Operations...".
 - d. At the Calendar Operations menu, select **1** "Calendar Assignment with Descriptor".

- e. At the Calendar Assignment with Descriptor window, first enter the channels (ports) on which a particular announcement is to play. For example, if the TN for a RAN trunk is 20 0 0 5, assign an announcement to channel 5.
 - f. At the 'Filename:' prompt, enter the filename of the announcement that must play on the selected channels. Browse the list of available announcements to select one.
 - g. At the 'Descriptor' prompt, enter the descriptor that defines when the selected announcement will play on the selected channels. Browse the list of available descriptors to select one. Descriptors can be defined if the preconfigured descriptors do not meet system needs.
 - h. Move the cursor to 'Add to Calendar' and press <CR> to create the calendar assignment with descriptor.
16. To test RAN announcements, dial the trunk access code for the desired RAN route, and listen to the announcement that plays.



Note:

With Integrated Recorded Announcer, all changes to announcements and configuration are saved automatically.

Refer to [Table 19: Integrated Recorded Announcer card hardware list](#) on page 77 for a list of relevant equipment.

System configuration

In the system software, configure the following for Integrated Recorded Announcer:

- RAN and Music routes
- a DID route
- trunks for the above routes

To allow synchronization of the time and date between the system and the Integrated Recorded Announcer card, configure the system for LAN access in LD 117. Refer to [Configuring Ethernet for Time and Date Synchronization](#) on page 51 for this procedure.

The system software can be configured either before or after the Integrated Recorded Announcer card is installed. Avaya recommends configuring the system software first, in order to save setup time once the Integrated Recorded Announcer card arrives.

The following sections describe system software configuration for Integrated Recorded Announcer.

Configuring RAN routes

The Integrated Recorded Announcer card emulates an Enhanced Extended Universal Trunk (EXUT) card in the Avaya CS 1000 and Meridian 1 systems. Configure RAN routes and trunks

for the Integrated Recorded Announcer card the same way as the EXUT card. For detailed information on Trunk Route Administration (LD 16) and Trunk Administration (LD 14), see *Avaya Software Input Output Administration, NN43001-611*.

To configure the RAN propagation route and the mode of activating the recorded announcement, define its parameters using Trunk Route Administration (LD 16). The Integrated Recorded Announcer card emulates the EXUT characteristics and does not require modification of LD 16 to configure the Integrated Recorded Announcer functions.

The Integrated Recorded Announcer card and EXUT cards support the following modes of operation:

- Delay Dial Continuous RAN (DDL)
- Immediate Start Continuous RAN (IMM)
- Level Start/Stop RAN (LVL, MLSS, or MLVL)

The Integrated Recorded Announcer card supports the above modes of operation on two, four, or eight independent ports. The same RAN announcement can be assigned to different ports, allowing multiple callers to hear the same announcement at the same time.

 **Note:**

With RAN Broadcast, up to 30 callers can simultaneously listen to the same RAN announcement on a single RAN port.

Continuous RAN routes (Delay Dial and Immediate Start)

Continuous (immediate or delay) RAN plays an announcement over and over again. Callers "barge in" on an announcement playing on an Immediate Start RAN route. Callers receive a ringback tone for an announcement playing on a Delay Dial RAN route until the announcement begins again. At the end of each announcement, a pulse is issued on the control pulse line used by the trunk unit to cut through to the waiting call. Internal ports and channels wait until the announcement starts to be connected to a RAN announcement.

To configure a continuous RAN route, access the Route Data Block (LD 16) using the system TTY, and enter the appropriate responses to the prompts as shown.

Table 6: LD 16 Define a continuous RAN route.

Prompt	Response	Description
REQ	NEW CHG	Add a new, or change an existing configuration
TYPE	RDB	Route Data Block
CUST	xx	Customer number as defined in LD 15
ROUT		Route number
	0-511	Range for Large System , Media Gateway 1000B, and CS 1000E system

Prompt	Response	Description
TKTP	RAN	Recorded Announcement (RAN) Trunk Type
RTYP	CON MCON	Continuous route Continuous multi-channel (for RAN Broadcast)
- LGTH	4–(60)–7200	Maximum message length in seconds
- GRD	(IDLE)PLAY	Ground signal from RAN indicates Integrated Recorded Announcer is playing (idle). The LGTH and GRD prompts only appear if RTYP = MCON.
REP	1–15	Number of RAN repetitions
POST	ATT	Route to attendant after maximum repetitions.
	DIS	Disconnect after maximum repetitions.
STRT	IMM	Immediately connect call to a recorded announcement.
	DDL	Delay call connection until the start of an announcement.
BDCT	(NO) YES	Denies or allows broadcast capability. The BDCT prompt appears only if using the RAN Broadcast (RAN BRD) package 327.
	NO (YES) – for CS 1000E only	For the CS 1000E, the default is Yes.
ASUP	(NO)	Does not return Answer Supervision.
	YES	Returns Answer Supervision.
	CO	Returns Answer Supervision if originator is a CO trunk.
ACOD	xxx...x	Trunk route access code

Multi-channel level start/stop RAN route

In the multi-channel level start/stop control RAN, the leading edge of the start signal initiates announcement playback that continues until either the trailing edge of the start signal occurs or the end of the announcement is reached. If the trailing edge of a level start signal terminates an announcement, it resets immediately and is again available for playback. The multi-channel level start/stop control RAN mode allows the same announcement to be played over multiple RAN channels independently. Specify multi-channel using the same RAN route. See [Example 2:](#) on page 83.

To configure this RAN route, access LD 16 using the system TTY, and enter the appropriate responses to the prompts as shown.

Table 7: LD 16 Define a multi-channel level start/stop RAN route.

Prompt	Response	Description
REQ	NEW CHG	Add a new, or change an existing configuration.
TYPE	RDB	Route Data Block.
CUST	xx	Customer number as defined in LD 15
ROUT		Route number.
	0–511	Range for Large System, Call Server 1000E, , Media Gateway 1000B, and Media Gateway 1000E
TKTP	RAN	Recorded Announcement (RAN) Trunk Type
RTYP	MLSS MLVL	Multichannel level start/stop RAN. Level start/stop, multi-channel (for RAN Broadcast). Sets RTYP to MLVL with RAN Broadcast, even if the broadcast capability (BDCT = NO) is denied for this route.
- LGTH	4–(60)–7200	Maximum message length in seconds. The LGTH and GRD prompts appear only if RTYP = MCON.
- GRD	(IDLE) PLAY	Ground signal from RAN indicates Integrated Recorded Announcer is playing (idle).
REP	1–15	Number of repetitions of RAN.
POST	ATT DIS	Route to attendant after maximum repetitions. Disconnects after maximum repetitions.
STRT	IMM	Immediately connects call to recorded announcement.
BDCT	(NO) YES	Denies or allows broadcast capability. The BDCT prompt appears only if using the RAN Broadcast (RAN BRD) package 327.
	NO (YES) – for CS 1000E only	For the CS 1000E, the default is Yes.
ASUP	NO YES CO	Does not return Answer Supervision. Returns Answer Supervision. Returns Answer Supervision for a CO trunk.
ACOD	xxx...x	Trunk route access code

Multi-Level Start/Stop RAN (MLSS or MLVL) allows multiple start/stop RAN channels to be supported within the same RAN route.

Level start/stop RAN route

In the immediate "level" start RAN, the leading edge of the start signal initiates announcement playback. The playback continues until either the trailing edge of the start signal occurs or the announcement ends. If the trailing edge of a level start signal terminates an announcement, it resets immediately and is again available for playback.

To configure this RAN route, access LD 16 using the system TTY, and enter the appropriate responses to the prompts as shown.

Table 8: LD 16 Define a level start/stop RAN route.

Prompt	Response	Description
REQ	NEW CHG	Define a new, or change an existing configuration.
TYPE	RDB	Route Data Block.
CUST	xx	Customer number as defined in LD 15
ROUT		Route number.
	0–511	Range for Large System, Call Server 1000E, , Media Gateway 1000B, and Media Gateway 1000E
TKTP	RAN	Recorded Announcement (RAN) Trunk Type.
RTYP	LVL	Level start/stop mode.
REP	1–15	Number of RAN repetitions.
POST	ATT DIS	Route to attendant after maximum repetitions. Disconnects after maximum repetitions
STRT	IMM	Immediately connects call to recorded announcement.
ASUP	NO YES CO	Does not return Answer Supervision. Returns Answer Supervision. Returns Answer Supervision if the originator is a CO trunk.
ACOD	xxx...x	Trunk route access code.

Music-On-Hold activation and route configuration

Music-On-Hold (MOH) operates in a continuous mode with an immediate connection to the music source. The music source plays continuously. Callers "barge in" on playing music.

To specify the conference loop for MOH, load the Configuration Record (LD 17), and enter the appropriate responses to the prompts as shown.

Table 9: LD 17 Add or change conference loop for MOH.

Prompt	Response	Description
REQ	CHG	Change existing configuration.
TYPE	CEQU	Record Common Equipment.
CEQU	(NO) YES	Changes Common Equipment parameters.
XCT	0 – 254	Loop number for NT8D17 Conference/TDS card.

To configure the MOH route, load Route Data Block (LD 16) using the system TTY, and enter the appropriate responses to the prompts as shown.

Table 10: LD 16 Define the Music-On-Hold route.

Prompt	Response	Description
REQ	NEW CHG	Add a new, or change an existing configuration.
TYPE	RDB	Route Data Block.
CUST	xx	Customer number as defined in LD 15
ROUT		Route number.
	0–511	Range for Large System, Call Server 1000E, , Media Gateway 1000B, and Media Gateway 1000E
TKTP	COT, MUS	MOH Trunk Types.
MUS	(NO) YES	Music-On-Hold.
_MRT		Music route number.
	0–511	For Large Systems.
STRT	IMM	Immediately connects a call to Music-On-Hold.
ICOG	OGT	For Music-On-Hold, selects the outgoing trunk only.
BDCT	(NO) YES	Denies or allows broadcast capability. The BDCT prompt appears only if using the Music Broadcast (MUSBRD) package 328. If BDCT = YES, no conference loop is necessary; each music trunk has 64 broadcast connections.
	NO (YES) – for CS 1000E only	For the CS 1000E, the default is Yes.
ASUP	NO YES CO	Does not return Answer Supervision. Returns Answer Supervision. Returns Answer Supervision if originator is a CO trunk.
ACOD	xxx...x	Trunk route access code
<p> Note: Music Broadcast (MUSBRD package 328) is required to implement Music on Hold for Virtual Trunks.</p>		

Configuring the DID route for the TUI

To configure an Integrated Recorded Announcer card for TUI access, using internal one-to-one port 7, configure the appropriate route and trunk data blocks. Route Data Block program LD 16 commands define the DID route data block.

Table 11: LD 16 Define a DID route for the TUI.

Prompt	Response	Description
REQ	NEW CHG	Add a new, or change an existing configuration.
TYPE	RDB	Route Data Block.
CUST	xx	Customer number as defined in LD 15
ROUT		Route number.
	0–511	Range for Large System, Call Server 1000E, , Media Gateway 1000B, and Media Gateway 1000E
TKTP	DID	Trunk type for telephone-based OA&M access.
ICOG	IAO	Incoming and outgoing trunk.
ACOD	xxx...x	Trunk route access code.
CNTL	YES	Gate opener for control timers
NEDC	ETH	Near End Disconnected Control. Both ends have disconnect control.
FEDC	ETH	Far End Disconnected Control. Both ends have disconnect control.
MANO	YES	Manual Outgoing Trunk Route.

Configuring the Integrated Recorded Announcer trunks

After a RAN, Music, or DID route is configured, configure the route's corresponding trunk. A trunk data block specifies the parameters for a particular trunk. Because the Integrated Recorded Announcer card emulates the EXUT card, define the Integrated Recorded Announcer card parameters using LD 14 on the system TTY. Respond to the appropriate prompts in LD 14 to configure the Integrated Recorded Announcer trunk data block.

Table 12: LD 14 Configure the Integrated Recorded Announcer trunk data block for RAN, MOH, and DID.

Prompt	Response	Description
REQ	NEW	Add new data.
TYPE		Type of trunk music
	RAN DID	Recorded Announcement Direct Inward Dialing
TN		Terminal Number
	l s c u	Format for Large System, Call Server 1000E,, Media Gateway 1000B, and, Media Gateway 1000E, where l = loop, s = shelf, c = card, u = unit

Prompt	Response	Description
		Integrated Recorded Announcer loop, shelf, card, and unit. The DID trunk on unit (port) 7 must be configured in order to use the TUI. The Integrated Recorded Announcer card comes from the factory with approximately 6 minutes of royalty-free music preconfigured on port 0. Unit 0 can be configured as a Music trunk to make easy use of the royalty-free music.
XTRK	EXUT	Enhanced Extended Universal Trunk card.
CUST	xx	Customer number as defined in LD 15. Customer is prompted when REQ = NEW.
RTMB		Route number and member number
	0-511 1-4000	Range for Large System, Call Server 1000E,, Media Gateway 1000B, and Media Gateway 1000E
CONN	(4) – 48	The maximum number of broadcast connections allowed for this trunk. The 'CONN' prompt only appears if BDCT = YES in LD 16.
SIGL	LDR	Signaling for battery or loop outpulsing for telephone-based OA&M over the Integrated Recorded Announcer card port 7.
BIMP	600 900	Balanced trunk impedance for the Integrated Recorded Announcer card.
STRI	DDL IMM	Incoming trunk starting arrangement.
STRO	DDL IMM	Outgoing trunk starting arrangement. Do not program MUS or DID trunks as Delayed Dial (DDL).
CFLP	0 – 254	Music conference loop.

Configuring Ethernet for Time and Date Synchronization

The time and date synchronization over the LAN requires the connection of the system to a LAN environment.

 **Note:**

Refer to [Time and Date Configuration menu](#) on page 169 for instructions on configuring Time & Date Synchronization.

Limited Access Password

Integrated Recorded Announcer uses a default Limited Access Password (LAPW) and ID to access LD 2. This allows a task running on Integrated Recorded Announcer to remotely log in to access LD 2, and extract the system time and date.

Basic Integrated Recorded Announcer card installation

Installation overview

The Integrated Recorded Announcer card operates on all systems. Refer to [Software requirements](#) on page 70 for more information.

Installing an Integrated Recorded Announcer card

To install an Integrated Recorded Announcer card, follow the general procedures listed as follows:

- Prepare the site.
- Unpack, inspect, and take inventory of the equipment.
- Install the Integrated Recorded Announcer card in the selected card slot, if it is not already installed.
- Install the cables between the Integrated Recorded Announcer card faceplate connectors and external devices, if required.
- Install the cables to the I/O panel connector at the rear of the module, if required.
- Cross-connect external devices to the Integrated Recorded Announcer card through the Audio-adaptor (for example, trunk cards, CD player, and cassette player).

Installation preparation

To prepare for Integrated Recorded Announcer card installation, unpack and inspect components. Take inventory and locate the card slots where the Integrated Recorded Announcer card will be installed.

Unpacking and inspection

Unpack and inspect the equipment for damage. When unpacking, follow the general precautions recommended by computer and telephone equipment manufacturers:

- Remove items that generate static charge from the installation site.
- Wear an antistatic wrist wrap before handling any equipment.
- Remove equipment carefully from its packaging.
- Visually inspect the equipment for obvious faults or damage.

Taking inventory

Verify that all equipment is at the site before beginning installation. Check the equipment received against the shipping documents.

Locating the card slot

An Integrated Recorded Announcer card can be installed in any IPE card slot in an IPE module or shelf that has a 25-pair tip/ring cable connected between the backplane and the I/O panel. The only slot that cannot be used is the Peripheral Controller card slot labeled Cont.

 **Note:**

For Large Systems, IPE card slots 0, 4, 8, and 12 are already preconfigured for Integrated Recorded Announcer card installation.

In the Cabinet system, the Integrated Recorded Announcer card can be installed in card slots 1 to 10 of the Main Cabinet and in slots 11 to 50 in the Expansion Cabinet(s). Refer to [Table 9: LD 17 Add or change conference loop for MOH](#) on page 48.

In the Chassis system, the Integrated Recorded Announcer card can be installed in slots 1 to 4 of the NTDU14 Main Chassis and in slots 7 to 10 of the NTDU15 Chassis Expander.

 **Note:**

If the backplane RS-232 connections are to be used, refer to [NT8D37 cable connections](#) on page 235 for NT8D37 ribbon cable connection configuration on the backplane.

Integrated Recorded Announcer card installation in an IPE shelf

Before installing the card, inspect the IPE module or cabinet I/O panel for backplane cabling.



Caution:

Damage to Equipment

Before installing an Integrated Recorded Announcer card in a card slot, ensure that no cross-connect wires from the Integrated Recorded Announcer card or another product remain attached to this slot. Cross-connect wires that carry a ringing voltage can damage the Integrated Recorded Announcer card.

To install the Integrated Recorded Announcer cards in an IPE shelf, follow the steps in [Installing Integrated Recorded Announcer cards in an IPE shelf](#) on page 54.

Installing Integrated Recorded Announcer cards in an IPE shelf

1. Identify the IPE card slot(s) selected for Integrated Recorded Announcer card(s).
2. Pull the top and bottom extractors away from the Integrated Recorded Announcer card faceplate.
3. Insert the Integrated Recorded Announcer card into the card guides and gently push it until it makes contact with the backplane connector.
4. Push the top and bottom extractors firmly towards the faceplate to insert the Integrated Recorded Announcer card into the faceplate connector and to lock it firmly in place.
5. Observe the faceplate hexadecimal display. It indicates the progress of the internal self-test in the form of T:xx. See [Integrated Recorded Announcer card hexadecimal codes](#) on page 226. Upon successful completion of the test and the start-up of the RAN application, the display shows the code MRN3.



Note:

During the Integrated Recorded Announcer bootup sequence, either an error message or the 'T:xx' self-test messages are seen on the hex display. To interpret an error message, refer to [Integrated Recorded Announcer card hexadecimal codes](#) on page 226.



Note:

If the Integrated Recorded Announcer card is being booted for the very first time, the cards boot in BOOTP mode. If a BOOTP server is not being used, the card continues to search for a BOOTP server on the network, stalling the boot process. At this point, if not using a BOOTP server, enter the key sequence +++ (plus symbols) in order to force booting to continue. Once booted, change the IP method to either disabled or static (see [Enabling the LAN capabilities](#) on page 59 and [Configuring the IP address, subnet mask, Gateway, and IP method](#) on page 60). Once the IP method is changed to disabled or static, subsequent boots of the card do not look for a BOOTP server.

6. To enable the Integrated Recorded Announcer card, load the Network and PE Diagnostic program (LD 32) into the system memory using the system TTY. Execute

the **ENLC l s c** command, where l is the loop, s is the module or shelf, and c is the card to enable.

- Repeat steps 1 through 6 for each additional Integrated Recorded Announcer card.

[Figure 7: The NT8D37 IPE module](#) on page 55 shows the IPE module and the card slots where the IPE cards reside for Large Systems. An Integrated Recorded Announcer card can be installed in any IPE card slot, except the Peripheral Controller (Cont) card slot.

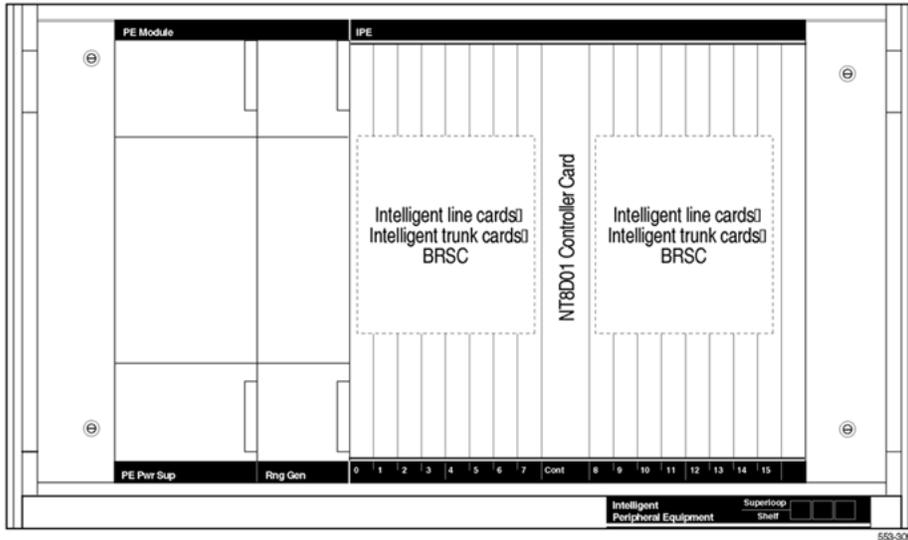


Figure 7: The NT8D37 IPE module

*** Note:**

European customers who require Integrated Recorded Announcer LAN capability must install the Integrated Recorded Announcer card in slots 0, 4, 8, or 12 of the IPE shelf.

*** Note:**

If using the NT8D37AA/DC IPE module, the Integrated Recorded Announcer card cannot be installed in slots 3, 7, 11, or 15 of the IPE shelf. The necessary tip/ring pairs in these slots are not available.

[Figure 8: Media Gateway 1000S](#) on page 56 shows the Media Gateway 1000S.

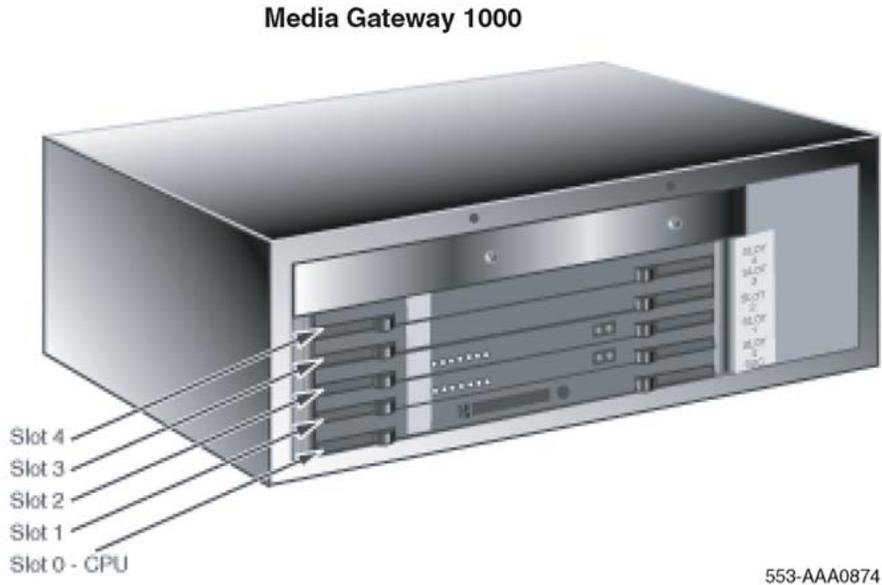


Figure 8: Media Gateway 1000S

*** Note:**

Slot 4 cannot be used in this Media Gateway 1000S.

[Figure 9: Media Gateway 1000S Expansion](#) on page 56 shows the Media Gateway 1000S Expansion.

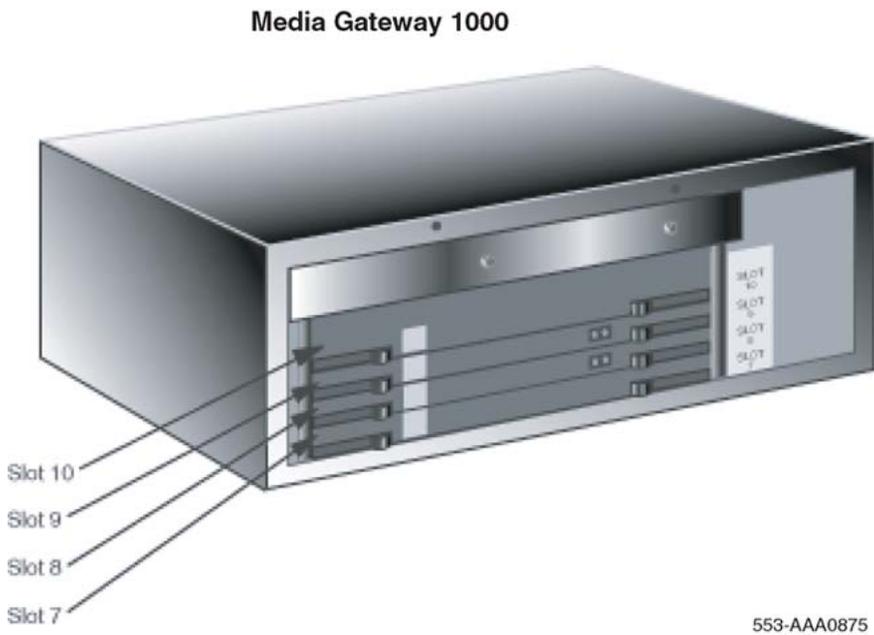


Figure 9: Media Gateway 1000S Expansion

Connecting a terminal to the Integrated Recorded Announcer card in the IPE module

To connect a terminal to the Integrated Recorded Announcer card in the IPE module, the following options are available:

- connecting directly to the Integrated Recorded Announcer card faceplate
- connecting directly to the Integrated Recorded Announcer card's Audio-adaptor
- connecting to the Integrated Recorded Announcer card's Audio-adaptor through a modem

Connecting the terminal directly to the faceplate connector or Audio-adaptor

The Integrated Recorded Announcer card has an 8-pin mini-DIN connector at the bottom of the faceplate. This connector can be used to connect a terminal. The terminal can also be connected to the RS-232 maintenance connection on the Integrated Recorded Announcer card Audio-adaptor.

To connect the terminal or a personal computer emulating a terminal to the 8-pin mini-DIN connector on the Integrated Recorded Announcer card faceplate or on the Audio-adaptor, follow the steps in [Connecting the terminal directly to the faceplate connector or Audio-adaptor](#) on page 57.

Connecting the terminal directly to the faceplate connector or Audio-adaptor

1. Place the terminal in the desired location.
If the distance to the Integrated Recorded Announcer card is less than 10 ft (3 m), an extension cable is not needed.
2. Plug the 8-pin mini-DIN male connector of the NTAG81CA Maintenance cable into the Integrated Recorded Announcer card 8-pin mini-DIN female connector located at the bottom of the faceplate or on the Audio-adaptor.
3. Plug the NTAG81CA cable DB-9 female connector into the terminal. If the terminal requires a different connector, install an adaptor cable or a compact adaptor between the terminal and the NTAG81CA cable.
4. If the terminal is more than 10 ft (3 m) from the Integrated Recorded Announcer card, use the 16-foot NTAG81BA Maintenance Extender Cable. If the terminal requires a different connector, use an adaptor cable of the appropriate length.

To connect a modem to the maintenance connection on the Integrated Recorded Announcer card Audio-adaptor, follow the steps in [Connecting a modem to Audio-adaptor](#) on page 57.

Connecting a modem to Audio-adaptor

1. Place the modem in the desired location.
2. Plug the modem cable into the 9-way D-sub connector on the Audio-adaptor.

For additional information on how to set up the modem, refer to [Integrated Recorded Announcer card interface connectors](#) on page 227.

Connecting an external audio device

An analog audio source and receiver can be connected to the Integrated Recorded Announcer card for the following purposes:

- recording music or announcements to file
- connecting directly through a trunk emulation port/channel into the system for MOH

The analog device can be connected to the audio port on the Integrated Recorded Announcer card Audio-adaptor.

Analog to internal pass-thru switchover

For Music-On-Hold, the analog port can be used to assign music from an external source to internal channels.

To allow switching from the analog source to an internal channel, the configuration of each channel is polled every 30 seconds to check for an assignment switchover.

If the assignment is for a voice file, the playthrough is stopped and the voice file starts immediately. The opposite is also possible. This switchover always occurs at the end of the file to avoid hearing truncated announcements.

The Integrated Recorded Announcer card Audio-adaptor has an audio jack that provides one audio input.

To connect the external audio source to the Integrated Recorded Announcer card Audio-adaptor audio jack, follow the steps in [Connecting audio devices to the Integrated Recorded Announcer card faceplate](#) on page 58.

Connecting audio devices to the Integrated Recorded Announcer card faceplate

1. Plug the 3.5 mm jack on the common side of the NTAG81AA Audio Cable into the 3.5 mm Audio Jack on the Integrated Recorded Announcer card backplane.
2. Plug the audio input end of the NTAG81AA cable connector into the audio source device.

If the source is at a distance from the Integrated Recorded Announcer card, an extension may have to be used (not supplied).

3. Plug the audio output end of the NTAG81AA cable connector into the audio receiver device for announcement backup.

If the source is at a distance from the Integrated Recorded Announcer card, an extension may have to be used (not supplied).

 **Note:**

For the Integrated Recorded Announcer card, a standard 3.5 mm stereo audio jack can be used to provide an external audio source.

LAN access installation and setup

The Integrated Recorded Announcer card (NT0966) can be connected to a LAN. The LAN access to the Integrated Recorded Announcer card provides the ability to:

- access the card through a common web browser to perform OA&M functions
- perform FTP uploads and downloads of files to and from the card
- Telnet to the card from a remote site

 **Note:**

LAN access to the Integrated Recorded Announcer card is optional. LAN access is not necessary to perform any of the OA&M functions through the Text-based User Interface.

The following sections describe the procedures for setting up and using the Integrated Recorded Announcer card LAN capability.

To enable the LAN capabilities, follow the steps in [Enabling the LAN capabilities](#) on page 59.

Enabling the LAN capabilities

1. For LAN Configuration options, refer to [Ethernet/LAN requirements](#) on page 78.
2. Obtain the IP address, subnet mask, gateway, and IP method from the system administrator.

 **Note:**

The IP method can either be 'bootp' or 'static'. To disable the IP connection, but keep the Integrated Recorded Announcer card working, set the IP method to 'disabled'. 'bootp' is similar to Dynamic Host Configuration Protocol (DHCP).

3. Install the Integrated Recorded Announcer card in the appropriate slot.
4. Connect the VT100-type maintenance terminal.

To configure the IP address, subnet mask, gateway, and IP method for the Integrated Recorded Announcer card, follow the steps in [Configuring the IP address, subnet mask, Gateway, and IP method](#) on page 60.

Configuring the IP address, subnet mask, Gateway, and IP method

1. Log in to the Integrated Recorded Announcer Text-based User Interface by entering the user name and password and selecting **-Login-** at the login window. Refer to [Login window](#) on page 127 for further information.
2. At the Main Menu, select **2** to access the Pack Administration menu.
3. At the Pack Administration menu, select 5 to access the Ethernet Configuration window.
4. At the Ethernet Configuration window, enter the new IP address, subnet mask, gateway, and IP method. This new information writes over any old LAN configuration information that the card contains.
5. Select **-Set-** to set the new LAN configuration information. A confirmation notice at the bottom of the Ethernet Configuration window indicates successful completion of the task. Refer to [Ethernet Configuration](#) on page 168 for further information.
6. Reboot the Integrated Recorded Announcer card to activate the new LAN configuration.

After installing the Audio-adaptor and configuring the IP address, subnet mask, and gateway for the Integrated Recorded Announcer card, the BUI can be accessed. To access the BUI, use a standard web browser that supports HTML frames.

To access the Integrated Recorded Announcer BUI, follow the steps in [Accessing the Integrated Recorded Announcer BUI](#) on page 60.

Accessing the Integrated Recorded Announcer BUI

1. Enter the IP address of the card in the URL address field of the browser. The Integrated Recorded Announcer BUI login window appears.
2. Select the username; **admin** is the default.
3. Enter the password; **admin000** is the default password for admin.
4. Click on the **Login** button.

If login is successful, a confirmation message appears.

5. Click on **Main Menu**.

The main Integrated Recorded Announcer Administration page appears.

After accessing the BUI, OA&M functions can be performed.

The LAN connection to the Integrated Recorded Announcer card enables a user to Telnet to the Text-based User Interface (see [Text-based User Interface](#) on page 123) from a remote site and interact with the Integrated Recorded Announcer card in the same way as using a local maintenance terminal.

To Telnet to the Integrated Recorded Announcer card, follow the steps in [Telnetting to the Integrated Recorded Announcer card](#) on page 61.

Telnetting to the Integrated Recorded Announcer card

1. Use the Telnet command from any Operating System's command line.
2. Use the HyperTerminal program.

FTP downloads and uploads

LAN connection to the Integrated Recorded Announcer card allows the transfer of files to and from the card using File Transfer Protocol (FTP)? To use the FTP capability, the following are required:

- a connection of the Integrated Recorded Announcer card to the LAN through the Integrated Recorded Announcer card Audio-adaptor
- a permanent assignment of an IP address to the card
- a valid user name and password with which to access the card
- a standard FTP client application. (The figures in this section show the use of the WS_FTP Professional file transfer client.)

To transfer files to and from the Integrated Recorded Announcer card using FTP, follow the steps in [Transferring files to and from the Integrated Recorded Announcer card using FTP](#) on page 61.

Transferring files to and from the Integrated Recorded Announcer card using FTP

1. Open the FTP client application. Select Connect to open a dialog box similar to the one shown in [Figure 10: Logging in to the Integrated Recorded Announcer card through an FTP client application](#) on page 62.

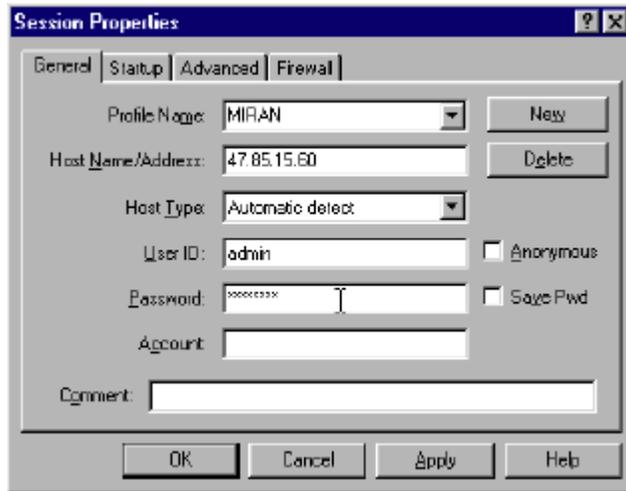


Figure 10: Logging in to the Integrated Recorded Announcer card through an FTP client application

2. Enter the IP address of the Integrated Recorded Announcer card in the Host Name/Address field.
3. Enter the user name and password for the card. This is the same user name and password used to log in to the Text-based User Interface.
4. Click **OK** to connect to the Integrated Recorded Announcer card.

A dialog box appears, similar to that shown in [Figure 11: Accessing the Integrated Recorded Announcer card through an FTP client application](#) on page 62. From here, files can be transferred to and from the card using FTP.

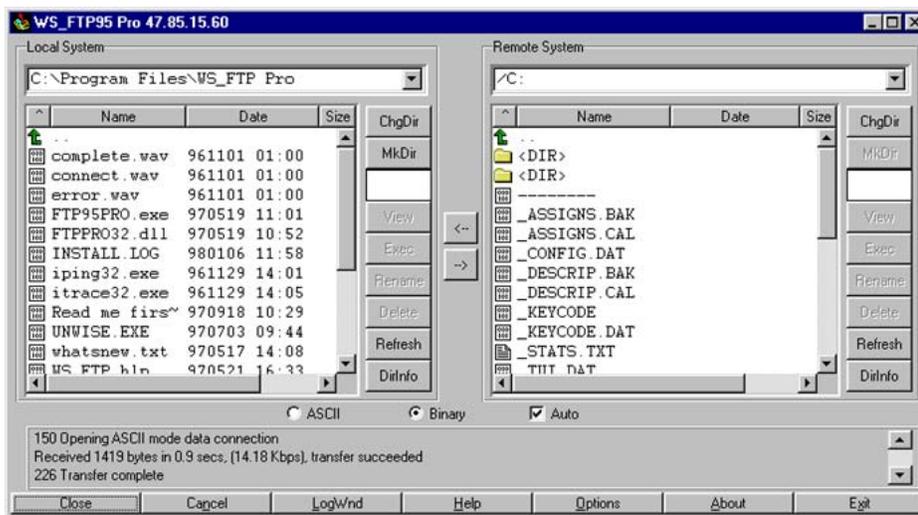


Figure 11: Accessing the Integrated Recorded Announcer card through an FTP client application

*** Note:**

Select 'ASCII' format for the transfer of text files and 'Binary' format for the transfer of all other files.

 **Note:**

If a .WAV file is copied to the Integrated Recorded Announcer card, remember the .WAV file must be converted to .ALW or .ULW format before an assignment can be created for the file. Refer to [Convert Announcement File](#) on page 147 for instructions on converting sound files.

The Remote System lists the files in the C: drive of the Integrated Recorded Announcer card. If files must be transferred to or from the A: drive, select the 'Change Directory' option on the FTP client application. Enter /A: as the new directory name.

The FTP client application can also be used to perform file maintenance functions on the Integrated Recorded Announcer card, such as:

- renaming or deleting files
- creating or deleting subdirectories

Most FTP client applications also allow profiles to be created for addresses that are frequently accessed. Use this capability to create a profile for each Integrated Recorded Announcer card in the network. This prevents having to enter the IP address, user name, and password each time a card is accessed.

Performing upgrades and replacements

Administration tasks can include upgrading RAN applications and performing backups. Upgrades can include:

- storage capacity expansion
- channel capacity expansion

PC Card backups

Backup is available to a PC Card, if required. The configuration must be backed up. Refer to [Backup Configuration](#) on page 150.

Insert a blank PC Card into the A: drive, as though increasing the messaging storage capacity. Use the **BACKUP** command on the Command line.

For details, refer to [Text-based User Interface](#) on page 123 and [Telephone User Interface](#) on page 199. The new card is now available as a backup medium rather than as a storage medium.

If a backup is done to a non-blank card, the existing files are overwritten.

 **Note:**

When backing up recordings and configuration, define the drive to use for backup.

Backups save configuration files. The configuration files contain information relating to the RAN/music PCM data stored on file such as:

- announcement-to-channel allocation
- passwords
- configuration variables

Restoring configuration

When the Integrated Recorded Announcer card is rebooted, the Integrated Recorded Announcer configuration is restored from the disk using the A: drive first and then the C: drive.

RAN upgrades

Two types of upgrade are available for Integrated Recorded Announcer:

- a software upgrade for a bug fix and/or addition of new features
- a memory upgrade to increase the voice storage capacity

To perform a local software upgrade, follow the steps in [Upgrading local software](#) on page 64.

Upgrading local software

1. Insert the new feature PC Card into the A: drive slot on the Integrated Recorded Announcer card.



The configuration file can be prepared in the distributor's office for each Integrated Recorded Announcer customer and then placed on the PC Card, along with the application and/or recorded announcements to be upgraded. Then, the PC Card is sent to the customer, who inserts the PC Card into the Integrated Recorded Announcer card and performs the upgrade procedure.

2. Initiate the upgrade by using the [Software Upgrade](#) on page 162. Integrated Recorded Announcer copies across the new application while maintaining all files from the existing ATA Flash memory that are still needed, such as existing recorded announcements and configuration.
3. Once the upgrade is complete, remove the old Flash card, unless it is needed to provide additional storage capacity.
4. Enter the new keycode on the Integrated Recorded Announcer card terminal to activate new features just installed.

 **Note:**

If the software upgrade is a maintenance type (for example, a bug fix), a new keycode is not needed.

 **Note:**

If the upgrade consists of a new application or enhancement, the administrator must enter a new keycode on the maintenance terminal to enable the upgrade.

5. Perform a cold reboot to activate the new feature(s).

To upgrade Integrated Recorded Announcer cards remotely from any location on the customer's network, follow the steps in [Upgrading remote software](#) on page 65.

Upgrading remote software

1. Log in to the card using an administrator level password. The access can be either through Telnet or through a modem connection.
2. Download the software upgrade binary over the network using FTP. Sufficient space must be available on the Integrated Recorded Announcer card.
3. Enter the software upgrade menu in the Text-based user interface through a serial or a Telnet connection, and call up the file that was just downloaded. Complete the upgrade using [Software Upgrade](#) on page 162.
4. Enter the new keycode on the Integrated Recorded Announcer card terminal to activate new features just installed.

 **Note:**

If the software upgrade is a maintenance type, such as bug fix, a new keycode is not needed.

 **Note:**

If the upgrade consists of a new application or enhancement, the administrator must enter a new keycode on the maintenance terminal to enable the upgrade.

5. Perform a cold reboot to activate the new feature(s).

Increasing voice storage

The voice storage capacity can be increased to the maximum amount available on commercially available PC Cards (up to five hours).

To expand the announcement storage capacity, insert a blank PC Card in the A: drive slot on the faceplate. The Integrated Recorded Announcer card software checks the memory card for formatting information. If none exists, the Integrated Recorded Announcer card formats the card in DOS format. When completed, the full capacity of the card is available for storage.

Recording announcements remotely for use on the Integrated Recorded Announcer card

Integrated Recorded Announcer enables a customer to record announcements on a remote PC, and then transfer them, using FTP, to the Integrated Recorded Announcer cards that reside in different locations. Through the Integrated Recorded Announcer BUI, the announcements can also be assigned to the various Integrated Recorded Announcer cards from the same remote PC.

For recording announcement files on a PC, Avaya recommends GoldWave™.

To record an announcement on a PC using GoldWave, follow the steps in [Recording an announcement](#) on page 66.

Recording an announcement

1. At the GoldWave window, go to the **Options** menu on the toolbar and select **File types**.
2. In the filename extension, insert **snd**; set Rate (Hz) to **8000**; set **Format:** to "**PCM**"; and set **Attributes:** to **8-bit, mono, unsigned**.
3. Click the **OS Associate** box and close the window.
4. Click the new icon on the toolbar.
5. Select **Voice** under quick settings, select **Mono** under channels, and select the desired length of the announcement.
6. Close the window.
7. Go to **Tools** on the toolbar and select **Device controls**.
8. Press the red button to begin recording. Press the red button again to finish the recording.



Note:

Use the **Help** menu to select the recording device.

9. Go to **Effects** on the toolbar and select **Resample**.
10. Change Rate (Hz) to 8000.
11. Select **OK**.
12. Go to **File** on the toolbar and select **Save as**.
13. Input the desired filename; select the file type, either ***.snd** or ***.raw**; and select **μ-law, mono**, or **a-law mono** in the **File Attributes:**.
14. Select **Save**.
15. Go to Windows Explorer, locate the file, and rename the file extension to **.ulw** (or **.alw**, if appropriate).

Recording announcements remotely for use on the Integrated Recorded Announcer card

16. Transfer the recording to a PC Card or send it by FTP to the Integrated Recorded Announcer card's C: drive.
17. Once the recording is on the Integrated Recorded Announcer card's C: drive, assign it to any available Integrated Recorded Announcer card's channel.

 **Note:**

Remember to send announcement files as type Binary by using FTP.

 **Note:**

As an alternative to Step 15, save the file as type *.wav instead of *.snd or *.raw in Step 13. Then skip Step 15 and transfer the .wav file to the Integrated Recorded Announcer card's C: drive as described in Step 16. However, once the .wav file is on the C: drive, it must be converted to μ -law or a-law format before the announcement can be assigned to an Integrated Recorded Announcer card channel. See [Convert Announcement File](#) on page 147.

To replace old announcement files with the new files that are on the PC Card, follow the steps in [Replacing old announcement files](#) on page 67.

Replacing old announcement files

1. Display existing (old) files by accessing the File Explorer window from the File Commands menu.
[File Commands menu](#) on page 155
2. Delete the files to be replaced.
[Delete File](#) on page 157
3. Copy new files from the PC Card into the drive where the other announcement files are located.
[Copy File](#) on page 156
4. Convert files from .WAV to .ULW or .ALW, or convert files from .ULW or .ALW to .WAV, if required.

[Convert Announcement File](#) on page 147

Professionally recorded prompts must be in .WAV, .ALW, or .ULW format. [Record Announcement from External Channel](#) on page 146 Also see [Sound recording configuration](#) on page 225.

Foreign language prompt

The Integrated Recorded Announcer TUI uses English language prompts by default. The application can be configured to operate with French, German, and Italian prompts. The appropriate language prompts files can be downloaded from the Avaya web site.

To change the language prompts used by the Telephone User Interface, follow the steps in [Changing language prompts used by the Telephone User Interface](#) on page 68.

Changing language prompts used by the Telephone User Interface

1. Create a directory on the C: (internal) drive or A: (PC Card) drive.

This can be achieved by accessing the **Make Directory** link on the BUI navigator tree or by the Text User Interface. Enter the directory name as FRENCH, GERMAN, or ITALIAN.

2. Download the prompts from the web site into the respective directory.
3. Go to the Configuration Variables Modify page on the BUI.
4. Select the **Language** variable.
5. Change the **Language** variable to FRENCH, GERMAN, or ITALIAN, and click modify.

This modification can be verified by going to the Configuration Variables View.

The prompts on the TUI will now be in the language defined in the Language Configuration Variable.

 **Note:**

English language prompts are the default and are part of the Integrated Recorded Announcer application. For example, if the language is changed to English, the English prompts do not need to be downloaded.

Chapter 6: Engineering guidelines

Contents

This section contains information on the following topics:

[Introduction](#) on page 69

[Software requirements](#) on page 70

[For users with RAN Broadcast](#) on page 70

[For users without RAN Broadcast](#) on page 71

[Integrated Recorded Announcer requirements](#) on page 72

[Integrated Recorded Announcer card channel capacity options](#) on page 72

[Integrated Recorded Announcer card listener capacity options](#) on page 73

[Supported RAN modes](#) on page 73

[Voice storage capacity](#) on page 74

[Power and ground requirements](#) on page 74

[External equipment requirements](#) on page 75

[Maintenance terminal requirements](#) on page 75

[Telephone for OAM access](#) on page 76

[External analog sources](#) on page 76

[Integrated Recorded Announcer card hardware list](#) on page 77

[Ethernet/LAN requirements](#) on page 78

[Summary of LAN installation information](#) on page 81

[Testing LAN configuration](#) on page 81

[Engineering Integrated Recorded Announcer](#) on page 82

Introduction

General system engineering guidelines are described in *Avaya Communication Server 1000M and Meridian 1 Large System Planning and Engineering, NN43021-220*. The following

information deals specifically with the engineering guidelines for Integrated Recorded Announcer planning and implementation. For Integrated Recorded Announcer technical characteristics, refer to [Environmental and electrical regulatory data](#) on page 231.

Software requirements

The Integrated Recorded Announcer card emulates the Enhanced Extended Universal Trunk (EXUT) card. The Integrated Recorded Announcer card uses the existing Trunk Administration LD 14 and Trunk Route Administration LD 16 programs to configure the Integrated Recorded Announcer trunk parameters and Integrated Recorded Announcer trunk routes.

The available software options that the user has affect the functions of the Integrated Recorded Announcer card. The following paragraphs detail the differences.

For users with RAN Broadcast

With the RAN Broadcast feature, each internal one-to-one channel can support up to 30 callers simultaneously using a single time slot. RAN Broadcast also provides other benefits, such as the ability to stagger announcements based on time or number of callers in queue, and the ability to provide MOH until a RAN is available.

Large Systems with RAN Broadcast

Large Systems do not come with preinstalled RAN Broadcast connections. RAN Broadcast connections (SW150A) can be purchased in increments of one.

Example:

A customer with a Large System requires RAN for two incoming trunk routes. Each route requires a first RAN for up to 25 callers and a second RAN for up to 20 callers. The system then requires 90 RAN Broadcast connections and one small Integrated Recorded Announcer card.

[Table 13: Card slots available for Integrated Recorded Announcer installation in different modules](#) on page 70 lists the card slots in which Integrated Recorded Announcer can be installed.

Table 13: Card slots available for Integrated Recorded Announcer installation in different modules

System modules	Suitable card slots
NT8D37BA/EC IPE modules	All available IPE card slots

System modules	Suitable card slots
NT8D37AA/DC IPE modules	Slots 0, 4, 8, and 12
NTAK11BD Cabinets	Slots 1 to 10 in Main Cabinet Slots 11 to 50 in Expansion Cabinet(s)
NTDK91BB Main Chassis	Slots 1 to 3 (not 4)
NTDK92BB Chassis Expander	Slots 7 to 10
NTDU14 Media Gateway	Slots 1 to 4 may be used for MIRAN
NTDU15 Media Gateway Expansion	Slots 7 to 10

For users without RAN Broadcast

 **Note:**

This section applies to customers who have the MLSS option, but do not have RAN Broadcast.

With the MLSS RAN mode, the Integrated Recorded Announcer one-to-one channels can each have the same RAN announcement or music assignment, and the same MLSS RAN trunk route assignment. Therefore, multiple callers can hear the same RAN announcement, although listening on different Integrated Recorded Announcer one-to-one channels. One large Integrated Recorded Announcer card in MLSS mode supports up to eight callers listening to the same announcement.

 **Note:**

Avaya recommends that port/channel 7 of the Integrated Recorded Announcer card be reserved exclusively for the TUI. This configuration leaves a maximum of seven listeners hearing the same announcement on a single Integrated Recorded Announcer card.

For example, ten callers must be able to hear the same RAN announcement.

Use ten Integrated Recorded Announcer one-to-one ports/channels (two Integrated Recorded Announcer cards), placing all of them in the same MLSS RAN route and placing the same recording on all ten channels.

 **Note:**

The MLSS RAN mode allows playing of the same recording independently on multiple channels over the same RAN route.

Integrated Recorded Announcer requirements

The Integrated Recorded Announcer equipment can be engineered to meet specific site and application requirements. Select the number of ports/channels and the size of the memory required to support current and future requirements. The Integrated Recorded Announcer card is available in a basic form that provides a limited number of ports/channels, and minimum memory size. Basic Integrated Recorded Announcer can be easily upgraded by building on the existing basic platform to increase the number of ports/channels and the memory size.

Integrated Recorded Announcer card channel capacity options

The Integrated Recorded Announcer card comes in three port/channel capacity options. These options are listed in [Table 14: Integrated Recorded Announcer card capacity options](#) on page 72.

For each capacity option, port 7 can be configured as a DID port for telephone-based TUI OA&M access. In this case, port 7 of the large Integrated Recorded Announcer card option is not available for RAN or MOH applications. Alternatively, port 7 on a large Integrated Recorded Announcer card can be configured for RAN and MOH when not needed for telephone-based OA&M access.

Table 14: Integrated Recorded Announcer card capacity options

Integrated Recorded Announcer card capacity option	No. of one-to-one ports/channels (North America)	No. of one-to-one ports/channels (International)
Small	Not applicable	2 (See Note 1)
Medium	4 (See Note 1)	4 (See Note 1)
Large	8	8
<p> Note: Also includes port 7 for the Telephone User Interface (TUI).</p> <p> Note: Integrated Recorded Announcer does not support multi-cross connect ports.</p>		

The small and medium Integrated Recorded Announcer card options continue to have all one-to-one ports/channels available for RAN and MOH, because port/channel 7, which is used for telephone-based OA&M access, does not count against the port capacity for these two options.

Integrated Recorded Announcer card listener capacity options

The size of the Integrated Recorded Announcer card (small, medium, or large) affects the number of simultaneous calls that the Integrated Recorded Announcer card can support. The RAN Broadcast feature also affects the number of simultaneous calls that the Integrated Recorded Announcer card can support.

Without RAN Broadcast, each internal one-to-one port can support a single call at a time. With RAN Broadcast, each internal one-to-one port can support 30 simultaneous listeners.

[Table 15: Integrated Recorded Announcer card call-handling capacities](#) on page 73 lists the total call-handling capacity for each Integrated Recorded Announcer card size, with and without RAN Broadcast.

Table 15: Integrated Recorded Announcer card call-handling capacities

Integrated Recorded Announcer card size option	Call capacity without RAN Broadcast	Call capacity with RAN Broadcast
Small	2	30
Medium	4	120
Large	7 (8)	210 (240)
<p> Note: If port 7 is configured for RAN, the figures in parentheses apply.</p>		

Supported RAN modes

The Integrated Recorded Announcer card supports the following RAN modes for the internal channels:

- Internal one-to-one ports/channels support continuous and Level Start (LVL) RAN and MOH modes.
- Internal one-to-one ports/channels support Multi-Level Start/Stop (MLSS or MLVL) RAN and MOH modes.

 **Note:**

Integrated Recorded Announcer supports Automatic Wake Up. To configure this feature on Integrated Recorded Announcer, refer to Automatic Wake Up in *Avaya Features and Services Fundamentals, NN43001-106*.

Voice storage capacity

Expand the Integrated Recorded Announcer card storage capacity by installing a PC Card into the faceplate slot (A: drive).

[Table 16: Integrated Recorded Announcer card voice storage capacity expansion](#) on page 74 lists the memory size and the corresponding announcement recording time.

Table 16: Integrated Recorded Announcer card voice storage capacity expansion

Memory allocation	Recording time
Base Integrated Recorded Announcer card (NT0966CA) memory	approximately 20 to 24 minutes
64 Mb PC Card Flash memory	128 minutes
Each additional 1 Mb of Flash memory	2 minutes
<p> Note: The royalty-free music file (filename: music.mcf) occupies approximately 6 minutes of the available 20 to 24 minutes of recording time.</p>	

Power and ground requirements

The card slot backplane (AC or DC) provides power to the Integrated Recorded Announcer card.

 **Note:**

The power supplied at the backplane card slot exceeds the power requirement for each Integrated Recorded Announcer card. Therefore, there is no restriction on the number of Integrated Recorded Announcer cards.

[Table 17: Integrated Recorded Announcer card power requirements](#) on page 74 displays the Integrated Recorded Announcer card power requirements.

Table 17: Integrated Recorded Announcer card power requirements

Configuration	+/-15V	5V	Total Power
Basic 8-port/channel	4.958 W	5.46 W	10.418 W

The power budget requirement for the Integrated Recorded Announcer card is within the allowable budget. The maximum IPE module per-slot power budget is 30 Watts, with an effective limitation of 20 Watts for thermal compensation.

[Table 18: Backplane power available \(for each card slot\)](#) on page 75 shows the maximum current available from each power supply rail.

Table 18: Backplane power available (for each card slot)

Supply Rail	Available on backplane	With dc-dc converter	Integrated Recorded Announcer card
3.3 V	—	2400 mA	8 W
5 V	2000 mA	2000 mA	10 W
+/- 15 V	800 mA	366 mA	10 W

The processor contains three separate grounds : logic, analog, and frame. Logic ground connects to the processor ground. The codec has its own separate analog ground that connects to the logic ground at a single point.

Each Integrated Recorded Announcer card I/O port routed to the backplane has its own ground to simplify connections.

External equipment requirements

The Integrated Recorded Announcer card can perform RAN applications without any external connections.

External devices must be connected to the Integrated Recorded Announcer card faceplate connector or Integrated Recorded Announcer Audio-adaptor, to perform any of the following operations:

- text-based (or terminal-based) OA&M
- web-based OA&M
- connecting external music sources to the Integrated Recorded Announcer card
- recording RAN announcements or music

Maintenance terminal requirements

A VT100 terminal, or a PC emulating a terminal, is used to:

- perform RAN and Integrated Recorded Announcer card administration
- perform maintenance and diagnostics on each Integrated Recorded Announcer card

A terminal can use:

- a menu system to perform administrative and maintenance functions
- commands that are entered on the command line

The terminal must be connected to the Integrated Recorded Announcer card RS-232 interface. The connection can be made:

- at the mini-DIN connector on the Recorded Announcer card faceplate using the NTAG81CA or NTAG81DA Maintenance Cable for occasional use
- at the Amphenol connector through a 9-pin D-Sub connector on the Audio-adaptor

The terminal interface must be set at:

- 9600 baud
- 8 data bits
- 1 stop bit
- no parity

The flow control is not supported.

Telephone for OAM access

An Unrestricted (UNR) DTMF telephone must be used for the TUI. To perform telephone-based OA&M, set port 7 to be a DID trunk in the system. The DID trunk route makes Integrated Recorded Announcer card port 7 accessible through a route access code from any unrestricted DTMF telephone. To access an Integrated Recorded Announcer card, enter a valid user name and password. Small and medium-size Integrated Recorded Announcer card options also use port 7 for telephone-based OA&M access.

External analog sources

The Integrated Recorded Announcer card provides a facility to connect tape recorders or CD players to do the following:

- record to file
- record announcements from the Integrated Recorded Announcer card onto a tape for backup
- record backed-up announcements to another Integrated Recorded Announcer card

These external analog sources can be connected to the Audio Jack connection on the Integrated Recorded Announcer Audio-Adapter using the NTAG81AA Audio Cable.

**Note:**

With an Integrated Recorded Announcer card, a standard 3.5 mm stereo audio jack can also be used to provide an external audio source.

Integrated Recorded Announcer card hardware list

[Table 19: Integrated Recorded Announcer card hardware list](#) on page 77 lists specific Integrated Recorded Announcer card hardware components designed to support RAN and MOH applications in the system.

[Table 19: Integrated Recorded Announcer card hardware list](#) on page 77 does not list external equipment, such as terminals, telephones, and recorders, because they are (or can be) non-proprietary products.

Table 19: Integrated Recorded Announcer card hardware list

Component	Comments	Description
NT0966CA Integrated Recorded Announcer card	Provided	An IPE card that provides RAN and MOH applications over the system.
NTA0870611 Integrated Recorded Announcer Audio-adaptor	Provided	Converts the Amphenol connector to one Ethernet port (10BaseT), a local RS-232 maintenance connection, and a 9-pin DIN connector audio jack.
NTAG81BA Maintenance Extender Cable	Optional	A 5 m (16.4 ft) cable that extends the NTAG81CA, NTAG81GA, or the NTAG81DA cables when connecting a terminal to the Integrated Recorded Announcer card. It has one DB-9 male and one DB-9 female connector.
NTAG81CA Maintenance Cable	Optional	A 3 m (9.8 ft) cable that connects the terminal to the Integrated Recorded Announcer card 8-pin Mini-DIN maintenance port on the faceplate. It is terminated with an 8-pin Mini-DIN male connector and a DB-9 female connector.
16 Mb and 64 Mb Compact Flash	Optional	Use with PC Card adaptor. Used for backup and storage.
PC Card Adaptor	Optional	PC Card to Compact Flash Memory Card Adaptor

Ethernet/LAN requirements

Integrated Recorded Announcer customers can use the following alternatives for LAN connectivity access.

[Table 20: Firewall access permissions](#) on page 78 summarizes the recommended access permissions allowed by the firewall. All other paths not in the table should be denied.

Table 20: Firewall access permissions

Source	Destination	Protocol
WWW	Integrated Recorded Announcer	HTTP
Customer's enterprise IP network	Integrated Recorded Announcer	HTTP, FTP, Telnet

[Figure 12: Option 1 Enterprise IP network connection](#) on page 79 and [Figure 13: Option 2 ELAN subnet connection](#) on page 80 show the network configuration options available for Integrated Recorded Announcer.

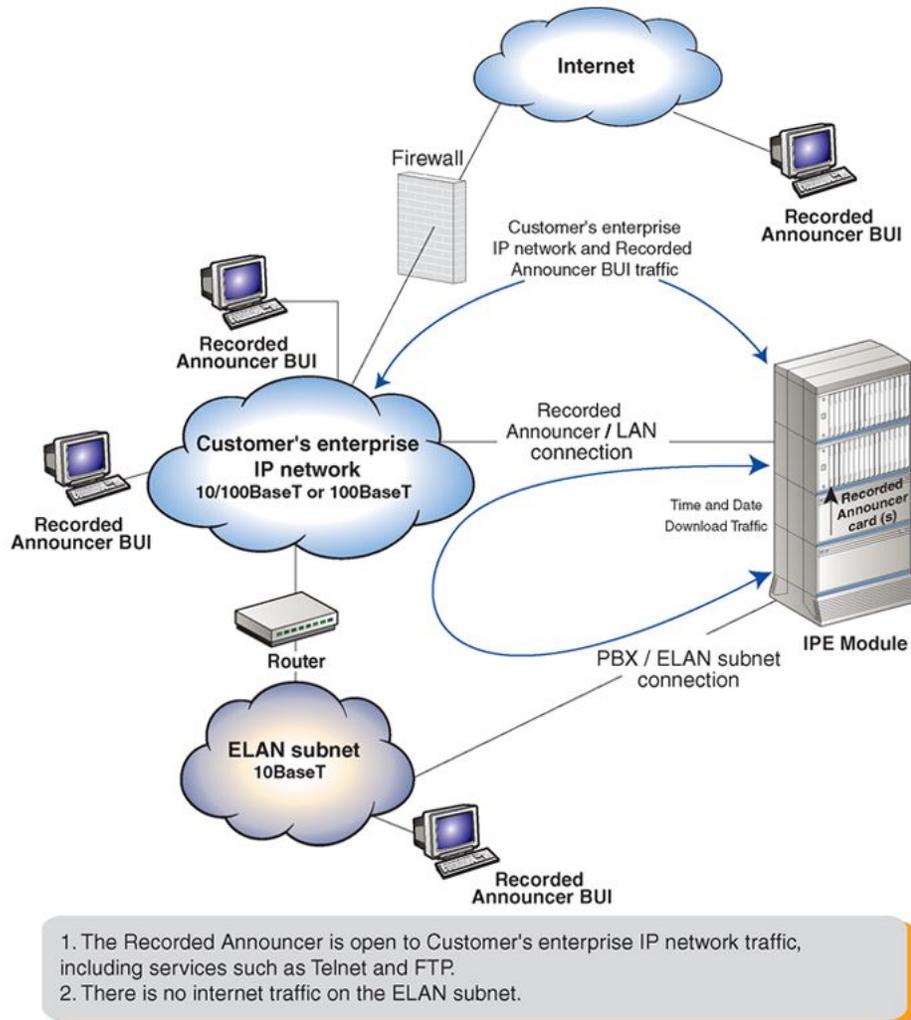


Figure 12: Option 1 Enterprise IP network connection

The Integrated Recorded Announcer network configuration Option 1 has the following restrictions:

- The Integrated Recorded Announcer is open to the customer's enterprise IP network traffic and includes services such as Telnet and FTP.
- There is no web traffic on the ELAN subnet.
- If there is no router available between the customer's enterprise IP network and ELAN subnet, manually program the time of day on the Integrated Recorded Announcer card.

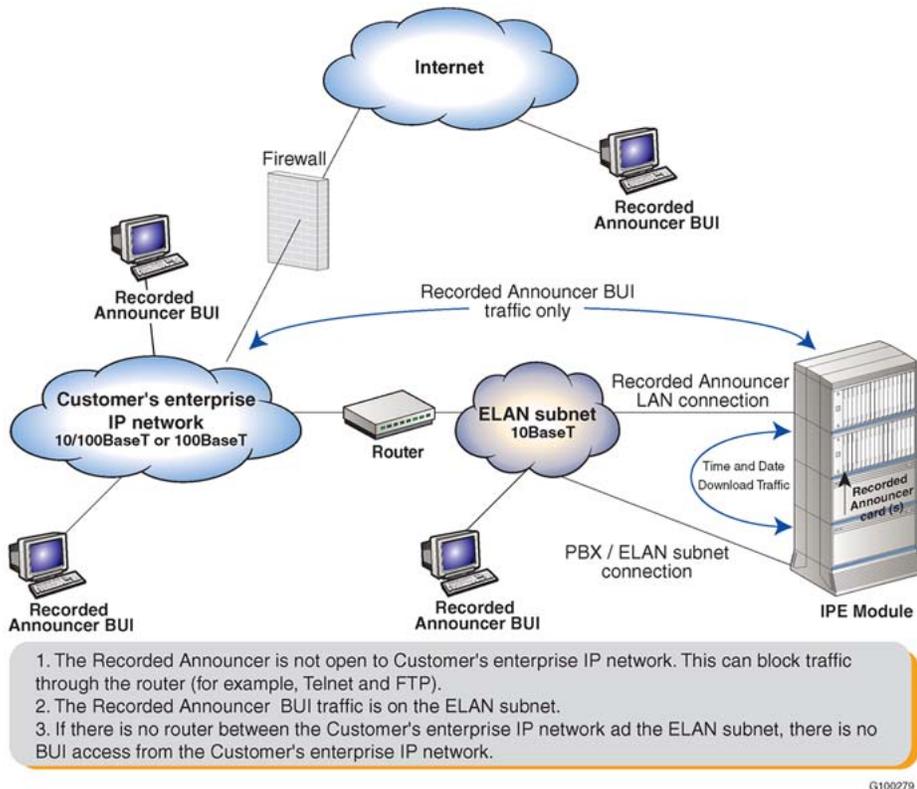


Figure 13: Option 2 ELAN subnet connection

The Integrated Recorded Announcer network configuration Option 2 has the following restrictions:

- Integrated Recorded Announcer is not open to the customer's enterprise IP network traffic and the traffic can be blocked through a router, which blocks Telnet and FTP.
- The Integrated Recorded Announcer BUI traffic is available on the ELAN subnet.
- If there is no router between the customer's enterprise IP network and the ELAN subnet, the BUI cannot be accessed from the customer's enterprise IP network.

The following apply to LAN and intranet access only:

- Each site should select the most convenient option, taking into account the physical LAN endpoints available near the Integrated Recorded Announcer card.
- When there are multiple Integrated Recorded Announcer cards (that is, more than three) and the BUI is used frequently, BUI traffic can overload the ELAN subnet, so it may be better to connect the Integrated Recorded Announcer cards to the customer's enterprise IP network.

Summary of LAN installation information

To install and configure the LAN, follow the steps in [Installing and configuring the LAN](#) on page 81.

Installing and configuring the LAN

1. Determine if Integrated Recorded Announcer can be accessed from the internet.
If yes, coordinate the firewall configuration with the user IS group according to [Table 20: Firewall access permissions](#) on page 78.
2. Determine the physical connection point of the Integrated Recorded Announcer card.

**Note:**

10BaseT connectivity is required for this procedure.

3. Obtain the following Integrated Recorded Announcer card IP parameters from the user IS group: IP address, gateway address, and subnet mask.
4. Obtain the Mail Server IP address from the user IS group. Confirm that the Integrated Recorded Announcer card is allowed to access the server by SMTP.

Testing LAN configuration

To test the LAN configuration, follow the steps in Procedure 19.

Testing the LAN configuration

1. After the Integrated Recorded Announcer card is installed and the IP parameters are configured, try to PING the Integrated Recorded Announcer card from any host in the customer's enterprise IP network or try to ping a host on the customer's enterprise IP network from an Integrated Recorded Announcer card.
2. In the case of internet access, try accessing the Integrated Recorded Announcer card from a web browser (HTTP access).

Using the LAN connection, the following actions can be performed

- Access a BUI from any PC with a common web browser, in order to perform web-based OA&M (the BUI is embedded on the Integrated Recorded Announcer card).
- Perform FTP downloads and uploads of announcement and music files from the Integrated Recorded Announcer card.
- Telnet to the Integrated Recorded Announcer card Text-based User Interface through the BUI.

*** Note:**

Connection to the LAN is optional. All OA&M functions can be performed through the Text-based User Interface.

To access each Integrated Recorded Announcer card over the LAN, the following are required:

- one Audio-adaptor and Serial Cable (available as an accessory)
- a shielded RJ-45 mating coupler and shielded RJ-45 cable to connect to the customer hub (not supplied)
- an IP address, subnet mask, and gateway for the Integrated Recorded Announcer card (supplied by the network administrator)
- an FTP client to transfer files remotely to and from the Integrated Recorded Announcer card. Avaya recommends WS_FTP.
- a Telnet client for remote access to the Integrated Recorded Announcer card Text-based User Interface. Avaya recommends HyperTerminal 4.0 or later.
- a web browser that supports HTML frames.

*** Note:**

European customers with a Large System that require LAN access to the Integrated Recorded Announcer card must install the card (NT0966CA) in slot 0, 4, 8, or 12 in the IPE shelf.

LAN hub and router recommendations

A 10/100BaseT switch is recommended.

Engineering Integrated Recorded Announcer

Based on the options of the Integrated Recorded Announcer card equipment, external equipment, and the RAN and MOH requirements, an Integrated Recorded Announcer system can be engineered to meet the system requirements.

The following six examples illustrate the equipment that is required to meet specific site application requirements. It also discusses how to connect external devices to the Integrated Recorded Announcer card.

Example 1:

Application requirements:

- two internal RAN channels
- one hour of recording space on the Integrated Recorded Announcer card.
- telephone-based OA&M access

Equipment requirements:

- one small Integrated Recorded Announcer card
- one 64 Mb compact flash with PC Adaptor Card

Example 2:

Application requirements:

- multi-channel level start/stop control RAN mode for four internal RAN channels
- four minutes of recording space on the Integrated Recorded Announcer card
- terminal-based OA&M access

Equipment requirements:

- one medium Integrated Recorded Announcer card
- one NTAG81CA Maintenance cable (8-pin mini DIN to 9-pin D-sub) to connect to the faceplate

or

one NTAG81BA Maintenance cable extender (9-pin D-sub male to 9-pin D-sub female) to connect to the Audio-adaptor

 **Note:**

In this mode, all four ports/channels play the same announcement independently over the same RAN route.

Example 3:

Application requirements:

- seven internal RAN channels
- one hour of recording space on the Recorded Announcer card

- telephone-based OA&M access
- terminal-based OA&M access
- web-based OA&M access

Equipment requirements:

- one large Recorded Announcer card
- one 64 Mb compact flash with PC Adaptor Card
- one NTAG81CA Maintenance cable (8-pin MINI DIN to 9-pin D-sub) to connect to the faceplate

or

one NTAG81BA Maintenance cable extender (9-pin D-sub male to 9-pin D-sub female) to connect to the Audio-adaptor

Example 4:

Application requirements:

- 11 internal RAN channels
- one hour of recording space on the Recorded Announcer card
- telephone-based OA&M access
- terminal-based OA&M access

Equipment requirements:

- one large Integrated Recorded Announcer card
- one 48 Mb compact flash memory card adaptor
- one medium Integrated Recorded Announcer card for the international market
- two NTAG81CA Maintenance cables (8-pin MINI DIN to 9-pin D-sub) to connect to the faceplate

or

two NTAG81BA Maintenance cable extenders (9-pin D-sub male to 9-pin D-sub female) to connect to the Audio-adaptor

 **Note:**

The total number of internal one-to-one ports is 12. Configure port 7 on each card as a DID trunk for telephone-based OA&M access. This reduces the number of available ports for RAN and MOH applications on the large Integrated Recorded Announcer card to seven ports, but the number of available ports on the small (or medium) Integrated Recorded Announcer card remains at four.

Example 5:

Application requirements:

- 14 internal RAN channels
- one hour of recording space
- two external analog (music) sources
- telephone-based OA&M access
- terminal-based OA&M access

Equipment requirements:

- one 64 Mb compact flash with PC Adaptor Card
- two NTAG81AA Audio cables to connect external analog sources, or two standard stereo cables
- two NTAG81CA Maintenance cables (8-pin MINI DIN to 9-pin D-sub) to connect to the faceplate

or

two NTAG81BA Maintenance cable extenders (9-pin D-sub male to 9-pin D-sub female) to connect to the Audio-adaptor

 **Note:**

The total number of internal one-to-one ports is 16. Configure port 7 on each card as a DID trunk for telephone-based OA&M access. This reduces the number of available ports for RAN and MOH applications on each large Integrated Recorded Announcer card to seven ports.

Example 6:

Application requirements:

- three recorded announcements for up to 12 total simultaneous callers and MOH for up to 64 simultaneous callers
- four minutes of recording space on the Recorded Announcer card
- telephone-based, terminal-based, and web-based OA&M access

Equipment/system requirements:

- one medium Integrated Recorded Announcer card
- system software with RAN and Music Broadcast features

- 12 RAN Broadcast connections
- 64 Music Broadcast connections

 **Note:**

Avaya preequips each Cabinet system with 12 RAN Broadcast connections and 100 Music Broadcast connections. For all other systems, additional RAN and Music Broadcast connections can be purchased in increments of one.

one NTAG81CA Maintenance Cable (8-pin MINI DIN to 9-pin D-sub) to connect to the faceplate

or

one NTAG81BA maintenance cable extender (9-pin D-sub male to 9-pin D-sub female) to connect to the Audio-adaptor

Chapter 7: Integrated Recorded Announcer Browser User Interface

Contents

This section contains information on the following topics:

- [Introduction](#) on page 87
- [Accessing the BUI](#) on page 88
- [Logging in to the BUI](#) on page 89
- [Navigating the BUI](#) on page 89
 - [Administration menu](#) on page 90
 - [Pack Administration menu](#) on page 99
 - [Pack Information menu](#) on page 107
- [File System](#) on page 110
- [Pack User menu](#) on page 116
- [Support](#) on page 119
- [Resetting the BUI](#) on page 121
- [Logging out of the BUI](#) on page 122
- [Help on the BUI](#) on page 122

Introduction

This chapter describes the Integrated Recorded Announcer Browser User Interface (BUI). The BUI applies to Integrated Recorded Announcer cards that are configured with a valid IP address and connected to a LAN through an Ethernet adaptor. The BUI can also be accessed using a cross-over cable that provides a direct connection to the card. For equipment and configuration information regarding the Integrated Recorded Announcer BUI, refer to [LAN access installation and setup](#) on page 59.

*** Note:**

OA&M functions can also be performed through the Text-based User Interface and the Telephone User Interface (TUI). Refer to [Text-based User Interface](#) on page 123 and [Telephone User Interface](#) on page 199.

The Integrated Recorded Announcer BUI allows the user to access the Integrated Recorded Announcer card through the LAN using a common web browser.

*** Note:**

Any web browser used must support HTML frames.

To access the Integrated Recorded Announcer card through a web browser, the IP address of the Integrated Recorded Announcer card must first be configured through the Text-based User Interface on the maintenance serial port. Request a different IP address for each Integrated Recorded Announcer card in the system.

Accessing the BUI

To access the Integrated Recorded Announcer card through a web browser, enter the IP address of the card in the URL address field. The Login window appears. See [Figure 14: Login window](#) on page 88.



Figure 14: Login window

Logging in to the BUI

 **Note:**

If there are no Users configured in Integrated Recorded Announcer, only an Administrator can log in. Once logged in, the Administrator can configure the new Users.

To log in to the Integrated Recorded Announcer BUI, follow the steps in [Logging in to the BUI](#) on page 89.

Logging in to the BUI

1. Enter a valid User Name in the User Name field.
2. Enter a valid password in the Password field.

 **Note:**

For the initial login, default user names and passwords are the same as those for the Text-based User Interface. Refer to [Login window](#) on page 127.

3. Click **OK**. If the login is successful, the Welcome to MIRAN window opens.

 **Note:**

After three unsuccessful login attempts, the BUI locks the user out for 20 minutes.

Navigating the BUI

The Main BUI window consists of two panes. The left pane provides links to the OA&M functions to which the user has access.

The right pane of the Main BUI window is where OA&M information is displayed and where all user input takes place. Access the OA&M menus and windows by clicking on the appropriate link either in the left pane or in the selected menu.

Drop-down lists of available options and text fields are provided in all context windows that require data entry. Select the required option with the mouse, or enter the required information in the text box, before pressing the Submit/Execute button for the form. When the operation is completed, a confirmation or an error message is displayed in a results table.

The Menu links in the left frame of the BUI consist of:

- [Administration menu](#) on page 90
- [Pack Administration menu](#) on page 99

- [Pack Information menu](#) on page 107
- [File System](#) on page 110
- [Pack User menu](#) on page 116
- [Support](#) on page 119

At any time during the session, click on these links to access the menus.

The following sections describe menus and windows in the BUI.

Administration menu

The Administration menu consists of links to the following:

- Calendar
- Descriptor
- Record from Codec
- File Conversion
- Backup/Restore

Calendar operations

Use the Calendar windows for making calendar assignments to any of the available channels. For a description of the Calendar operation, refer to [Calendar assignment feature](#) on page 18.

Assign

When the **Assign** link is clicked, the Calendar Assignment window opens. See [Figure 15: Calendar Assignment window](#) on page 91.

Figure 15: Calendar Assignment window

Use the Calendar Assignment window to add time- and date-based assignments to the 366-day calendar.

To add an entry to the calendar, follow the steps in [Adding an entry to the calendar](#) on page 91.

Adding an entry to the calendar

1. Select an announcement file from the **Filename** drop-down list.

The Filename drop-down list contains all available announcement files and the codec option. Selecting the codec assigns the input from the analog input on the Audio Adaptor.

2. Select a descriptor from the **Descriptor** drop-down list.

The Descriptor drop-down list contains all calendar descriptors.

 **Note:**

The descriptor selected from the Descriptor drop-down list overrides any values entered in the **Time** and **Date** fields.

3. To make an assignment with an explicit date and time:
 - a. Enter the date and time values in the **Date** and **Time** fields.
 - b. Select **None** from the Descriptor drop-down list.
4. In the **Channels** field, enter a string describing a channel or list of channels.

Examples:

- "0,3" for channels 0 and 3
- "4-7" for channels 4, 5, 6, and 7
- "0, 3-5,7" for 0, 3, 4, 5, and 7

- "*" (asterisk) for all channels to which the user has access

*** Note:**

Error messages appear if users attempt to make assignments to channels to which they do not have access.

5. Click **Assign**.

Modify/Delete

When a user clicks the **Modify/Delete** link, the Select a Calendar Assignment to Modify/Delete window opens. See [Figure 16: Select a Calendar Assignment to Modify/Delete window](#) on page 92.

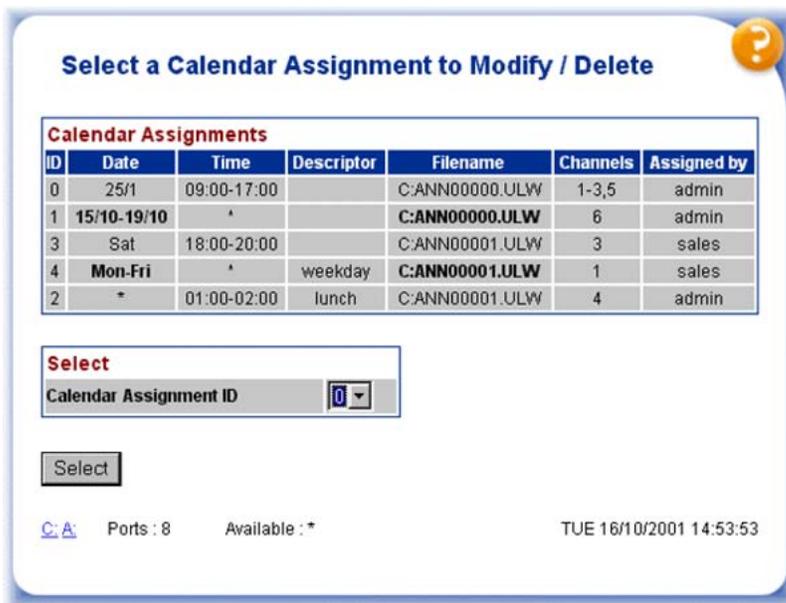


Figure 16: Select a Calendar Assignment to Modify/Delete window

To modify or delete a calendar assignment, follow the steps in [Modifying or deleting a calendar assignment](#) on page 92.

Modifying or deleting a calendar assignment

1. Select a Calendar Assignment ID from the Calendar Assignment ID drop-down list.
2. Click **Select**.
The Calendar Assignment's information appears.
3. Modify the Calendar Assignment information or delete the Calendar Assignment.

*** Note:**

Only the user who made the assignment can delete it. A user logged in as an administrator or higher can remove any assignment.

View

When the **View** link is clicked, the View Calendar Assignments window opens. See [Figure 17: View Calendar Assignments window](#) on page 93.

Calendar Assignments						
ID	Date	Time	Descriptor	Filename	Channels	Assigned by
0	25/1	09:00-17:00		C:ANN00000.ULW	1-3,5	admin
1	15/10-19/10	*		C:ANN00000.ULW	6	admin
3	Sat	18:00-20:00		C:ANN00001.ULW	3	sales
4	Mon-Fri	*	weekday	C:ANN00001.ULW	1	sales
2	*	01:00-02:00	lunch	C:ANN00001.ULW	4	admin

C:A Ports : 8 Available : * TUE 16/10/2001 14:57:26

Figure 17: View Calendar Assignments window

The View Calendar Assignments window shows all defined Calendar assignments, as well as which users made the assignments. Assignments in the Calendar that match the current date and time have their file name highlighted in bold.

Descriptor operations

Use the Calendar windows to add, modify, or delete calendar descriptors. Calendar descriptors are an easy way to store frequently used times and dates for assignments. Refer to [Calendar Descriptors](#) on page 20 for more information.

Create

When the **Create** link is clicked, the Create Descriptor window opens. See [Figure 18: Create Descriptor window](#) on page 94.

Create Descriptor

Descriptor

Name	weekend
Date	SAT-SUN
Time	*

Create

[C: A](#) Ports : 8 MON 03/09/2001 14:22:15

Figure 18: Create Descriptor window

To create a calendar descriptor, follow the steps in [Creating a calendar descriptor](#) on page 94.

Creating a calendar descriptor

1. Enter the Descriptor name in the **Name** field.
2. Enter the Date that applies to the Descriptor in the **Date** field.
3. Enter the Time that applies to the descriptor in the **Time** field.
4. Click **Create**.

Modify/Delete

When the **Modify/Delete** link is clicked, the **Select a Descriptor to Modify/Delete** window opens. See [Figure 19: Select a Descriptor to Modify/Delete window](#) on page 95.

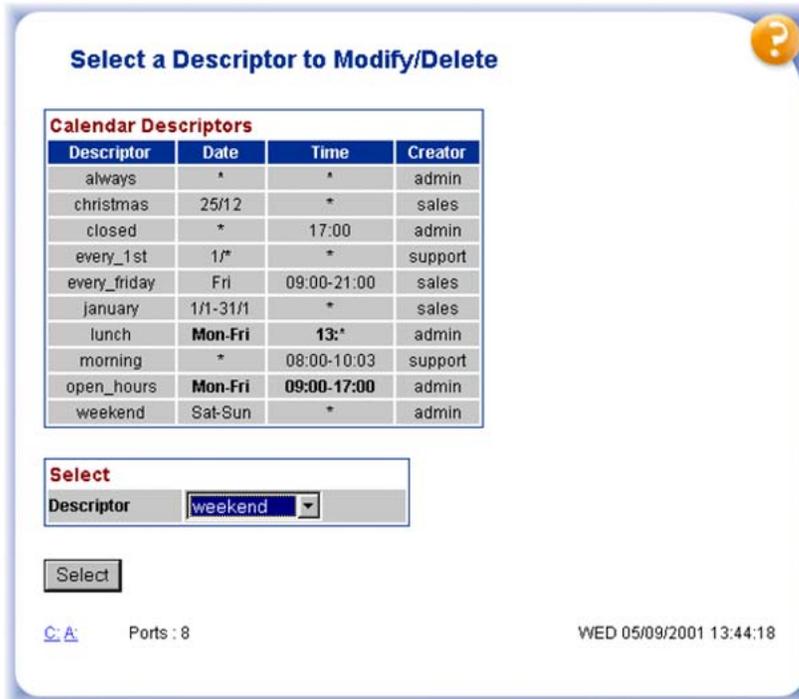


Figure 19: Select a Descriptor to Modify/Delete window

To modify or delete a calendar descriptor, follow the steps in [Modifying or deleting a calendar descriptor](#) on page 95.

Modifying or deleting a calendar descriptor

1. Select a calendar descriptor from the **Descriptor** drop-down list.
2. Click **Select**.

The Descriptor information appears in the Modify/Delete window. See [Figure 20: Select a Descriptor to Modify/Delete window](#) on page 96.

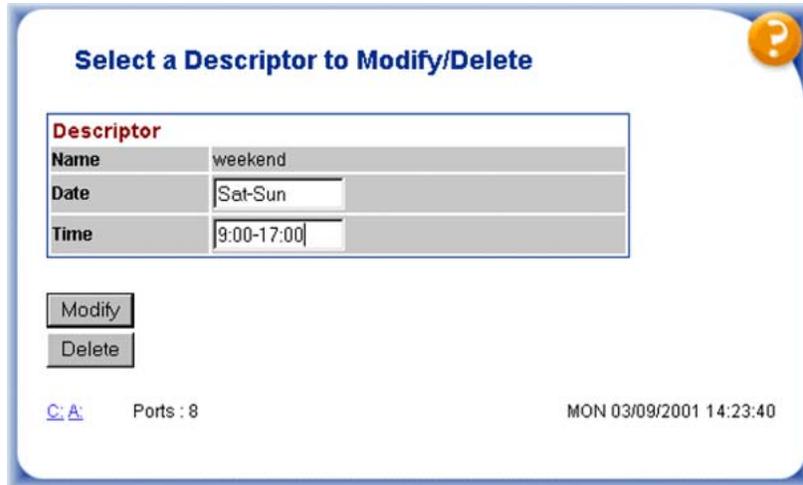


Figure 20: Select a Descriptor to Modify/Delete window

3. Click **Modify** to modify the calendar descriptor information or **Delete** to delete the calendar descriptor.

*** Note:**

Only the user who created the descriptor can delete it. A user logged in as an administrator or higher can remove any descriptor.

*** Note:**

If the calendar descriptor is modified, all calendar assignments using the descriptor are affected.

View

When the **View** link is clicked, the View Descriptors window opens. See [Figure 21: View Descriptors window](#) on page 97.

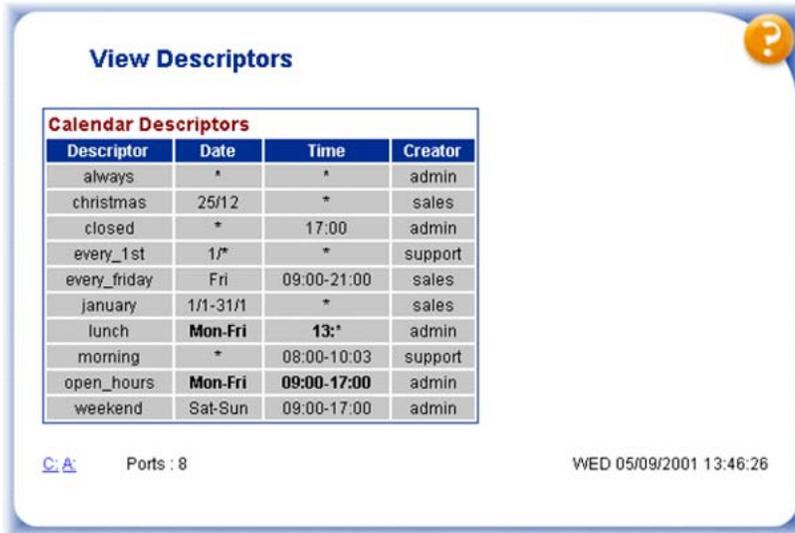


Figure 21: View Descriptors window

The View Descriptors window shows the currently defined calendar descriptors. If the current time matches the time specified in any calendar descriptor entry, the **Date** and **Time** fields appear in bold.

Record from Codec

When the **Record from Codec** link is clicked, the Record Announcement from Codec window opens. See [Figure 22: Record Announcement from Codec window](#) on page 97.

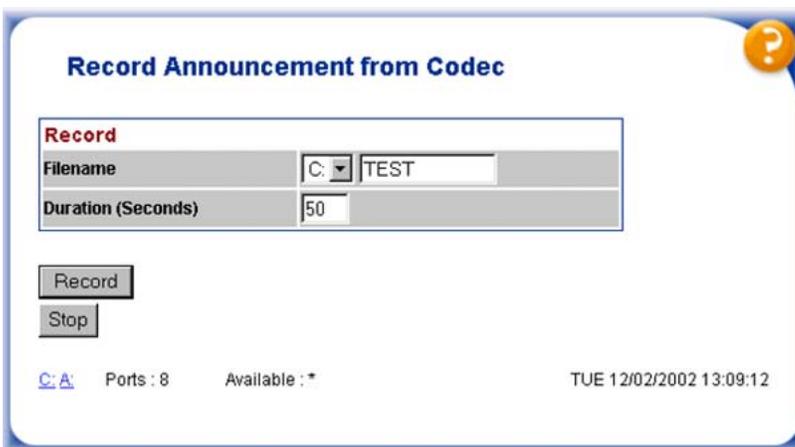


Figure 22: Record Announcement from Codec window

To record an announcement, follow the steps in [Recording an announcement](#) on page 97.

Recording an announcement

1. Enter the file name of the announcement in the **Filename** field.

The file name cannot be longer than 12 characters.

2. Enter the record duration in seconds in the **Duration** field.

The record duration must be 5 to 120 seconds.

3. Click **Record**.

File Conversion

When the **File Conversion** link is clicked, the Convert Announcement File window opens. See [Figure 23: Convert Announcement File window](#) on page 98.

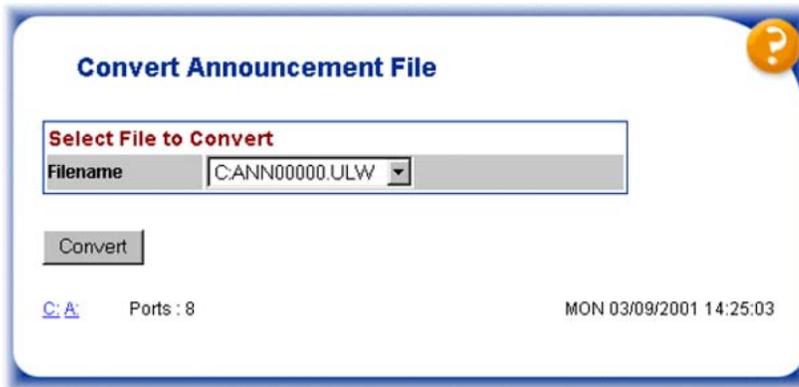


Figure 23: Convert Announcement File window

The Convert Announcement File window allows users to convert announcement files from .WAV to .ULW/.ALW format and from .ULW/.ALW to .WAV format.

To convert an announcement file, follow the steps in [Converting an announcement file](#) on page 98.

Converting an announcement file

1. Select the announcement file name from the **Filename** drop-down list.

Note:

If a .ALW or .ULW file is selected, it is converted to a .WAV file by adding the .WAV header. Users can then edit the .WAV file on their PC using an application, such as GoldWave. If a .WAV file is selected, it is converted to a .ULW or .ALW file, provided that the .WAV file is in an 8 KHz, Mono, A-Law, or Mu-Law format. If the file is not in one of these formats, it is rejected.

2. Click **Convert**.

Backup and Restore

When the **Backup/Restore** link is selected, the Backup/Restore Configuration window opens. See [Figure 24: Backup/Restore Configuration window](#) on page 99.



Figure 24: Backup/Restore Configuration window

The Backup/Restore Configuration window backs up the calendar, the descriptors, and the configuration variables to the A: drive, or restores the previously saved calendar, descriptors, and configuration variables from the A: drive. This is useful if it is desirable to have the same configuration on a number of Integrated Recorded Announcer cards.

*** Note:**

Only an Administrator, Distributor, or Super User can back up or restore variables.

To back up or restore, follow the steps in [Backing up or restoring](#) on page 99.

Backing up or restoring

1. Confirm that a backup or restore operation is to be performed.
2. Click **Backup** or **Restore**.

Pack Administration menu

The Pack Administration menu consists of links to the following:

- Configuration Variables
- Time and Date
- Ethernet Configuration
- Keycode Entry

Configuration Variables

Configuration Variables are variables that control different aspects of Integrated Recorded Announcer operation. These variables are not immediately visible to the user.

 **Note:**

Usually default settings are sufficient; however, if non-standard options are required, an advanced user can view and change variables as required.

[Table 21: Configuration Variables](#) on page 100 lists the Configuration Variables available with Integrated Recorded Announcer.

Table 21: Configuration Variables

Variable	Value	Description
DspEcanEnabled	True	Enables/disables Echo Cancellation
DspReceiveGain	-18 – +6	Gain in Decibels into DTMF. Default to 0 dB. Can be used to adjust sensitivity of DTMF
FileSortType	Name, type, size or time	Sort method for file display
Language of TUI Prompts	English	Language in which Telephone User Interface prompt appears
PackName	Integrated Recorded Announcer	Name of pack user assigned name of Integrated Recorded Announcer card
SetBasedAccess	True/False	Telset User Interface access
StatsSaveFreq	1 – 7	Frequency in days at which to update Operational Statistics automatically
StatusUpdateFreq	0 – 60	Frequency in seconds at which to update status window for CUI/BUI
SysDownloadFreq	1 – 7	Frequency in days at which to automatically download System Time and Date
SysDownloadTime	00:00 – 23:59	Time at which to automatically download System Time and Date
SysIPAddress	AA.BB.CC.DD	System IP address. Used to download System Time and Date.
SysLoginEnabled	True/False	System Time and Date automatic download enabled/disabled
TuiSeizeAck	0 – 127	Trunk Seize Acknowledge code

Select

To modify a Configuration Variable, first select the variable. When the Select link is clicked, the Select a Configuration Variable to Modify window opens. See [Figure 25: Select a Configuration Variable to Modify window](#) on page 101.

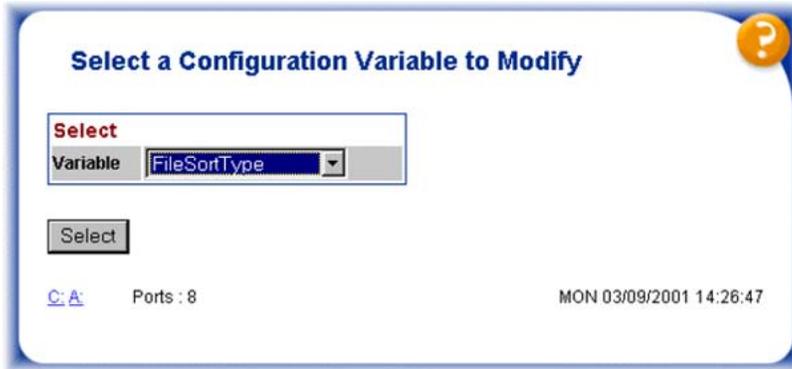


Figure 25: Select a Configuration Variable to Modify window

To select a Configuration Variable to modify, follow the steps in [Selecting a Configuration Variable to modify](#) on page 101.

Selecting a Configuration Variable to modify

1. Select the Configuration Variable to be modified from the **Variable** drop-down list.
2. Click **Select**.

 **Note:**

Only an Administrator, Distributor, or Super User can modify the Configuration Variables.

Modify

When the **Modify** link is clicked, the Modify window opens. See [Figure 26: Configuration Variables Modify window](#) on page 101.

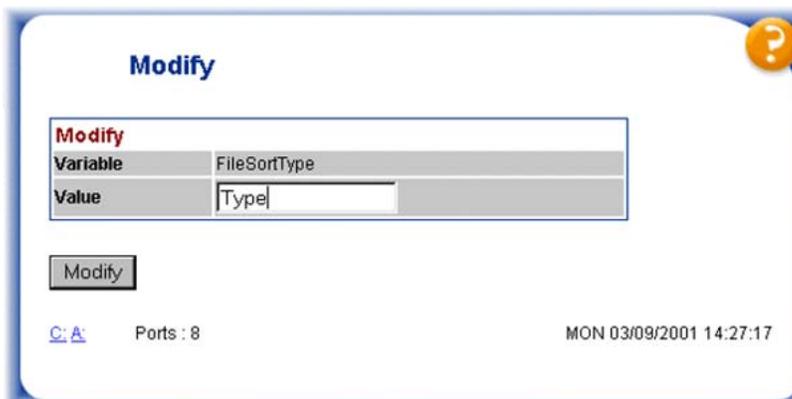


Figure 26: Configuration Variables Modify window

Use the Modify window to customize some aspects of Integrated Recorded Announcer functionality by setting the values of the Configuration Variables. For each variable, there is an allowed set of values.

To modify a Configuration Variable, follow the steps in [Modifying a Configuration Variable](#) on page 102.

Modifying a Configuration Variable

1. Enter the new value for the Configuration Variable in the **Value** text field.
2. Click **Modify**.

When a Configuration Variable is modified, all variables are saved to C:_CONFIG.DAT. Configuration Variables are automatically reloaded every time the Integrated Recorded Announcer card is rebooted.

View

When the **View** link is clicked, a list of all Configuration Variables appears when the Configuration Variables window opens. See [Figure 27: View Configuration Variables window](#) on page 102.

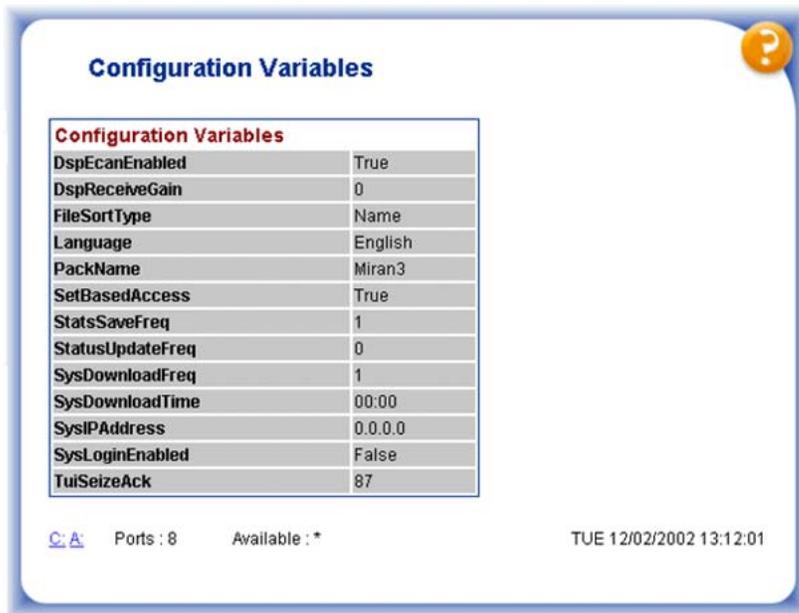


Figure 27: View Configuration Variables window

Time and Date

Under the **Time and Date** link, configure the local time and date and system synchronization.

 **Note:**

Only an Administrator, Distributor, or Super User can set or download the Time and Date.

Local Time and Date

When the **Local Time and Date** link is clicked, the Set Local Time and Date window opens. See [Figure 28: Set Local Time and Date window](#) on page 103.

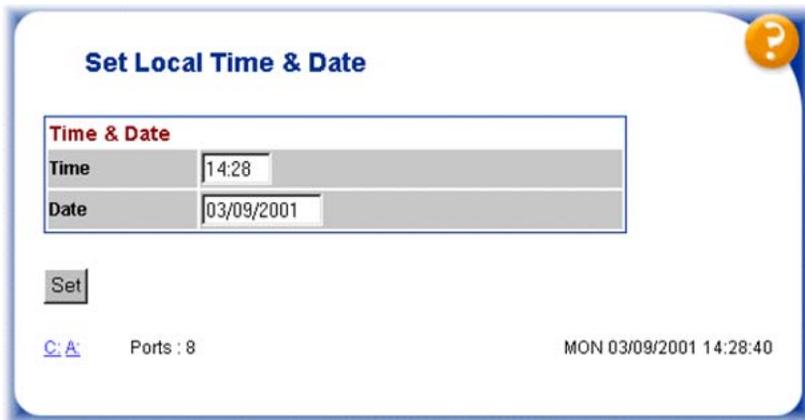


Figure 28: Set Local Time and Date window

Use the Set Local Time and Date window to set the time on Integrated Recorded Announcer's internal real-time clock.

To set the time and date, follow the steps in [Setting time and date](#) on page 103.

Setting time and date

1. Enter the current time and date in the **Time** and **Date** text fields respectively.
2. Click **Set**.

The Integrated Recorded Announcer internal clock automatically updates.

Note:

The Calendar is affected, as all assignments are dependent on time and date.

Time and Date Download

When **Time and Date Download** is clicked, the System Time and Date Synchronization window opens. See [Figure 29: System Time and Date Synchronization window](#) on page 104. Use this window to configure the system time and date synchronization.

With Integrated Recorded Announcer, the card retrieves the system time and date from the system on bootup. The Integrated Recorded Announcer card logs in remotely and extracts the time and date. The session is then closed and the real-time clock is set accordingly.

Configuration	
Switch IP Address	47.85.3.82
Download Time	00:00
Enabled	Yes
Download Frequency (Days)	1

Set Download

C: A: Ports : 8 MON 03/09/2001 14:29:08

Figure 29: System Time and Date Synchronization window

 **Caution:**

Time and date synchronization can impact other system operations; therefore, Avaya recommends that the synchronization process be carefully planned.

To configure the system time and date synchronization, follow the steps in [Configuring the system time and date synchronization](#) on page 104.

Configuring the system time and date synchronization

1. Enter the IP address of the system in the **Switch IP Address** text field.

 **Note:**

The Switch IP Address is the address of the system in which the Integrated Recorded Announcer card is installed. This IP address must be on the same subnet as the Integrated Recorded Announcer card.

2. In the **Download Time** text field, enter the time when the Integrated Recorded Announcer card will attempt to synchronize with the system.

 **Note:**

The Integrated Recorded Announcer card makes three attempts to synchronize with the system. If it is not successful, it will retry at the same download time once the number of days specified in the Frequency text field has elapsed.

3. Select **Yes** or **No** from the **Enabled** drop-down list.

Set Enabled to Yes or No depending on whether or not the System Time and Date Synchronization is enabled.

 **Note:**

If Yes is selected from the Enabled drop-down list, the Integrated Recorded Announcer card automatically downloads the time and date from the system using the specified parameters and updates the internal real-time clock.


4. From the **Download Frequency (Days)** drop-down list, select the frequency of how often the Integrated Recorded Announcer card will attempt to synchronize with the system.
5. Click **Set** or **Download**.

Ethernet Configuration

When the **Ethernet Configuration** link is clicked, the Ethernet Configuration window opens. See [Figure 30: Ethernet Configuration window](#) on page 105.

 **Note:**

Only Administrators, Distributors, or Super Users can configure the Ethernet.

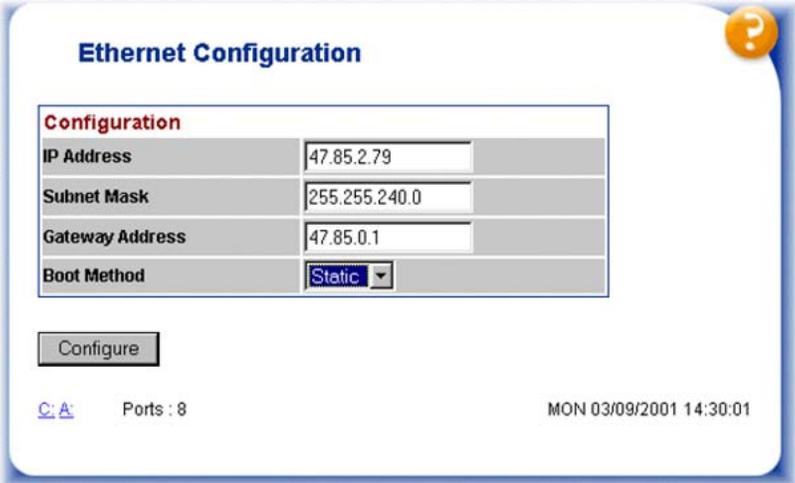

Configuration	
IP Address	47.85.2.79
Subnet Mask	255.255.240.0
Gateway Address	47.85.0.1
Boot Method	Static

Configure

Ports : 8

MON 03/09/2001 14:30:01

Figure 30: Ethernet Configuration window

 **Caution:**

Consult the network administrator before configuring the Ethernet parameters. Configuring these parameters incorrectly can cause problems for other users in the network. In extreme cases, configuring the Ethernet parameters incorrectly could lead to network outages.

To configure the Ethernet, follow the steps in [Configuring the Ethernet](#) on page 105.

Configuring the Ethernet

1. Enter the data in the **IP address** and **Subnet Mask** text fields.
2. Enter the Gateway IP address in the **Gateway Address** text field.

The Gateway IP address tells Integrated Recorded Announcer where the local gateway router is located. It allows the Integrated Recorded Announcer card to be accessed from networks outside its own subnet.

3. Select the **IP boot method** from the **Boot Method** drop-down list.

This boot method specifies how, from a networking perspective, the Integrated Recorded Announcer card will react on bootup.

Select one of the following options from the Boot Method drop-down list:

- **Disabled:** The Integrated Recorded Announcer card will be inaccessible from the network
- **Static:** The static IP address which corresponds to the address on the window. This is manually configured on the Text-based User Interface or BUI.
- **DCHP:** The Integrated Recorded Announcer card will request its IP address from the DCHP server on the network.

4. Click **Configure**.

Keycode Entry

When the **Keycode Entry** link is clicked, the Keycode Entry window opens. See [Figure 31: Keycode Entry window](#) on page 106.

*** Note:**

Only an Administrator, Distributor, or Super User can update a keycode.



The screenshot shows a web browser window titled "Keycode Entry". It contains two sections: "Keycode Information" and "Keycode".

Keycode Information	
Ports	8
Keycode	57657572 27322164 65334044

Keycode	
Keycode	12345678 12345678 12345678

Below the "Keycode" section is an "Update" button. At the bottom left, there is a status bar with "Ports : 8" and a small icon. At the bottom right, the date and time "MON 03/09/2001 14:30:45" are displayed.

Figure 31: Keycode Entry window

To enter a new keycode, follow the steps in [Entering a new keycode](#) on page 107.

Entering a new keycode

1. Enter the new keycode in the **Keycode** text field.
2. Click **Update**.

The Keycode information is updated and any new ports are activated.

Pack Information menu

The Pack Information menu consists of links to the following:

- Status
- System Information
- Operational Statistics

Status

When the **Status** link is clicked, the Pack Status window opens. See [Figure 32: Pack Status window](#) on page 108.

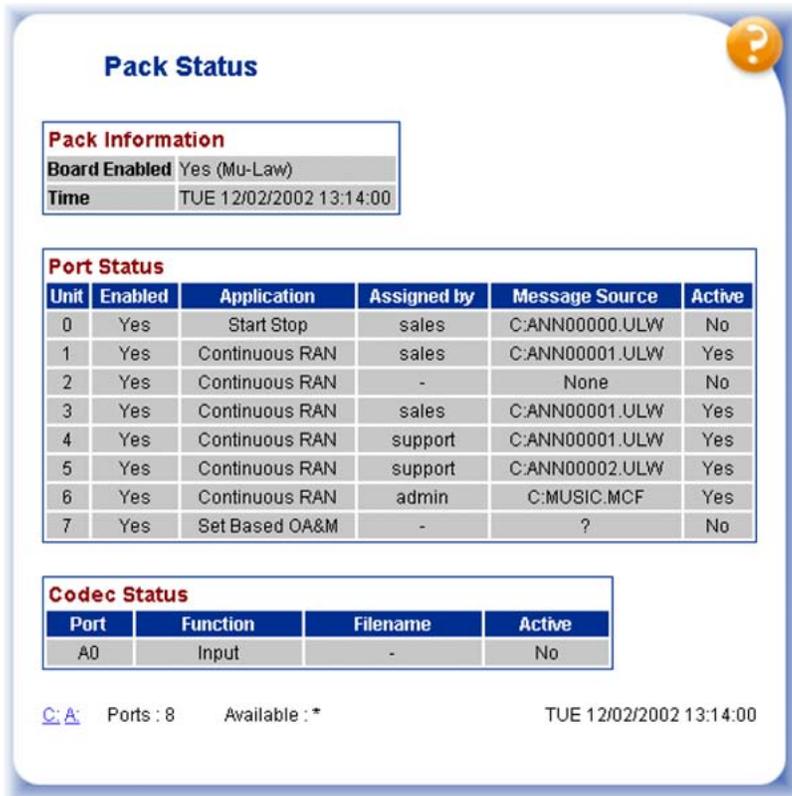


Figure 32: Pack Status window

The Pack Status window shows the configuration of all units on the Integrated Recorded Announcer card and whether or not they are active. The Pack Status window also shows the status of the Codec input channel.

System Information

When the **System Information** link is clicked, the System Information window opens. See [Figure 33: System Information window](#) on page 109.

The screenshot shows a 'System Information' window with a yellow question mark icon in the top right corner. It is divided into three sections: Hardware Configuration, Software Configuration, and Ethernet Configuration. At the bottom, there are status indicators for ports and a timestamp.

Hardware Configuration	
CPU	IXP-1200
System Memory	27 MB
External Drive A:	4653056 Bytes Free
Internal Drive C:	0 Bytes Free
Dongle ID	10025088

Software Configuration	
Application	Miran Version 3.0 (R1s 1)
XA8051 Firmware	MC Firmware 2.0
DSP Software Version	61
DSP Status	OK
Switch Companding Law	Mu-Law
Time & Date Sync	Not downloaded
Ports	8

Ethernet Configuration	
IP Address	47.85.15.60
Subnet Mask	255.255.240.0
Gateway	47.85.0.1
IP Method	static

[C: A](#) Ports : 8 Available : *A0 WED 26/09/2001 16:37:32

Figure 33: System Information window

The System Information window shows the hardware, software, and Ethernet configuration information. To explore the drives shown in the Hardware Configuration section, click the appropriate links.

Operational Statistics

When the **Operational Statistics** link is clicked, the Operational Statistics window opens. See [Figure 34: Operational Statistics window](#) on page 110.

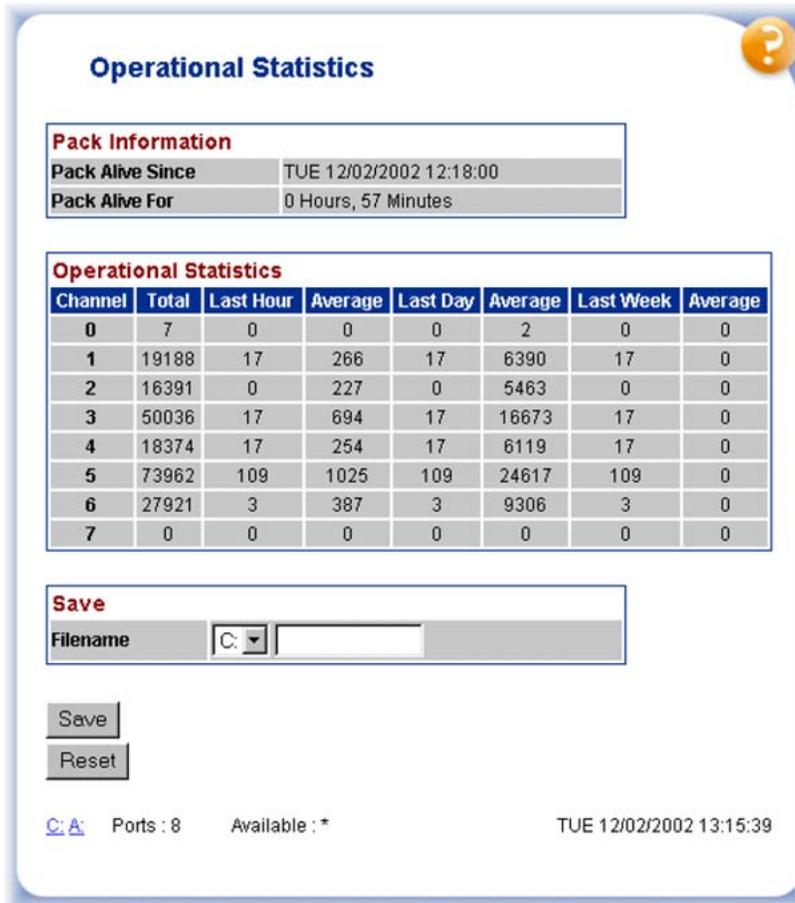


Figure 34: Operational Statistics window

The Operational Statistics window shows the operational statistics for all channels. In the **Save** pane of the window, the statistics can be saved to file or reset to zero.

File System

The File System menu consists of links to the following:

- File Explorer
- Copy
- Delete
- Move
- Rename
- Make Directory
- Remove Directory

File Explorer

When the **File Explorer** link is clicked, the File Explorer window opens. See [Figure 35: File Explorer window](#) on page 111.

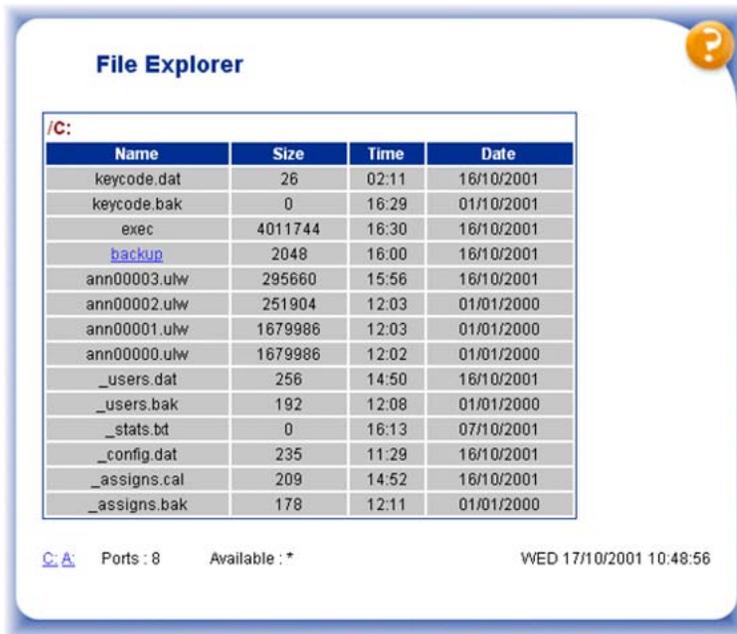


Figure 35: File Explorer window

The File Explorer window displays the file details for the specified drive. The directories appear as links. Click the links to display the contents of the directories.

Copy

When the **Copy** link is clicked, the Copy a File window opens. See [Figure 36: Copy a File window](#) on page 112.

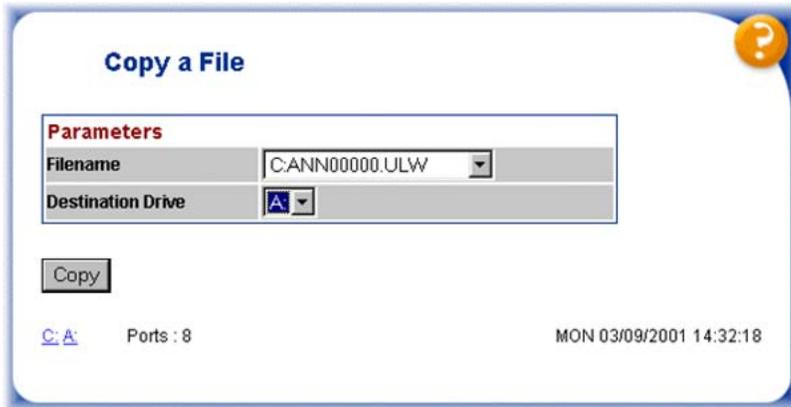


Figure 36: Copy a File window

To copy a file, follow the steps in [Copying a file](#) on page 112.

Copying a file

1. From the **Filename** drop-down list, select the file that you want to copy.
2. From the **Destination Drive** drop-down list, select the drive where the file will be copied.
3. Click **Copy**.

Delete

When the **Delete** link is clicked, the Delete a File window opens. See [Figure 37: Delete a File window](#) on page 112.

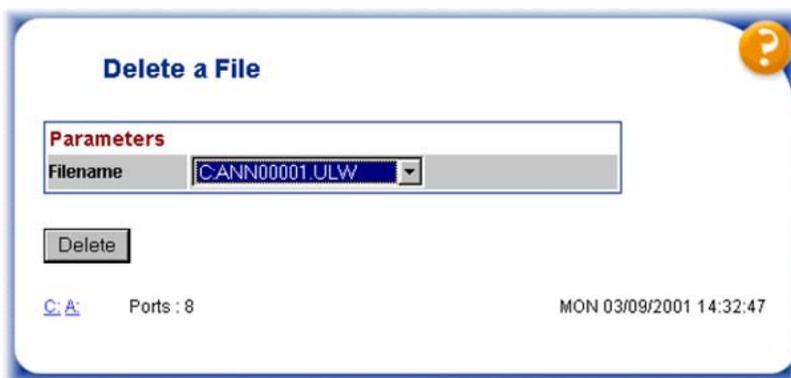


Figure 37: Delete a File window

To delete a file, follow the steps in [Deleting a file](#) on page 113.

Deleting a file

1. From the **Filename** drop-down list, select the file that you want to delete.
2. Click **Delete**.



Note:

Users cannot delete a file that is assigned in the calendar.

Move

When the **Move** link is clicked, the Move a File window opens. See [Figure 38: Move a File window](#) on page 113.

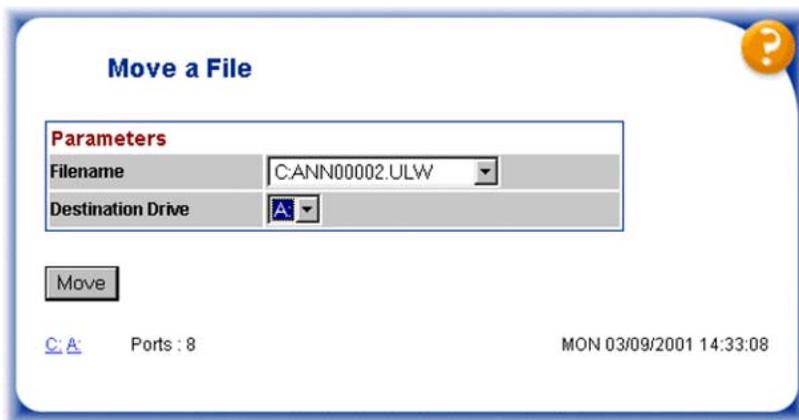


Figure 38: Move a File window

To move a file, follow the steps in [Moving a file](#) on page 113.

Moving a file

1. From the **Filename** drop-down list, select the file to move.
2. From the **Destination Drive** drop-down list, select the drive where the file will be moved.
3. Click **Move**.



Note:

Users cannot move a file currently assigned in the Calendar.

Rename

When the **Rename** link is clicked, the Rename a File window opens. See [Figure 39: Rename a File window](#) on page 114.

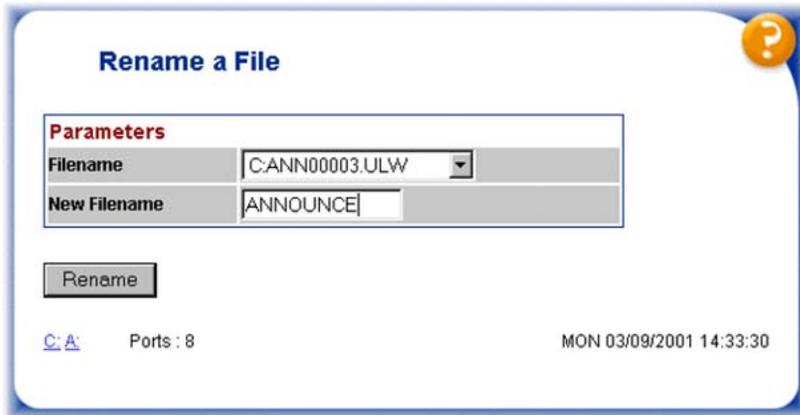


Figure 39: Rename a File window

To rename a file, follow the steps in [Renaming a file](#) on page 114.

Renaming a file

1. From the **Filename** drop-down list, select the file to rename.
2. Enter the new file name in the **New Filename** text field.

 **Note:**

When renaming a file, it is not necessary to specify the drive.

 **Note:**

if a file is assigned in the Calendar, it cannot be renamed.

 **Note:**

Do not change the extensions of announcement (*.ULW and *.ALW) and Batch (*.BAT) files.

3. Click **Rename**.

 **Note:**

Directory name cannot be longer than eight characters.

Make Directory

When the **Make Directory** link is clicked, the Make Directory window opens. See [Figure 40: Make Directory window](#) on page 115.

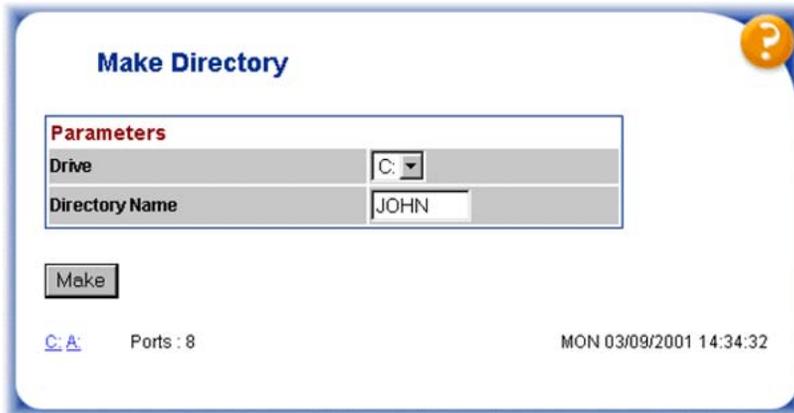


Figure 40: Make Directory window

To make a directory, follow the steps in [Making a directory](#) on page 115.

Making a directory

1. From the **Drive** drop-down list, select the drive where the directory will be created.
2. In the **Directory Name** text field, enter the directory name.
3. Click **Make**.



Note:

Only Administrators, Distributors, or Super Users can make a directory.

Remove Directory

When the **Remove Directory** link is clicked, the Remove Directory window opens. See [Figure 41: Remove Directory window](#) on page 115.



Figure 41: Remove Directory window

To remove a directory, follow the steps in [Removing a directory](#) on page 116.

Removing a directory

1. Select the name of the directory from the **Directory** drop-down list.
2. Click **Remove**.



Note:

Only Administrators, Distributors, and Super Users can remove a directory.

Pack User menu

The Pack User menu contains links to the following:

- User Add
- User Select
- User Modify/Delete
- User View

User Add

When the **User Add** link is clicked, the Create a new User window opens. See [Figure 42: Create a new User window](#) on page 116.

User Information	
Name	sales
Password	XXXXXXXXXX
Channels	1-3,5

Add

C: A: Ports : 8

MON 03/09/2001 14:37:10

Figure 42: Create a new User window

To add a new user, follow the steps in [Adding a new user](#) on page 116.

Adding a new user

1. Enter the User's name in the **Name** text field.
2. Enter the User's password in the **Password** text field.

3. Enter the **Channels** to which the User has access.
4. Click **Add**.

**Note:**

Only Administrators, Distributors, and Super Users can add Users.

User Select

When the **User Select** link is clicked, the Select a User to Modify/Delete window opens. See [Figure 43: Select a User to Modify/Delete window](#) on page 117.

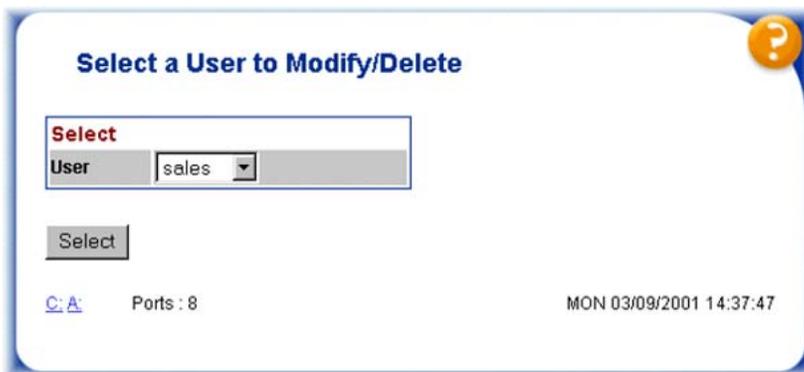


Figure 43: Select a User to Modify/Delete window

To select a user to modify or delete, follow the steps in [Selecting a user to modify or delete](#) on page 117.

Selecting a user to modify or delete

1. Select the user name from the **User** drop-down list.
2. Click **Select**.

An updated User to Modify/Delete window appears containing the User's information. See [Figure 44: Updated Select a User to Modify/Delete window](#) on page 118.

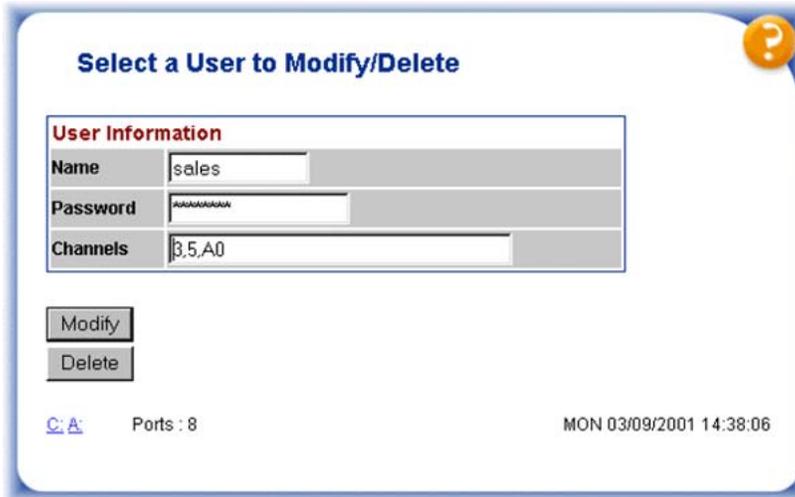


Figure 44: Updated Select a User to Modify/Delete window

To modify or delete a User, follow the steps in [Modifying or deleting a user](#) on page 118.

Modifying or deleting a user

1. Modify the **Name**, **Password**, and **Channels** as required.
2. Click **Modify** to change the User's information. Click **Delete** to remove the User.



Note:

Only Administrators, Distributors, and Super Users can modify or delete a User.

User View

When the **User View** link is clicked, the User Information window opens. See [Figure 45: User Information window](#) on page 119.

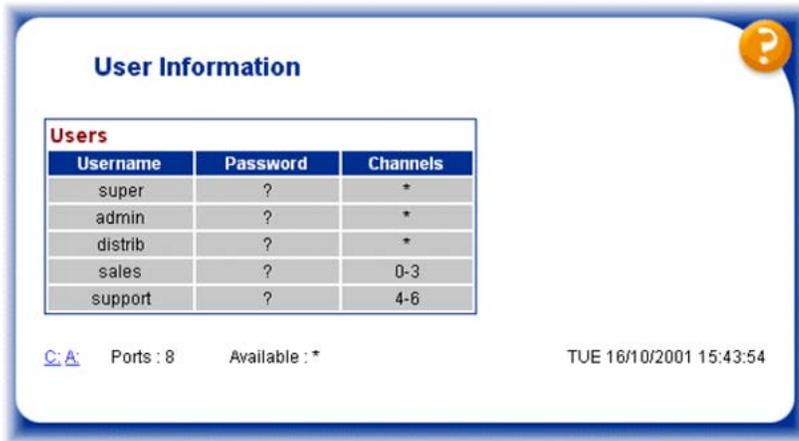


Figure 45: User Information window

The User Information window displays a list of all configured users.

Note:

For security purposes, passwords are not displayed on this window.

Support

The Support menu contains links to the following:

- Memory Information
- Task Information
- DSP Information
- Reset
- Help
- Logout

Memory Information

When the **Memory Information** link is clicked, the Memory Information window opens. See [Figure 46: Memory Information window](#) on page 120.

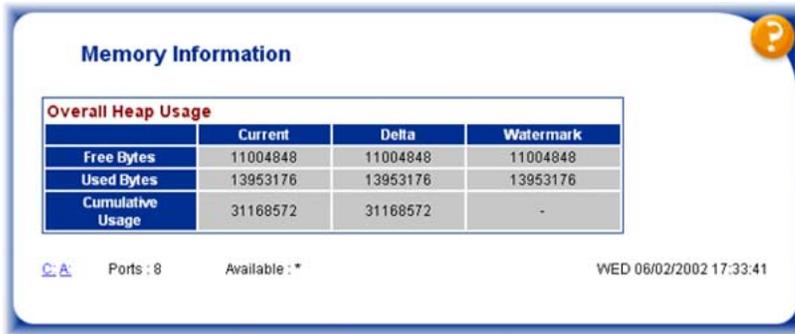


Figure 46: Memory Information window

*** Note:**

Only Administrators, Distributors, or Super Users can view memory information.

Task Information

When the **Task Information** link is clicked, the Task List window opens. See [Figure 47: Task List window](#) on page 120.

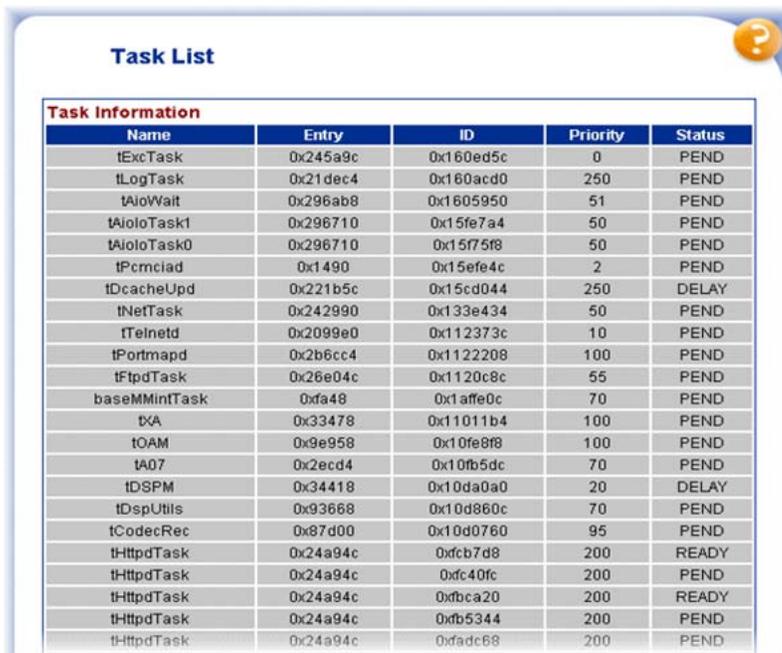


Figure 47: Task List window

*** Note:**

Only Administrators, Distributors, or Super Users can view task information.

DSP Information

When the **DSP Information** link is clicked, the DSP Information window opens. See [Figure 48: DSP Information window](#) on page 121.



The screenshot shows a window titled "DSP Information" with a question mark icon in the top right corner. It contains two tables of information.

Timeslot Information

Allocated	8 (0x7f)
Timeslot 0	Core 0, Resource 0
Timeslot 1	Core 0, Resource 1
Timeslot 2	Core 0, Resource 2
Timeslot 3	Core 0, Resource 3
Timeslot 4	Core 0, Resource 4
Timeslot 5	Core 0, Resource 5
Timeslot 6	Core 0, Resource 6
Timeslot 7	Core 0, Resource 7

DSP Core 0

baseAddr	0x61000000
appID	18
appMsgQ	0x1afc208
swVersion	0x64
nChansCreated	8
addrCommReg	0x61000200
Resource 0	Timeslot 0
Resource 1	Timeslot 1
Resource 2	Timeslot 2
Resource 3	Timeslot 3
Resource 4	Timeslot 4
Resource 5	Timeslot 5
Resource 6	Timeslot 6
Resource 7	Timeslot 7

Figure 48: DSP Information window



Note:

Only Administrators, Distributors, or Super Users can view DSP information.

Resetting the BUI

[Figure 49: Resetting the BUI](#) on page 122 shows the Reset window.



Figure 49: Resetting the BUI

Logging out of the BUI

[Figure 50: Logging out of the BUI](#) on page 122 shows the Logout window.



Figure 50: Logging out of the BUI

Help on the BUI

For help on any BUI page, click the orange ? button in the top right of the context window.

Chapter 8: Text-based User Interface

Contents

This section contains information on the following topics:

[Introduction](#) on page 124

[General procedure for configuring Integrated Recorded Announcer](#) on page 125

[Configuring the VT-100 type terminal](#) on page 126

[Login window](#) on page 127

[Status window](#) on page 128

[Main Menu](#) on page 129

[Administration menu](#) on page 130

[The Announcement Configuration menu](#) on page 131

[Convert Announcement File](#) on page 147

[Operational Statistics](#) on page 149

[Backup Configuration](#) on page 150

[Restore Configuration](#) on page 152

[Run Batch File](#) on page 151

[Pack Administration menu](#) on page 153

[File Commands menu](#) on page 155

[Keycode Entry](#) on page 161

[Software Upgrade](#) on page 162

[System Information](#) on page 163

[Configuration Variables menu](#) on page 164

[Ethernet Configuration](#) on page 168

[Time and Date Configuration menu](#) on page 169

[Maintenance and Diagnostics menu](#) on page 173

[User Administration menu](#) on page 174

[Add/Edit User](#) on page 175

[View Users](#) on page 177

[Delete User](#) on page 177

[Integrated Recorded Announcer card OAM command set](#) on page 178

[OAM command summary](#) on page 179

[OAM commands](#) on page 182

[Announcement commands](#) on page 185

[Calendar commands](#) on page 186

[Descriptor commands](#) on page 188

[User commands](#) on page 189

[File commands](#) on page 190

[Miscellaneous commands](#) on page 194

[Integrated Recorded Announcer batch file support](#) on page 196

[Setting up emergency announcements quickly](#) on page 197

Introduction

This chapter describes the Text-based User Interface for the Integrated Recorded Announcer card (NT0966CA). The Text-based User Interface provides menus and commands to perform all of the necessary Integrated Recorded Announcer OA&M functions. The software for this interface is part of the Integrated Recorded Announcer-specific OA&M tool running under VxWorks; it is independent of system software.

There are two ways to use the Text-based User Interface to access all commands and options:

- Use the menu system.
- Enter commands on the command line.

To use the Integrated Recorded Announcer Text-based User Interface, connect a VT-100 type terminal to the Integrated Recorded Announcer card. The Integrated Recorded Announcer card supports a serial connection between the terminal and the card.

The Integrated Recorded Announcer card also supports Telnet access to the Text-based User Interface over a LAN. Refer to [LAN access installation and setup](#) on page 59 for instructions on how to connect the Integrated Recorded Announcer card to the ELAN subnet.

Integrated Recorded Announcer also supports a Browser User Interface (BUI). This BUI provides a web-based version of the Integrated Recorded Announcer menu system, which can be accessed through a standard web browser. The BUI also supports file transfers and online

viewing of customer documentation. For more information on the BUI, see [Integrated Recorded Announcer Browser User Interface](#) on page 87.

General procedure for configuring Integrated Recorded Announcer

To configure Integrated Recorded Announcer functions, follow the steps in [Configuring Integrated Recorded Announcer](#) on page 125.

Configuring Integrated Recorded Announcer

1. Configure the RAN and MOH trunk route and trunk data block, as described in [System configuration](#) on page 44.

Complete this step during installation and configuration.

2. Configure the DID trunk for the Telephone User Interface (TUI) access, if necessary.

Refer to [Configuring the DID route for the TUI](#) on page 49 and [Configuring the Integrated Recorded Announcer trunks](#) on page 50.

Complete this step during installation and configuration.

3. Set up the terminal for the Text-based User Interface access.

Complete this step during installation and configuration.

4. Log in to the Integrated Recorded Announcer Text-based User Interface as either a user or an administrator.

Both a user name and a password must be entered.

The default user login is User Name: **user** and Password: **user0000**. The default administrator login is User Name: **admin** and Password: **admin000**. The default distributor login is User Name: **distrib** and Password: **distrib0**.

Refer to [Login window](#) on page 127 for more information.

5. Enter the keycode, if necessary.

See [Keycode Entry](#) on page 161.

 **Note:**

When Integrated Recorded Announcer is ordered as part of a new system, the keycode is preloaded into the Integrated Recorded Announcer card. Stand-alone orders of Integrated Recorded Announcer require that the keycode be entered.

6. Perform a cold reboot of the Integrated Recorded Announcer card and log in again.

Refer to [Maintenance and Diagnostics menu](#) on page 173 for instructions on performing a cold reboot.

7. Record the announcements.

From the Main Menu, select the **MIRAN Administration** menu, followed by the **Announcement Configuration** menu, and then the Record Announcement window.

Refer to [Record Announcement from External Channel](#) on page 146.

From this window, record announcements through the Audio jack on the Audio-adaptor. The Audio jack provides access to a single analog input (ANALOG0).

8. Assign announcements.

From the Record Announcement window, return to the **Announcement Configuration** menu and select **Calendar Operations**. From the Calendar Operations menu, create assignments, with or without descriptors. Repeat this step for other files and channels.

Refer to [Calendar Operations menu](#) on page 132.

9. Back up the original configuration onto the C: drive, or to a PC Card in the A: drive, if available.
10. Copy new files (if first installing or upgrading software) from the A: drive to the C: drive.

Remove the PC Card from the A: drive and store in a safe place for future use. This enables the configuration to be restored into the Integrated Recorded Announcer card without having to reconfigure the system and rerecord the announcements.

Configuring the VT-100 type terminal

The Integrated Recorded Announcer card faceplate and the Integrated Recorded Announcer Audio-adaptor each contains a maintenance serial port, which enables direct connection to a VT-100 terminal or to a PC running a terminal emulation program.

 **Note:**

Alternatively, each Integrated Recorded Announcer card can be connected through an Ethernet adaptor to the LAN. This alternative enables maintenance of all Integrated Recorded Announcer cards from any PC that has internet or Telnet access.

To run the Text-based User Interface, configure the VT-100 terminal emulation parameters as shown in [Table 22: VT-100 terminal configuration parameters](#) on page 127.

Table 22: VT-100 terminal configuration parameters

Parameter	Setting
Transmission rate	9600 baud
Data bits; stop bit	8
Stop bit	1
Parity	No
Flow control	None

 **Note:**

Integrated Recorded Announcer uses the HyperTerminal application. This application allows the technician to disable the CTRL and arrow keys, as these keys are used by the OA&M for navigating the menus.

Login window

The Login window appears when the terminal is connected to the Integrated Recorded Announcer card and the `Enter` key is pressed.

To log into the selected Integrated Recorded Announcer card, follow the steps in [Logging in to the selected Integrated Recorded Announcer card](#) on page 127.

Logging in to the selected Integrated Recorded Announcer card

1. Enter the user name.
2. Enter the password.
3. Click **Log On**.

The defaults for user login are:

- User Name: user
- Password: user0000

The defaults for administrator login are:

- User Name: admin
- Password: admin000

The defaults for distributor login are:

- User Name: distrib
- Password: distrib0

*** Note:**

If an 'Access denied' response is received, press the `Shift` key and tilde (`~`) to refresh the window. Then attempt to log in again. If an 'Access denied' response is received for a third time, the Integrated Recorded Announcer card locks the user out for 20 minutes.

*** Note:**

All passwords must be at least eight characters in length, with a maximum of 12 characters. It is possible to change the passwords at each user level.

*** Note:**

All default users and passwords can be restored by deleting the `C:_USERS.DAT` file.

Status window

Select the **Status** button, without logging in, to view the status of the current card.

[Figure 51: Pack Status window](#) on page 129 on [Figure 51: Pack Status window](#) on page 129 shows the Pack Status window, which displays the following:

- current status of the RAN Application version and release
- board status
- current time
- status of eight one-to-one channels and two cross-connect channels

To display up-to-date channels status, refresh the window by pressing the spacebar.

To exit the Pack Status window and return to the Login window, press the `Enter` key. [Figure 51: Pack Status window](#) on page 129 shows an example of a Pack Status window.

```

[10025088]          - Pack Status -
[TUE 12/02/2002 11:48:20]
                    Board Enabled : Yes (Mu-Law)

Channel  Enabled  Application      Assigned by  Message Source  Active
-----  -
0        Y        Start/Stop RAN  admin        None             N
1        Y        Start/Stop RAN  admin        C:GEORGE.ALW    N
2        Y        Start/Stop RAN  admin        C:GEORGE.ALW    N
3        Y        Start/Stop RAN  admin        C:GEORGE.ALW    N
4        Y        Start/Stop RAN  admin        None             N
5        Y        Start/Stop RAN  admin        None             N
6        Y        Start/Stop RAN  admin        None             N
7        Y        Set Based OA&M  admin        None             N

                    Cross Connect Ports

Port  Function  Application      Level          Message Source  Active
----  -
A0   Output   Idle             00 ( 00.0 dB)  None            N
A0   Input    Idle             00 ( 00.0 dB)  None            N

                    Press Enter to exit, Space to refresh.

```

Figure 51: Pack Status window

Main Menu

A successful login displays the Main Menu. See [Figure 52: Main Menu](#) on page 130.



Figure 52: Main Menu

The Main Menu provides five options:

- MIRAN Administration – accesses all RAN-specific tasks and menus, such as announcement recording and configuration, operational statistics, backup and restore configuration, and batch file running. Refer to [Administration menu](#) on page 130.
- Pack Administration – accesses all Integrated Recorded Announcer-specific tasks and menus, such as file commands, keycode entry, software upgrade, system information, configuration variables, and LAN configuration. Refer to [Pack Administration menu](#) on page 153.
- Maintenance and Diagnostics – provides access to system information, password change, command line access, diagnostics, warm reboot, and cold reboot. The distributor can access all functions, and the user can access only system information and password change. Refer to [Maintenance and Diagnostics menu](#) on page 173.
- User Administration – provides access to adding, editing, viewing, and deleting users. Refer to [User Administration menu](#) on page 174.
- Logoff – logs out of the Main Menu and returns to the Login window.

Administration menu

At the Main Menu, select **1** to access the **MIRAN Administration** menu. See [Figure 53: MIRAN Administration menu](#) on page 131.

```

[10025088]          - MIRAN Administration -          [Admin]

 1 Announcement Configuration...
 2 Operational Statistics
 3 Backup Configuration
 4 Restore Configuration
 5 Run Batch File

 9 Back to previous Menu...

Choose a Menu Option or 9 to Exit :
Miran3>

```

Figure 53: MIRAN Administration menu

At the MIRAN Administration menu, there are seven options:

- Announcement Configuration... – displays the Announcement Configuration menu that enables the following actions:
 - create calendar and descriptor announcements,
 - record and play announcements
 - convert announcement files. Refer to [The Announcement Configuration menu](#) on page 131.
- Operational Statistics – displays RAN channel usage statistics. Refer to [Operational Statistics](#) on page 149.
- Backup Configuration – saves configuration to a PC disk. Refer to [Backup Configuration](#) on page 150. Backups can also be set to occur automatically by setting the appropriate configuration variables.
- Restore Configuration – restores the configuration from a PC disk to the Integrated Recorded Announcer. Refer to [Restore Configuration](#) on page 152.
- Run Batch File – executes a batch file containing OA&M commands. It enables multiple channel assignments with a single command in case of emergency. Refer to [Run Batch File](#) on page 151.
- Back to previous Menu... – returns to the Main Menu.

The Announcement Configuration menu

From the MIRAN Administration menu, select **1** to access the **Announcement Configuration** menu. See [Figure 54: Announcement Configuration menu](#) on page 132.

```
[10025088]           - Announcement Configuration -           [Admin]

 1 Calendar Operations...
 2 Descriptor Operations...
 3 Record Announcement from External Channel
 4 Convert Announcement File

 9 Back to previous Menu...

Choose a Menu Option or 9 to Exit :
Miran3>
```

Figure 54: Announcement Configuration menu

In the Announcement Configuration menu, there are six options:

- Calendar Operations – used to create calendar assignments with or without descriptors, view calendar assignments, and remove calendar assignments. Refer to [Calendar Operations menu](#) on page 132.
- Descriptor Operations – used to add, edit, view, and delete calendar descriptors. Refer to [The Descriptor Operations menu](#) on page 139.

*** Note:**

Before working with Calendar Operations and Descriptor Operations, read [Calendar assignment feature](#) on page 18.

- Record Announcement from External Channel – used to record an announcement and determine its filename and duration. Refer to [Record Announcement from External Channel](#) on page 146.
- Convert Message File – used to convert an announcement from .WAV format to .ALW or .ULW format (or the opposite). The filename of the announcement can be changed here. Refer to the [Convert Announcement File](#) on page 147.
- Back to previous Menu... — returns to the MIRAN Administration menu.

Calendar Operations menu

In the Announcement Configuration menu, select **1** to access the **Calendar Operations** menu. See [Figure 55: Calendar Operations Menu](#) on page 133.

```

[10025088]          - Calendar Operations -          [Admin]

  1  Calendar Assignment with Descriptor
  2  Calendar Assignment
  3  View Calendar Assignments
  4  Delete Calendar Assignment
  5  Load Calendar List
  6  Save Calendar List
  7  Clear all Calendar Assignments
  8  Back to previous Menu...

Choose a Menu Option or 9 to Exit :
Miran3>

```

Figure 55: Calendar Operations Menu

Calendar Assignment with Descriptor

Select 1 at the Calendar Operations menu to access the Calendar Assignment with Descriptor window. See [Figure 56: Calendar Assignment with Descriptor window](#) on page 133.

An announcement is assigned to selected channels and associated with a defined descriptor. Refer to [The Descriptor Operations menu](#) on page 139 for instructions on how to create a descriptor.

```

[10025088]          - Calendar Assignment with Descriptor -          [Admin]

Channels :   1-3
          - Browse Channels -

Filename :   C:GEORGE.ALW
          - Browse -

Descriptor : weekday
          -> - Browse Descriptors - <-
          - Add to Calendar -

          - Exit -

```

Figure 56: Calendar Assignment with Descriptor window

To create a calendar assignment with a descriptor, follow the steps in [Creating a calendar assignment with a descriptor](#) on page 134.

Creating a calendar assignment with a descriptor

1. Enter the channel(s) where the announcement will be assigned.
Select **Browse** to scan and select from the list of available channels. Use **s** to toggle the selection of channels.
2. Enter the filename of the announcement for which the assignment is being created.
Select **Browse** to scan the list of available announcement files.
3. Enter the name of the descriptor to be associated with the assignment.
Select **Browse Descriptors** to scan the list of available descriptors.
4. Select **Add to Calendar** to add the assignment with descriptor to the calendar.
This updates the calendar immediately.
5. Select **Exit** to return to the Calendar Operations menu.

The Calendar Assignment

Select **2** at the Calendar Operations menu to access the Calendar Assignment window. See [Figure 57: Calendar Assignment window](#) on page 134. An announcement is assigned to selected channels and defined directly (instead of using a descriptor) when the announcement plays on those channels.

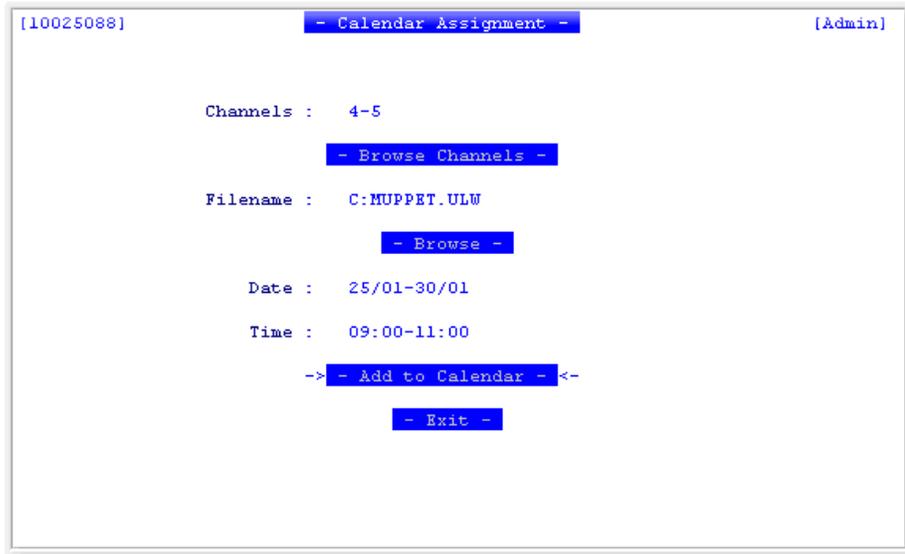


Figure 57: Calendar Assignment window

To create a calendar assignment (without descriptor), follow the steps in [Creating a calendar assignment \(without descriptor\)](#) on page 134.

Creating a calendar assignment (without descriptor)

1. Enter the channel(s) where the announcement will be assigned.

Browse can be used to scan and select from the list of available channels. Use **s** to toggle the selection of channels.

2. Enter the filename of the announcement for which the assignment is being created.

Select **Browse** to scan the list of available announcement files.

3. Enter the time of day when the announcement is to be played.
4. Enter the date, dates, or days when the announcement is to be played.
5. Select **Add to Calendar** to add the assignment to the calendar.

This updates the calendar immediately.

6. Select **Exit** to return to the Calendar Operations menu.

The View Calendar Assignments

Select **3** at the Calendar Operations menu to access the View Calendar Assignments window. See [Figure 58: View Calendar Assignments window](#) on page 135.

```
[10025088]          - View Calendar Assignments -          [Admin]
[TUE 12/02/2002 13:25:17]

  ID  Date          Time          Descriptor          Filename
  ---  ---          ---          ---          ---
  000  25/01-30/01   09:00-11:00          C:MUPPET.ULW
  003  ???           ???           every_friday       C:TOPGUN.ULW
  001  Mon-Fri        *           weekday            C:GEORGE.ALW
  002  *              01:00-02:00          lunch              C:TOPGUN.ULW

[Page 01 of 01 (4)]

Press 'I' to toggle information._
Press Enter to Exit.
```

Figure 58: View Calendar Assignments window

Note:

The View Calendar Assignments window shows TUI assignments by putting "TUI" in the date column and the channel assignments in the time column.

The View Calendar Assignments window lists all Calendar Assignments in order of specificity. The most specific assignments — those with the most specific time and date — come first. The current day, date, and time appear in the upper-left corner of the window. The filename for any assignments that match the current date and time appear in bold type.

The right column lists the name of the user who created the assignment. Only the administrator or the user who created an assignment can remove the assignment.

In the sample window that appears in [Figure 58: View Calendar Assignments window](#) on page 135, notice that the assignment using the descriptor "every_Friday" has a time and date

of "?". This indicates that the descriptor "every_Friday" has been deleted and the system could not retrieve the time and date information. The system ignores this assignment until someone redefines "every_Friday".

While in the View Calendar Assignments window, the following actions can be performed:

- Press `I` to toggle the display for more information. The descriptor column lists the descriptor for each assignment, if there is one. The channel column lists the channels for each assignment.
- Press `Space bar` to list any more assignments that do not appear on the window.
- Press `Enter` to exit this window and return to the Calendar Operations menu.

Delete Calendar Assignment window

Select `- 4-` at the Calendar Operations menu to access the Delete Calendar Assignment window. See [Figure 59: Delete Calendar Assignment window](#) on page 136.

```
[10025088]          - Delete Calendar Assignment -          [Admin]
[WED 06/02/2002 13:30:55]

   ID   Date         Time         Descriptor         Filename
--> 004  25/01-30/01  09:00-11:00
    003  Mon-Fri      *          weekday           C:GEORGE.ALW      <--
    001  *            01:00-02:00  lunch             C:TOPGUN.ULW

[Page 01 of 01 (3)]

          Press 'I' to toggle information.
    Use Up/Down arrows to select. Press 'D' to delete.
          Press Enter to Exit.
```

Figure 59: Delete Calendar Assignment window

To delete a calendar assignment, follow the steps in [Deleting a calendar assignment](#) on page 136.

Deleting a calendar assignment

1. Use the up/down arrows to select the assignment to be deleted.
2. Press `D` to delete the selected assignment.
3. Press `Enter` to exit and return to the Calendar Operations menu.

While in the Delete Calendar Assignment window, press the `Space bar` to view more assignments.

Load Calendar List

Select 5 at the Calendar Operations menu to access the Load Calendar List window. See [Figure 60: Load Calendar List window](#) on page 137.

A calendar list is a file that contains a collection of calendar assignments (for example, A:_ASSIGNS.CAL). Use this window to load a calendar list from any available drive. This window is valuable as a quick way to activate a calendar configuration, such as an emergency configuration, that had been previously saved.

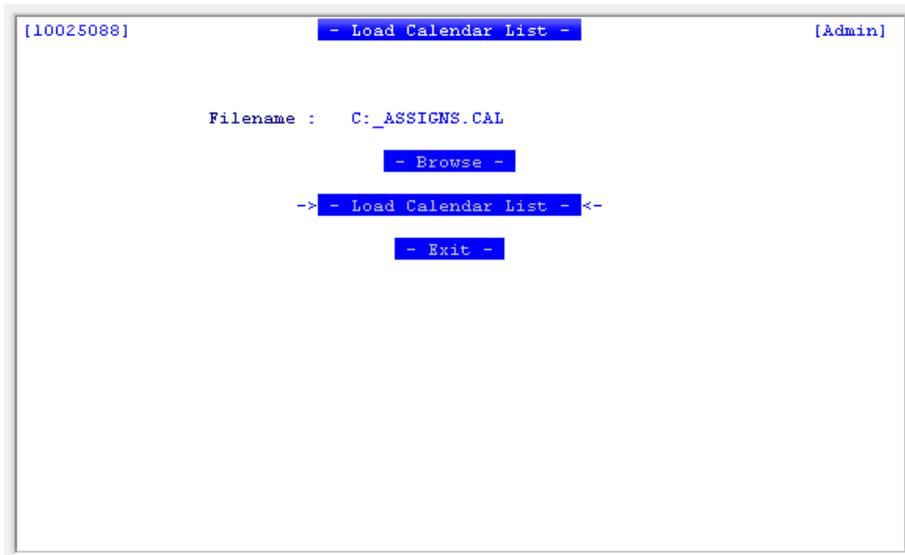


Figure 60: Load Calendar List window

* Note:

This function only adds assignments to the calendar list. It does not clear (overwrite) existing assignments.

To load a calendar list, follow the steps in [Loading a calendar list](#) on page 137.

Loading a calendar list

1. Enter the filename of the calendar list to be loaded.
Select **Browse** to scan the list of available calendar lists.
2. Select **Load Calendar List** to load the selected calendar list.
A verification message is received.
3. Select **Exit** to return to the Calendar Operations menu.

Save Calendar List

Select 6 at the Calendar Operations menu to access the Save Calendar List window. See [Figure 61: Save Calendar List window](#) on page 138. Use this window to save the current set of calendar assignments in a single file location on any of the available drives. The resulting

file can be transferred to another Integrated Recorded Announcer card or saved for future use.

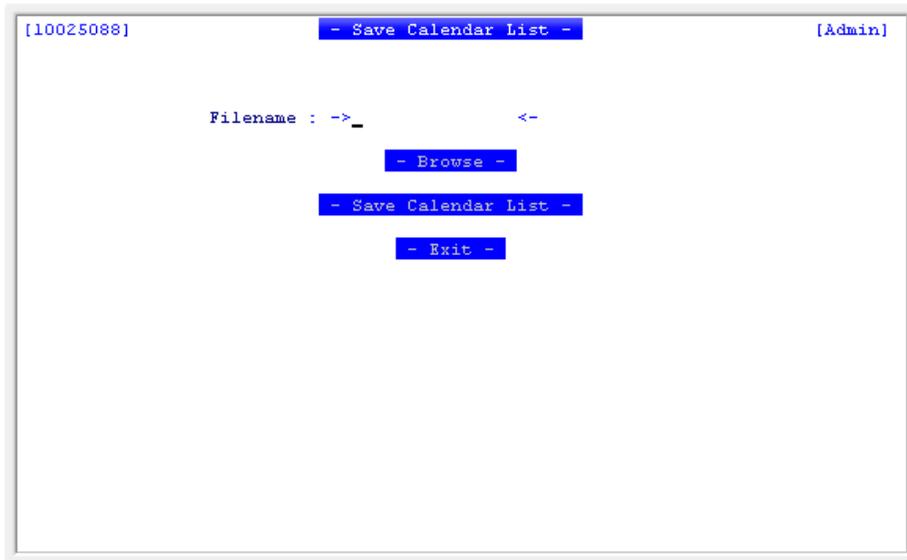


Figure 61: Save Calendar List window

To save a calendar list, follow the steps in [Saving a calendar list](#) on page 138.

Saving a calendar list

1. Enter the filename of the calendar list to be saved.
Select **Browse** to scan the list of current calendar lists.
2. Select **Save Calendar List** to save the selected calendar list.
A verification message is received.
3. Select **Exit** to return to the Calendar Operations menu.

Clear All Calendar Assignments

Select 7 at the Calendar Operations menu to access the Clear All Calendar Assignments window. See [Figure 62: Clear All Calendar Assignments window](#) on page 139. Use this window to clear all of the current calendar assignments. This window is useful when an Integrated Recorded Announcer card is reconfigured for a new customer or when significant changes to the calendar assignments are necessary.



Figure 62: Clear All Calendar Assignments window

The 'Clear all Calendar Assignments' command clears the current calendar list. If the configuration variable **AutoSave** is TRUE (the default), this command also overwrites the existing calendar file, `_ASSIGNS.CAL`.

 **Caution:**

Service Interruption

The `Clear all Calendar Assignments` command causes all active announcements to stop playing.

To clear all calendar assignments, follow the steps in [Clearing all calendar assignments](#) on page 139.

Clearing all calendar assignments

1. Select **Clear all Calendar Assignments** to clear all calendar assignments.
A verification message is received.
2. Select **Exit** to return to the Calendar Operations menu.

The Descriptor Operations menu

At the Announcement Configuration menu, select **2** to access the **Descriptor Operations** menu. See [Figure 63: Descriptor Operations menu](#) on page 140.

```
[10025088]          - Descriptor Operations -          [Admin]

  1  Add/Edit Calendar Descriptor
  2  View Calendar Descriptors
  3  Delete Calendar Descriptor
  4  Load Descriptors
  5  Save Descriptors
  6  Clear all Descriptors

  9  Back to previous Menu...

Choose a Menu Option or 9 to Exit :
Miran3>
```

Figure 63: Descriptor Operations menu

Add/Edit Calendar Descriptor

Select 1 at the Descriptor Operations menu to access the Add/Edit Calendar Descriptor window. See [Figure 64: Add/Edit Calendar Descriptor window](#) on page 141 on [Figure 64: Add/Edit Calendar Descriptor window](#) on page 141. Create or edit a calendar using this window.

A calendar descriptor has a time and date associated with it. The time and date definitions determine when an announcement that has a particular descriptor assignment plays. For example, [Figure 64: Add/Edit Calendar Descriptor window](#) on page 141 shows an announcement that uses the descriptor 'opening_hours' that plays from 9:00 a.m. to 5:30 p.m., Monday through Friday.

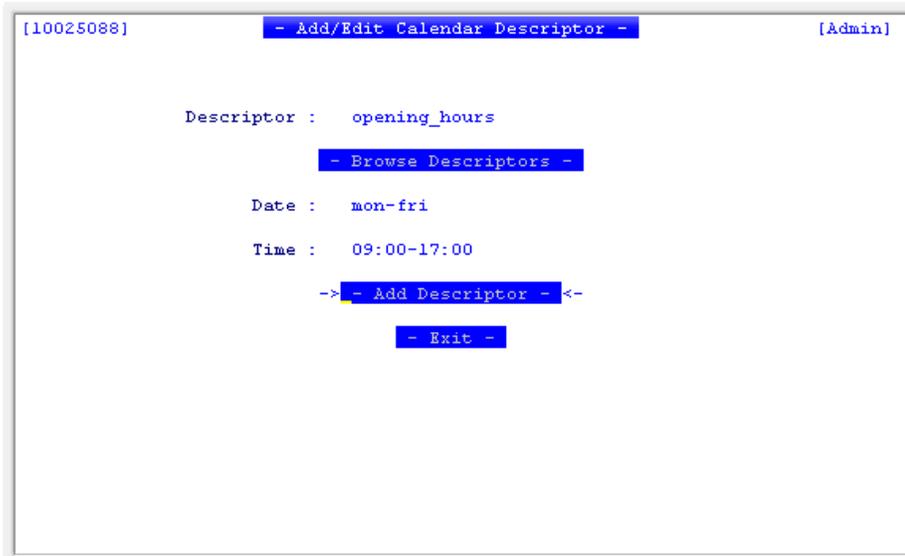


Figure 64: Add/Edit Calendar Descriptor window

To add or edit a calendar descriptor, following the steps in [Adding or editing a calendar descriptor](#) on page 141.

Adding or editing a calendar descriptor

1. Enter the name of the descriptor to be created or edited, a maximum of 16 characters in length.
To edit a descriptor, select one from the list of existing descriptors by selecting **Browse Descriptors**.
2. Enter the date, dates, or days of the week during which the descriptor must operate.
3. Enter the time during which the descriptor must operate.
4. Select **Add Descriptor** to add the descriptor. This immediately affects any assignments that contain this descriptor.
5. Select **Exit** to return to the Descriptor Operations menu.

View Calendar Descriptors

Select **2** at the Descriptor Operations menu to access the View Calendar Descriptors window. See [Figure 65: View Calendar Descriptors window](#) on page 142. The right-hand column of the window lists the creator of each descriptor. Only the administrator, or the user who created a descriptor, can delete the descriptor.

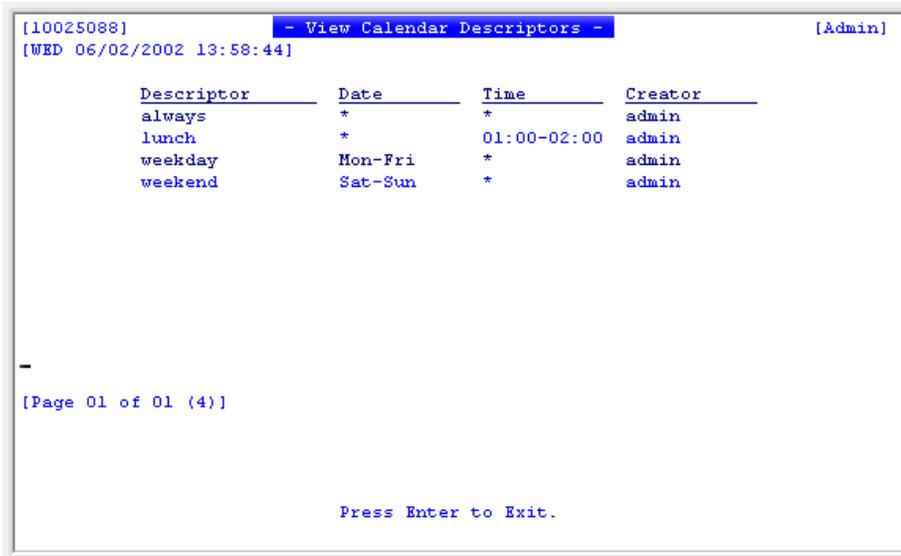


Figure 65: View Calendar Descriptors window

At the View Calendar Descriptors window, the following actions can be performed:

- Press the `Space` bar to view more descriptors that do not appear on the initial window.
- Press `Enter` to exit and return to the Descriptor Operations menu.

Delete Calendar Descriptor window

Select `3` at the Descriptor Operations menu to access the Delete Calendar Descriptor window. See [Figure 66: Delete Calendar Descriptor window](#) on page 143. The right-hand column of the window lists the creator of each descriptor. Only the administrator, or the user who created a descriptor, can delete the descriptor.

```

[10025088]          - Delete Calendar Descriptor -          [Admin]
[WED 06/02/2002 14:01:12]

  Descriptor      Date      Time      Creator
  always          *          *          admin
  lunch           *          01:00-02:00  admin
  weekday         Mon-Fri   *          admin
--> weekend        Sat-Sun   *          admin      <--

[Page 01 of 01 (4)]

      Use Up/Down arrows to select. Press 'D' to delete.
      Press Enter to Exit.

```

Figure 66: Delete Calendar Descriptor window

To delete a calendar descriptor, follow the steps in [Deleting a calendar descriptor](#) on page 143.

Deleting a calendar descriptor

1. Use the up/down arrows to select the descriptor to be deleted.
Press the `Space` bar to see more descriptors, if there are any.
2. Press `D` to delete the selected descriptor.

This immediately affects any assignments that contain this descriptor. Any assignments that use this descriptor immediately become inactive.

3. Press `Enter` to exit and return to the Descriptor Operations menu.

Load Descriptor List

Select `4` at the Descriptor Operations menu to access the Load Descriptor List window. See [Figure 67: Load Descriptor List window](#) on page 144. A descriptor list is a file that contains a collection of descriptors (for example, `A:_DESCRIP.CAL`). Use this window to load a descriptor list from any available drive. This window provides a quick way to load the same descriptor configuration to several Integrated Recorded Announcer cards.

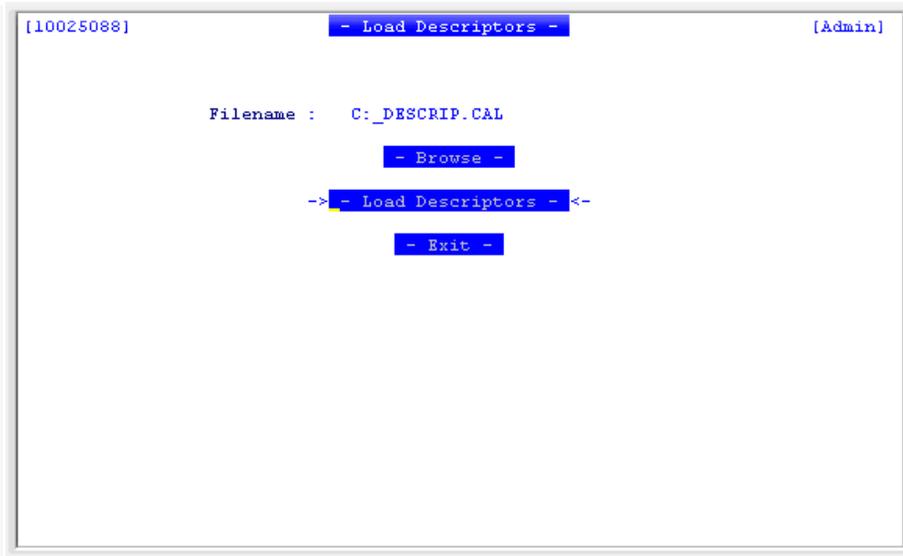


Figure 67: Load Descriptor List window

*** Note:**

This function only adds descriptors to the descriptor list. It does not clear (overwrite) existing descriptors.

To load a descriptor list, follow the steps in [Loading a descriptor list](#) on page 144.

Loading a descriptor list

1. Enter the filename of the descriptor list to be loaded.
Select **Browse** to scan the list of available descriptor lists.
2. Select **Load Descriptors** to load the selected descriptor list.
A verification message will be received.
3. Select **Exit** to return to the Descriptor Operations menu.

Save Descriptor List

Select 6 at the Descriptor Operations menu to access the Save Descriptor List window. See [Figure 68: Save Descriptor List window](#) on page 145.

Use this window to save the current set of descriptors in a single file location on any of the available drives. The resulting file can be transferred to another Integrated Recorded Announcer card or maintained for future use.

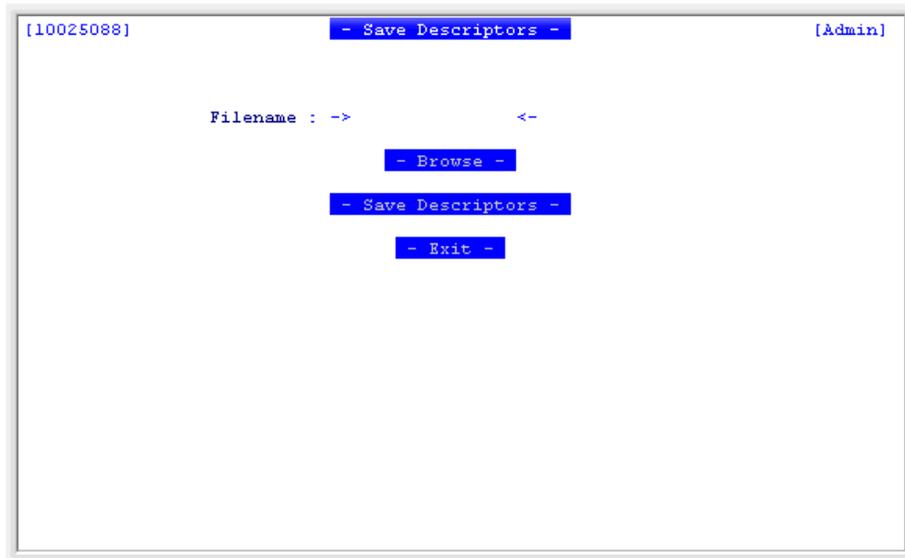


Figure 68: Save Descriptor List window

To save a descriptor list, follow the steps in [Saving a descriptor list](#) on page 145.

Saving a descriptor list

1. Enter the filename of the descriptor list to be saved.
Select **Browse** to scan the list of available descriptor lists.
2. Select **Save Descriptors** to save the selected descriptor list.
A verification message will be received.
3. Select **Exit** to return to the Descriptor Operations menu.

Clear All Descriptors

Select 6 at the Descriptor Operations menu to access the Clear All Descriptors window. See [Figure 69: Clear All Descriptors window](#) on page 146. Use this window to clear all current descriptor definitions. This window is useful when an Integrated Recorded Announcer card is reconfigured for a new customer or when significant changes to the descriptor definitions are necessary.

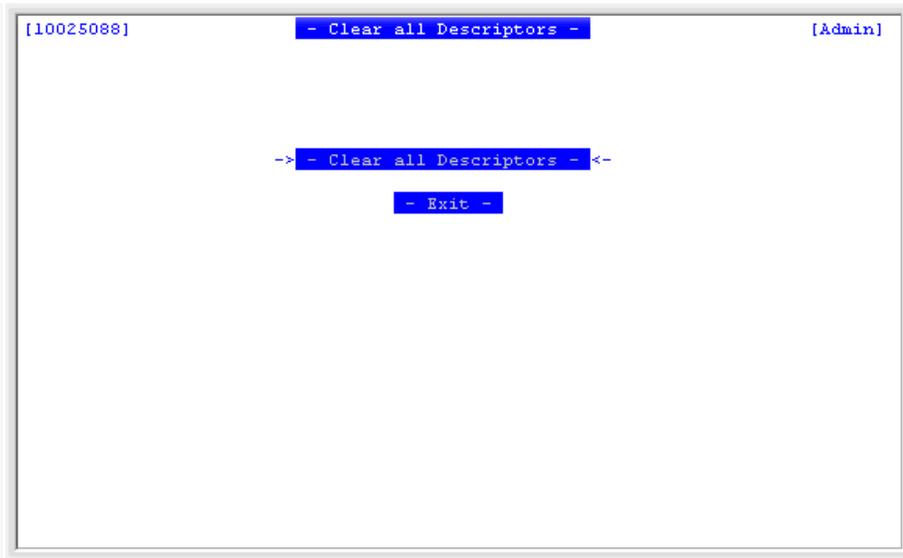


Figure 69: Clear All Descriptors window

The `Clear all Descriptors` command clears the current descriptors. If the configuration variable `AutoSave` is `TRUE` (the default), this command also overwrites the existing descriptor file, `_DESCRIP.CAL`.

 **Caution:**

Loss of Data

The `clear all Descriptors` command clears all active descriptors. This renders inactive all current calendar assignment that use descriptors. New descriptors must be defined or a new descriptor list loaded to reactivate these calendar assignments.

To clear all descriptors, follow the steps in [Clearing all descriptors](#) on page 146.

Clearing all descriptors

1. Select **Clear all Descriptors** to clear all descriptors.
A verification message will be received.
2. Select **Exit** to return to the Descriptor Operations menu.

Record Announcement from External Channel

At the Announcement Configuration menu, select **3** to access the Record Announcement from External Channel window. See [Figure 70: Record Announcement for External Channel window](#) on page 147. An announcement for the Integrated Recorded Announcer card is recorded here.

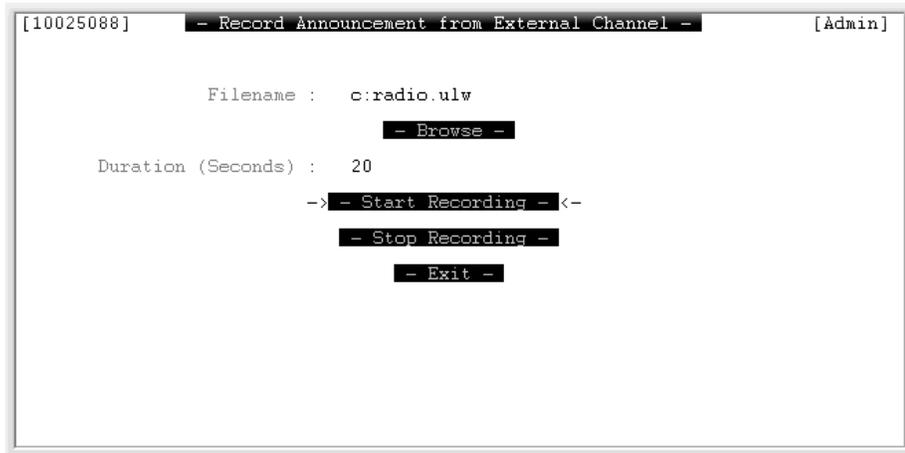


Figure 70: Record Announcement for External Channel window

To record an announcement for the Integrated Recorded Announcer card, follow the steps in [Recording an announcement to the Integrated Recorded Announcer card](#) on page 147.

Recording an announcement to the Integrated Recorded Announcer card

1. At the Filename prompt, enter the filename of the announcement.

A proper filename consists of eight alphanumeric characters with the appropriate three-letter extension (.ULW or .ALW). Remember to indicate on which drive the announcement file is to be saved.

 **Note:**

Use **Browse** to ensure that the filename that is chosen does not already exist.

2. At the 'Duration' prompt, enter the length of time, in seconds, the announcement can last (between 5 and 120 seconds).
3. Select **Start Recording** to start recording the announcement.
4. Select **Stop Recording** to stop recording.

The Integrated Recorded Announcer stops recording either when the duration is reached, when **Stop Recording is selected**, or when the file system is full.

5. Select **Exit** to return to the Announcement Configuration menu.

Convert Announcement File

At the Announcement Configuration menu, select 5 to access the Convert Announcement File window. See [Figure 71: Convert Announcement File window](#) on page 148. Use this window to convert an announcement file from .WAV format to .ULW or .ALW format, or the reverse.

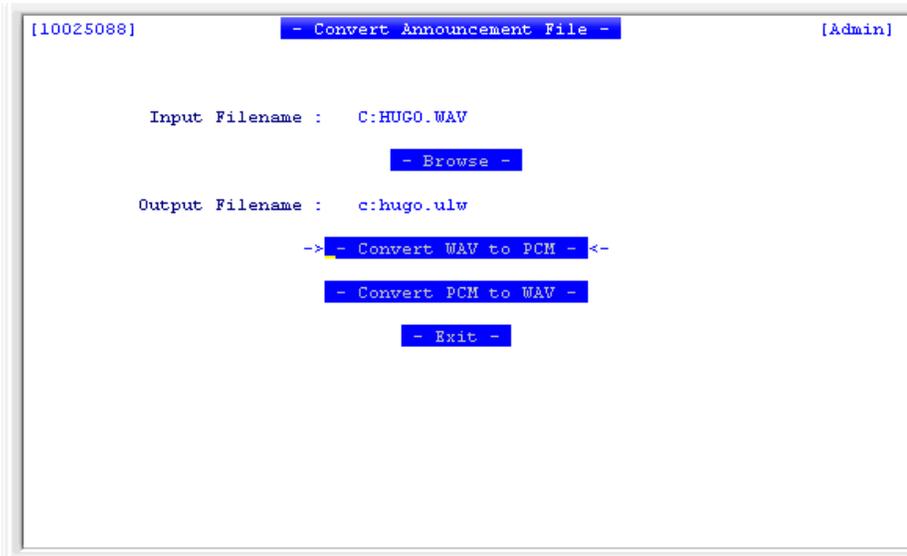


Figure 71: Convert Announcement File window

To convert an announcement file, follow the steps in [Converting an announcement file](#) on page 148.

Converting an announcement file

1. At the Input Filename: prompt, enter the filename to be converted.
Select **Browse** to scan and select from the list of available files.
2. At the Output Filename: prompt, enter the desired filename for the converted file.
If an output filename is not entered, the file receives the same filename as the input filename, with the appropriate new extension.
3. Select **Convert WAV to PCM** to convert the file from .WAV format to .ULW or .ALW format.

Select **Convert PCM to WAV** to convert the file from .ULW or .ALW format to .WAV format.

 **Note:**

The conversion process makes a duplicate of the input file. Ensure sufficient disk space is available for the conversion process, and delete unnecessary files.

 **Note:**

Announcements must be in A-law (.ALW) or m-law (.ULW) format, depending on the system configuration, to play on Integrated Recorded Announcer.

4. Select **Exit** to return to the Announcement Configuration menu.

Operational Statistics

At the MIRAN Administration menu, select **2** to access the Operational Statistics window. See [Figure 72: Operational Statistics window](#) on page 149. Use this window to check the current traffic statistics of all the internal channels. The Integrated Recorded Announcer card cannot display the statistics of the external channels because it cannot monitor the traffic on these channels.

The screenshot shows a terminal window titled '- Operational Statistics -' with the user ID '[Admin]'. It displays the system uptime: 'Pack alive since - MON 07/03/2005 15:39:19' and 'Pack alive for - 148 Hours, 9 Minutes'. Below this is a table with columns: Total, Last Hour, Average, Last Day, Average Last Week, and Average. The table lists data for channels 0 through 7. At the bottom, there is a 'Filename : -> _ <-' prompt and a menu with options: '- Browse -', '- Save Statistics -', '- Clear Statistics -', and '- Exit -'.

	Total	Last Hour	Average	Last Day	Average Last Week	Average
0	62058	0	419	0	10343	0
1	53558	0	361	0	8926	0
2	11236	0	75	0	1872	0
3	11233	0	75	0	1872	0
4	19834	0	134	0	3305	0
5	11221	0	75	0	1870	0
6	11236	0	75	0	1872	0
7	11211	0	75	0	1868	0

Figure 72: Operational Statistics window

*** Note:**

Integrated Recorded Announcer updates the operational statistics every minute.

The following is an explanation of each statistical column for each channel:

- Total – is the total number of calls received for each channel since the last bootup of the Integrated Recorded Announcer card.
- Last Hour – is the number of calls received for each channel in the last 60 minutes.
- Last Hour Average – is the average number of calls received for each channel per hour since the last bootup of the Integrated Recorded Announcer card.
- Last Day – is the number of calls received for each channel in the last 24 hours.
- Last Day Average – is the average number of calls received for each channel per day since the last bootup of the Integrated Recorded Announcer card.
- Last Week – is the number of calls received for each channel in the last seven days.
- Last Week Average – is the average number of calls received for each channel per week since the last bootup of the Integrated Recorded Announcer card.

To save the current operational statistics to a file, follow the steps in [Saving current operational statistics to a file](#) on page 150.

Saving current operational statistics to a file

1. Enter the desired filename for the file to be saved.

Remember to indicate the drive where the file is to reside.

 **Note:**

Select **Browse** to choose an existing statistics file in which to save the statistics, or use **Browse** to ensure that the new filename does not already exist.

2. Select **Save Statistics** to save the statistics to the filename.

Integrated Recorded Announcer generates a text file with values separated by commas.

3. Select **Exit** to return to the MIRAN Administration menu.

 **Note:**

Select **Clear Statistics** to reset all statistics on all channels.

Backup Configuration

At the MIRAN Administration menu, select **3** to access the Backup Configuration window. See [Figure 73: Backup Configuration window](#) on page 151. This window enables backup for the calendar, file descriptor, and configuration variable information. Backups can be configured to occur automatically, by setting the appropriate configuration variables. See [Configuration Variables menu](#) on page 164.

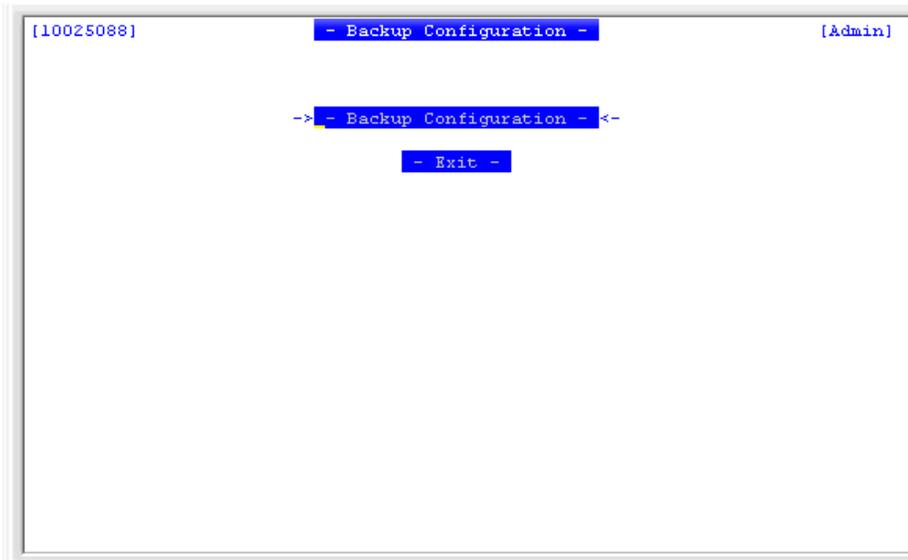


Figure 73: Backup Configuration window

*** Note:**

The Integrated Recorded Announcer card automatically saves user information, such as user names and passwords, to the C: drive. This is not part of the backup process.

To back up the configuration, follow the steps in [Backing up the configuration](#) on page 151.

Backing up the configuration

1. Select the storage device where the configuration will be backed up.
This is usually a PC Card in the external A: drive.
2. Select **Backup Configuration** to start the backup process to the specified storage device.
3. When the backup is complete, select **Exit** to return to the MIRAN Administration menu.

Run Batch File

At the MIRAN Administration menu, select 5 to access the Run Batch File window. See [Figure 74: Run Batch File window](#) on page 152. This window retrieves the standard file browser and queries which batch file to run. The batch file runs immediately after it is selected.

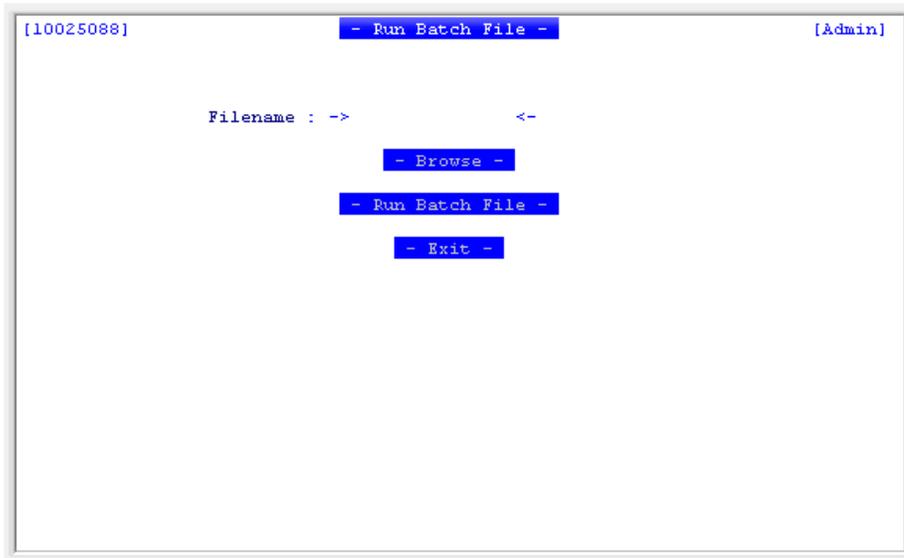


Figure 74: Run Batch File window

To run a batch file, follow the steps in [Running a batch file](#) on page 152.

Running a batch file

1. Select a batch file to run by using the up/down arrows on the keyboard.
Press the **Space bar** to list more batch files.
2. Press **Enter** to run the selected batch file.
Integrated Recorded Announcer then returns to the MIRAN Administration menu.

Restore Configuration

At the MIRAN Administration menu, select **4** to access the Restore Configuration window. See [Figure 75: Restore Configuration window](#) on page 153. This window enables the calendar, file descriptor, and configuration variable information to be restored. The most common use for this window is to copy the configuration of another Integrated Recorded Announcer card in the system by using a PC Card.



Figure 75: Restore Configuration window

To restore the Integrated Recorded Announcer card configuration from a backup device to a file, follow the steps in [Restoring the Integrated Recorded Announcer card configuration from a backup device to a file](#) on page 153.

Restoring the Integrated Recorded Announcer card configuration from a backup device to a file

1. Select the storage device where the configuration is saved.
This is usually a PC Card in the external A: drive.
2. Select **Restore Configuration** to start the restore process from the specified storage device.
3. When the restoration is complete, select **Exit** to return to the MIRAN Administration menu.

Pack Administration menu

At the Main Menu, select **2** to access the **Pack Administration** menu. See [Figure 76: Pack Administration menu](#) on page 154.

```

[10025088]          - Pack Administration -          [Admin]
1  File Commands...
2  Keycode Entry
3  System Information
4  Configuration Variables...
5  Ethernet Configuration
6  Time & Date...

9  Back to previous Menu...

Choose a Menu Option or 9 to Exit :
Miran3>

```

Figure 76: Pack Administration menu

On the Pack Administration menu, there are eight options:

- File Commands... – enables the files to be explored, copied, deleted, renamed, and moved. Refer to [File Commands menu](#) on page 155.
- Keycode Entry – enables the keycodes to be entered for new Integrated Recorded Announcer cards, port size increases, and software upgrades. Refer to [Keycode Entry](#) on page 161.
- Software Upgrade – enables software upgrades using a PC Card. Refer to [Software Upgrade](#) on page 162.
- System Information – displays the Integrated Recorded Announcer card configuration and software release information. Refer to [System Information](#) on page 163.
- Configuration Variables... – enables the configuration variables to be viewed, edited, and saved. Configuration variables control certain aspects of the Integrated Recorded Announcer operation that are not obvious to the user. Refer to [Configuration Variables menu](#) on page 164.
- Ethernet Configuration – allows the IP address, subnet mask, and gateway of the Integrated Recorded Announcer card to be configured. This is necessary to enable LAN access to the Integrated Recorded Announcer card. Refer to [Ethernet Configuration](#) on page 168.
- Time & Date Configuration – enables the time and date of the Integrated Recorded Announcer card to be configured in one of two ways: either manually, or by retrieving the time and date automatically from the system. Refer to [Time and Date Configuration menu](#) on page 169.
- Back to previous Menu... – returns to the Main Menu.

File Commands menu

At the Pack Administration menu, select **1** to access the **File Commands** menu. See [Figure 77: File Commands menu](#) on page 155.

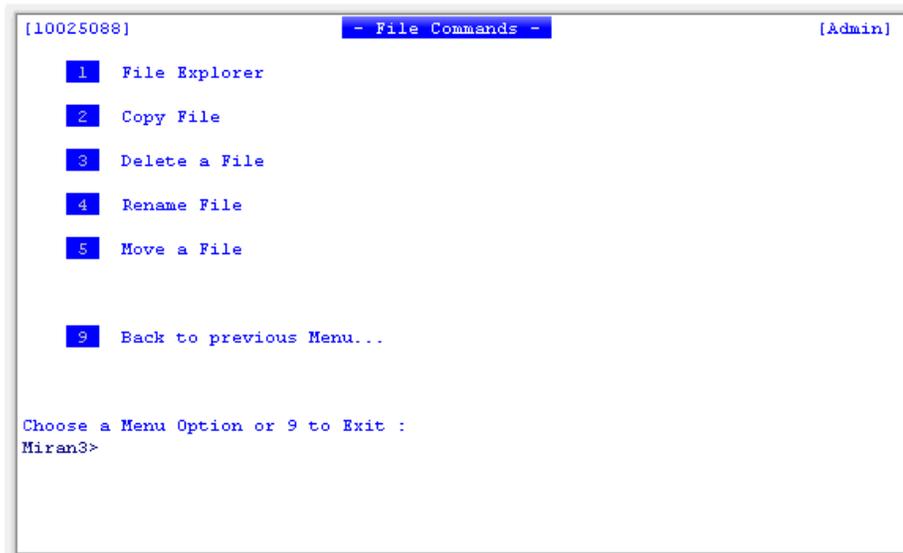


Figure 77: File Commands menu

On the File Commands menu, there are six options:

- File Explorer – enables browsing through the directory file listings for the internal C: drive and any PC-based stored file lists. Refer to [File Explorer](#) on page 155.
- Copy File – enables a file to be copied to a different file on the same drive or another drive. Refer to [Copy File](#) on page 156.
- Delete File – enables a selected file to be deleted. Refer to [Delete File](#) on page 157.
- Rename File – allows any existing file to be renamed. Refer to [Rename File](#) on page 158.
- Move File – allows a file to be copied to a specified location and the original source file deleted. Refer to [Move File](#) on page 160.
- Exit 0 returns to the Pack Administration menu.

File Explorer

On the File Commands menu, select **1** to access the File Explorer window. See [Figure 78: File Explorer window](#) on page 156.

```

[10025088]          - File Explorer -          [Admin]
[WED 06/02/2002 15:44:13]

-->  *  Filename  Type  Size  Date  Time  <--
      fionnual    -      4096  05/02/2002  15:35
      _users     dat       256  05/02/2002  15:52
      _descrip   cal       120  06/02/2002  13:58
      _config    dat       241  12/03/2005  20:06
      tui        -      4096  24/01/2002  15:02
      tags       -      4096  24/01/2002  15:02
      debug      -      4096  28/01/2002  11:18
      config     -      4096  24/01/2002  15:53
      exec       good    4036252  05/03/2005  20:21
      hugo       wav     169330  05/02/2002  15:26
      keycode    dat       26   12/03/2005  19:32
      keycode    sav       26   19/02/2005  17:23

[Page 01 of 03 (29)]
      [ A: ]  0  [ C: ]  0
Bytes Free  54677504  5267456

      Press Space for more or Enter to Exit

```

Figure 78: File Explorer window

In the File Explorer window, follow the steps in [Figure 66: Delete Calendar Descriptor window](#) on page 143 to use File Explorer.

Using File Explorer

1. Select which drive's contents to explore.

Use the right and left arrow keys to maneuver. The amount of storage space available on each drive appears below each drive letter.



Note:

The PC Cards must be in place in the A: drive before the drive's contents can be checked. Allow approximately ten seconds after inserting a PC Card for the drive to mount.

2. Use the up/down arrows to scroll through the list of files.
3. Press **Enter** to return to the File Commands window.

Copy File

At the File Commands window, select **2** to access the Copy File window. See [Figure 79: Copy Files window](#) on page 157.



Caution:

Loss of Data

Disable the Integrated Recorded Announcer card before transferring files between drives.



Figure 79: Copy Files window

To copy an existing file to a different file, follow the steps in [Copying an existing file to a different file](#) on page 157.

Copying an existing file to a different file

1. At the 'Source Filename:' prompt, enter the filename to be copied.
Include the drive where the file resides. Select **Browse** to scan the list of available files.
2. At the **Destination Filename:** prompt, enter the filename, including the drive, where the file will be copied.
Select **Browse** to scan the list of available files.
3. Select **Copy** to copy the selected file from the source filename to the destination filename.

*** Note:**

Steps 1 through 3 can be repeated as many times as needed before proceeding to step 4.

4. Select **Exit** to return to the File Commands window.

Delete File

At the File Commands window, select **3** to access the Delete File window. See [Figure 80: Delete File window](#) on page 158.



Caution:
Loss of Data

Before a file is deleted, ensure that the file is not currently active.

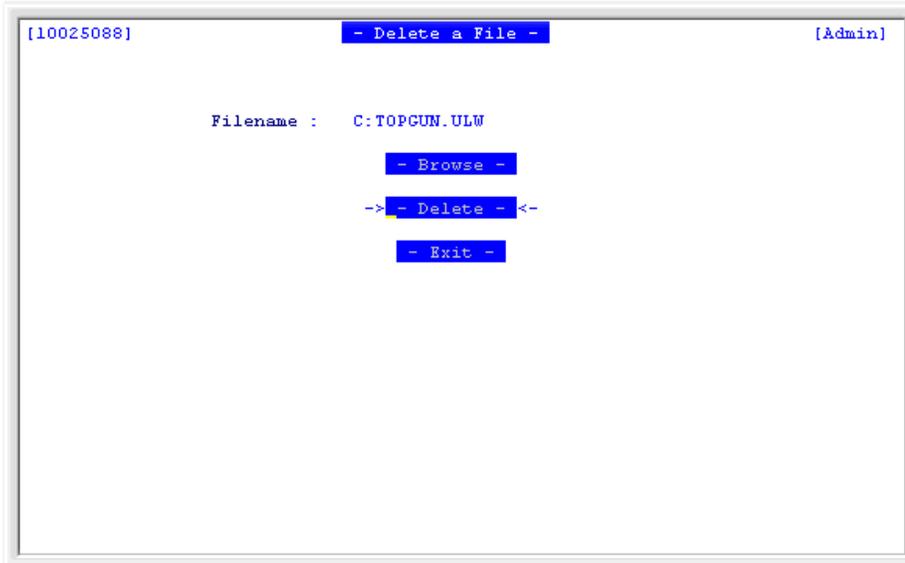


Figure 80: Delete File window

To delete a file, follow the steps in [Deleting a file](#) on page 158.

Deleting a file

1. At the **Filename:** prompt, enter the filename to be deleted.
Include the drive where the file resides. Select **Browse** to scan the list of available files.
2. Select **Delete** to delete the selected file.



Note:

Steps 1 and 2 can be repeated as many times as needed before proceeding on to step 3.

3. Select **Exit** to return to the File Commands window.

Rename File

At the File Commands window, select **4** to access the Rename File window. See [Figure 81: Rename File window](#) on page 159.



Caution:
Loss of Data

Before a file is renamed, ensure that the file is not currently active.

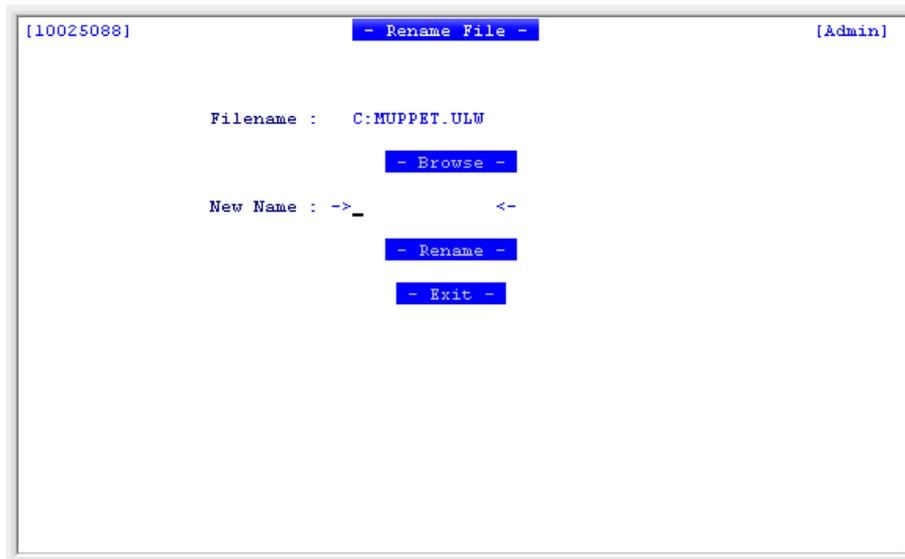


Figure 81: Rename File window

To rename a file, follow the steps in [Renaming a file](#) on page 159.

Renaming a file

1. At the **Filename:** prompt, enter the filename to be renamed.
 Include the drive where the file resides. Select **Browse** to scan the list of available files.
2. At the **New Name:** prompt, enter the new name for the file.
 Include the drive where the file will reside. Select **Browse** to scan the list of available files.
3. Select **Rename** to rename the selected file.

 **Note:**

Steps 1 through 3 can be repeated as many times as needed before proceeding on to step 4.

4. Select **Exit** to return to the File Commands window.

Move File

At the File Commands window, select **5** to access the Move File window. See [Figure 82: Move File window](#) on page 160.



Caution:

Loss of Data

Before a file is moved, ensure that the file is not currently active.

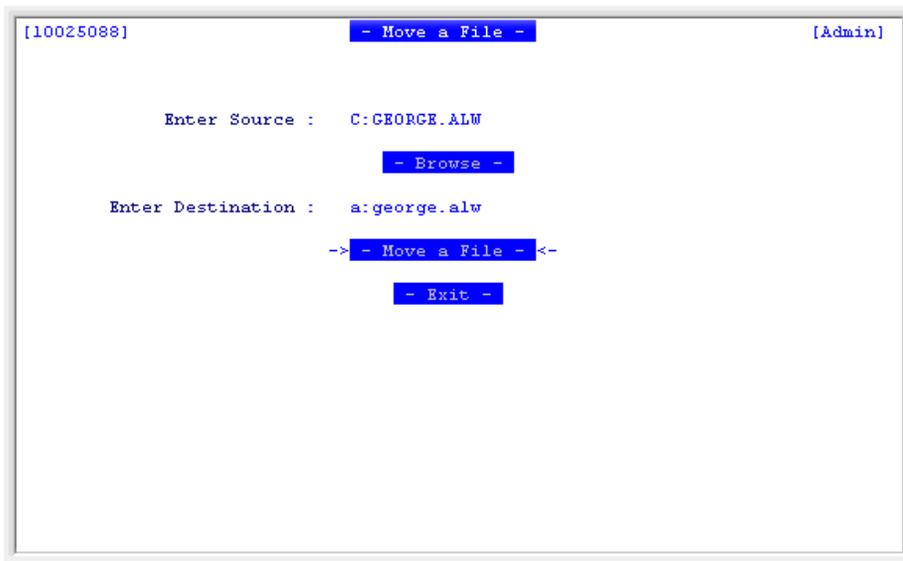


Figure 82: Move File window

To move a file from one location to another, follow the steps in [Moving a file from one location to another](#) on page 160.

Moving a file from one location to another

1. At the **source filename:** prompt, enter the filename to be moved.
Include the drive where the file resides. Select **Browse** to scan the list of available files.
2. At the **Destination filename:** prompt, enter the filename, including the drive, where the file is to be moved.
Select **Browse** to scan the list of available files.
3. Select **Move File** to move the selected file.
This action deletes the source filename and places the file in the destination filename.

*** Note:**

Steps 1 through 3 can be repeated as many times needed before proceeding on to step 4.

4. Select **Exit** to return to the File Commands window.

Keycode Entry

At the Pack Administration menu, select **2** to access the Keycode Entry window. See [Figure 83: Keycode Entry window](#) on page 161.

```

[10025088]          - Keycode Entry -          [Admin]

          Current Configuration

          Version   : 3.0h (Rls 1)
          Internal Channels : 8
          External Channels : 1
          Keycode   : 62247770 64276760 26520347

          New Parameters

          Keycode : ->                               <-

          - Execute -
          - Exit   -
  
```

Figure 83: Keycode Entry window

The Keycode Entry window shows the current configuration, listing the Integrated Recorded Announcer software version, the number of internal and external ports, and the current keycode.

To change the keycode, follow the steps in [Changing the keycode](#) on page 161.

Changing the keycode

1. At the **keycode:** prompt, enter the new keycode.

Remember to add a space between each group of eight numbers.

2. Select **Execute** to update the keycode.

If the new keycode is valid, a `Keycode Validated` message is displayed, and the system updates the current configuration information.

*** Note:**

If performing an upgrade, Step 2 enables the upgrade.

3. Select **Exit** to return to the Pack Administration menu.

*** Note:**

To abort the keycode update, select **Exit** without selecting **Execute**.

Software Upgrade

At the Pack Administration menu, select **3** to access the Software Upgrade window. See [Figure 84: Software Upgrade window](#) on page 162.



Figure 84: Software Upgrade window

The Software Upgrade window can be used to upgrade to a new software version or to reload the existing software to fix a bug. If upgrading to a new software version, a new keycode must be entered. If simply fixing a bug, a new keycode is not needed.

⚠ Caution:

System Failure

Do not reboot or power down the Integrated Recorded Announcer card during the software upgrade process. When the upgrade is complete, the system displays **OK** .

After **OK** is displayed, do a cold reboot on the card to activate the software upgrade.

To perform a software upgrade, follow the steps in [Performing a software upgrade](#) on page 163.

Performing a software upgrade

1. At the **Filename:** prompt, enter the file to be downloaded from the PC Card to the Integrated Recorded Announcer card's internal Flash memory (C: drive), to upgrade the current software.

Select **Browse** to scan the list of available upgrade files.

2. Select **Upgrade** to place the selected file into the internal Flash memory of the Integrated Recorded Announcer card.

 **Note:**

The upgrade can take a while. Wait for the `Upgrade successful` message to be displayed before proceeding.

3. After the upgrade is completed, select **Exit** to return to the Pack Administration menu.
4. Access the Keycode Entry window to enter the keycode for the software upgrade. See [Keycode Entry](#) on page 161.

 **Note:**

Step 4 is not necessary for a simple bug fix.

5. Go to the Cold Reboot window to cold-reboot the Integrated Recorded Announcer card.

See [Maintenance and Diagnostics menu](#) on page 173. This activates the software upgrade.

System Information

At the Pack Administration window, select **3** to access the System Information window. See [Figure 85: System Information window](#) on page 164.

```

[10025088]          - System Information -          [Admin]

          Hardware Configuration

          CPU : IXP-1200
          System Memory : 27 MBytes
          Disk A: (External ATA) : 54507520 Bytes Free
          Disk C: (Internal ATA) : 5267456 Bytes Free

          Software Configuration
          Application : NTAG37AB Version 3.0h (Rls 1)
          Codec Driver : Version MCL.00
          8051XA Firmware : MC Firmware Rls 5.0
          DSP Version : 0.77 (Mu-Law)
          DSP Status : OK
          Time & Date Sync : Download disabled

          Press Enter to continue._

```

Figure 85: System Information window

The System Information window displays the following information:

- Hardware Configuration – including the CPU, the system memory, and the status of the drives.
- Software Configuration – including the application and firmware releases.

Use this information to help diagnose hardware or software issues that relate to a particular release of the product. After reviewing the system information, press `Enter` to return to the Pack Administration menu.

Configuration Variables menu

Configuration variables are variables that control certain aspects of the operation of the Integrated Recorded Announcer card. These variables are not immediately visible to the user, and the default settings are usually sufficient. However, an administrator can view and change these variables when non-standard options are necessary. [Table 21: Configuration Variables](#) on page 100 on [Table 21: Configuration Variables](#) on page 100 lists the configuration variables along with their values and descriptions.

In the Pack Administration window, select **5** to access the **Configuration Variables** menu. See [Figure 86: Configuration Variables menu](#) on page 165.

```

[10025088]          - Configuration Variables -          [Admin]

  1 View Configuration Variables
  2 Edit Configuration Variable
  3 Save Configuration Variables

  9 Back to previous Menu...

Choose a Menu Option or 9 to Exit :
Miran3>

```

Figure 86: Configuration Variables menu

At the Configuration Variables menu, the following options are available:

- View Configuration Variables – enables the current values of all the configuration variables to be viewed. Refer to [View Configuration Variables](#) on page 165.
- Edit Configuration Variables – enables the current values of the configuration variables to be edited. Refer to [Edit Configuration Variables](#) on page 166.
- Save Configuration Variables – enables any changes made to the configuration variables to be saved. Integrated Recorded Announcer saves the current configuration variables when the option **3** is selected. There is no separate window for this function; a confirmation message is simply received.

 **Note:**

This function saves the configuration variables to the default drive with the filename `_CONFIG.DAT`.

- Back to previous Menu... – returns to the Pack Administration window. Save any changes made to the configuration variables before exiting.

View Configuration Variables

In the Configuration Variables window, select **1** to access the View Configuration Variables window. See [Figure 87: View Configuration Variables window](#) on page 166.

```
[10025088]          - View Configuration Variables -          [Admin]

Variable Name      Value
DspEcanEnabled    True
DspReceiveGain    0
FileSortType      Name
Language          English
PackName          Miran3
SetBasedAccess    True
StatsSaveFreq     2
StatusUpdateFreq  0
SysDownloadFreq   1
SysDownloadTime   00:00
SysIPAddress      0.0.0.0
SysLoginEnabled   False

[Page 01 of 02 (13)]

Press Space for more or Enter to Exit
```

Figure 87: View Configuration Variables window

At the View Configuration Variables window, the following options are available:

- Press `Space` bar to see more of the configuration variables.
- Press `Enter` to return to the Configuration Variables menu.

Edit Configuration Variables

At the Configuration Variables window, select **2** to access the Edit Configuration Variables window. See [Figure 88: Edit Configuration Variables window](#) on page 167.

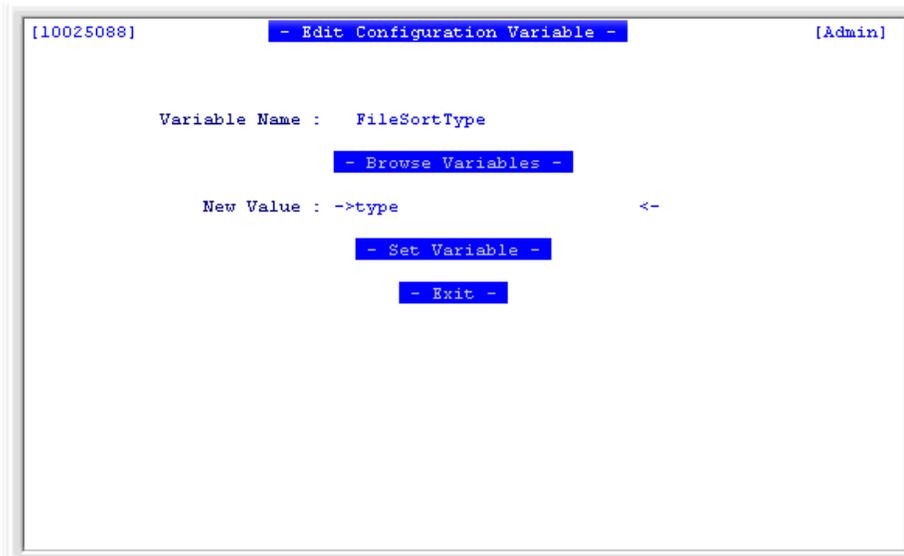


Figure 88: Edit Configuration Variables window

To edit the configuration variables, follow the steps in [Editing the configuration variables](#) on page 167.

Editing the configuration variables

1. At the **Variable Name:** prompt, enter the name of the variable to be edited.
Select **Browse Variables** to scan and select from the list of available variables.
2. At the **New Value:** prompt, enter the new value of the variable selected in step 1.

Make sure that the value falls within the range of acceptable values according to [Figure 15: Calendar Assignment window](#) on page 91 on [Figure 15: Calendar Assignment window](#) on page 91.

3. Select **Set Variable** to set the new value of the variable.

 **Note:**

Steps 1 through 3 can be repeated for as many variables as needed.

4. Select **Exit** to return to the Configuration Variables menu.
5. At the Configuration Variables menu, select **3** to save the current (new) set of configuration variables.

 **Caution:**

Loss of Data

After configuration variables are edited at the Edit Configuration Variables window, select **3** (Save Configuration Variables) in the Configuration Variables menu to save the changes. If this is not done, the changes will not take effect.

Ethernet Configuration

At the Pack Administration menu, select **5** to access the Ethernet Configuration window. See [Figure 89: Ethernet Configuration window](#) on page 168.

```
[10025088]          - Ethernet Configuration -          [Admin]

      Current Configuration
      IP Address : 47.85.15.62
      Subnet Mask : 255.255.240.0
      Gateway : 47.85.0.1
      IP Method : static

      New Configuration
      IP Address : 47.85.15.62
      Subnet Mask : 255.255.240.0
      Gateway : 47.85.0.1
      IP Method : static

      -> - Set - <-
          - Exit -
```

Figure 89: Ethernet Configuration window

LAN access to the Integrated Recorded Announcer card is optional, but it is necessary to do any of the following:

- use the embedded browser user interface to perform OA&M
- Telnet into the Integrated Recorded Announcer card from a remote site
- transfer files to and from the Integrated Recorded Announcer card using FTP

The IP address, subnet mask, gateway, and the IP method for the Integrated Recorded Announcer card must be configured correctly to enable LAN access to the card. The MAC address is unique to each Integrated Recorded Announcer card; it cannot be changed.

 **Caution:**

System Failure

Consult with the network administrator before configuring the LAN parameters. Incorrect parameters can cause problems to other users in the network or can lead to network outages.

To configure the Integrated Recorded Announcer card for LAN access, follow the steps in [Configuring the Integrated Recorded Announcer card for LAN access](#) on page 169.

Configuring the Integrated Recorded Announcer card for LAN access

1. Under **New Configuration:**, enter the IP address at the appropriate prompt.
2. Enter the subnet mask at the appropriate prompt.
3. Enter the gateway at the appropriate prompt.

 **Note:**

The gateway IP address tells the Integrated Recorded Announcer card where the local gateway router is. This enables access from networks outside of the Integrated Recorded Announcer card's subnet. It is not necessary to enter a gateway IP address if only accessing a local subnet.

4. Enter the IP method at the appropriate prompt.

 **Note:**

Disabled is the default, which makes the card inaccessible from the network even if the other parameters have been configured. Enter `static` if using a static IP address that corresponds to the IP address that was entered on this window. Enter `bootp` to indicate that the card must request its IP address from a bootp server on the network.

5. Select **Set** to register the new IP address, subnet mask, gateway, and IP method.

A valid LAN configuration receives an **Ethernet Configuration Set** acknowledgment.

6. Select **Exit** to return to the Pack Administration menu.

 **Note:**

The card must be rebooted for the new LAN configuration parameters to take effect.

Time and Date Configuration menu

 **Note:**

To use the Time & Date Synchronization feature, LAN access for the system must be configured. For instruction on how to configure the system, refer to [Configuring Ethernet for Time and Date Synchronization](#) on page 51.

At the Pack Administration menu, select **6** to access the **Time & Date Configuration** menu. See [Figure 90: Time and Date Configuration Menu](#) on page 170.

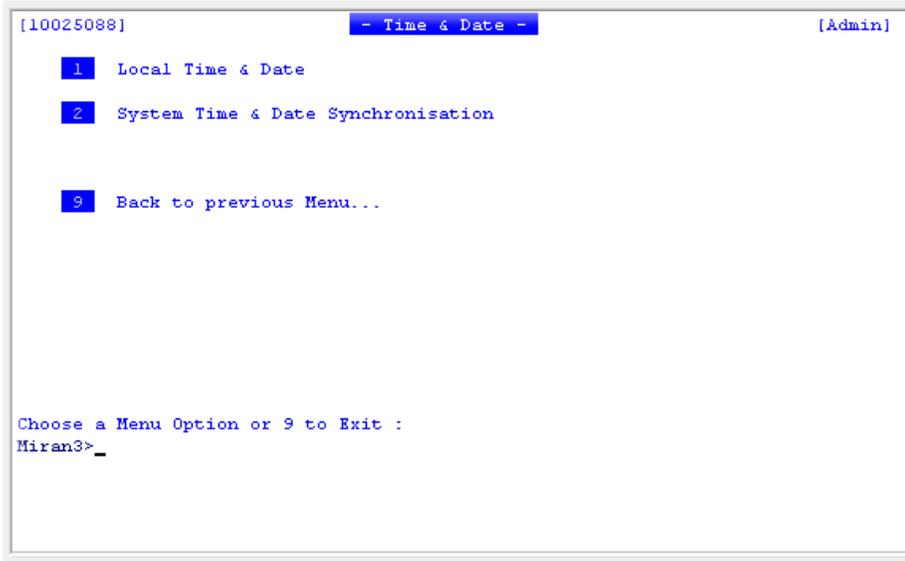


Figure 90: Time and Date Configuration Menu

On the Time & Date Configuration menu, the following options are available:

- Local Time & Date – enables the time and date to be set on the Integrated Recorded Announcer card manually. Refer to [Local Time and Date](#) on page 170.
- System Time & Date Synchronization – enables the Integrated Recorded Announcer card to be configured to retrieve the time and date information automatically from the system. Refer to [System Time and Date Synchronization](#) on page 171.

Local Time and Date

On the Time & Date Configuration menu, select **1** to access the Local Time & Date window. See [Figure 91: Local Time and Date window](#) on page 171.

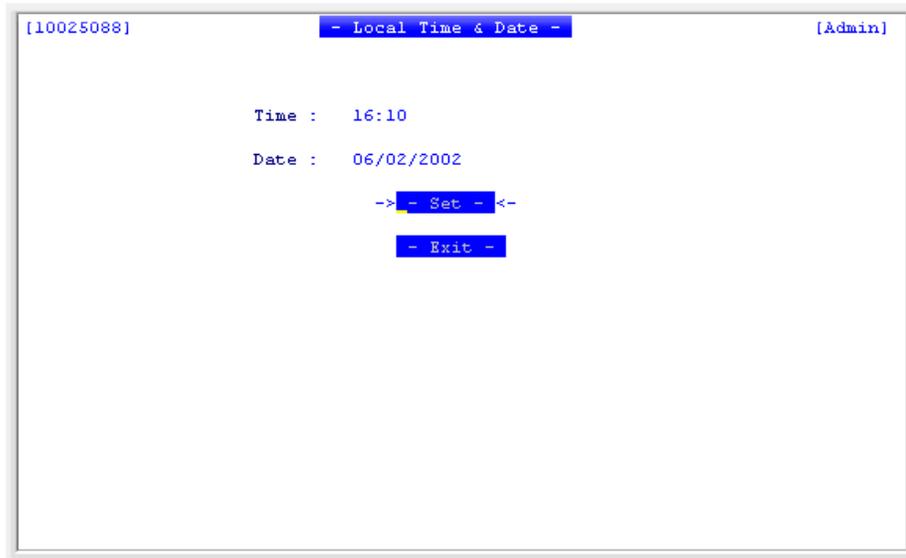


Figure 91: Local Time and Date window

To set the time and date for the Integrated Recorded Announcer card manually, follow the steps in [Setting the time and date for the Integrated Recorded Announcer card manually](#) on page 171.

Setting the time and date for the Integrated Recorded Announcer card manually

1. Enter the current time at the **Time:** prompt.
2. Enter the current date at the **Date:** prompt.

*** Note:**

Integrated Recorded Announcer automatically calculates the day of the week.

3. Select **-Set-** to set the time and date.
4. Select **-Exit-** to return to the Time & Date Configuration menu.

*** Note:**

This procedure performs the same operation as the **SETTIME** and **SETDATE** commands.

System Time and Date Synchronization

On the Time & Date Configuration menu, select **2** to access the System Time & Date Synchronization window. See [Figure 92: System Time and Date Synchronization window](#) on page 172.

```

[10025088]      - System Time & Date Synchronisation -      [Admin]

      Enabled :   true
      IP Address : 47.85.127.25
      Frequency : 1
      Time : 00:00
                -> - Set - <-
                    - Exit -

```

Figure 92: System Time and Date Synchronization window

To enable time and date synchronization with the system, follow the steps in [Enabling time and date synchronization with the system](#) on page 172.

Enabling time and date synchronization with the system

1. Set the **Enabled:** prompt to **true**.
2. Enter the IP address of the system.

*** Note:**

The system must be on the same subnet as the Integrated Recorded Announcer card.

3. At the **Frequency:** prompt, enter the number of days between each synchronization attempt (for example, enter **1** to synchronize every day).
4. At the **Time:** prompt, enter the time of day the Integrated Recorded Announcer card will attempt to synchronize with the system.

*** Note:**

It is very important to schedule the time for synchronization during the period of lowest use (for example, not during midnight routines).

*** Note:**

The MIRAN III Succession Media Card makes one attempt to synchronize for each scheduled attempt. If the synchronization fails, the MIRAN III Succession Media Card keeps its current time and date configuration and tries to synchronize again at the next scheduled attempt.

 **Note:**

The System Time & Date Synchronization requires the MIRAN III Ethernet Configuration to be set to the relevant IP Method. System Time & Date Synchronization should never be set to enabled if the IP Method in the Ethernet Configuration is set to disabled.

5. Select **-Set-** to set the time and date synchronization.
6. Select **-Exit-** to return to the Time & Date Configuration menu.

 **Note:**

The System Time & Date Synchronization requires the MIRAN III Succession Media Card to log into the Meridian 1 or Avaya Communication Server 1000 system. This can affect other operations on the switch. Therefore, careful staging of the synchronization process is necessary.

Maintenance and Diagnostics menu

On the Main Menu, select **3** to access the **Maintenance and Diagnostics** menu. See [Figure 93: Maintenance and Diagnostics menu](#) on page 174.

```

[10025088]           - Maintenance & Diagnostics -           [Admin]

  1 System Information
  2 Cold Reboot
  3 Command Line Access (Host)

  9 Back to previous Menu...

Choose a Menu Option or 9 to Exit :
Miran3>_

```

Figure 93: Maintenance and Diagnostics menu

In the Maintenance and Diagnostics menu, with the proper level of access, the following actions can be performed:

- Select **1** to access the System Information window. This is the same window accessed from the Pack Administration menu. Refer to [System Information](#) on page 163 for details.
- Select **2** to perform a cold reboot of the Integrated Recorded Announcer card. This is a full system reboot.
- Select **3** to open the **Command Line Access Host**. Use this interface to perform PI testing and debugging.
- Select **9** to return to the Main Menu.

User Administration menu

At the Main Menu, select **4** to access the User Administration menu. See [Figure 94: User Administration menu](#) on page 175. Integrated Recorded Announcer enables the configuration of multiple users for a single Integrated Recorded Announcer system. Only users with administrator privileges and higher have access to this menu.

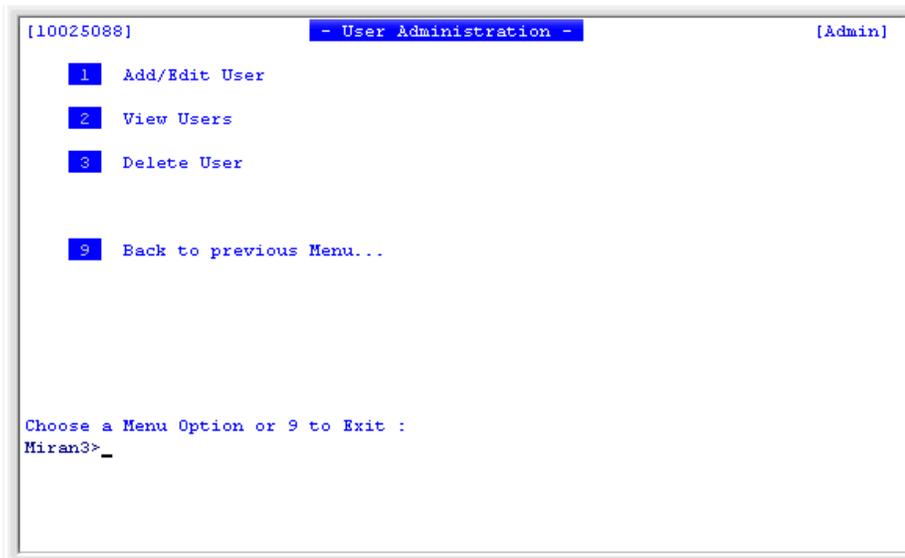


Figure 94: User Administration menu

There are four options at the User Administration menu:

- Select **1** to add or edit a user. Refer to [Add/Edit User](#) on page 175.
- Select **2** to view a list of the users and their corresponding channel assignments. Refer to [View Users](#) on page 177.
- Select **3** to delete a user. Refer to [Delete User](#) on page 177.
- Select **9** to exit and return to the Main Menu.

When a new user is defined, give the user a password and a group of channels that the user can access.

Add/Edit User

At the User Administration menu, select **1** to access the Add/Edit User window. See [Figure 95: Add/Edit User window](#) on page 176.

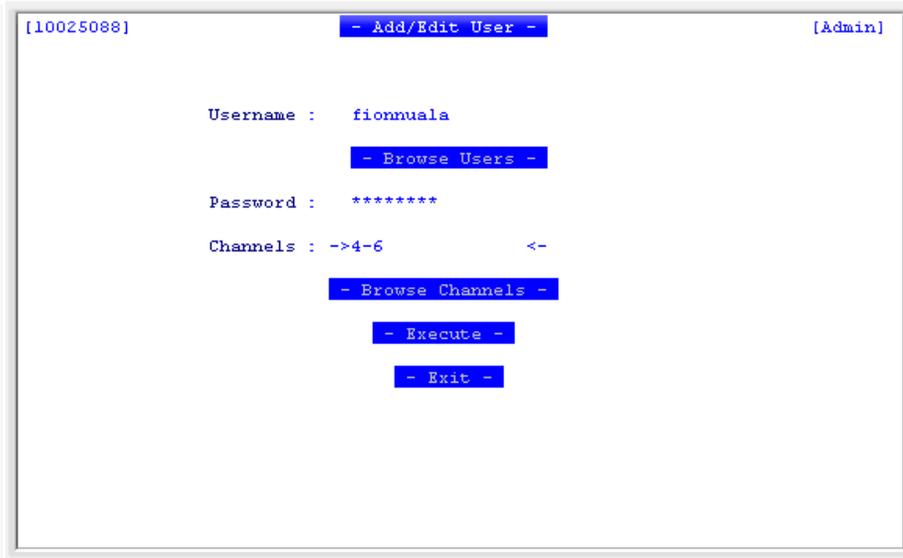


Figure 95: Add/Edit User window

To add or edit a user, follow the steps in [Adding or editing a user](#) on page 176.

Adding or editing a user


1. Enter the user name, which can be any combination of alphanumeric characters.
If adding a new user, select **Browse** to ensure that the user name does not already exist. If editing an existing user, select **Browse** to select a name from the list of users.
2. Enter the new password for the user.
The password must be at least eight alphanumeric characters. The maximum length is 12 characters.
3. Enter the channels that the user is allowed to access.
Select **Browse Channels** to view and select from the list of available channels. Use 's' to toggle the selection of a channel.
4. Select **Add User** to save the new user information.
This step updates the information on the C: drive automatically.
5. Select **Exit** to return to the User Administration menu.

 **Note:**

Integrated Recorded Announcer saves all user information in a file named C:_USERS.DAT. All default users and passwords can be restored by deleting the C:_USERS.DAT file.

View Users

On the User Administration menu, select **2** to access the View Users window. See [Figure 96: View User window](#) on page 177. This window lists the users' names and the channels that each user can access.

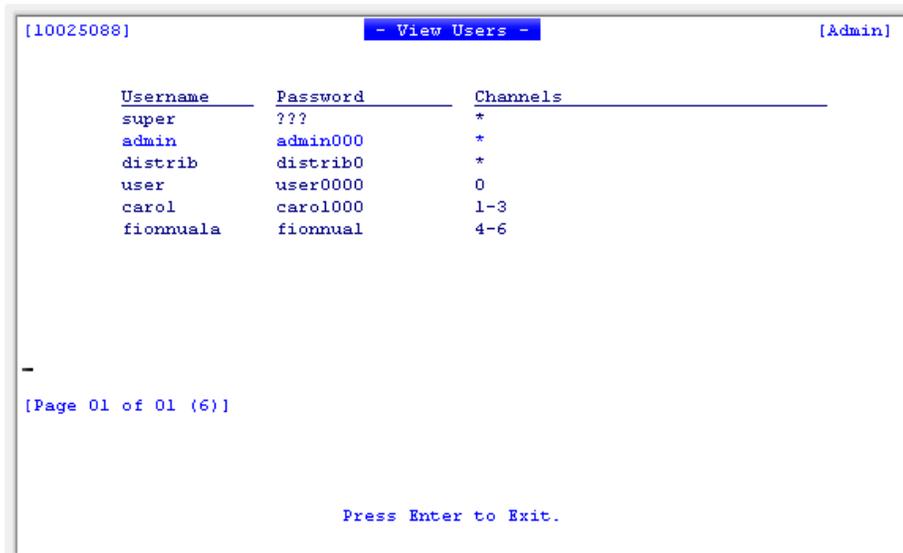

```
[10025088]                - View Users -                [Admin]

Username      Password      Channels
-----      -
super         ???          *
admin         admin000     *
distrib       distrib0     *
user          user0000     0
carol         carol000     1-3
fionnuala    fionnual     4-6

-

[Page 01 of 01 (6)]

Press Enter to Exit.
```

Figure 96: View User window

In the View Users window, the following actions can be performed:

- Press the `Space` bar to view more users if they do not all appear on the initial window.
- Press `Enter` to exit and return to the User Administration window.

Delete User

On the User Administration menu, select **3** to access the Delete User window. See [Figure 97: Delete User window](#) on page 178. This window lists the users' names and the channels that each user is allowed to access.

```

[10025088]          - Delete User -          [Admin]

  Username      Password      Channels
  -----      -
super          ???          *
admin         admin000       *
--> distrib    distrib0      *          <--
user          user0000       0
carol         carol000       1-3
fionnuala     fionnual              4-6

[Page 01 of 01 (6)]

Use Up/Down arrows to select. Press 'D' to delete.
Press Enter to Exit.

```

Figure 97: Delete User window

To delete a user, follow the steps in [Deleting a user](#) on page 178.

Deleting a user

1. Use the up/down arrows to select the user to be deleted.
 - If the user does not appear on the initial window, press the `Spacebar` for more users.
2. Press `D` to delete the selected user.
 - This step updates the information on the C: drive automatically.
3. Press `Enter` to exit and return to the User Administration menu.

Integrated Recorded Announcer card OAM command set

Instead of using the menu structure described in the first half of this chapter, commands can be entered on the command line in the Main Menu. This is advantageous to an experienced user who knows which command to use.

Most of these commands can also be used in batch files to allow complex configurations to be executed in a single command.

Files are specified using the DOS filenames convention of an eight-character filename followed by a three-character extension. The filename is normally preceded by a device descriptor, as shown in [Table 23: Integrated Recorded Announcer card disk drives](#) on page 179.

Table 23: Integrated Recorded Announcer card disk drives

Drive name	Designation
External PC Card Drive	A:
Internal Flash Drive	C:

The Integrated Recorded Announcer card channels are listed in [Table 24: Channel designations](#) on page 179.

Table 24: Channel designations

Channels	Designation
Internal	0-7
Analog Inputs	ANALOG0/codec

These designators are used on the command line when executing Integrated Recorded Announcer card commands.

OAM command summary

OA&M commands are used instead of using different menus to perform system applications configuration. A command is entered on the command line at the bottom of the Main Menu window. See [Figure 52: Main Menu](#) on page 130. For example:

```
MIRAN[00]>CON_WAV_PCM PLSWAIT.WAV ANN00005.ULW
```

[Table 25: OAM command summary](#) on page 179 lists Integrated Recorded Announcer card OA&M commands along with their descriptions, parameters, and syntax definitions. It also lists terminal-based OA&M access commands that can be entered on the command line on the terminal window.

Table 25: OAM command summary

Command	Parameters	Function
BACKUP	[Device]	Backs up the assignment/ configuration information.
CAL_ADD	[Channel list] [Device:Filename.Type] [Descriptor] or [Channel list] [Device:Filename.Type] [Time Entry] [Date Entry]	Adds a Calendar assignment.
CAL_CLEAR		Clears all Calendar assignments.

Command	Parameters	Function
CAL_LOAD	[Device:Filename.Type]	Loads Calendar assignments from a file.
CAL_REMOVE	[Calendar Entry Number]	Removes a Calendar assignment.
CAL_SAVE	[Device:Filename.Type]	Saves Calendar assignments to a file.
COLD_RESET		Performs a cold reset on the pack.
CONV_PCM_WAV	[Input Device:Filename.ULW] [Output Device:Filename.WAV]	Converts a file from PCM (.ALW or .ULW) to WAV.
CONV_WAV_PCM	[Input Device:Filename.WAV] [Output Device:Filename.ULW]	Converts a file from WAV to PCM (.ALW or .ULW).
COPY	[Source Device:Filename.Type] [Destination Device:Filename.Type]	Copy a file.
CVREAD	[Configuration Variable]	Shows the value of a configuration variable.
CVSAVE		Saves Configuration Variables to the drive specified by the variable 'DefaultDrive'.
CVSET	[Configuration Variable] [value]	Sets the value of a configuration variable. Integrated Recorded Announcer saves values if 'AutoSave' is TRUE.
DELETE	[Device:Filename.Type]	Deletes a file.
DESC_ADD	[Descriptor Name] [Time Entry] [Date Entry]	Adds/changes Calendar Descriptor.
DESC_CLEAR		Clears all Calendar Descriptors.
DESC_LOAD	[Device:Filename.Type]	Loads Calendar Descriptors from a file.
DESC_REMOVE	[Descriptor Name]	Removes a Calendar Descriptor.
DESC_SAVE	[Device:Filename.Type]	Saves Calendar Descriptors to a file.
ERASE_DIR	[Device:Directory]	Removes a directory and its contents.
IPCONFIG	[IP Address] [Subnet Mask] [Gateway Address] [IP Method]	Configures the IP information on the pack.
KEYCODE	[Keycode]	Capacity upgrade by means of a keycode.

Command	Parameters	Function
LIST	[Device:Filename.Type]	Lists files for a given drive.
LOCAL_TIME	[Time hh:mm] [Date dd/mm/yyyy]	Sets the time and date on the pack.
LOGOFF		Logs off and bring user back to the login window.
MKDIR	[Device:Directory name]	Creates a directory.
MOVE	[Source Device:Filename.Type] [Destination Device:Filename.Type]	Moves a file.
PLAYSTOP	[External Channel]	Stops playback of a file on an external channel.
RECORD	[Device:Filename.Type] [Duration]	Records from an external channel to a file for a given duration.
RECORDSTOP	[External Channel]	Stops recording on an external channel.
RENAME	[Device:Old_File_Name.Type] [New_File_Name.Type]	Renames a file.
RESETSTAT		Resets channel statistics.
RESTORE	[Device]	Restores the backed-up assignment/configuration information.
RMDIR	[Device:Directory]	Removes an empty directory.
RUN	[Device:Filename.BAT]	Runs a batch file.
SAVESTATS	[Device:Filename.Type]	Saves channel statistics to a file.
SERIAL_PORT		Hands control of the serial port to the 8051XA for debugging purposes.
SETDATE	[dd:mm:yyyy]	Sets the date on the pack.
SETTIME	[hh:mm]	Sets the time-of-day on the pack.
SETUP_PROMPTS	[Device:Directory]	Copies TUI voice prompts to a directory.
SHELL		Enters the vxWorks shell for debugging.
STATS		Shows channel statistics window.
STATUS		Shows the pack status window.

Command	Parameters	Function
SW_UPGRADE	[Device:Filename.Type]	Upgrades the Integrated Recorded Announcer software.
SYSINFO		Shows the system information window.
SYSTEM_TIME	[Enabled] [IP Address] [TTY Username] [TTY Password] [Frequency] [Time]	Sets the parameters for System Time & Date Synchronization.
SYSTEM_TIME_SYNC		Initiates the download of the System Time & Date from the system.
TIME		Shows the current day, time, and date
TUI_ASSIGN	[Channel] [Device:Filename.Type]	Makes a TUI calendar assignment.
TUI_UNASSIGN	[Channel]	Unassign a TUI assignment.
USER_ADD	[User Name] [Password] [Channel List]	Adds a new User.
USER_REMOVE	[User Name]	Removes a User.
VIEW	[Device:Filename.Type]	Views a text file.

OAM commands

The command syntax explains in detail each command and its parameters.

Read configuration variable

Use this command to show the value of a particular configuration variable.

Syntax CVREAD [Configuration Variable]
 [Configuration Variable] The configuration variable to be read.

Save configuration variables

Use this command to save the configuration variables to the drive specified by the variable 'DefaultDrive'.

Syntax CVSAVE

Set configuration variable

Use this command to set the value of a configuration variable. The Integrated Recorded Announcer card saves the value if the variable AutoSave is TRUE.

Syntax CVSET [Configuration Variable] [Value]
 [Configuration Variable] The configuration variable to be read.
 [Value] The desired value of the configuration variable.

Keycode entry

Enter a keycode to upgrade/activate software functionality.

Syntax KEYCODE [keycode]
 [keycode] The keycode received in the upgrade/installation kit.

Operational statistics

Use this command to display a report of the RAN statistics.

Syntax STATS

System Information

Use this command to display a report of the system hardware configuration.

Syntax SYSINFO

View text file

Use this command to view a text file.

Syntax VIEW [dev:filename.type]

[dev:filename.type] Device indicates on which drive the file resides. The filename is eight characters.

Configure IP information

Use this command to configure the IP information for the pack.

Syntax	IPCONFIG [IP address] [subnet mask] [gateway address] [IP method]
[IP address]	The IP address for the Integrated Recorded Announcer card.
[subnet mask]	The subnet mask for the Integrated Recorded Announcer card.
[gateway address]	The gateway on which the Integrated Recorded Announcer card resides.
[IP method]	The method the Integrated Recorded Announcer card uses to obtain the IP address. The choices are: bootp – to obtain an IP address upon bootup static – to have a constant IP address disabled – to disable IP capability

Allow 8051XA debugging

Use this command to hand control of the serial port to the 8051XA for debugging purposes.

Syntax	SERIAL_PORT
--------	-------------

Allow vxWorks debugging

Use this command to enter the vxWorks shell for debugging purposes.

Syntax	SHELL
--------	-------

Synchronize time and date

Use this command to initiate the download of time and date information from the system.

Syntax	SYSTEM_TIME_SYNC
--------	------------------

Announcement commands

The following commands deal with announcements.

Announcement Record

This command records an announcement and stores it in a file. Recording starts immediately and terminates after the specified duration.

Syntax:	RECORD [source] [device:filename] [duration]
[source]	ANALOG1, ANALOG2, CHANNEL 7 (for set)
[device:filename]	Device indicates on which device the file resides. The file name is a maximum of eight characters with a three-character extension.
[duration]	Maximum play duration in seconds.

Stop Recording Announcement

This command halts all announcement recording.

Syntax:	RECORDSTOP
---------	------------

Convert Announcement File

This command converts audio files from one format to another. Raw PCM (.ULW or .ALW) is the default format used by the Integrated Recorded Announcer card. This utility allows conversion between any combination of the following formats:

Windows™ format audio file	.WAV
Raw PCM	.ULW, .ALW

Syntax and description of announcement files

Syntax:	CONV_PCM_WAV [src dev:filename.ULW (or .ALW)] [dest dev:filename.WAV]
[src dev:filename.ext]	Device indicates on which device the file resides. The filename contains a maximum of eight characters.

[dest dev:filename.ext] Device indicates on which device the converted file will be placed. The filename contains a maximum of eight characters.

Calendar commands

The following commands deal with the calendar function.

Add a calendar assignment

This command creates a calendar assignment using either a descriptor or a time and date entry to determine when the announcement plays.

Syntax:	CAL_ADD [channel list] [dev:filename.type] [descriptor] or CAL_ADD [channel list] [dev:filename.type] [time entry] [date entry]
[channel list]	Specifies on which channels the announcement will play.
[dev:filename.type]	Device indicates on which drive the file resides. The filename is eight characters.
[descriptor]	A previously defined descriptor that describes the times and date the announcement will play.
[time entry]	This is the time of day the announcement will play. Refer to Table 2: Time entry examples - sorted from most specific to least specific on page 19 for available formats.
[date entry]	This is the days or dates the announcement will play. Refer to Table 3: Date entry examples - most specific to least specific on page 19 for available formats.

Remove a calendar assignment

This command deletes a calendar assignment from the list of calendar assignments.

Syntax:	CAL_REMOVE [calendar entry number]
[calendar entry number]	Specifies which calendar assignment to delete from among the list of calendar assignments.

Load calendar assignments from a file

Use this command to load a group of calendar assignments that were previously saved in a file.

Syntax: CAL_LOAD [dev:filename.type]
 [dev:filename.type] Device indicates on which drive the file resides. The filename is eight characters in length.

Save a calendar list to a file

Use this command to save the active list of calendar assignments to a file.

Syntax: CAL_SAVE [dev:filename.type]
 [dev:filename.type] Device indicates on which drive the file is to be saved. The filename is eight characters.

Clear current calendar assignments

Use this command to clear the currently active list of calendar assignments.

Syntax: CAL_CLEAR

Assign TUI announcement

Use this command to assign a TUI announcement to a group of channels.

Syntax TUI_ASSIGN [channel] [dev:filename.type]
 [channel] The channel, or channels, on which the assignment is to be made. Use "*" (asterisk) for all channels.
 [dev:filename.type] Device indicates on which drive the file resides. The filename is eight characters.

Unassign TUI announcement

Use this command to unassign a TUI announcement from a group of channels.

Syntax	TUI_UNASSIGN [channel]
[channel]	The channel, or channels, from which the assignment is to be removed. Use "*" (asterisk) for all channels.

Descriptor commands

The following commands deal with the descriptor function.

Add a descriptor

Use this command to create a descriptor, which can be used for multiple calendar assignments.

Syntax:	DESC_ADD [descriptor name] [time entry] [date entry]
[descriptor name]	The name for the descriptor, from 1 to 16 characters in length.
[time entry]	This is the time of day an announcement with this descriptor will play. Refer to Table 2: Time entry examples - sorted from most specific to least specific on page 19 for available formats.
[date entry]	This is the days or dates an announcement with this descriptor will play. Refer to Table 3: Date entry examples - most specific to least specific on page 19 for available formats.

Remove a descriptor

Use this command to delete a descriptor from the current list of descriptors.

Syntax:	DESC_REMOVE [descriptor name]
[descriptor name]	The name of the descriptor to be removed.

Load descriptors from a file

Use this command to load a group of descriptors that was previously saved in a file.

Syntax:	DESC_LOAD [dev:filename.type]
---------	-------------------------------

[dev:filename.type] Device indicates on which drive the file resides. The filename is eight characters.

Save current descriptors to a file

Use this command to save the active list of descriptors to a file.

Syntax: DESC_SAVE [dev:filename.type]
 [dev:filename.type] Device indicates on which drive the file is to be saved. The filename is eight characters.

Clear current descriptors

Use this command to clear the currently active descriptors.

Syntax: DESC_CLEAR

User commands

The following commands deal with the list of users.

Add a user

Use this command to define a user.

Syntax: USER_ADD [user name] [password] [channel list]
 [user name] The name of the user (the login ID).
 [password] The password the user must enter to access the Integrated Recorded Announcer card. The password must be eight characters long.
 [channel list] The list of channels that the user will be able to access. For access to all channels, enter "*" (asterisk).



Note:

Integrated Recorded Announcer saves all user information in a file named "C:_USERS.DAT". All default users and passwords can be restored by deleting the C:_USERS.DAT file.

Remove a user

Use this command to delete a user from the current list of users.

Syntax: USER_REMOVE [user name]
[user name] The name of the user to be removed.

File commands

This command controls RAN and music files.

List Files

Use this command to list all the files on the specified device or drive.

Syntax: LIST [device:] [filename] [.extension]
[device:] Device indicates on which device the file resides.
[filename:] Filename, max eight characters or wildcard "*" (asterisk). If a filename is omitted then all files on the specified device will be listed.
[.extension:] The extension can be a maximum of three characters or wildcard "*" (asterisk). If an extension is omitted then all files with a null extension on the specified device will be listed.

Copy File

Use this command to copy files.

Syntax: COPY [src device:filename.ext] [dest device:filename.ext]

[src dev:filename.ext]	Device indicates on which device the file resides. Filename is a maximum of eight characters and the extension a maximum of three characters.
[dest dev:filename.ext]	Device indicates on which device the copied file will be placed. Filename is a maximum of eight characters and the extension a maximum of three characters.

Move File

This command moves files from a source to a destination location.

Syntax:	MOVE [src device:filename.ext] [dest device:filename.ext].
[src dev:filename.ext]	Device indicates on which device the file resides. Filename is a maximum of eight characters and the extension a maximum of three characters.
[dest dev:filename.ext]	Device indicates on which device the moved file will be placed. Filename is a maximum of eight characters and the extension a maximum of three characters.

Delete File

This command deletes a file.

Syntax:	DELETE [dev:filename.ext]
[dev:filename.ext]	Device indicates on which device the file resides. Filename is a maximum of eight characters and the extension a maximum of three characters.

Rename File

This command renames a file.

Syntax:	RENAME [old dev:filename.ext] [new filename.ext].
[old dev:filename.ext]	Device indicates on which device the original file resides. Filename is a maximum of eight characters and the extension a maximum of three characters.
[new filename.ext]	The new filename is a maximum of eight characters and the extension a maximum of three characters.

Backup configuration

This command copies all active configuration announcement files to the specified destination.

Syntax: BACKUP [destination]
[destination] This can be one of the following, device: - logical storage device
 A: or C: ANALOG0 - Analog output port 0

Restore configuration

This command restores files that were backed up using the BACKUP command. Only files that were backed up to a logical device can be restored.

Syntax: RESTORE [device:]
[device:] Device indicates on which device the backed up file resides.

Software upgrade

This command upgrades the Integrated Recorded Announcer operating system and application software to the version stored on the specified device.

Syntax: SW_UPGRADE [device:]
[device:] Device indicates on which device the new software resides.

Run Batch File

This command runs batch files.

Syntax: RUN [device:filename.BAT]
[device:filename] Device indicates on which device the file resides. Filename is a
 maximum of eight characters. The extension .BAT will be
 assumed.

Make a directory

Use this command to create a directory on a particular drive.

Syntax	MKDIR [device:directory]
[device:	The drive where the directory is to be made, either A: or C: drive.
directory]	The name for the directory

Remove a directory

Use this command to remove a directory from a particular drive.

Syntax	RMDIR [device:directory]
[device:	The drive from where the directory will be removed, either A: or C: drive.
directory]	The name of the directory to be removed

Erase a directory

Use this command to remove a directory and its contents from a particular drive.

Syntax	ERASE_DIR [device:directory]
[device:	The drive from where the directory is to be removed, either A: or C: drive.
directory]	The name of the directory to be erased.

Copy royalty-free music to the C: drive

Use this command to copy the files, MUSIC.MCF and MIRANII.PDF, from the A: drive to the C: drive.

Syntax	SETUP_C [device]
[device]	The drive from where the files are to be copied, A: drive.

Copy TUI voice prompts to a directory

This command copies the TUI voice prompts to a directory.

Syntax:	SETUP_PROMPTS [device:directory]
[device:	The drive to which the prompts will be copied, either A: or C: drive.
directory]	The name of the directory where the prompts are to be copied.

Miscellaneous commands

These commands configure and display time and date parameters.

Set Time and Date

This command sets the time and date on the Integrated Recorded Announcer card.

Syntax:	LOCAL_TIME [Time] [Date]
[Time]	Time of day in hours and minutes (hh:mm).
[Date]	The date (dd/mm/yyyy).

Set Time of Day

This command sets the time of day.

Syntax:	SETTIME [HH:MM]
[HH:MM]	Time of day in hours and minutes.

Set the date

This command sets the date for the internal calendar.

Syntax: SETDATE [day of month / month / year]

Configure System Time and Date synchronization

This command sets the parameters for System Time and Date synchronization.

Syntax: SYSTEM_TIME [enabled] [IP address] [TTY username] [TTY password] [frequency] [time]

[enabled] Must be 'true' for System Time & Date synchronization to work.

[IP address] The IP address of the system.

[TTY username] The username used to access the system through the ELAN subnet.

[TTY password] The password used to access the system through the ELAN subnet.

[frequency] The number of days between each synchronization attempt, from 1 to 7 days.

[time] The time of day for the Integrated Recorded Announcer card to attempt to synchronize with the system. Set the time for the period of lowest technician use.

Display Day and Time

This command shows the current day-of-week and time.

Syntax: TIME

Show Pack Status

This command shows the Pack Status window.

Syntax: STATUS

Show Statistics

This command shows the current statistics for channel usage.

Restrictions

The maximum number of lines for each batch file (including comments) is limited to 255.

Commands and comments cannot be mixed on the same line.

Batch file example

```
# Batch file INIT.BAT
# Initial channel assignments
# Copy speech file pls_hold from device A: to internal flash device C:
COPY A:PLS_HOLD.ULW C:
# Assign "please hold" announcement to channel 0
ASSIGN MON 0 C:PLS_HOLD.ULW 00:00
# Assign music connected to analog port 0 to channel 1
ASSIGN MON 1 ANALOG0 00:00
```

Setting up emergency announcements quickly

Situations can arise where an emergency announcement must be set up to play on all channels and override all other announcements. Integrated Recorded Announcer provides an easy way to do this, using TUI.

To set up an emergency announcement on all channels, follow the steps in [Setting up an emergency announcement on all channels](#) on page 197.

Setting up an emergency announcement on all channels

1. Log into the TUI.
2. Record the emergency announcement.
3. Assign the emergency announcement to all channels.

 **Note:**

This assignment through the TUI overrides any previous assignments.

4. Once the emergency has passed, delete the TUI assignment through the browser or Text-based User Interface windows. This returns the Integrated Recorded Announcer to normal operation.

 **Note:**

For instructions on using the TUI, refer to [Telephone User Interface](#) on page 199.

Chapter 9: Telephone User Interface

Contents

This section contains information on the following topics:

- [Introduction](#) on page 199
- [Description](#) on page 200
- [Restrictions on TUI access](#) on page 201
- [Using the TUI](#) on page 201
 - [Login](#) on page 201
 - [Navigating the Main Menu](#) on page 202
 - [Recording an announcement](#) on page 202
 - [Assigning an announcement](#) on page 203
 - [Retrieving channel information](#) on page 204
 - [Example of using the TUI](#) on page 205
 - [Voice prompts](#) on page 206
 - [TUI flowcharts](#) on page 208

Introduction

This chapter describes the Integrated Recorded Announcer Telephone User Interface (TUI), which can be used to perform certain OA&M functions.

To enable the TUI, first perform the following actions:

- Use LD 16 to build a DID route. [Configuring the DID route for the TUI](#) on page 49
- Use LD 14 to configure port/channel 7 of the Integrated Recorded Announcer card as a DID trunk. [Configuring the Integrated Recorded Announcer trunks](#) on page 50

- Enter the keycode for the Integrated Recorded Announcer card. [Keycode Entry](#) on page 161
- Ensure that the configuration variable, 'SetBasedAccess', is set to TRUE. [Configuration Variables menu](#) on page 164

The TUI reduces the number of Integrated Recorded Announcer card ports available for RAN or music from eight to seven. Because there is no messaging between Integrated Recorded Announcer cards, port 7 must be reserved for the TUI on each Integrated Recorded Announcer card that requires this interface.

 **Note:**

If an Integrated Recorded Announcer card does not require the TUI, then all eight ports on the card are available for RAN or music.

Description

A TUI within the Integrated Recorded Announcer application allows the application to be accessed from any local DTMF telephone.

 **Note:**

The DTMF telephone must have an Unrestricted Class of Service to access the TUI.

The TUI uses a series of simple voice menus and prompts for quick modification of announcements and other simple tasks. Extensive changes must be implemented through the Text-based User Interface or the Browser User Interface (BUI).

The TUI enables the following actions:

- record new announcements
- play announcements
- assign and unassign announcements to Integrated Recorded Announcer card ports
- access the Integrated Recorded Announcer card security ID

The following cannot be done through the TUI:

- set the Recorded Announcer card clock
- assign time-of-day restrictions to announcements
- access system configuration functions.
- change passwords

The TUI allows a user to login and issue specific commands through the dialpad of a digital telephone or any standard DTMF telephone. For security, login requires a valid user name and password, which the administrator supplies. The Integrated Recorded Announcer card does

not identify itself until a valid user name and password is entered. The following pages describe the TUI menus.

Restrictions on TUI access

Toll calls (that is, dialing 0 or 1 as the first digit) to the TUI channel disconnect automatically if the NATL response is set to YES in LD 16. The same thing happens when the NFCR response is set to YES in LD 15.

Set both prompts to NO to allow toll calls to the TUI. Set CLS = UNR in LD 11 to allow a DTMF telephone access to the TUI.

Using the TUI

To perform application tasks over the DTMF telephone, the dialpad must be used. Press specific digits on the dialpad to log in and issue specific commands, as described in the following sections.

Login

To log into the Integrated Recorded Announcer card, follow the steps in [Logging to the Integrated Recorded Announcer card](#) on page 201.

Logging to the Integrated Recorded Announcer card

1. Go off-hook.
2. Dial the DID route access code of the Integrated Recorded Announcer card.
3. At the voice prompt, enter # (octothorpe), then a user name followed by * (asterisk). The default user name is 8737 (= "user").
4. At the next voice prompt, enter the password followed by * (asterisk). The default password is 87370000 (= "user0000").

If the login is valid, the TUI accesses the Main Menu. If the login is not valid after three attempts, the system disables further access attempts for 20 minutes.

The following conditions can prevent a user from accessing the Integrated Recorded Announcer card through the TUI:

- The user has made three invalid login attempts.
- NCOS, TGAR, or the Class of Service (for example, CLS = TENA) is restricted.
- The configuration variable 'SetBasedAccess' is set to FALSE.

Navigating the Main Menu

When the Main Menu is accessed, a recorded announcement lists the options for this menu. At the Main Menu, users can perform the following actions:

- Dial **1** to assign the current announcement to a channel.
- Dial **2** to play the current announcement.

 **Note:**

When login first occurs, the current announcement is the same as the first announcement within the available disk volumes.

- Dial **3** to review channel assignments.
- Dial **4** to go to the previous announcement.
- Dial **5** to record an announcement.
- Dial **6** to go to the next announcement.
- Dial **76** to delete the current announcement.

 **Note:**

When users dial 76 to delete the current announcement, all channel assignments that use the announcement must be removed.

- Dial **8** to hear the eight-digit Integrated Recorded Announcer security ID.
- Dial * (asterisk) to stop an announcement that is playing.

 **Note:**

If no announcement is playing, dialing "*" (asterisk) saves any announcements that have been credited and logs the user off of the TUI.

Dial **9** to repeat the list of options.

Recording an announcement

An announcement can be recorded through the TUI. The announcement can be assigned to channels through the TUI, Text-based User Interface, or BUI.

To record an announcement, follow the steps in [Recording an announcement](#) on page 202.

Recording an announcement

1. At the Main Menu, dial **5** to enter the Record menu.
2. At the Record menu, dial **5** to begin recording.

3. Dial * (asterisk) to end the recording.

 **Note:**

If the drive capacity is reached while recording, the recording stops automatically.

4. Dial **2** to review the announcement, and/or dial **5** to record the announcement again. This step is optional.
5. Dial **1** to save the announcement.

When the announcement is saved, Integrated Recorded Announcer assigns it the filename ANNxxxxx, where xxxxx is the announcement number. Integrated Recorded Announcer adds the announcement to the first disk volume with available space of at least 64 kbytes or 8 seconds of recording. Then the TUI returns to the Main Menu.

 **Note:**

Except while recording an announcement, dial 9 for help and then * (asterisk) to return to the Main Menu.

Assigning an announcement

Through the TUI, an announcement can be assigned to channels 0 to 7. Avaya does not recommend that an announcement be assigned to channel 7, as the Integrated Recorded Announcer card uses channel 7 for the TUI.

 **Note:**

An announcement can be assigned to channel 7, but it will not play unless channel 7 is reprogrammed as a RAN trunk.

[Table 26: Port/channel number assignments for the TUI](#) on page 203 lists the internal and cross-connect Integrated Recorded Announcer card ports/channels.

Table 26: Port/channel number assignments for the TUI

Channel Number	Description
0	Internal one-to-one port/channel
1	Internal one-to-one port/channel
2	Internal one-to-one port/channel
3	Internal one-to-one port/channel
4	Internal one-to-one port/channel
5	Internal one-to-one port/channel
6	Internal one-to-one port/channel

Channel Number	Description
7	Internal one-to-one port/channel (alternatively used for TUI access).

To assign an announcement to a channel, follow the steps in [Assigning an announcement to a channel](#) on page 204.

Assigning an announcement to a channel

1. On the Main Menu, dial **2** to learn what the current announcement is. (This step is optional.)
2. At the Main Menu, dial **1** to enter the Assignment menu.
3. Enter the list of channels to which the announcement must be assigned. Dial ***** (asterisk) after each channel to separate it from the next channel.
4. Dial ***** (asterisk) a second time to end the list.

For example, at the Assignment menu enter **2*3**** to assign the current announcement to internal channels 2 and 3.

If the channel assignment is not valid, the TUI prompts the user to try again. If the channel assignment is valid, the Integrated Recorded Announcer card clears all TUI assignments for the selected channels and assigns the current announcement to them. The TUI announces a successful assignment and returns to the Main Menu.

Note:

Announcement assignments through the TUI cannot include time and date restrictions. To restrict an announcement on a channel to particular times and days, make the assignment through the Text-based User Interface or the BUI.

Retrieving channel information

Through the TUI, the Integrated Recorded Announcer card can be queried for information about its channels. In the Channel Information menu, the announcements assigned to each channel can be heard.

Dial **3** at the Main Menu to enter the Channel Information menu. At the Channel information menu, the following options are available:

- Dial **4** to go to the previous channel.
- Dial **6** to go to the next channel.
- Dial **76** to unassign any announcement from the current channel.
- Dial **9** for help.
- Dial ***** (asterisk) to return to the Main Menu.

Unlike deleting an announcement in the Main Menu, dialing 76 in the Channel Information menu only unassigns the announcement from the current channel. Dialing 76 in the Channel Information menu does not delete the announcement.

Example of using the TUI

[Table 27: An example of using the TUI](#) on page 205 lists the steps to follow to record and assign an announcement through the TUI.

Table 27: An example of using the TUI

Step	User action	Integrated Recorded Announcer response	Comments
1	Go off-hook.	Not Applicable	
2	Dial the access code for the Integrated Recorded Announcer card.	Voice prompt for user name	
3	Enter # (octothorpe), followed by the user name and "*" (asterisk).	Voice prompt for user password	
4	Enter the password, followed by "*" (asterisk).	"Main Menu"	A "Login incorrect" message is received for wrong input.
5	Dial 5 to access the Record menu.	Voice menu of options available	
6	Dial 5 to record the announcement.	<BEEP>	Records one announcement into a temporary file.
7	Dial * (asterisk) to stop recording.	Menu of available options	Recording stops.
8	Dial 2 to verify the announcement.	Plays announcement from temporary file	If the announcement is acceptable, save it.
9	Dial 1 to save the announcement.	"Announcement saved as announcement xxxxx"; "Main Menu"	The announcement is saved to storage and becomes the currently selected announcement.
10	Dial 1 to assign the announcement to Integrated Recorded Announcer card port(s).	"Assignment menu. Enter a list of channels separated by star. End the list with an extra star."	
11	Enter list of channels separated by "*" (asterisk)	"Assignments made"; "Main Menu"	Integrated Recorded Announcer assigns the

Step	User action	Integrated Recorded Announcer response	Comments
	(asterisk). (Follow last channel by "***" (2 asterisks).		announcement to the selected channel(s).
12	Dial "*" (asterisk) to exit Integrated Recorded Announcer.	"Good-bye"	The TUI disconnects the user from Integrated Recorded Announcer.
13	Go on-hook.	Not Applicable	

Voice prompts

[Table 28: TUI voice prompts](#) on page 206 lists voice prompts and corresponding voice prompt IDs.

Table 28: TUI voice prompts

Prompt ID	Prompt content
0 – 31	"Zero" to "thirty one"
32	"Analog..." as in "Analog Zero."
33	"Channel..."as in "Channel 5."
34	<BEEP>
35	"Access is currently disabled."
36	"Please try again later."
37	"Goodbye."
38	"Please enter your user name followed by star."
39	"Please enter your password followed by star."
40	"Three login attempts have failed. Access will be temporarily disabled."
41	"Login incorrect."
42	"Please try again."
43	"Main Menu."
44	"Commands you can use are: Assign 1, play 2, record 5, delete 7-6, ID 8."
45	"To go to the next announcement, press 6."
46	"To go to the previous announcement, press 4."
47	"To exit, press star."

Prompt ID	Prompt content
48	"There are no announcements available."
49	"Start of list."
50	"End of list."
51	"Pack ID is..." as in "Pack ID is 1-0-0-0-1-2-3-4."
52	"That option is not available."
53	"For help, press 9."
54	"Assignments saved."
55	"Assignment menu."
56	"Enter a list of channels, separated by star. End the list with an extra star."
57	"Invalid assignment."
58	"You do not have access to the following channels:"
59	"Assignments made."
60	"Record menu."
61	"To begin recording, press 5. To end recording, press star."
62	"Drive capacity exceeded."
63	"Error saving announcement."
64	"Recording stopped."
65	"To save the announcement, press 1. To review it, press 2. To rerecord it, press 5."
66	"Announcement saved as announcement..."
67	"Error deleting announcement."
68	"Announcement deleted."
69	"Channel Information Menu."
70	"For Channel Information, press 3."
71	"To review the current channel, press 2."
72	"To go to the next channel, press 6."
73	"To go to the previous channel, press 4."
74	"To unassign the current channel, press 7-6."
75	"There is no announcement assigned to this channel."
76	"Assignment cleared."
77	"Welcome to Recorded Announcer."

Prompt ID	Prompt content
78	"Assignment cleared on channel..."
79	"OK"
80	"... and..."
81	"... to..."
82	"You have access to the following channels:"
83	"Invalid channel assignment."
84	"All internal channels."
86	"Channels..."
89	"Assignments cleared on channel..."
90	"Assignments cleared on..."


TUI flowcharts

Refer to the TUI flowcharts starting on [Figure 98: TUI Login flowchart](#) on page 209 for further information on the following TUI functions:

- Login ([Figure 98: TUI Login flowchart](#) on page 209)
- Main Menu ([Figure 99: TUI Main Menu flowchart](#) on page 210)
- Record menu ([Figure 100: TUI Record Menu flowchart](#) on page 212 and [Figure 101: TUI Assignment menu flowchart](#) on page 214)
- Assignment menu ([Figure 101: TUI Assignment menu flowchart](#) on page 214)
- Channel Information menu ([Figure 102: TUI Channel Information menu flowchart](#) on page 215)
- Delete menu ([Figure 103: TUI Delete menu flowchart](#) on page 216)


Login flowchart

Enter the user name and password to access the Integrated Recorded Announcer TUI.

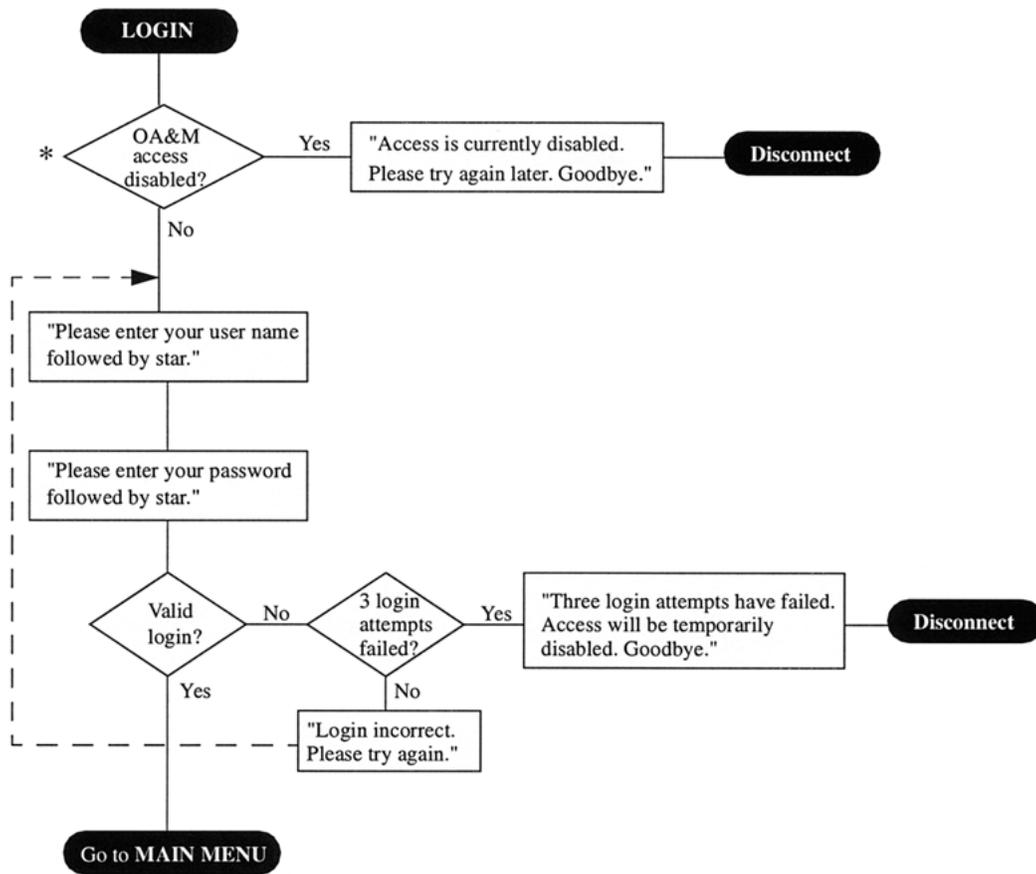

* Set Based OA&M access would be disabled because of : Terminal OA&M in use, temporary lock-out because of invalid login attempt, or Terminal OA&M Configuration Variable 'SetBasedAccess' set to FALSE.

Figure 98: TUI Login flowchart

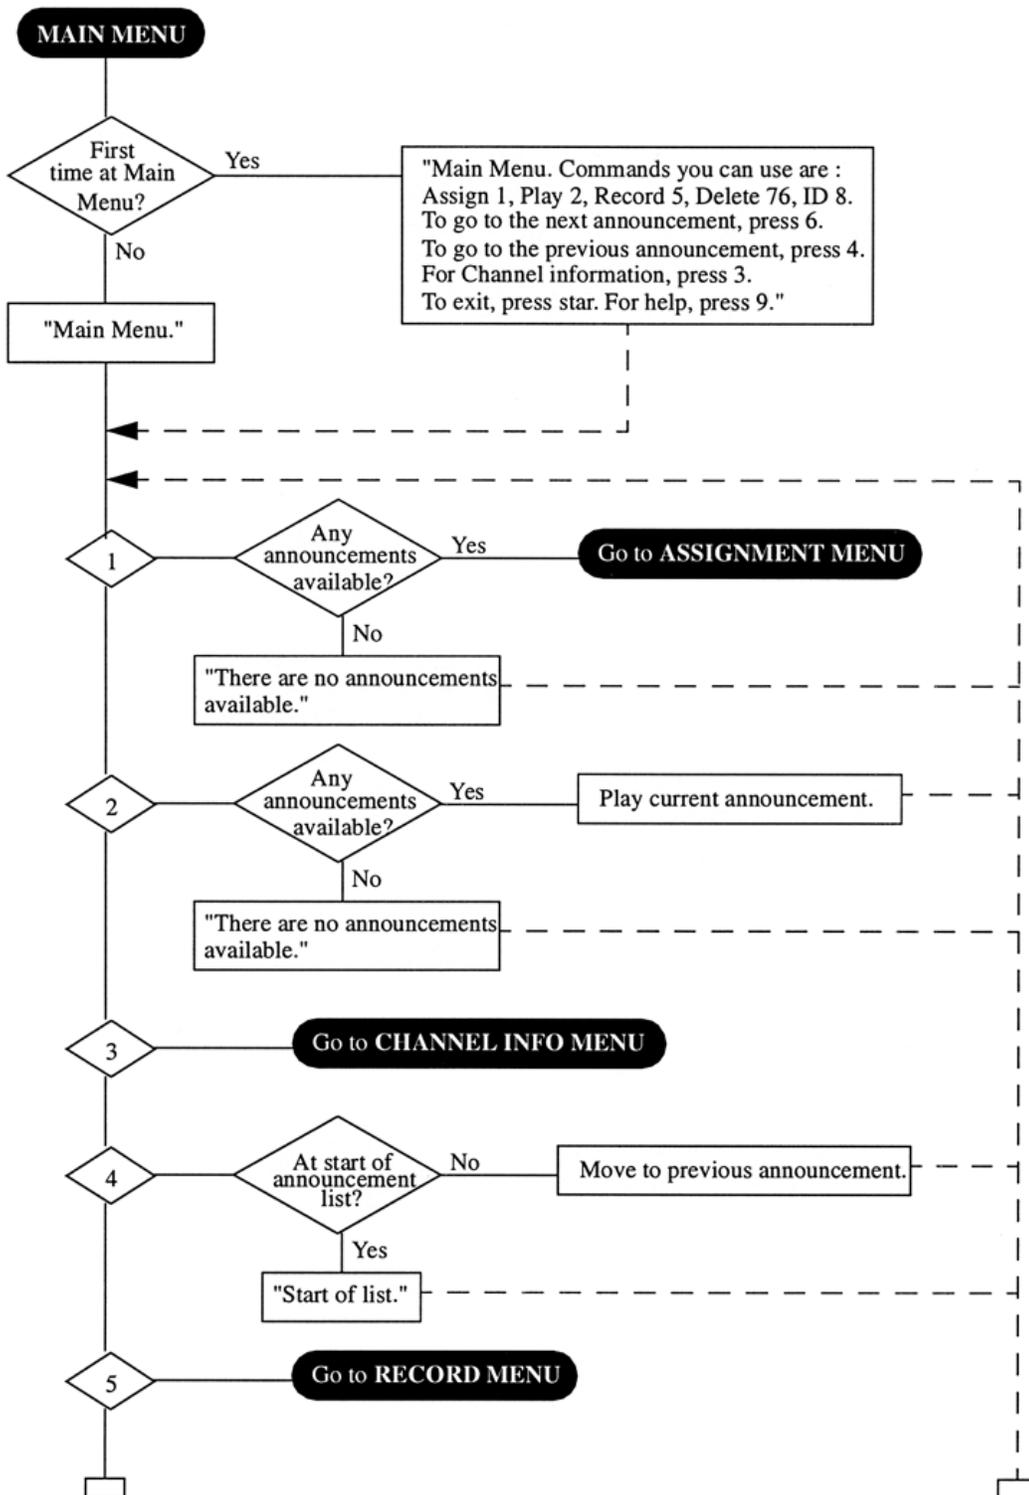

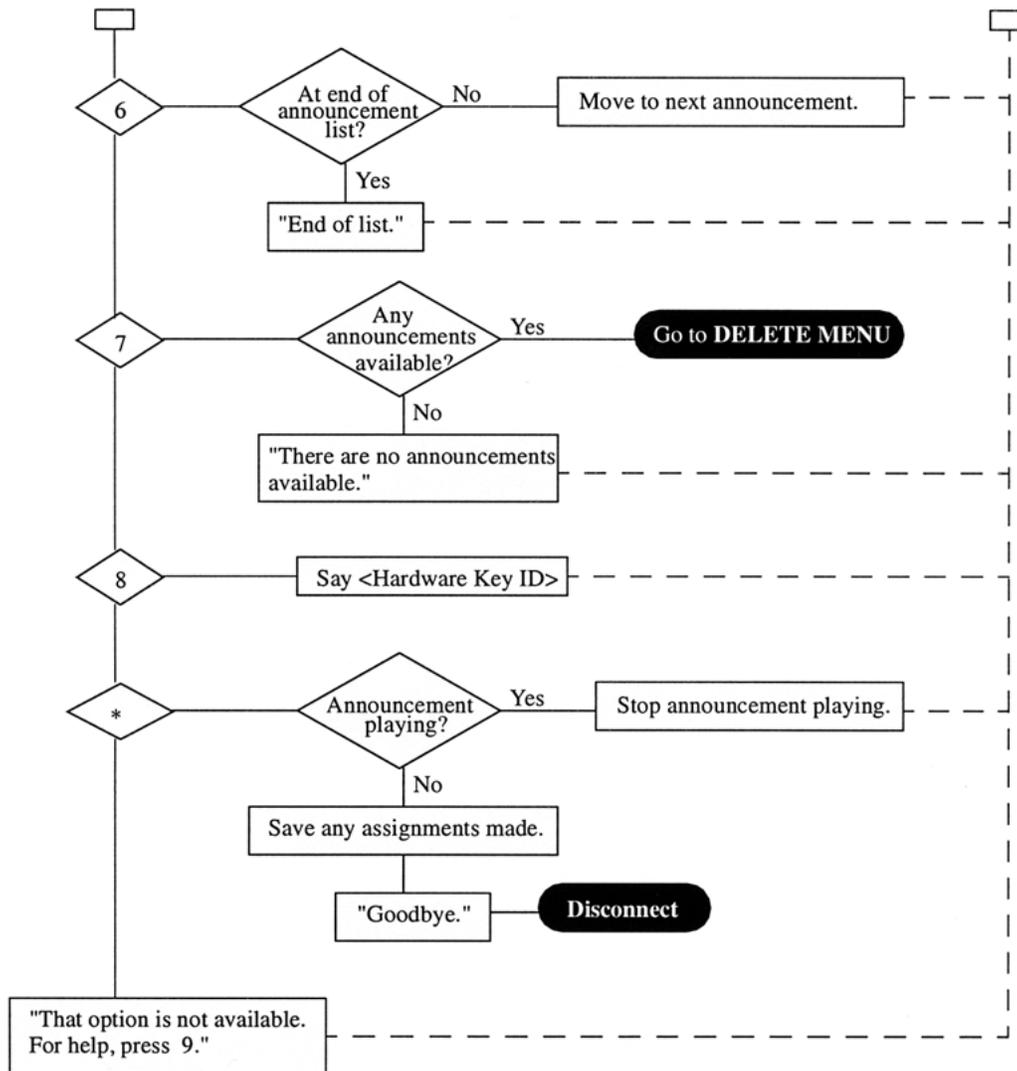
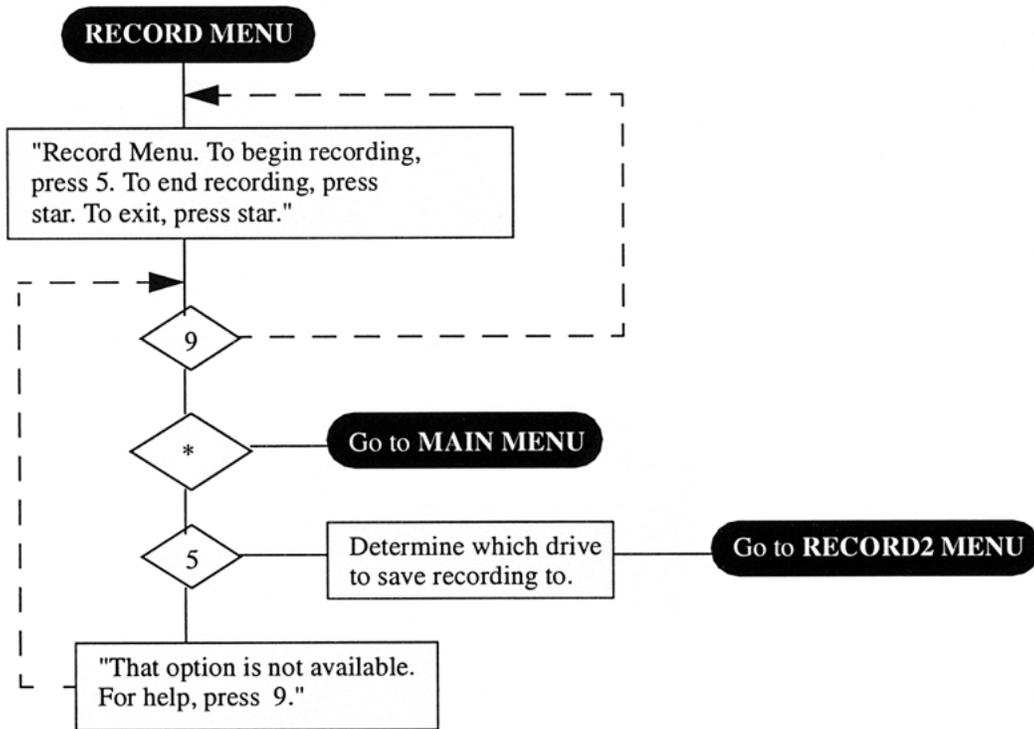


Figure 99: TUI Main Menu flowchart

Record menu

Dial **5** in the Main Menu to access the **Record** menu. This function allows announcements to be recorded.




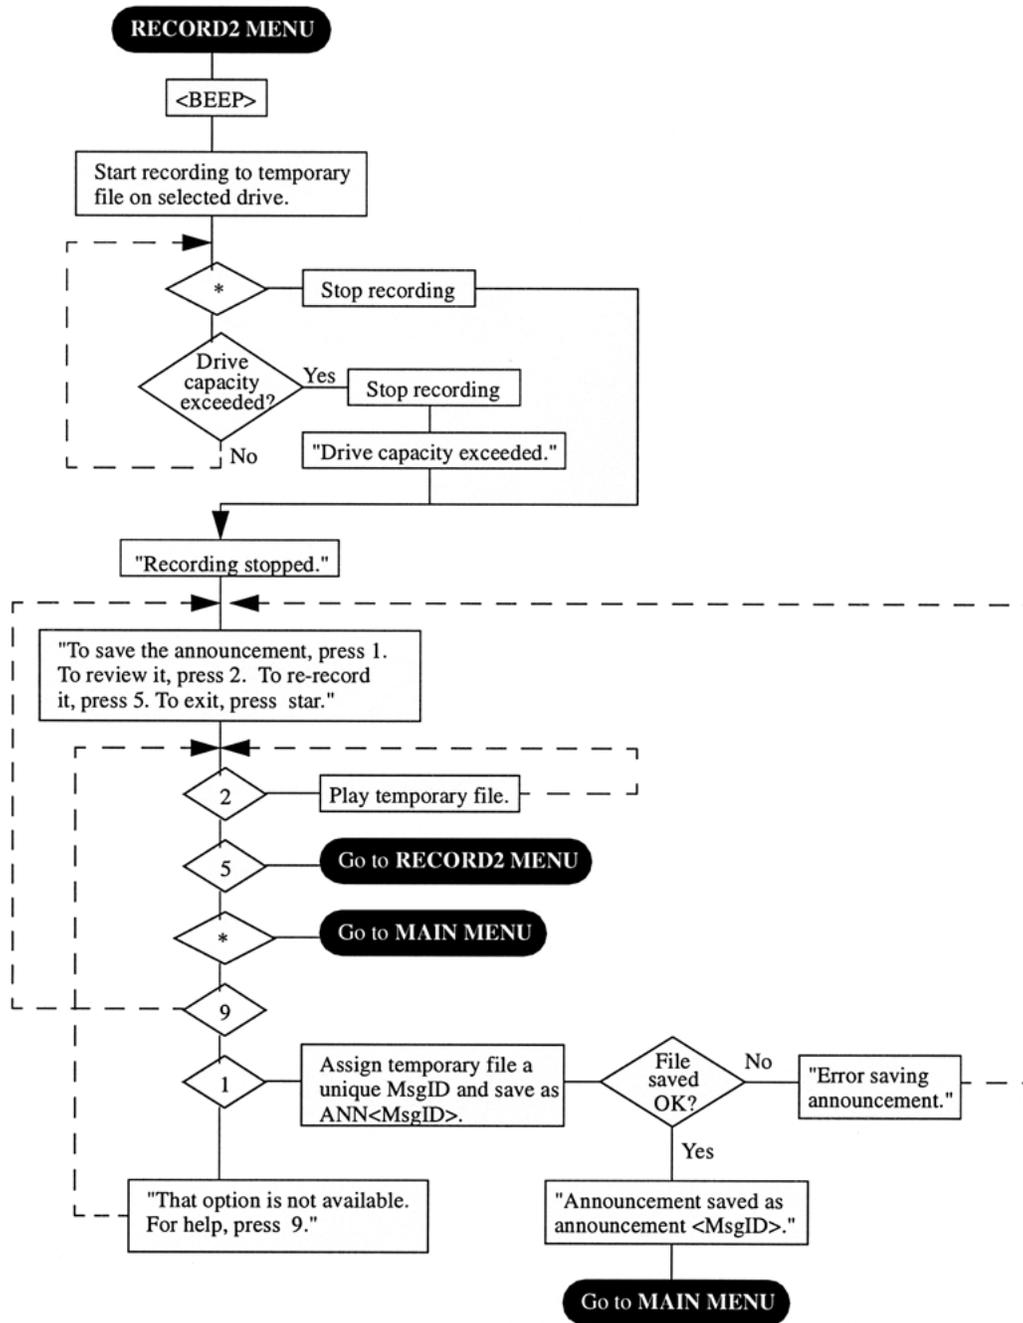


Figure 100: TUI Record Menu flowchart

Assignment Menu

Dial 1 in the Main Menu to access the **Announcement** menu. This function allows announcements to be assigned to Integrated Recorded Announcer card channels.

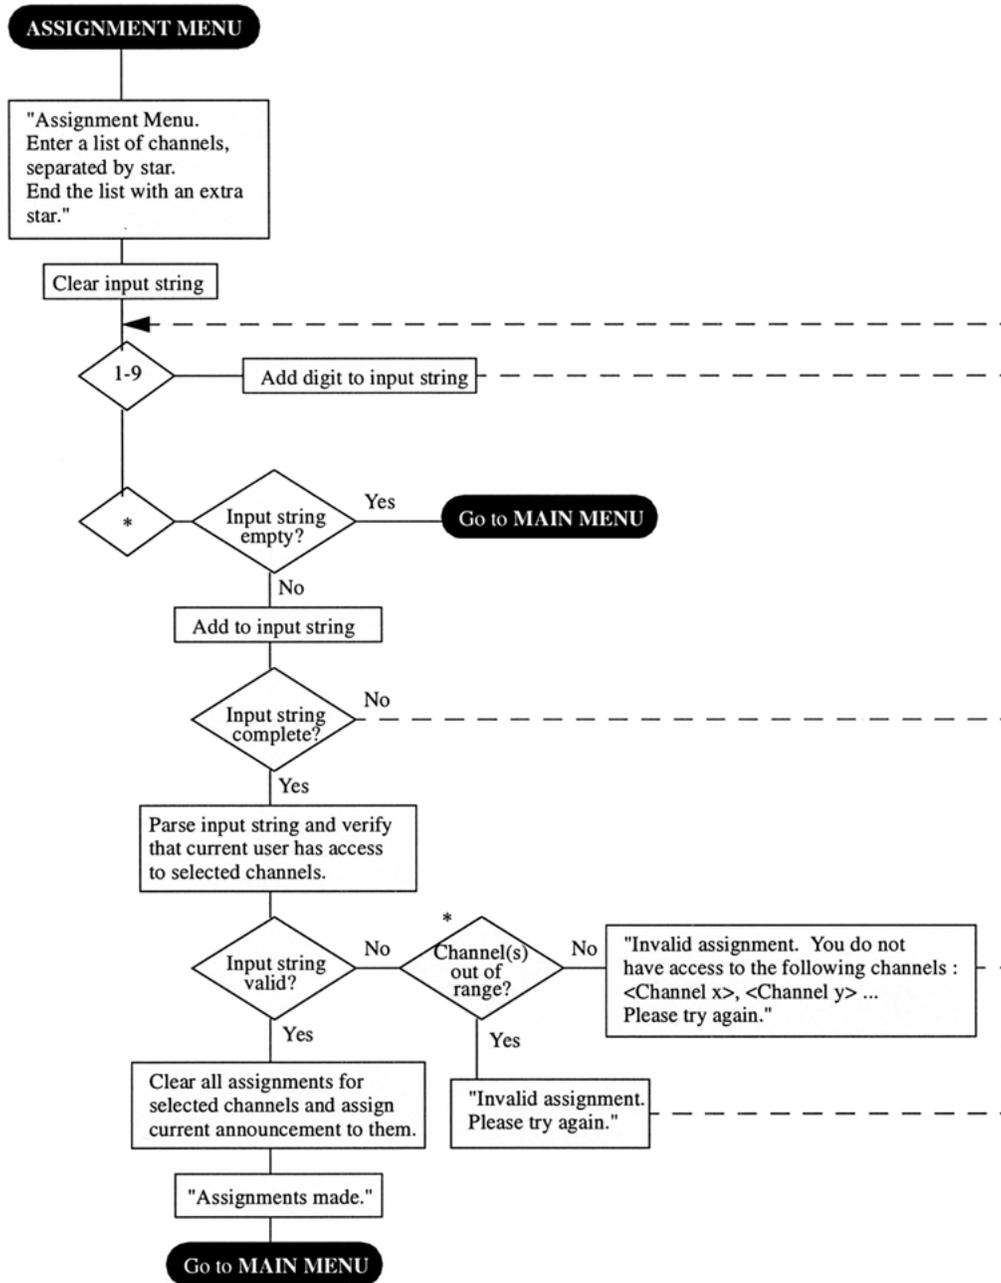

* Valid channels are 0-7, 90 (Analog0), and 91 (Analog1).

Figure 101: TUI Assignment menu flowchart

Channel Information menu

Dial **3** at the Main Menu to access the **Channel Information** menu. This function allows the announcement assigned to an Integrated Recorded Announcer card channel to be heard. This function also allows an announcement to be removed from a channel.

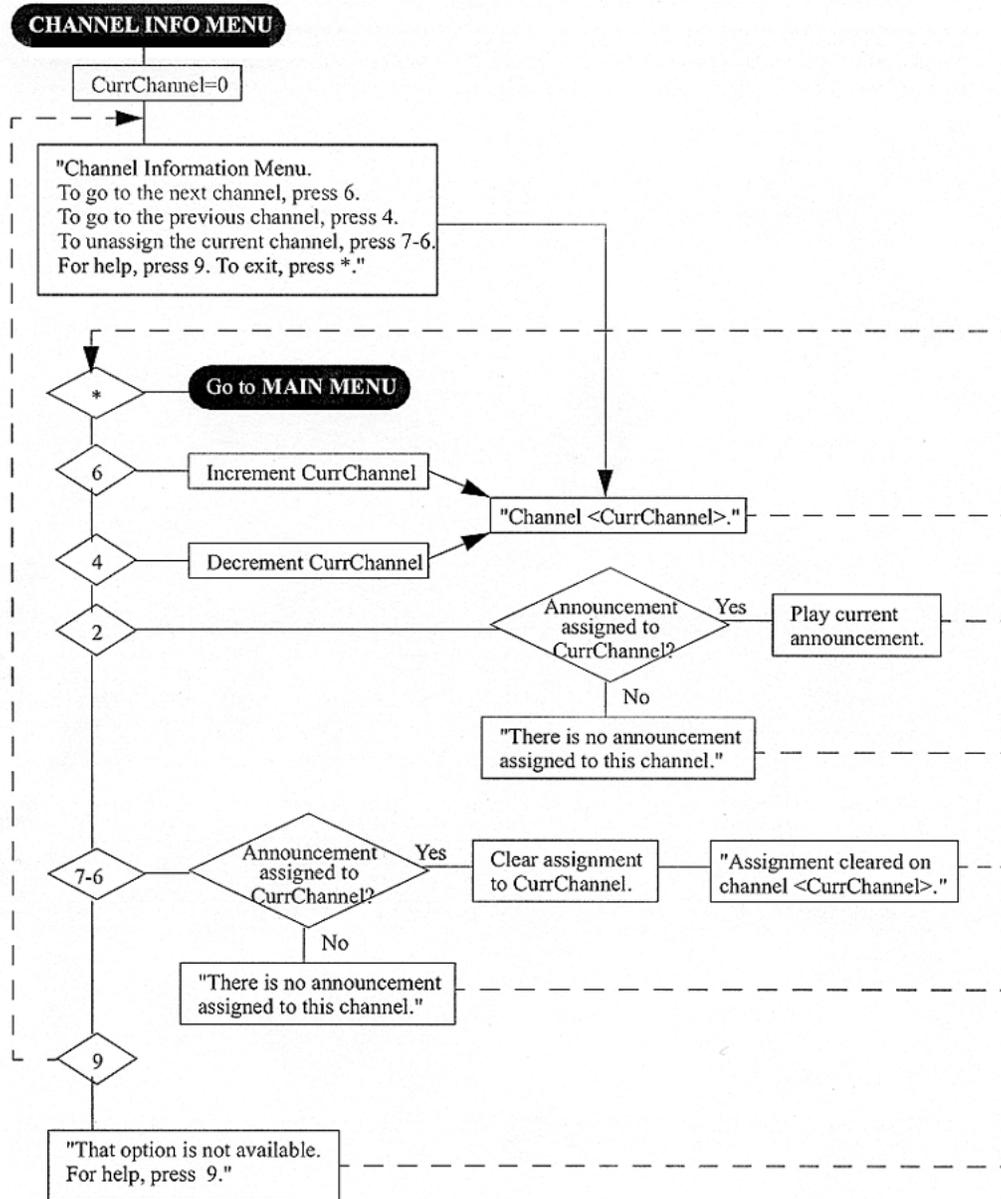


Figure 102: TUI Channel Information menu flowchart

Delete Menu

Dial **7** in the Main Menu to access the **Delete** menu. This function allows the announcement to be deleted.

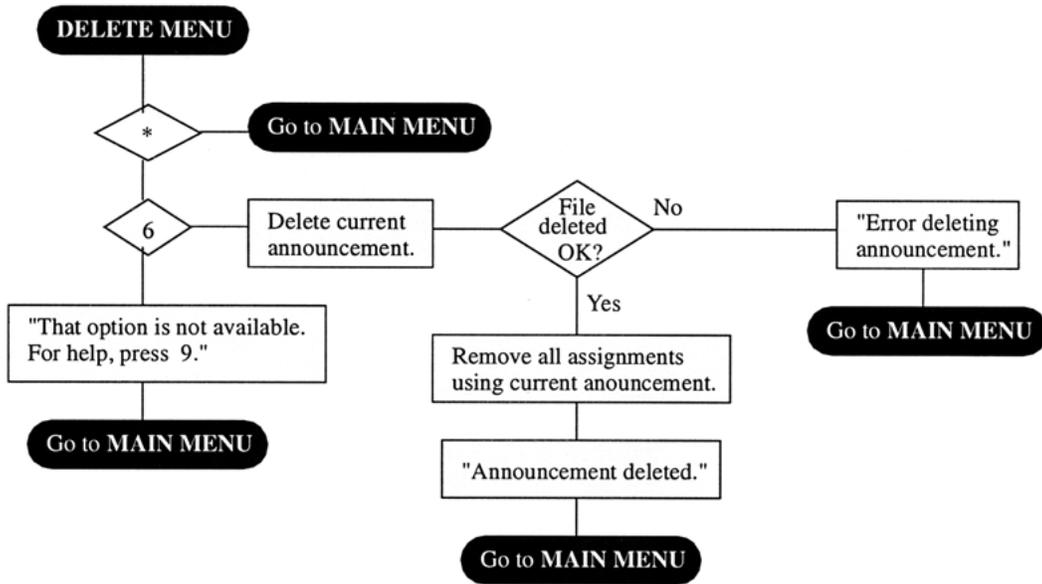


Figure 103: TUI Delete menu flowchart

Chapter 10: Maintenance

Contents

This section contains information on the following topics:

[Introduction](#) on page 217

[Maintenance overview](#) on page 217

[Diagnostic tools](#) on page 218

[LED indicators](#) on page 218

[Display codes](#) on page 219

[Overlay commands](#) on page 219

[Integrated Recorded Announcer fault isolation and correction](#) on page 220

[Integrated Recorded Announcer fault isolation using the menu system](#) on page 222

[Card replacement](#) on page 223

Introduction

This chapter describes Integrated Recorded Announcer card maintenance tools and procedures to help in identifying the Integrated Recorded Announcer card faults, locating defective equipment, correcting problems by fixing or replacing defective equipment, and verifying the operation of the Integrated Recorded Announcer card after corrections or replacements have been made.

Maintenance overview

Approach problem identification systematically. A problem can have more than one cause. To isolate the cause, a knowledge of Integrated Recorded Announcer card operation is required.

Once the cause is identified, correct the problem by replacing the defective card, connecting accidentally disconnected cables, or correcting the software security problem.

The system and Integrated Recorded Announcer card provide built-in self-diagnostic indicators and software and hardware tools. These diagnostic facilities simplify system troubleshooting and reduce Mean-Time-To-Repair (MTTR).

This chapter focuses on the maintenance of the Integrated Recorded Announcer equipment. It requires that the system be operating correctly before starting a diagnosis of the Integrated Recorded Announcer card problems.

Avaya Communication Server 1000M and Meridian 1 Large System Maintenance, NN43021-700 and Avaya Communication Server 1000E Maintenance, NN43041-700 describe how to maintain the entire system. This chapter describes how to maintain the Integrated Recorded Announcer card as an integral part of the system.

Diagnostic tools

Diagnostic tools are used to troubleshoot problems in the system including problems with the Integrated Recorded Announcer card. When diagnosing Integrated Recorded Announcer card problems, more than one of these tools can be used.

System diagnostic tools consist of:

- LED indicators
- display codes
- card self-tests
- sanity monitoring
- overlay commands

LED indicators

System cards are equipped with red LED indicators and module power supplies are equipped with green LED indicators. These indicators show the status of each card or power supply.

Integrated Recorded Announcer card maintenance LED indicator

The Integrated Recorded Announcer card has a red LED indicator at the top of the faceplate. It indicates the status of the card. If the LED is on, the card can be faulty or disabled. The LED turns off when the card is software-enabled.

Display codes

The Integrated Recorded Announcer card is equipped with a four-digit alpha-numeric hexadecimal display on the faceplate.

The hexadecimal display indicates the progress of the internal self-test in the form of T:xx. Refer to [Integrated Recorded Announcer card hexadecimal codes](#) on page 226. Upon successful completion of the test and the start-up of the RAN application, it will display the code "MRN3".

The maintenance display on the Integrated Recorded Announcer card faceplate provides detailed maintenance information. The display includes the following types of information:

- self-test results on power-up
- maintenance routine results
- upgrade and backup information
- reading and writing to and from A: and C: drives.

Overlay commands

Diagnostics are performed for every card as part of the daily routines. It can be invoked from a maintenance TTY. See *Avaya Communication Server 1000M and Meridian 1 Large System Maintenance, NN43021-700*.

The Integrated Recorded Announcer card appears as an Enhanced Extended Universal Trunk (EXUT) card to a system in which it is installed. All relevant system maintenance commands for an EXUT card can, therefore, be used with the Integrated Recorded Announcer card. Use LD 32, the Network and Peripheral Equipment Diagnostics program, to enable and disable RAN channels. To test the music and RAN device, use LD 36, the Trunk Diagnostics program.

The Integrated Recorded Announcer card communicates with the Call Server by sending 0057 at the start of a Recorded Announcement (RAN) file, and 0077 at the end of a RAN file. Upon receipt of the 0077 the Meridian1 starts a 2 second timer and waits for the next 0057. If no 0057 is received before the timer expires, the Meridian1 will BUSY OUT the MIRAN channel and print out ERR220 to TTY for the specific customer and route.

There is no message showing the BUSY OUT MIRAN channel is now in non-active mode and no possibility to distinguish between the status of non-active and not configured MIRAN channels. The messages (TRK041 and TRK044), which are printed out during the test of the RAN device, are the same for non-active or unequipped channels.

[Table 29: Commands to enable/disable and test the Integrated Recorded Announcer card channels](#) on page 220 lists some of the commands used to control the Integrated Recorded Announcer card status and functions.

Table 29: Commands to enable/disable and test the Integrated Recorded Announcer card channels

Overlay	Command	Operation performed
32	DISC / ENLC	Disables/Enables specified card.
32	DISU / ENLU	Disables/Enables specified channel.
36	RAN	Tests RAN device for specified customer and route.
32	STAT	Gets status of specified card/channel.

All the above commands are handled by the Integrated Recorded Announcer card exactly as they are by the EXUT card, transparently to the system.

Integrated Recorded Announcer fault isolation and correction

Fault clearing procedures for the Integrated Recorded Announcer card are the same as for other IPE cards. Refer to *Avaya Communication Server 1000E Maintenance, NN43041-700* for more information.

[Table 30: Integrated Recorded Announcer equipment problems](#) on page 220 deals specifically with Integrated Recorded Announcer card service problems. To diagnose these problems, the table refers to the test procedures in this manual that will most likely fix these problems, based on the symptoms.

Table 30: Integrated Recorded Announcer equipment problems

Symptoms	Diagnosis	Solution
Red card LED on the Integrated Recorded Announcer card is permanently on.	Card is disabled or faulty.	Read Self-test sequence on page 221 about the card status and self-test.
Display on the Integrated Recorded Announcer card shows fault codes.	Card faulty, failed self-test or problem communicating with peripheral equipment.	Read Reset sequence on page 221 about reset. Also refer to Hex Codes in Sound recording, codes, and interfaces on page 225 for a list of error codes. Based on the maintenance display codes description, take the appropriate action and resolve the problem.

Symptoms	Diagnosis	Solution
Error messages printed on the TTY or VDT terminal.	Hardware or software problems with the Integrated Recorded Announcer card.	Note various error messages. Refer to <i>Avaya Software Input Output Reference - System Messages, NN43001-712</i> for a list of these messages and their description. Based on the code's description, take the appropriate action to resolve the problem.

If the problem cannot be resolved after using all available diagnostic tools and test procedures, make a list of all the symptoms observed, and contact the field service representative. Refer to [Sound recording, codes, and interfaces](#) on page 225 to identify the HEX codes that indicate possible problems with the Integrated Recorded Announcer card.

Self-test sequence

The Integrated Recorded Announcer card self-test sequence is as follows:

1. The card self-tests.
2. The Card LAN polls the card.
3. If the self-test passed, the card sends back "powered-up occurred" message.
4. The Card LAN requests configuration data.
5. The card returns configuration data (card type, A07 signaling type, and TN mapping type 2).
6. The Card LAN enables the DS-30X signaling channel.
7. The Integrated Recorded Announcer card waits until it receives configuration data (such as, trunk type, signaling type, and balance impedance) through the DX-30X, but then discards this data.
8. The card goes into its main program loop.

Reset sequence

The Integrated Recorded Announcer card reset sequence is as follows:

1. The software sends a reset message to the card if no channels are busy.
2. The card sets all appropriate resources to disabled state and turns on the faceplate LED.
3. The Integrated Recorded Announcer card resets and self-tests. Self-test results are stored in case a later query is performed by the system. Refer to [Table 31: Integrated Recorded Announcer card hexadecimal codes](#) on page 226.
4. The card LAN polls the card.

5. If the self-test passes, the card sends back a message: "power-up occurred".
6. Card LAN requests configuration data.
7. The card returns configuration data (card type, A07 signaling type, and TN mapping type 2) and enable DS-30X link.
8. Card LAN enables the DS-30X signaling channel
9. The card waits until it receives download configuration data (such as, trunk type, signaling type, and balance impedance) through the DS-30X, but then discards this data.
10. The card goes to its main program loop.

Integrated Recorded Announcer fault isolation using the menu system

Refer to [Text-based User Interface](#) on page 123 for details on using the menu system. The Main Menu is seen when accessing the text-based OA&M. Each option listed on the Main Menu leads to another task window or submenu.

Main Menu


Log into the Text-based User Interface to access the Main Menu (see [Figure 104: Main window Menu](#) on page 222). This OA&M window presents the highest level of end-user maintenance access and provides all functions needed to configure, maintain, and upgrade the Integrated Recorded Announcer card.



Figure 104: Main window Menu

Maintenance and Diagnostics menu

To troubleshoot the Integrated Recorded Announcer card using the menu system, select 3 in the Main Menu and press the `Enter` key to display the Maintenance and Diagnostics submenu. See [Figure 105: Maintenance and Diagnostics menu](#) on page 223.

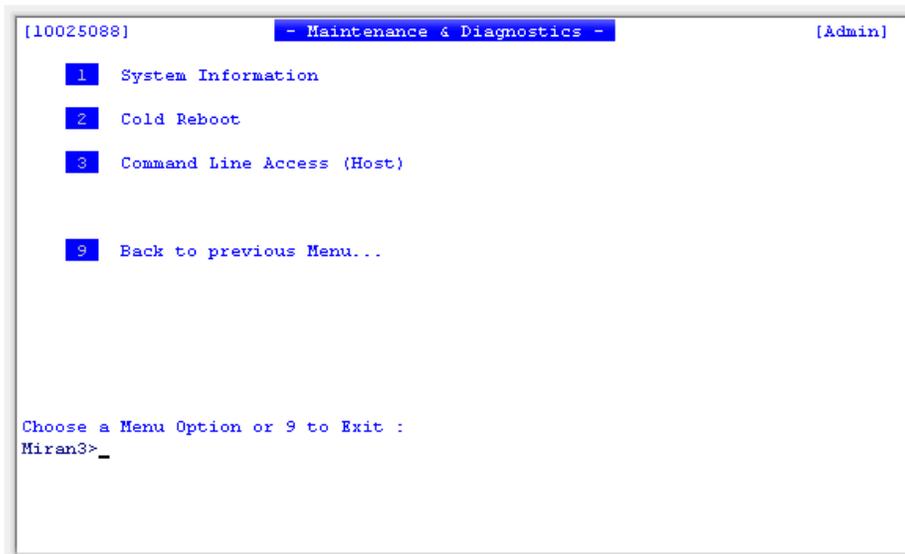

```
[10025088]           - Maintenance & Diagnostics -           [Admin]
1 System Information
2 Cold Reboot
3 Command Line Access (Host)
9 Back to previous Menu...

Choose a Menu Option or 9 to Exit :
Miran3>_
```

Figure 105: Maintenance and Diagnostics menu

Card replacement

The Integrated Recorded Announcer card is based on Flash EPROM technology. This allows the Integrated Recorded Announcer card to be removed from the card slot indefinitely without losing the configuration data.

To replace the Integrated Recorded Announcer card, follow the steps in [Replacing the Integrated Recorded Announcer card](#) on page 223.

Replacing the Integrated Recorded Announcer card

1. Disable the Integrated Recorded Announcer card by loading LD 32 and executing the `DISC l s c` command for Large Systems or Avaya Communication Server 1000E systems (`l` = loop, `s` = shelf or module, `c` = card in the module).
2. Remove the card from the card slot.
3. Remove all PC Cards from the faulty Integrated Recorded Announcer card – the internal PC Card and the PC Cards installed in the Integrated Recorded Announcer card faceplate slots.

4. Transfer the Security Device from the faulty Integrated Recorded Announcer card to the replacement.
5. Transfer all PC Cards to the new Integrated Recorded Announcer card.

 **Note:**

This procedure moves all software, configuration, and records to the replacement Integrated Recorded Announcer card.

6. Install the new Integrated Recorded Announcer card into the IPE module card slot.
7. Enter the same keycode to enable the new Integrated Recorded Announcer card.
8. Enable the new card by executing the **ENLC 1 s c** command for Large Systems or CS 1000E systems.
9. Configure the newly-installed Integrated Recorded Announcer card.
10. Package the faulty Integrated Recorded Announcer card and ship it to the repair center.

Appendix A: Sound recording, codes, and interfaces

Contents

This section contains information on the following topics:

[Introduction](#) on page 225

[Sound recording configuration](#) on page 225

[Integrated Recorded Announcer card hexadecimal codes](#) on page 226

[Integrated Recorded Announcer card interface connectors](#) on page 227

[Maintenance serial port](#) on page 227

[Analog port and pinouts](#) on page 229

[I/O panel to modem cable](#) on page 229

[Modem setup](#) on page 230

Introduction

This appendix describes a typical sound recording configuration, lists the Integrated Recorded Announcer card hexadecimal codes that are displayed on the four-digit display on the Integrated Recorded Announcer card faceplate, and describes the external connectors and their pin assignments. The hex codes provides the status of the card during power-up and on the operational status when in service.

Sound recording configuration

The following is an example of a PC-based digital sound recording. Alternate configurations can be used that produce the 8 kHz A-law or U-law PCM format output files required by Integrated Recorded Announcer either in .ULW or .WAV format.

Minimum PC requirements:

- 100 MHz Pentium processor
- 32 Mbytes of RAM
- 1 Gbyte hard drive
- x4 CD-ROM
- Windows 95
- speakers

Recommended sound card:

Creative Labs AWE 32 Plug and Play audio card Model CT3601 (comes with the microphone)

PC drive:

DATABOOK ThinCard Drive Model TMB-240

Software:

GoldWave sound editor.

 **Note:**

When recording announcements, use the following recommendations. To remove sharp transitions at the boundaries of an announcement, add fade-in (from 0) at the start of the announcement and fade-out (to 0) at the end of announcement. Users must add one second of silence to the beginning and to the end of each announcement.

When the internal RAM test, ALU test, address mode test, boot ROM test, timer test, or external RAM test fails, the Integrated Recorded Announcer card goes into a maintenance loop and no further processing is possible. A failure message is displayed to indicate which test failed. For example, the message changes to F:xx if the timer test fails (F:05 is displayed).

Integrated Recorded Announcer card hexadecimal codes

Table 31: Integrated Recorded Announcer card hexadecimal codes

Codes	Description
T:00	Initialization
T:01	Testing internal RAM
T:02	Testing ALU
T:03	Testing address modes

Codes	Description
T:04	Testing watchdog
T:05	Testing 8051 coprocessor
T:06	Testing timers
T:07	Testing external RAM
T:08	Testing dongle
T:09	Programming time switch FPGA
T:10	Programming ISPDI FPGA
T:11	Testing host dual-port RAM
T:12	Testing DS-30 dual-port RAM
T:13	Testing SEEPROM
T:14	Boosting Host Processor, waiting for response with self-test information
T:15	Reserved for future use
T:16	Reserved for future use
T:17	Reserved for future use
T:18	Reserved for future use
T:19	Reserved for future use
T:20	Waiting for application start-up message from Host Processor
T:21	CardLAN enabled, waiting for request configuration message
T:22	CardLAN operational, A07 enabled, display now under host control. Integrated Recorded Announcer card is operational

Integrated Recorded Announcer card interface connectors

The interface connectors connect the Integrated Recorded Announcer card to the external equipment at the faceplate and the Audio-adaptor.

Maintenance serial port

For occasional OA&M purposes, a serial port is provided on the Integrated Recorded Announcer card faceplate, through an 8-pin mini DIN connector. For a permanently connected terminal, the maintenance serial port is duplicated on the Audio-adaptor.

[Table 32: Faceplate 8-pin mini-DIN connector signals](#) on page 228 displays pinouts for the Integrated Recorded Announcer card faceplate 8-pin mini-DIN connector.

Table 32: Faceplate 8-pin mini-DIN connector signals

Pin No.	Signal	Description
1	BDTRB-	Port B Data Terminal Ready
2	BSOUTB-	Port B Serial Data Out
3	BSINA-	Port B Serial Data In
4	SGRD	Signal Ground
5	BSINA-	Port A Serial Data In
6	BCTSA-	Port A Clear To Send
7	BSOUTA-	Port A Serial Data Out
8	BDTRA-	Port A Data Terminal Ready

[Table 33: Port A and port B pinout and wire color code on the 50-pin connector](#) on page 228 lists the port A and port B connections at the I/O panel 50-pin connector. It lists the pins signal assignments, wire color code, and the description of the signals. Total distance from the Integrated Recorded Announcer card to the MDF and from the MDF to the terminal must not exceed 50 feet.

Table 33: Port A and port B pinout and wire color code on the 50-pin connector

I/O Panel 50-pin connector pin assignment and wire color code	Integrated Recorded Announcer signal name	Integrated Recorded Announcer signal description
16 (BL-Y)	Reserved	Future use
41 (Y-BL)	BDCDA-	Port A Data Carrier Detect
17 (O-Y)	BSINA-	Port A Serial Data In
42 (Y-O)	BSOUTA-	Port A Serial Data Out
18 (G-Y)	BDTRA-	Port A Data Terminal Ready
43 (Y-G)	SGRD	Signal Ground
19 (BR-Y)	BDSRA-	Port A Data Set Ready
44 (Y-BR)	BRTSA-	Port A Request to Send
20 (s-y)	BCTSA-	Port A Clear to Send
45 (Y-S)	BSINB-	Port B Serial Data In
21 (BL-V)	BSOUTB-	Port B Serial Data Out
46 (V-BL)	BDCDB-	Port B Data Carrier Detect

I/O Panel 50-pin connector pin assignment and wire color code	Integrated Recorded Announcer signal name	Integrated Recorded Announcer signal description
22 (O-V)	BDTRB-	Port B Data Terminal Ready
47 (V-O)	BDSRB-	Port B Data Set Ready

Analog port and pinouts

[Table 34: Analog port backplane signals](#) on page 229 lists the 50-pin I/O panel connector pins and their signal assignment for the analog port.

The 3.5 mm audio jack provides access to a single analog input (ANALOG0). It is used to connect external analog sources, such as a tape recorder or CD player, in order to record to file or to route it directly through a trunk emulation port into the system for MOH.

The audio jack provides an external connection to Port ANALOG0 for a short term connection of an external analog source.

Table 34: Analog port backplane signals

I/O Panel 50-pin connector pin assignment and wire color code	Integrated Recorded Announcer card signal name	Integrated Recorded Announcer card signal description
5 (S-W)	AGND	Analog Ground
30 (W-S)	AGND	Analog Ground
7 (O-R)	AIN0	Analog In, Port 0
32 (R-O)	AIN1	Analog In, Port 1
9 (BR-R)	AGND	Analog Ground
34 (R-BR)	AGND	Analog Ground

 **Note:**
Cross-connect audio pairs can be used to connect to external recording devices for the purpose of backing up announcements to a tape.

I/O panel to modem cable

[Browser User Interface](#) on page 16 shows the I/O panel to modem cable pin assignments.

Table 35: I/O panel connector to modem cable pinouts

Signal name	50-pin I/O panel parallel connector Pin No.	25-pin male (RS-232) (Modem side) Pin No.
TX	21	2
RX	45	3
DTR	22	20
GRN	43	7

Modem setup

To set up the modem, use a terminal connected to the modem. Configure the terminal as follows:

- 9600 bps
- 8 bits
- 1 start
- 1 stop
- no parity.

Follow the steps in [Configuring the modem](#) on page 230 to configure the modem.

Configuring the modem

1. To configure the modem to auto-answer:
 - Connect the terminal to the modem.
 - Type **AT** for a Hayes-compatible modem. If the modem is connected properly, it replies OK.
 - Type **ATS0 = 1**.
 - Type **AT&W0** to save the settings.
2. Disable result codes.
 - Type **AT** for a Hayes-compatible modem. If the modem is connected properly, it will reply "OK".
 - Type **ATQ1**.
 - Type **AT&W0** to save the settings.
3. Connect the modem to the Integrated Recorded Announcer card using one of the cable configurations previously described.

Appendix B: Environmental and electrical regulatory data

Contents

This section contains information on the following topics:

[Introduction](#) on page 231

[Environmental specifications](#) on page 231

[Electrical regulatory standards](#) on page 232

[Electromagnetic Compatibility \(EMC\)](#) on page 233

Introduction

This chapter presents information about the Integrated Recorded Announcer card reliability, environmental specifications, and electrical regulatory standards.

Environmental specifications

This section describes the operating and storage temperature ranges and humidity for the Integrated Recorded Announcer card. The ideal operating temperature is obtained when the environmental temperature is regulated using air-conditioning. However, the Integrated Recorded Announcer card is designed to operate in the standard telephony equipment accepted temperature and humidity ranges.

[Table 36: Temperature-related specifications](#) on page 232 displays measurements of performance under test conditions of temperature and shock.

Table 36: Temperature-related specifications

Specification	Minimum	Maximum
Normal Operation		
Recommended	15° C	30° C
Relative humidity	10%	55% (non-condensing)
Absolute (less than 72 hours)	0° C	45° C
Relative humidity	5% ---- 95% (non-condensing)	
Rate of change	Less than 1° C for each 3 minutes	
Storage		
Recommended	-50° C	+70° C
Relative humidity	0%	95% (non-condensing)
Temperature Shock		
In 3 minutes	-50° C	25° C
In 3 minutes	70° C	25° C
	-40° to 70° C (non-condensing)	

Electrical regulatory standards

[Table 37: Safety regulations](#) on page 232 through [Table 39: Electromagnetic immunity](#) on page 233 list the safety and electromagnetic compatibility regulatory standards for the Integrated Recorded Announcer card, listed by geographic region. Specifications for the Integrated Recorded Announcer card meet or exceed the standards listed in these regulations.

[Table 37: Safety regulations](#) on page 232 provides a list of safety regulations met by the Integrated Recorded Announcer card in any Avaya Communication Server 1000 or Meridian 1 system, along with the type of regulation and the country/region covered by each regulation.

Table 37: Safety regulations

Regulation Identifier	Regulatory Agency
c(CSA)us 950	Safety of Canada, UL 1950 Safety, United States, CALA
EN 60950	Safety Europe
AS3260, TS001	Safety Australia

Regulation Identifier	Regulatory Agency
JATE Network/Safety	Japan
IEC 60950-CB	report including country deviations

Electromagnetic Compatibility (EMC)

[Table 38: Electromagnetic emissions](#) on page 233 lists electromagnetic emissions regulations met by the Integrated Recorded Announcer card, along with the country's standard that lists each regulation.

There are no limitations on the number of Integrated Recorded Announcer card that can be installed in any Avaya CS 1000 or Meridian 1 system, with the following exception: the number of Integrated Recorded Announcer cards that can be installed in an IPE module (Large System) for Class B compliance (EN55022:1998 and EN55024:1998) is limited to four. There are no limitations for Class A installations.

Table 38: Electromagnetic emissions

Regulation Identifier	Regulatory Agency
FCC part 15 Class A	United States Radiated Emissions
CSA C108.8	Canada Radiated Emission
EN50081-1	European Community Generic Emission Standard
EN55022/CISPR 22 CLASS B	Radiated Emission (Basic Std.)
BAKOM SR 784.103.12/4.1/1	EMC/Safety (Switzerland)
SS-447-20-22	Sweden EMC Standard
AS/NZS 3548	EMC (Australia/New Zealand)
NFC 98020	France EMC Standard

[Table 39: Electromagnetic immunity](#) on page 233 lists electromagnetic immunity regulations met by the Integrated Recorded Announcer card, along with the country's standard that lists each regulation.

Table 39: Electromagnetic immunity

Regulation Identifier	Regulatory Agency
CISPR 22 Sec. 20	Class B I/O conducted noise
IEC 801-2 (level 4)	ESD (Basic Standard)
IEC 801-3 (level 2)	Radiated Immunity (Basic Standard)

Regulation Identifier	Regulatory Agency
IEC 801-4 (level 3)	Fast transient/Burst Immunity (Basic Standard)
IEC 801-5 (level 4, preliminary)	Surge Immunity (Basic Standard)
IEC 801-6 (preliminary)	Conducted Disturbances (Basic Standard)
BAKOM SR 784.103.12/4.1/1	EMC/Safety (Switzerland)
SS-447-20-22	Sweden EMC Standard
AS/NZS 35481	EMC (Australia/New Zealand)
NFC 98020	France EMC Standard
EN55024 Class	B I/O conducted noise
EN61000-4-2 (level 4)	ESD (Basic Standard)
EN61000-4-3 (level 2)	Radiated Immunity (Basic Standard)
EN61000-4-2 (level 3)	Fast transient/Burst Immunity (Basic Standard)
EN61000-4-5 (level 4, preliminary)	Surge Immunity (Basic Standard)
EN61000-4-6 (preliminary)	Conducted Disturbances (Basic Standard)
EN6100-4-11	Dips, Interruptions (system level)
EN61000-3-2	Harmonics and Flickers (system level)

Appendix C: NT8D37 cable connections

Contents

This section contains information on the following topics:

[NT8D37 cable connections](#) on page 235

[NT8D81BA cable removal procedure](#) on page 237

[Tools list](#) on page 237

[NT8D81BA cable installation procedure](#) on page 237

NT8D37 cable connections

Cables are designated by the letter of the I/O panel cutout (such as, A, B, and C) where the 50-pin cable connector is attached. Each cable has three 20-pin connectors (16 positions are used) designated 1, 2 and 3, that attach to the backplane.

Using the designations given for the connectors, the backplane ends of the first cable are referred to as A-1, A-2, and A-3. Locations of the cable connectors on the backplane are designated by the slot number (L0 through L9 for NT8D11; L0 through L15 for NT8D37) and the shroud row. Using these designations, the slot positions in the first slot are referred to as L0-1, L0-2, and L0-3.

In NT8D37BA and NT8D37EC (and later vintage) modules, all 16 IPE card slots support 24-pair cable connections. In earlier vintage modules, slots 0, 4, 8, and 12 support 24-pair cable connections. This eliminates the need to rewire if the slots are free.

[Table 40: NT8D37 cable connections](#) on page 235 shows the cable connections from the backplane to the inside of the I/O panel.

Table 40: NT8D37 cable connections

Backplane slots – shroud rows	I/O panel/cable designation
L0-1,2,3	A
L1-1,2,3	B
L2-1,2,3	C

Backplane slots – shroud rows	I/O panel/cable designation
L3-1,2,3	D
L4-1,2,3	E
L5-1,2,3	F
L6-1,2,3	G
L7-1,2,3	H
L8-1,2,3	K
L9-1,2,3	L
L10-1,2,3	M
L11-1,2,3	N
L12-1,2,3	R
L13-1,2,3	S
L14-1,2,3	T
L15-1,2,3	U

Figure 106: Large Systembackplane slot designations on page 236 shows the following:

- the designations for the backplane end of the cables
- the backplane slot designations for the cable connections
- the associated network segments for the backplane slots

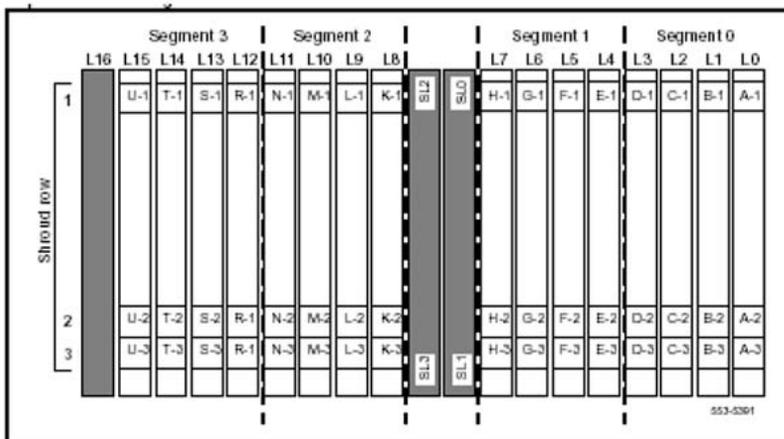


Figure 106: Large Systembackplane slot designations

Tools list

The following tools are required for cable connections:

- Tie-wrap cutter
- Tie-wraps
- Needle nose pliers
- Slotted screwdriver

NT8D81BA cable removal procedure

To remove the NT8D81BA cable, follow the steps in [Removing NT8D81BA cable](#) on page 237.

Removing NT8D81BA cable

1. Identify the I/O panel and backplane designation that corresponds to the slot in which the Integrated Recorded Announcer card is installed.
2. Power down the IPE shelf.
3. Remove the IPE module I/O safety panel.
4. Remove the ribbon cables from the IPE backplane:
 - Apply gentle pressure on the tab on the right side of the shroud until the connector pulls free from the shroud.
 - First, remove connector 1. Then remove connectors 2 and 3.

NT8D81BA cable installation procedure

To install the NT8D81BA cable, follow the steps in [Installing NT8D81BA cable](#) on page 237.

Installing NT8D81BA cable

1. Install the NT8D81BA ribbon cable connectors in the IPE module backplane. Install the connector so that the label is facing to the right with the arrow pointing up.
 - Install connector 1 (labelled UP1^) into backplane shroud 1.
 - Install connector 2 (labelled UP2^) into backplane shroud 2.

- Install connector 3 (labelled UP3^) into backplane shroud 3.
2. Dress ribbon cables back individually inside the rear of the IPE module, and restore the original arrangement. Start with the cables that are going to be underneath.
 3. Attach the NT8D81BA 50-pin connector to the IPE filter using bail clips.
 4. Restore power to the IPE module.
 5. Replace the I/O safety panel.

Glossary

ALU	Arithmetic Logic Unit.
API	Application Programming Interface. High level language software used as components in the development of an application. Also, graphics routines that perform basic graphics tasks or other functions when called by high-level application programs.
ASIC	Application-Specific Integrated Circuit. A microprocessor chip designed to do specific tasks; providing graphics capability is one such task.
ATA	AT Attachment interface. Normally used to refer to the PC Card version of the IDE disk drive interface found in a PC. For an Integrated Recorded Announcer card, standard ATA-based cards are required instead of the simpler memory-based cards. The later are lower in cost but require custom driver software both at the PC and at the Integrated Recorded Announcer card.
AUI	Autonomous/Attachment User Interface. Refers to the 15-pin, D-type connector and cables used to connect single- and multiple-channel equipment in an Ethernet transceiver.
BIOS	Basic Input/Output System. A set of permanently stored program outlines in buffers that allow software to interact with hardware components (for example, a keyboard) in a device-independent manner.
bootp	An IP protocol that allows the automatic assignment of an IP address to a client device upon bootup.
Boundary scan	Test methodology for integrated circuits that provides visibility and control of on-chip logic.
BUI	Browser User Interface. The interface a user can use to interact with the Integrated Recorded Announcer card through the web.
CD-ROM	Compact Disk Read-Only Memory.
CE-MUX	Common Equipment bus with Multiplexed address and data.
CPE	Customer Premise Equipment. Equipment that resides on a customer's premises and is controlled by the customer as opposed to the Central Office

CPU

CPU	Central Processing Unit. A chip that performs logic, control, and arithmetic functions. The part of the switch that performs these functions and any others needed to carry out call processing.
DIN	A German standardization organization.
DS-30X	Parallel serial transmission from a superloop (XNET) card to a Controller Card in an IPE shelf.
DRAM	Dynamic Random Access Memory. A type of semiconductor memory that is characterized by its high density (smaller packages for a given amount of memory). It typically has slower access time as compared with SRAM and requires external memory refresh circuitry.
DSP	Digital Signal Processing. A specialized computer chip that performs speedy and complex operations on digitized waveforms. Useful in processing sound and video.
DTMF	Dual Tone Multi-Frequency. A term describing push-button or touch-tone dialing.
EIDE	Enhanced IDE (see IDE). This feature provides a significant improvement in performance over the standard IDE; it is comparable to standard SCSI in terms of throughput.
EMC	ElectroMagnetic Compatibility. Refers to equipment units that are collectively performing each of their functions without causing or suffering unacceptable degradation due to electromagnetic interference from other equipment/systems in the same environment.
EMI	ElectroMagnetic Interference. Unwanted electromagnetic coupling, such as a ham radio heard on an electric organ or church music heard in hearing aids. Also known as "static".
EPLD	Erasable Programmable Logic Device. An electronic device for performing logical operations that can easily be erased and reprogrammed.
ESS	Environmental Stress windowing.
EST	Environmental Stress Testing.
EXUT	Enhanced Extended Universal Trunk card. See XUT.
Field programmable	A program to which changes can be made while it is installed.
Firmware	Hardwired logic, software, data, and programming instructions such as that stored by threading wires through ferrite cores. May also refer to

software programmed in the factory or burnt in the field, and is semipermanently stored within ROM.

Flash memory	Electrically erasable memory that is nonvolatile (not affected by power disruptions).
FPGA	Field Programmable Gate Array.
FTP	File Transfer Protocol. This is an industry standard protocol for transferring files between a server and a client on a TCP/IP network.
Gate array	A circuit consisting of an array of logic gates (network nodes) aligned on a substrate (piece of silicon) in a regular pattern.
IDE	Integrated Drive Electronics. A low-cost hard disk drive interface.
IP	Internet Protocol.
IPE	Intelligent Peripheral Equipment. A range of cards that contain micro-processors that provide off-loading of the CPU function and the flexibility to make changes to the system parameters without revising the hardware.
ISA	Industry Standard Architecture. A particular type of bus architecture on an IBM-DOS motherboard.
IVR	Interactive Voice Response. An application that allows telephone callers to interact with a host computer through prerecorded announcements and prompts.
Kernel	That part of a computer's operating system that performs basic functions such as switching between tasks.
LCA	Logic Cell Array. A Xilinx product that is a form of Field Programmable Gate Array. See FPGA.
Loader	A device that moves a program or data from a floppy or hard disk and stores it into a computer's RAM memory.
MAU	Media Access Unit. A device used to allow connection of the Ethernet AUI signals on Integrated Recorded Announcer to an external LAN.
MCF	Integrated Recorded Announcer card Compressed format. The compressed file format used by Integrated Recorded Announcer to store prompts and royalty-free music.
MDS	Modular Documentation System.
MINT	Message INTerrupt. This occurs when a message being transmitted receives an interrupt signal from an outside device, which must process

MOH

a task of its own. Then the transmission of the original message can resume, or be resent.

MOH

Music On Hold. Refers to telephony equipment, supplied by a Nortel switch through one or more trunk cards, to provide recorded music or radio to each caller on hold until the called party becomes available.

MTBF

Mean Time Between Failure. A measure of reliability: the time that a user may reasonably expect a device or system to work before an incapacitating fault occurs. Also, the average number of hours between one random failure and the next under stated conditions.

MTTR

Mean Time To Repair. The average time required for corrective maintenance.

NTP

Nortel Networks Publications; customer documentation. Each NTP is identified by a unique ten-digit document number.

OA&M

Operation, Administration, and Maintenance.

OEM

Original Equipment Manufacturers.

OTM

A Nortel Networks Windows™ application that is available for configuring the CS 1000 and Meridian 1 systems.

PAS

Product Administration System.

PBX

Private Branch eXchange. A telephony switch that is privately owned.

PCB

Printed Circuit Board.

PCI

Peripheral Component Interconnect. An Intel device that enables high performance in an interface between a CPU bus and a peripheral device. A high-speed PC local expansion bus, capable of interconnecting ICs and plug-in boards to the host processor.

PCM

Pulse Code Modulation. A method for encoding an analog voice signal into a digital bit stream.

PC Card

Personal Computer Card. A credit card-sized plug-in board for use in PCs. These cards are the only way to get to a laptop bus without using a docking station. In addition, application software can be stored on the card into system address space so that the software can run directly from the card, resulting in a faster start and less memory required from the host computer.

PDF

Portable Document Format.

RAN	Recorded ANnouncement trunks - A trunk that provides a link between the system and a recorded announcement device, used to provided recorded information to callers.
RTC	Real Time Clock. System clocking influenced/determined by connection to a time process external to processing by the system.
SBC	Sub-Band Coding. Algorithm for compressing speech data down to just over a quarter of its original size.
Scalable architecture	A way of designing a system that allows it to be resized with relative ease; the cost required to increase its size in proportion to the new size.
SDI	Serial Data Interface. For some systems, provides ports between the CPU and external devices like a teletype or maintenance telephone. More generally, an SDI is a mechanism for changing the parallel arrangement of data within computers to the serial form used on transmission lines, and vice versa.
STA	Single Terminal Access.
Telnet	An IP-based protocol for accessing a host computer over a network. Telnet can be used to access the Integrated Recorded Announcer Text-based User Interface over an LAN.
TUI	Telephone User Interface. The interface a user can use to record, play, and assign and unassign announcements over a DTMF telephone.
VxWorks	Wind River RTOS (Real Time Operating System). See RTOS.
.WAV	File format used for storing voice files created under Microsoft Windows.

.WAV