




2006 Iron Horse Warrior Rear Wheel Replacement

Remove the rear wheel.


Written By: Matt Halvorson

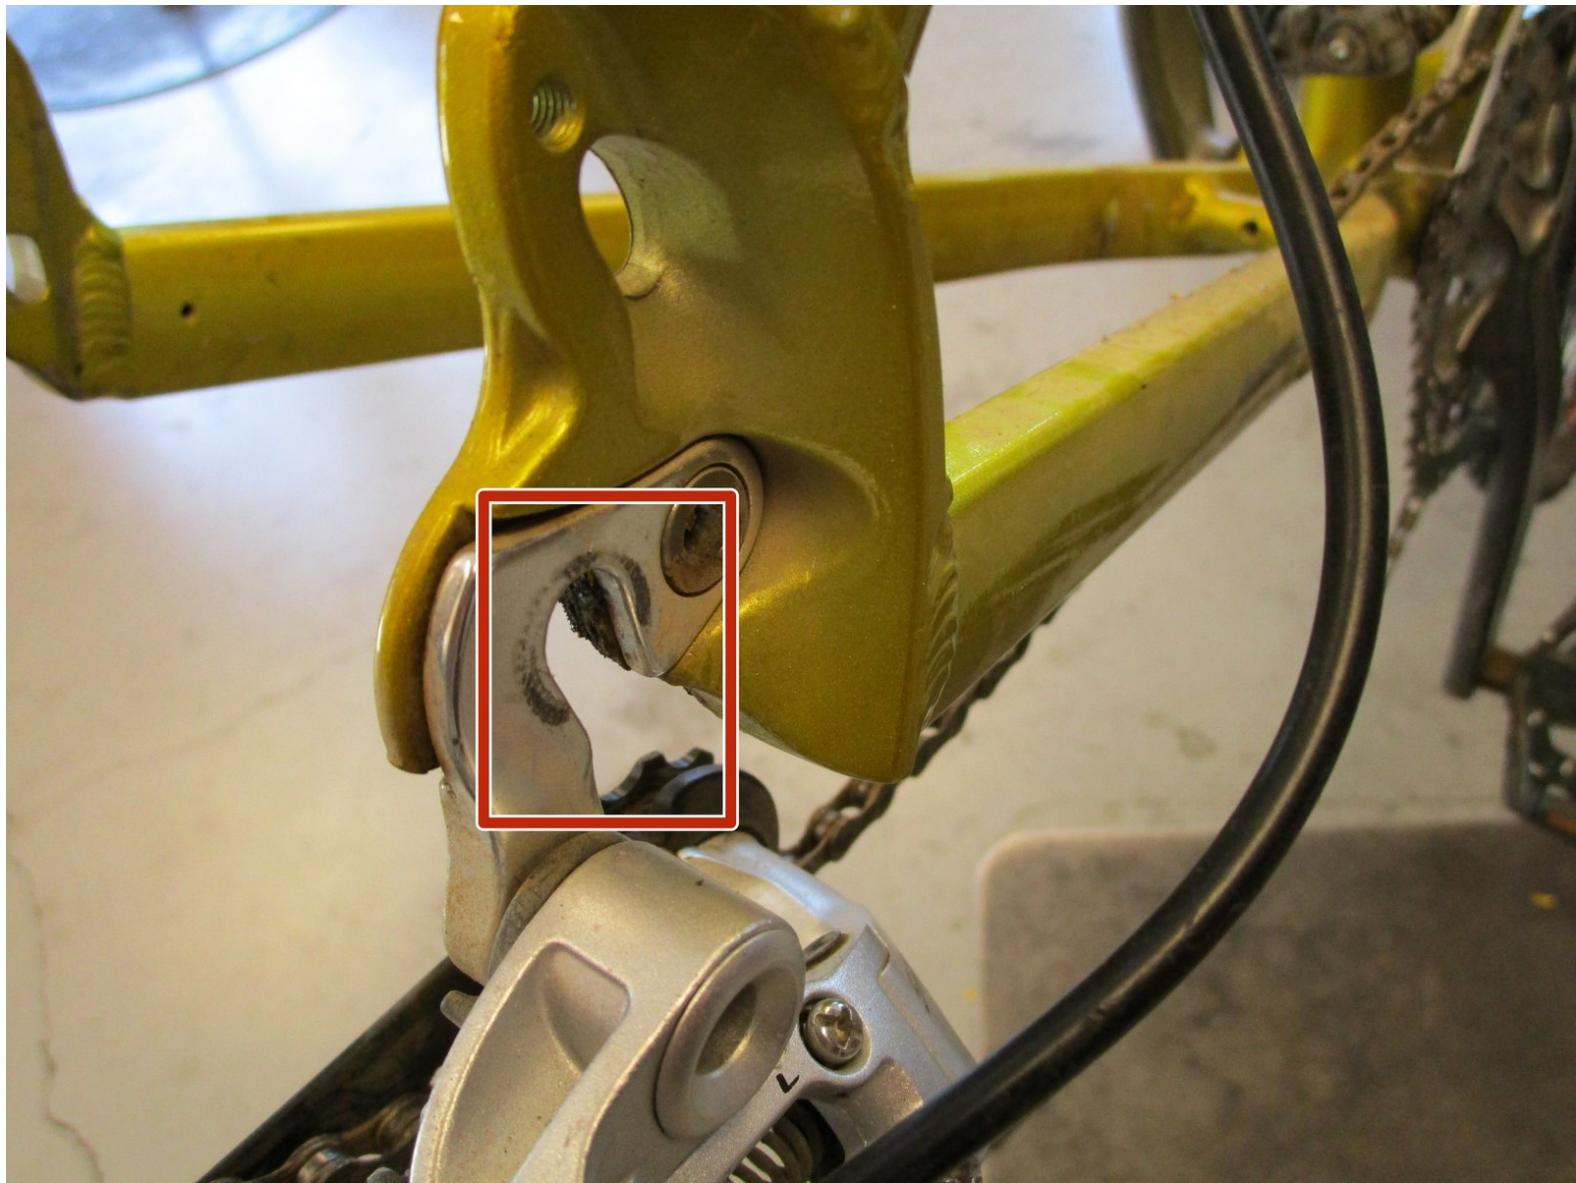

INTRODUCTION


Use this guide to remove the rear wheel.

Step 1 — Rear Wheel

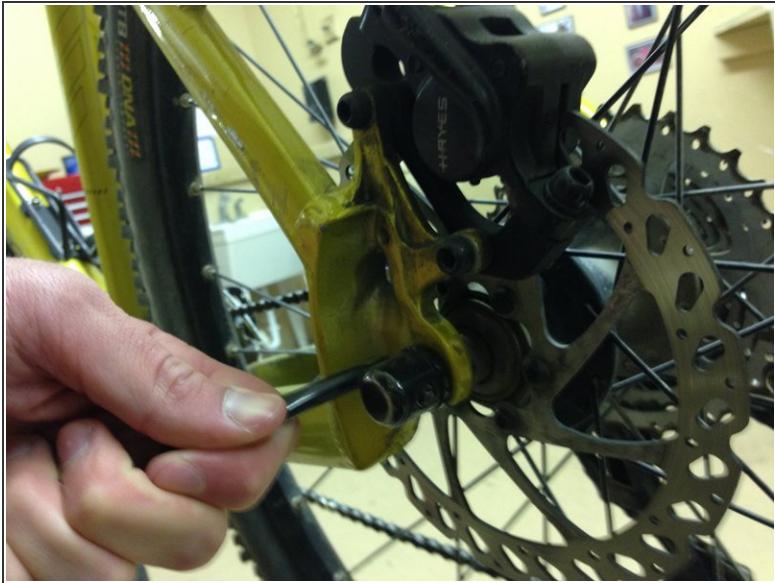


- ① Turn the bike upside down if you don't have a bike stand. This will make it easier to remove the tire.
- Unfasten the left side of the wheel by pulling the black "L" shaped lever up with your hands.

Step 2

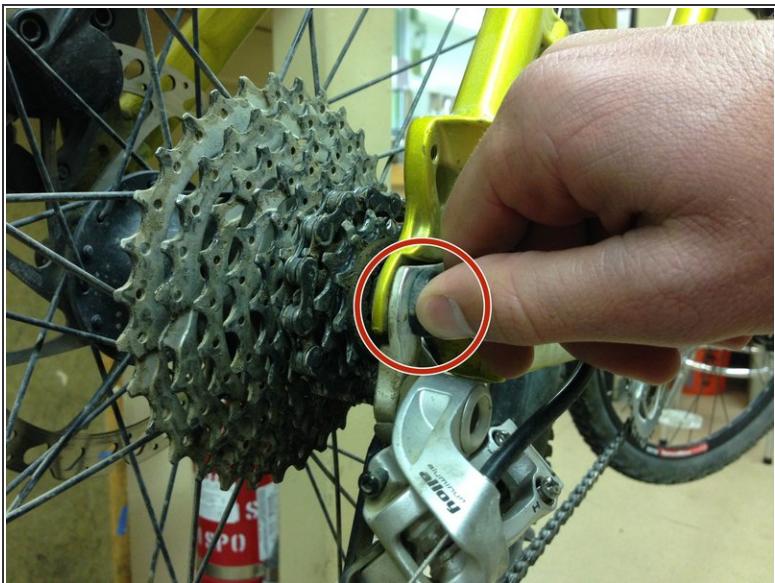

- On the right side, use your hands to unscrew the cap of the axle counterclockwise until it is loose.

Step 3

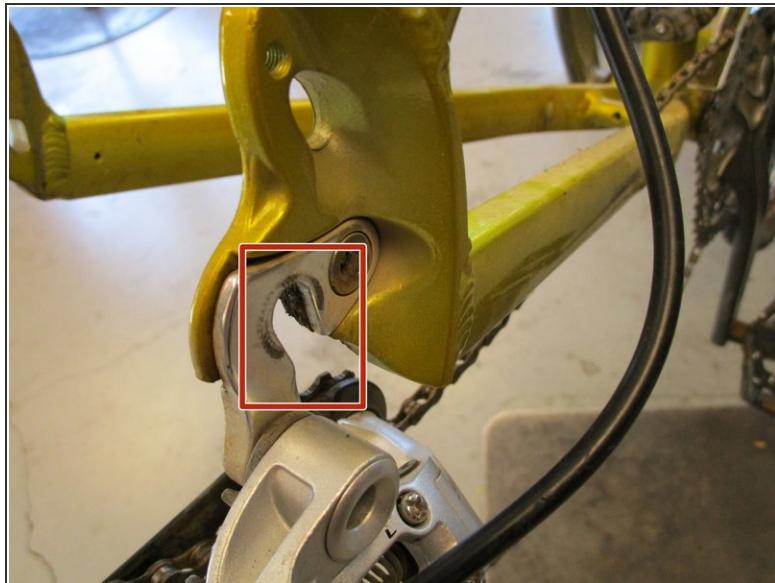

- Push down on the the tire with your hands to remove it from the frame of the bike.
- ⓘ Sometimes the axle will get caught in the boxed area. Use both of your hands to cautiously push it down harder until the tire comes loose. This may require a fair amount of force.

To reassemble your device, follow these instructions in reverse order.