



2013-2016 Scion FRS (Toyota gt86) Engine Air Filter Replacement

This will guide you on how to replace an air filter on your 2013-2016 Scion FRS or Toyota gt86.

Written By: Mark Symonenko



INTRODUCTION

This guide will take you through how to swap out the air filter in your 2013-2016 Scion Frs or Toyota gt86. Dirty air filter can cause your car to lose power and gas milage. The dealerships recomend to replace your filter every 15,000-30,000 miles, depending on the driving conditions. It will take you about 5-10 minutes and won't require any tools.



PARTS:

- [Engine Air Filter \(1\)](#)

Step 1 — Engine Air Filter



- Pull the handle located near the driver's left leg to unlock the hood.
- Pull the secondary latch located to the right of the emblem.
- Prop up the hood.

 Make sure you're not working in a high wind area, as that might blow the hood backward and damage your vehicle.

Step 2




- Locate the air filter box, which can be found to the front right of the car.

Step 3




- Pull the metal clips up from the top. They will pop out.

Step 4

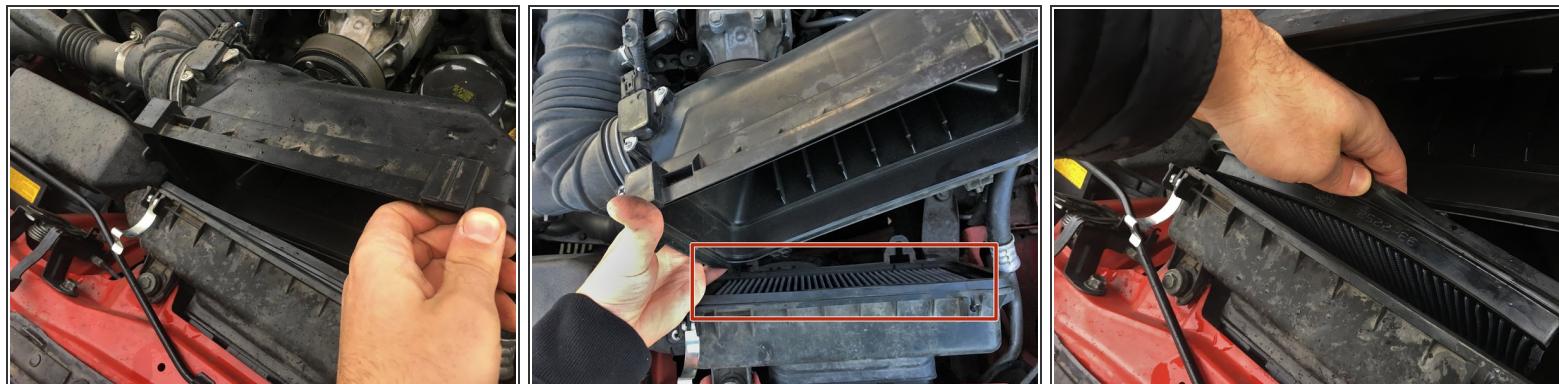


- Grab the back of the box and pull it towards the top.
- To pull out the air-filter, simply pull it away from the car and lift up.

Step 5

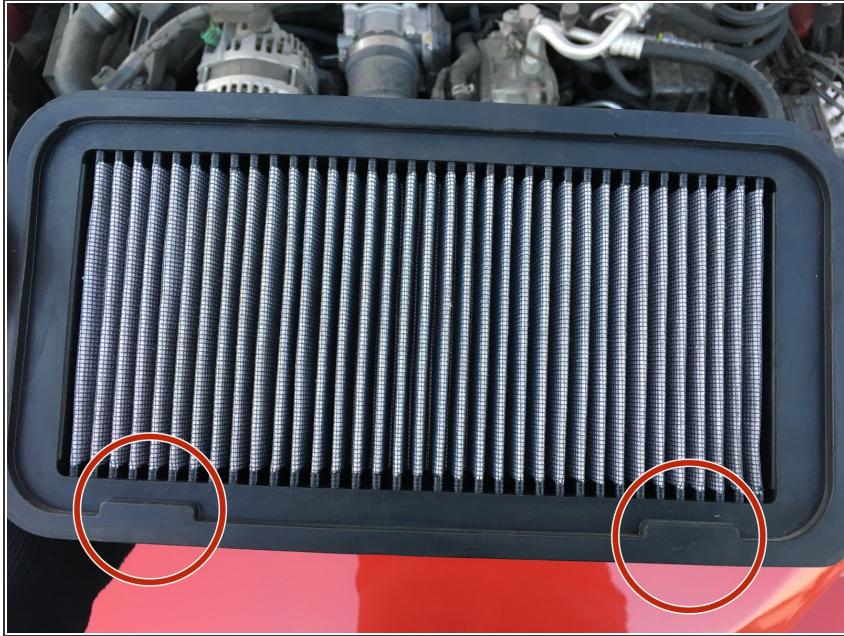

- Repeat the process in reverse to install the air filter.
- ☒ Make sure that the tabs on the filter are on the bottom.

Step 6

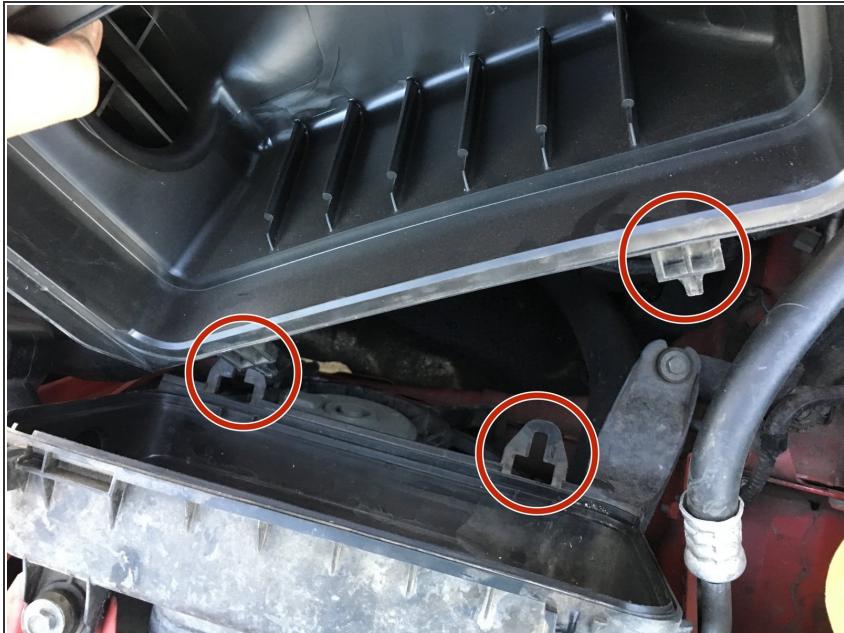

- Line up the little pins on the cover of the box with the base of the box in order to close it.
- Clip the pins back in and you're done!

Now that the new filter is installed, you're good to go.