




Blackberry Bold 9650 Trackpad Replacement

This guide explains how to replace the trackpad in your Blackberry Bold 9650.

Written By: Ryan

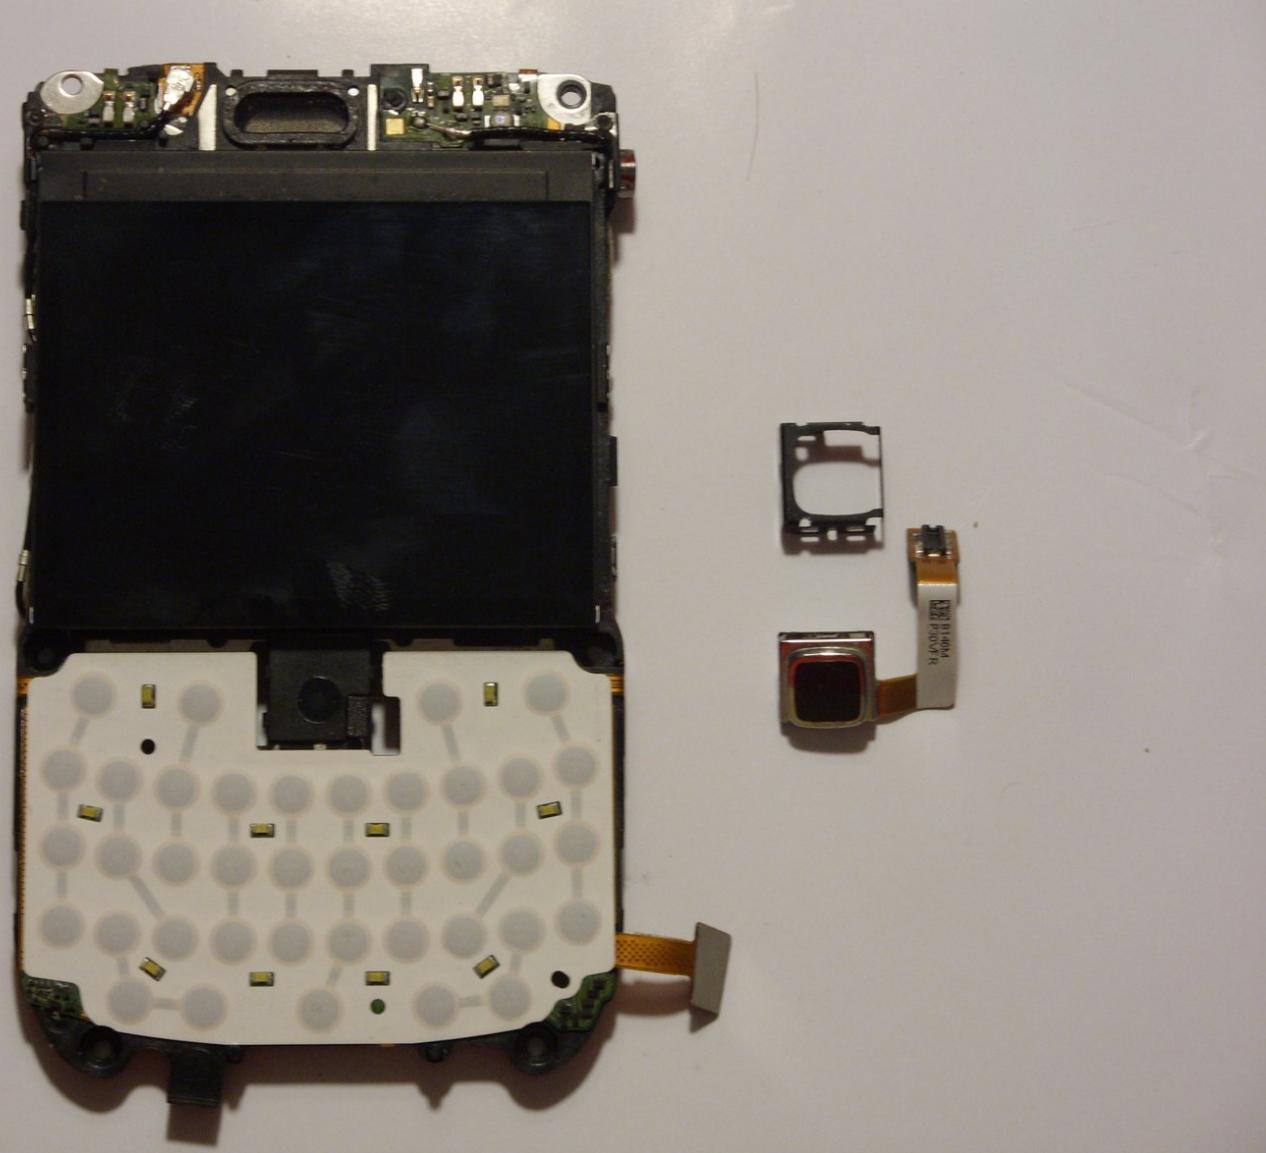

 **TOOLS:**

- Tweezers (1)
- T6 Torx Screwdriver (1)
- iFixit Opening Tools (1)

 **PARTS:**

- Blackberry Bold 9650 Trackpad (1)

Step 1 — Battery




- Turn the device upside down.
- Using your finger, slide the silver cover release button towards the top of the device.
- Lift and remove the back cover.

Step 2



- Using your fingernails, lift the sides of the battery.
- Remove the battery.

Step 3 — SIM Card

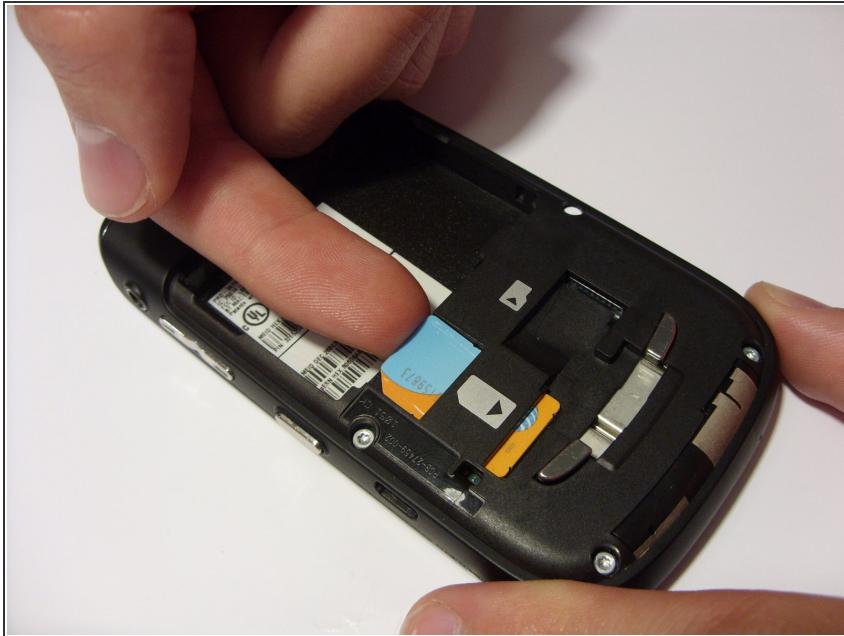

- Orient the device so the screen is facing the ground.
- Using your finger, gently lift the top of the SIM card.

Step 4



- Gently pull out the SIM card.

⚠ The card will break in half if you apply too much force when pulling out the card.

Step 5 — Back Chassis




- Using a T6 Torx Screwdriver, remove the four torx screws located on the bottom half of the device.

Step 6



- Orient the device so that the screen is facing you.
- Using a spudger, remove the ear piece cover.

Step 7

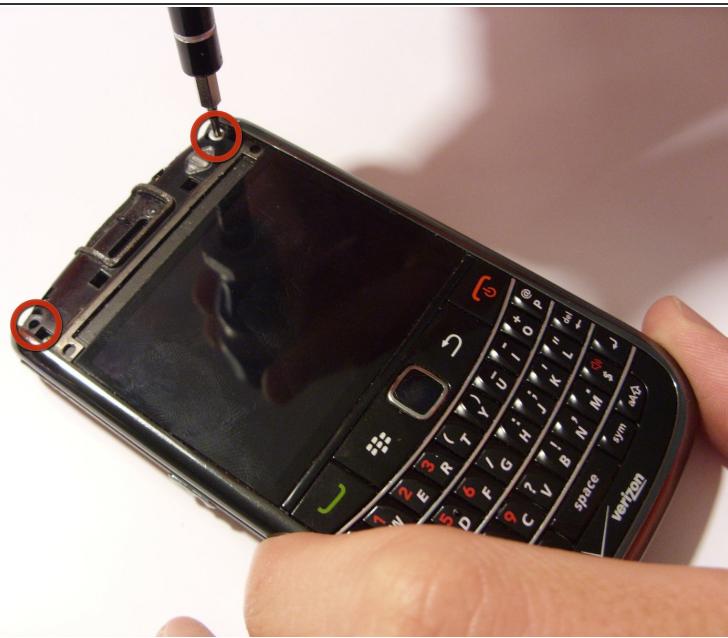

- Using a T6 Torx Screwdriver, remove the two torx screws located in the top corners of the device.

Step 8



- Remove the back chassis by gently pulling the chassis back and forth.


⚠ The headphone jack can break if the chassis is pulled too forcefully.

Step 9 — Mother Board



- Orient the device so the screen is facing the ground and the top of phone is facing you.
- Using a pair of tweezers, lift and remove the following:
 - The two round connectors on the top of the mother board.
 - **(i)** The round connectors are hooked into the mother board.
 - The flat connector in the lower corner of the mother board.


Step 10

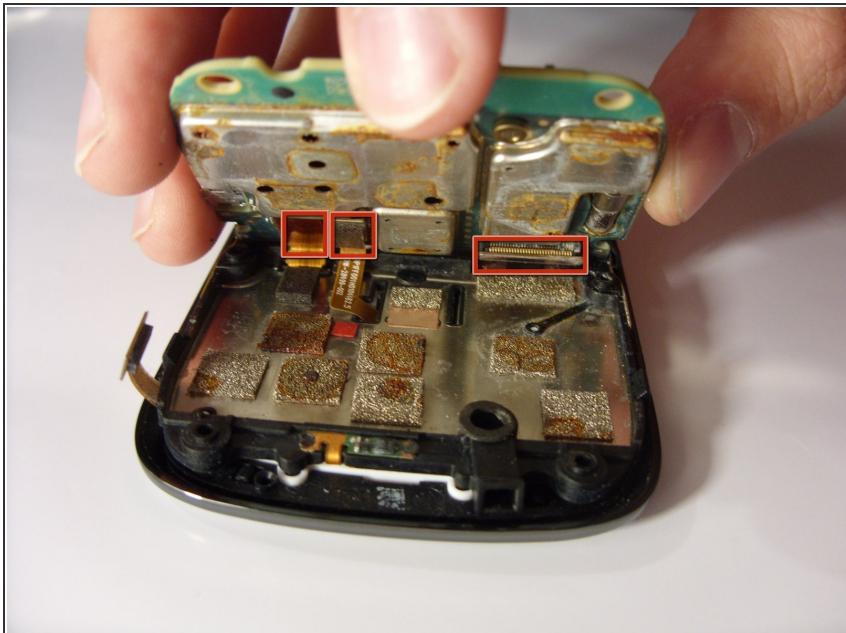

- Using your fingers, carefully lift and remove the mother board.

⚠ The connectors underneath the mother board are delicate and easily damaged.


Step 11

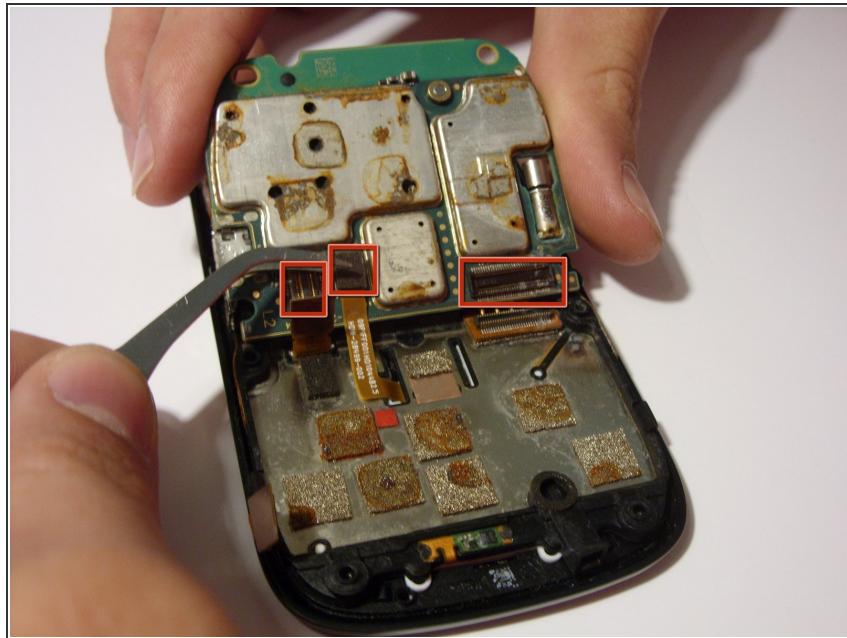

- Using a pair of tweezers, remove the three ribbon connectors.


⚠ The ribbon cable connectors are delicate and easily damaged.

Step 12

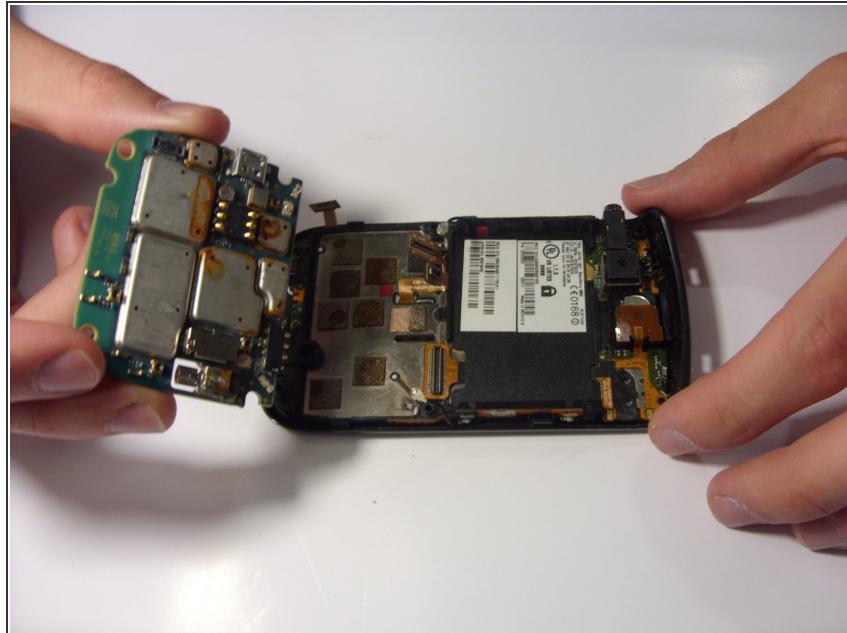


- Remove the mother board by lifting the board upward.

Step 13 — Faceplate

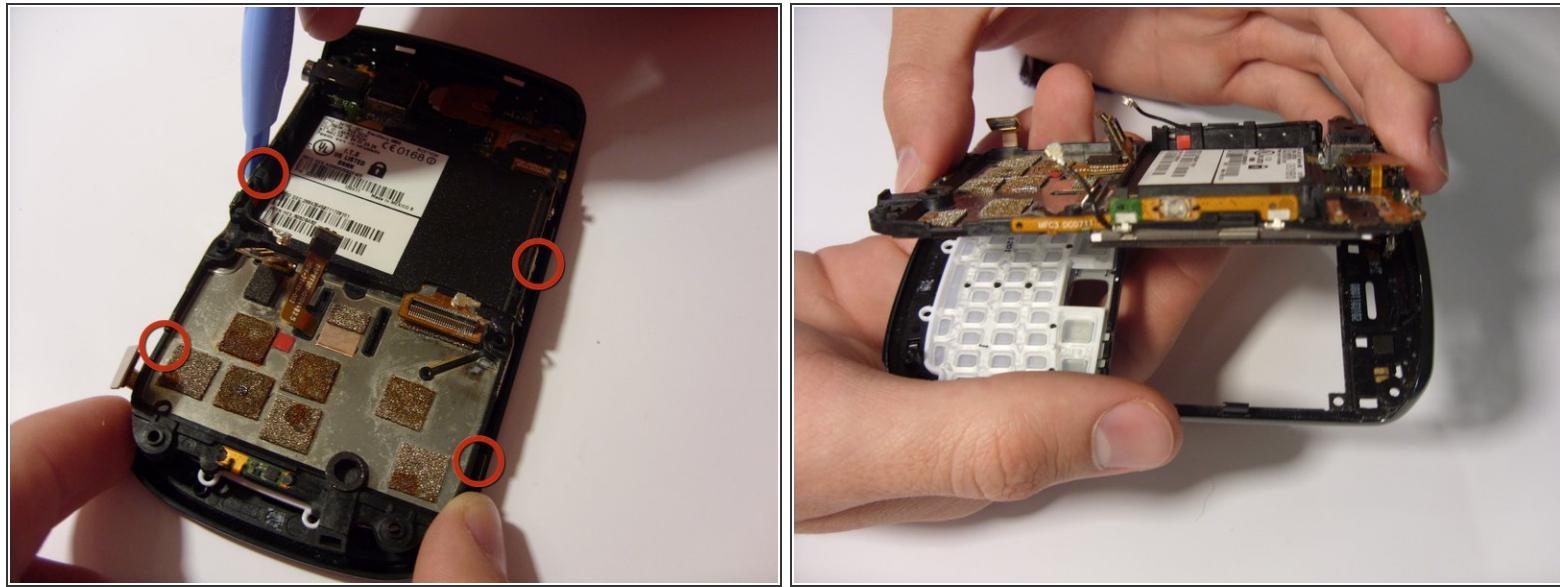


- Using a pry tool, lift up on the four tabs located on the edges of the faceplate.
- Remove the faceplate by lifting the plate upward.

Step 14 — Trackpad

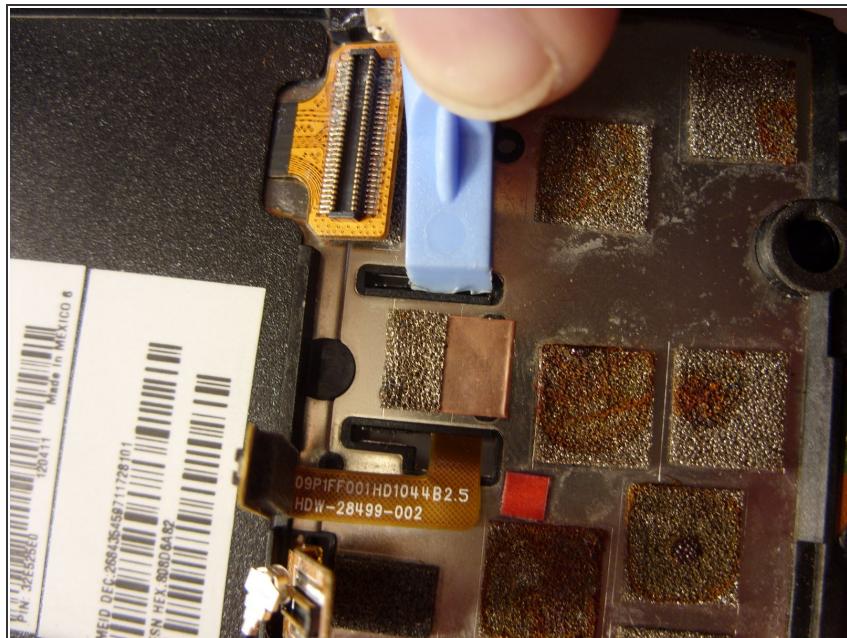


- Using a plastic pry tool, lift and remove the three tabs securing the trackpad restrainer to the trackpad.

Step 15

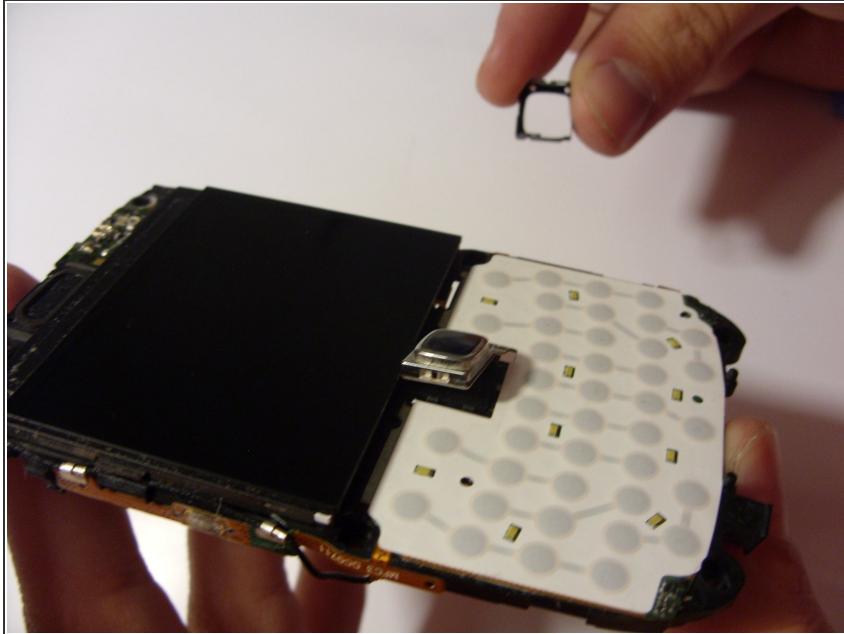

- Flip the device over. The screen is facing upwards.
- Remove the trackpad restrainer.

Step 16

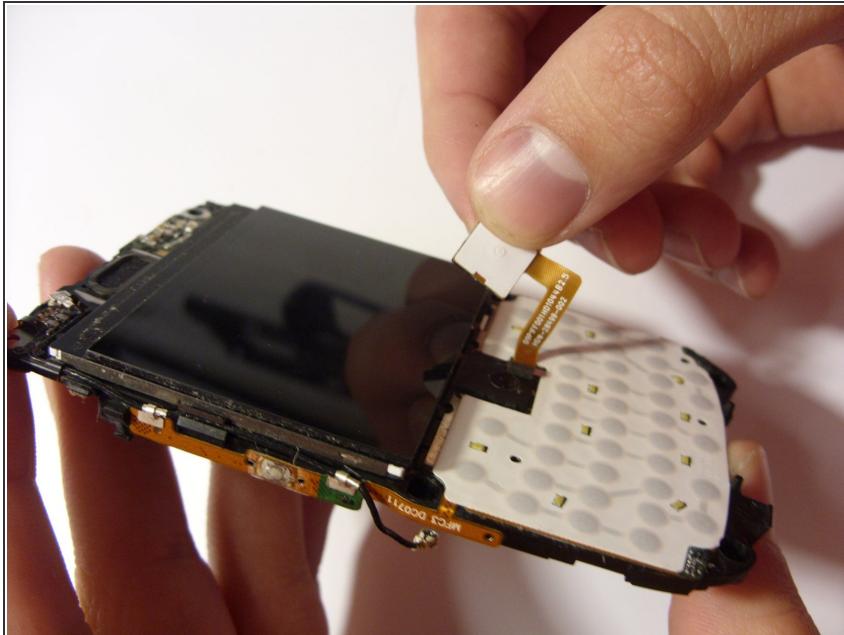

- Slowly remove the trackpad by gently pulling the trackpad away from the device.

⚠ The ribbon cable attaching the trackpad to the mother board can break if the trackpad is pulled too quickly and forcefully.

To reassemble your device, follow these instructions in reverse order.