



Breville JE98XL Juice Fountain Plus Food Pusher Replacement

Replace the food pusher to avoid splashing and regain juicing ability.

Written By: Madison Burgess



INTRODUCTION

This guide will show you how to replace the food pusher that is responsible for pushing the ingredients into the blades of the juicer. Always remember to unplug the juicer before disassembling.

Step 1 — Pulp Basket



- Place the juicer on a flat surface. Make sure the juicer is unplugged and in the "off" position. For the following steps, the pulp basket is on the left.

Step 2



- Tilt the juicer slightly to the right so the pulp basket is off of your surface.

Step 3



- Pull the pulp basket down and out from under the juicer cover.

Step 4 — Lid




- Place one hand on either side of the safety locking arm.
- Disengage the locking mechanism by pulling down on the lever with even pressure. The lever should be free to move up or down once it has been properly disengaged.

Step 5



- Firmly grip both sides of the juicer. Twist clock-wise and lift to remove the lid.

Step 6 — Food Pusher

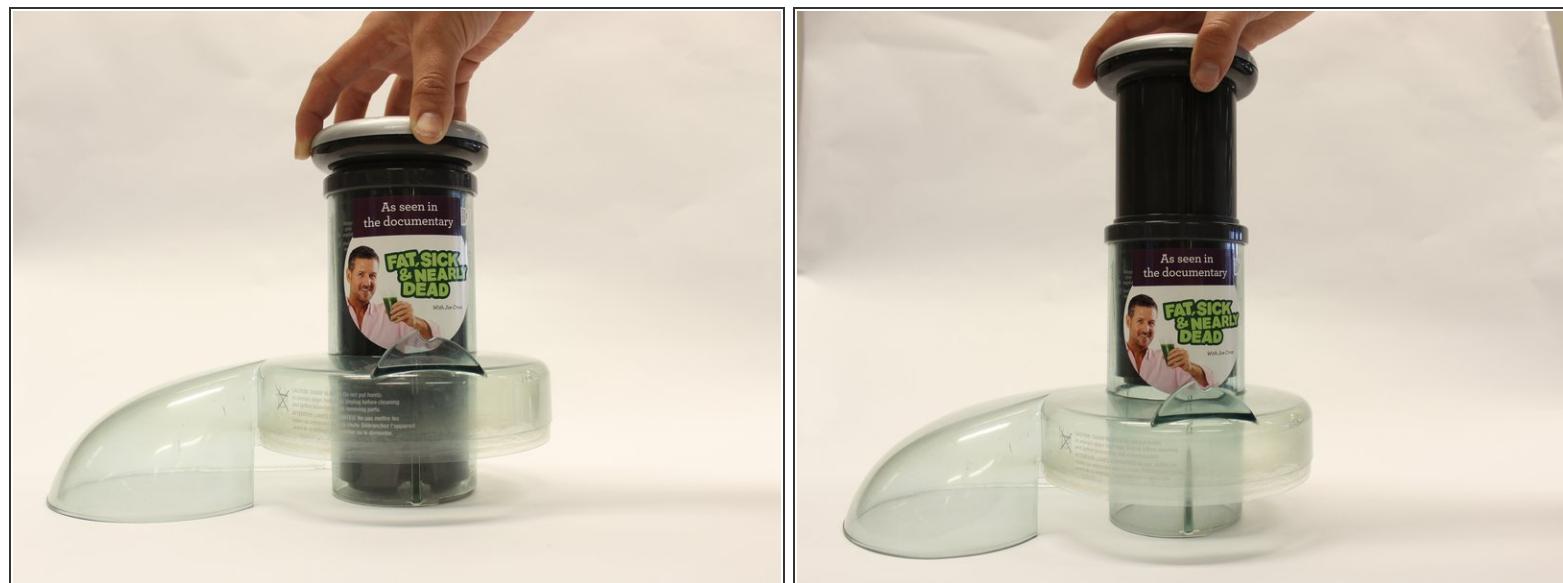

- Place one hand on the food pusher grip, and pull upward. Continue to slide the food pusher until it has fully cleared the food chute.

To reassemble your device, follow these instructions in reverse order.