




# Canon Powershot ELPH 100 HS LCD Display Replacement

This guide will teach you how to replace a damaged LCD screen.

Written By: Jacob

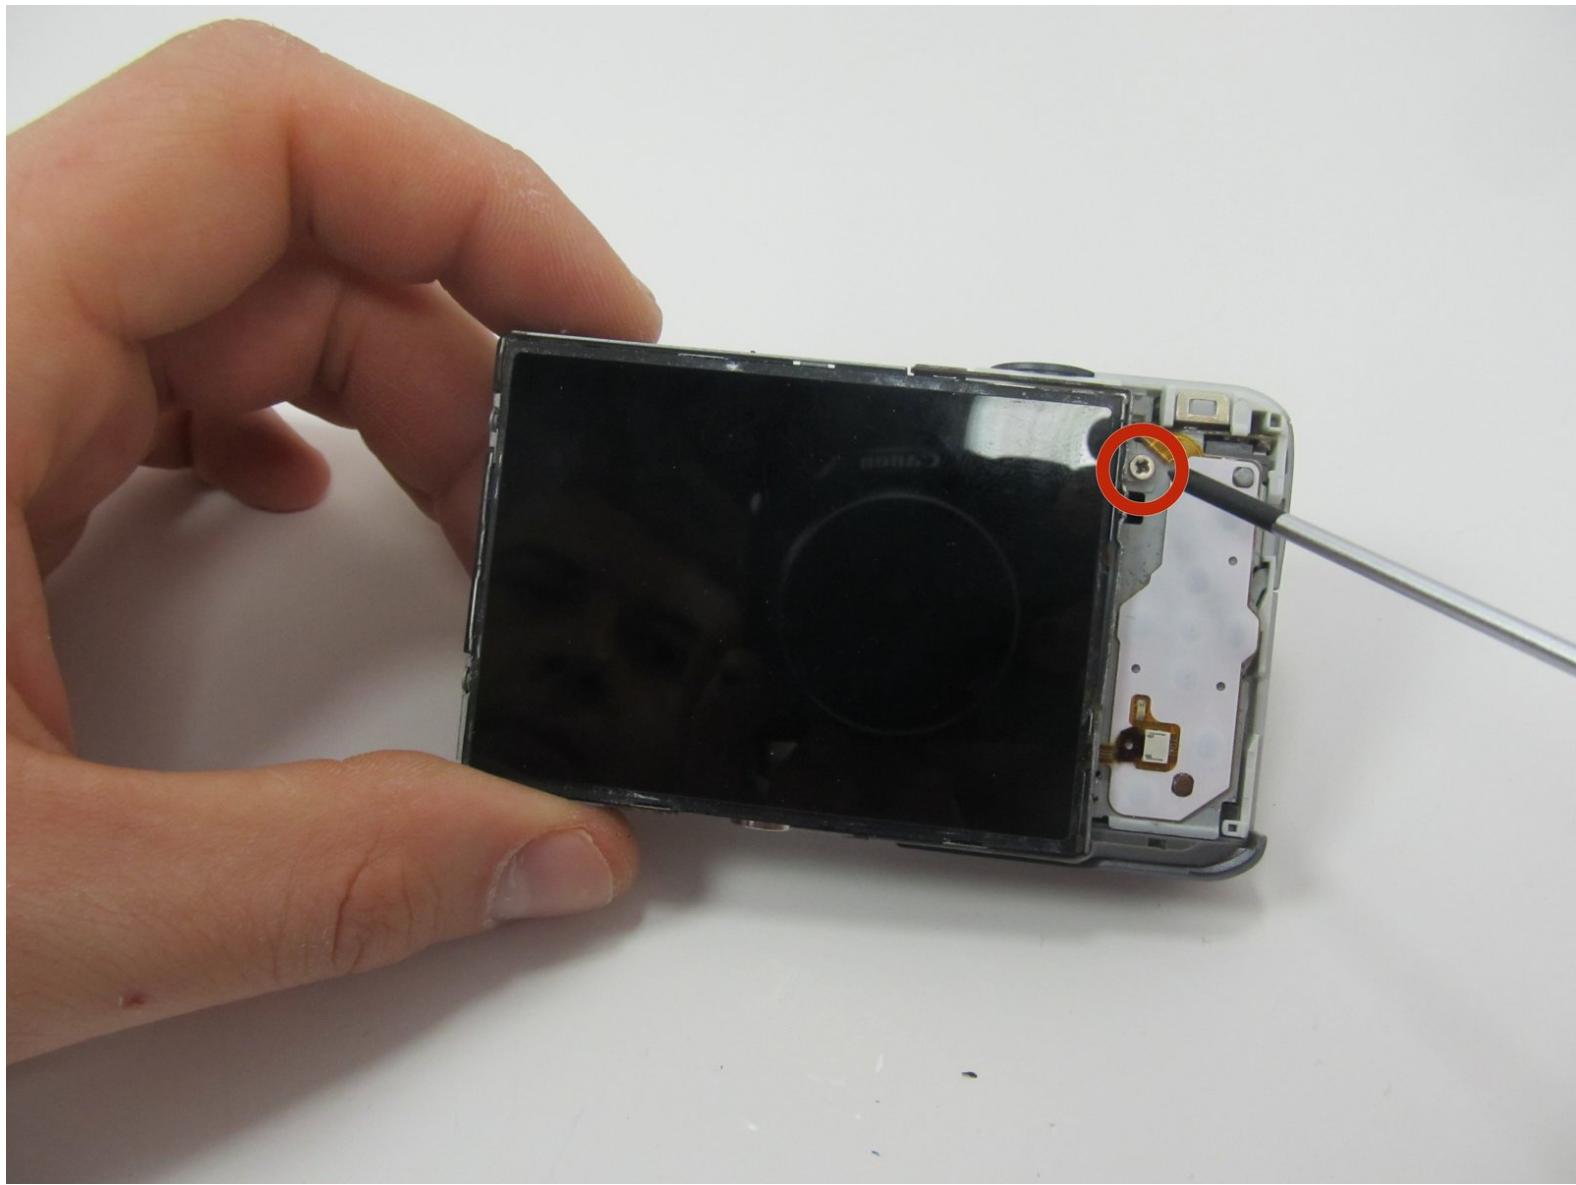

## INTRODUCTION

A common issue with this camera is a cracked display screen or the screen not showing the picture, meaning it is damaged. This guide will walk you through the process of replacing the screen.

### TOOLS:

- [Phillips #00 Screwdriver](#) (1)
- [Spudger](#) (1)
- [Tweezers](#) (1)

### PARTS:

- [powershot elph 100 hs replacement screen](#) (1)

## Step 1 — Battery



- Locate the battery cover on the bottom of your camera.
- Slide the tab to the right to open the battery cover.


## Step 2



- Flip the battery cover open.
- Using your fingers, slide the battery out of the camera.

ⓘ This was not the original battery that came the camera, so yours may look different.

## Step 3 — Memory Card

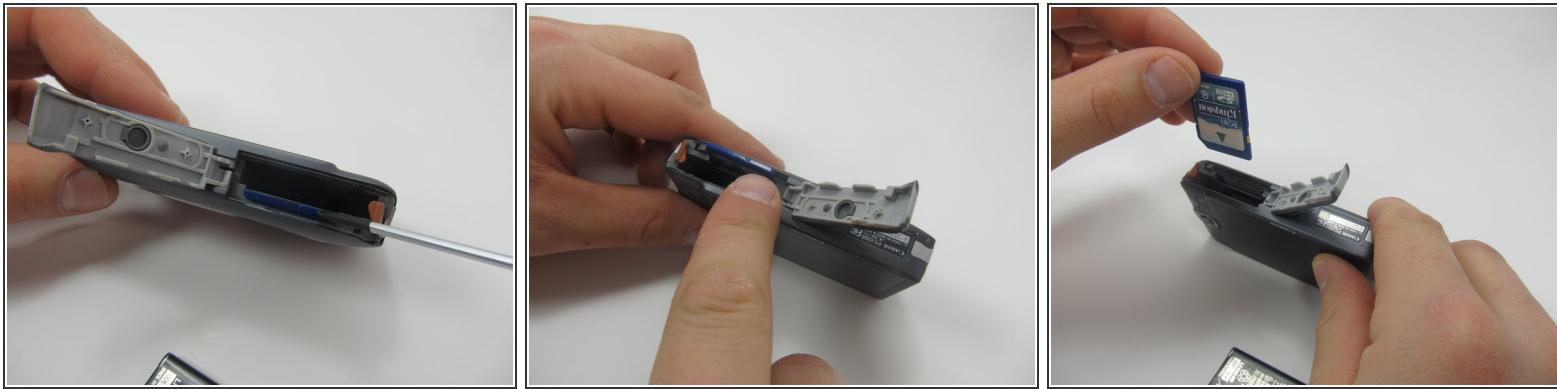

- Push down on the memory card until it clicks and releases.
- Pull up on the memory card to remove it.

## Step 4 — Outer Case



- Remove the two 3.1mm screws from the bottom of the camera.

 The display screen of the camera should be facing towards you.

## Step 5



- With the screen facing you, rotate the camera counter clock-wise onto it's side.
- Remove the two 3.1mm screws.


## Step 6



- With the screen still facing you, rotate the camera 180 degrees.

 The side with the charging port should now be facing up.


## Step 7

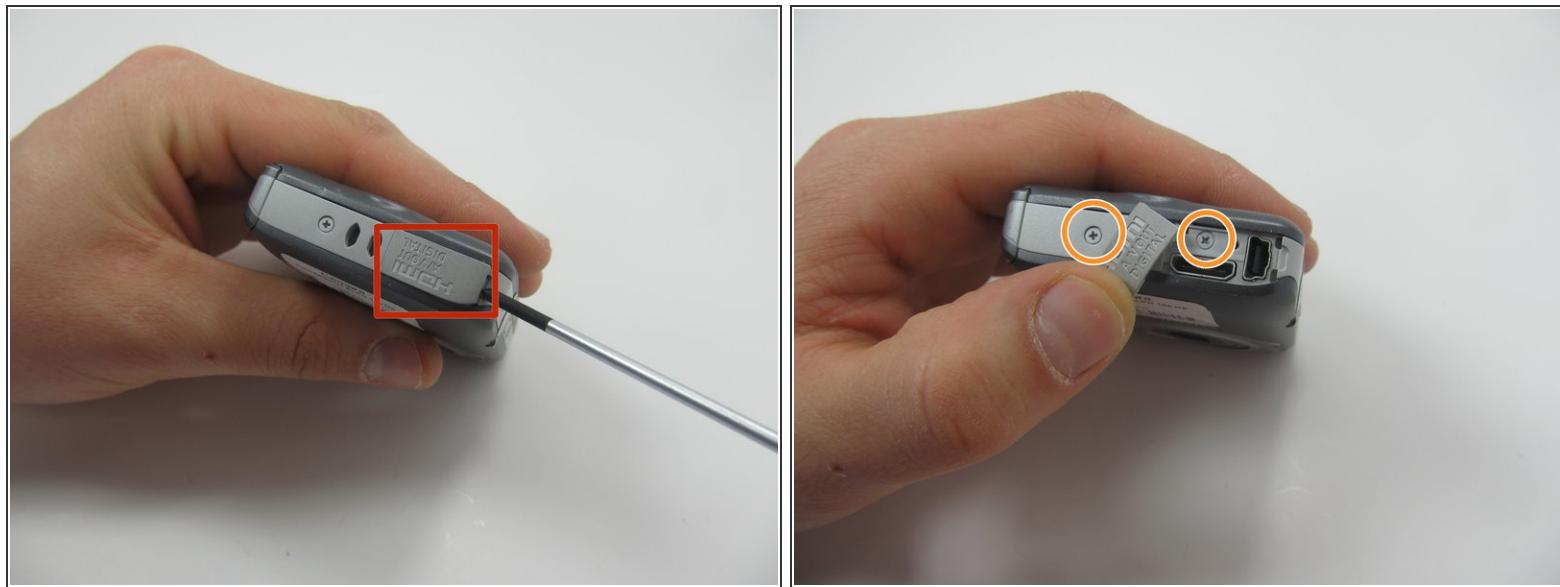

- Use the tool (or fingers) to pry open the charging port cover.
- Rotate the cover so that you have access to the screw underneath.
- Remove both 3.1mm screws.


*(i)* The image still shows the screw from step 3 in place.

## Step 8

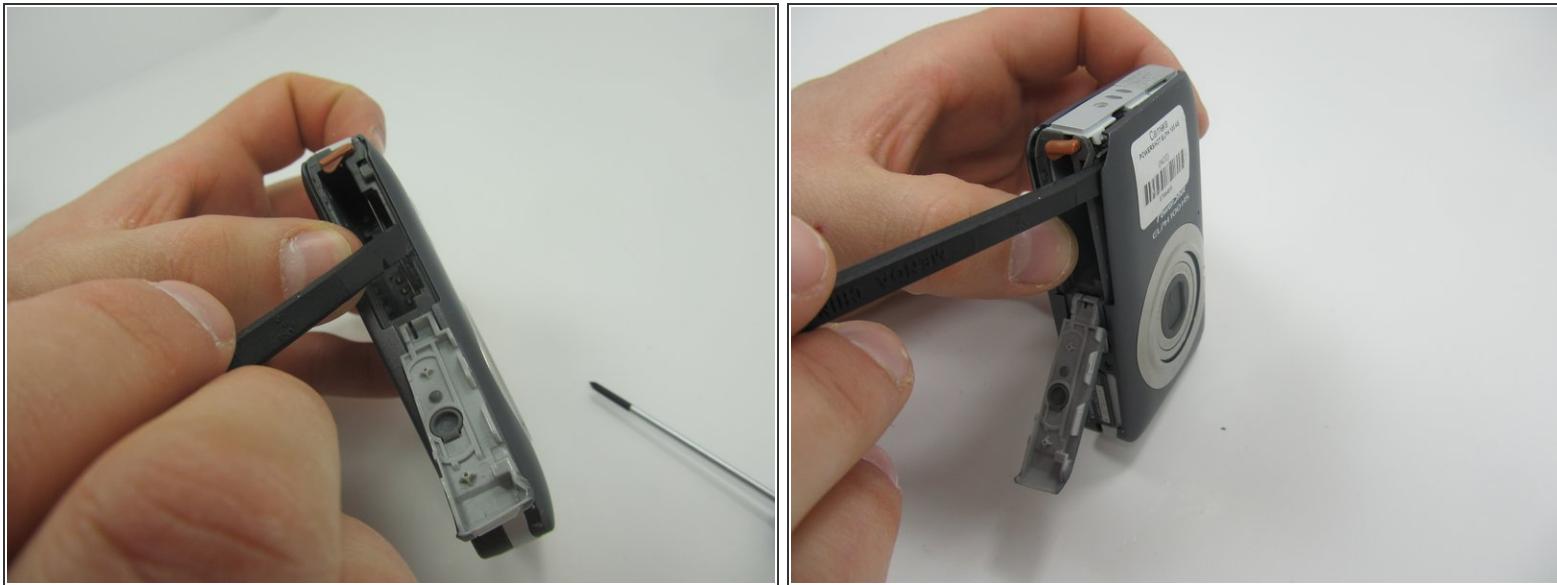

- Turn the camera so the bottom is once again facing up.
- With the battery door still open, use a spudger to remove the cover from the front of the camera.


## Step 9

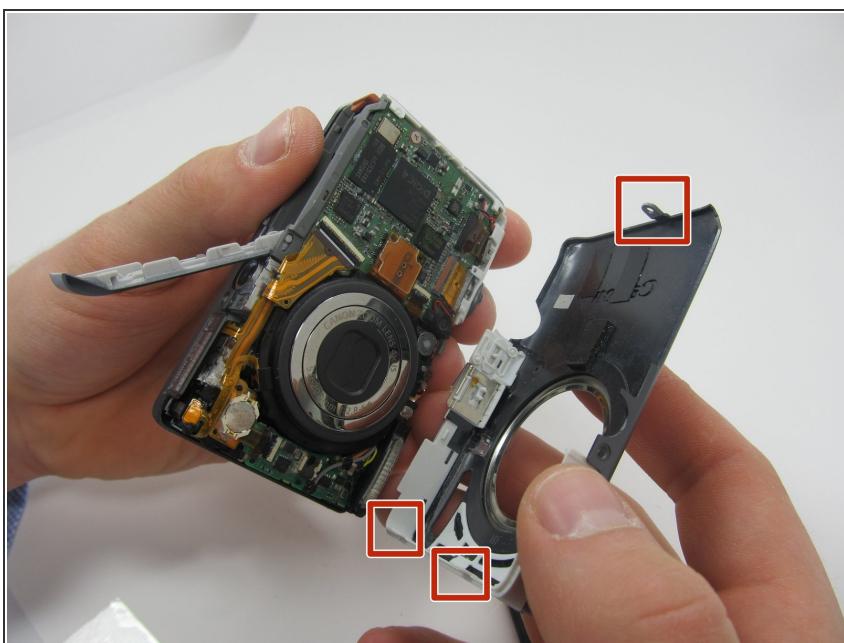

- Pull off the the front cover.

 Be careful not to break the tabs that hold it in place.


## Step 10

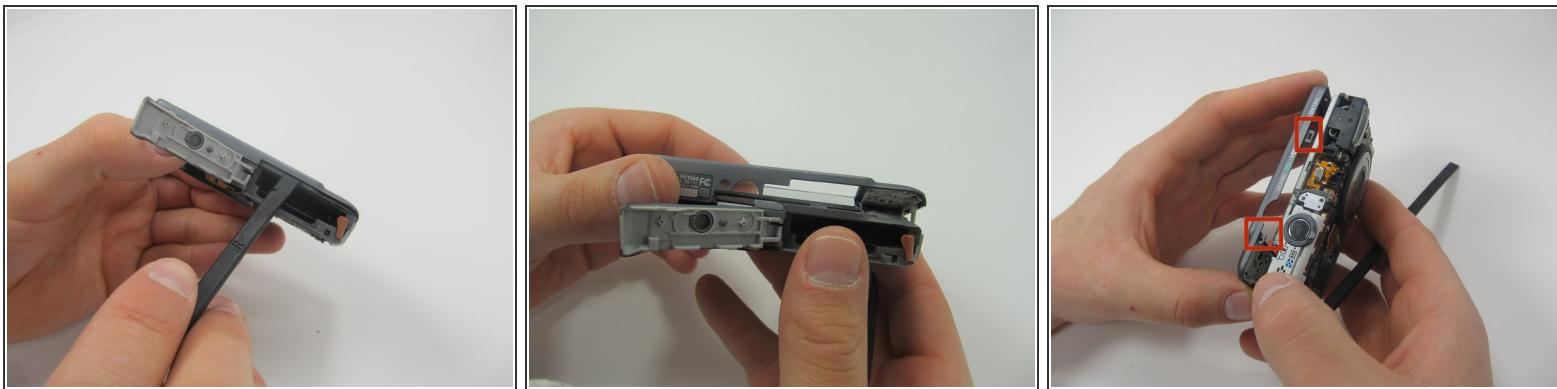

- Use the spudger to remove the back cover.


 Be careful not to break the tabs.

## Step 11 — LCD Display

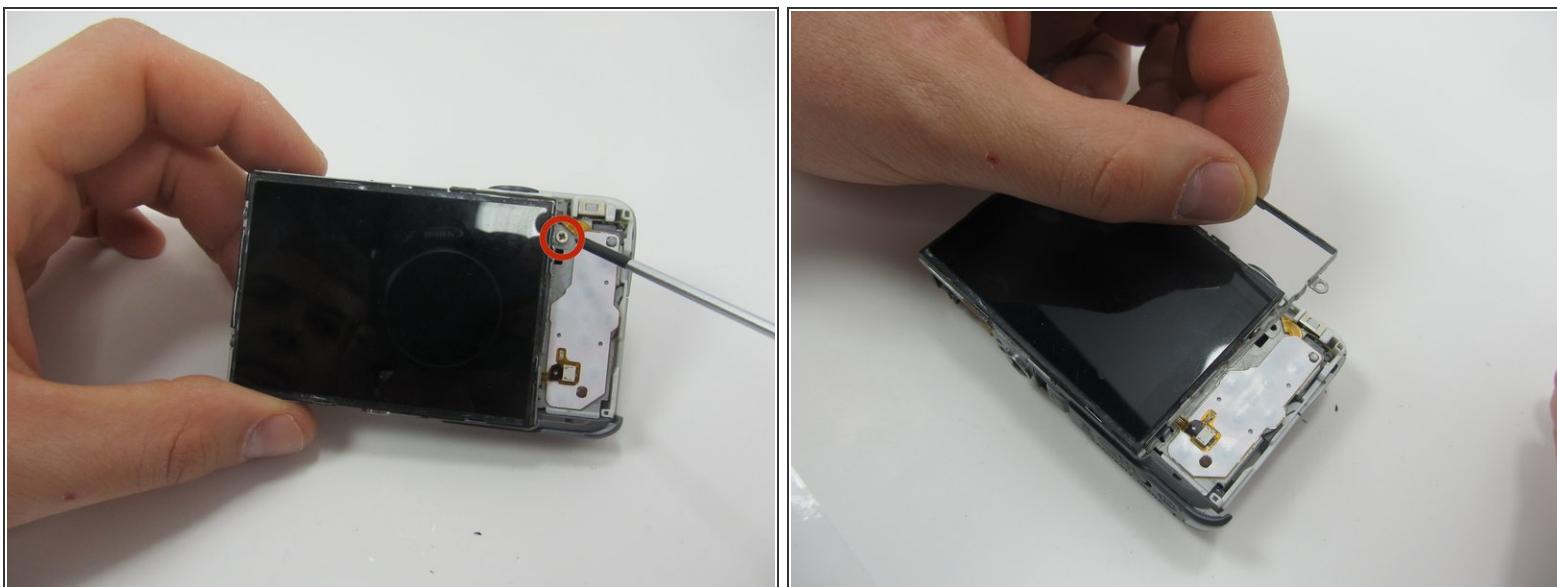



- Remove the 3.1mm screw on the top-right side of the LCD display screen.

## Step 12

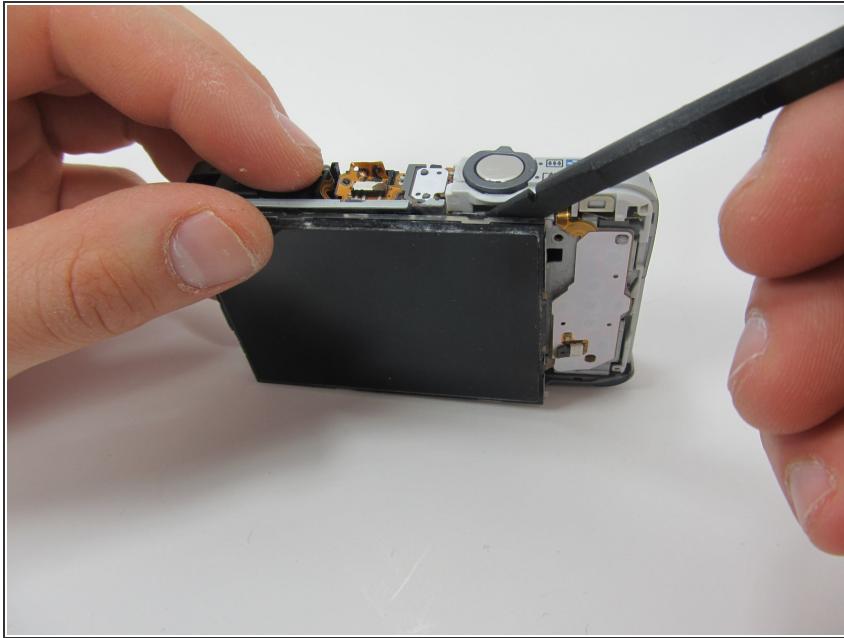


- Use the spudger to carefully separate the screen from the frame.

## Step 13

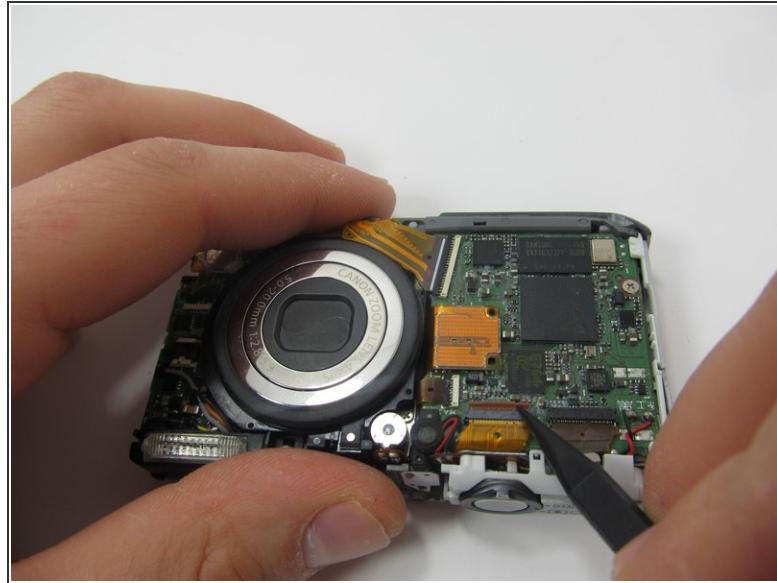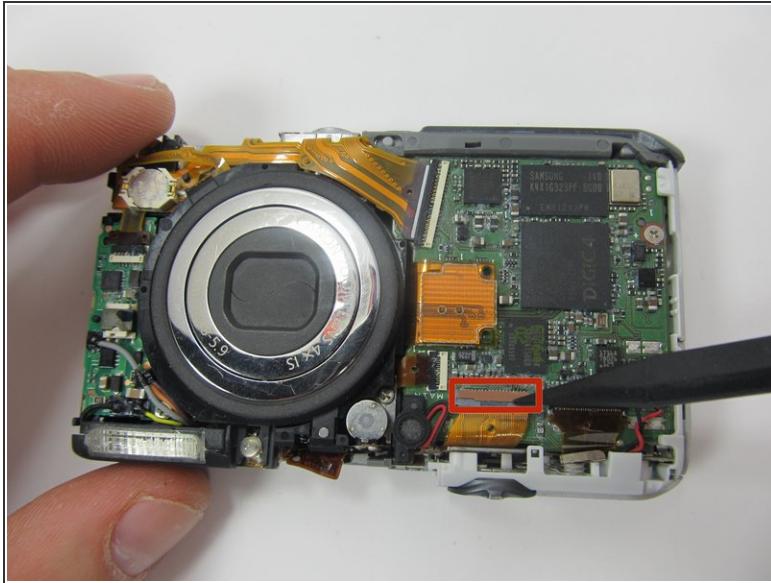


- Use the spudger to lift up the latch on the zero insertion force connector (ZIF).
- Slide the now free ribbon cable from the connector.

## Step 14

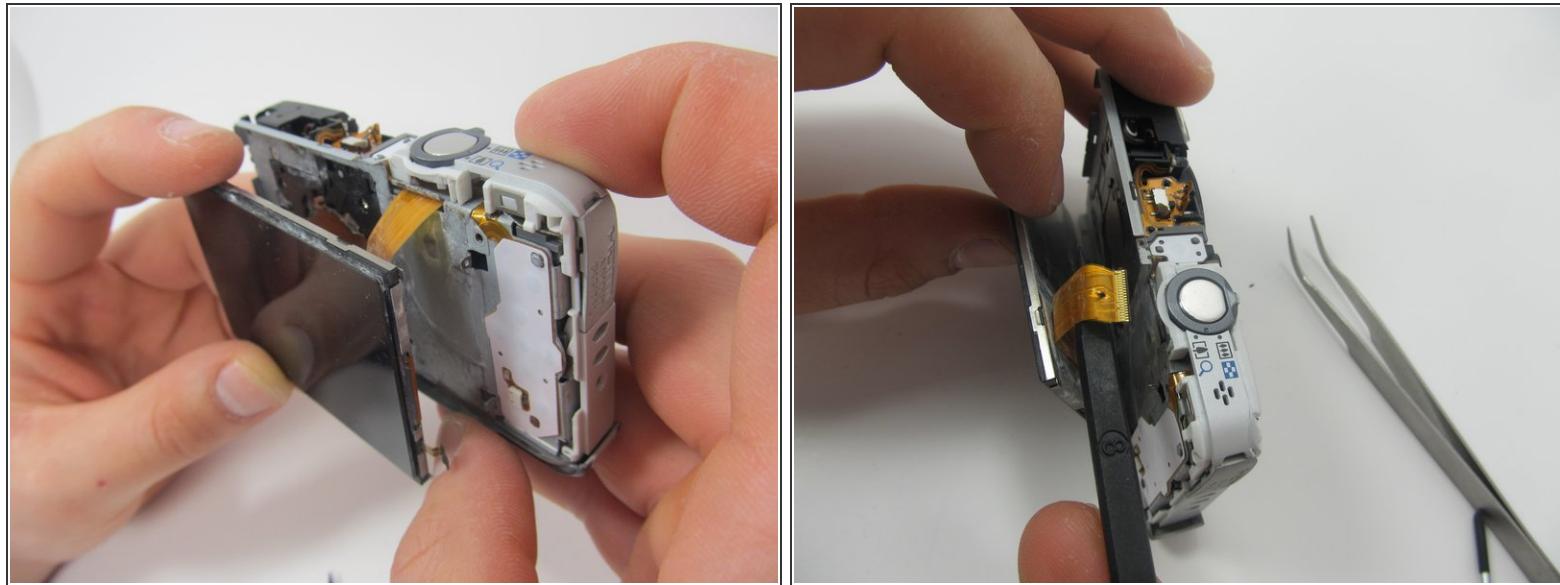

- Holding the display screen, gently pull the ribbon cable out through the frame of the camera.

## Step 15

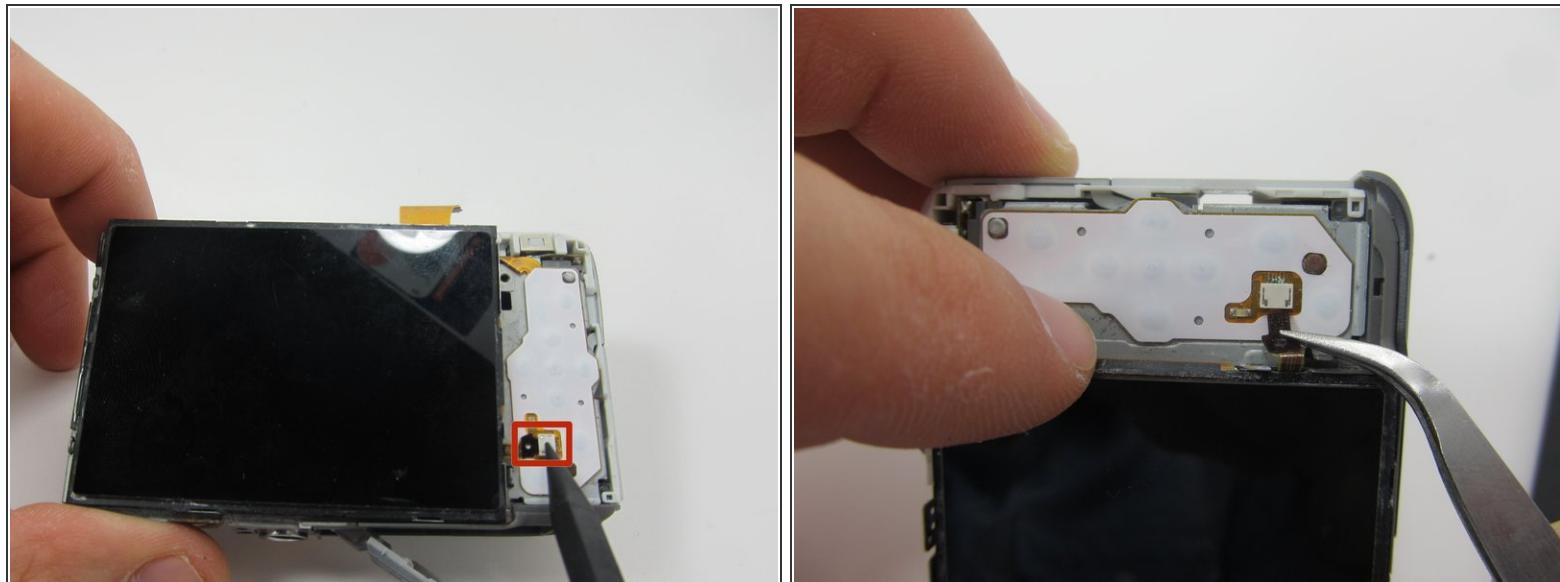

- Using tweezers, carefully remove the ribbon cable from the connector shown.

## Step 16



- The display screen should now be free.

To reassemble your device, follow these instructions in reverse order.