



# Dell Inspiron B130 RAM and Wireless Replacement

This guide will show you how to replace the RAM(Random Access Memory) for your Dell B130 laptop.

Written By: Patrick McNeil



This document was generated on 2019-09-22 11:31:49 PM (MST).


## INTRODUCTION

RAM is very important for a computer to pull up information quickly and without referring to previous bytes of memory. The RAM in any computer wears out over time so this is actually a pretty common replacement if you have an older computer. The wireless aspect just means how it connects to wireless networks(Wifi) problems with this leave the computer with a slow internet connection or not at all when there should be one.

### TOOLS:

- [Phillips #0 Screwdriver \(1\)](#)

## Step 1 — Battery

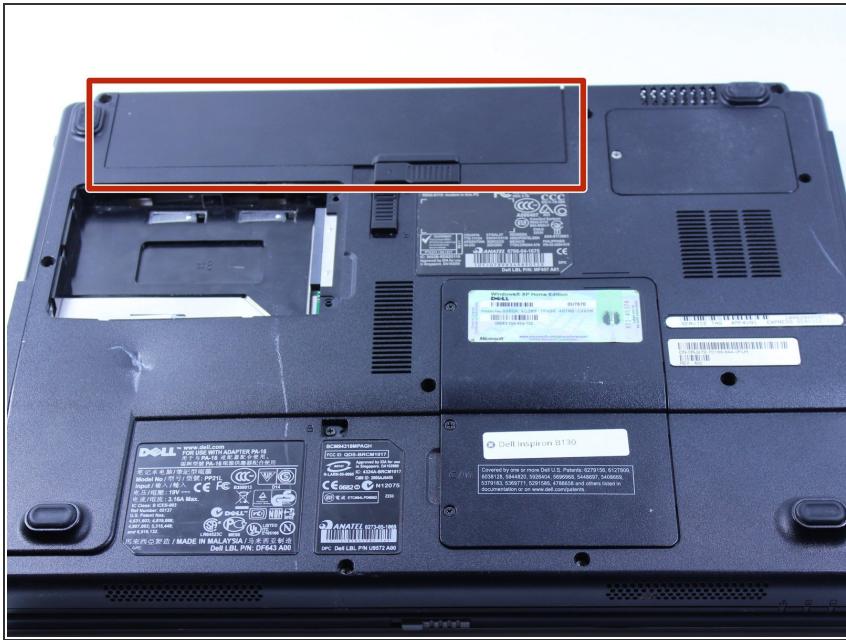

⚠ First, make sure your computer is turned off.

- Flip your computer over and you can see the battery.

## Step 2



- Push the tab from the battery, downwards to unlock the battery.
- The tab should be in the position next to the unlocked indicator.

## Step 3



- Now, push the other tab (the one right under the battery) from right to left.
- Now the battery will be loose; lift the battery up and out of the computer.

## Step 4 — RAM and Wireless




- Remove the three 6mm screws.
- Lift the plastic cover off to reveal the RAM and the Wireless.

## Step 5



- To remove the RAM, push outward against the metal brackets.
- The first RAM will pop up so you can just pull it right out.
- Repeat the first step again to remove the second RAM chip.
- Installation is the reverse of removal.


## Step 6

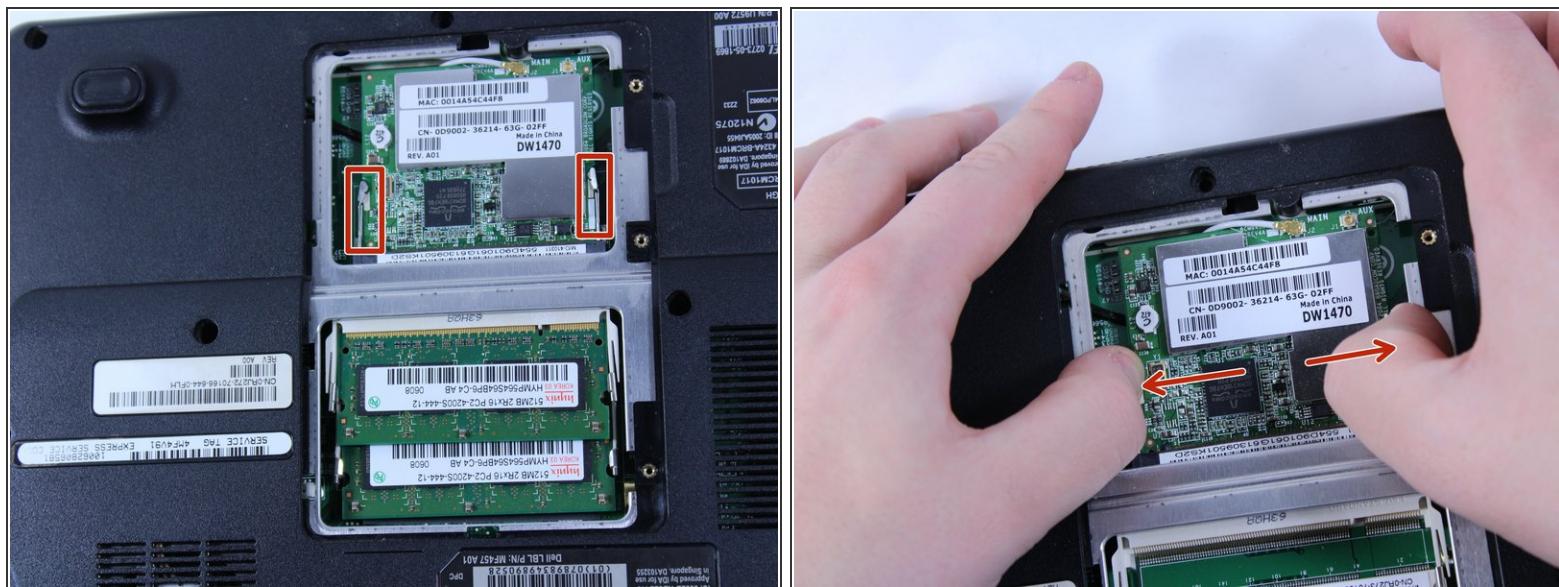

- To remove the wireless chip, push outward on its two metal brackets.

**⚠** Do not remove the chip just yet, the wire that connects this chip must first be removed.

## Step 7

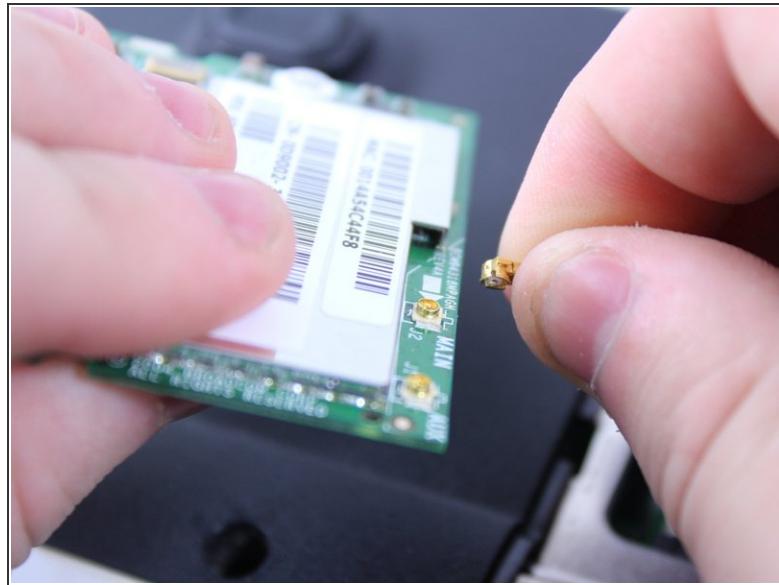

- To remove the wire, hold the wireless chip firmly and pull the connection straight up off of the chip.

To reassemble your device, follow these instructions in reverse order.