



Disassembling General Electric Bagel Switch 4-Slice Toaster Outer Case

Replace the outer case of your General Electric Bagel Switch 4-Slice Toaster.

Written By: Ron Gajdos



INTRODUCTION

This guide will explain how to remove the outer case of the General Electric Bagel Switch 4-Slice Toaster.

TOOLS:

- Phillips #0 Screwdriver (1)

Step 1 — Disassembling General Electric Bagel Switch 4-Slice Toaster Outer Case




⚠️ Unplug the toaster from the electrical outlet.

Step 2



- Remove the two levers and four dials by pulling them out directly towards you.
- ⓘ Removing these components may require some force, but they will release.

Step 3

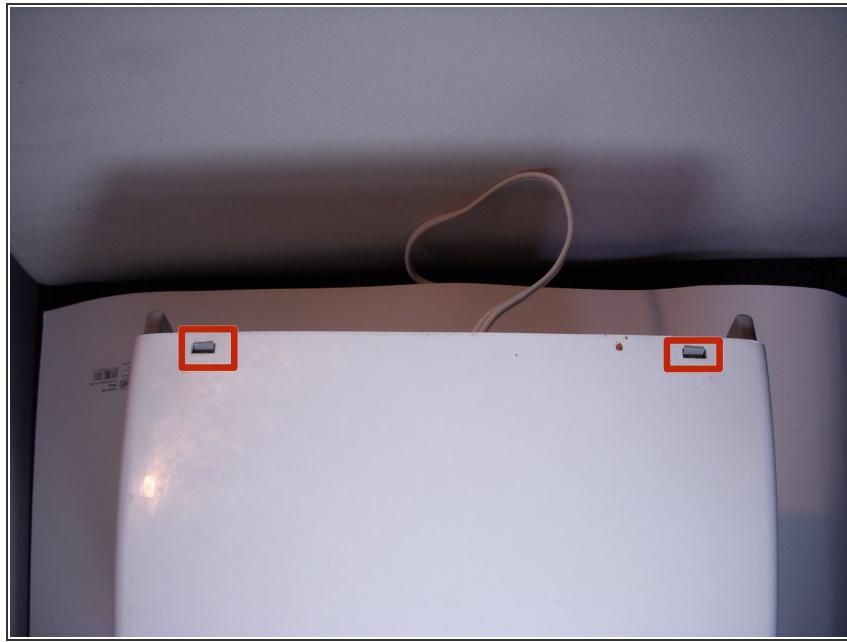

- Look for the plastic clips on the back side of the toaster.
- Disconnect the small plastic clips on the back of the toaster. Use Philips head Screwdriver to do this step.
- Now, carefully remove the toaster casing.

To reassemble your device, follow these instructions in reverse order.